

# OPERATING INSTRUCTIONS

PRINCE CASTLE INC.   
WORLDWIDE

## Pedestal High Chair Model No. 2445, 2446 & 2447

**COMFORTLINE®**



Prince Castle's exclusive line of pedestal high chairs allows operators the opportunity to provide comfortable, safe seating for small children and infants. These chairs are constructed of durable, hi-impact molded plastic. They feature web safety straps, positive lock buckles, large casters, and three-position molded plastic trays. These high chairs are available in white, brown or gray.

### WARRANTY

This product is warranted to be free from defects in material and/or workmanship for a period of two years from the date of original installation. Any component which proves to be faulty during the warranty period will be replaced without cost to the customer.

### PRODUCT SPECIFICATIONS

#### Dimensions

Height (overall)	36" (91.44 cm)
Height (at tray level)	28-1/4" (71.76 cm)
Width (with tray)	20" (50.80 cm)
Depth	20" (50.80 cm)
Shipping Weight	17 lbs. (7.71 kg.)

2445KSL	White high chair with lemon pad
2445DR	White high chair with red pad, with foot rest
2445DL	White high chair with white pad, with foot rest
2445KSW	White high chair with walnut pad
2446KSW	Brown high chair with walnut pad
2446DR	Brown high chair with red pad, with foot rest
2446DW	Brown high chair with walnut pad, with foot rest
2446DL	Brown high chair with white pad, with foot rest
2447M	Grey high chair, with foot rest

PRINCE CASTLE INC.   
WORLDWIDE

355 East Kehoe Blvd. • Carol Stream, IL 60188

Tel: (630) 462-8800 • Fax: (630) 462-1460


Toll Free: 1-800-PCASTLE

## INSTALLATION

1. After you have removed the high chair seat, pedestal and tray from the carton, inspect the unit for signs of damage. If there is damage to the unit:
  - Notify carrier within 24 hours after delivery.
  - Save carton and packing materials for inspection purposes.
  - Contact your Prince Castle dealer for replacement or the Prince Castle Customer Sales Department at 1-800-722-7853 if purchased directly
2. Verify that all parts have been received.
3. Assemble casters to pedestal legs. Gently tap the casters with a hammer to secure them to the pedestal legs.
4. Turn the seat upsidedown and place the pedestal mounting plate on the bottom of seat. Make sure the part marked front on the mounting plate faces the front of the seat.
5. Attach seat to mounting plate with (4) screws provided. Start all (4) screws before tightening.
6. Turn chair upright and attach tray to chair arms. The chair is now ready for use.

**IMPORTANT:** Any child using this chair should be secured by the restraining seat belt and crotch strap at all times. Simply push buckle and clasp together to secure. To open, depress buckle and pull apart. See figure 1.

figure 1

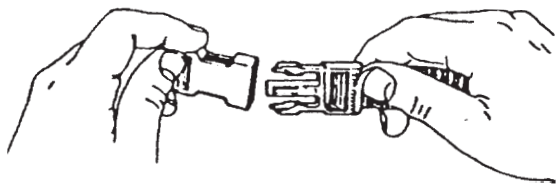

## CLEANING

Wash seat with soap and water. A soft scrub brush can be used to remove ground-in dirt. Wipe dry with a dry, clean cloth. Wipe legs with a damp cloth.



## PARTS LIST

Item	Part No.	Description
1	2447-6S	Seat Assy. (Gray)
	CL459S	White w/Lemon Pad
	CL462S	White w/Walnut Pad
	CL456S	Brown w/Walnut Pad
	2445-12S	White w/Red Pad
2	446-13	Tray (White Plastic)
3	2447-4S	Back Pad Kit (Gray)
	446-5S	Back Pad Kit (Walnut)
	714-1S	Back Pad Kit (Red)
	445-1S	Back Pad Kit (Lemon)
4	2447-3S	Safety Strap (Black)
	460-13	Safety Strap (Brown)
5	2447-2S	Crotch Strap (Black)
	460-8	Crotch Strap (Brown)
6	89-830	Caster
*	445-029SA	Tray Slides (Pkg. of 2)
*	442-7	Belly Bar Kit

\* Not Shown