

MAINTENANCE

The following maintenance procedures should be performed regularly, in order to keep your DHO unit working efficiently.

- ① Turn the unit off and disconnect the plug from the outlet, and allow the cabinet to cool. If your unit is equipped with a "twist lock" plug, turn the plug to the left (counter-clockwise) to unlock it before pulling it out. Never pull on the cord. To reconnect the plug to the "twist lock" outlet, match the hooked blade to the corresponding slot, push the plug straight in until it is seated, and turn to the right (clockwise) to lock.
- ② Pull elevator assembly up and out and set it on a work surface. Two persons should perform this operation. Wipe it down with a damp cloth.

- ③ Clean out any debris inside the cabinet and wipe it down with a damp cloth. If necessary, loosen the screws holding the perforated guard panel and lift it out of the cabinet. Wipe down the area around the fan and heater carefully to avoid damage, then reassemble panel.
- ④ Place each mechanism back inside the cabinet and proceed by cleaning the outside of the cabinet with a mild, non-abrasive soap or detergent and warm water. A commercial stainless steel cleaner can also be used.

To avoid scratching the finish, do not use abrasive powders or scouring pads.



Do not steam or pressure clean or hose down the cabinet. This could damage the equipment and possibly cause an electrical shock to the operator.

ELECTRICAL WIRING DIAGRAM

