


DH15 / DH16

CONVECTED AIR INSUL-PLUS™ BASE HEATERS

WIRING DIAGRAM

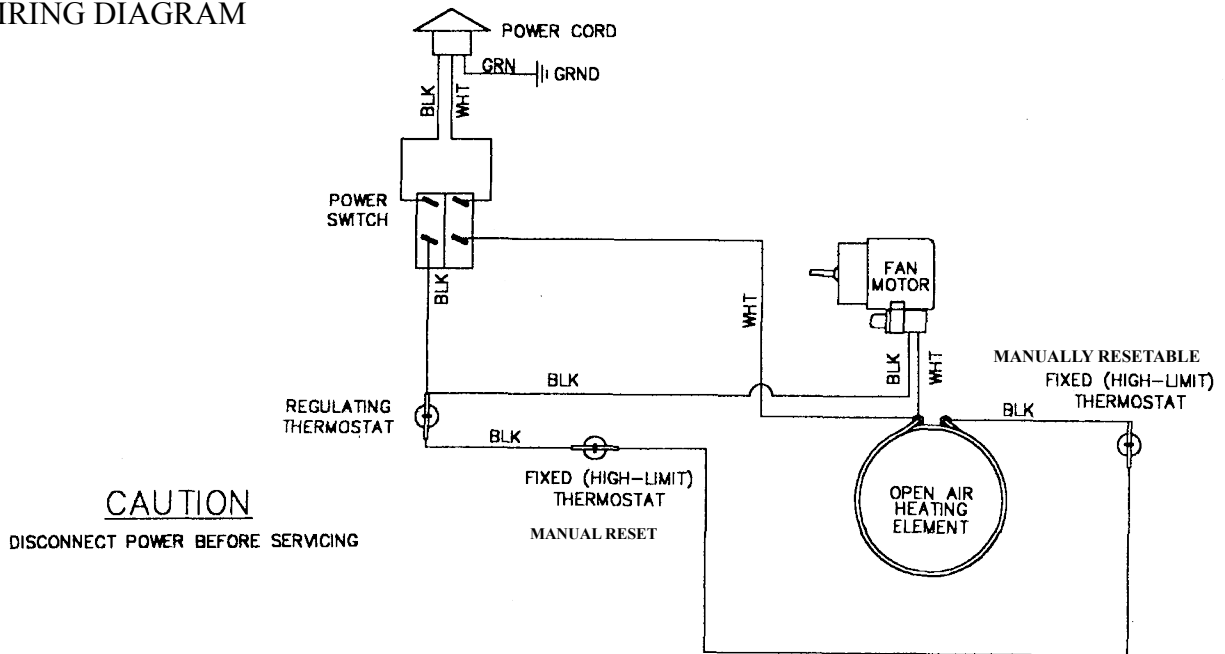

IX. PREVENTATIVE MAINTENANCE

CASTERS

1. Check casters for freedom of movement and proper brake retention.
2. Maintain casters free of debris. (mop strings, paper plastic, hair nets, etc.)
3. Clean or replace as required.
4. Replace caster when rubber tread is less than 1/4" from rim.

CORD & PLUG

1. Inspect plug blades for distortion and replace if any blades are missing, bent or broken.
2. Inspect cord wiring for integrity at termination points by having qualified service person remove the back panel from cabinet. Make sure the cord sheathing extends into the cabinet interior. If wires are showing on the outside of the cabinet, remove the unit from use and have repairs made before turning on power to the unit.

DISPENSING MECHANISM

1. Periodically check springs for proper base dispensing by filling each cavity with bases and checking to see that it indexes as bases are removed. If bases do not index properly, and unit is not overloaded replace springs.