



ERU240PW/ERU240PIBG/ERU240P3S Spare parts list			
Item No.	Description	Part code	Qty per unit
1	Side plate	G20C01-071002-01	2
		G20C01-071002-02	2
		G20C01-071002	2
2	Cavity right plate	G20A01-070500	1
3	Anti-tip bracket	G20A01-212500	1
4	Weight block(2.5KG)	G20A01-210200	1
5	Foot	G20C01-071500	4
6	Leg installation plate	G20A01-071100	2
7	Front plate Beam	G24A01-070200	1
8	Drawer heat insulation board	G24C01-072100	1
9	Cavity left plate	G20A01-070400	1
10	Front plate	G24C01-070100	1
*	drawer assembly	G24C01-120001Z Assm	1
		G24C01-120002Z Assm	1
		G24C01-120100ZA Assm	1
11	Drawer rail assembly	G20A01-120700	2
12	Drawer plate	G24C03-120500-02	1
13	Drawer inside plate	G24C02-120200-01	1
	Drawer outside plate	G24C01-120102-01	1
14	Drawer outside plate	G24C01-120102-02	1
	Drawer outside plate	G24C01-120102	1
15	drawer handle	E24F01-120600	1
16	door seal	G24C01-071200	1
*	complete door assembly	GC0026-100400Z	1
*	complete door assembly	GC0027-100400Z	1
*	complete door assembly	GC0027-100400Z	1
17	Door body strengthening part	G20C01-101000	2
18	Door hinge	G24C01-110000	2
19	Door glass wool	G24C01-103500	1
20	Door glass bracket	G20A10-100900	2
21	Door inside window	G24C01-101100	1
22	door outer glass	GC0026-100400	1
		GC0027-100400	1
		GC0027-100400	1
23	handle	G24B05-101900-02	1
		G24B05-101900-02	1
		G24B05-101900	1
24	Door inner seal ring	G24C01-103000	1
25	Window fixing piece for door	G20C01-102600	4
26	Internal fixation plate	G20C01-102500	4
27	Door inside glass	G24C01-100500	2
28	Oven door frame	G24C01-100600	1
29	Knob	G20A23-030100	6
		G20A23-030101	5
		G20A23-030102	5
		G24F03-030301-01Z	1
30	Control panel	G24F03-030301-02Z	1
		G24F03-030300Z	1
31	indicator light 240V	E24F01-031000	2
32	Lamp switch	G20A01-171000	1
		G20A01-171100	1
		G20A01-170203	1
33	mechanical timer	G20A01-190100	1
*	digital timer	E20F03-190300	1
35	cooktop coil switch	E20F01-031600	4
36	Cavity insulation board	E24F01-020201	1
37	support rod	E24F01-025100	2
38	Control panel glass wool	E24F01-036000	1
39	Cook top	E24F01-020100-01Z	1
		E24F01-020100-02Z	1
		E24F01-020100	1
40	Bowl-small	E24F01-022400	3
40	Bowl-big	E24F01-022300	1
41	6" coil heater 240V 1250W	E20F03-022300	3
42	connector of coil heater-right front	E20F03-106500	1
42	connector of coil heater-right back	E20F03-106501	1
42	connector of coil heater-left front	E20F03-106502	1
42	connector of coil heater-left back	E20F03-106503	1
43	8" coil heater 240V 2100W	E20F03-022400	1
44	Backsplash support	E24F01-022000-01	1
44	Backsplash support	E24F01-022000-02	1
44	Backsplash support	E24F01-022000	1
45~46	Backsplash assembly	G24C01-011500-01Z	1
		G24C01-011500-02Z	1
		G24C01-011500Z Assm	1
48	Cavity top plate	G24C01-070604	1
50	broil heater element 240V 2100W	E24F01-091000	1
53	Oven lamp-240V	G20C01-180100	1
54	Back plate	G24C01-070306	1
55	Glass wool	G24A01-070800	1
56	Baffle plate	G24C01-072001	1
57	terminal block cover	E20F01-072000	1
58	Cavity back glass wool	G24C01-072901	1
61	Broil grill	G20C01-215100	1
62	Broil tray	G20C01-215000	1
63	Backing rack	G24C01-071900	2
64	oven heater element 240V 2100W	E24F01-091200	1
65	terminal block support	E24F01-034500	1
66	Cavity bottom plate	E24F01-070700	1
67	baffle	G20C01-111100	2
68	wire harness 20, 24	E20F03-180300	1
69	Re-set switch 140C 240V	E24F01-076200	1
70	main terminal block	E20F01-106400	1
34	cusion for thermocontroller	E24F01-100700	1
47	Cooktop back connection plate	G20C01-022000	2
51	Chimney	E24F01-074200Z	1
71	digital thermocontrol system	E24F03-030900	1
72	cooktop temperature sensor-short	E24F03-076000Z	2
73	cooktop temperature sensor-long	E24F03-076001Z	2
72	cooktop temperature sensor-short	E20F03-076000Z	2
73	cooktop temperature sensor-long	E20F03-076001Z	2
72	cooktop temperature sensor-short	E20F03-076000Z	2
73	cooktop temperature sensor-long	E20F03-076001Z	2