



## Model AFMG-56 MkIII AUTOMATIC FEED MIXER GRINDER OPERATING AND SERVICE MANUAL



☆ IMPORTANT NOTICE ☆  
This Manual contains important  
safety instructions which must  
be strictly followed when using  
this equipment.

Form No.  
AFMG-56MKIII-362-2-17-7 B



## TABLE OF CONTENTS:

	PAGE
NOTICE TO OWNERS AND OPERATORS .....	1
SAFETY TIPS .....	2
INSTALLATION .....	3
UNCRATING AND SETUP .....	3-4
MOTOR WIRING AND ELECTRICAL REQUIREMENTS.....	4
MOTOR SPECIFICATIONS .....	5
PRODUCT MIXER SAFETY COVER INSTRUCTIONS .....	6
OPERATION .....	8
TO PROCESS PRODUCT .....	8
CLEANING .....	9
NOTES .....	10
MAINTENANCE .....	11
GRINDING BOWL INSTALLATION .....	11
MIXING PADDLE REMOVAL AND INSTALLATION .....	12
LUBRICATION .....	12-15
MOTORS .....	12
BEARING HOUSING .....	12
GEAR REDUCER .....	13-14
SPUR GEARS .....	15
MIXER DRIVE GEAR ADJUSTMENT .....	15
MAIN DRIVE CHAIN & SPROCKET LUBRICATION.....	15
MAIN DRIVE CHAIN TENSION .....	16
MIXING PADDLE TIMER ADJUSTMENT .....	17-18
PARTS DIAGRAMS .....	19-29
FRONT VIEW DIAGRAM .....	19
SIDE VIEW DIAGRAM .....	21
BACK VIEW DIAGRAM .....	23
MIXER DRIVE ASSEMBLY .....	25
LID ASSEMBLIES .....	26
JOURNAL BOX ASSEMBLY .....	27
PUSHBUTTON PLATE COMPONENTS .....	28
ELECTRICAL SUBPLATE COMPONENTS .....	29
WIRING DIAGRAMS .....	30-31
PNEUMATIC SYSTEM PARTS DIAGRAMS.....	32-34
SHUTTLE VALVE .....	32
PNEUMATIC CONTROL .....	33
PNEUMATIC SYSTEM COMPONENTS .....	34
SAFETY LABEL LOCATIONS.....	35
OPERATOR'S SIGNATURE PAGE .....	36
LIMITED WARRANTY .....	37

## NOTICE TO OWNERS AND OPERATORS

**WARNING** to all purchasers, operators and operations supervisors: make certain every person who is to operate the **BIRO MODEL AFMG-56 MkIII AUTOMATIC FEED MIXER GRINDER** has read this manual before attempting to operate this machine. Have all operators sign the signature page found at the end of this manual.

BIRO's products are designed to process food products safely and efficiently. Unless the operator is properly trained and supervised, however, there is the possibility of a serious injury. It is the responsibility of the owner to assure that this machine is used properly and safely, strictly following the instructions contained in this Manual and any requirements of local law.

No one should use or service this machine without proper training and supervision. All operators should be thoroughly familiar with the procedures contained in this Manual. Even so, BIRO cannot anticipate every circumstance or environment in which its products will be used. You, the owner and operator, must remain alert to the hazards posed by the function of this equipment particularly the ROTATING GRINDING AUGER and the ROTATING MIXING PADDLE, which can severely injure an inattentive operator amputating fingers and limbs. No one under eighteen (18) years of age should operate this equipment. If you are uncertain about a particular task, ask your supervisor.

This Manual contains a number of safe practices in the SAFETY TIPS section. Additional warnings are placed throughout the Manual. Warnings relate to your personal safety are indicated by:



OR



Warnings related to possible damage to equipment are indicated by:



BIRO also has provided warning labels on the equipment. If any warning label, instruction label or Manual becomes misplaced, damaged, or illegible, please contact your nearest Distributor or BIRO directly for a replacement.


Remember, however, this Manual or the warning labels do not replace the need to be alert and to use your common sense when using this equipment.

**- NOTE -**

**A copy of this manual is included with each MODEL  
AFMG-56MkIII AUTOMATIC FEED MIXER GRINDER.**

**The descriptions and illustrations contained in this manual are not binding.  
The manufacturer reserves the right to introduce any modification without  
updating the manual.**

## SAFETY TIPS

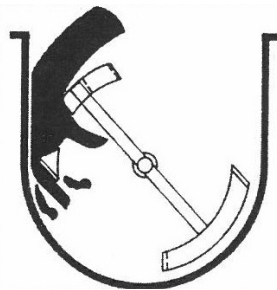

### ROTATING GRINDING AUGER & ROTATING MIXING PADDLE TO AVOID SERIOUS PERSONAL INJURY

- **NEVER** Touch This Machine without Training and Authorization by Your Supervisor.
- **DO NOT** Operate or Work Around This Machine with Loose fitting Clothing. It Could Become Entangled in the Machine.
- **NEVER** Try to Manually Stop the Mixer. Always Wait Until the Machine has Completely Stopped Before Trying to Manipulate a Position Change.
- **NEVER** Place Hands into Machine Input or Output Openings.
- **NEVER Run Machine with Guards Removed.**
- **NEVER** Open Machine During Operation.
- **NEVER** Overload the Hopper.
- **ALWAYS** Keep Excessive Amounts of Water Away from the Control Panel.
- **ONLY** Use a Qualified Electrician to Install According to Local Building Codes: Machine **MUST** Be Properly Grounded.
- **ALWAYS** Connect to **PROPER** Voltage & Phase.
- **ONLY** Install on Level, Non-Skid Surface in a Clean, Well-Lighted Work Area Away from Children and Visitors.
- **ALWAYS** Lock Machine Castors After Moving This Machine.
- **NEVER** Use This Machine For Non-Food Products.
- **NEVER** Operate Machine With Product Mixer Safety Cover Open or Removed or Magnetic Interlock Switch By-Passed. **At Any time an Operator Suspects that an Interlock or Safety Device is Not Functioning Properly, the Operation Should be Terminated, the Machine Unplugged and an Authorized Dealer Called to Inspect and Repair the Machine. Failure to Follow These Steps Could Result in Serious Personal Injury.**
- **ALWAYS** Turn Off, Unplug Machine From Power Source and Perform Lockout/Tagout Procedure to this Machine **BEFORE** Attempting to Unjam or Unclog, Cleaning or Servicing.
- **NEVER** Leave Machine Unattended While Grinder is Running.
- **NEVER** Alter This Machine From its Original Form as Shipped From Factory. **DO NOT** Operate Machine With Missing Parts.
- **PROMPTLY REPLACE** Any Worn or Illegible Warning Labels.
- **ALWAYS** Read Operation and Service Manual **BEFORE** Operating, Cleaning, or Servicing.
- **USE ONLY BIRO** Parts and Accessories Properly Installed.

## INSTALLATION



### **TO AVOID SERIOUS PERSONAL INJURY, PROPERLY INSTALL EQUIPMENT IN ADEQUATE WORK AREA**

- **ALWAYS** Use Qualified Technician and Electrician for Installation.
- **ALWAYS** Connect to **Proper** Voltage & Phase.
- **ALWAYS** Install Equipment in Work Area with Adequate Light and Space Away From Children and Visitors.
- **ONLY** Operate on a Solid, Level, Non-Skid Surface.
- **ALWAYS** Lock Machine Castors After Moving Machine to Operating Location.
- **NEVER** Bypass, Alter, or Modify This Equipment in Any Way From Its Original Condition.
- **NEVER** Operate Machine With Product Mixer Safety Cover Open or Removed or Magnetic Interlock Switch By-Passed.
- **NEVER** Operate Without all Warning Labels Attached and Owner/Operator Manual Available to the Operator.

## UNCRATING AND SET UP

1. Read this Manual thoroughly before installation and operation. **Do not** proceed with installation and operation if you have any questions or do not understand anything in this Manual. Contact your local Distributor, or BIRO **first**.

### Step 1



**ATTENTION:  
USE FORKLIFT  
ON THIS SIDE ONLY**

**REMOVE FRONT PANEL  
USE SCREWDRIVER  
OR SCREWGUN**

### Step 2

**LIFT GRINDER ENOUGH  
TO CLEAR LEGS,  
REMOVE FROM CRATE**

2. This machine is shipped with the adjustable legs fully retracted. The legs allow for a height adjustment from the floor to centerline of bowl 30” minimum to 39” maximum with standard foot assembly.
3. This machine weighs approximately 1800 pounds. To avoid accidents block up machine after raising to desired operating height.
4. The adjustable legs can be screwed in to lower the unit to the floor. **CAUTION, DO NOT** exceed 9” of exposed threaded leg, if more height is required, contact your local distributor.
5. Install machine on a level, non-skid surface in a well-lighted work area away from children and visitors.
6. This machine is complete except for knife and plate. There is a bowl shipping plug placed in the output end of the grinding bowl to retain the grinding auger during shipment. **REMOVE THE BOWL SHIPPING PLUG AND THE GRINDING AUGER.**



7. After checking and making sure the power supply is correct, plug in your machine. **NEVER OPERATE THIS MACHINE WITH PRODUCT MIXER SAFETY COVER OPEN OR REMOVED.** (Machine will not run with cover open.)
8. Machine must be properly grounded. Use qualified electrician to install according to local building codes.

## MOTOR WIRING AND ELECTRICAL REQUIREMENTS

1. Interchange of current is made in motor outlet box. Leads are properly marked. Changing instructions are on the motor plate or motor outlet box.
2. All grinders are wired to customer's specified voltage. Be sure motor specifications (voltage, cycle, phase) match power supply line. Be sure line voltage is up to specification.
3. Electrical connections to be in accordance with safety codes and National Electrical Code.
4. Rated voltage of the unit shall be identical with full supply voltage.
5. Voltage drop on the supply line shall not exceed 10% of full supply voltage.
6. The feederline conductor size in the raceway from the branch circuit of the unit must be correct to assure adequate voltage under heavy starting and short overload conditions.
7. The feederline conductor shall only be used for the supply of one unit of the relevant horsepower. For connections of more than one unit on the same feederline, a local electrician will have to be consulted to determine the proper conductor size.
8. The size of the electrical wiring required from the power source to the mixer grinder is a **MINIMUM OF No. 4 WIRE.**

**200-208 Volt  
220-240 Volt**

**4 Gauge Wire  
6 Gauge Wire**

**380-480 Volt  
575 Volt**

**8 Gauge Wire  
10 Gauge Wire**

9. The BIRO Manufacturing Company is not responsible for permanent wiring, connection or installation.



**NOTE TO OWNER AND ELECTRICIAN: IF THIS MACHINE IS NOT CORD AND PLUG CONNECTED TO THE ELECTRICAL SUPPLY SOURCE, THEN IT SHOULD BE EQUIPPED WITH, OR CONNECTED TO, A LOCKABLE, MANUALLY-OPERATED DISCONNECT SWITCH (OSHA 1010.147)**

### MOTOR SPECIFICATIONS GRINDER MOTOR

HP	VOLTS	HZ	PH	AMPS
20	208	60	3	53.1
20	230	60	3	48
20	460	60	3	24
20	575	60	3	19.1
20	380	50	3	34.9

### MIXER MOTOR

HP	VOLTS	HZ	PH	AMPS
5	208	60	3	14.6
5	230	60	3	13.2
5	460	60	3	6.6
5	575	60	3	5.2
5	380	50	3	9.6

10. **Remove the auger** from bowl and hopper.
11. Two green and one red pushbutton are located on the front of the machine that activate the magnetic contactors that control the mix and grind motors. The magnetic interlock switch is mounted in the motor compartment. When the safety cover is raised the machine will stop operation. **NOTE:** Before initial power is applied for start-up, the product mixer safety cover must be lifted slightly (6" to 8") and closed again before pushing the mixer start and/or grind start buttons.

12.



### PRODUCT MIXER SAFETY COVER INSTRUCTIONS



CAUTION: KEEP HANDS CLEAR OF SAFETY COVER AT ALL TIMES.

CAUTION: DO NOT EXCEED 45 P.S.I. REGULATED PRESSURE.


DAMAGE CAN OCCUR TO MACHINE IF THE PRESSURE IS EXCEEDED.

#### TO OPEN LID

- A. Be sure the air valve (located on front of machine) is positioned in the downward direction.
- B. Connect air supply to inlet of regulator system on the machine.
- C. Check pressure gauge, located on regulator. CAUTION: This pressure must not exceed 45 P.S.I. for any reason. Damage can occur to the machine if the pressure is exceeded.
- D. CAUTION: Before raising safety cover, check for enough clearance above machine. The minimum required distance is 120" (10 feet). Lift control valve in the upward direction. The safety cover will rise slowly until fully vertical (90° to machine).

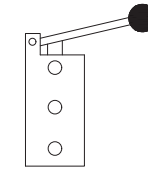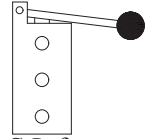

- E. Push control valve in the downward position. The safety cover will slowly close.

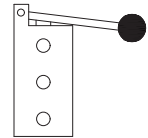

NOTE: The control valve may have to be quickly cycled twice, for the product mixer safety cover to close after being partially opened 6-8 inches.

- 13. Push the green start button for grind. **CHECK THE ROTATION OF THE AUGER DRIVE SHAFT; ROTATION MUST BE COUNTER-CLOCKWISE** as indicated by the rotation decal affixed to the grinding bowl. **ROTATION MUST ONLY BE CHECKED WITH THE GRINDING AUGER REMOVED**, otherwise serious irreparable damage may occur to grinding components. Rewire if necessary at the plug.
- 14. Push the green start button for mix. **CHECK THE ROTATION OF THE MIXER PADDLES; ROTATION MUST BE COUNTER-CLOCKWISE** as indicated by the rotation decal affixed to the paddle front mounting hub. Backwards operation will not allow mixing paddle to feed product to the grinding auger.



- 15. If machine runs clockwise (backwards), it must be rewired to correct rotation, otherwise serious irreparable damage may occur to grinding components. Both the auger and the mixing paddle must operate in the same direction.
- 16. Insert auger assembly into grinding bowl, fully engaging the square drive end into the drive shaft. Next place knife (sharp edges out) onto the knife drive pin. The breaker plate slides onto the knife drive pin, and is held from rotating by pins in the grinding bowl. Install the retaining ring.



#### ONLY HAND TIGHTEN RETAINING RING


For best results, use knife and plate as a set. **Do not operate machine for any period of time** without product in the grinding bowl. This will cause heating and dulling of the knife and plate.

- 17. Check placement of all warning labels and Manual. Machine is now ready for trained operators to process product.
- 18. Use meat deflector attached to grinding bowl to eliminate meat splatter.
- 19. Contact your local Distributor or BIRO directly if you have any questions or problems with the installation or operation of this machine.

# PUSHBUTTON CONTROL PANEL

MIXING PADDLE ROTATION SWITCH  
 3 POSITION SWITCH (ON-OFF-ON)  
MIXER PADDLE DIRECTION

\*OPTIONAL MIXER START MODE  
 MIXER TIMER START  
 SWITCH, (SEE PAGE 17  
 ADJUST MIXER PADDLE TIMER)  
 REPEAT CYCLE TIMER IS SET  
 FOR 2 MINUTES ON AND 5  
 MINUTES OFF FROM FACTORY

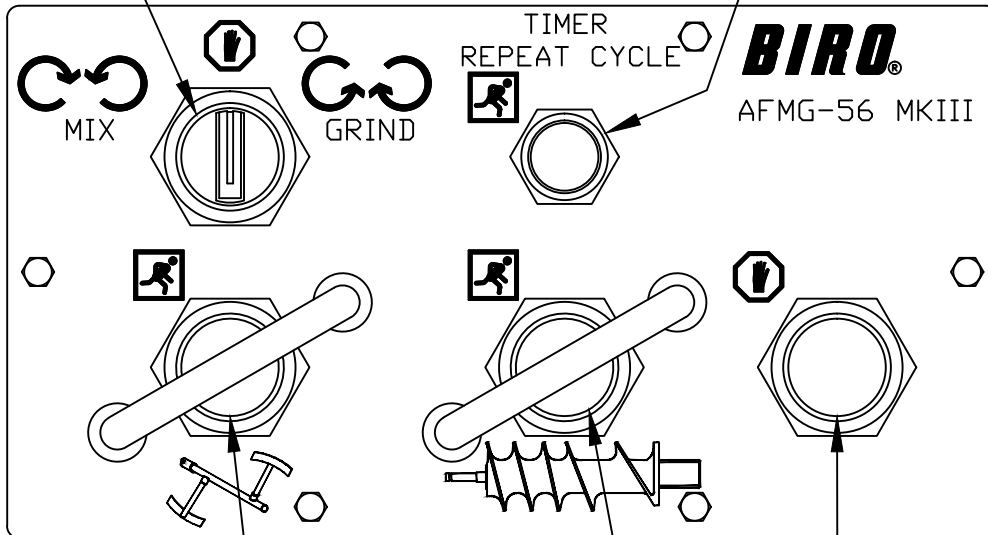

STOP SWITCH

GRINDER START SWITCH

MIXING PADDLE  
 START SWITCH

## OPERATION



### ROTATING GRINDING AUGER & ROTATING MIXING PADDLES TO AVOID SERIOUS PERSONAL INJURY

- **ONLY** Properly Trained Personnel Should Use This Equipment.
- **NEVER** Place Hands into Machine Input or Output Openings.
- **NEVER** Open Machine During Operation.
- **DO NOT** Wear Gloves While Operating.
- **DO NOT** Tamper With, Bypass, Alter, or Modify This Equipment in Any Way From Its Original Condition.
- **NEVER** Operate Machine With Product Mixer Safety Cover Opened or Removed or Magnetic Interlock Switch By-Passed. If for Any Reason the Hopper Cover or Safety Switches Require Adjustment or Replacement, Contact Your Local Authorized Distributor Immediately.
- **ALWAYS** Turn Off and Unplug Machine from Power Source and Perform Lockout/Tagout Procedures to This Machine Before Unjamming, Unclogging, Cleaning or Servicing.
- **NEVER** Leave Machine Unattended While the Grinder is Running.
- **NEVER** Operate Without All Warning Labels Attached and Owner/Operator Manual Available to the Operator.

#### A. TO PROCESS PRODUCT

1. Before starting the mixer grinder, have a container for receiving ground product at the output end of the grinding bowl.
2. FIRST GRIND
  - a. Fill Product Hopper (Maximum 800 Pounds), close Product Mixer Safety Cover. The paddle direction selector switch must be in the grind direction.
  - b. Push both grind and mix green start buttons to feed the first grind. It is recommended to use a breaker plate with a 3/8" diameter or larger holes.
  - c. Push the red stop button when all product has been ground out.
3. SECOND GRIND
  - a. Fill Product Hopper (Maximum 800 Pounds), close Product Mixer Safety Cover. If mixing is required the paddle direction selector switch must be in the mix position. Thorough mixing can be done by turning the paddle direction selector switch to mix and grind directions. During the mix operation seasonings may be added. The mix position will move product to the back hopper wall.
  - b. Push the mixer paddle green start button only and depending on product and the temperature push the red stop button after one to three minutes. Turn the paddle direction selector switch to the grind position and push the mixer green start button only, product will move to the front hopper wall, then push the red stop button and repeat by selecting the mix position or continue in the grind position.
  - c. Push the mixer paddle green start button and the auger green start button to feed first or second grind out.
  - d. Push the red stop button when all product has been ground out.

## CLEANING



### ROTATING GRINDING AUGER & ROTATING MIXING PADDLES TO AVOID SERIOUS PERSONAL INJURY

- **ALWAYS** Turn Off, Unplug From Power Source and Perform Lockout/Tagout Procedures to this Machine **BEFORE** Cleaning or Servicing.
- **ONLY** Use Recommended Cleaning Equipment, Materials, and Procedures.
- **NEVER** Spray Water or Other Liquid Substances Directly at Motor, Power Switch or any Other Electrical Components.
- **ALWAYS** Thoroughly Clean Equipment at Least Daily.

#### CLEANING THE BIRO MIXER GRINDER

1. Disconnect mixer grinder from power and air source and perform lockout/tagout procedures.
2. Remove grinding bowl end ring, breaker plate, knife and grinding auger.
3. Remove mixing paddles by first loosening the paddle lock set screw (located at the front of the machine). Then turn the locking lever clockwise approximately  $\frac{1}{4}$  turn to unlock the paddle shafts and remove them from the hopper.



### DO NOT POWER SPRAY DIRECTLY AT ELECTRICAL COMPONENTS

4. Machine is now ready to be cleaned using warm soapy water and rinsed with clean water. Machine may be cleaned by power spray washing, taking care not to spray directly at any electrical controls.
5. The grinding head can be removed for cleaning if desired. This is accomplished by removing the three nuts on the back flange of the grinding head.
6. After machine has been cleaned and allowed to air dry, all exposed metal surfaces should be coated with a good food grade light oil or grease.

**-NOTES-**

## MAINTENANCE



### ROTATING GRINDING AUGER & ROTATING MIXING PADDLES TO AVOID SERIOUS PERSONAL INJURY

- **ALWAYS** Turn Off, Unplug Machine From Power Source and Perform Lockout/Tagout Procedures to this Machine **BEFORE** Servicing.
- **NEVER** Touch This Machine without Training and Authorization by Your Supervisor.
- **NEVER** Place Hands into Machine Input or Output Openings.
- **NEVER** Bypass, Alter, or Modify This Equipment in Any Way From Its Original Condition.
- **PROMPTLY REPLACE** Any Worn or Illegible Warning Labels.
- **USE ONLY GENUINE BIRO** Parts and Accessories Properly Installed.

#### A. GRINDING BOWL INSTALLATION

1. Mount the grinding bowl on the three threaded studs on the front of the machine. Tighten in position with provided nuts.
2. Place the grinding auger in the grinding bowl and fully seat rear drive tang into auger drive shaft.
3. Install knife, breaker plate and end retainer ring.



#### ONLY HAND TIGHTEN RETAINING RING

4. When the bowl assembly is mounted and tight, there should be approximately 1/8" gap between the back inside wall of the grinding trough and the back of the auger. The bowl ring wrench is provided with each mixer grinder is used only for **REMOVAL** of the end retaining ring for cleaning purposes or for changing knife and breaker plate.

## B. MIXER PADDLE INSTALLATION


1. The **BIRO MODEL AFMG-56 MkIII** mixer paddles are timed to allow for proper mixing action.

### 2. PADDLE REMOVAL:

Remove mixing paddles by first loosening the paddle lock set screw (located at the front of the machine). Then turn the locking lever clockwise approximately  $\frac{1}{4}$  turn to unlock the paddle shafts. Remove paddle shafts by first sliding them towards the front of the machine and then lifting them out of the hopper.

### 3. PADDLE INSTALLATION:

The mixing paddles will only fit on its corresponding drive hub. To install paddle shafts first insert the drive end of the paddle shaft into or onto the drive hub and slide toward the back hopper wall. Then insert the lock arm assembly turning the lock arm into place and finally tightening the paddle lock set screw.

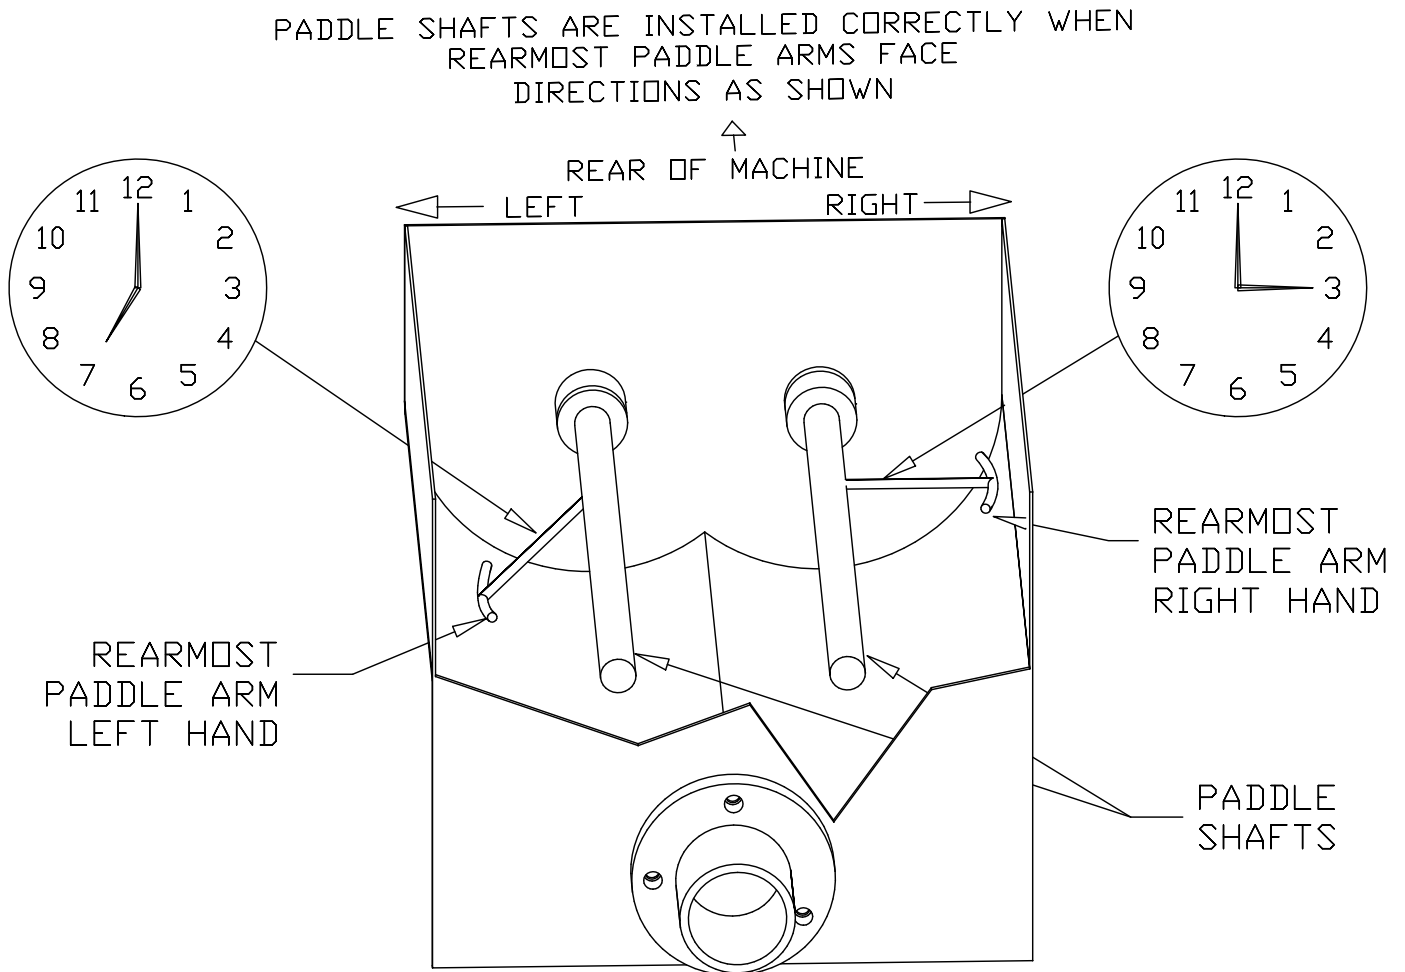


## C. LUBRICATION

1. **MOTORS:** The mix and grind motors have pre-lubricated bearings. These bearings should be re-lubricated annually with a good grade of bearing grease. Do not over-grease.

2. **BEARING HOUSING:** The main bearings are housed in an enclosed and sealed journal box. Re-lubricate semi-annually with a good grade of bearing grease. Do not over-grease. This may cause seal damage.

**No. 60027 GEAR REDUCER  
LUBRICATION AND MAINTENANCE**

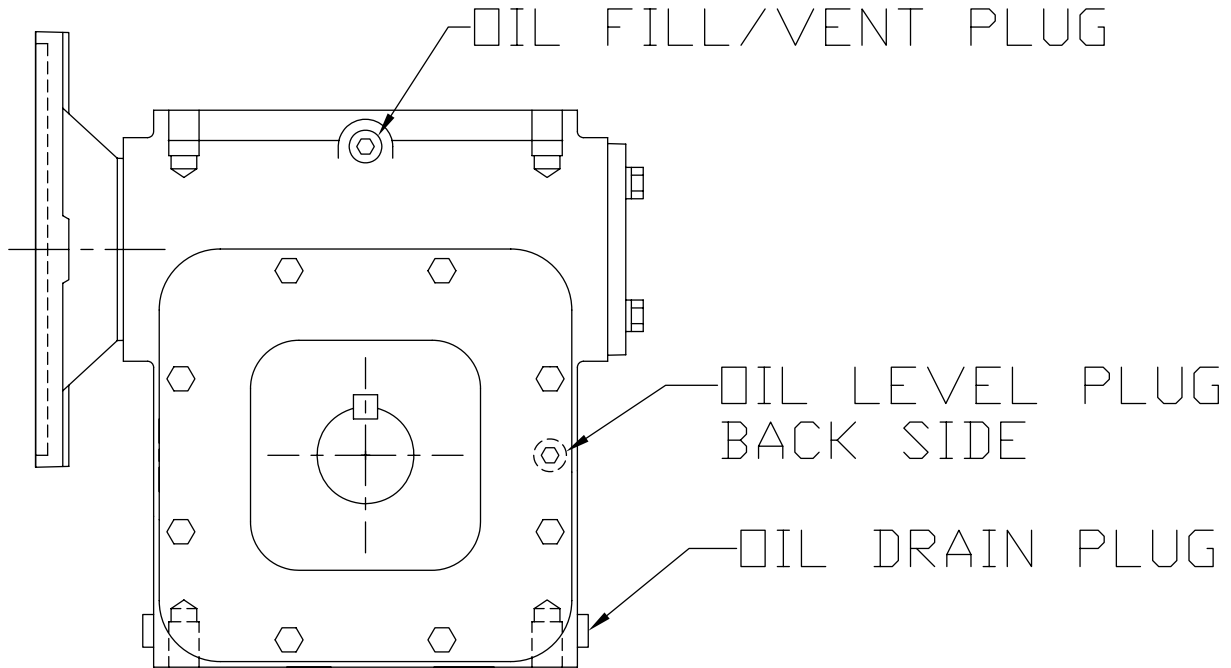

**VIEW IS FROM OPPOSITE SIDE OF DRIVEN SHAFT**

**LUBRICANTS FOR WORM GEAR REDUCERS**

The precision-made gears and bearings in Speed Reducers require high-grade lubricants of the proper viscosity to maintain trouble-free performance. For best results, use lubricants on the following chart for worm gear reducers.

	<b>MINERAL OILS</b>	<b>SYNTHETIC OILS</b>
Ambient Temperature	16 to 50° F	96 to 131° F
Final State Worm Speed	Up to 2000 FPM	Up to 450 FPM
ISO Viscosity Grade	460	680
AGMA Lubricant No.	#7 Compounded	8 S

Mobil	600W Super Cylinder	SHC 636
American Lubricants	AGMA #7 Gear Oil	N/A
Castrol	Tribol 1105-7C	Tribol 800/680
Chevron	Cylinder Oil W460	Tregra 680
Conoco	Inca Oil 460	N/A
Exxon (Esso)	Spartan EP 460	Teresstic SHP 680
Fiske Brothers	SPO-277	N/A
Shell	Valvata J 460	Omala RL 680
Texaco	Vangaurd 460	Pinnacle 680

**Standard factory-installed lubricant is Mobil Oil Corp. 600 W Super Cylinder Oil (AGMA7).**

Some gear lubricants contain E.P. additives that can be corrosive to bronze gear material. Avoid lubricants that are compounded with sulfur and/or chlorine.

Lubricant selections are provided by the lubricant manufacturer based on AGMA recommended viscosity grades. Viscosity grades are based on Lubrication Standard ANSI/AGMA 9005-D94.

## LUBRICATION (Continued)

### 1. Factory Filling

The speed reducers are oil filled at the factory with Mobil 600W Super Cylinder Oil to the proper level for the standard mounting position. **The oil level should be checked and adjusted (if necessary) prior to operation, using the oil level plug provided and while the unit is oriented in its operating position.**

### 2. Oil Changing

When changing oil for any reason, it should be remembered that oils of various types may not be compatible. Therefore, when changing to a different oil, it is recommended that the housing be completely drained and thoroughly flushed with a light flushing oil prior to refilling with appropriate lubricant. The oil level should be rechecked after a short period of operation and adjusted, if necessary.

#### A. Initial Oil Change

Oil in the mixer transmission should be changed after the first four (4) weeks of operation. This is to remove the initial oil and also any small metal shavings that may have been generated during the mating of the gears.

#### B. Subsequent Oil Changes

After the initial oil change, subsequent changes should be performed every six (6) months. After draining the oil, refill the unit to the “level” plug on the side of the transmission with Mobil 600W Super Cylinder oil or equivalent.

#### C. Synthetic Oil

Synthetic lubricants can be advantageous over mineral oils in that they generally are more stable, have a longer life, and operate over a wider temperature range. These oils are appropriate for any application but are especially useful when units are subjected to low start-up temperatures or high operating temperatures. However, continuous operation above 225° F may cause damage to seals or other components. It is recommended that the initial oil be changed or filtered after the first 1500 hours of operation to remove metal particles that accumulate during break-in. Subsequent oil changes should be made after 5000 hours of operation if the units are operating in a clean environment. This can be extended to 10,000 hours if using new reformulated Mobil SHC 636 lubricants (orange in color) and the lubricant remains free of contamination over this period.

### 3. Procedure for Replacing Oil in Mixer Transmission

- A. Unplug mixer grinder from power source and perform lockout/tagout procedures.
- B. Remove rear drive cover.
- C. Remove vent plug on the top side of the gearbox and the oil level plug from the side of the gearbox.
- D. With a container in place to catch old oil, remove the lower drain plug on the side of the gearbox.
- E. When all oil has drained, clean the drain plug and re-install in the gearbox.
- F. Refill the gearbox with Mobil 600W Super Cylinder oil or equivalent until oil appears at the bottom of the oil level hole. Approximately 3.1 pints of oil.
- G. Replace oil level and vent plugs.
- H. Reinstall rear drive cover

### 4. Overfilling or Underfilling

If a speed reducer is overfilled with oil, the energy used in churning the excessive oil can result in overheating. If this occurs, shut down the drive, remove the oil level plug and allow oil to drain until oil ceases to drain from the level hole, reinstall the oil level plug and restart the drive. If the speed reducer is underfilled, the resultant friction can cause overheating and possible damage. If this occurs, fill the speed reducer to the oil level plug hole and check the gearing for excessive wear.

### 5. Oil Seals

Although the speed reducer uses high quality oil seals and precision ground shafts to provide a superior seal contact surface, it is possible that circumstances beyond the speed reducer’s control can cause oil seal leakage (damage during shipment or installation, etc.). When replacing a shaft oil seal, using the following suggestions will help to insure leak-free operation and long seal life.

- A. When installing a new seal, cover the keyway and any other surface discontinuity with smooth tape to protect the seal lip from being damaged.
- B. A sealant should be used between the O.D. of the seal and the I.D. of the bore into which the seal is installed. The seal bore should also be free of any burrs, nicks, or scratches.
- C. Be sure that the seal is not cocked in the seal bore. The outer face of the seal should be flush with the surface into which it is mounted.

## D. SPUR GEARS LUBRICATION

Gears should be checked after the first two (2) weeks of operation. Then every six (6) weeks, depending on hour's used, for severe duty every two (2) weeks. Recommended types of spur gear lubricant are those with Lithium soap base. Also bonded lubricants such as Shell Cassida EPS Grease 2 or equivalent for Spur Gears. The lubricant should be of a viscosity whereby it will stick and bond to the working surfaces to reduce heat and wear to the Spur Gear Teeth.

- a. Unplug mixer grinder from power source and perform lockout/tagout procedures.
- b. Remove rear drive cover.
- c. Spray or brush lubricant on teeth of the Spur Gears complete.
- d. Reinstall rear drive cover.

## E. MIXER DRIVE GEAR ADJUSTMENT

- a. Unplug mixer grinder from power source and perform lockout/tagout procedures.
- b. Remove rear drive cover.
- c. Loosen the four bolts and adjustment bolt holding the 5 HP motor and transmission to its mounting plate.
- d. Slide Mixer Transmission to the right.
- e. When the Spur Gears are interlocked leave a little clearance, about  $\frac{1}{64}$ " -  $\frac{1}{32}$ ".

### **Do Not Bottom Out the Gear Teeth into the Other Driven Gear.**

This will put excessive and damaging pressure on the transmission bearings and mixer drive shaft bearings. Check with a straight edge from the large spur gear across the face to the face of drive spur gear in two different locations. The spur gears must be aligned. Tighten the adjustment bolt up to the transmission and tighten jam nut. Tighten the four bolts to the transmission and mounting plate. Check the spur gear alignment again. See Lubrication.

- f. Reinstall rear drive cover.

## F. MAIN DRIVE CHAIN AND SPROCKET LUBRICATION

The main drive chain has been pre-lubricated at the factory to protect it against dirt and moisture. Chain life will vary appreciably depending upon its lubrication. The better the lubrication, the longer the chain life.

Lubrication effectiveness will vary with the amount of lubricant and frequency of application. Ideally, a lubricant film should always be present between the working parts. Manually lubricate the chain as often **as is needed** (possibly once a week). **NEVER** exceed three months without lubricating.

Lubricating just the outside of the chain does little good. Apply lubrication on the inside of the chain span so that it will work through the moving parts and joints by centrifugal force as the chain rotates and reaches the area where one surface "scrubs" another.

Recommended types of chain lubricant are those with Molybdenum Disulphide. Also bonded lubricants such as Dow Corning Molykote 321R or equivalent are excellent for open chains. The lubricant should be of a viscosity whereby it will "flow" somewhat and penetrate the internal working surfaces. Thick stiff greases are of little value because they cannot work into the moving parts of the chain.


- a. Unplug mixer grinder from power source and perform lockout/tagout procedures.
- b. Remove rear drive cover .
- c. Spray or brush lubricant on inside of chain, slowly and carefully turning large sprocket by hand.
- d. Reinstall rear drive cover.

## G. MAIN DRIVE CHAIN TENSION (See Diagram Below)

1. Unplug mixer grinder from power source and perform lockout/tagout procedures.
2. Remove rear drive cover.
3. Loosen the four bolts that hold the motor to the frame of the machine.
4. Loosen the lock nuts on the motor adjusting stud.
5. **To Loosen Chain Tension.** Turn motor adjusting studs counterclockwise. Grasp motor and pull toward adjusting stud. Be sure to turn both adjusting studs the same amount and evenly. Total chain flex should be  $\frac{3}{16}'' - \frac{3}{8}''$ . Be sure to keep motor shaft **parallel** with auger drive shaft.

**To Tighten Chain Tension.** Turn motor adjusting studs clockwise. Be sure to turn both adjusting studs the same amount and evenly. Total chain flex should be  $\frac{3}{16}'' - \frac{3}{8}''$ . Do not overtighten chain as this will put excessive and damaging pressure on the motor bearings. Be sure to keep motor shaft **parallel** with auger drive shaft. Be sure the sprockets are inline.

6. Retighten motor mounting bolts.
7. Retighten motor adjusting stud lock nuts.
8. Reinstall rear drive cover.

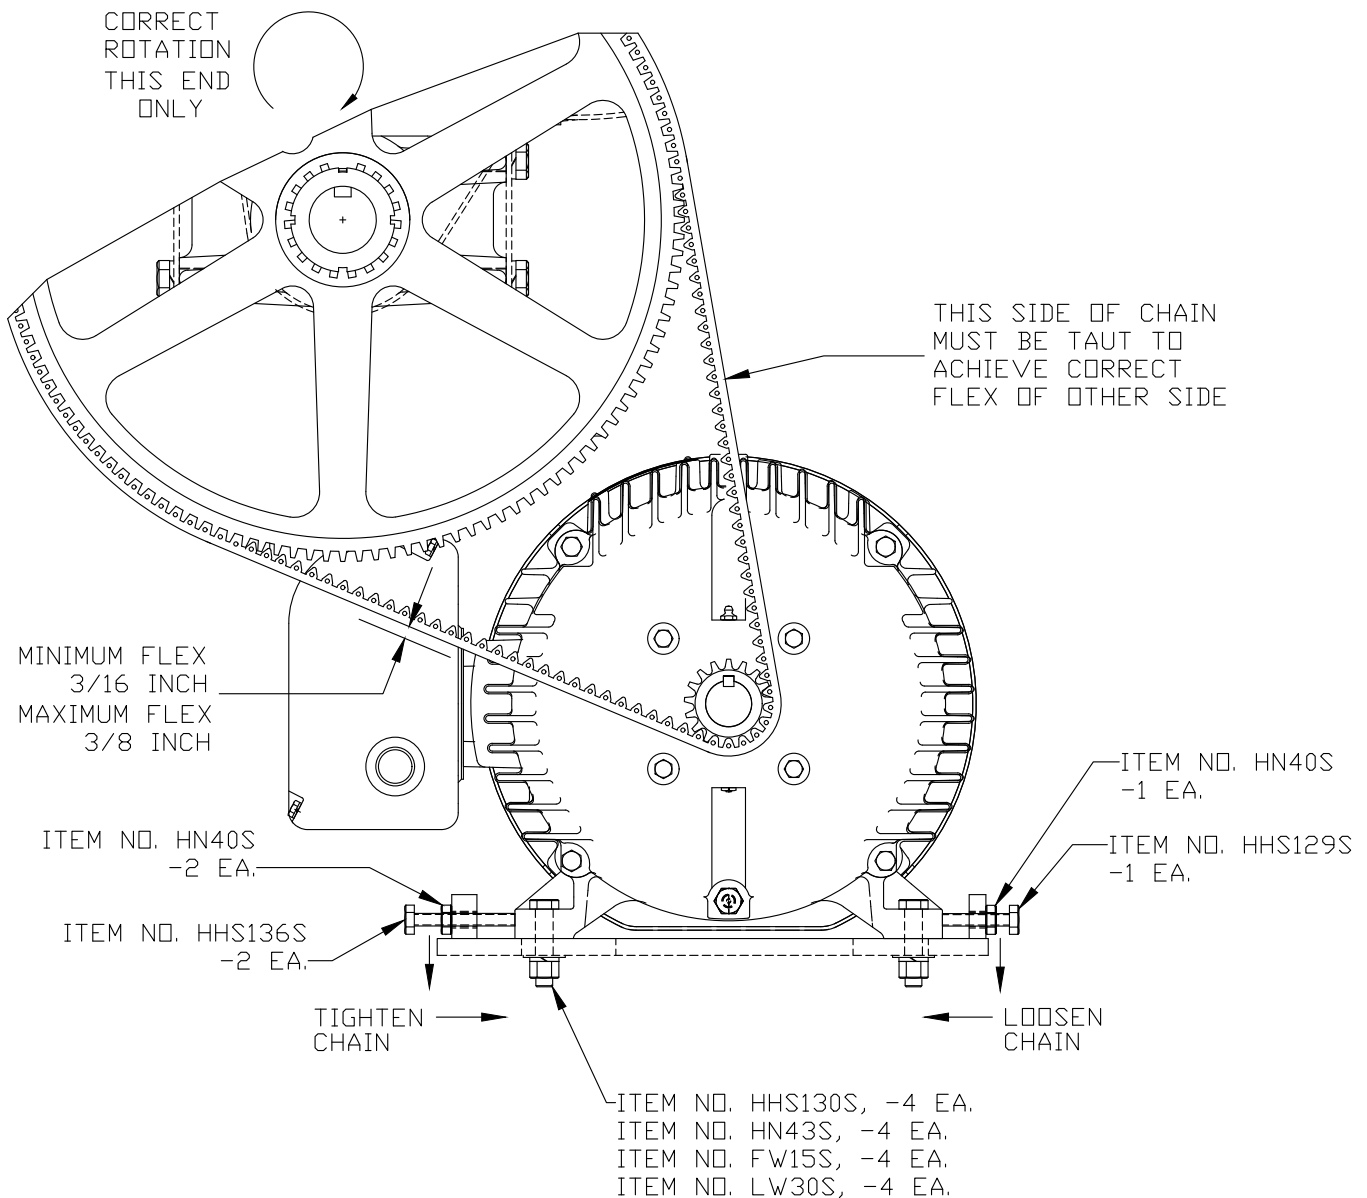

**TO ADJUST MIXING PADDLE TIMER No. 60065**  
**The timer is factory set for 2 minutes on and for 5 minutes off.**

1. Unplug mixer grinder from power source and perform lockout/tagout procedures.
2. Remove rear drive cover.
3. Locate the Crouzet timer (No. TLR1 or MLR1) in the electrical enclosure. Remove the electrical enclosure cover. The top two dials are for the on time, the bottom two dials are for the off time. When adjusting either on or off time always adjust the white dial first. Turn it to the desired time range.  
**Example:**  
6-60s means it will cycle anywhere from 6 seconds to 60 seconds.
4. Adjust the blue dial. The blue dial fine tunes the white dial.  
**Example:**  
The white dial is on 6-60s and the blue dial is on 1, the timer will cycle every 6 seconds, on 5 the timer will cycle every 30 seconds, etc.
5. Install the electrical enclosure cover.
6. Install rear drive cover

**-NOTES-**

# MIXING PADDLE TIMER No. 60065

## TLR1 or MLR1 (shown)




Specifications						
Functions	Timing	Output	Nominal rating	Connections	Supply voltage	Code
L - Li	0,1 s →100 h	1 changeover relay	8 A	Screw terminals	24 V DC / 24 →240 V AC	88827155

Timing	
Timing ranges (7 ranges)	1 s - 10 s - 1 min - 10 min - 1 h - 10 h - 100 h
Repetition accuracy with constant parameters	± 0.5 % (IEC/EN 61812-1)
Drift Temperature	± 0,05 % / °C
Drift Voltage	± 0,2 % / V
Display accuracy according to IEC/EN 61812-1	± 10 % / 25 °C
Immunity from micro power cuts : typical	< 10 ms
Minimum pulse duration typically (relay version)	30 ms
Minimum pulse duration typically (solid state version)	50 ms
Minimum pulse duration typically (relay version under load)	100 ms
Maximum reset time by de-energisation typically (relay version)	120 ms
Maximum reset time by de-energisation typically (solid state version)	350 ms

Supply	
Multi-voltage power supply	Depending on version
Frequency (Hz)	50 / 60
Operating factor	100 %
Operating range	85 →110 % Un 85 →120 % Un for 12 V AC / DC
Max. absorbed power	32 VA (240 VAC) 1,5 W (240 VDC) 0,6 W (24 VDC) 0,7 VA (12 VAC) 0,7 W (12 VDC)

Output specification	
Rated power	2000 VA/80 W

# AFMG-56 MkIII FRONT VIEW PARTS DIAGRAM

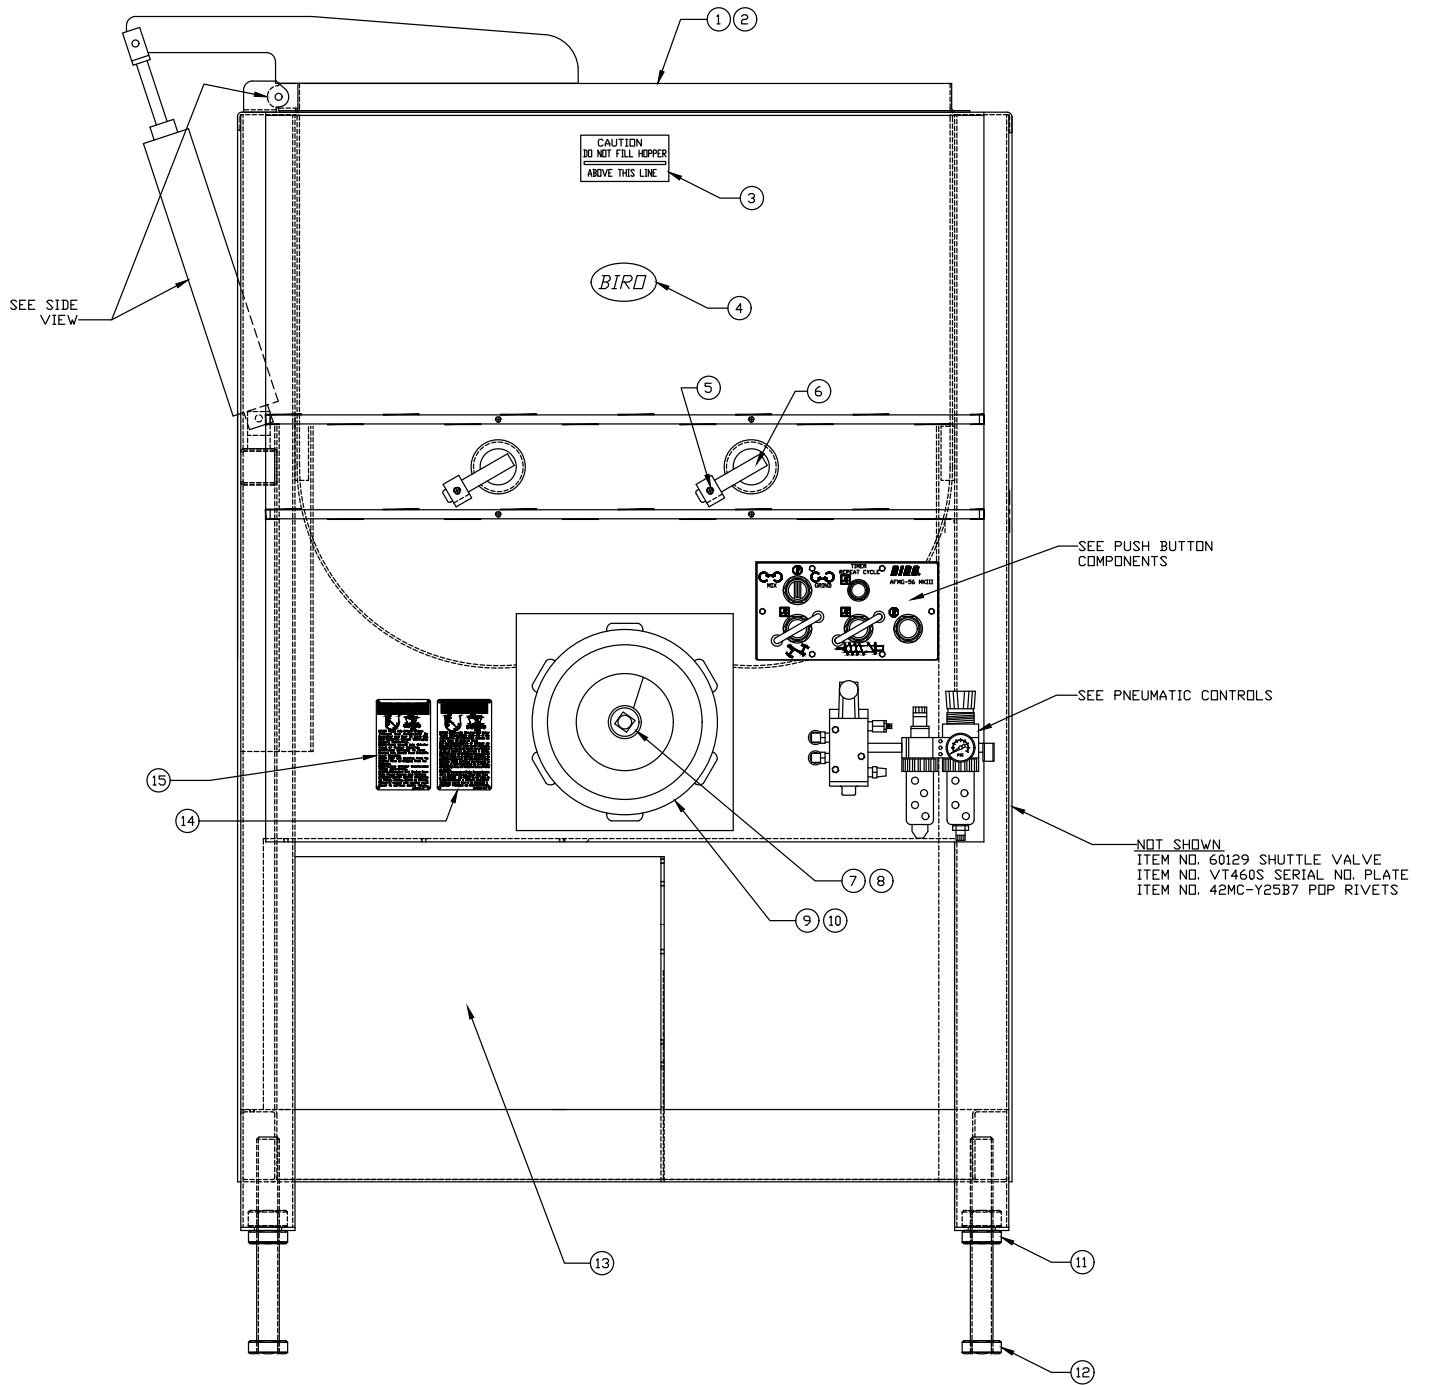


## AFMG-56 MkIII FRONT VIEW PARTS LIST


Fig.	Item No.	Description
1	<b>60014</b>	Standard lid assembly
2	<b>60104</b>	Continuous feed lid assembly
3	<b>53687</b>	Decal, Do Not Fill Above This Line
4	<b>VTS7181</b>	Decal, BIRO World
5	<b>53568</b>	Mixer paddle lock screw (2 req'd.)
6	<b>53852</b>	Lock arm assembly (2 req'd.)
7	<b>HK52/56</b>	Knife drive pin
8	<b>52556</b>	Auger assembly, SS
9	<b>HR56-S</b>	Ring, SS
10	<b>52353-S</b>	Bowl with plate pins, SS
11	<b>HN68S</b>	Hex nut, 1¼-7, SS (4 req'd.)
12	<b>60045</b>	Foot assembly, 12" long (4 req'd.)
13	<b>60016</b>	Cover, auger motor (S/N 456102 on)
14	<b>H653-SP</b>	Grinder warning label, Spanish
15	<b>H653-E</b>	Grinder warning label, English
16	<b>60040</b>	Paddle assembly - left hand - male
17	<b>60039</b>	Paddle assembly - right hand - female

**NOT SHOWN**

<b>H340</b>	Ring wrench
<b>VT460S</b>	Model & serial no. plate
<b>42MC-Y25B7</b>	Pop rivets (4 req'd.)
<b>60129</b>	Shuttle valve

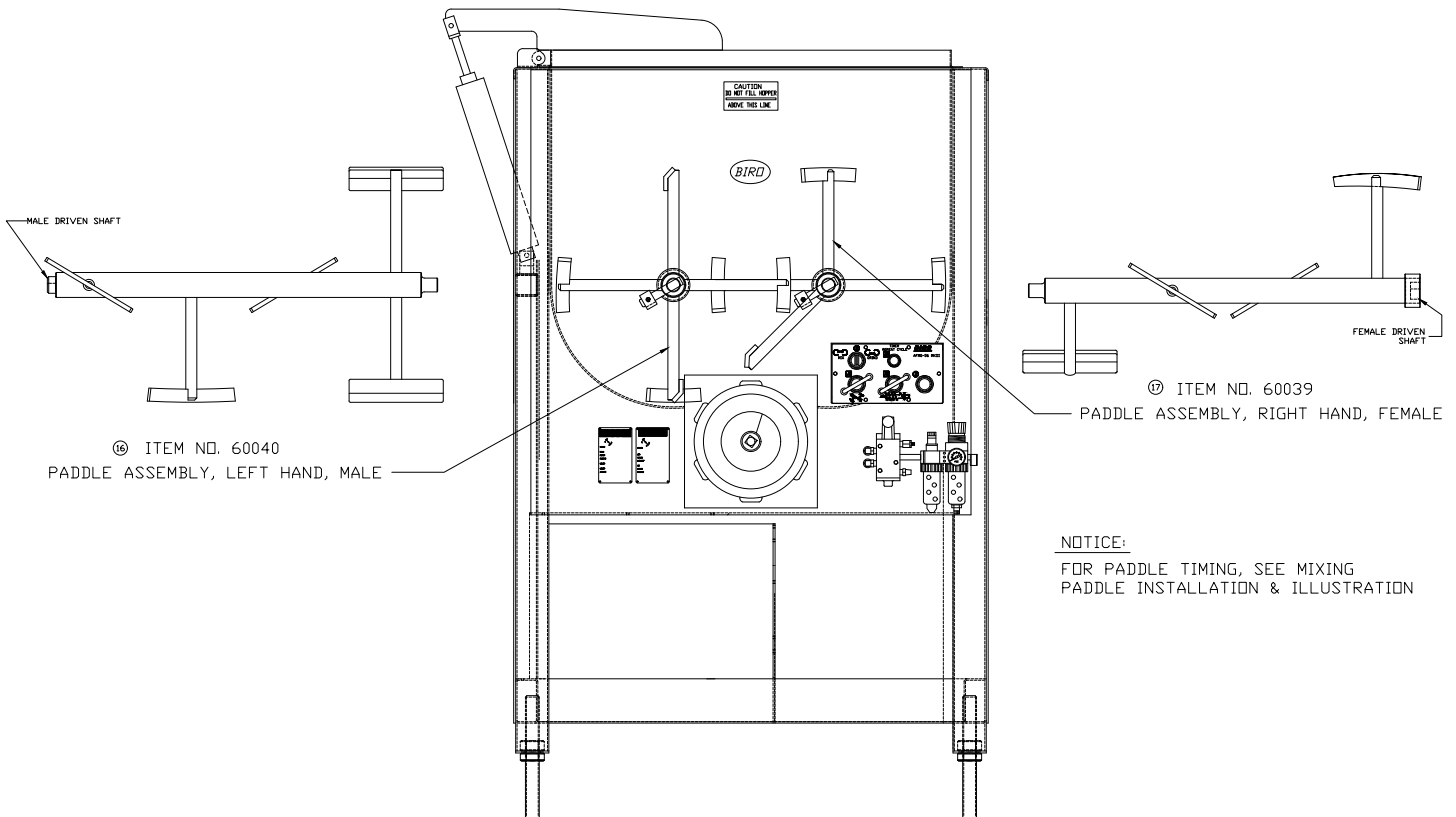


# AFMG-56 MkIII SIDE VIEW PARTS DIAGRAM

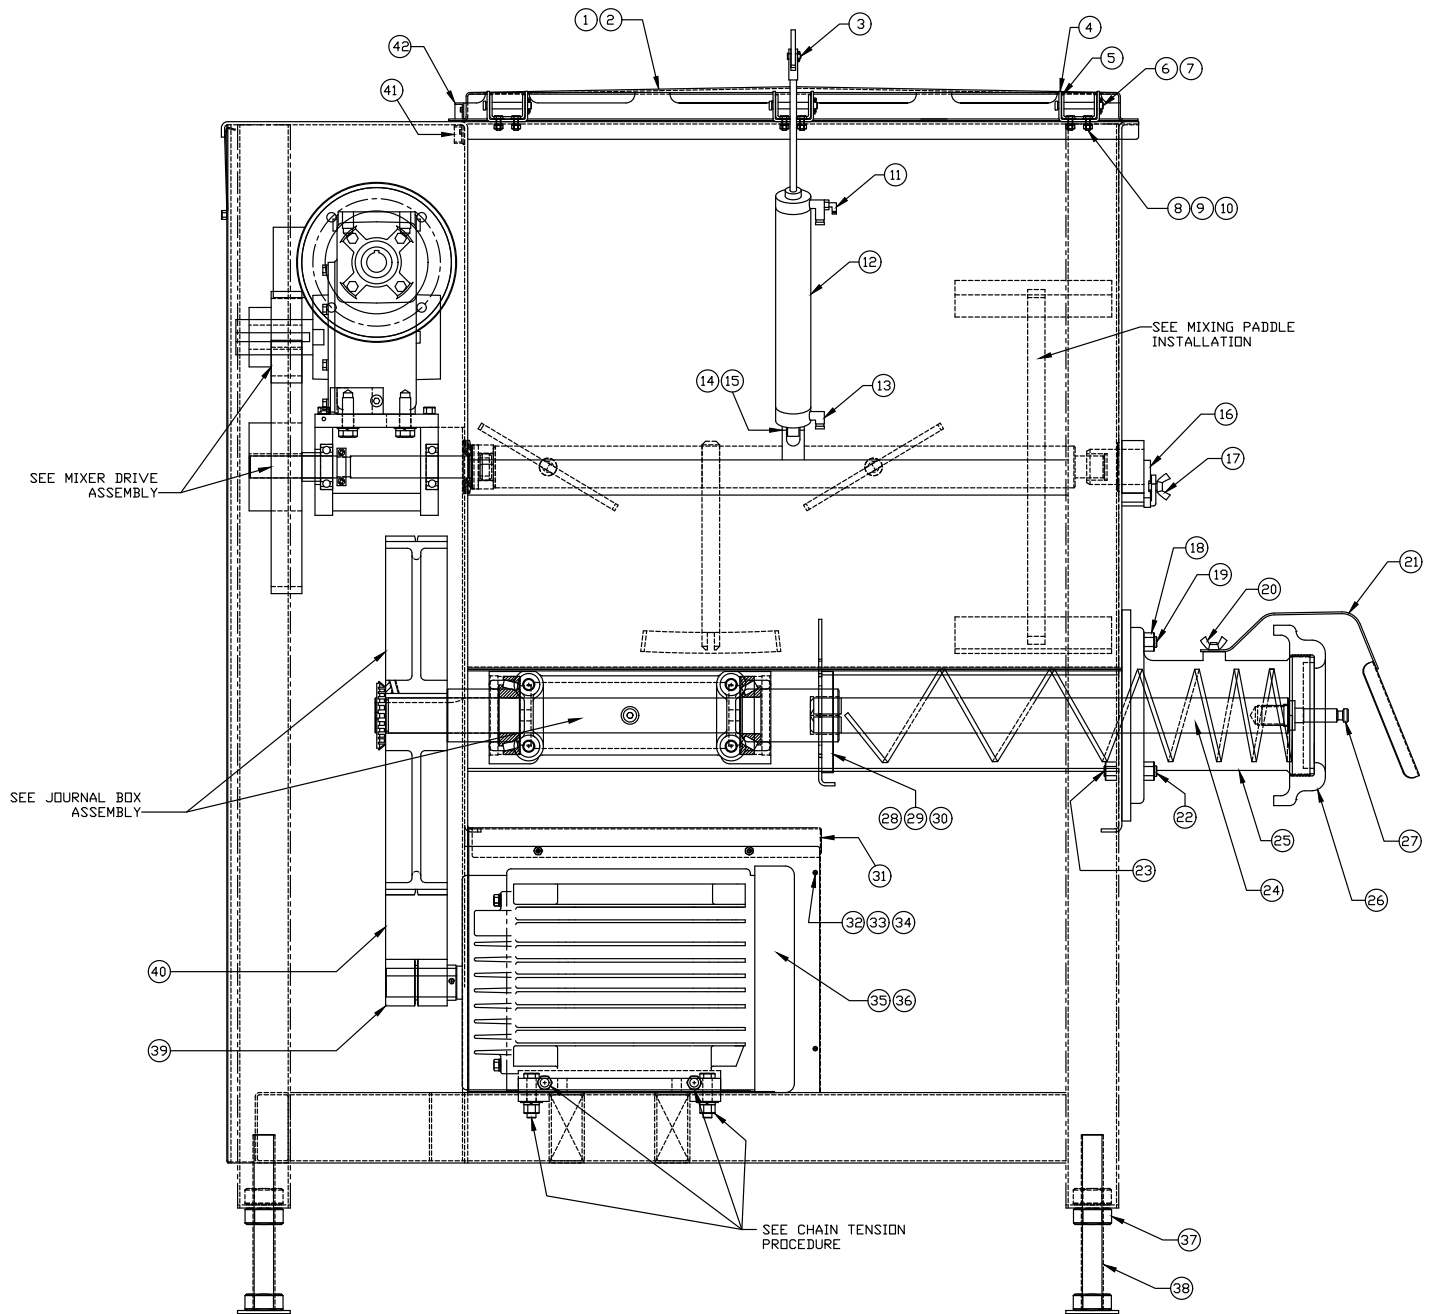

## AFMG-56 MkIII SIDE VIEW PARTS LIST

Fig.	Item No.	Description
1	<b>60014</b>	Standard lid assembly
2	<b>60104</b>	Continuous feed lid assembly
3	<b>60078</b>	Clevis, air cylinder
4	<b>60019</b>	Hinge half, base mount (3 req'd)
5	<b>60020</b>	Hinge half, lid mount (DNS)
6	<b>60101</b>	Clevis pin, $\frac{3}{8}$ x $2\frac{3}{4}$ , SS (3 req'd.)
7	<b>60130</b>	Cotter pin, SS (3 req'd.)
8	<b>HHS040S</b>	Hex head screw, $\frac{1}{4}$ -20 x $\frac{3}{4}$ , SS (6 req'd.)
9	<b>LW10S</b>	Lock washer, $\frac{1}{4}$ , SS (6 req'd.)
10	<b>HN15S</b>	Hex nut, $\frac{1}{4}$ -20, SS (6 req'd.)
11	<b>60083</b>	Blocking valve, air cylinder
12	<b>60081</b>	Air cylinder, $2\frac{1}{2}$ diameter, SS
13	<b>60084</b>	90° swivel fitting, Prestolok
14	<b>60079</b>	Pivot pin, air cylinder - used on S/N: 568001 only
15	<b>60130</b>	Cotter pin, SS
16	<b>53852-1</b>	Lock arm assembly w/ bearings (2 req'd)
17	<b>53568</b>	Mixer paddle lock wing bolt (2 req'd)
18	<b>HN64</b>	Hex nut, $\frac{3}{4}$ -10, zinc plated (3 req'd)
19	<b>52351</b>	Front plate stud, $\frac{3}{4}$ -10 x $2\frac{1}{8}$ (1 req'd)
20	<b>WN20S</b>	Wing nut, $\frac{3}{8}$ -16, SS
21	<b>52392</b>	Meat guard splash shield
22	<b>52351-1</b>	Front plate stud, $\frac{3}{4}$ -10 x 3 (2 req'd)
23	<b>HN64</b>	Hex nut, $\frac{3}{4}$ -10, zinc plated (2 req'd)
24	<b>52556</b>	Auger assembly, SS
25	<b>52353-S</b>	Bowl w/ plate pins, SS
26	<b>HR56-S</b>	Ring, SS
27	<b>HK52/56</b>	Knife drive pin
28	<b>52598</b>	Auger shaft seal
29	<b>60008</b>	Seal retainer
30	<b>FHS28S</b>	Flat head screw, 10-32 x 1, SS
31	<b>60016</b>	Auger motor cover
32	<b>HHS025S</b>	Hex head screw, $\frac{1}{4}$ -20 x $\frac{1}{2}$ , SS (13 req'd.)
33	<b>FW06S</b>	Flat washer, $\frac{1}{4}$ , SS (13 req'd.)
34	<b>LW10S</b>	Lock washer, $\frac{1}{4}$ , SS (13 req'd.)
35	<b>65201-WEG-HE</b>	Motor, 20HP, 208-230/380-460V/60Hz/3Ph
36	<b>65201-WEG-HE-575</b>	Motor, 20HP, 575V/60Hz/3Ph
37	<b>HN68S</b>	Hex nut, $1\frac{1}{4}$ -7, SS (4 req'd.)
38	<b>60045</b>	Foot assembly, 12" long (4 req'd.)
39	<b>52398</b>	Ramsey sprocket, 17 tooth
40	<b>60111</b>	Silent chain, 156 pitches
41	<b>PC168</b>	Safety switch
42	<b>60072</b>	Safety switch magnet (DNS)

# AFMG-56 MkIII BACK VIEW PARTS DIAGRAM

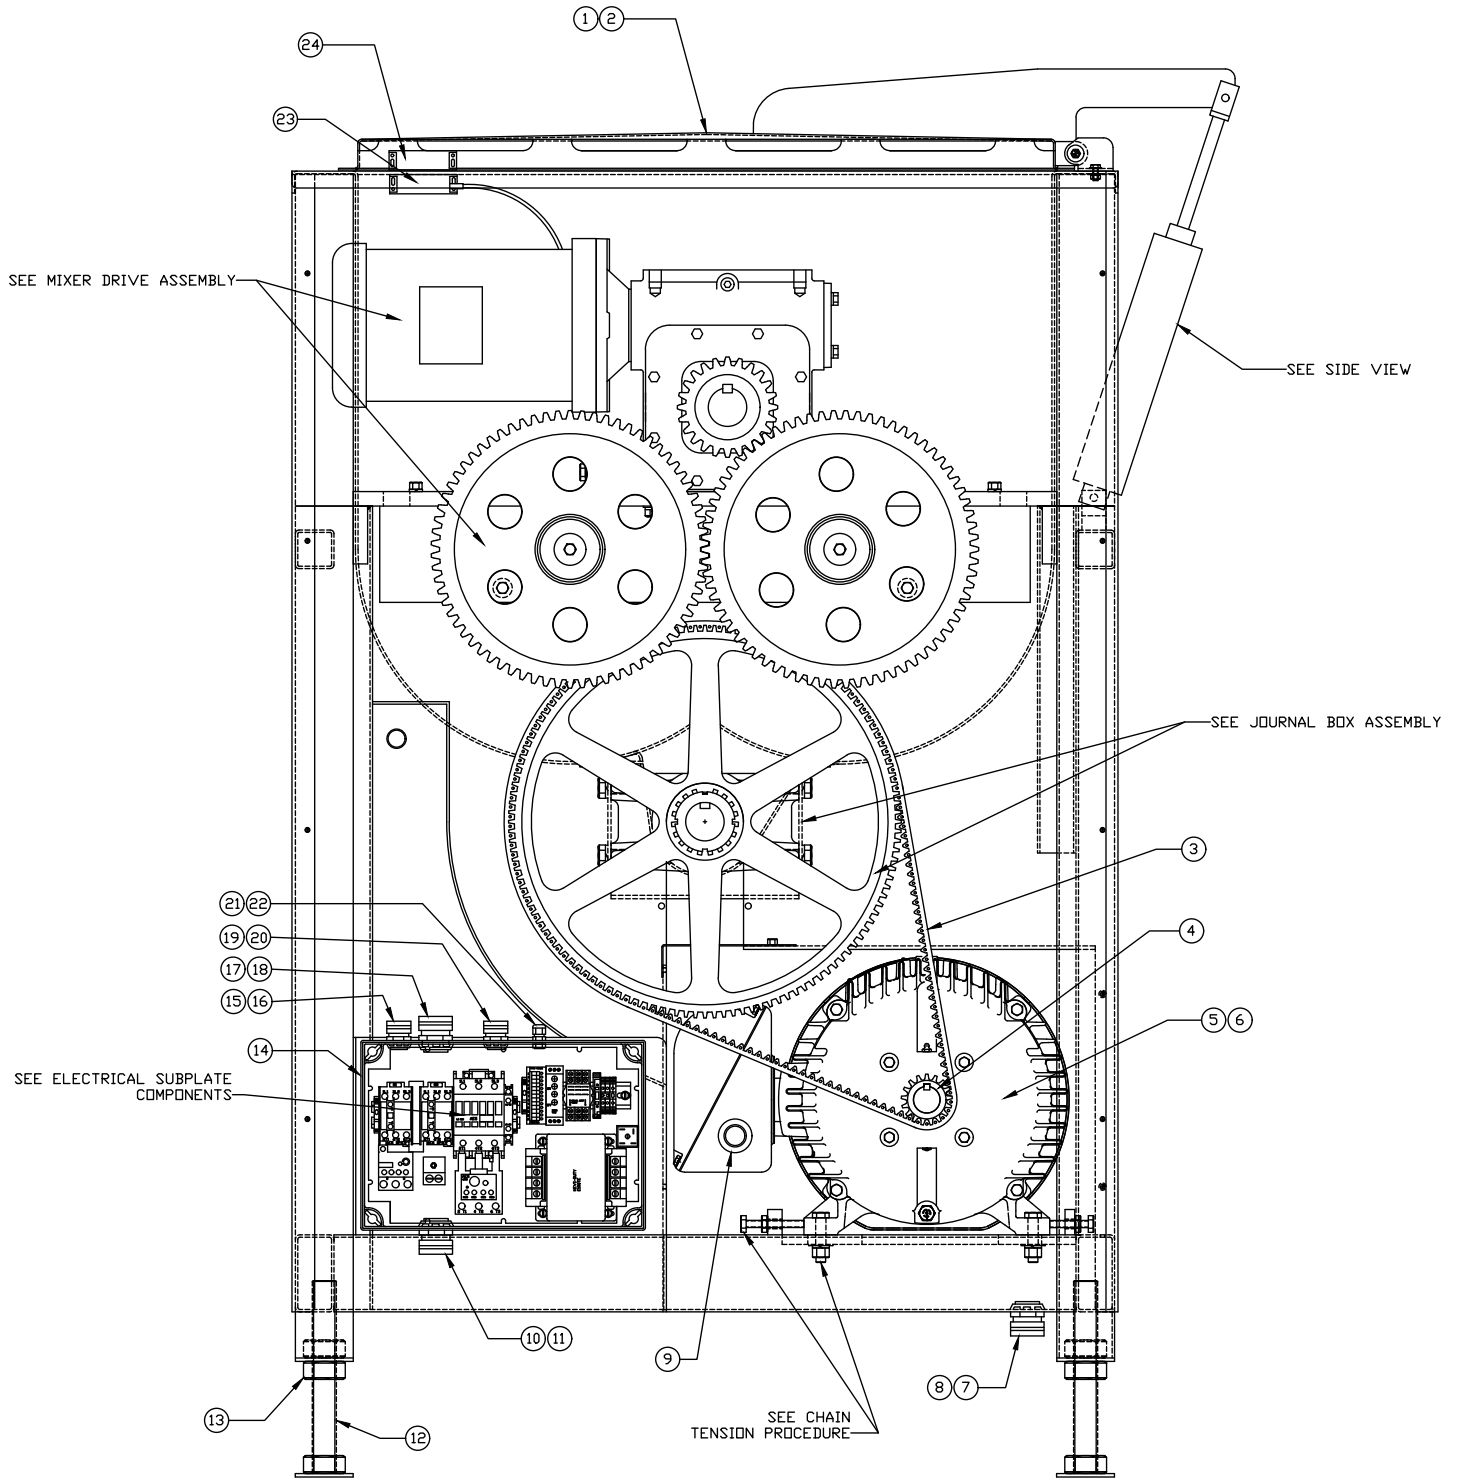

## AFMG-56 MkIII BACK VIEW PARTS LIST

Fig.	Item No.	Description
1	<b>60014</b>	Standard lid assembly
2	<b>60104</b>	Continuous feed lid assembly
3	<b>60111</b>	Silent chain, 156 pitches
4	<b>52398</b>	Ramsey sprocket, 17 tooth
5	<b>65201-WEG-HE</b>	Motor, 20HP, 208-230/380-460V/60Hz/3Ph
6	<b>65201-WEG-HE-575</b>	Motor, 20HP, 575V/60Hz/3Ph
7	<b>224-17</b>	Cord grip connector, 1¼" dia., 1-1⅛" grip range
8	<b>224-17N</b>	Lock nut, 1¼" diameter
9	<b>60131</b>	Cord grip connector, 1" dia., 1-1⅛" grip range
10	<b>224-17</b>	Cord grip connector, 1¼" dia., 1-1⅛" grip range
11	<b>224-17N</b>	Lock nut, 1¼" diameter
12	<b>60045</b>	Foot assembly, 12" long (4 req'd.)
13	<b>HN68S</b>	Hex nut, 1¼-7, SS (4 req'd.)
14	<b>60055</b>	Watertight enclosure, electrical
15	<b>224-4</b>	Cord grip connector 90°, ½" dia., .62-.75" grip range
16	<b>224-1N</b>	Conduit nut (DNS)
17	<b>224-17</b>	Cord grip connector, 1¼" dia., 1-1⅛" grip range
18	<b>224-17N</b>	Lock nut, 1¼" diameter
19	<b>224-5</b>	Cord grip connector 90°, ½" dia., .375-.500 grip range
20	<b>224-1N</b>	Conduit nut (DNS)
21	<b>BES16993</b>	Strain relief fitting, PG7, 3-6.5mm
22	<b>BES16994</b>	Lock nut, PG7
23	<b>PC168</b>	Safety switch
24	<b>60072</b>	Safety switch magnet (DNS)

## AFMG-56 MkIII MIXER DRIVE ASSEMBLY



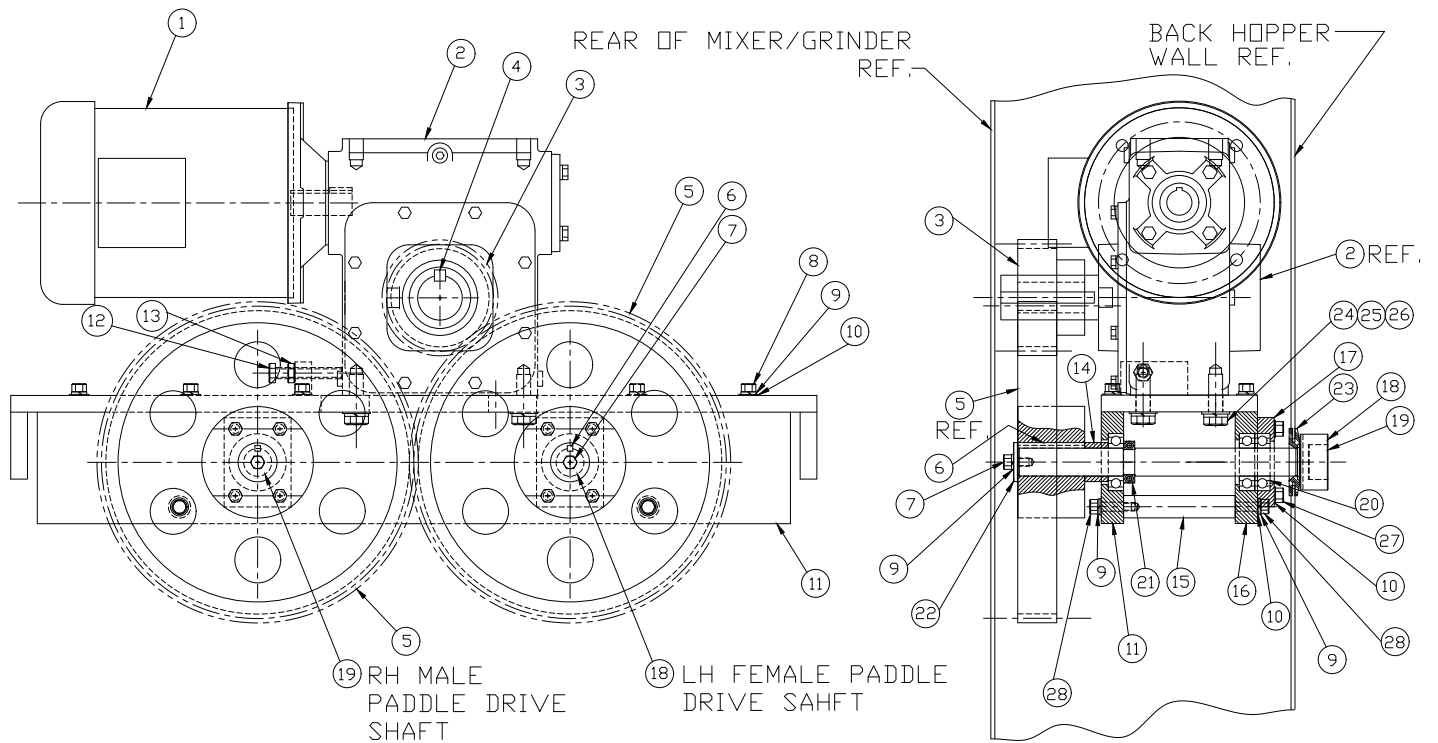


Fig.	Item No.	Description
1	<b>60028</b>	Mixer motor, 5 HP-208-230/460V, 60Hz,3PH
2	<b>60027</b>	Mixer transmission, 25:1 ratio
3	<b>60025</b>	Mixer drive gear, 24 tooth
4	<b>52413</b>	Key, mixer drive gear - 1/2 sq. x 3"
5	<b>60026C</b>	Driven gear, 70 tooth
6	<b>60030</b>	Key, mixer driven gears - 1/4 sq. x 3"
7	<b>HHS067S</b>	Hex head screw, 3/8-16 x 3/4", SS
8	<b>HHS085S</b>	Hex head screw, 3/8-16 x 2", SS
9	<b>LW20S</b>	Lock washer, 3/8", SS
10	<b>FW07S</b>	Flat washer, 3/8", SS
11	<b>60005</b>	Bearing mounting plate rear, paddle drive shaft
12	<b>HHS136S</b>	Hex head screw, 1/2-13 x 3", SS
13	<b>HN42S</b>	Hex nut, 1/2-13, SS
14	<b>60043</b>	Spacer, driven spur gear
15	<b>60041</b>	Spacer, paddle drive shaft bearing mounting plate
16	<b>60023</b>	Bearing mounting plate front, paddle drive shaft
17	<b>60024</b>	Cap, front bearing mounting plate
18	<b>60047</b>	Paddle drive shaft, LH female
19	<b>60048</b>	Paddle drive shaft, RH male
20	<b>60054</b>	Bearing, 1 1/4" bore, single row ball
21	<b>60042</b>	Locking collar, 2 pcs
22	<b>60050</b>	Washer, paddle drive shaft
23	<b>53953</b>	Seal, mixer drive shaft
24	<b>HHS147S</b>	Hex head screw, 5/8-11 x 2", SS
25	<b>LW35S</b>	Lock washer, 5/8", SS
26	<b>FW17S</b>	Flat washer, 5/8", SS
27	<b>HHS083S</b>	Hex head cap screw, 3/8-16 x 1 3/4", SS
28	<b>HHS080S</b>	Hex head screw, 3/8-16 x 1 1/2", SS

# LID ASSEMBLIES

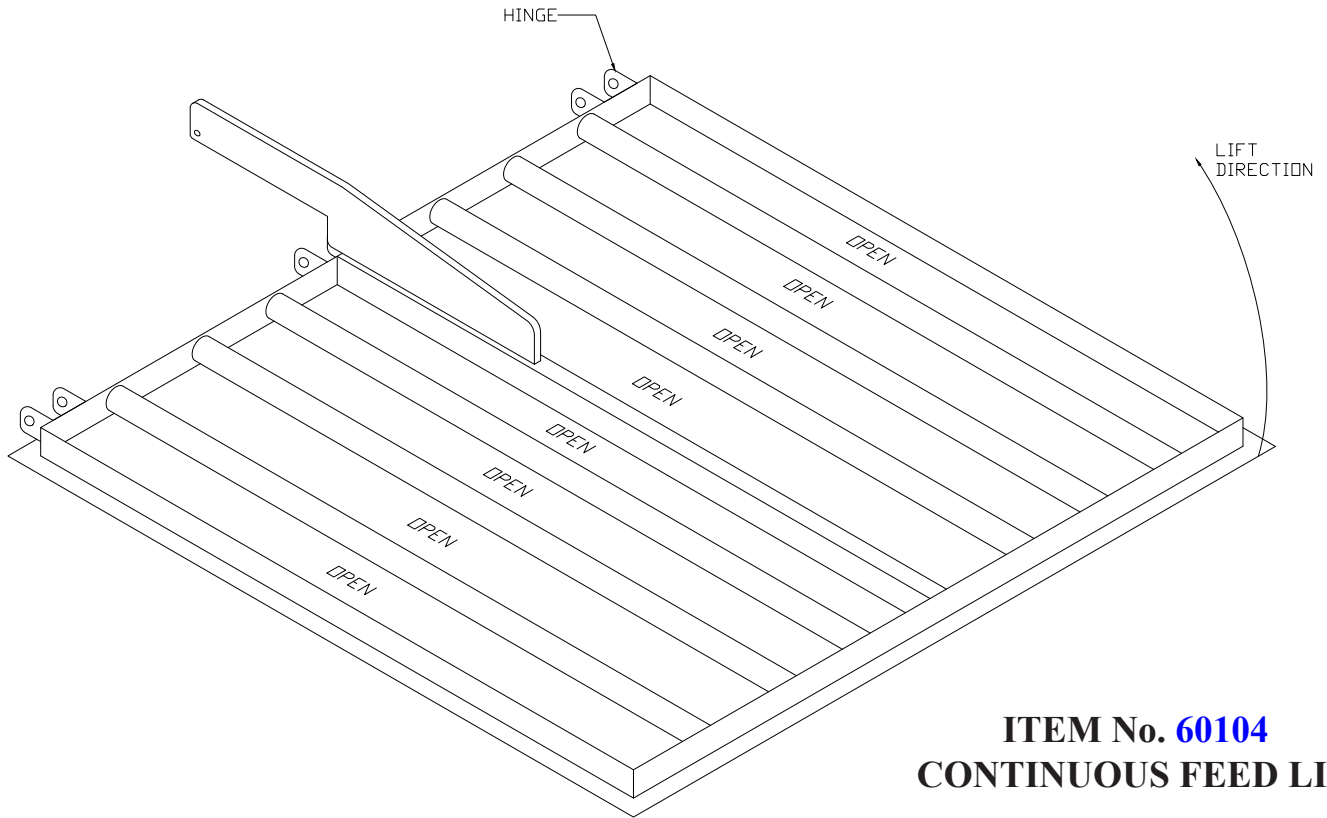


**ITEM No. 60104**  
**CONTINUOUS FEED LID**

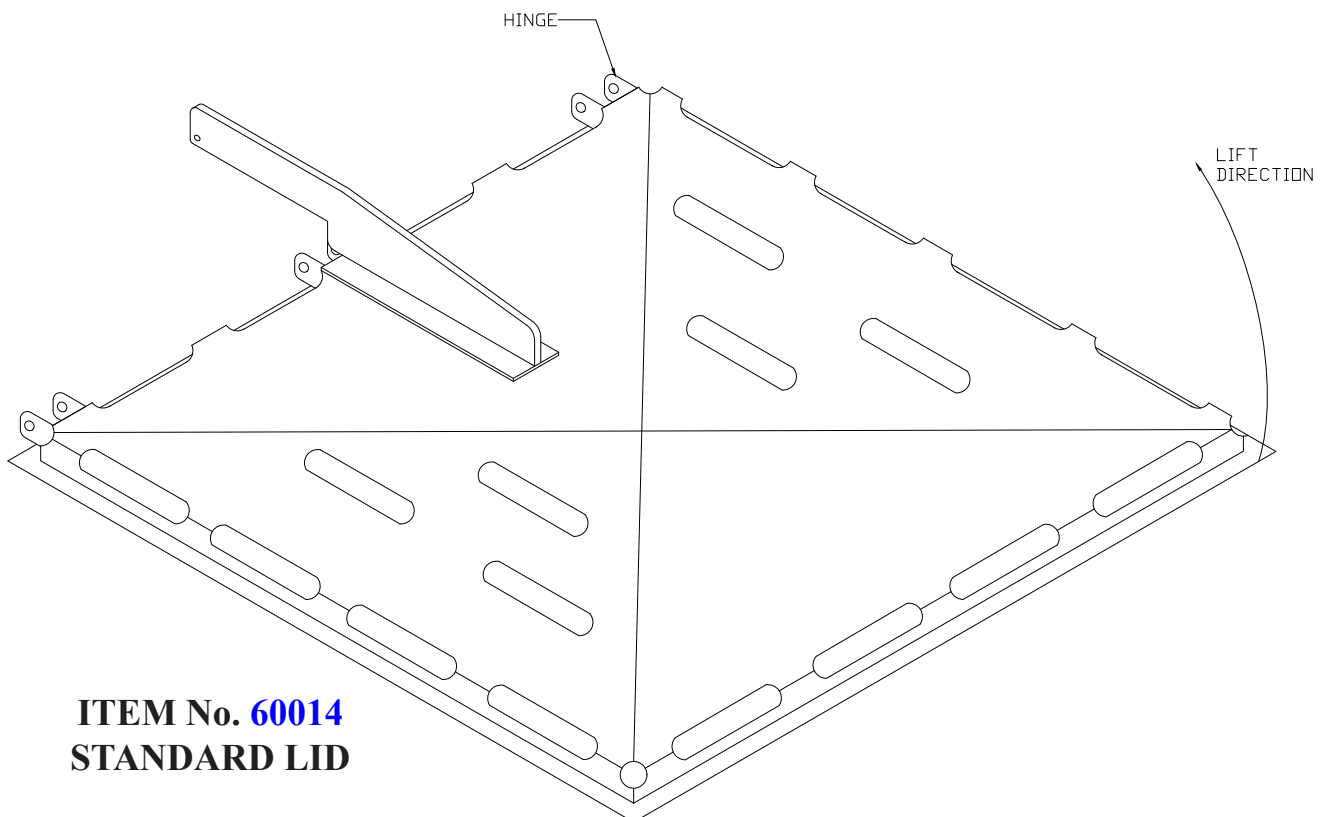

**ITEM No. 60014**  
**STANDARD LID**


## ITEM No. 52530 JOURNAL BOX ASSEMBLY

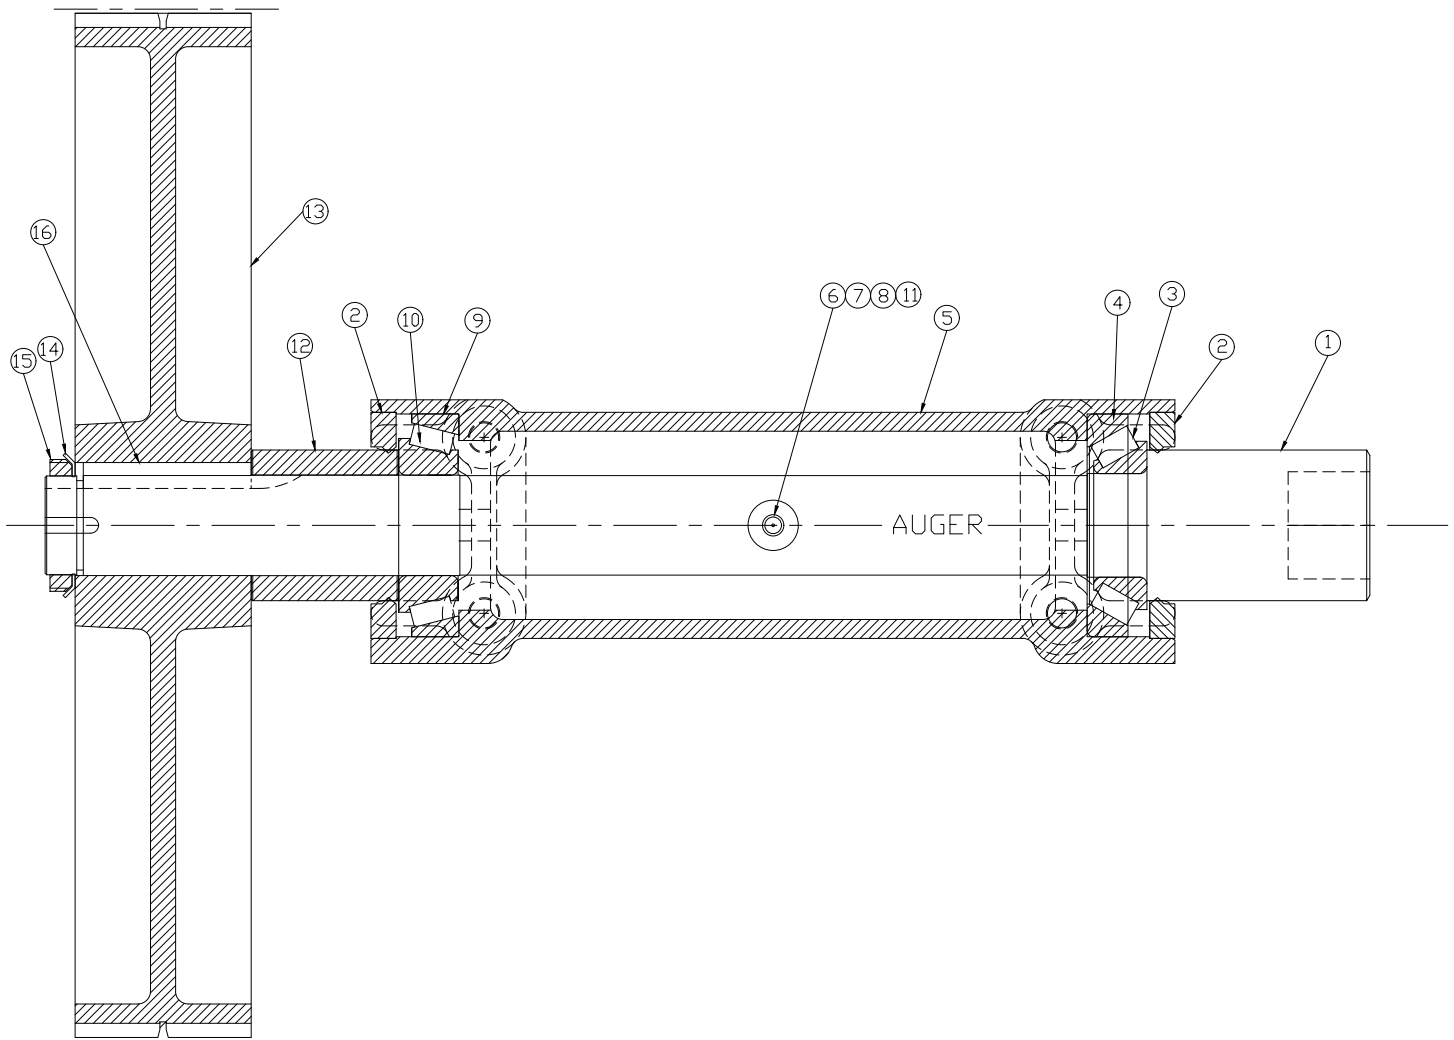

**FIG. Item No.**

Item No.	Description
<b>52530</b>	Journal box assembly
1 <b>52527</b>	Auger drive shaft
2 <b>52505</b>	Grease seal
3 <b>52507</b>	Bearing cone
4 <b>52506</b>	Bearing cup
5 <b>52502</b>	Journal box
6 <b>234</b>	Grease fitting
7 <b>60059</b>	Coupling, 1/8" NPT
8 <b>60060</b>	Nipple, 1/8" NPT x 3"
9 <b>52508</b>	Bearing cup
10 <b>52509</b>	Bearing cone
11 <b>60061</b>	Nipple w/ vent, 1/8" NPT x 3"
12 <b>52528</b>	Spacer, journal box
13 <b>52399-CTN</b>	Ramsey sprocket, 128 tooth
14 <b>52511</b>	Castellated lock washer
15 <b>52510</b>	Castellated lock nut
16 <b>52413</b>	Key, auger drive shaft, 1/2" sq. x 3"

# AFMG-56MkIII PUSHBUTTON PLATE COMPONENTS

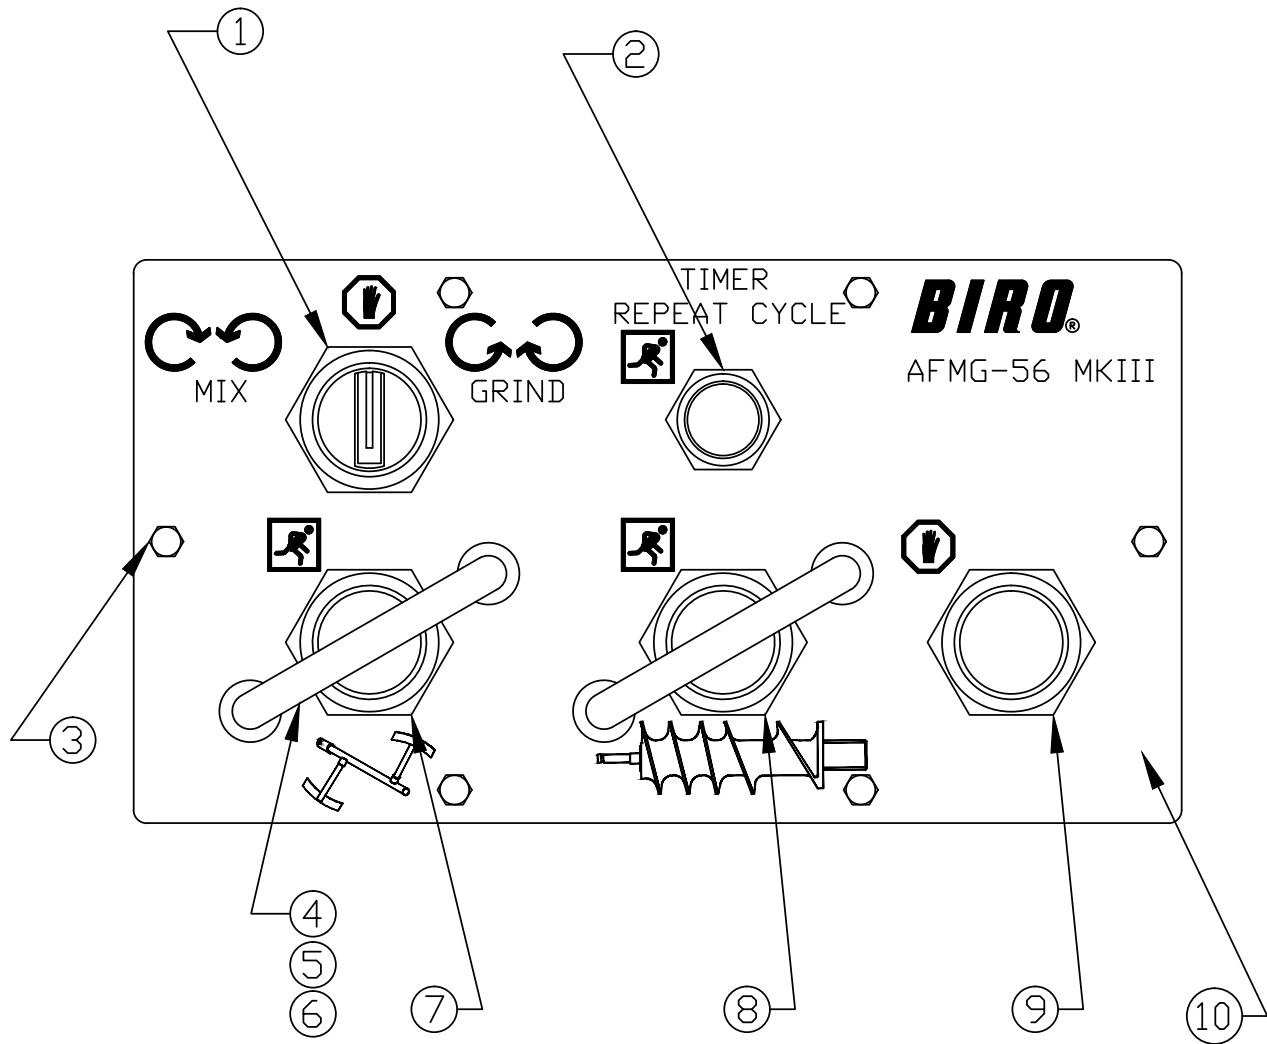

**FIG. Item No.**

Item No.	Description
1	<b>EMG90676</b> Selector switch, 3 position paddle direction
2	<b>PC154</b> On switch, timer circuit
3	<b>2563</b> Hex screw washer head, 10-32 x 1/2", SS (2 req'd)
4	<b>50655-2</b> Switch guard (2 req'd)
5	<b>LW15S</b> Lock washer, 5/16", SS (4 req'd) not shown
6	<b>HN20S</b> Hex nut, 5/16-18, SS (4 req'd) not shown
7	<b>42MC-Y73</b> Start button, mixer
8	<b>42MC-Y73</b> Start button, grinder
9	<b>42MC-Y74</b> Stop button, all
10	<b>60049</b> Front cover, pushbutton enclosure

AFMG-56 MKIII  
STARTING WITH S/N 568074  
ELECTRICAL SUBPLATE COMPONENTS





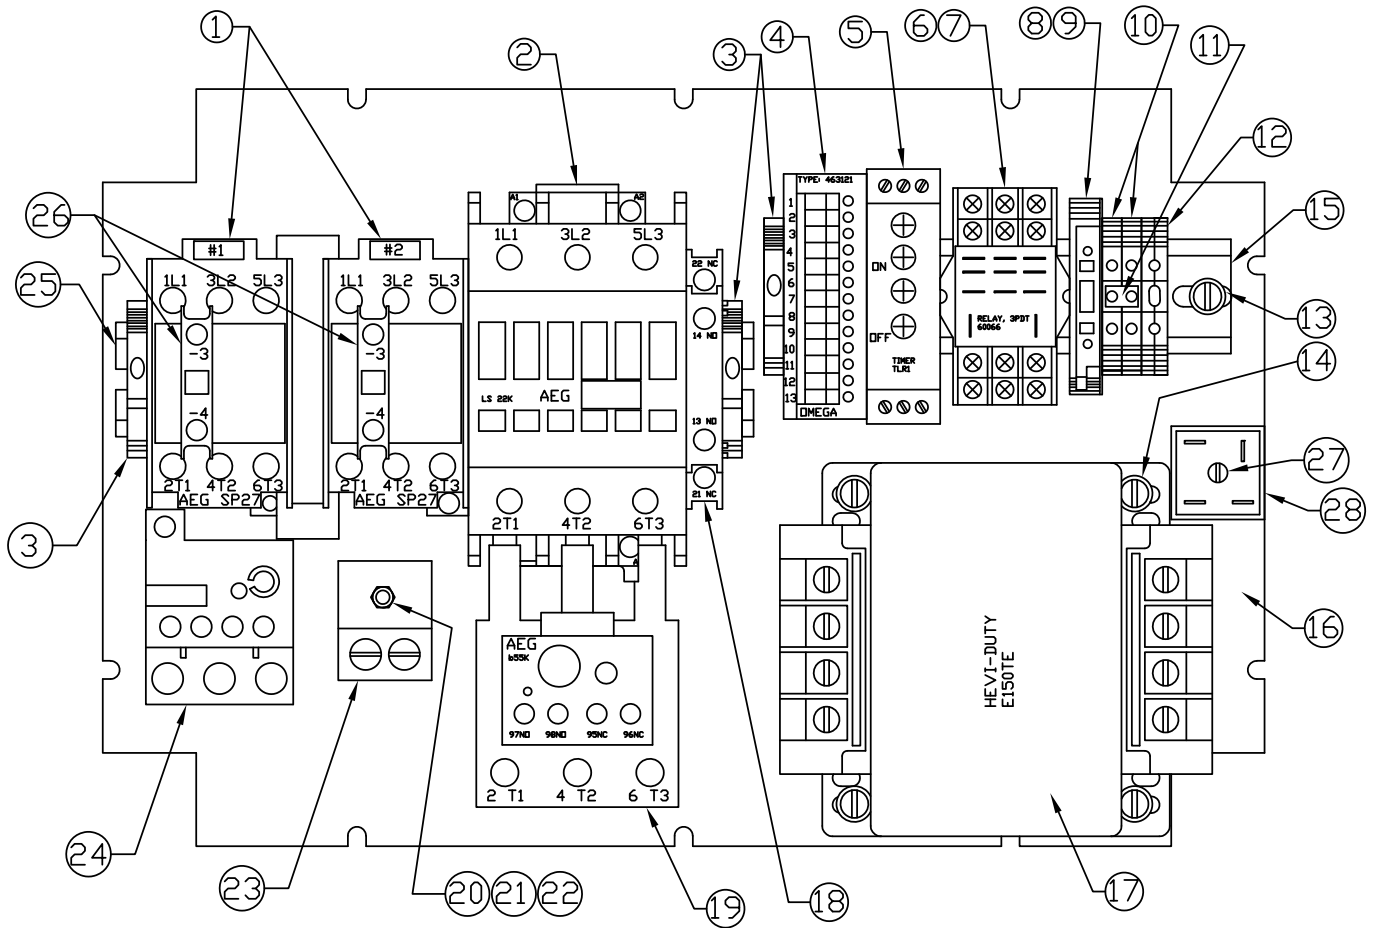


FIG.	ITEM NO.	DESCRIPTION	FIG.	ITEM NO.	DESCRIPTION
1	60069-1	REVERSING CONTACTOR	18	226EE-HS8K11	AUX. CONTACT, N.O./N.C.
2	57027-AE-CE	GRINDER CONTACTOR	19	EMG90182	OVERLOAD, 32AMP (440V)
3	BLK323	END BARRIER		H281EE-35	OVERLOAD, 65AMP (220V)
4	PC162-1	DC CENTRAL CONTROL UNIT	20	HHS040S	1/4-20 X 3/4
5	60065	TIMER, BI-FUNCTION	21	LW10S	HEX HEAD SCREW -1 REQ'D.
6	60067	RELAY BASE	22	HN10S	1/4 LOCKWASHER -1 REQ'D.
7	60066	RELAY, DPDT, 24 VOLT	23	60103	1/4-20 HEX NUT -1 REQ'D.
8	EMG92014	FUSE BLOCK	24	60103	GROUNDING BLOCK
9	EMG90552	FUSE, 3 AMP. TIME DELAY		H281EE-53	OVERLOAD, 12AMP (440V)
10	PC152	TERMINAL, -2 REQ'D.		H281EE-31	OVERLOAD, 16AMP (220V)
11	PC257	INTERNAL JUMPER	25	60053-1	DIN RAIL, 8.00"
12	BLK322	GROUND BLOCK	26	EMG90194	AUX. CONTACT, N.O. -2 REQ'D.
13	RHS09S	10-32 X 3/8 RND. HD. SCREW, -8 REQ'D.	27	RHS075S	8-32 X 3/4 ROUND HEAD SCREW
14	FW04S	#10 FLAT WASHER, -8 REQ'D.	28	PC148	BRIDGE RECTIFIER
15	60053	DIN RAIL, 5-5/8"			
16	60051	SUBPLATE			
17	PC141-1	TRANSFORMER, E150TE			

cod no. 56MKIII-E

# ELECTRICAL SCHEMATIC AFMG-56MK III STARTING WITH SERIAL NO 568074-0N WITH TIMER REPEAT CYCLE MIXING OPERATION THREE PHASE

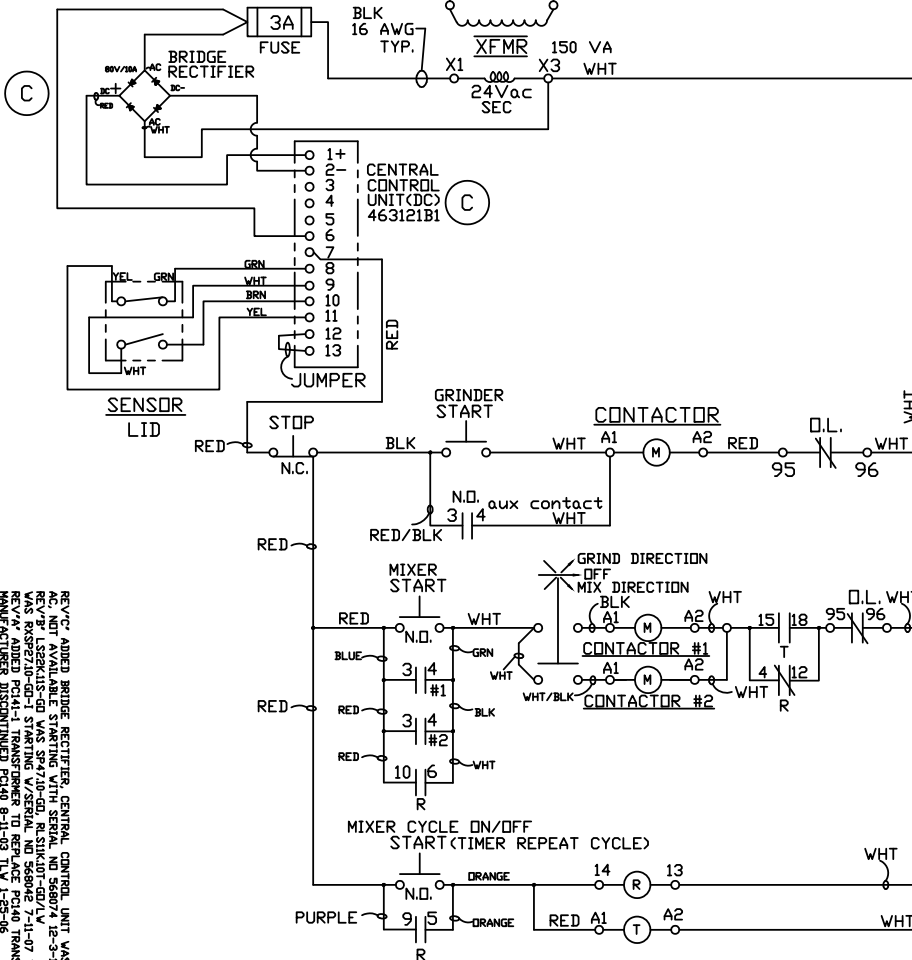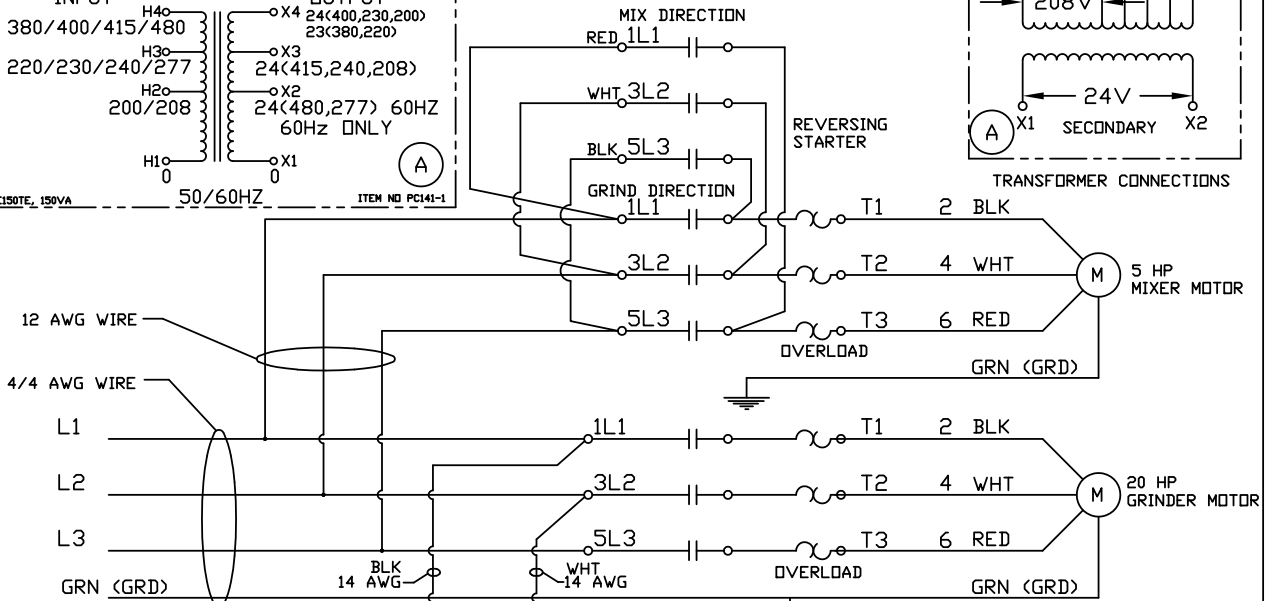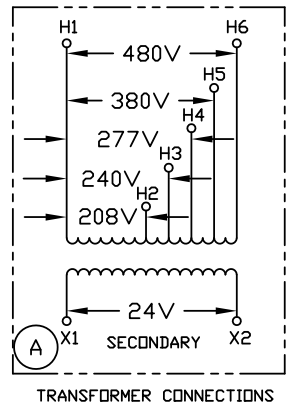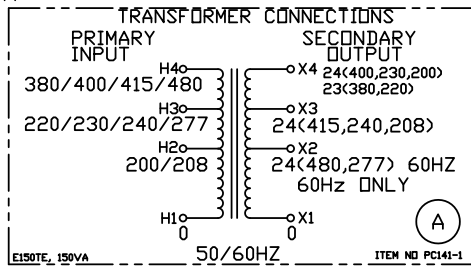

PC148  
BRIDGE RECTIFIER  
35A, 1000V

PC162-1  
CENTRAL CONTROL UNIT  
24VDC  
463121B1

AUX CONTACT: 3,4 N/D, 1,2 N/C  
ATTACHED ON GRINDER  
MOTOR CONTACTOR

GRINDER MOTOR  
CONTACTOR W/OVERLOAD  
LS22K.11S-GD

AUX CONTACT 3,4 N/D  
ATTACHED ON GRINDER  
MOTOR CONTACTOR

MIXER PADDLES  
GRIND DIRECTION


MIXER PADDLES  
MIX DIRECTION

AUX CONTACT 3,4 N/D  
ATTACHED ON MIXER  
MOTOR CONTACTORS

REV'G: ADDED BRIDGE RECTIFIER, CENTRAL CONTROL UNIT WAS 463121B1  
AC NOT AVAILABLE STARTING WITH SERIAL NO 568074 12-3-13 TLV  
REV'G: ADDED BRIDGE RECTIFIER, CENTRAL CONTROL UNIT WAS 463121B1  
REV'G: ADDED PC141-1 TRANSFORMER TO REPLACE PC140 TRANSFORMER  
MANUFACTURER DISCONTINUED PC140 8-11-03 TLV 1-25-06


Cad no. 56MKIII-E

# ELECTRICAL SCHEMATIC AFMG-56MK III FOR 380/415V-50 HZ, SERIAL NO. 568074 WITH TIMER REPEAT CYCLE MIXING OPERATION THREE PHASE

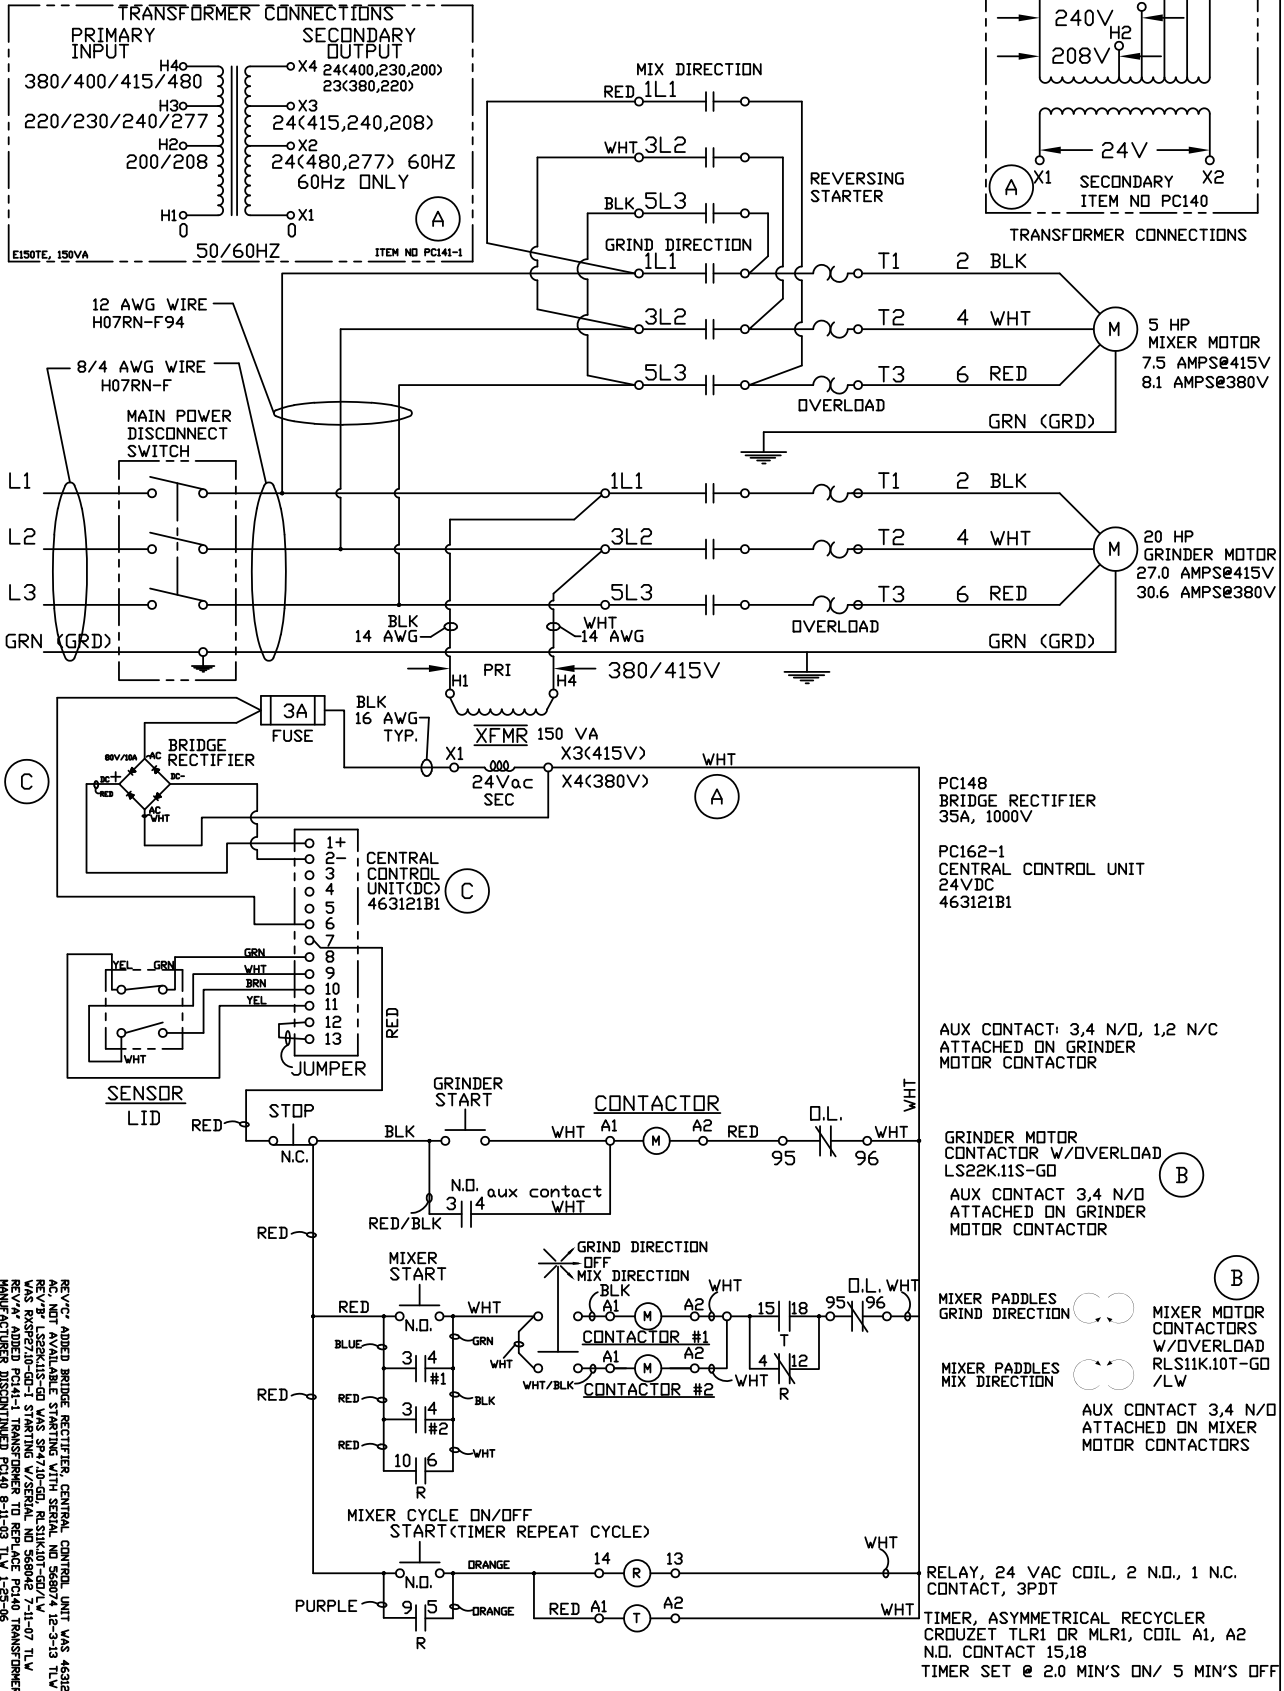

REV'C: ADDED BRIDGE RECTIFIER, CENTRAL CONTROL UNIT WAS 463121B1  
REV'D: NOT AVAILABLE STARTING WITH SERIAL NO 568074 12-3-13 TLV  
REV'E: REVISED STARTING WITH SERIAL NO 568074 12-3-13 TLV  
REV'F: ADDED PC141-1 TRANSFORMER TO REPLACE PC140 TRANSFORMER  
MANUFACTURER DISCONTINUED PC140 8-11-03 TLV 1-25-06

# PNEUMATIC SYSTEM DIAGRAM PRODUCT MIXER SAFETY COVER

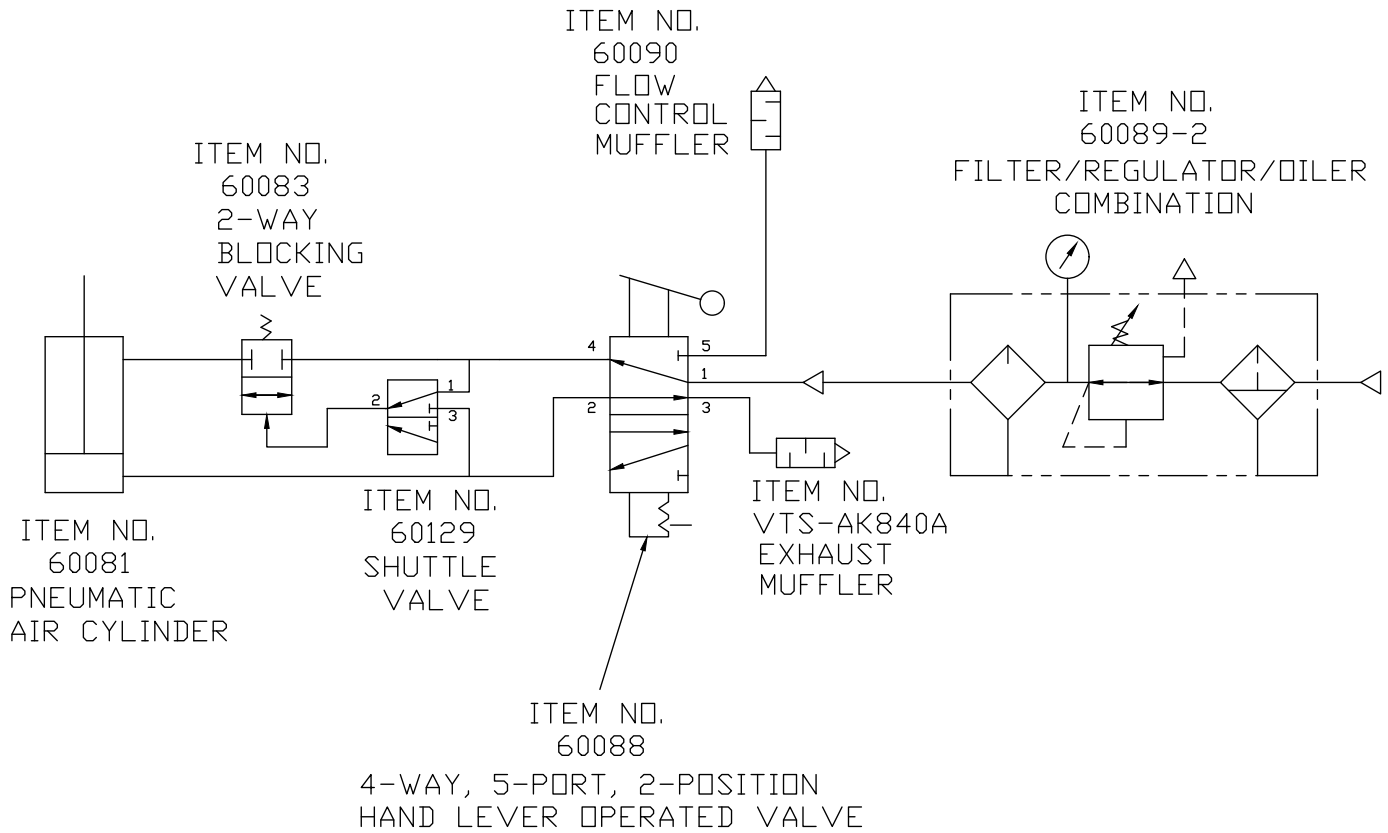

## SHUTTLE VALVE

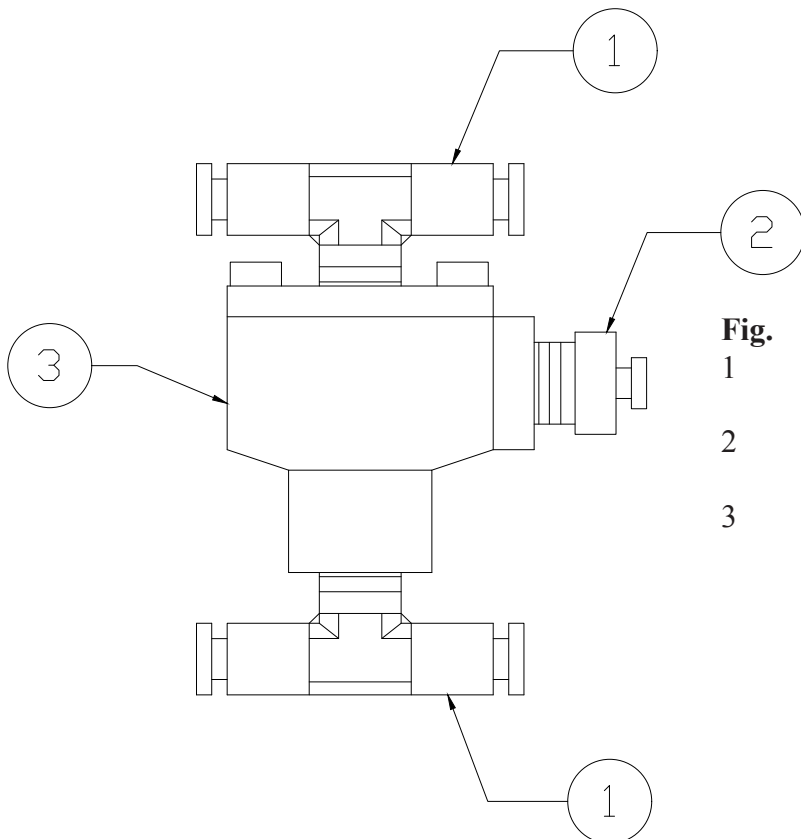


Fig.	Item No.	Description
1	<b>60087</b>	Tee fitting, Prestolok, 1/4 MPT, 1/4 tube
2	<b>60086</b>	Straight fitting, Prestolok, 1/4 MPT, 5/32 tube
3	<b>60129</b>	Shuttle valve, pneumatic

# PNEUMATIC CONTROL

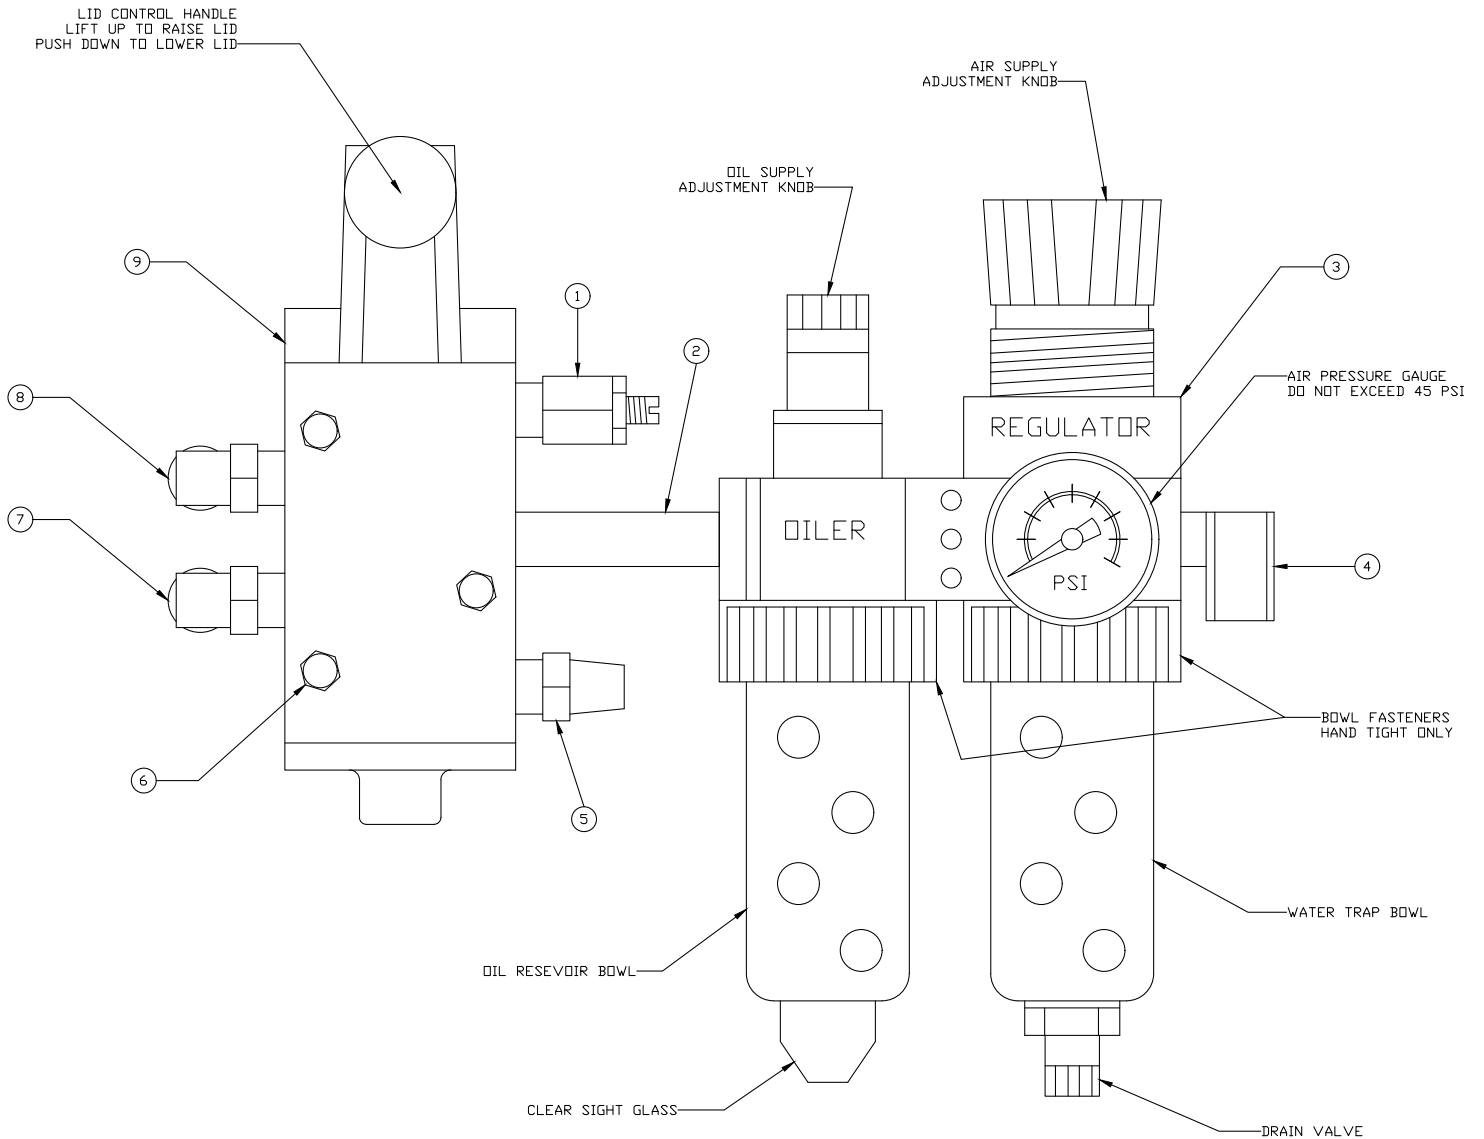


Fig.	Item No.	Description
1	<b>60090</b>	Flow control muffler
2	<b>VT472S</b>	Nipple, 2½ x ¼ NPT, Brass
3	<b>60089-2</b>	Air regulator/filter/oiler combo
4	<b>VTS7160</b>	90° street elbow, ¼ NPT x ¼ FPT, Brass
5	<b>VTS-AK840A</b>	Filter/muffler, ¼ NPT
6	<b>HHS0661S</b>	Hex head screw, 5/16-18 x 2¼, SS
7	<b>60084</b>	90° swivel fitting, Prestolok
8	<b>60084</b>	90° swivel fitting, Prestolok
9	<b>60088</b>	Lever control valve, 2 position
10	<b>60089-1</b>	Pressure gauge, 0-160 PSI, ¼ NPT back mount



# SAFETY LABELS


**CAUTION**  
DO NOT FILL HOPPER  
ABOVE THIS LINE

53687

#53687

**⚠ CUIDADO**  
**⚠ CAUTION**  
Hand tighten the Ring only.  
Apretar el Anillo  
unicamente con la Mano.  
EMG62198

#EMG62198

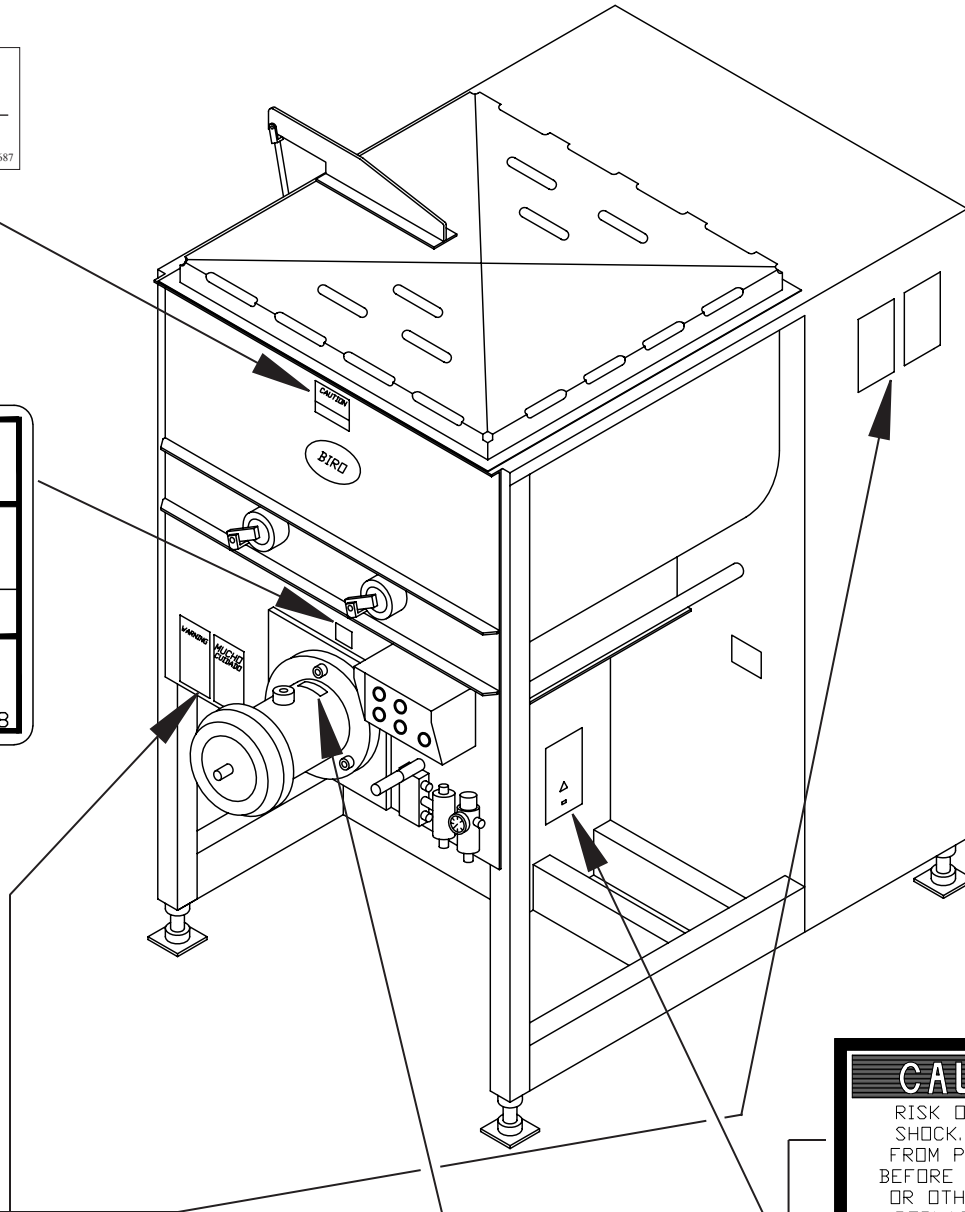

**CAUTION**  
RISK OF ELECTRICAL  
SHOCK. DISCONNECT  
FROM POWER SOURCE  
BEFORE CHANGING FUSE  
OR OTHER SERVICING.  
REPLACE WITH FUSE  
RATED 1A, 250V.

#56315

**⚠ WARNING**  
  
  
NEVER Touch this Grinder Unless  
Trained And Authorized By  
Supervisor and Over 18 Years Old.  
READ Operation Manual Thoroughly  
Before Operating.  
NEVER Place Hands Into Grinder  
Input or Output Opening.  
ALWAYS Use Stomper To Feed  
Product Into Manual Feed Grinder's  
Input Opening.  
NEVER Alter this Machine from its  
Original Form as Shipped from the  
Factory.  
NEVER Leave Grinder Unattended  
While Operating.  
ALWAYS Disconnect and Unplug from  
Main Power Source and Perform  
LOCKOUT/TAGOUT BEFORE Attempting  
To Unjam, Unclog, Clean or Service.  
#H653-E

#H653-E


**⚠ MUCHO CUIDADO**  
  
  
NUNCA Toque esta Picadora Sin Haber  
Tenido Entrenamiento para ello ni sin  
Autorización del Supervisor. Además se  
debe Tener 18 Años de Edad.  
LEA Cuidadosamente el Manual de  
Instrucciones antes de Querer Operar la Máquina.  
NUNCA Meta las Manos Dentro de la Picadora  
ni en la Apertura de Entrada o Salida.  
SIEMPRE Haga uso del Pistador para Meter el  
Producto Dentro de la Apertura de Entrada de  
la Picadora Siendo esta Tipo alimentación a Mano.  
NO Altere JAMAS la Forma que Presenta la  
Máquina al Salir Embarcada de la Fabrica.  
NUNCA Deje sola la Picadora Estando esta  
en Marcha.  
SIEMPRE Desconecte el Equipo Desenchufandolo  
de la Fuente de Fuerza. Déjelo Bajo Llave  
y con ETIQUETA que Prohíba su uso antes de  
Desinmovilizarlo o Sacarle Cualquier  
Obstaculo que lo tape o de Limpiarlo o  
Realizar Trabajos de Mantenimiento.  
#H653-SP

#H653-SP

← ROTATION

#53783

-NOT TO SCALE-

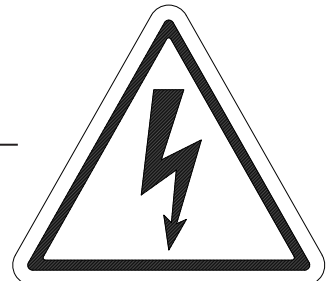

#BES16971



## LIMITED WARRANTY:

**WARRANTY:** The BIRO Manufacturing Company warrants that the BIRO AFMG-56 MkIII Mixer Grinder/Chopper will be free from defects in material and workmanship under normal use and with recommended service. BIRO will replace defective parts, which are covered by this limited warranty, provided that the defective parts are authorized for return, shipping charges prepaid, to a designated factory for inspection and/or testing.

**DURATION OF WARRANTY:** The warranty period for all parts covered by this limited warranty is one (1) year from date of Inspection/Demonstration as advised on the returned Warranty Registration Card, or eighteen (18) months from original factory shipping date, whichever occurs first, except as noted below.

**PARTS NOT COVERED BY WARRANTY:** The following are **not** covered by this limited warranty: wearable parts in the grinding system such as bowl, ring, worm, drive shaft, and knife drive pin. This limited warranty does not apply to machines sold as used, rebuilt, modified, or altered from the original construction in which the machine was shipped from the factory. Water contaminated electrical systems are not covered under this limited warranty. BIRO is not responsible for electrical connection of equipment, adjustments to the switch controls or any other electrical requirements, which must be performed only by a certified electrician. BIRO is not responsible for service charges or labor required to replace any part covered by this limited warranty or for any damages resulting from misuse, abuse, lack of proper or recommended service.

**EXCLUSION OF WARRANTIES AND LIMITATION OF REMEDIES:** BIRO gives no warranties other than those expressly stated in this limited warranty. THE IMPLIED WARRANTY OF MERCHANTABILITY, THE IMPLIED WARRANTY OF FITNESS FOR PROCESSING FOOD PRODUCTS, AND ALL OTHER IMPLIED WARRANTIES ARE SPECIFICALLY EXCLUDED. BIRO IS NOT LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, EXPENSES, OR LOSSES. THE REMEDIES PROVIDED IN THIS BIRO LIMITED WARRANTY ARE PURCHASER'S SOLE AND EXCLUSIVE REMEDIES AGAINST BIRO.

**REGISTRATION CARDS:** You must sign, date and complete the warranty registration card supplied with each machine. The warranty card must be returned to The BIRO Manufacturing Company for proper registration. If no warranty card is returned to BIRO, the warranty period will begin from the date the machine was originally shipped from the factory.

### HOW TO GET SERVICE:

1. Contact the agency from whom you purchased the machine; or
2. Consult the yellow pages of the phone directory for the nearest authorized dealer; or
3. Contact BIRO Manufacturing Company for the nearest authorized service entity in your area.

### BIRO MANUFACTURING COMPANY

**1114 W. Main St.**

**Marblehead, OH 43440**

**Ph. 419-798-4451**

**Fax 419-798-9106**

**E-mail: [Service@birosaw.com](mailto:Service@birosaw.com)**

**Web: [www.birosaw.com](http://www.birosaw.com)**