

Electric Auto-Lift Fryer

MODELS BLF-TC with Training Central™
Installation and Operation Manual



BKI LIMITED WARRANTY

42 Allen Martin Drive, Essex Junction, VT 05452 • USA
(802) 658-6600 • Fax: (802) 864-0183

WHAT IS COVERED	<p>This warranty covers defects in material and workmanship under normal use, and applies only to the original purchaser providing that:</p> <ul style="list-style-type: none">• The equipment has not been accidentally or intentionally damaged, altered or misused;• The equipment is properly installed, adjusted, operated and maintained in accordance with national and local codes, and in accordance with the installation and operating instructions provided with this product.• The serial number rating plate affixed to the equipment has not been defaced or removed.
WHO IS COVERED	<p>This warranty is extended to the original purchaser and applies only to equipment purchased for use in the U.S.A.</p>
COVERAGE PERIOD	<ul style="list-style-type: none">• Warranty claims must be received in writing by BKI within one (1) year from date of installation or within one (1) year and three (3) months from date of shipment from the factory, whichever comes first.• Warranty period begins the date of dealer invoice to customer or ninety (90) days after shipment date from BKI, whichever comes first.
WARRANTY COVERAGE	<p>This warranty covers on-site labor, parts and reasonable travel time and travel expenses of the authorized service representative up to (100) miles round trip and (2) hours travel time and performed during regular, weekday business hours.</p>
EXCEPTIONS	<p>Any exceptions must be pre-approved in advance and in writing by BKI. The extended door warranty on convection ovens years 3 through 5 is a parts only warranty and does not include labor, travel, mileage or any other charges.</p>
EXCLUSIONS	<ul style="list-style-type: none">• Negligence or acts of God,• Thermostat calibrations after (30) days from equipment installation date,• Air and gas adjustments,• Light bulbs,• Glass doors and door adjustments,• Fuses,• Adjustments to burner flames and cleaning of pilot burners,• Tightening of screws or fasteners,• Failures caused by erratic voltages or gas suppliers,• Unauthorized repair by anyone other than a BKI Factory Authorized Service Center,• Damage in shipment,• Alteration, misuse or improper installation,• Thermostats and safety valves with broken capillary tubes,• Freight – other than normal UPS charges,• Ordinary wear and tear,• Failure to follow installation and/or operating instructions,• Events beyond control of the company.
INSTALLATION	<p>Leveling, as well as proper installation and check out of all new equipment - per appropriate installation and use materials – is the responsibility of the dealer or installer, not the manufacturer.</p>
REPLACEMENT PARTS	<p>BKI genuine Factory OEM parts receive a (90) day materials warranty effective from the date of installation by a BKI Factory Authorized Service Center.</p> <p>Warranty is in lieu of all other warranties, expressed or implied, and all other obligations or liabilities on the manufacturer's part. BKI shall in no event be liable for any special, indirect or consequential damages, or in any event for damages in excess of the purchase price of the unit. The repair or replacement of proven defective parts shall constitute a fulfillment of all obligations under the terms of this warranty.</p>

Table of Contents

Table of Contents	1
Introduction	2
Safety Precautions	2
Safety Signs and Messages	2
Specific Precautions	3
Equipotential ground plane	3
Full Disconnection	3
Safe Work Practices	4
Safety Labels	8
Installation	9
Unpacking and Handling	9
Installation Procedure	9
Wiring	10
Initial Test and Adjustment	11
Care of the Shortening	12
Operation	13
Start-Up (BLF-TC with Training Central™)	13
Cooking (BLF-TC with Training Central™)	16
Product Programming	18
Set Oil Temp	22
Set Clock	23
Settings	24
Frying Log	25
Machine Log	26
Import/Export	27
Change Code	30
Touchscreen	31
Maintenance	32
Scheduled Maintenance	32
Filtering Procedure	33
Basic Filter	35
Filter with Rinse Hose	40
Boil Out	45
Filter Pad Replacement	50
Troubleshooting	53
Filter Pump Reset	54
Notes	55

Introduction

The BLF-TC series fryer with Training Central™ is compact, attractive and functional in design. The built in Training Central™ program allow employees to manage virtually every operation—programming, cooking, cleaning, filtering, boiling out, and more—simply by following intuitive, step-by-step screen instructions that provide instant feedback. BLF fryers are constructed with a stainless steel fryer pot for easy cleaning. Exclusive BKI patented features and safety devices offer flexibility, efficiency and reliability plus **PERFECTION IN FRYING!**

The BKI name and trademark on this unit assures you of the finest in design and engineering -- that it has been built with care and dedication -- using the best materials available. Attention to the operating instructions regarding proper installation, operation, and maintenance will result in long lasting dependability to insure the highest profitable return on your investment.

NOTICE

PLEASE READ THIS ENTIRE MANUAL BEFORE OPERATING THE UNIT. If you have any questions, please contact your BKI Distributor. If they are unable to answer your questions, contact the BKI Technical Service Department (802)658-6600..

Safety Precautions

Always follow recommended safety precautions listed in this manual. Below is the safety alert symbol. When you see this symbol on your equipment, be alert to the potential for personal injury or property damage.



Safety Signs and Messages

The following Safety signs and messages are placed in this manual to provide instructions and identify specific areas where potential hazards exist and special precautions should be taken. Know and understand the meaning of these instructions, signs, and messages. Damage to the equipment, death or serious injury to you or other persons may result if these messages are not followed.



This message indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



This message indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.



This message indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



This message is used when special information, instructions or identification are required relating to procedures, equipment, tools, capacities and other special data.

Specific Precautions



Risk of fire exists if the oil level drops below 5mm of the maximum oil level.



Use of oil/shortening older than the manufacturers recommendations for life of the oil is prone to surge boiling and flash fires. Follow the oil manufacturers guidelines for the life cycle of oil/shortening.



Do not open the drain valve or the fill valve while the fryer is under pressure. Serious burns may result.



Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.



California Residents Only

This product can expose you to chemicals including chromium, and lead which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



Follow operator instructions regarding effects of surge boiling of over-wet foods and proper load size.



Equipotential ground plane

When a high current flows through a conductor, differences in potential appear between the conductor and nearby metallic surfaces near the appliance. As a result, sparks may be produced between the appliance and surrounding metal surfaces. These sparks could cause serious injury, damage, or fire.

BKI provides an Equipotential ground terminal for the connection of a bonding conductor after the installation of the appliance per IEC60417-1. This terminal is located on the inside of the Power Entry Supply box near the Earth connection and is marked with this symbol.



Full Disconnection


In accordance with Local and/or National wiring codes, the installer must provide a means of full disconnection under over voltage Category III conditions. An IEC approved cord and plug combination will meet this requirement.

Units not provided with a cord and plug do not meet this requirement. In accordance with Local and/or National wiring codes, the installer must provide the means of full disconnection.



The fryer is designed to hold a maximum of 75 lb (34 kg) of oil/shortening.

Safe Work Practices

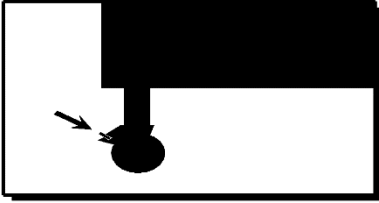

Keep The Casters Locked

To avoid spilling shortening, keep the casters locked. If any shortening spills near your fryer, clean it up immediately.



Noncombustible Floors Only

Make sure your floor is noncombustible. Do not operate your fryer on floors that are wood, carpeted or have rubber mats.

- Placing your fryer on a combustible floor could cause a fire. Serious injury could result.
- Examples of noncombustible floors where you can safely place your fryer are concrete, tile, and ceramic.



Keep The Area Around Your Fryer Uncluttered

Make sure to keep the area around your fryer clear of any obstacles.


Serious injury can occur if you trip or fall near the fryer. You could be burned by hot shortening that splashes out of the fryer or by falling against the hot metal of the fryer.



Keep The Floor Around Your Fryer Clean Of Shortening

Make sure to keep the floor around your fryer clean of shortening and other liquids.

Serious injury can occur if you slip near your fryer. You could be burned by hot shortening that splashes out of the fryer or by falling against the hot metal of the fryer.

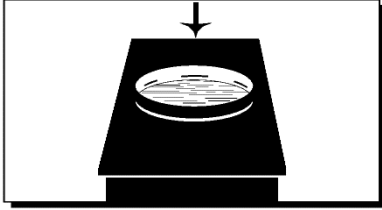

Do Not Overfill The Fryer With Shortening

Hot shortening and steam may escape and burn you if you put too much shortening in the fryer. Fill the fryer to approximately one inch below the fill marks that are inside the fryer pot. Heat the shortening. If needed, carefully add more shortening to bring the level to the fill marks.




Do Not Let Any Water Get Into The Fryer

Always remove excess moisture from food before placing it into the fryer basket. Water will cause the hot shortening to spatter. You could be burned.



Do Not Overload The Basket With Food

Hot shortening and steam may escape and burn you if you place too much food in the basket.

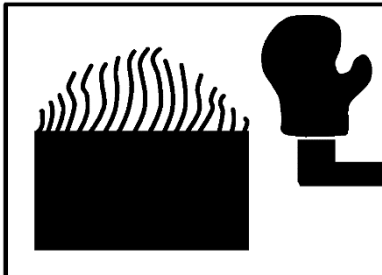


Wear Safe Clothing Appropriate To Your Job

Always wear your insulated mitts when handling the fryer basket or touch any hot metal surfaces. You received a pair of insulated mitts with your fryer. If you lose or damage your mitts, you can buy new ones at your local restaurant equipment supply store or from your local **BKI** Distributor.

Always wear non-skid shoes when working around the fryer or any other equipment that uses shortening. Never wear loose clothing such as neckties or scarves while operating your fryer. Keep loose hair tied back or in a hair net while operating your fryer.

Always wear appropriate personal protection equipment during the filtering process to guard against possible injury from hot oil.

Always wear appropriate personal protection equipment during the boil-out process to guard against possible injury from hot cleaning solution.

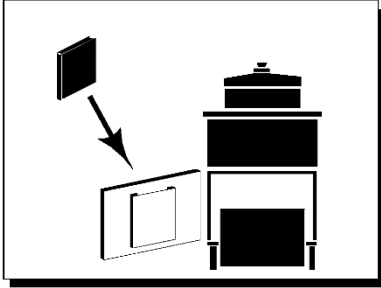

Keep this manual with the Equipment

This manual is an important part of your equipment. Always keep it near for easy access.

If you need to replace this manual, contact:


BKI
Technical Services Department
42 Allen Martin Drive
Essex Junction, VT 06452
(802) 658-6600



Protect Children

Keep children away from this equipment. Children may not understand that this equipment is dangerous for them and others.

NEVER allow children to play near or operate your equipment.

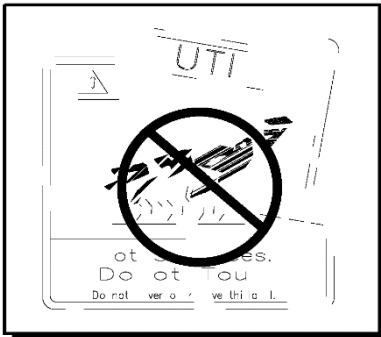


Keep Safety Labels Clean and in Good Condition

Do not remove or cover any safety labels on your equipment. Keep all safety labels clean and in good condition. Replace any damaged or missing safety labels. Refer to the Safety Labels section for illustration and location of safety labels on this unit.

If you need a new safety label, obtain the number of the specific label illustrated on page 8, then contact:

BKI
Technical Services Department
42 Allen Martin Drive
Essex Junction, VT 06452
(802) 658-6600

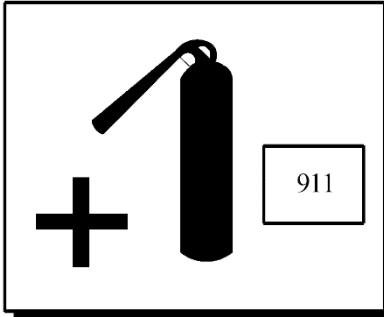


Be Prepared for Emergencies

Be prepared for fires, injuries, or other emergencies.

Keep a first aid kit and a fire extinguisher near the equipment. You must use a 40-pound Type BC fire extinguisher and keep it within 25 feet of your equipment.

Keep emergency numbers for doctors, ambulance services, hospitals, and the fire department near your telephone.

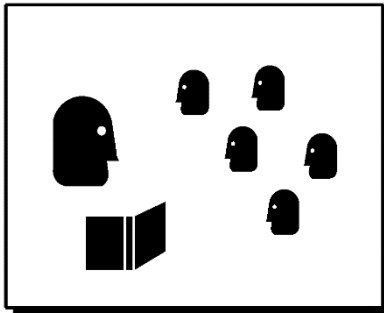


Know your responsibilities as an Employer

- Make certain your employees know how to operate the equipment.
- Make certain your employees are aware of the safety precautions on the equipment and in this manual.
- Make certain that you have thoroughly trained your employees about operating the equipment safely.
- Make certain the equipment is in proper working condition. If you make unauthorized modifications to the equipment, you will reduce the function and safety of the equipment.

Safety Labels


N0170

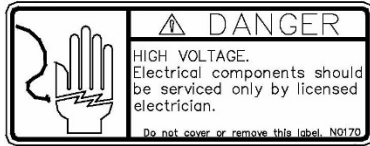


N0162



N0358

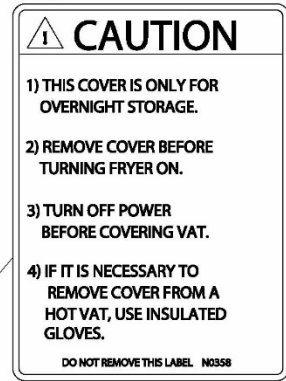


N0176

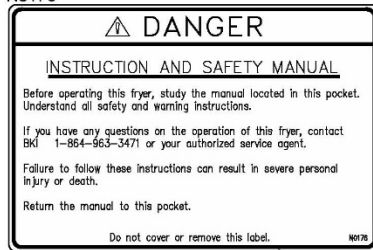

N0165



 
N0395



N0175



N0527

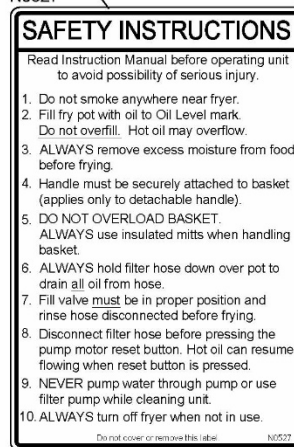

N0168



Installation

⚠ WARNING

Serious injury, equipment damage or death could result if attempting to install this fryer yourself. Ensure that an authorized BKI service agent installs the fryer.

Unpacking and Handling

It is the owners' responsibility to file all freight claims with the delivering truck line. Inspect all cartons and crates for damage as soon as they arrive. If damage to cartons or crates is found, or if a shortage is found, note this on the bill of lading (all copies) prior to signing.

If damage is found when the equipment is opened, immediately call the delivering truck line and follow up the call with a written report indicating concealed damage to your shipment. Ask for an immediate inspection of your concealed damage item. Packaging material **MUST** be retained to show the inspector from the truck line.

Installation Procedure

1. Remove the shipping packing materials from the interior and exterior of the fryer.


⚠ WARNING

Ensure that an authorized BKI service agent installs the fryer. An authorized BKI service agent should be a qualified gas service technician and a licensed electrician.

⚠ WARNING

Risk of electric shock – Fryer must be secured to building structure. Follow restraining device instructions for proper installation.

2. Install an ANSI Z83.11/CGA 1.8 compliant restraining device (such as BKI part number [FT0279](#)) per the instructions below:
 - Mount the wall attachment according the restraining device manufacturer instructions.
 - Attach the spring-loaded hook on the restraining device to the eye-bolt mounted to the fryer then attach the other spring-loaded hook to the wall attachment.

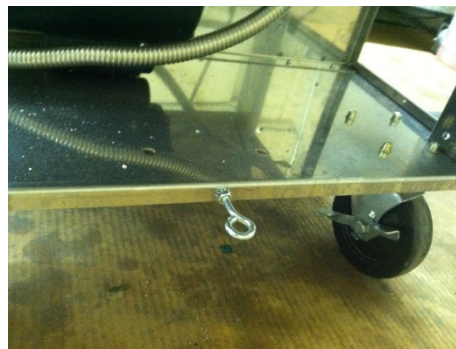

3. Lock the casters so the fryer does not move. Every time the fryer is used, make sure the casters are locked so the fryer cannot move.
4. Clean the fryer pot before filling with shortening. See boil out procedure.
5. Place the DRAIN handle in the CLOSED position.

Wiring

 **WARNING**

Electrocution, equipment failure or property damage could result if an unlicensed electrician performs the electrical installation. Ensure that a licensed electrician perform the electrical installation in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI NFPA 70-20XX.

This unit, when installed by an authorized BKI service agent, must be wired for use in accordance with all applicable local, state, and federal codes. For specific electrical requirements and connections refer to the wiring diagram attached to the unit or provided in the Service Manual.

Initial Test and Adjustment

1. Place the DRAIN handle in the CLOSED position.
2. Fill pot with shortening to above the "MIN OIL LEVEL" mark.

⚠ WARNING

Risk of fire exists if the oil level drops below the minimum oil level. The level of oil within the pot must not fall below 5mm of the maximum oil level.

⚠ WARNING

Use of oil/shortening older than the manufacturers recommendations for life of the oil is prone to surge boiling and flash fires. Follow the oil manufacturers guidelines for lifecycle of oil/shortening.

⚠ CAUTION


Overfilling the fryer pot with shortening could lead to serious injury. Ensure that the fryer pot is filled with shortening only to the fill mark when shortening is hot. Do not use any shortening other than what is specified in this manual and do not overfill the fryer pot.

⚠ CAUTION

The fryer has a maximum temperature setting of 375° F/191° C. Do not use oil/shortening with a flashpoint less than 554° F/290° C

NOTICE

Use only high-quality shortening that has low moisture content, a high smoke point and no additives.

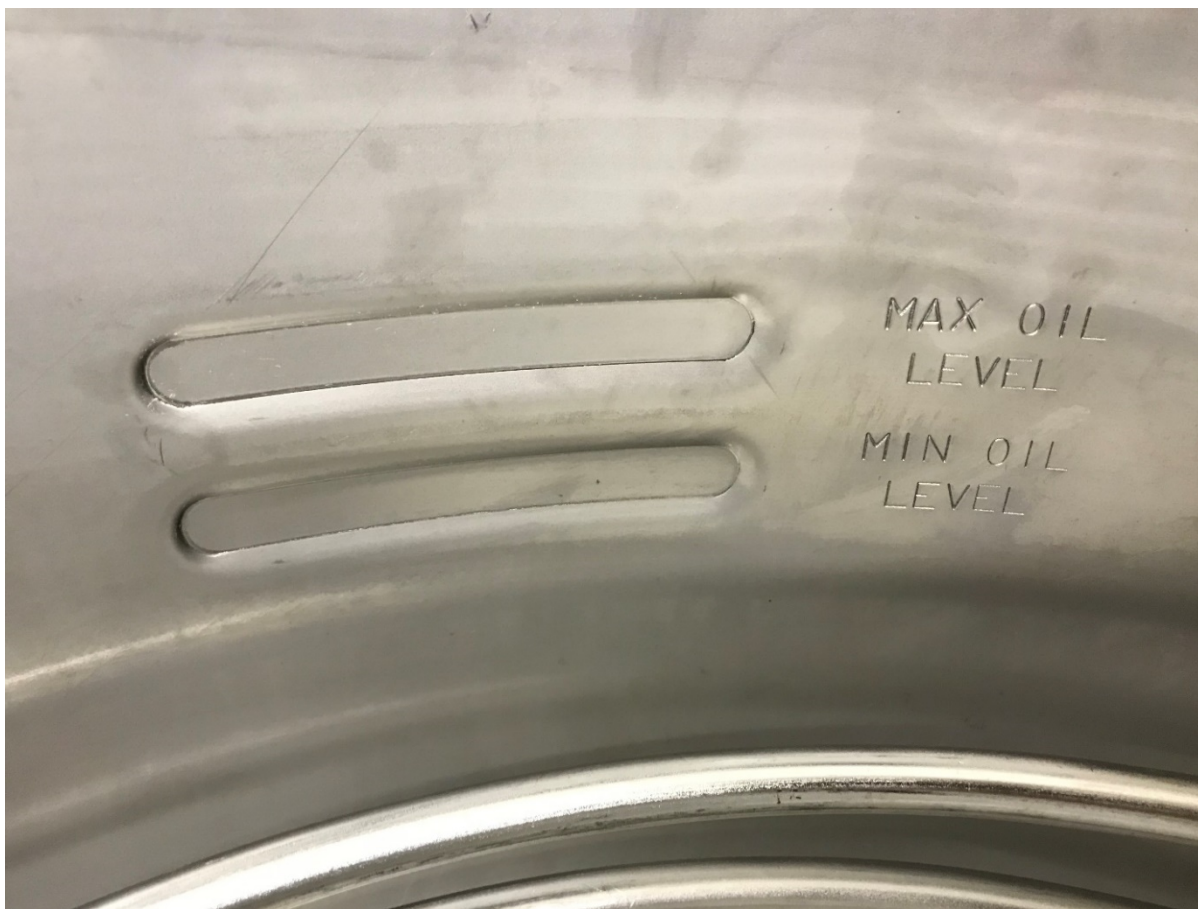

3. Turn fryer on by touching the **ON** button for 3 seconds. Follow the startup instruction below. Add more shortening as required to reach the fill mark. Refer to the troubleshooting section if this does not occur.

Care of the Shortening

To extend the life of your shortening, for the best possible flavor in your products, and for economy and efficiency of operation, we urge you to follow these recommendations:

1. Use only high-quality frying shortening without additives, of low moisture content and with a high smoke point.
2. Press excess moisture from products before breading. The more moisture released in the shortening, the quicker it will break down.
3. Filter at least once a day or once every three loads during frequent cooking.
4. Clean any residue or crust formations from the sides and bottom of the pot each time you filter the shortening.
5. Add fresh shortening as needed to maintain the proper shortening level **TO THE FILL MARK ON THE POT WALL**.
6. **DO NOT HOLD SHORTENING AT HIGH TEMPERATURE** when the fryer is not in use. If you expect an elapsed time of one hour or more between cooking, close the lid and let the fryer go into setback. The idle time and setback temperature can be programmed.
7. Shortening changes are determined by the quantity and type of food prepared. Excessive boiling and foaming are definite signs of shortening breakdown.
8. After you have finished frying for the day, filter the shortening and replace the filter pad. Also, thoroughly clean the pot of sediment and crumbs and empty the condensate pan.

Operation


Start-Up (BLF-TC with Training Central™)



1. Turn fryer on by touching the **ON** button for 3 seconds.



2. Make sure the main drain valve is closed.

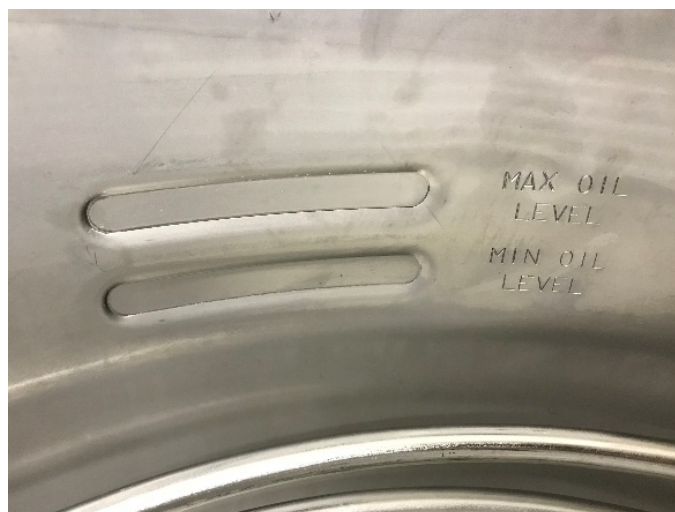

3. Fill pot with shortening to above the "MIN OIL LEVEL" mark.

WARNING

Risk of fire exists if the oil level drops below the minimum oil level. The level of oil within the pot must not fall below 5mm of the maximum oil level.

WARNING

Use of oil/shortening older than the manufacturers recommendations for life of the oil is prone to surge boiling and flash fires. Follow the oil manufacturers guidelines for lifecycle of oil/shortening.

CAUTION


Overfilling the fryer pot with shortening could lead to serious injury. Ensure that the fryer pot is filled with shortening only to the fill mark when shortening is hot. Do not use any shortening other than what is specified in this manual and do not overfill the fryer pot.

CAUTION

The fryer has a maximum temperature setting of 375° F/191° C. Do not use oil/shortening with a flashpoint less than 554° F/290° C

NOTICE

Use only high-quality shortening that has low moisture content, a high smoke point and no additives.

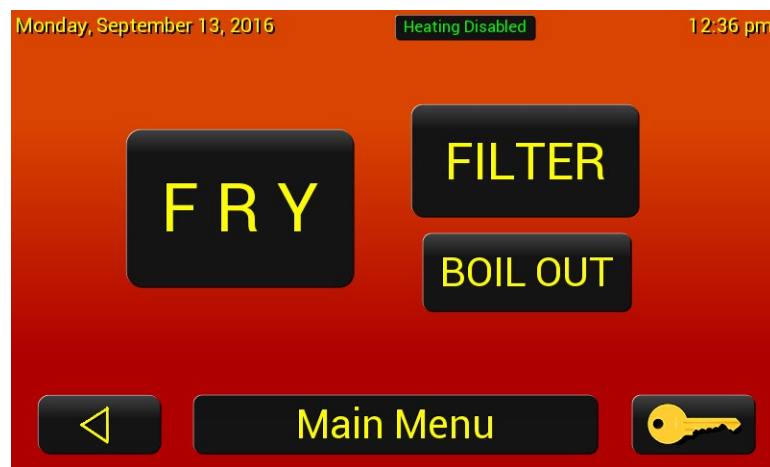

- Once the fryer is filled with shortening, press the **FRY** button.



- Confirm the oil level by pressing the green check mark.
- The fryer will start heating up by going into a melt cycle. It will pulse the elements until the oil gets to 225° F (107° C) and then goes into heat mode until it reaches the setpoint temperature. The recipes will be greyed out and inaccessible until the fryer reaches setpoint temperature.



7. When the fryer is ready to cook the recipes will be activated

IMPORTANT! Before the first cooking operation each day, stir the shortening freely while it is heating to provide a balanced shortening temperature for excellent results with the first cooking. Failure to do this can result in a crusty skin on the product surface with an undercooked product internally. In addition, in some cases, failure to stir the shortening while it is initially heating may cause the HI-LIMIT safety device to disable the power due to a false overtemperature condition.

Cooking (BLF-TC with Training Central™)

1. Ensure that the Start-Up procedures have been performed.
2. Press the menu item button for the desired cook.



3. When frying chicken, lower the basket into the shortening by depressing the basket down button.


WARNING

Hot shortening may splash out of the pot causing severe injury when dropping chicken into pot. Carefully drop pieces of chicken into pot to prevent shortening splashes.

4. Carefully drop the chicken in the shortening one piece at a time starting with thighs and breasts. The fryer is designed to accommodate 48-50 pieces of chicken.
5. Activate the recipe by pressing the **START** button. The timer will begin the count down and indicator bar will advance.





(To cancel the recipe press and hold the back button  for 3 seconds.)

- At the end of the frying cycle, the digital timer beeper will sound and the basket will automatically rise out of the pot. Press the green check mark button.




- Allow the basket to drain.

DANGER


Failure to use the insulated mitts will result in injury. Always use the insulated mitts when handling the hot fry basket.

- Remove basket from the lift and empty carefully.
- Return the basket to the lift.
- Remember to filter the shortening at least every third frying cycle load. Refer to the procedure in this manual. Also filter the shortening and clean the fryer at the end of each day.
- When you have finished frying for the day turn fryer off by touching the **OFF** button for 3 seconds.

Product Programming

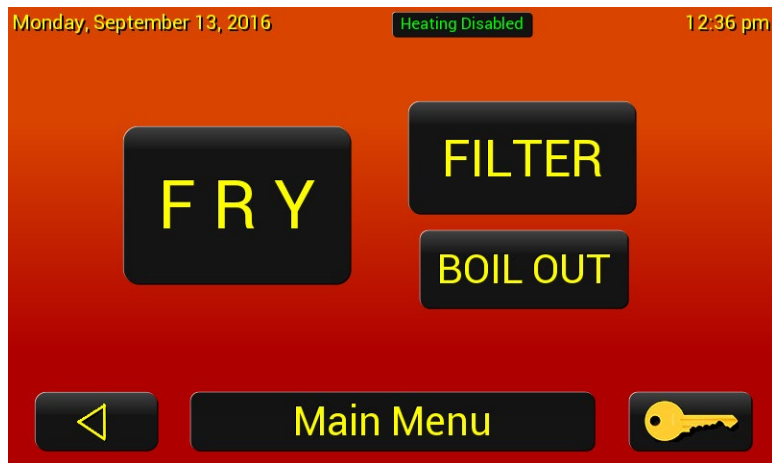

1. Press the Key button to get into the settings menus.

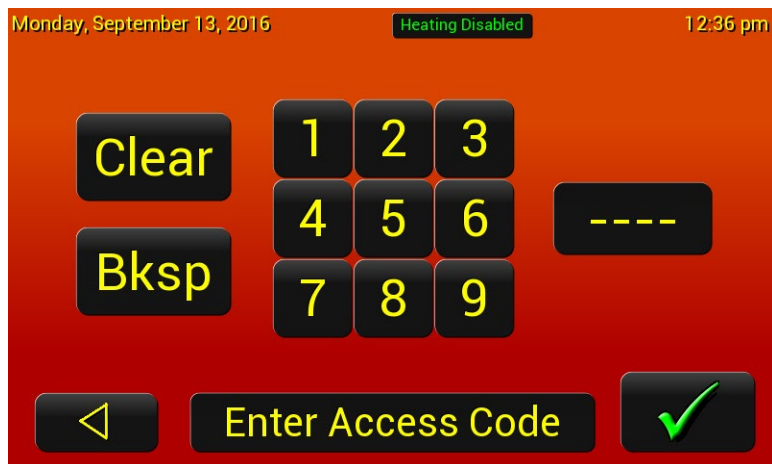

2. Enter code **1234** and then press the green check mark.



3. Select the **Edit Recipe** button



- Select the Recipe that needs edited.




- In the Edit Recipe screen the name, cook time, temperature, timing type, & picture can be edited.



- Select **Name** to change the name and press the green check mark to save.



7. Select **Frying** to edit the time and temperature of the recipe. Press the green check mark to save.

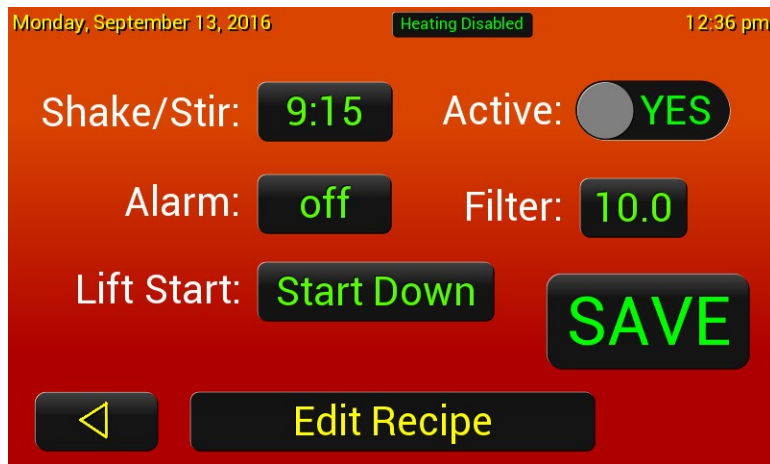


8. Pressing the **Next** button will bring you to the second page where the shake/stir, alarm, if the program is active, and the filter weight can be edited.



9. Press the **Shake/Stir** time to edit the time & number of beeps. Press the green check mark to save.



10. Press the alarm time to edit the time. Press the green check mark to save.

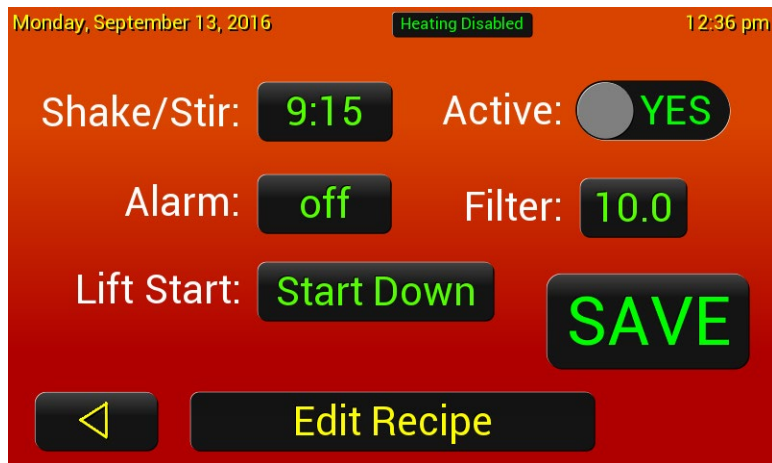

11. Set the basket lift start position, make sure the program is active and set the filter weight (1.0-12.0 by 0.5 increments, if using global filtering).
12. When done, press the **SAVE** button to save the program.




13. If you want to cancel the recipe or accidentally press the back button, the message above will display. You can save by pressing the SAVE or cancel by pressing the back arrow.

Set Oil Temp



1. Get into the supervisor menu and select the **Set Oil Temp** button

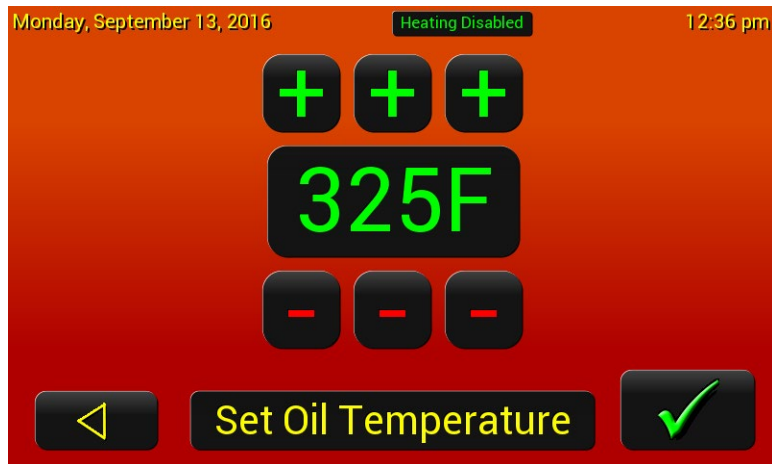


2. Set the oil temperature to the desired ready to cook temperature between 250° F and 375° F.
3. Press the green check mark to save.

Set Clock



1. Get into the supervisor menu and select the **Set Clock** button

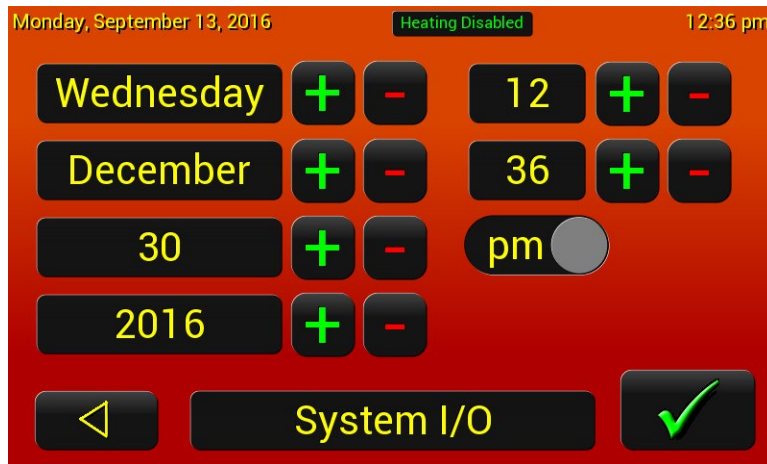

2. Set the date & time.
3. Press the green check mark to save.

Settings



1. Get into the supervisor menu and select the **Settings** button




2. Set the Beeper Volume (Low or High), Pattern (1, 2, or 3), the Filter Lockout* can be turned off & on, the Filter Lockout Value can be set (2-20), and the Temperature Units can be set (C or F).
*The filter lockout is a global counter used to determine when to force filter. Set the total filter value in settings and then in the recipes, the weight of each recipe can be set. (i.e. Fresh breaded product can have a value of 3 and french fries a value of 1.) When the values of the recipes cooked adds up to the global value (or over), the control will require a filter.
3. Press the green check mark to save.

Frying Log



1. Get into the supervisor menu and select the **Frying Log** button




2. The frying log will record the following events:
 - Recipe Cooked with elapsed time and average temperature
 - Basic Filter with filtering time, refill time, and number of pump lockouts
 - Filter With Rinse Hose with filtering time, refill time, and number of pump lockouts
 - Boil Out with heating time
3. Press the back button  to exit.

Machine Log



4. Get into the supervisor menu and select the **Machine Log** button



5. The machine log will record the following events:
- Touchscreen Error
 - Probe Error
 - Nonvolatile Memory read, write, or data errors
 - Factory Reset
 - Touchscreen Calibration
 - Configuration Change
 - Password Error
 - Password Reset
 - Password Change
 - Recipe Saved
 - Recipes Imported
 - Recipes Exported
 - Configuration Import
 - Configuration Export
 - Frying Log Export
 - Machine Log Export
 - USB Drive read, write, and file open errors
 - Touch Configuration Change
 - Fryer Options Changed
 - Firmware Update
6. Press the back button  to exit.

Import/Export



1. Get into the supervisor menu and select the **Import/Export** button



2. Insert a USB drive.



3. Press the import/export recipes button to save the recipes to a USB or copy to the fryer.



1. To add up to 8 additional Recipe Icons, press the **Import Icons** button with the USB inserted.
2. Importable Image Requirements:
 - a. JPG images only, standard 24 bit color with any amount of image compression.
 - b. Recipe icons must be 64 pixels wide and 64 pixels tall.
 - c. The maximum file size is 54k bytes.
 - d. File names can be any combination of letters and numbers up to a maximum of 8 characters, the extension must be “.jpg”. The name is case insensitive.
3. Touch the **Find Files ...** button, the controller will look through the entire USB drive and find all jpg files which are 64x64 pixels and below the maximum file size, displays the file name and image of the first file found meeting those criteria, and shows the number of files found in the **Find Files ...** button. The 8 locations to the right will now be available, locations which already have an icon stored in them will display the stored image. Use the up and down arrows to scroll through all the files the controller found until the file wanted is displayed.
4. Select the location in which they want to store the icon, they can choose any of the eight locations including those which are already in use, that location will be overwritten. The selected location button turns green and the green check button is now available. Touching the green check button stores the selected image into that location in the controller image format along with the name and size of the file and the original jpg file data so it can be exported at some other time.
5. When the import is completed the controller chirps twice indicating that it has stored that icon. Select other icon files and other icon locations and store as many of the images as desired.
6. Press the green check mark to save.



1. To copy any or all 8 Recipe Icons, press the **Export Icons** button with the USB inserted.
2. The eight button on the left side display all the imported user icons. Select or deselect any of the 8 images to be exported just by touching the icon buttons. Touch once to select, touch again to deselect. The **Select All** button can be used to select all imported icons.
3. Touch the green check button to export all of the selected icons with their original file names and data to the USB drive. NOTE: Files already on the flash drive which have the same name as the original files will be overwritten with the stored image data.
4. Press the green check mark to save.

Change Code



1. Get into the supervisor menu and select the **Change Code** button




2. Enter the new 4 digit access code. We recommend an easy to remember number, like the store number.
3. Press the green check mark to save.


Touchscreen



1. Get into the supervisor menu and select the **Touchscreen** button

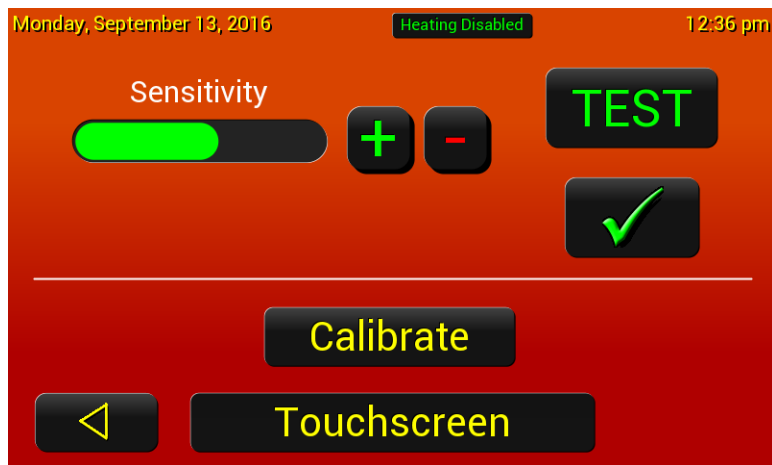

2. Press the **+** or **-** buttons to adjust the screen sensitivity. Press the **TEST** button to verify the sensitivity level.

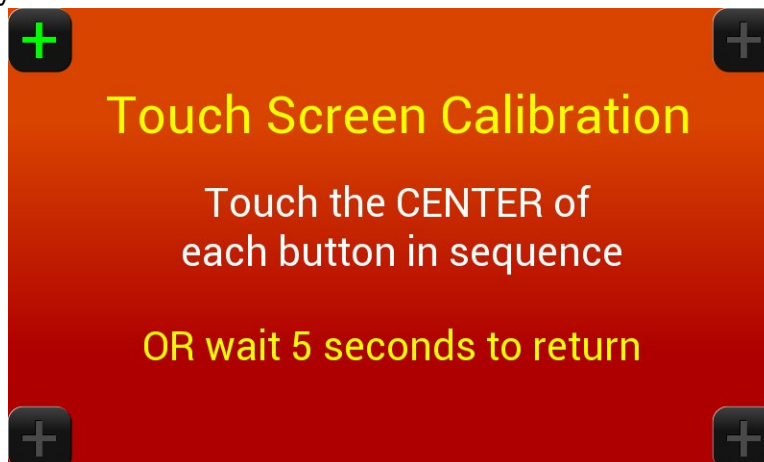

3. Press the **Calibrate** button to re-calibrate the touchscreen
4. Press the green check mark to save.

Maintenance

CAUTION

Failure to comply with the maintenance below could result in a serious accident.

Your fryer will need periodic maintenance and servicing. We strongly suggest that you use only a service company that is authorized by BKI to do this work.

The BLF appliance is not intended to be cleaned with a water jet.

The restraining device must always be connected when the appliance is in service. Disconnect for movement, such as servicing or cleaning. Reconnect the restraint when fryer has been returned to its normal position.

Scheduled Maintenance


Use the following table to help manage scheduled maintenance activities.

FREQUENCY	PERFORMED BY	PART	ACTIVITY
Daily	User	Filter Pad	Replace filter pad. Refer to the procedure in this manual.
	User	Filter system	Filter the shortening using the procedure in this manual.
Weekly	User	Fryer Pot	Perform the boil-out procedure in this manual.
Every 6 Months	Authorized BKI service agent	Connections, Fittings	Check for leakage while oil is pumping.
	Authorized BKI service agent	Fryer Pot Fittings/Connections	Check for leakage around fry pot top deck and fittings (heaters, hi-limit, thermostat, etc.).

Filtering Procedure

Breaded foods require frequent filtering. An excess amount of breading left in the fryer pot will reduce the life of the shortening. We recommend the shortening be filtered after every three frying cycle loads. If the shortening starts to show signs of foaming or has a bad taste, do not use it. The fryer pot should be cleaned before refilling with new shortening. Best results for filtering are obtained while the shortening is hot. You should filter at the end of every business day. (If the filter pump overheats and you get a **Pump Too Hot**, see the Filter Pump Reset instructions in the Troubleshooting section.)

If Filter Lockout is ON, then once the value has been reached the following screen will appear and filtering will be required.

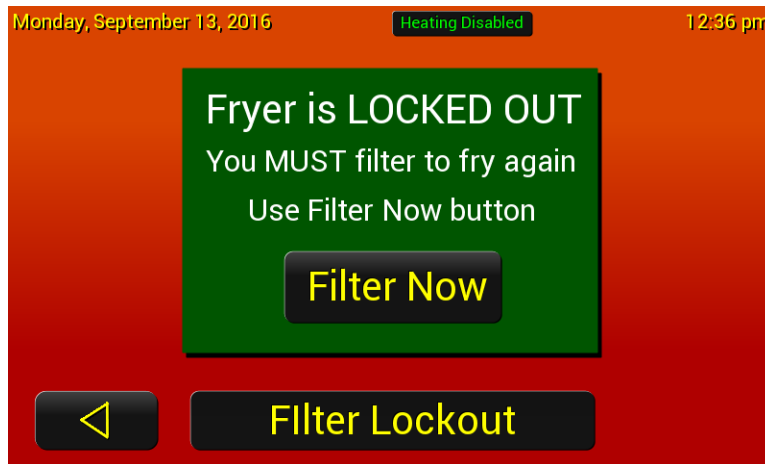

WARNING

Always wear appropriate personal protection equipment during the filtering process to guard against possible injury from hot oil.


WARNING


Do not open the drain valve or the fill valve while the fryer is under pressure. Serious burns may result.

1. Remove the fryer basket.
2. Make certain that the filter pad is clean and not torn.

IMPORTANT: Make certain the vat cover is properly positioned underneath the drain valve. Also make certain the filter vat and filter screen is under the main drain valve before starting



3. To get to the filter menu, press the back button  .

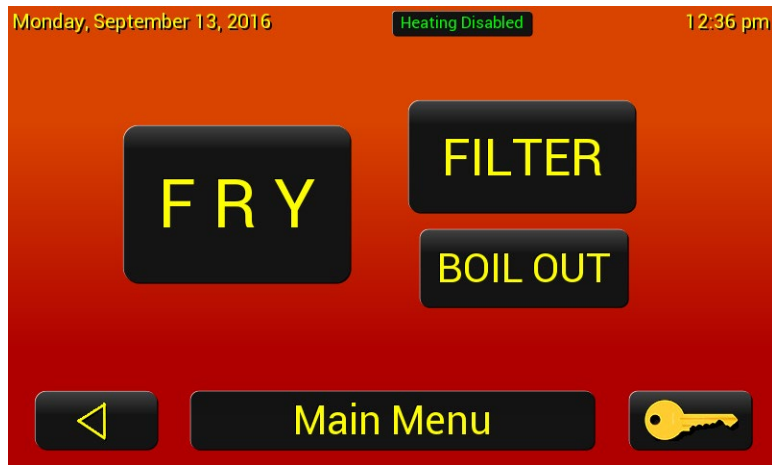

4. Press the **FILTER** button to get the Filter Menu.



5. Press the **FILTER** or **TUTORIALS** button.



6. If you press the **TUTORIALS** button you can go through how to assemble the filter, how to do basic filter and how to filter with the rinse hose. None of the pump functions will operate in the tutorials.

Basic Filter

 



7. If you press the **FILTER** button you can do a basic filter or a filter with rinse hose. Below we will go through a basic filter.



Pot

Pan



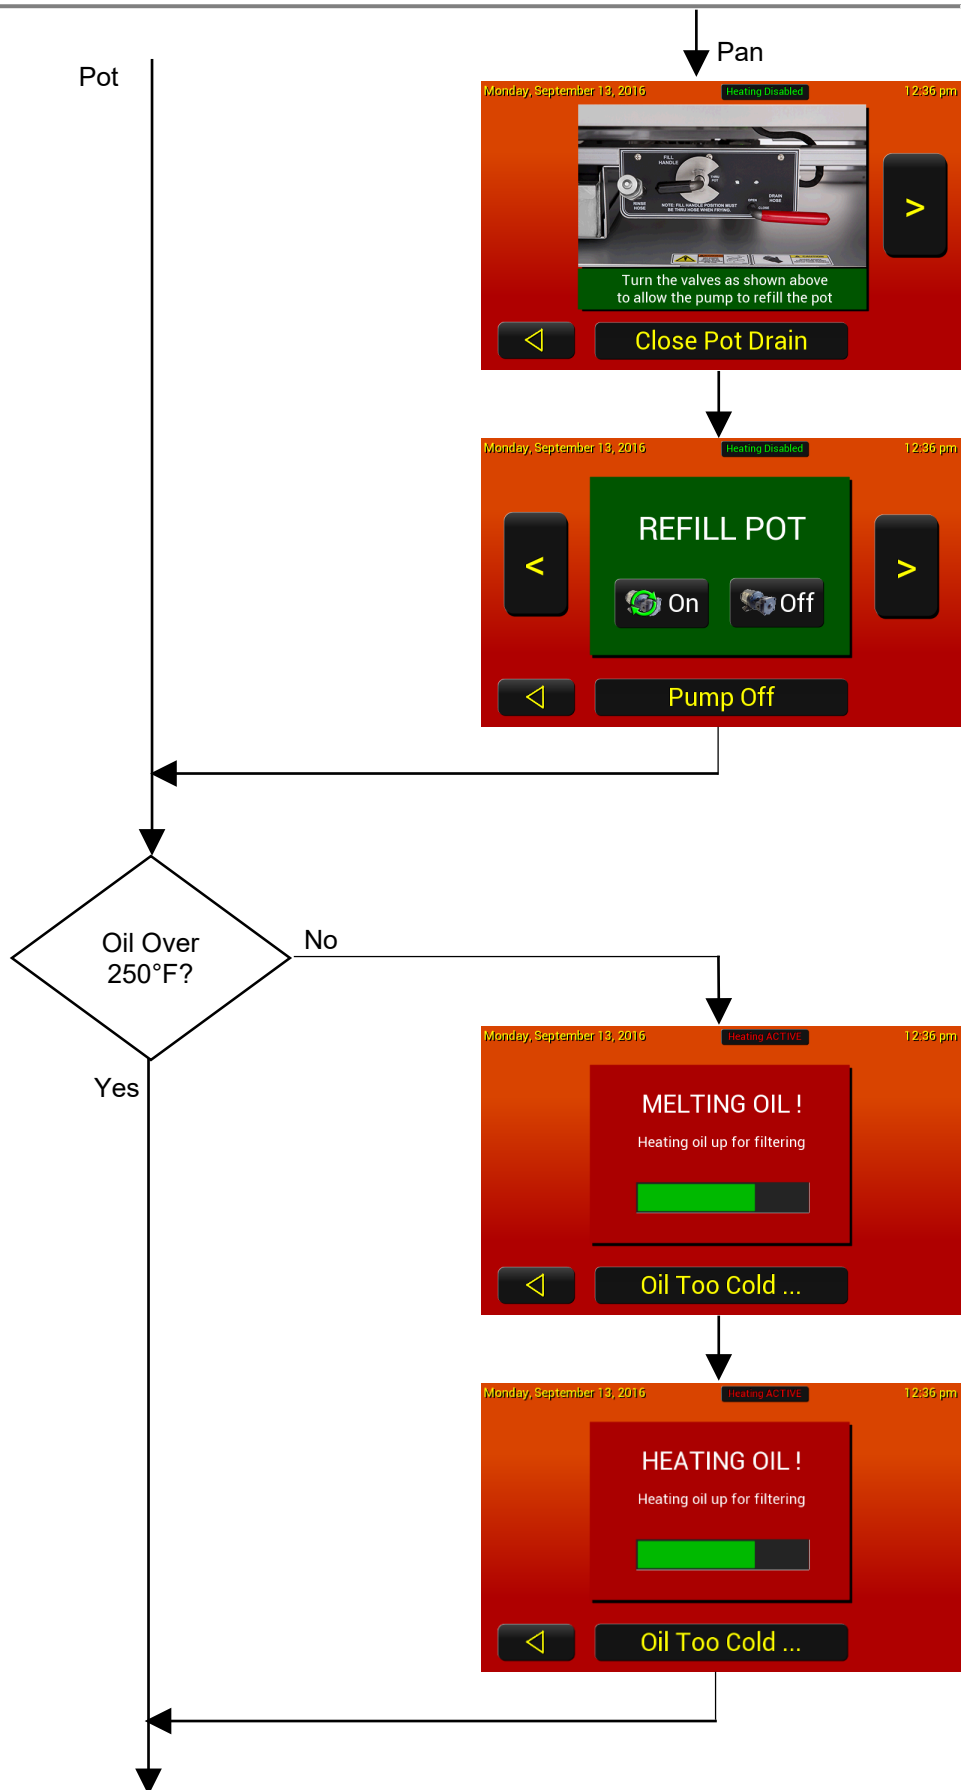



- Open the pot drain slowly so that the shortening starts to flow evenly. This is to prevent excessive splashing of hot shortening.




- Clean the pot, elements, & drain with the supplied brushes as the oil drains.



- If polishing the shortening is desired make sure the fill handle is THRU POT and press the **On** button, otherwise press the right arrow.



11. The display will count up the time the pump is on to indicate the duration of the polishing. When done press the **Off** button to stop the pump and press the right arrow button.

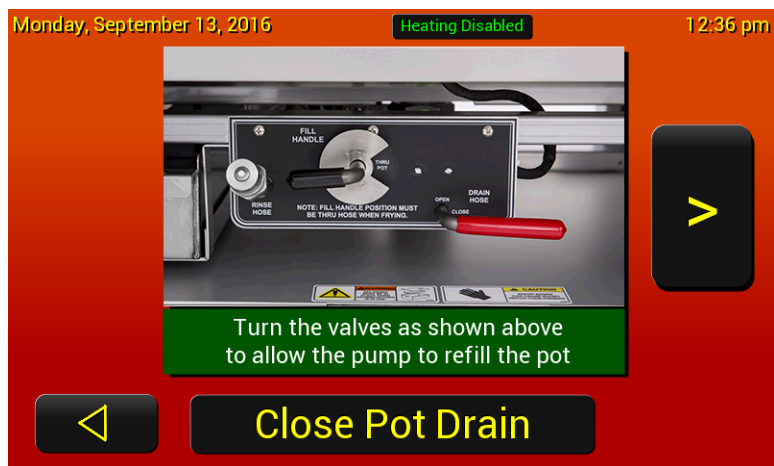

12. To refill the pot close the pot drain and make sure the fill handle is THRU POT.



WARNING

Hot shortening may splash out of the pot causing severe injury when filling the pot.

13. Press the **On** button to start the pump and refill the pot.



14. The display will count up the time the pump is on to indicate the duration of refilling of the pot. Let the filter continue to pump the shortening until air starts bubbling through the shortening. When done press the **Off** button to stop the pump and press the right arrow button.



15. Add new shortening if the fill mark has not been reached.

Filter with Rinse Hose

 



1. If you press the **FILTER** button you can do a basic filter or a filter with rinse hose. Below we will go through a filter with rinse hose.



Pot

Pan



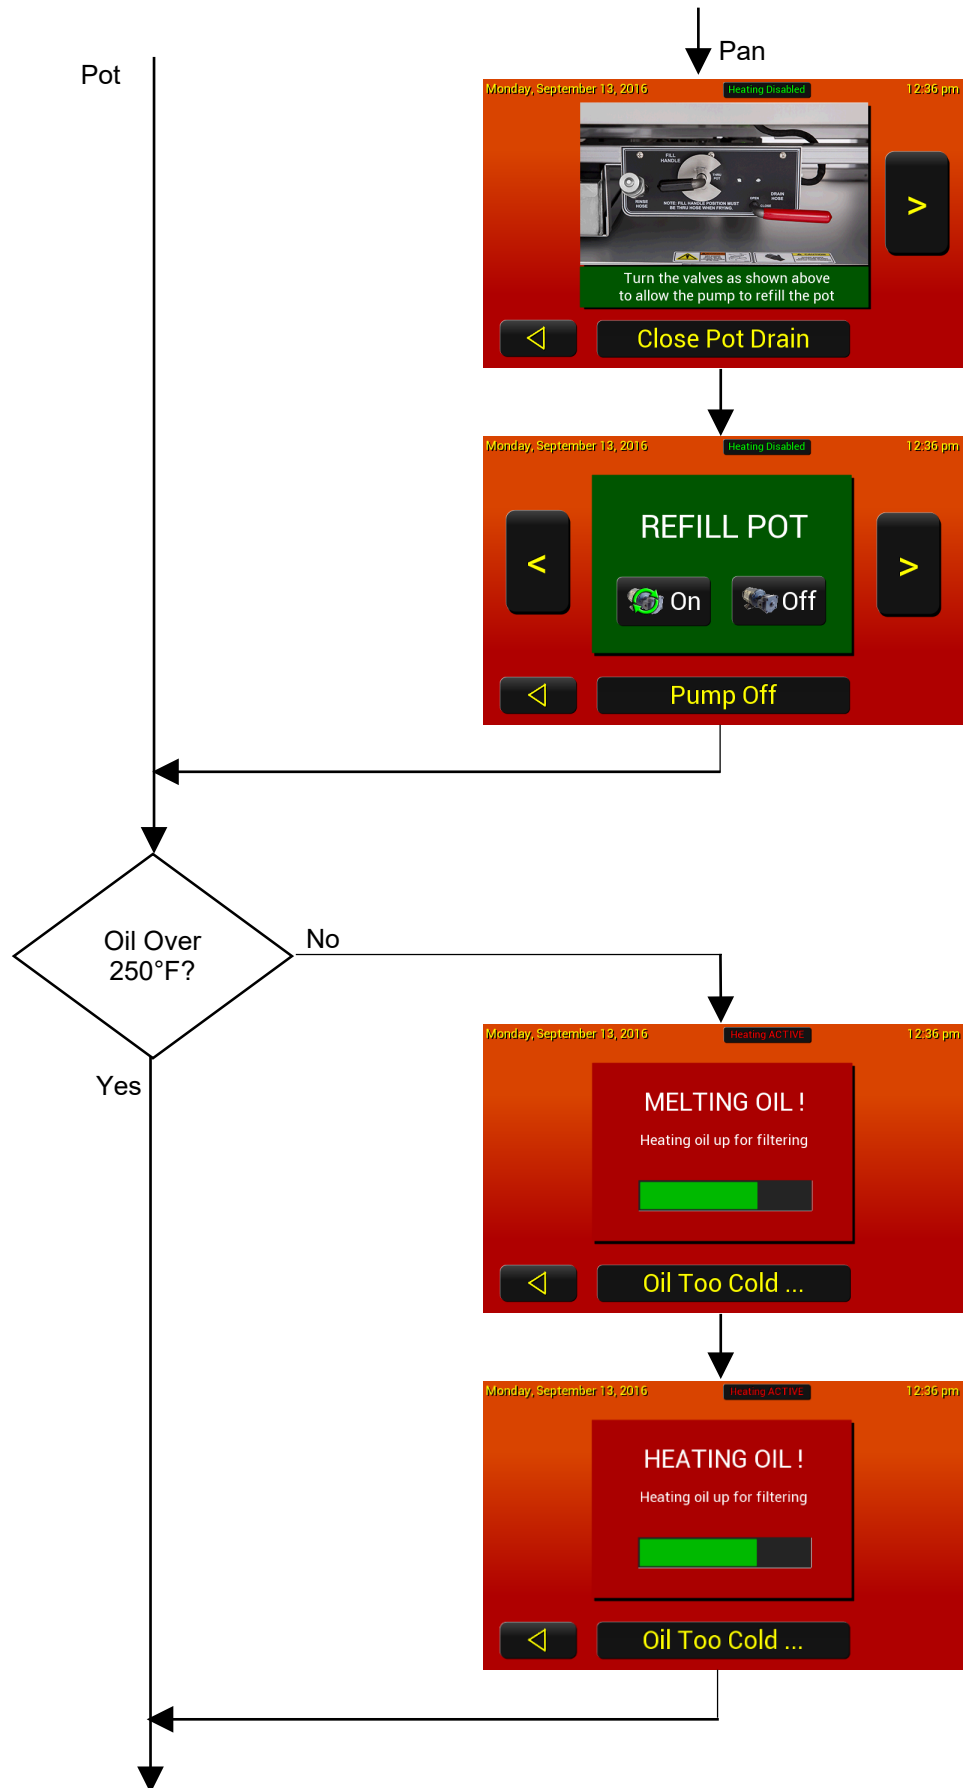



2. Open the pot drain slowly so that the shortening starts to flow evenly. This is to prevent excessive splashing of hot shortening.



3. Clean the pot, elements, & drain with the supplied brushes as the oil drains.



4. Make certain that the rinse hose is connected to rinse hose connector and the valve is turned to the THRU HOSE position.



5. Holding the hose by the handle, place hose nozzle inside the pot and press the **ON** button to start the pump.



6. Rinse the inside of the pot with the hose, press **Off** button when done.



7. To refill the pot, disconnect the hose, close the pot drain, and make sure the fill handle is THRU POT.

**WARNING**

Hot shortening may splash out of the pot causing severe injury when filling the pot.

- Press the **On** button to start the pump and refill the pot.



- The display will count up the time the pump is on to indicate the duration of refilling of the pot. Let the filter continue to pump the shortening until air starts bubbling through the shortening. When done press the **Off** button to stop the pump and press the right arrow button.




- Add new shortening if the fill mark has not been reached.

Boil Out

Boil-outs remove microscopic particles of carbon that build up on the walls of the fryer pot. To avoid eventual carbon build-up, off flavors, and shortening breakdown, boil-outs should be done once a week on each fryer following these procedures. BKI recommends BKI Cleaner (P/N LC0006) or equivalent.



Always wear appropriate personal protection equipment during the boil-out process to guard against possible injury from hot cleaning solution.

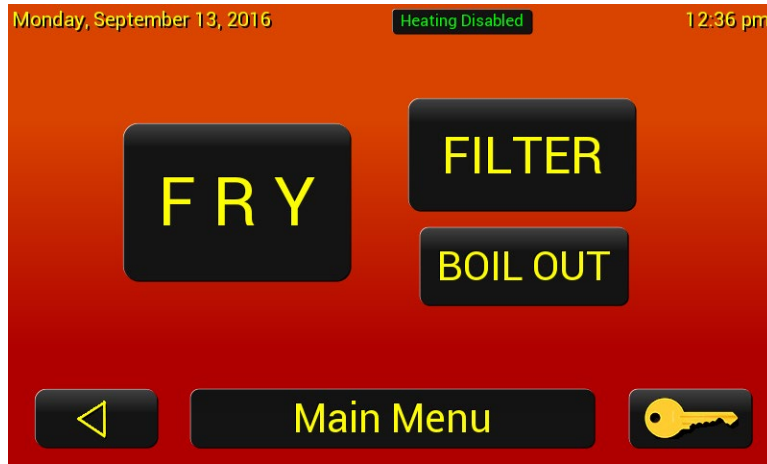

1. Press the **BOIL OUT** button to get the Boil Out Menu.



2. Press the **BOIL OUT** or **TUTORIAL** button



3. Open the pot drain slowly so that the shortening starts to flow evenly. This is to prevent excessive splashing of hot shortening.



4. Close the pot drain, fill the pot with water to the fill line, & add the cleaning product.



5. Confirm the water level and press the **START** button.



- The water will heat up to 190° F.



- Once the water has reached temperature and 2 minutes have passed the control will beep until the green check mark is pressed. Clean the pot with the brushes provided.



- Let sit for a little bit and repeat the cleaning with the brushes. Continue till the pot is clean.



9. **Before draining the cleaning solution**, remove the filter bag, screen and pipe connections from the filter vat. This must be done before draining the cleaning solution. **NEVER** pump water or detergent through the filter system.
10. Drain the solution into the filter vat and discard.
11. Rinse the pot with hot water, using the pot brush to remove remaining sediment, drain and discard.
12. Close the drain and refill the fryer pot with hot water to the proper level.
13. Add approximately 4 to 6 ounces of distilled (white) vinegar to develop a neutralizing solution. Stir the solution briefly. Leave in the pot for three to five minutes and discard. **NOTE: Foaming of shortening after boil-outs is caused by failure to follow proper neutralizing procedures.**
14. Repeat steps 11 through 13 as needed to remove all traces of cleaning solution.
15. Rinse the pot again with Cool water, drain and discard.

CAUTION

Damage to the fryer could result if the fryer pot is not completely dry before filling with shortening. Refill the fryer pot with shortening **ONLY** when it is completely dry.

16. Dry the fryer pot and filter vat **COMPLETELY**.
17. Close the main drain and fill with new shortening to the proper level.



18. Confirm the oil level.

Filter Pad Replacement

The filter pad must be replaced daily. If the shortening has a milky color when it is pumped into the pot, the filter pad should be replaced immediately.

CAUTION

If the filter pad is not properly closed, breading crumbs will get through the pad opening and clog the pump. Ensure that the filter pad is properly closed upon replacement.



1. Clean all the filter screens and tubing and get a new filter envelope.



2. Slide the filter into the filter envelope. Be careful to not tear or puncture the envelope.



3. Fold the open end of the envelope over and install the retaining clip.



4. Place the top screen over the assembly and check that the pickup hole is clear.



5. Install the pickup tube and hand tighten. Make sure the filter envelope is not torn.



6. Install the filter assembly into the filter vat. Place the filter vat lid on and slide the filter vat back into fryer.

Troubleshooting

Refer to the table below for troubleshooting information.


Problem	Cause	Possible Solution
Shortening Heating Too Slowly	Low voltage or improper voltage	Contact an authorized BKI service agent for corrective action.
	Bad thermostat or loose wires	Contact an authorized BKI service agent for corrective action.
	Weak heating elements or heating elements breaking down	Contact an authorized BKI service agent for corrective action.
	Coil on contactor is bad	Contact an authorized BKI service agent for corrective action.
	Breading build-up on heating elements	Clean heating elements. If problems persist, contact an authorized BKI service agent for corrective action.
Filter System Not Working	Uncertain	Press the hi-limit reset button under control panel. If problems persist, contact an authorized BKI service agent for corrective action.
	Connections not tight	Tighten the connections. If problems persist, contact an authorized BKI service agent for corrective action.
	Filter valve not open	Contact an authorized BKI service agent for corrective action.
	Filter paper on screen clogged with crumbs	Change filter paper. If problems persist, contact an authorized BKI service agent for corrective action.
	Motor hums, but does not pump	Check for clogged pump. If problems persist, contact an authorized BKI service agent for corrective action.
	Motor and pump coupling worn	Contact an authorized BKI service agent for corrective action.
	No power to control panel	Make sure drain valve is completely closed. If problems persist, contact an authorized BKI service agent for corrective action.
Computer Hangs	Computer malfunction.	Turn the power OFF then back ON . If problems persist, contact an authorized BKI service agent for corrective action.

Filter Pump Reset

If the filter pump overheats a PUMP TOO HOT alert will pop up and a timer will start to count up.



Once the pump has cooled, the screen will indicate that the pump is ready. Press the green Check Mark to start the pump back up.

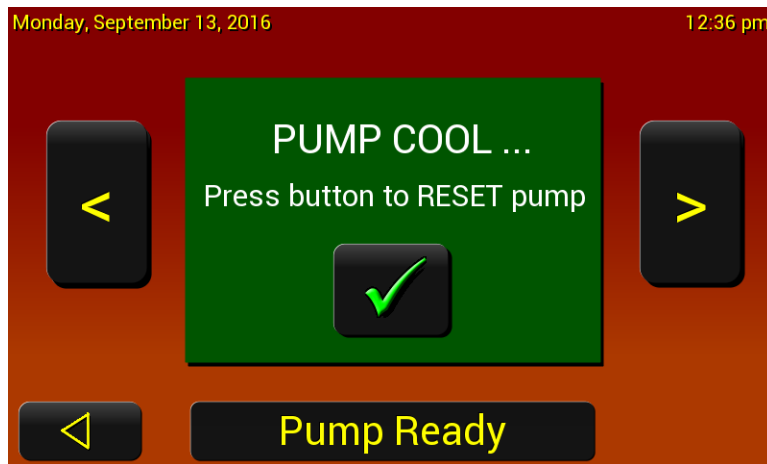

Notes



42 Allen Martin Drive, Essex Junction, VT 05452, USA
<http://www.bkideas.com>

Made and printed in the U.S.A

REVISION HISTORY

<u>REVISION</u>	<u>DATE</u>	<u>REVISED BY</u>	<u>DESCRIPTION</u>
01	03/28/18	JDS	Initial Release-Supersedes all previous releases
02	05/14/18	JDS	Added Recipe Icon Import/Export (LCO 18-004)
03	09/18/18	JDS	Added additional Team Central info, updated filter process, and required Warning for California residents. (LCO 18-007)
04	9/1/2020	CF	Change warranty