



OPERATION MANUAL

RESTAURANT SERIES GAS CONVECTION OVENS

SERIES: BPCV-G



BUILT BY CRAFTSMEN. TESTED BY TIME®



BPCV SERIES CONVECTION OVENS OPERATION MANUAL

BPCV SERIES CONVECTION OVENS

Models:

BPCV-1, BPCV-1-1W, BPCV-1-2W, BPCV-2, BPCV-2-1W & BPCV-2-2W

Bakers Pride Oven Company, LLC is a wholly owned subsidiary of Standex International Corporation.

All gas operated Bakers Pride® ovens are intended for use with the type of gas specified on the rating plate and for installation will be in accordance with National Fuel Gas Code ANSI Z223.1 (latest edition).

⚠ WARNING

FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

⚠ WARNING

California Residents Only

WARNING: This product can expose you to chemicals including chromium which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

⚠ CAUTION

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

NOTICE

Instructions to be followed in the event the user smells gas must be posted in a prominent location in the kitchen area. This information shall be obtained from the local gas supplier.

Please retain this manual for future references.

This equipment is design engineered for commercial use only.



BAKERS PRIDE OVEN COMPANY, LLC.

1307 N. Watters Rd., Suite 180
Allen, TX 75013

Phone: 800.527.2100 | Fax: 914.576.0605 | www.bakerspride.com



BPCV SERIES CONVECTION OVENS OPERATION MANUAL

TABLE OF CONTENTS

INSTALLATION INSTRUCTIONS	2
OPERATING INSTRUCTIONS	3
MAINTENANCE INSTRUCTIONS	7
CLEANING AND MAINTENANCE	7
EXPLODED VIEW – GRIDDLES – BP	8
PARTS LIST – GRIDDLES – BP	9
WARRANTY	10

Important

Safe and satisfactory operation of your equipment depends to a great extent on its proper installation. Installation must conform with local codes or in the absence of local codes, the National Fuel Gas Code, ANSI 2223.1 (latest edition). In Canada, installation should conform to installation codes for gas burning appliances and equipment standard CAN1-B149.1 (Natural gas) or CAN1-B149.2 (Propane gas).

Electrical wiring from the Electric Meter, main control box or service outlet to appliance must be electrically grounded in accordance with local codes or in the absence service of local codes with the National Electrical Codes ANSI/NFPA 70 - current. In Canada, conform with Canadian Electrical Code CSA-C22.1

ABOUT THIS MANUAL

Safety Precautions

Always follow recommended safety precautions listed in this manual. Following are the safety alert symbols. When you see this symbol on your equipment, be alert to the potential for personal injury or property damage.

Safety Signs and Messages

The following safety signs and messages are placed in this manual to provide instructions and identify specific areas where potential hazards exist and special precautions should be taken. Know and understand the meaning of these instructions, signs, and messages.

DANGER

Damage to the equipment, death or serious injury to you or other persons may result if these messages are not followed.

WARNING

This message indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

CAUTION

This message indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE

This message is used when special information, instructions or identification are required relating to procedures.



INSTALLATION INSTRUCTIONS

- Installation of the equipment should be performed by qualified, certified, licensed and /or authorized personnel who are familiar and experienced with local installation codes.
- Operation of the equipment should be performed by qualified or authorized personnel who have read this manual and are familiar with the functions of the equipment.
- Service of the equipment should be performed by qualified personnel who are knowledgeable with Bakers Pride® ovens.

Shipping Damage Claim Procedure

The equipment is inspected and crated carefully by skilled personnel before leaving our factory. The transportation company assumes full responsibility for safe delivery upon acceptance of this equipment. If shipment arrives damaged:

1. Visible loss or damage: Note on freight bill or express delivery and signed by person making delivery.
2. File claim for damages immediately: Regardless of extent of damages.
3. Concealed loss or damage: If damage is noticed after unpacking, notify Transportation Company immediately and file "Concealed Damage" claim with the transportation carrier. This should be done within fifteen (15) days from the date delivery and receipt of goods. Retain container for inspection.

General

1. A manual gas shut-off valve must be installed in the gas supply (service) line ahead of the appliance and gas pressure regulator for safety and ease in servicing.
2. The gas pressure regulator supplied must be installed on the appliance prior to connecting the equipment to the gas line. Failure to install a regulator could be potentially hazardous and will void the appliance warranty.
3. The appliance and its individual shut off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.45kpa).
4. The appliance must be isolated from gas supply piping system, by closing its individual manual shut off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.45kpa).
5. To perform maintenance and repairs of the appliance, please contact the factory, the factory representative, or the nearest authorized local service company.

OPERATING INSTRUCTIONS

Rating Plate

The rating plate is located in front of the range below the oven section. Information on this plate includes the model, serial number, BTU / hour input of the burners, operating gas pressure in inches WC, and whether the appliance is orificed for natural or propane gas. Pilot lighting instructions (ovens only) are also located in the same area.

⚠ WARNING

Bakers Pride® ovens must be connected only to the type of gas identified on the rating plate

Clearances

The appliance area must be kept free and clear of all combustibles. This unit is design-certified for the following installations only:

The clearances from combustible and non-combustible construction are as follows:

	Combustible	Non-Combustible
Back	6"	0
Sides	6"	0

DO NOT MOUNT oven on a curb base. Use legs/casters provided. Adequate air space at the bottom and rear of the unit must be provided for proper venting of blower motor.

Assembly

DO NOT USE door to lift or move oven!!! All ovens must be installed on leg assembly or casters shipped with the unit

The leg/stand assembly parts or casters are shipped separately.

Single Oven

Assemble the leg/stand assembly as follows:

1. Remove legs from package.
2. Secure top frame parts to the legs with bolts provided (Long angle - front & back. Short angle - sides).
3. Place the oven on top of leg/stand assembly. Match holes on the frame with oven bottom base. Fasten with bolts provided.

If provided with optional bottom shelf and rack support: (Ref. Figure 1)

- a. Screw the bottom shelf to the legs.
- b. Screw rack guide support angles to bottom shelf & top leg frame.

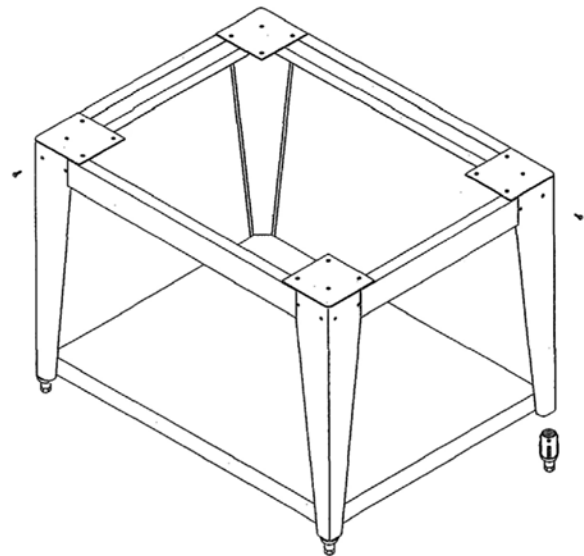


Figure 1

OPERATING INSTRUCTIONS

Double Oven

6" leg assembly is provided.

1. Match holes on the legs with oven bottom base and screw with bolts provided.
2. Set top oven on top of bottom oven.

3. Bolts down at rear and front as shown in Figure 2. Remove top kick plate to access screwing the front bolts.
4. Assemble bottom flue extension as shown in Figure 2.

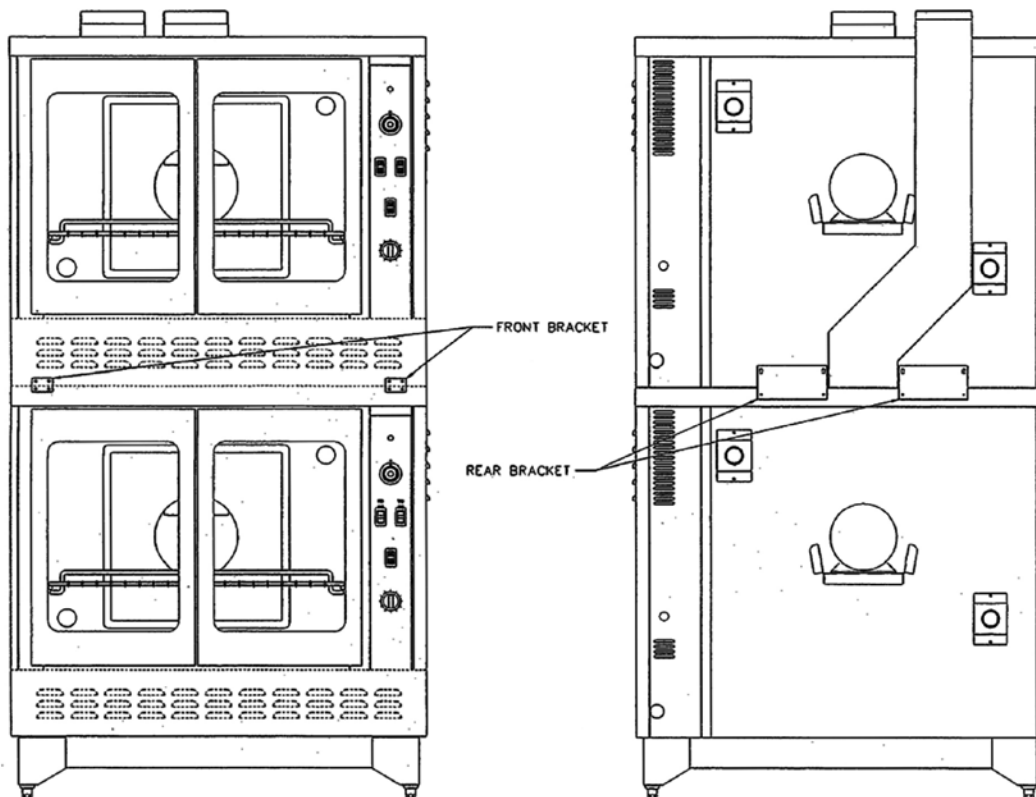


Figure 2

Caster Installation

If casters are provided, match holes on the caster with holes on the oven bottom base and fasten with bolts provided.

NOTE: Front casters are locking type.

Levelling

A carpenter's spirit level should be used and placed on the oven's center baking rack and/or across the range top and the unit leveled from front to back and side to side. If it is not level, cakes, casseroles and any other liquid or semi-liquid batter will not bake evenly, burner combustion may be erratic, and the unit will not function efficiently.

If the floor is smooth and level, the appliance may be further leveled with adjustment in the foot of the leg. Units with casters require adjustment with shims. A unit will probably not return to the same position after being moved, requiring releveilling after each and every move.

Air Supply & Ventilation

The area in front of, around and above the appliance must be kept clear to avoid any obstruction of the flow of combustion and ventilation air. Adequate clearance must be maintained around the appliance for servicing and proper operation.



OPERATING INSTRUCTIONS

Means must be provided for any commercial, heavy duty cooking appliance exhaust combustion waste products to the outside of the building. Usual practice is to place the appliance under an exhaust hood. Filters and drip troughs should be part of any industrial hood. But consult local codes before constructing and installing a hood.

Strong exhaust fans in this hood or in the overall air conditioning system can produce a slight vacuum in the room and / or cause air drafts, either of which can interfere with the pilot or burner performance and could be difficult to diagnose. Air movement should be checked during installation; if pilot or burner outage problems persist, make-up air openings or baffles may have to be provided in the room.

Electrical Connection

Bakers Pride® convection ovens requires a 120 volt supply to operate the ignition system and circulating fan. The supply cord provided along with the appliance is equipped with a three prong (grounding) plug for protection against shock hazard. The electrical service in the building must be equipped with a properly grounded three prong receptacle, in accordance with local codes, or in the absence of local codes, with the national electrical code, ANSI/NFPA 70-1987, in Canada, conform with Canadian electrical codes, CAS-C22.1.

Do not cut or remove the grounding prong from this plug. Wiring diagram is located on the backside of the appliance. Disconnect power supply before cleaning or servicing.

NOTE: This appliance is not capable of being operated in the event of power failure. No attempt should be made to operate this appliance during power failure.

Gas Connection

- Single Deck oven requires one gas connection.
- Double Deck oven requires two gas connections.

NOTICE

The gas supply (service) line must be the same size or greater than the inlet line of appliance. Bakers Pride appliances use a 3/4" NPT inlet. Sealant on all pipe joints must be resistive to LP gas..

Manual Shut-Off Valve

This installer-supplied valve must be installed in the gas service line ahead of the appliance and regulator in the gas stream and in a position accessible in the event of an emergency.

Failure to install the pressure regulator will void the equipment warranty!

The regulators supplied along with Bakers Pride appliances, will have 3/4" inlet/outlet openings and are adjusted at the factory for 5" WC (natural gas) or 10" WC (propane gas) depending on customer's ordering instructions.

Prior to connecting the regulator, check the incoming line pressure, as these regulators can only withstand a maximum pressure of 1/2" psi (14" WC). If the line pressure is beyond this limit, a step down regulator will be required.

The arrow shown on the bottom of the regulator body shows the gas flow direction, it should point downstream to the appliance. The red air vent cap on the top is part of the regulator and should not be removed.

Any adjustments to the regulator should be made by qualified service personnel only with the proper equipment.

Connections

Please check installer supplied intake pipes visually and / or blow them out with compressed air to clear any dirt particles, threading chips or any other foreign matter before installing a service line. When gas pressure is applied, these particles could clog orifices.

All connections must be sealed with a joint compound suitable for LP gas, and all connections must be tested with a soapy water solution before lighting any pilots.

Flexible Couplings, Connector And Casters

If the unit is to be installed with flexible couplings and / or quick-disconnect fittings, the installer must use a heavy-duty, AGA design-certified commercial flexible connector of at least 3/4" NPT (with suitable strain relief). The flexible connector must comply with the standard for Connectors for Movable Gas Appliances, ANSI 221.69 and addendum 221.69a (or latest edition) and a quick-disconnect device that complies with the



BPCV SERIES CONVECTION OVENS OPERATION MANUAL

OPERATING INSTRUCTIONS

standard for quick-disconnect devices for use with Gas Fuel should comply with ANSI Z21.41 and addendum Z21.41a (or latest edition). If disconnection of the restraint is necessary, make sure to reconnect restraint after the appliance has been returned to its originally installed position. Domestic gas or water connectors are not suitable,

Restraining device may be attached to the back frame/ panel of unit.

If the unit is to be installed with casters, a flexible connector must be used and the same ANSI standards apply. Locking front casters are provided to limit the movement of the appliance without depending on the connector or associated piping. A suitable strain relief must be installed with the flexible connector.

All connections must be sealed with a joint compound suitable for LP gas and all connections must be tested with a soapy water solution before lighting pilots.

Initial Pilot Lighting

CAUTION

When lighting pilots and checking for leaks, do not stand with your face close to the combustion chamber.

All appliances are adjusted and tested before leaving the factory, effectively matching them to sea level conditions. Adjustments and calibrations to assure proper operation may be necessary on installation to meet local conditions, low gas characteristics; correct possible problems caused by rough handling or vibration during shipment are to be performed only by qualified service personnel. These adjustments are the responsibility of the customer and / or dealer and are not covered by our warranty.

Check all gas connections for leaks with a soapy water solution before lighting any pilots. **DO NOT USE AN OPEN FLAME TO CHECK FOR LEAKS!** Putting an open flame beside a new gas connection is extremely dangerous.

- a. Turn the thermostat dial to the "OFF" position. Place the power switch to the "OFF" position.
- b. Wait five minutes.
- c. Place power switch to the "ON" position. Turn the oven thermostat to the desired temperature.
- d. For a complete shutdown, place the thermostat and power switch in the "OFF" position.

To Check For Gas Leaks

1. Remove the kick plate and right side front panel
2. Check pilot tubing and burner tubing for leaks at the connectors with a soapy water solution.
3. Light the pilot as described above.
4. Turn the thermostat to any setting and the burner should light.
5. Check the burner orifice elbow connection downstream of the valve with a soapy water solution.
6. Check the burner visually for blue flame. There should be no yellow tips or soot. If yellow tipping occurs, call an authorized service person to adjust the burner air shutter.

To Check For Gas Leaks

On initial installation, turn the oven to 250 degrees and operate for about 1 hour, then reset the thermostat to its maximum and operate for another hour. This will drive off solvents remaining in the unit. At the end of this second hour, turn the thermostat OFF, open the door and allow the unit to cool. Oven should then be thoroughly washed using hot, soapy water before being used.



MAINTENANCE INSTRUCTIONS

Cleaning And Maintenance

Any equipment works better and lasts longer when maintained properly. Cooking equipment is no exception. Your Bakers Pride® oven must be kept clean on a daily basis.

⚠ CAUTION

Never use Ammonia in an oven that is warmer than room temperature and always have direct ventilation!

Daily Cleaning

Ovens

1. Remove the baking racks. Wash in hot soapy water, and replace after the oven is fully cleaned.
2. Scrape off any food particles with a nylon griddle scraper. Be very careful about scratching the porcelain finish on the oven liner panels.
3. Wash all the above with hot soapy water, then reassemble.
4. Baked on spills may be loosened and stubborn stains removed with ordinary household ammonia and scrubbing with a nylon pad in a cold oven only.
5. Do not allow spray type oven cleaners to come into contact with the temperature probe in the oven.
6. After the cleaning the oven, rinse well with 1/4 cup of vinegar to one quart of clean water solution to neutralize any caustic residue of the cleaning compound. Wipe dry.
7. To increase the life of the motor, follow these instructions:
 - a. Never run oven with motor off.
 - b. After you finish cooking and the oven is not to be used for more than 1/2 hour. Place the switch to the "COOL DOWN" position and open the door. When oven temperature is equal to room temperature turn unit off.

Periodic Cleaning

Check the ventilation system periodically to see that nothing has fallen down into the exhaust vents.

Lubricate the pivot pins of the oven door hinge. Use a multi-purpose lubricating oil sparingly so as to not drip oil needlessly.

Your appliance should be checked for safe and efficient operation at least once a year by qualified service personnel.

Stainless Steel

All stainless steel body parts should be wiped regularly with hot soapy water during the day and with a liquid cleaner designed for this material at the end of each day.


DO NOT USE steel wool, abrasive cloth, or powders to clean stainless surfaces. If it is necessary to scrape stainless steel to remove encrusted materials, soak in hot water to loosen the material, and then use a wood or nylon scraper.

DO NOT USE a metal knife, spatula, or any other metal tool to scrape stainless steel. Scratches are almost impossible to remove.

⚠ WARNING

Contact the factory, factory representative or a local service company to perform all Maintenance and Service repairs.

EXPLODED VIEW – BPCV BAKERS PRIDE – CONVECTION OVEN

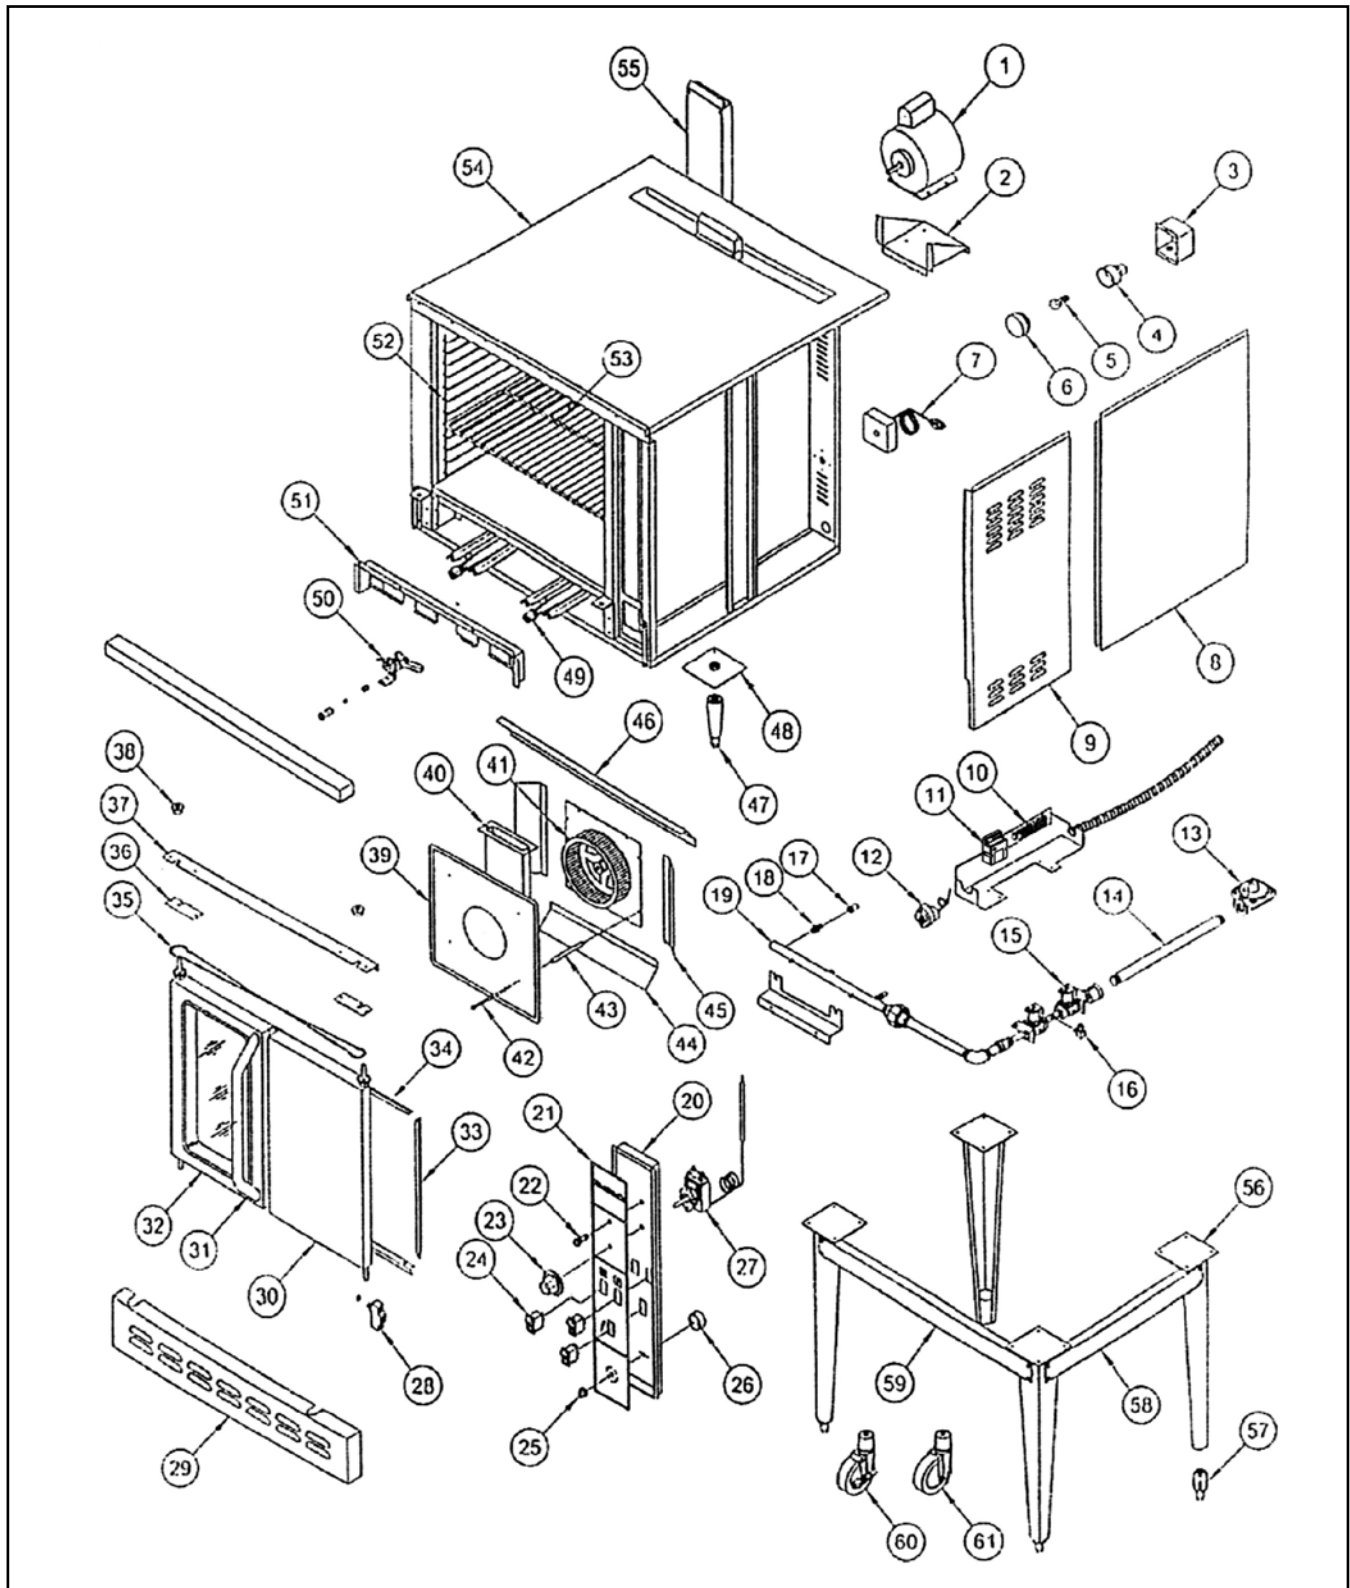



BPCV SERIES CONVECTION OVENS OPERATION MANUAL

PARTS LIST – BAKERS PRIDE® CONVECTION OVEN

Item	P/N	Description	Item	P/N	Description
1	340115	MOTOR 1/2 HP 120V 50/60HZ	36	340157	DOOR CHAIN SPROCKET HOLDER
2	340136	MOTOR BRACKET	37	340218	CHANNEL SPROCKET SUPPORT
3	340135	LIGHT BOX	38	340251	BUSHING, 1/2" DIA, BRONZE
4	340283	LIGHT SOCKET PART OF ASSEMBLY	39	340144	BLOWER BAFFLE
5	340283	LIGHT BULB PART OF ASSEMBLY	40	340363	SNORKLE TUBE ASSY
6	340283	LIGHT COVER PART OF ASSEMBLY	41	310912	BLOWER WHEEL
7	340341	POWER CORD 8 FEET	42	300186	BOLT, 1/4 - 20 x 5", HEX HEAD
8	340156	RIGHT SIDE PANEL-REAR	43	340327	SPACER TUBE 3/8" O.D. x 4-1/4" S/S
9	340155	RIGHT SIDE PANEL-FRONT	44	340222	DIVERTER-BOTTOM
10	340281	TERMINAL BLOCK (8 WAY)	45	340223	DIVERTER-SIDES
11	340134	IGNITION MODULE	46	340221	DIVERTER-TOP
12	310354	REGULATOR (NAT)	47	340122	LEG 6" S/STEEL – WITH ADJUSTABLE FOOT (TSCV-2)
3	310226	REGULATOR (LP)	48	340180	LEG PLATE ASSY (TSCV-2)
14	N5235Z	PIPE EXTENSION 3/4 NPT x 19" (GAS INLET)	49	340364	BURNER
15	340267	SOLENOID, FJ GAS	50	340131	PILOT, 6S30-2
16	340361	PILOT VALVE – 1/8 NPT x 1/4 CC x 90	NAT	300227	PILOT BELL ORIFICE – 3/6 CC #26 (NAT)
17	301034	ORIFICE HOOD – #31 (45,000 BTU NAT)	50	340131	PILOT, 6S30-2
	301050	ORIFICE HOOD – #50 (45,000 BTU LP)	LP	300226	PILOT BELL ORIFICE – 3/ 16 CC #16 (LP)
18	311028	ADAPTER – 1/8 NPT Ex3/8 -27 STRAIGHT	51	340170	FRONT BAFFLE-OVEN
19	340362	MANIFOLD PIPE	52	340124	RACKGUIDE –R/H
20	340617	CONTROL PANEL		340123	RACKGUIDE –L/H
21	340273	DECAL (CONTROL PANEL)	53	340125	RACK
22	340285	INDICATOR LIGHT	54	340151	TOP PANEL
23	340294	KNOB-THERMOSTAT	55	390106	STACKING KIT WITH FEET
24	340284	SWITCH, FAN-2 SPEED		390178	STACKING KIT WITH CASTERS
	340287	SWITCH, LIGHT – MOMENTARY OVEN LIGHT SWITCH	56	340321	LEG ASSY (SINGLE UNIT)
	340288	SWITCH, POWER – 3 POSITION, ON OFF COOL DOWN	57	390168	FOOT
25	340262	KNOB-TIMER	58	340178	BOTTOM LEG FRAME – SIDES
26	340261	TIMER	59	340177	BOTTOM LEG FRAME – FRONT & REAR
27	340132	THERMOSTAT	60	340263	CASTER WITH BRAKE (FRONT)
28	340289	DOOR SWITCH – PLUNGER STYLE	61	340264	CASTER WITH NO BRAKE (REAR)
29	340162	KICK PLATE	62	340360	WIRING DIAGRAM (NOT SHOWN)
30	390145	DOOR ASSY – R/H WITH GLASS	63	340360	WIRE HARDNESS (NOT SHOWN)
	390148	DOOR ASSY – R/H WITH SOLID	64	390115	KIT,26.5" LEGS AND CASTERS
	340117	GLASS WINDOW ASSY ONLY	65	390166	KIT,26.5" LEGS, CASTERS AND SHELF
31	340116	HANDLE-OVEN DOOR	66	390167	KIT,26.5" LEGS, CASTERS, SHELF AND RACK GUIDES
32	390144	DOOR ASSY – L/H WITH GLASS	68	390169	KIT,26.5" LEGS AND ADJUSTABLE FEET
	390177	DOOR ASSY-L/H SOLID	69	390170	KIT, 26.5" LEGS, ADJUSTABLE FEET AND SHELF
33	340161	DOOR SEAL-SIDES	70	390171	KIT, 26.5" LEGS, ADJUSTABLE FEET, SHELF AND RACK GUIDES
34	340160	DOOR SEAL-TOP, BOTTOM			
35	340315	CHAIN, HT HD PRE STRETCHED			
	340128	LINK ROD, 1/4 x 3" W/EYE COUPLER			
	340253	LINK ROD, 1/4 x 20" W/EYE COUPLER			
	340130	TURN BUCKLE			
	S3224A	MASTER LINK			
	340316	COUPLING 1/4 - 20 EYE ROD			



BPCV SERIES CONVECTION OVENS OPERATION MANUAL

BAKERS PRIDE LIMITED WARRANTY

WHAT IS COVERED

This warranty covers defects in material and workmanship under normal use, and applies only to the original purchaser providing that:

- The equipment has not been accidentally or intentionally damaged, altered or misused;
- The equipment is properly installed, adjusted, operated and maintained in accordance with National and local codes and in accordance with the installation instruction provided with the product;
- The serial number rating plate affixed to the equipment has not been defaced or removed.

WHO IS COVERED

This warranty is extended to the original purchaser and applies only to equipment purchased for use in the U.S.A.

COVERAGE PERIOD

Cyclone Convection Ovens: BCO Models: One (1) Year limited parts and labor; (1) Year limited door warranty.

GDCO Models: Two (2) Year limited parts and labor; (2) Year limited door warranty.

CO11 Models: Two (2) Year limited parts and labor; (5) Year limited door warranty.

All Other Products: One (1) Year limited parts and labor. Warranty period begins the date of dealer invoice to customer or ninety (90) days after shipment date from Bakers Pride - whichever comes first.

WARRANTY

This warranty covers on-site labor, parts and reasonable travel time and travel expenses of the authorized service

COVERAGE

Representative up to (100) miles, round trip, and (2) hours travel time. The purchaser, however, shall be responsible for all expenses related to travel, including time, mileage and shipping expenses on smaller counter models that may be carried into a Factory Authorized Service Center, including the following models: PX-14, PX-16, P18, P22S, P24S, PD-4, PDC, WS Series and BK-18.

EXCEPTIONS

All removable parts in Bakers Pride Charbroilers, including but not limited to: Burners, Grates, Radiants, Stones and Valves, are covered for a period of SIX MONTHS. All Ceramic Baking Decks are covered for a period of THREE MONTHS. The installation of these replacement decks is the responsibility of the purchaser. The extended Cyclone door warranty years 3 through 5 is a parts only warranty and does not include labor, travel, mileage or any other charges.

EXCLUSIONS

- Negligence or acts of God,
- Failures caused by erratic voltages or gas supplies,
- Thermostat calibrations after (30) days from equipment installation date,
- Unauthorized repair by anyone other than a Bakers Pride Factory Authorized Service Center,
- Air and Gas adjustments,
- Damage in shipment,
- Light bulbs,
- Alteration, misuse or improper installation,
- Glass doors and door adjustments,
- Thermostats and safety valves with broken capillary tubes,
- Fuses,
- Char-broiler work decks and cutting boards,
- Tightening of conveyor chains,
- Adjustments to burner flames and cleaning of pilot burners,
- Tightening of screws or fasteners,
- Accessories — spatulas, forks, steak turners, grate lifters, oven brushes, scrapers, peels. etc.,
- Freight — other than normal UPS charges,
- Ordinary wear and tear.

INSTALLATION

Leveling and installation of decks as well as proper installation and check out of all new equipment —per appropriate installation and use materials — is the responsibility of the dealer or installer, not the manufacturer.

REPLACEMENT PARTS

Bakers Pride genuine Factory OEM parts receive a (90) day materials warranty effective from the date of installation by a Bakers Pride Factory Authorized Service Center.

This Warranty is in lieu of all other warranties, expressed or implied, and all other obligations or liabilities on the manufacturer's part. Bakers Pride shall in no event be liable for any special, indirect or consequential damages, or in any event for damages in excess of the purchase price of the unit. The repair or replacement of proven defective parts shall constitute a fulfillment of all obligations under the terms of this warranty.

Form #U4177A 1/07

IMPORTANT FOR FUTURE REFERENCE

Please complete this information and retain this manual for the life of the equipment. For Warranty Service and/or Parts, this information is required.

_____	_____	_____
Model Number	Serial Number	Date Purchased

IMPORTANT FOR FUTURE REFERENCE		
Please complete this information and retain this manual for the life of the equipment. For Warranty Service and/or Parts, this information is required.		
_____	_____	_____
Model Number	Serial Number	Date Purchased

IMPORTANT FOR FUTURE REFERENCE		
Please complete this information and retain this manual for the life of the equipment. For Warranty Service and/or Parts, this information is required.		
_____	_____	_____
Model Number	Serial Number	Date Purchased

IMPORTANT FOR FUTURE REFERENCE		
Please complete this information and retain this manual for the life of the equipment. For Warranty Service and/or Parts, this information is required.		
_____	_____	_____
Model Number	Serial Number	Date Purchased

IMPORTANT FOR FUTURE REFERENCE		
Please complete this information and retain this manual for the life of the equipment. For Warranty Service and/or Parts, this information is required.		
_____	_____	_____
Model Number	Serial Number	Date Purchased

NOTES


This image shows a full page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, typical of notebook paper. There are no margins, text, or other markings on the page.

Standex

Food Service Equipment Group

The Standex Food Service Equipment Group (FSEG) is a manufacturer of innovative commercial food service equipment offering a wealth of refrigeration and cooking expertise. Products include walk-in coolers and freezers; hot and cold display cabinets, cases, and storage systems; commercial ovens, rotisseries, and cooking equipment; and rotary vane pumps.

Ask your sales representative about how the power of all Standex brands can work for you.
www.standex.com/segments/food-service

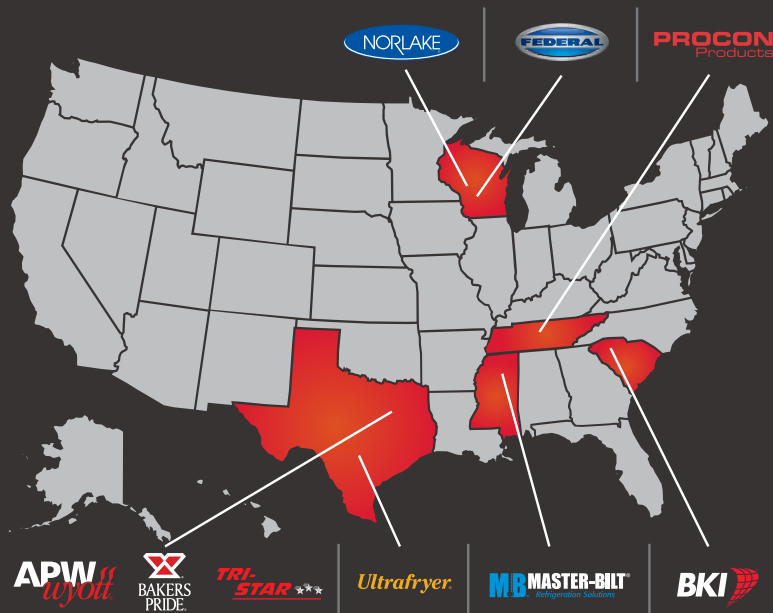

Be sure to keep up with new product announcements
and events on social media!

