



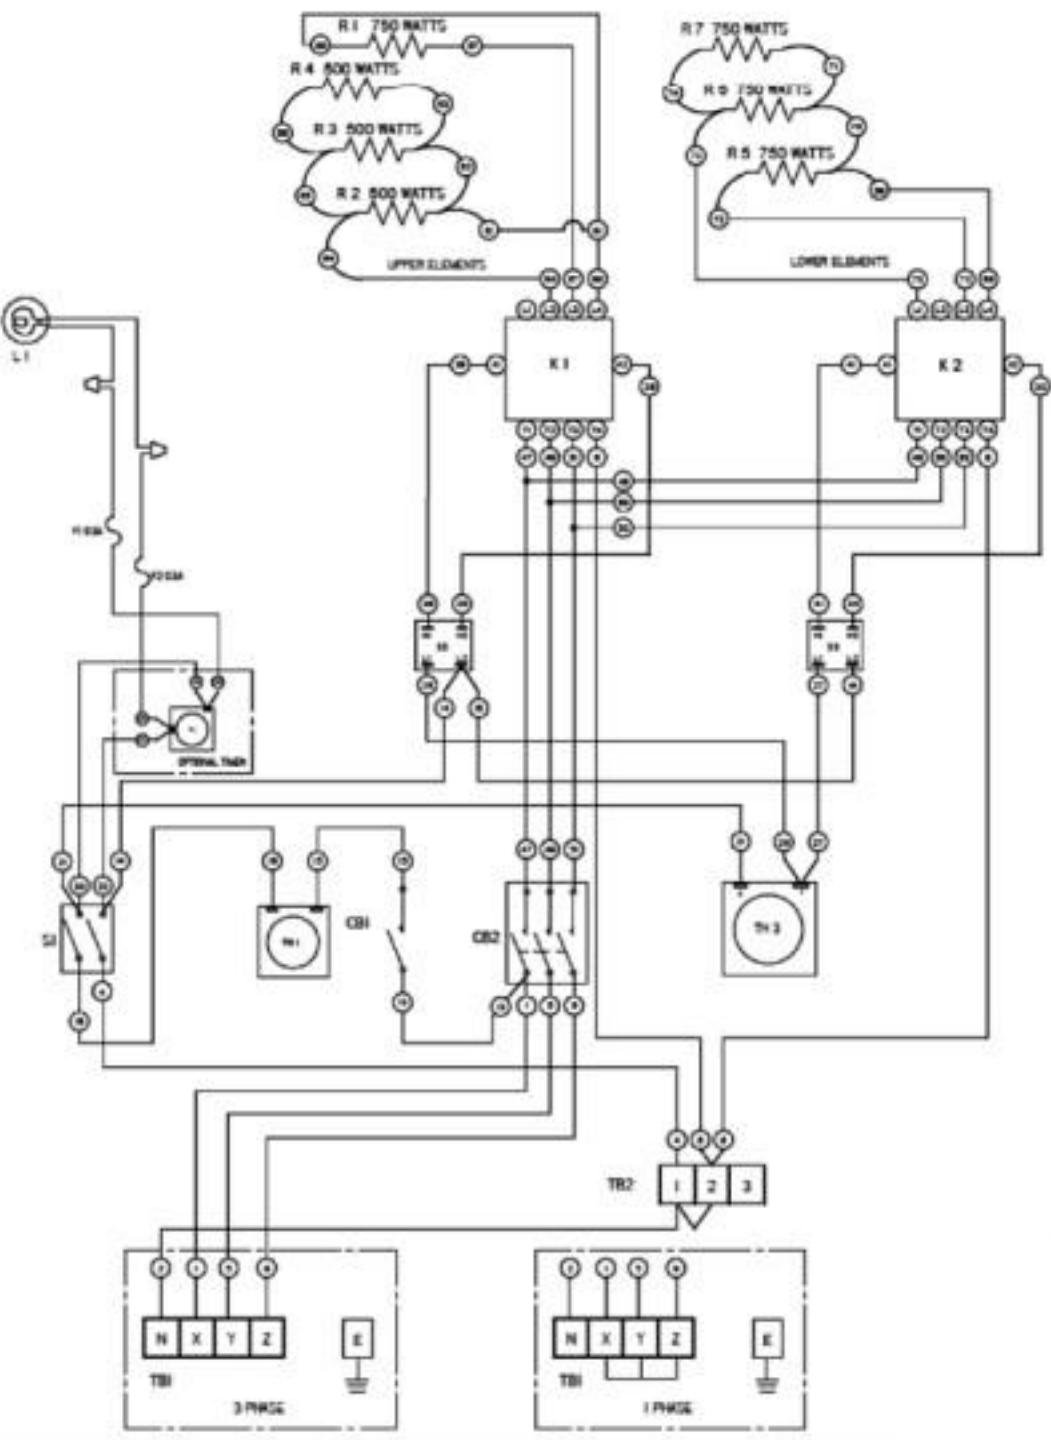


COMPONENT LIST

- CBI - CONTROL CIRCUIT BREAKER
- CB2 - LOWER OVEN CIRCUIT BREAKER
- K1 - UPPER ELEMENT CONTACTOR
- K2 - LOWER ELEMENT CONTACTOR
- LI - OVEN LAMP
- R1 THRU R7 - HEATER ELEMENTS
- S1 - MAIN POWER SWITCH
- S2 - UPPER ELEMENT SWITCH
- S3 - LOWER ELEMENT SWITCH
- TBI - MAIN POWER TERMINAL BLOCK
- TH1 - HIGH LIMIT THERMOSTAT
- TH3 - OVEN THERMOSTAT
- F1 - OVEN LIGHT FUSE
- F2 - OVEN LIGHT FUSE
- T1 - OVEN TIMER

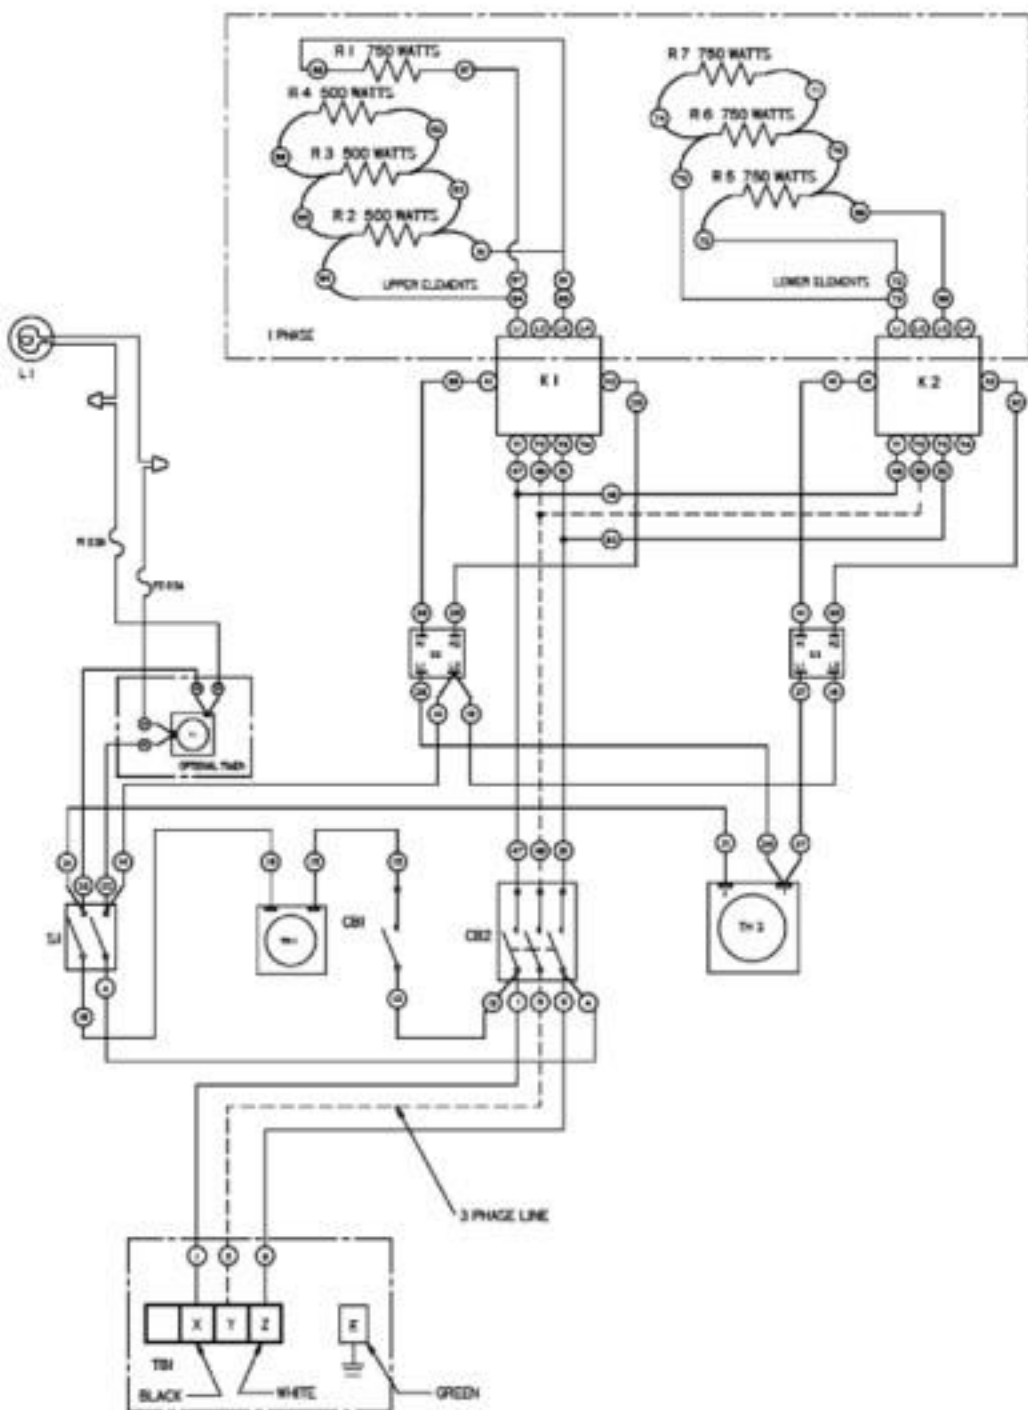


# COMPONENT LIST


- CB1 - CONTROL CIRCUIT BREAKER
- CB2 - LOWER OVEN CIRCUIT BREAKER
- K1 - UPPER ELEMENT CONTACTOR
- K2 - LOWER ELEMENT CONTACTOR
- LI - OVEN LAMP
- R1 THRU R7 - HEATER ELEMENTS
- SI - MAIN POWER SWITCH
- S2 - UPPER ELEMENT SWITCH
- S3 - LOWER ELEMENT SWITCH
- TBI - MAIN POWER TERMINAL BLOCK
- TH1 - HIGH LIMIT THERMOSTAT
- TH3 - OVEN THERMOSTAT
- F1 - OVEN LIGHT FUSE
- F2 - OVEN LIGHT FUSE
- T1 - OVEN TIMER

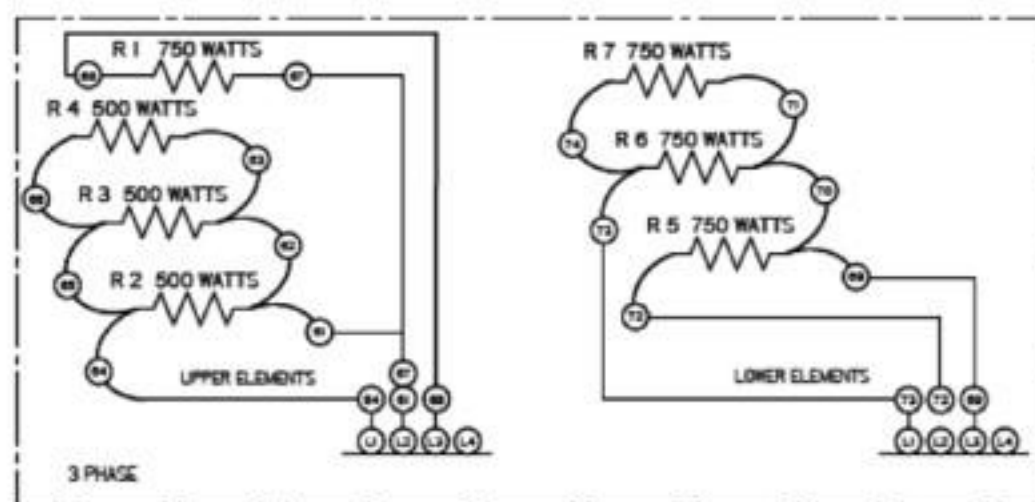

# COMPONENT LIST

- CB2 - LOWER OVEN CIRCUIT BREAKER
- CB3 - UPPER OVEN CIRCUIT BREAKER
- K1 - LOWER OVEN UPPER ELEMENT CONTACTOR
- K2 - LOWER OVEN LOWER ELEMENT CONTACTOR
- K3 - UPPER OVEN UPPER ELEMENT CONTACTOR
- K4 - UPPER OVEN LOWER ELEMENT CONTACTOR
- K5 - LOWER OVEN LIMITING CONTACTOR
- K6 - UPPER OVEN LIMITING CONTACTOR
- L1 - UPPER OVEN LAMP
- L2 - LOWER OVEN LAMP
- R1 THRU R17 - HEATER ELEMENTS
- S1 - MAIN POWER SWITCH
- S2 - LOWER OVEN UPPER ELEMENT SWITCH
- S3 - LOWER OVEN LOWER ELEMENT SWITCH
- S4 - UPPER OVEN UPPER ELEMENT SWITCH
- S5 - UPPER OVEN LOWER ELEMENT SWITCH
- T1 - LOWER OVEN TIMER
- T2 - UPPER OVEN TIMER
- TB1 - MAIN POWER TERMINAL BLOCK
- TB2 - NEUTRAL DISTRIBUTION
- TH1 - LOWER OVEN HIGH LIMIT THERMOSTAT
- TH2 - UPPER OVEN HIGH LIMIT THERMOSTAT
- TH3 - LOWER OVEN THERMOSTAT
- TH4 - UPPER OVEN THERMOSTAT
- TR1 - STEP DOWN TRANSFORMER
- F1 - OVEN LIGHT FUSE
- F2 - OVEN LIGHT FUSE

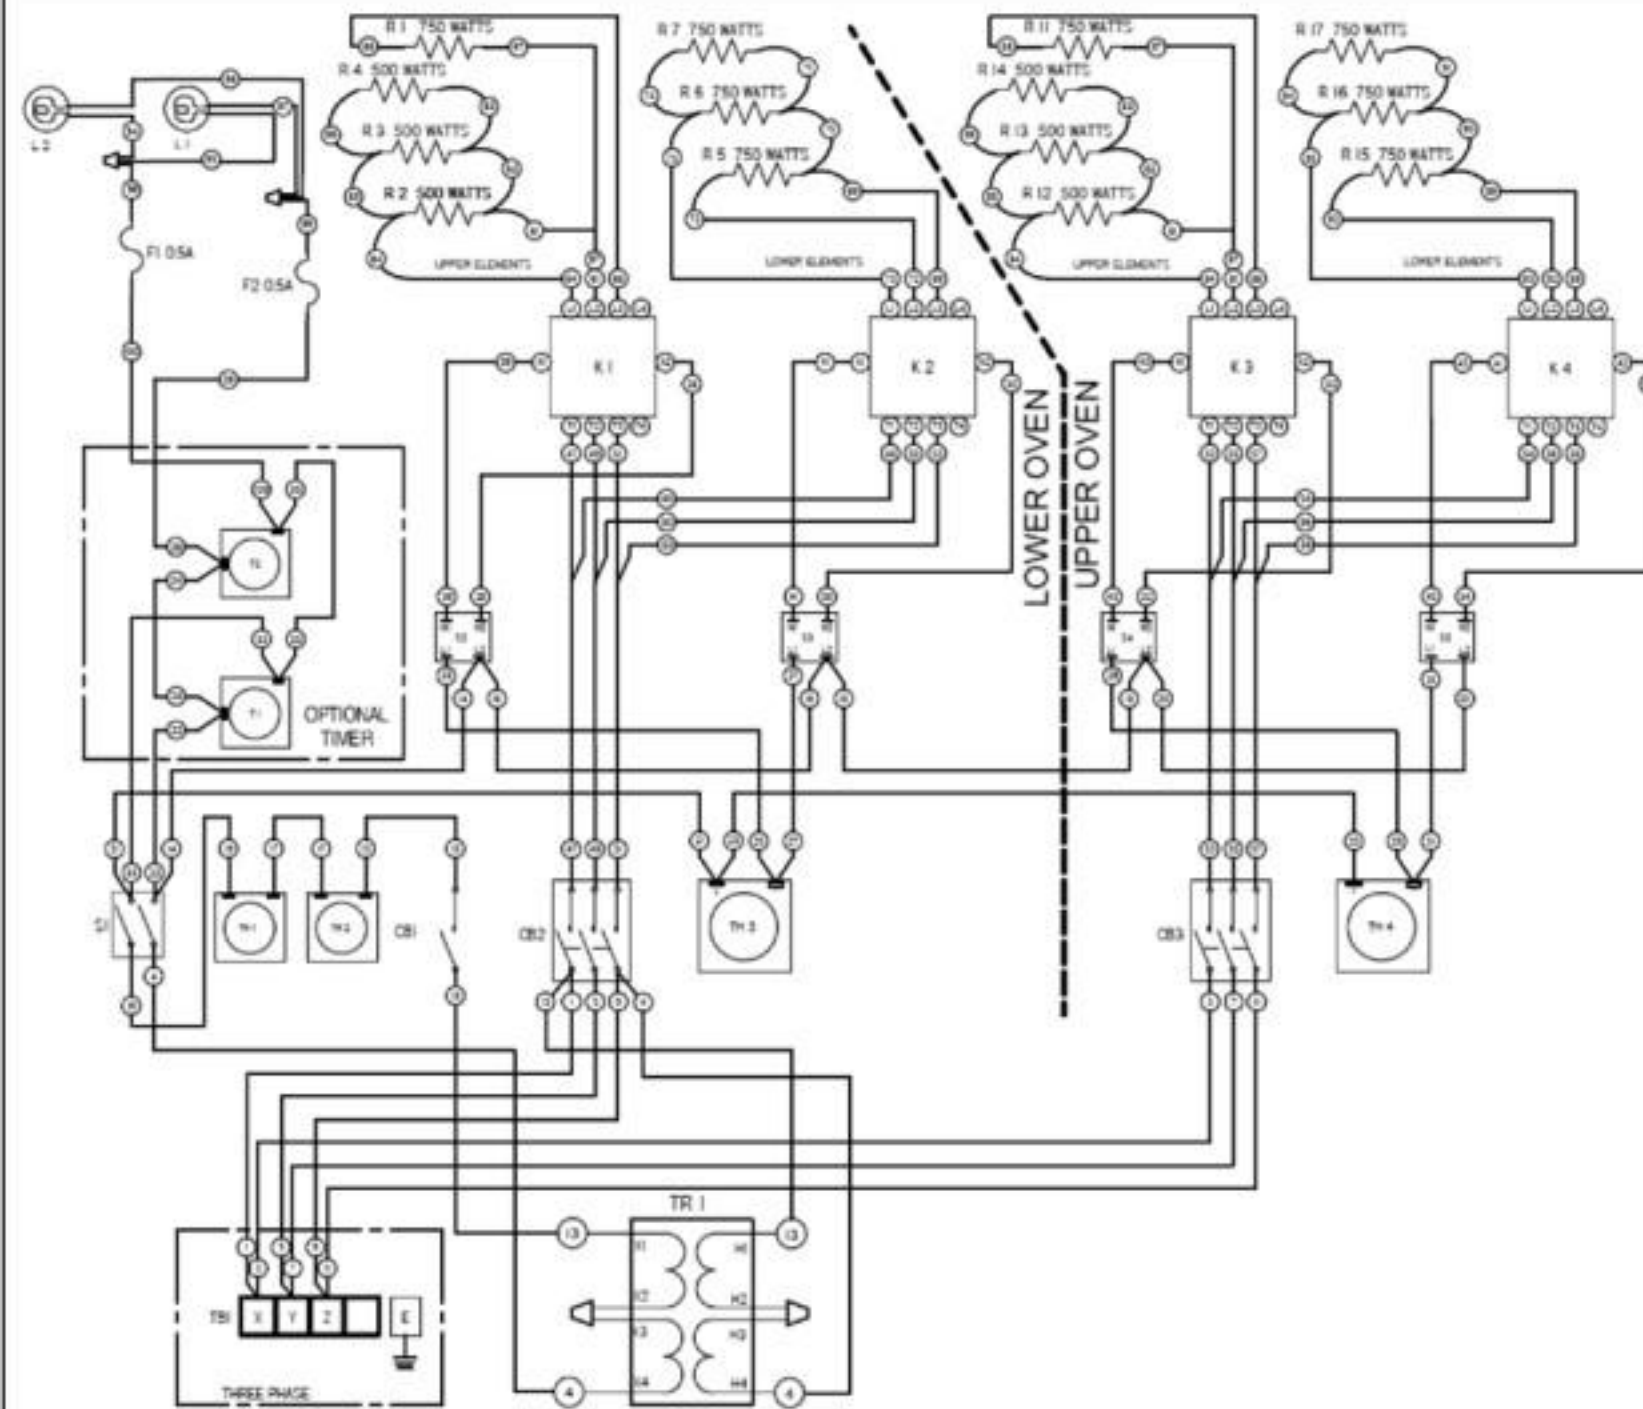

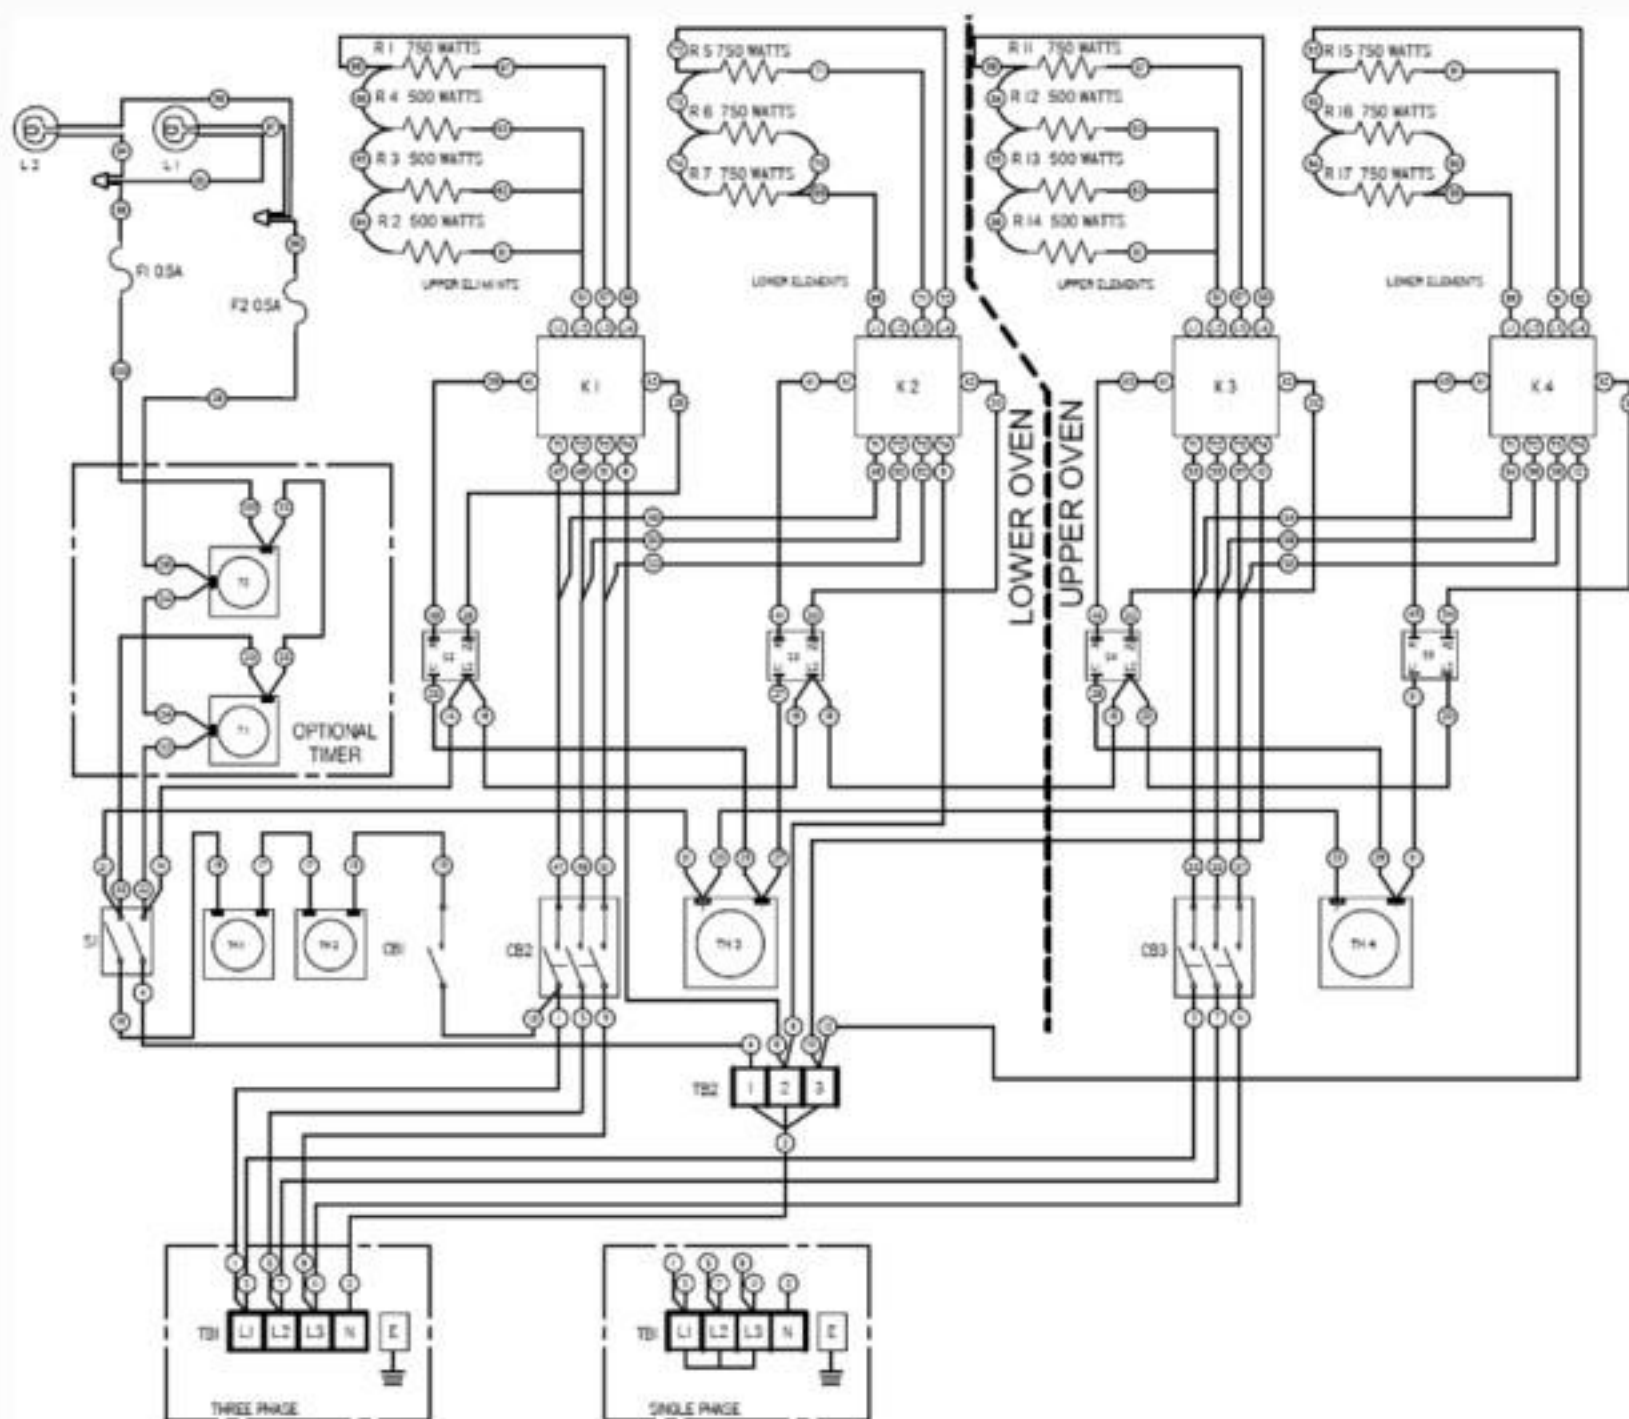

#### COMPONENT LIST

- CB2 - LOWER OVEN CIRCUIT BREAKER
- CB3 - UPPER OVEN CIRCUIT BREAKER
- K1 - LOWER OVEN UPPER ELEMENT CONTACTOR
- K2 - LOWER OVEN LOWER ELEMENT CONTACTOR
- K3 - UPPER OVEN UPPER ELEMENT CONTACTOR
- K4 - UPPER OVEN LOWER ELEMENT CONTACTOR
- K5 - LOWER OVEN LIMITING CONTACTOR
- K6 - UPPER OVEN LIMITING CONTACTOR
- L1 - UPPER OVEN LAMP
- L2 - LOWER OVEN LAMP
- R1 THRU R17 - HEATER ELEMENTS
- S1 - MAIN POWER SWITCH
- S2 - LOWER OVEN UPPER ELEMENT SWITCH
- S3 - LOWER OVEN LOWER ELEMENT SWITCH
- S4 - UPPER OVEN UPPER ELEMENT SWITCH
- S5 - UPPER OVEN LOWER ELEMENT SWITCH
- T1 - LOWER OVEN TIMER
- T2 - UPPER OVEN TIMER
- TB1 - MAIN POWER TERMINAL BLOCK
- TB2 - NEUTRAL DISTRIBUTION
- TH1 - LOWER OVEN HIGH LIMIT THERMOSTAT
- TH2 - UPPER OVEN HIGH LIMIT THERMOSTAT
- TH3 - LOWER OVEN THERMOSTAT
- TH4 - UPPER OVEN THERMOSTAT
- TR1 - STEP DOWN TRANSFORMER
- F1 - OVEN LIGHT FUSE
- F2 - OVEN LIGHT FUSE

