




PARTS LIST
PRESSURELESS COOKER
MODEL: SC-16GH



May 4, 2007

BLODGETT OVEN CO ▪ 44 lakeside Ave ▪ Burlington, VT 05446
Tel. 800-331-5842 ▪ Fax 802-860-3732 ▪ www.blodgett.com

FIGURE 1

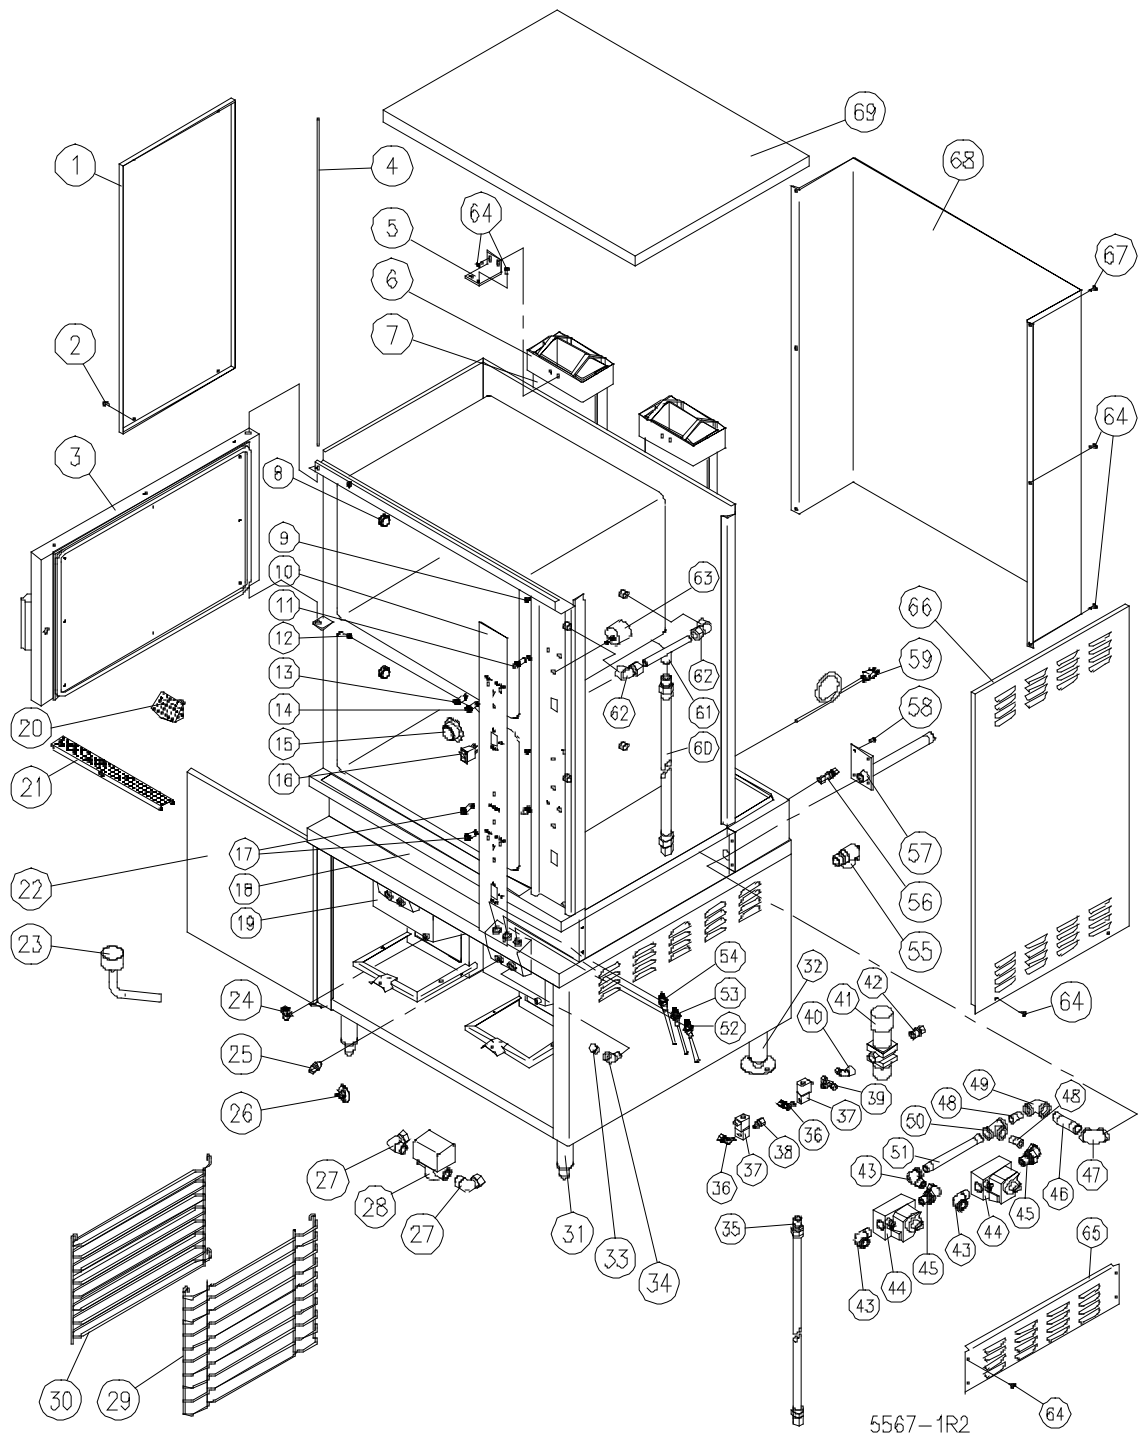

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

<u>ITEM</u>	<u>Part #</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
	1	42871 Left Hand Side Panel	1
	2	40077 Screw, 10 - 32 x 1", Stainless Steel	14
	3	40714 Door Assembly	2
	4	40710 Hinge Rod	1
	5	42748 Flue Support	2
	6	41231 Flue Top	2
	7	42613 Flue	2
	8	42796 Steam Diverters	8
	9	42285 Door Actuator Pin Complete With Clip	2
		42137 Door Switch	2
	10	42877 Decal, Control Panel	1
	11	41631 Striker (3498)	2
		41632 Washer Stainless Steel	2
		40112 Lock Washer	2
		40114 Nut	2
	12	40843 Rack Hanger Assembly	8
	13	40945 Pilot Light - Green	2
	14	40950 Pilot Light - Red	2
**	15	42456 Dial, 60 minutes, 60 Hz	2
		42456 Dial, 120 minutes, 60 Hz	2
		42456 Dial, 60 minutes, 50 Hz	2
		42456 Dial, 120 minutes, 50 Hz	2
	16	43174 Switch, 120V	2
	17	40947 Pilot Light, Green	2
	18	43434 Front Riser	1
	19	43435 Generator Tank	2
	20	42793 Compartment Strainer	2

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

ITEM		Part #	DESCRIPTION	QUANTITY
	21	41635	Perforated Trough	1
**	22	41466	Cabinet Door Assembly, Right Hand	1
		41468	Cabinet Door Assembly, Left Hand	1
	23	41079	Delime Funnel	1
	24	40443	Elbow, 3/8" C x 1/8" MPT	2
	25	40205	Thermostat Fitting	2
	26	40879	High Limit Sensor	2
	27	40439	Elbow - Blowdown, 3/4" C x 3/4" MPT	4
	28	40601	Blowdown Valve, 3/4" FPT	2
	29	40200	Pan Rack	4
	30	40197	Centre Pan Support	2
	31	42808	Bullet Leg Assembly, 6"	2
	32	42807	Flanged Leg Assembly, 6"	2
	33	40309	Brass Plug, 3/8" MPT	2
	34	40316	45° Brass Street Elbow 3/8" MPT	2
**	35	41805	Gas Flex Tube, ½" x 36" (Natural)	2
		41804	Gas Flex Tube, ½" x 18" (Propane)	2
	36	40443	Elbow, 3/8 c x 1/8 MPT	2
	37	41036	Fill Solenoid	2
	38	40429	Connector, 3/8" C x 1/8" MPT	1
	39	43436	Tee, 3/8 C x 1/8 MPT	1
	40	40446	Elbow, 3/8" C x ½" MPT	1
	41	41101	Thermostatic Cooling Valve	1
*	41	43437	Cooling Valve Bracket	1
	42	40432	Connector, 3/8 C x ½ MPT	1
	43	41790	Street Elbow, ½"	3
**	44	41108	Combination Control, Natural Gas	2
		41109	Combination Control, LP	2

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

<u>ITEM</u>	<u>Part #</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
	45	40616 Union Elbow, ½"	2
	46	41784 Pipe, ¾" x 3"	1
	47	41791 Street Elbow, ¾"	1
	48	41773 Close Nipple, ½"	2
	49	41796 Reducing Elbow, ½" x ¾"	1
	50	41793 Tee, ½"	1
	51	41777 Nipple, ½" x 7-¾"	1
	52	40465 Probe, 3 Inches	2
	53	40464 Probe, 2-1/2 Inches	2
	54	40463 Probe, 2 Inches	2
	55	41078 Relief Valve, 5 PSI	2
	56	40475 Bulk Head, 3/8"C, Water Fill	2
	57	41066 Gas Supply Pipe, ¾" x 9 - 13/16"	1
	58	40072 Screw, 10 - 32 x ½" Plated	4
	59	42706 Cord Set, 120V	1
**	60	42960 Bottom, Flex Steam Tube, 36"	2
		41854 Top, Flex Steam Tube, 48"	2
	61	41076 Steam Manifold	4
	62	40451 Elbow, ¾" C x ¾" FPT	8
**	63	40972 Timer, (60 Minutes)	2
		43275 Timer, (120 Minutes) Optional	2
	64	40076 Screw, 10 - 32 x ½" Stainless Steel	28
	65	43438 Side Riser Panel	2
	66	41709 Right Hand Side Panel	1
	67	43439 Screw, 1/4 - 20 x ½" Stainless Steel	2
	68	40538 Flue Cover	1
	69	41717 Top Panel	1
*	70	41349 Drain Box Assembly	1

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH


<u>ITEM</u>	<u>Part #</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
*		40422 Connector - Drain, 3/4C" x 3/4" MPT	4
		40617 Union Elbow, 3/4" - Drain	2
		40432 Connector, 3/8" C x 1/2" MPT	1
*	71	41082 High Limit Sensor Cover	1
* **	72	42809 Swivel 5" Caster Complete With Brake, Optional	2
* **	73	42810 Swivel 5" Caster, Optional	2
*	74	40614 Thermal Switch (Inside Compartment)	2
	75	43568 Relief Valve Extension	2

* NOT SHOWN.

** SELECT AS REQUIRED.

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

FIGURE 2

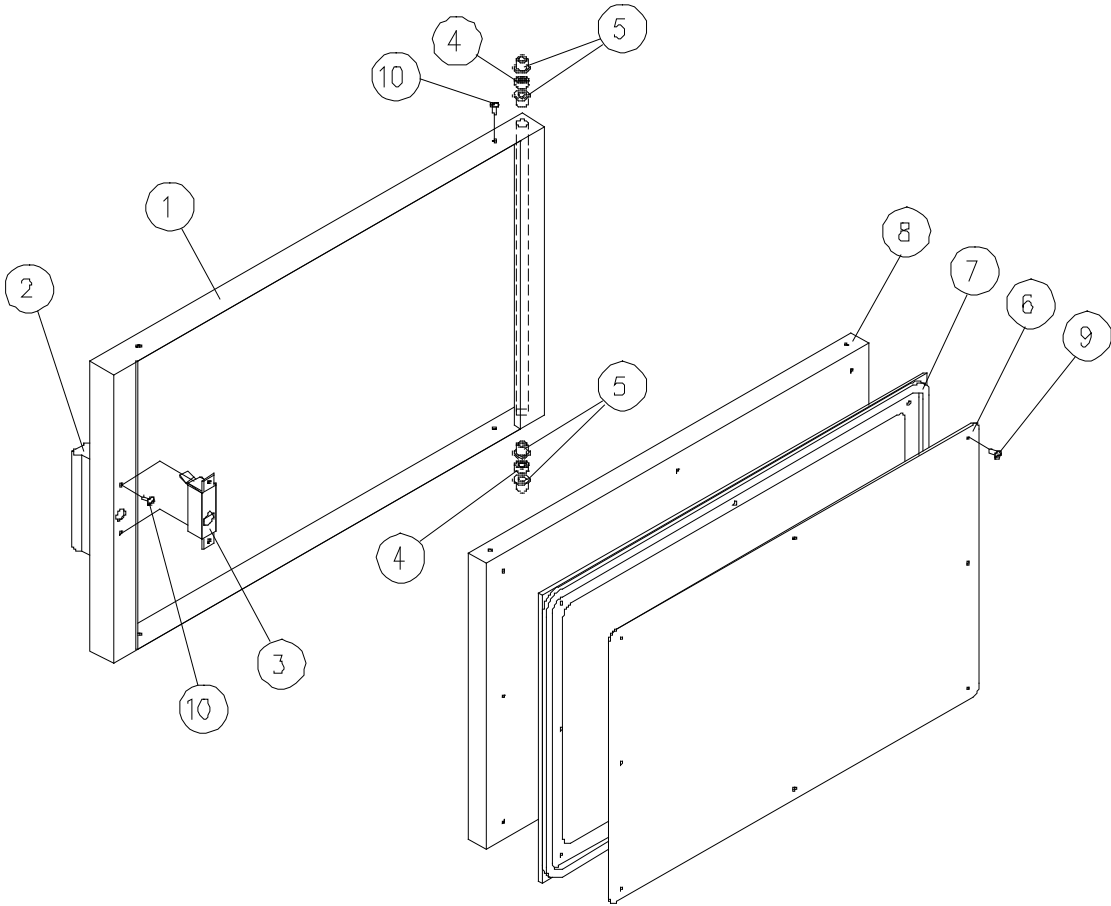


PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

<u>ITEM</u>	<u>Part #</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
1	40293	Door Frame	1
2	41675	Door Handle Assembly (3903)	1
*	42258	Decal	1
3	41679	Latch Assembly (3900)	1
4	40712	Spacer	2
	40713	Spacer, Lower Door	2
5	40711	Door Bushing	4
6	41662	Gasket Plate	1
7	41655	Gasket	1
8	41669	Door Panel	1
9	41875	Screw 10 - 32 x ½"	12
10	40076	Screw 10 - 32 x ½"	6

* NOT SHOWN.

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

FIGURE 3

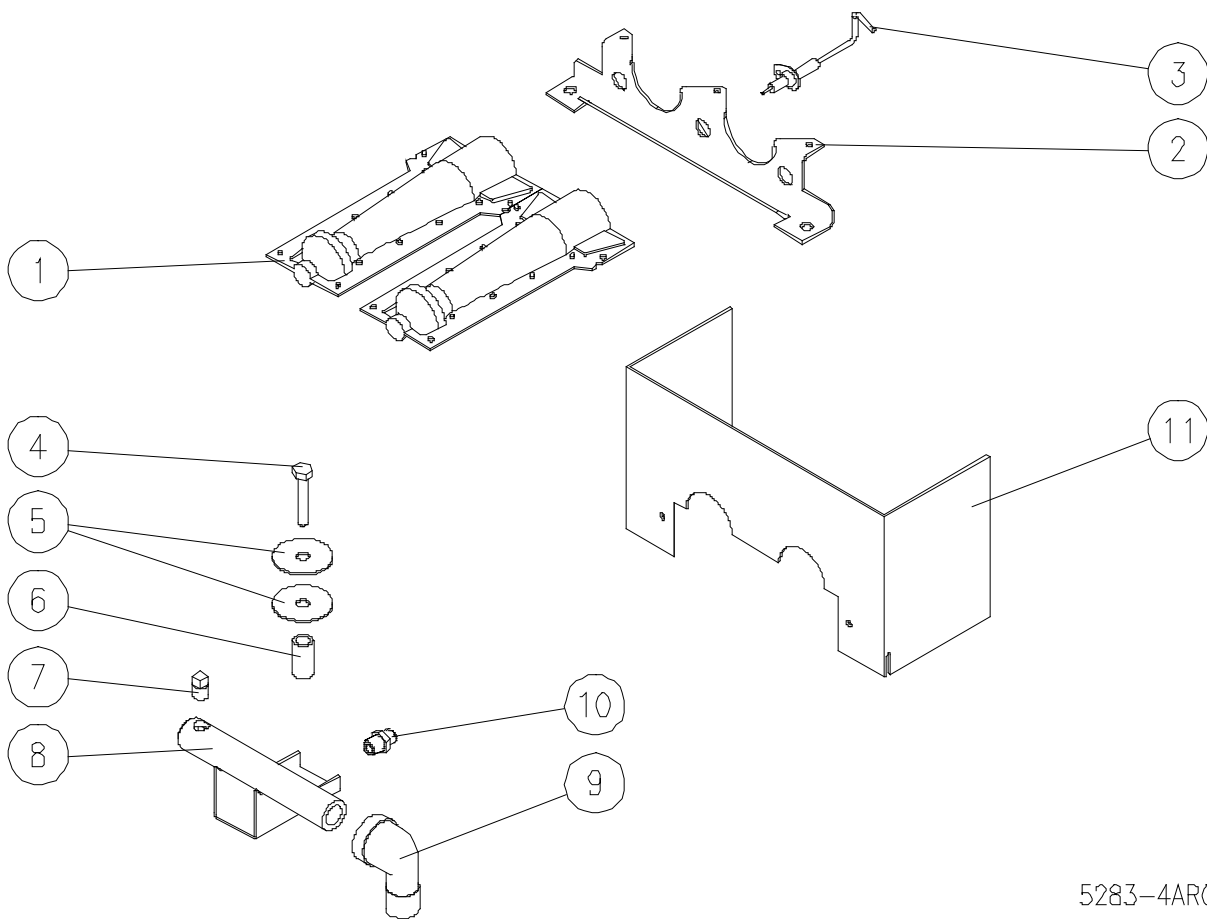

5283-4AR0

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH


BURNER PARTS, NATURAL GAS ONLY

<u>ITEM</u>	<u>Part #</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
1	41061	Burner Assembly	4
2	40074	Burner Mounting Bracket	2
3	41234	Spark Electrode	2
4	43440	Hex Cap Screw 1/4" - 20 x 1-1/2"	2
5	40270	Fender Washer 1/4"	4
6	41056	Burner Support	2
7	40298	Square Head Pipe Plug 1/8" MPT	2
8	41230	Manifold Assembly	2
9	41790	Street Elbow 1/2" - 90°	2
10	40384	Orifice, Natural, #30	4
11	41081	Burner Shield	2

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

PROPANE ONLY

FIGURE 4

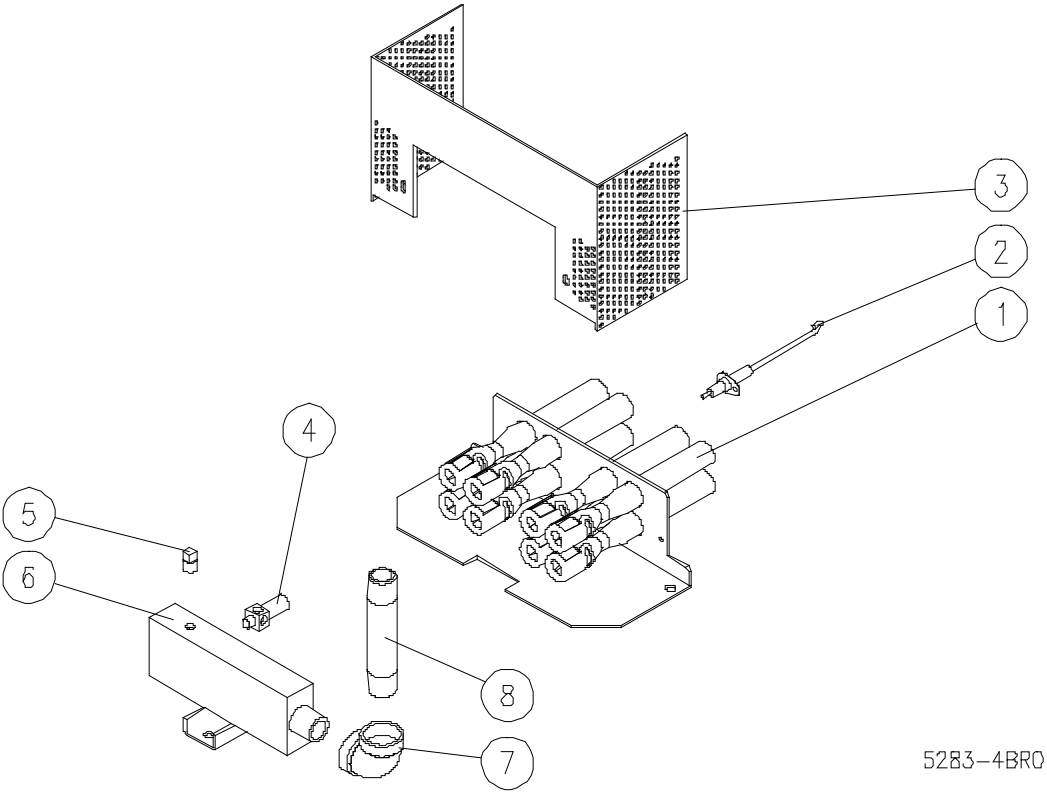

5283-4BRO


PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

BURNER PARTS, PROPANE ONLY

<u>ITEM</u>	<u>Part #</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
1	42885	Burner Assembly incl. Bracket	2
2	42447	Spark Electrode	2
3	42833	Burner Shield	2
4	42735	Jet Orifice, Propane, #61	16
5	40298	Square Head Pipe Plug 1/8" MPT	2
6	42884	Manifold Assembly	2
7	41788	Elbow, 1/2" - 90°	2
8	43441	Nipple, 1/2" x 4"	2

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

FIGURE 5

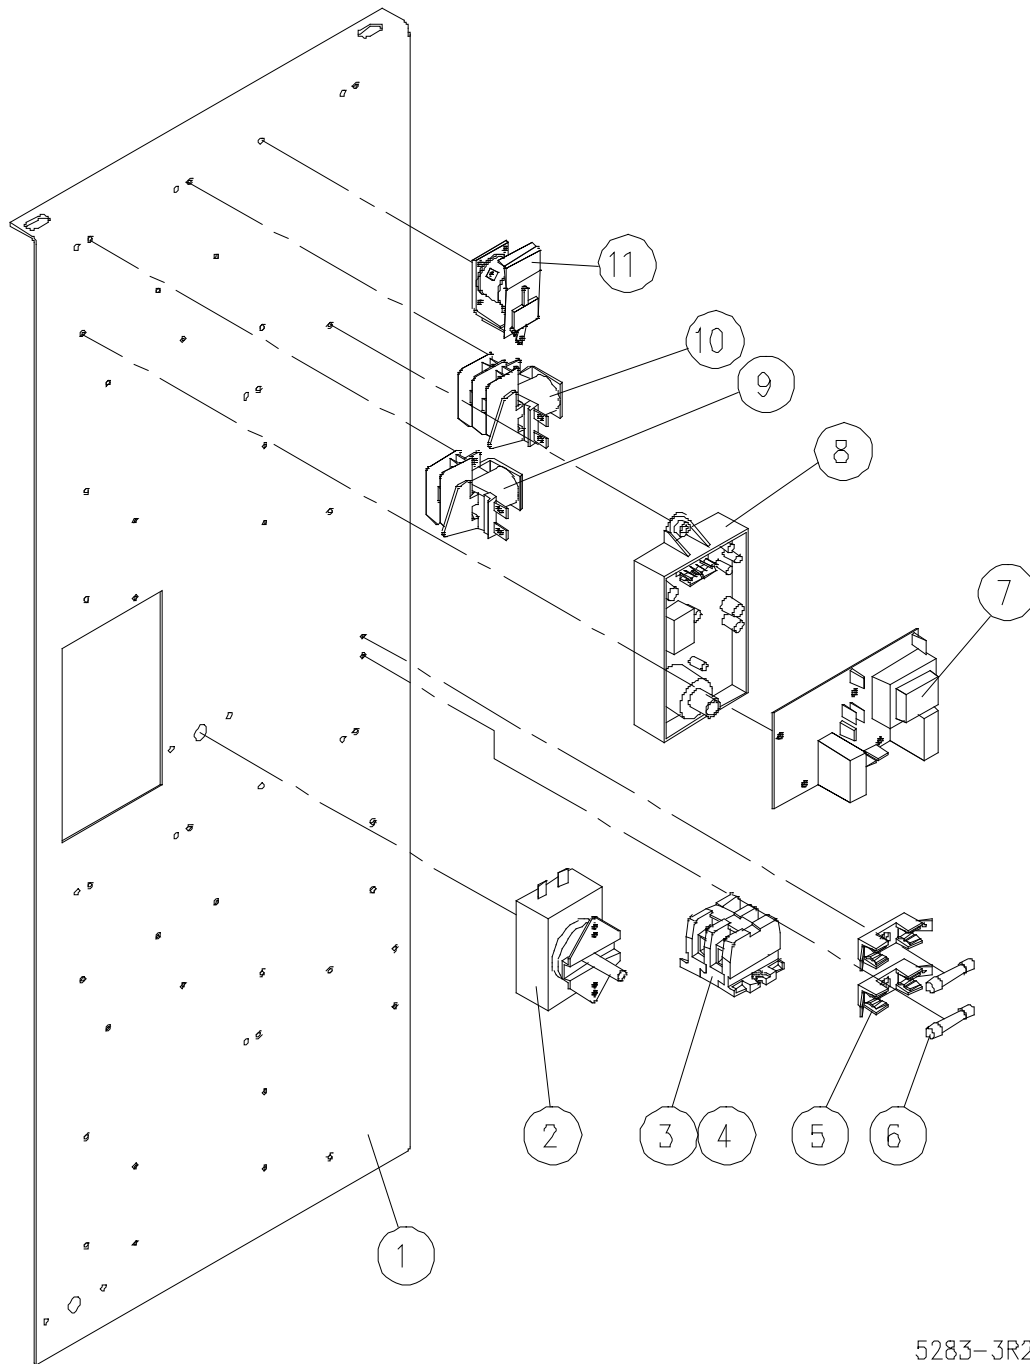

5283-3R2

PARTS LIST, PRESSURELESS COOKER, MODEL SC-16GH

<u>ITEM</u>		<u>Part #</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
	1	42887	Component Mounting Board	1
	2	41887	Operating Thermostat	2
	3	40708	Terminal Block	2
	4	40707	End Section	1
**	5	41844	Fuse Holder, 120V Supply	2
		41844	Fuse Holder, 208V - 240V Supply	4
**	6	41860	Fuse, 2 Amp., 120V Supply	2
		41859	Fuse, 1 Amp., 208V - 240V Supply	4
**	7	42452	Level Control Board, 10K OHM	2
*		41063	Level Control Board, 1 M OHM, Optional	4
	8	41093	Ignition Module	2
	9	42093	Relay, 120V, Double Pole	2
	10	42095	Relay, 120V, Single Pole	4
	11	40484	Buzzer	2
* **	12	42353	Transformer, 208V - 240V/120V	2

* NOT SHOWN.

** SELECT AS REQUIRED.