

NOTE: HANDY BOX ITEM # 18 IS MOUNTED ON OUTSIDE OF HSG. FOR CANDIAN MIXER - ONLY

NOTE: USE ONE BOWL GUARD SWITCH ON MODELS - TYPE "B"
NOTE 6 - SEE M-3-74414 FOR BOWL GUARD WIRING

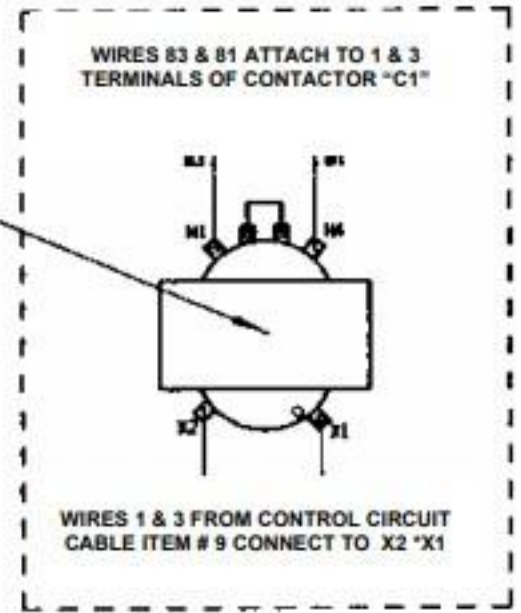
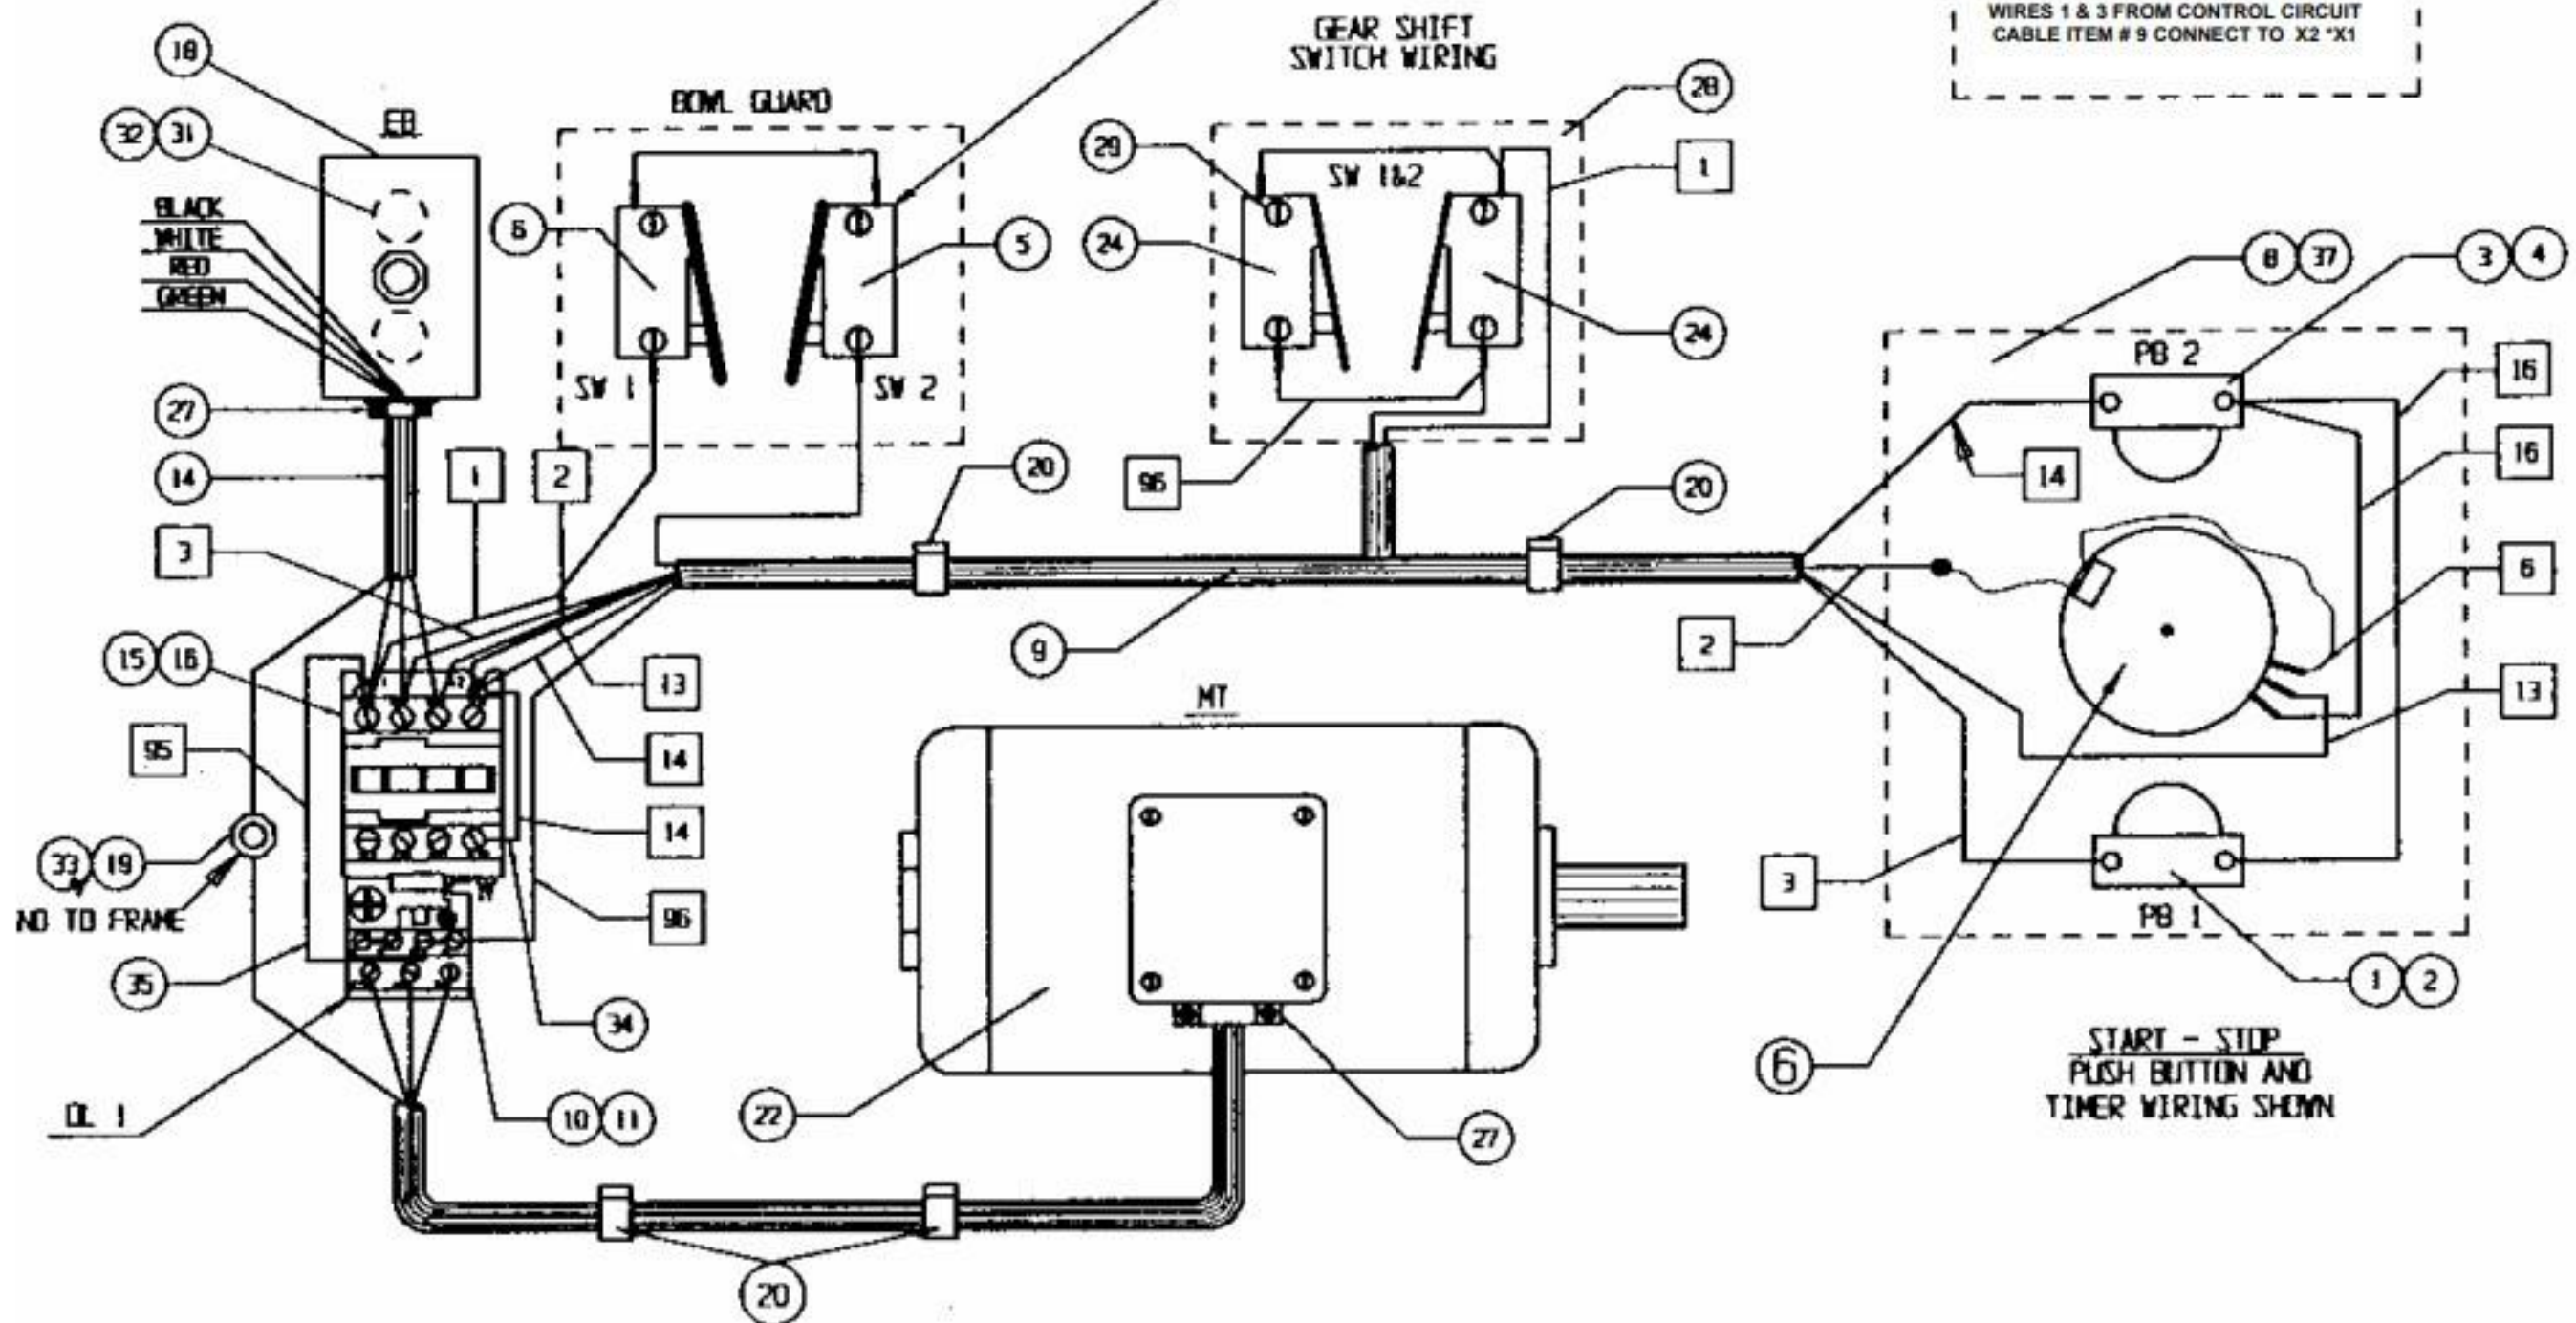


FIGURE 2

MOD. 60 & 80 - FOOD MIXER WIRING ASSEMBLY. FOR 208-240/440-480 VOLT, THREE PHASE. 60HZ.
NOTE: REFER TO FIG. 2- FOR WIRING DIAGRAM & SHOP NOTE 4&5, ALSO SEE TIMER NOTE.

NOTE: HANDY BOX ITEM # 18 IS MOUNTED ON OUTSIDE,
OF HSG. FOR CANDIAN MIXER - ONLY

NOTE: USE ONE BOWL GUARD SWITCH ON MODELS - TYPE "B"
NOTE 6 - SEE M-3-74414 FOR BOWL GUARD WIRING

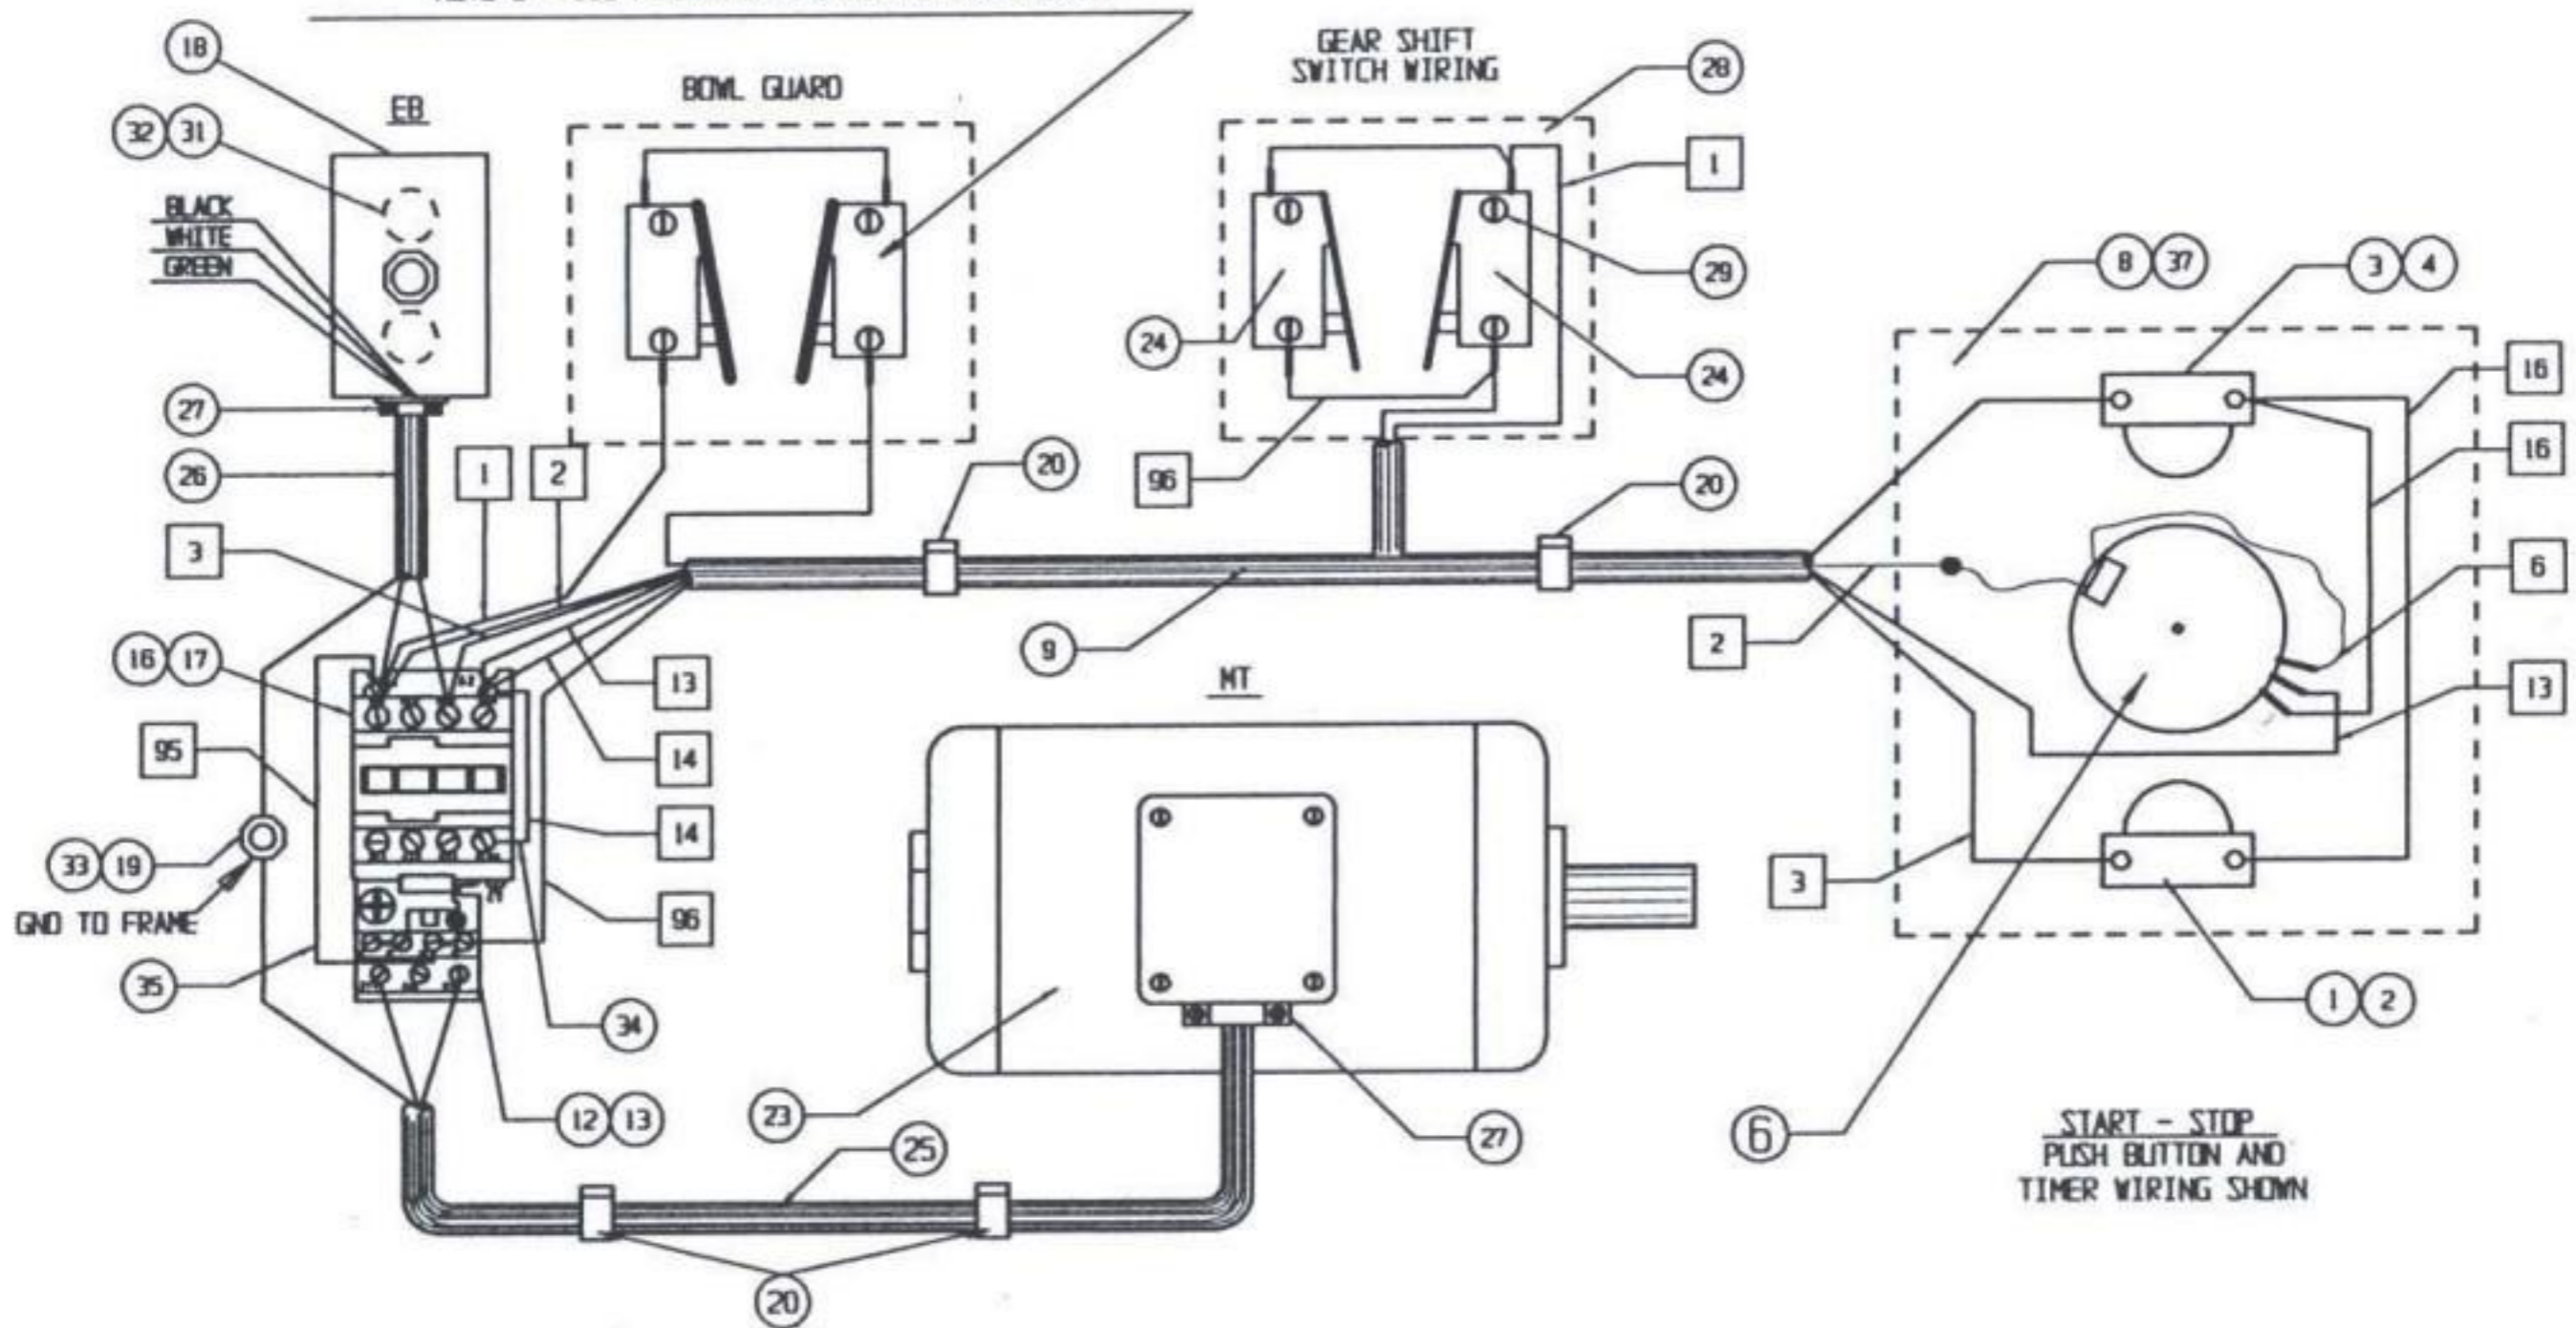


FIGURE 4

MOD. 60 & 80 - FOOD MIXER WIRING ASSEMBLY. FOR 115-230 VOLT, SINGLE PHASE. 60HZ.
NOTE: REFER TO FIG. 4- FOR WIRING DIAGRAM. ALSO SEE TIMER NOTE.