



Cecilware®

Operator Manual

Electric Short Order Stove

EL24SH



Model: EL24SH

Table of Contents

Safety Information	2	Cleaning	3
Unpacking	3	Parts List	4
Installation	3	Wiring Diagram	4

Thank you for purchasing this quality Stove. For your safety and the safety of others, read all warnings and the operator's manual before installing or using the product. Properly instruct all operators. Keep training records. For future reference, record serial number here:

Grindmaster-Cecilware

4003 Collins Lane, Louisville, KY 40245 USA
Phone: 502.425.4776 Toll Free: 800.695.4500
Fax: 502.425.4664
Web: gmcw.com Email: info@gmcw.com

Grindmaster-Cecilware provides the industry's BEST warranty. Visit gmcw.com for warranty terms and conditions.



**Grindmaster
Cecilware**

Safety Information

Important Safety Information



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

For your safety and the safety of others, read all warnings and the operator's manual before installing or using the product.

DANGER: This term warns the user of imminent hazard that will result in serious injury or death.

WARNING: This term refers to a potential hazard or unsafe practice, which could result in serious injury or death.

CAUTION: This term refers to a potential hazard or unsafe practice, which could result in minor or moderate injury.

NOTICE: This term refers to information that needs special attention or must be fully understood.

⚠ WARNING

- Do not deform power cord.
- Follow national and local electrical codes.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Use only on a dedicated circuit load that is properly protected and capable of the rated load. Do not use extension cords, as this could result in electrical shock, overheating, and fire.
- Risk of electrical shock. Disconnect power before servicing or cleaning unit. Contact Grindmaster-Cecilware Technical Service for service assistance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents, or similarly qualified persons in order to avoid a hazard.
- Due to the heat a stove may produce, it must be placed with at least 1 inch clearance from all surfaces at side and rear.

FAILURE TO COMPLY TO THE ABOVE RISKS PERSONAL INJURY, SHOCK HAZARD, FIRE, OR DAMAGE TO EQUIPMENT.

⚠ CAUTION

- Read and understand the operating instructions in this manual thoroughly. Only allow properly trained persons to operate this machine.
- Stay alert at all times during operation.
- Operate with care. Surfaces will get very hot and may cause serious burns.

NOTICE

- Keep operating area clean.

Unpacking

Carefully lift unit out of shipping container, and inspect immediately for shipping damage. Your Stove was shipped in a carton designed to give it maximum protection. It was thoroughly inspected before leaving the factory. File any claims for shipping damage or irregularities directly with the carrier.

Installation

▲ WARNING: Electrical shock hazard. This is high voltage equipment. Make sure main disconnect is off before connecting stove.

Component Assembly

NOTICE Unit must only be installed and operated with legs provided by manufacturer.

Legs are shipped with unit in a plastic bag. Screw in the legs hand tight. Level unit after final installation. Height may be adjusted by turning the feet up or down as desired.

Clearances

Distance required between combustible and non-combustible material: 1" rear and 1" sides.

Electrical Installation

FOR QUALIFIED SERVICE PERSONS ONLY

Before connecting the stove read the electrical specification label located on the back of unit. Verify that the power supply available matches the information on this label.

Preparing Stove

Before using stove for the first time, heat elements for three to five minutes to burn off protective coating. This also hardens the surface of the solid heating elements.

Cleaning

▲ CAUTION: To avoid burns, allow stove to cool before cleaning.

Solid heating elements are easily cleaned with a damp cloth after each use. Clean dirt and spills with powder cleanser and a non-scratch scrub pad. Wipe off cleanser with a damp cloth. After cleaning, rub a few drops of cooking oil onto the surface of the elements, and then switch on the elements for a few minutes to re-harden. Stainless steel exterior surfaces can be cleaned with powder cleanser and a non-scratch scrub pad, rubbing with the grain of the stainless steel. Rinse and wipe dry, and then polish with a soft cloth.

▲ CAUTION: Disconnect power from stove before attempting electrical repairs.

If you need help, call Grindmaster-Cecilware Technical Service Department, (502) 425-4776 or (800) 695-4500 (USA & Canada only) (Monday through Friday 8 AM - 6 PM EST). Please have the model and serial number ready so that accurate information can be given.


Prior authorization must be obtained from Grindmaster- Cecilware for all warranty claims.

Grindmaster-Cecilware provides the industry's BEST warranty. Visit our website at GMCW.com for warranty terms and conditions.

Parts List

PART #	DESCRIPTION
B0000AL	TERMINAL BLOCK
B007A	STRAIN RELIEF
C097A	LINE CORD (SINGLE PHASE)
G218A	SOLID HEATING ELEMENT
L313A	INFINITE SWITCH
M060A	INFINITE SWITCH KNOB
M172S	LEGS (SET OF 4)
R361A	BOTTOM COVER
C164A	PILOT LIGHT

Wiring Diagram

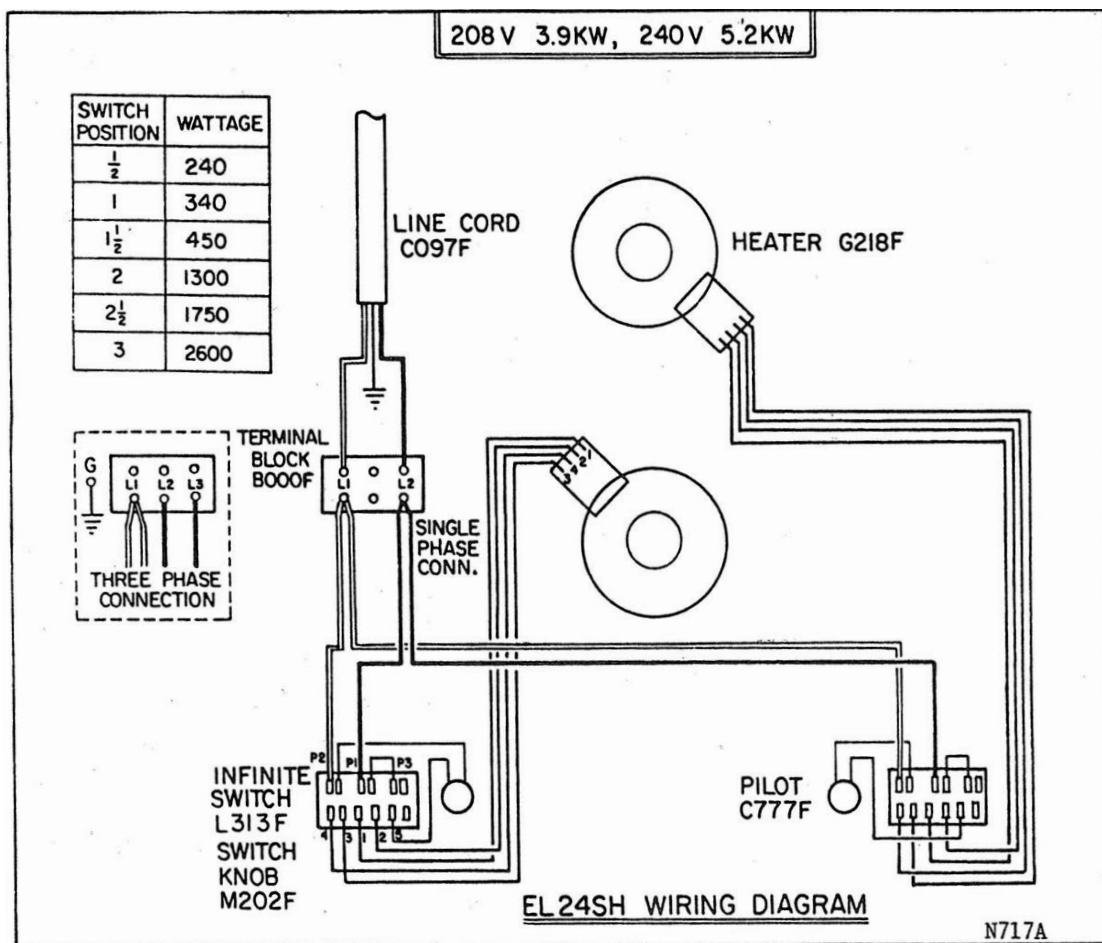

Grindmaster-Cecilware

4003 Collins Lane, Louisville, KY 40245 USA
 Phone: 502.425.4776 Toll Free: 800.695.4500
 Fax: 502.425.4664
 Web: gmcw.com Email: info@gmcw.com

©2016 Grindmaster-Cecilware
 Printed in USA

Grindmaster-Cecilware provides the industry's BEST warranty. Visit gmcw.com for warranty terms and conditions.



**Grindmaster
Cecilware**

0516 Form # CW-337-01
 Part # 390-00084