

## OPERATING and MAINTENANCE INSTRUCTIONS

### Models: HJ-531-10-240 and HJ-531-13-180

### JETSTREAM HEATED DISH DOLLY

#### ELECTRICAL SPECIFICATIONS:

MODEL NO.	Volts	Watts	Amps	Hertz	Phase	Service
HJ-531-10-240 HJ-531-13-180	120	1000	8.4	60	1	AC
HJ-531-10-240-240 HJ-531-13-180-240	240	1000	4.2	60	1	AC

#### HOW TO INSTALL UNIT:

1. Plug cord into receptacle in back of unit.
2. Turn clockwise to lock.
3. Plug other end into 15 Amp wall outlet.

#### HOW TO START UNIT:


1. Flip switch ON. Yellow light will come on.
2. Turn thermostat to #7 (150° F to 160° F / 66° C to 71° C) which will warm the plates.
3. **Hint:** Dial has a range of #1 to #10 (60° F to 250° F / 16° C to 121° C).
4. Pre-heat dolly for 30 minutes.
5. Add plates.

#### HOW TO TURN UNIT OFF:

Flip switch OFF.



#### MAINTENANCE:

	<b>WARNING</b>	
RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN		
<p>WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,</p> <p>DO NOT REMOVE COVER (OR BACK)</p> <p>NO USER-SERVICEABLE PARTS INSIDE</p> <p>REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY</p>		

#### REPLACEMENT PARTS

Description	120 Volt	240 Volt
Blower Kit	0769-180-K	0769-182-K
Cord Set	0810-031-1	0810-032-01
Heater Assembly	0811-074	0811-074-01
Receptacle	0713-011	0713-012
Red Light	0766-047	0766-046
Switch	0808-011	0808-020
Thermostat Kit	0848-062-K	0848-062-K
Yellow Light	0766-048	0766-045
	<b>Right Hand</b>	<b>Left Hand</b>
Door, HJ-531-10-240	5686-011-K	5686-013-K
Door, HJ-531-13-180	5686-012-K	5686-014-K
Door Latch, complete	1246-015-K	1246-015-K
Hinge	0519-018-K	0519-019-K

Heated Dish Dolly	<b>FL-0508</b>
Rev. 22 (10/13)	Page 2 of 2

## OPERATING and MAINTENANCE INSTRUCTIONS

### Models: HJ-531-10-240 and HJ-531-13-180

## JETSTREAM HEATED DISH DOLLY

### TROUBLE-SHOOTING:

Failure	Cause
1. Yellow light not on.	1a. Cord not plugged into dolly or wall outlet. 1b. Circuit breaker/fuse to wall outlet blown. 1c. Switch is off.
2. Unit does not get hot.	2a. Thermostat set too low.
3. Unit gets too hot or won't shut off.	3a. Defective electrical parts; unplug cord from wall outlet.

*If the cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.*

## ! WARNING

### BEFORE CLEANING CABINET:

1. Remove Power Cord from cabinet.
2. Do NOT hose cabinet with water.
3. Do NOT get water on controls.
4. Do NOT use abrasives or harsh chemicals.

### Cleaning Hints:

1. Wipe up spills as soon as possible.
2. Clean regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.

	SOIL	CLEANER	METHOD
<b>Dolly</b>	DIRT	Mild detergent* and hot water, or mild abrasive cleaner.	1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
		Steam (no strong alkaline additive)	1. Rinse after steam cleaning. 2. Wipe dry.
Inside and Outside <i>(Aluminum)</i>	FINGERPRINTS, GREASE OIL	Detergent* and hot water.	1. Wipe with soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
		Mild abrasive cleaner. Oily or waxy cleaner.	Apply with soft, clean cloth.
	WATER SPOTS	Mild abrasive cleaner.	Wipe with damp cloth.

\* Mild detergents include soaps and non-abrasive cleaners

#### LEGEND

SW	SWITCH (SPST)
BM	BLOWER MOTOR
TH	THERMOSTAT
H	HEATER
A	AMBER PILOT LIGHT
R	RED PILOT LIGHT
L5-15R	RECEPTACLE, 110V/15A
L6-15R	RECEPTACLE, 220V/15A

#### ELECTRICAL SPEC

120/240V 1000W  
 1 PHASE 60 HZ  
 AC SERVICE

