

OPERATING and MAINTENANCE INSTRUCTIONS

Models: HJ-531-10-240 and HJ-531-13-180

JETSTREAM HEATED DISH DOLLY

ELECTRICAL SPECIFICATIONS:

| MODEL NO. | Volts | Watts | Amps | Hertz | Phase | Service |
|--|-------|-------|------|-------|-------|---------|
| HJ-531-10-240 HJ-531-13-180 | 120 | 1000 | 8.4 | 60 | 1 | AC |
| HJ-531-10-240-240 HJ-531-13-180-240 | 240 | 1000 | 4.2 | 60 | 1 | AC |

HOW TO INSTALL UNIT:

1. Plug cord into receptacle in back of unit.
2. Turn clockwise to lock.
3. Plug other end into 15 Amp wall outlet.

HOW TO START UNIT:


1. Flip switch ON. Yellow light will come on.
2. Turn thermostat to #7 (150° F to 160° F / 66° C to 71° C) which will warm the plates.
3. **Hint:** Dial has a range of #1 to #10 (60° F to 250° F / 16° C to 121° C).
4. Pre-heat dolly for 30 minutes.
5. Add plates.

HOW TO TURN UNIT OFF:

Flip switch OFF.



MAINTENANCE:

| | | |
|--|----------------|--|
|  | WARNING |  |
| RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN | | |
| WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY | | |

REPLACEMENT PARTS

| Description | 120 Volt | 240 Volt |
|----------------------|-------------------|------------------|
| Blower Kit | 0769-180-K | 0769-182-K |
| Cord Set | 0810-031-1 | 0810-032-01 |
| Heater Assembly | 0811-074 | 0811-074-01 |
| Receptacle | 0713-011 | 0713-012 |
| Red Light | 0766-047 | 0766-046 |
| Switch | 0808-011 | 0808-020 |
| Thermostat Kit | 0848-062-K | 0848-062-K |
| Yellow Light | 0766-048 | 0766-045 |
| | Right Hand | Left Hand |
| Door, HJ-531-10-240 | 5686-011-K | 5686-013-K |
| Door, HJ-531-13-180 | 5686-012-K | 5686-014-K |
| Door Latch, complete | 1246-015-K | 1246-015-K |
| Hinge | 0519-018-K | 0519-019-K |

| | |
|-------------------|----------------|
| Heated Dish Dolly | FL-0508 |
| Rev. 22 (10/13) | Page 2 of 2 |

OPERATING and MAINTENANCE INSTRUCTIONS

Models: HJ-531-10-240 and HJ-531-13-180

JETSTREAM HEATED DISH DOLLY

TROUBLE-SHOOTING:

| Failure | Cause |
|---|---|
| 1. Yellow light not on. | 1a. Cord not plugged into dolly or wall outlet. 1b. Circuit breaker/fuse to wall outlet blown. 1c. Switch is off. |
| 2. Unit does not get hot. | 2a. Thermostat set too low. |
| 3. Unit gets too hot or won't shut off. | 3a. Defective electrical parts; unplug cord from wall outlet. |

If the cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

! WARNING

BEFORE CLEANING CABINET:

1. Remove Power Cord from cabinet.
2. Do NOT hose cabinet with water.
3. Do NOT get water on controls.
4. Do NOT use abrasives or harsh chemicals.

Cleaning Hints:

1. Wipe up spills as soon as possible.
2. Clean regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.

| | SOIL | CLEANER | METHOD |
|---|-----------------------------|--|--|
| Dolly | DIRT | Mild detergent* and hot water, or mild abrasive cleaner. | 1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry. |
| | | Steam (no strong alkaline additive) | 1. Rinse after steam cleaning. 2. Wipe dry. |
| Inside and Outside <i>(Aluminum)</i> | FINGERPRINTS, GREASE OIL | Detergent* and hot water. | 1. Wipe with soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry. |
| | | Mild abrasive cleaner. Oily or waxy cleaner. | Apply with soft, clean cloth. |
| | WATER SPOTS | Mild abrasive cleaner. | Wipe with damp cloth. |

* Mild detergents include soaps and non-abrasive cleaners

LEGEND

| | |
|--------|----------------------|
| SW | SWITCH (SPST) |
| BM | BLOWER MOTOR |
| TH | THERMOSTAT |
| H | HEATER |
| A | AMBER PILOT LIGHT |
| R | RED PILOT LIGHT |
| L5-15R | RECEPTACLE, 110V/15A |
| L6-15R | RECEPTACLE, 220V/15A |

ELECTRICAL SPEC

120/240V 1000W
 1 PHASE 60 HZ
 AC SERVICE

