



IMPORTANT FOR FUTURE REFERENCE

Please complete this information and retain this manual for the life of the equipment:

Model #: _____

Serial #: _____

 
Date Purchased: _____

PARTS LIST

Two Compartment Steamer Tops

CX-2 CX-10

Used on : DCX-2 ECX-2 GCX-2 SCX-2
DCX-10 ECX-10 GCX-10 SCX-10

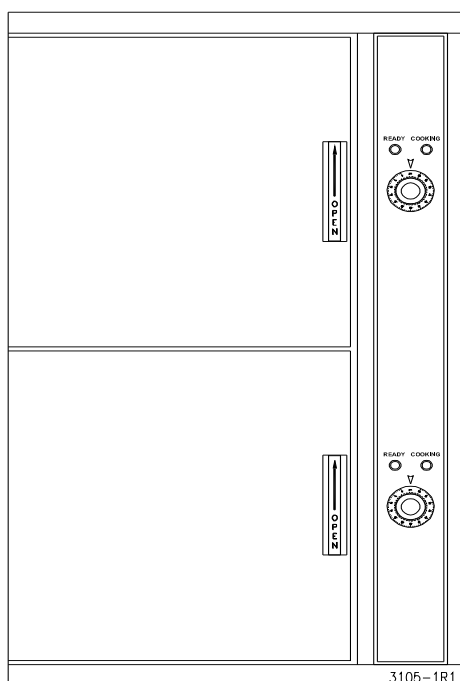

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

CROWN FOOD SERVICE EQUIPMENT



A Middleby Company

70 Oakdale Road, Downsview (Toronto) Ontario, Canada, M3N 1V9

 
Telephone: 919-762-1000

www.crownsteamgroup.com

Printed in Canada



PARTS LIST, PRESSURELESS COOKER 6 PAN & 10 PAN UNITS, MODELS CX-2, CX-10

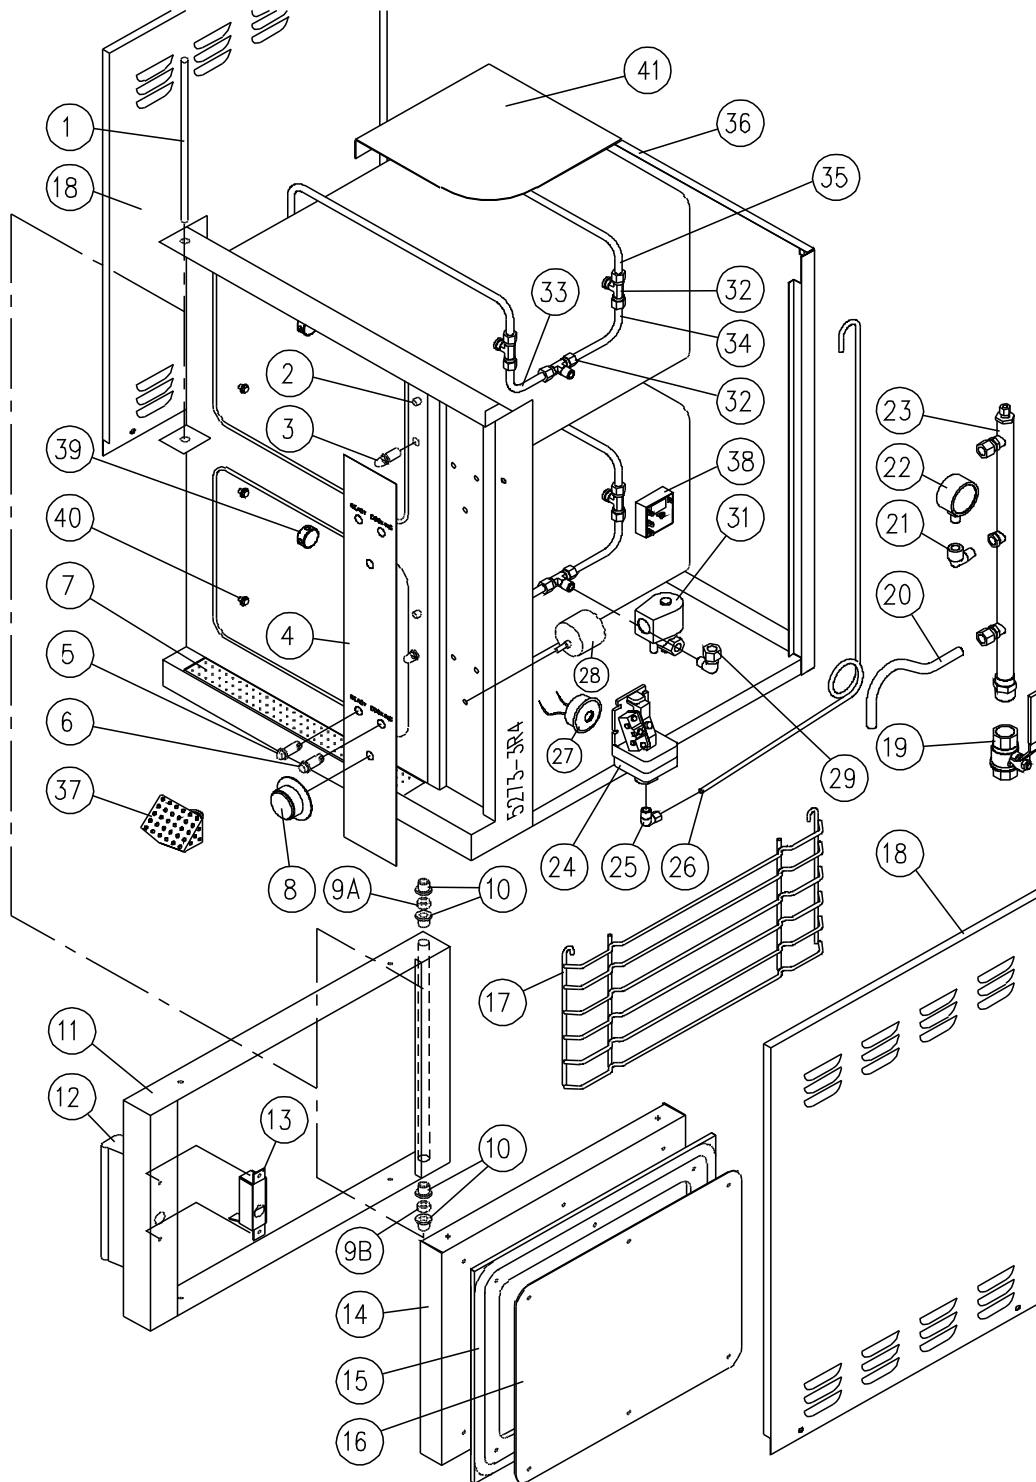

PARTS LIST, PRESSURELESS COOKER 6 PAN & 10 PAN UNITS, MODELS CX-2, CX-10

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>	
			<u>CX-2</u>	<u>CX-10</u>
1	8-5101	Hinge Rod	1	
	8-5101-5	Hinge Rod		1
2	9-3213	Door Switch	2	2
	9-3336	Actuator Pin Complete With Clip	2	2
3	8-5021	Striker	2	2
	8-5022	Spacer	2	2
	S05N-12	Lock Washer	2	2
	1-89S0	Nut, 1/2-20 UNF, Stainless Steel	2	2
4	7582-1	Control Decal	1	
	7481-1	Control Decal		1
5	4-PL04	Pilot Light, Green	2	2
6	4-PL07	Pilot Light, Red	2	2
7	8-5023	Perforated Trough	1	1
**	8	4104-1	2	2
	4103-1	Dial, 60 Minutes, 50 Hz	2	2
	4105-1	Dial, 120 Minutes, 60 Hz	2	2
9A	5716-1	Spacer - Upper	2	2
9B	5717-1	Spacer - Lower	2	2
10	8-5078	Bushing	8	8
11	8-5076-9	Door Assembly	2	
	8-5076-8	Door Assembly		2
12	3903-2	Handle Assembly	2	2
*	4090-2	Handle	1	1
*	4089-2	Handle Plate	1	1
*	M68S-1420-134	Socket Screw, 1/4 - 20 x 1-3/4	2	2
*	M68S-1420-34	Socket Screw, 1/4 - 20 x 3/4	1	1
*	4088-1	Spacer	2	2

PARTS LIST, PRESSURELESS COOKER 6 PAN & 10 PAN UNITS, MODELS CX-2, CX-10

<u>ITEM</u>		<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>	
				<u>CX-2</u>	<u>CX-10</u>
*	12	S05N-14	Lock Washer, 1/4	2	2
*		1-59S0	Nut, 1/4 - 20	2	2
*		3646-1	Decal	2	2
	13	8-5068-9	Latch Assembly	2	2
	14	8-5065-9	Door Panel	2	
		8-5065-8	Door Panel		2
	15	8-5063-9	Door Gasket	2	
		8-5063-8	Door Gasket		2
	16	8-5064-9	Door Gasket Plate	2	
		8-5064-8	Door Gasket Plate		2
		9-1011-1	Screws	12	16
	17	2681-1	Pan Racks	4	
		2681-3	Pan Racks		4
	18	6765-5	Side Panel	2	
		6765-3	Side Panel		2
		M33S-1032-12	Screws	2	2
	19	3-BVE0	Steam Control Valve	1	1
	20	9-3029	Steam Supply Tube	2	
		9-3029-1	Steam Supply Tube		2
	21	3-H116B	Elbow	1	1
	22	3-BM15	Pressure Gauge	1	1
	23	9-3219	Steam Manifold	1	
	23	9-3219-1	Steam Manifold		1
	24	9411-1	Pressure Switch Assembly	1	1
	25	3-694B	Elbow, 1/4C x 1/4 MPT	1	1
	26	9-3220	Steam Tube, 1/4 Copper	1	
		9-3220-1	Steam Tube, 1/4 Copper		1
	27	3821-1	Buzzer	1	1

PARTS LIST, PRESSURELESS COOKER 6 PAN & 10 PAN UNITS, MODELS CX-2, CX-10

<u>ITEM</u>		<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>	
				<u>CX-2</u>	<u>CX-10</u>
**	28	4-T210	Timer, 60 Minutes	2	2
		9386-2	Timer, 120 Minutes	2	2
*		9109-1	Rotary Shaft Seal	2	2
	29	3-698B	Elbow, 1/2 C x 1/4 MPT 2	2	2
	30	3-TS01	Thermo Switch (Optional)	2	2
	31	9306-1	Steam Solenoid Valve	2	2
	32	3-726B	Tee, 3/8 C x 1/4 MPT	6	6
	33	9-3221	Steam Tube - Front	2	2
	34	9-3222	Steam Tube - Rear	2	2
	35	9-3295	Steam Tube - Crossover	4	
		4971-1	Steam Tube - Crossover		4
	36	8391-1	Back Panel		1
		8391-2	Back Panel	1	
	37	8-5081	Compartment Strainer	2	2
	38	9229-1	Time Delay Relay	1	1
	39	3502-2	Steam Diverter, Replacement Kit	8	8
	40	4721-1	Hanger Pin Assembly	16	16
	41	7930-1	Top Cover	1	1
*	42	9-3296	Compartment Drain Hose	2	2
*	43	2718-1	Component Mounting Panel	1	1

* NOT SHOWN.

** SELECT AS REQUIRED.