



Your Solutions Partner


Tri-Channel Digital Thermostat Adjustment

Instruction Sheet

Digital Thermostat Features

- Displays approximate product temperature
- Easy to read LED display
- Easy to adjust
- Reduces energy consumption
- Reduces frost on rails
- Easy to service
- Lower annual operating cost

THERMOSTAT ADJUSTMENT PROCEDURE

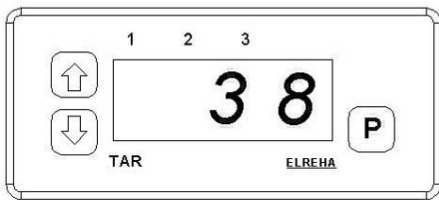

ELREHA Thermostat Adjustment:

- Press up or down arrow.
- The set point is shown on the display and starts blinking.
- Press up or down arrow to change set point.
- After 3 seconds the display stops blinking and returns to actual temperature.

Changing Display form °F - °C

- Switch controller off.
- Push and hold "P".
- Switch controller on.
- Hold "P" until "17_" appears.
- Press the up or down arrow key to Select 17F or 17C for °F or °C Display.

After that the display shows "def", "___" and the selected operation mode.



DIXELL Thermostat Adjustment:

- Hold the SET key for more than 2 seconds until °C or °F starts blinking.
- Press up or down arrow to change set point.
- Press SET key to save changes or wait 10 seconds.

Contact Duke Technical Service with questions: 1-800-735-3853



Note: The new digital temperature display does not take the place of taking food temperatures manually. Please refer to the Subway Operations Manual for procedures and guidelines.

CAUTION: Please read these instructions completely before attempting to install, operate or service this equipment.



Duke Manufacturing Co.
2305 N. Broadway
St. Louis, MO 63102

*This manual is Copyright © 2021 Duke Manufacturing Co.
All rights reserved. Reproduction without written
permission is prohibited. Duke is a registered
trademark of the Duke Manufacturing Co.*

Phone: 314-231-1130
Toll Free: 1-800-735-3853
Fax: 314-231-5074
www.dukemfg.com
P/N 221074
REV C 02/15/2021