

1814 Computer Operation Manual

Frymaster[®]



Frymaster, a member of the Commercial Food Equipment Service Association, recommends using CFESA Certified Technicians.

www.frymaster.com

24-Hour Service Hotline
1-800-551-8633

03/2023



NOTICE TO OWNERS OF UNITS EQUIPPED WITH COMPUTERS

U.S.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. While this device is a verified Class A device, it has been shown to meet the Class B limits.

CANADA

This digital apparatus does not exceed the Class A or B limits for radio noise emissions as set out by the ICES-003 standard of the Canadian Department of Communications.

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites de classe A et B prescrites dans la norme NMB-003 édictée par le Ministre des Communications du Canada.

1814 Computer

Overview – Multi-Product Mode (5050)

Lane Keys
Press to initiate cook cycle. PROD appears in left display; press a menu key immediately after pressing the cook key to launch a cook cycle for the chosen product. Lane keys are also used to move through programming steps. Press second key to advance, first (yellow) key to go back.
NOTE: The “B” (blue) key is disabled when setup for two-lane.

Temperature Key
Press once for current temperature, twice for setpoint: 360°F(182°C).


Checkmark Key
With computer off, used to enter and confirm programming modes.

Status Indicator
Displays OFF when fryer is off, dashed lines when fryer is at setpoint. Displays HI, LO and HOT when the fryer is out of temperature range.

Heat LED
LED is illuminated when the fryer is heating.

Button LED's
LED's above buttons are illuminated when the product is cooking; flash to indicate holding time.

ON/OFF

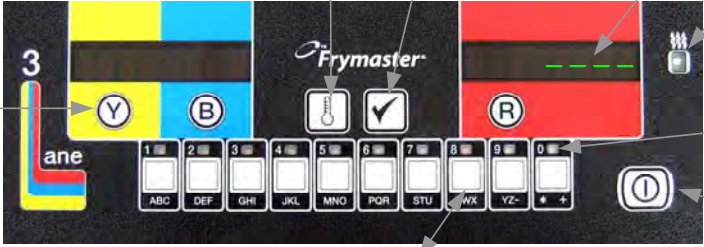

Menu Keys


Press a menu key immediately after pressing a lane key to launch a cook cycle for the desired product. The keys are also used to enter names of products. Each button, when repeatedly pressed, accesses multiple letters or symbols. See example below.

1	2	3	4	5	6	7	8	9	0
ABC	DEF	GHI	JKL	MNO	PQR	STU	VWX	YZ	* blank space + 0

Basic Operation


Turn Fryer ON

- 1: OFF appears in status display when controller is off.
- 2: Press ON/OFF button.
- 3: -LO- appears in status display. If melt cycle is enabled, MLT-CYCL will appear until temperature is over 180°F (82°C).
- 4: Dashed lines appear in the status display when the fryer is at setpoint.

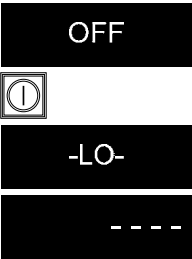

Launch Cook Cycle


1. Press a lane key.
2. PROD appears in the window above the pressed button. (An alarm sounds if a menu key is not pressed in five seconds.)
3. Press the menu key for the desired product.
4. The display changes to the cooktime for the product and then alternates between remaining cooktime and the product name.
5. SHAK is displayed if a shake time was programmed.
6. Shake the basket and press the lane key to silence the alarm.
7. DONE appears at the end of the cook cycle.
8. Press Lane key to eliminate DONE display and silence the alarm.
9. Quality time is indicated by a flashing LED over the menu key. Press the key to display remaining time.
10. LED flashes faster and an alarm sounds at the end of the quality countdown. Press the menu key under the flashing LED to halt the alarm.

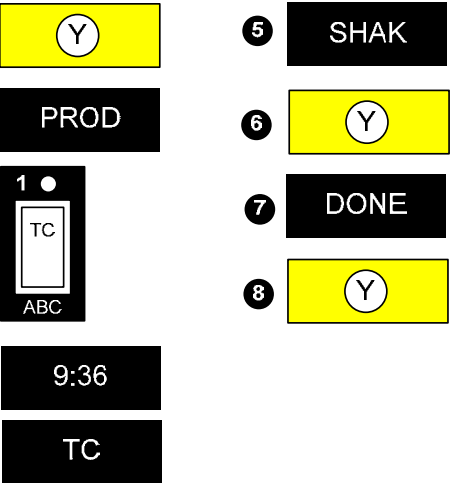

NOTE: To halt a cook cycle, press and hold the lane key under the displayed item for about five seconds.

1814 Computer


Overview – French Fry Mode (5060)

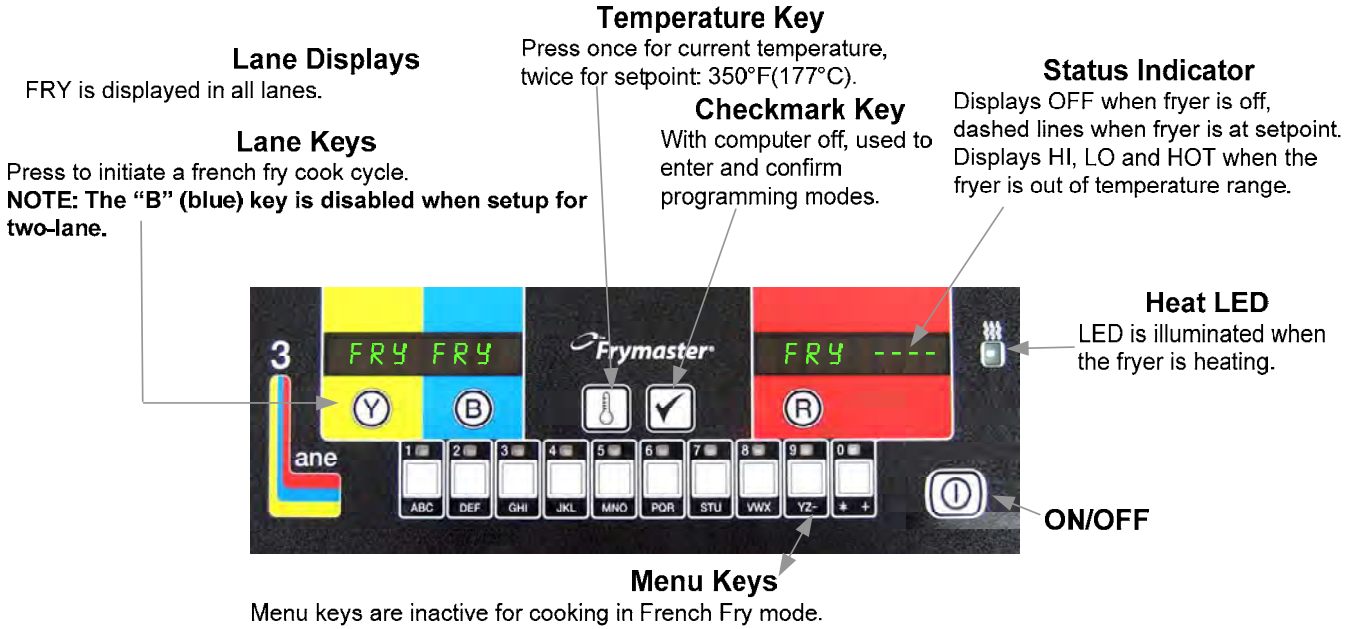

Basic Operation


Turn Fryer ON

- 1: OFF appears in status display when controller is off.
- 2: Press ON/OFF button.
- 3: -LO- appears in status display. If melt cycle is enabled, MLT-CYCL will appear until temperature is over 180°F (82°C).
- 4: Dashed lines appear in the status display when the fryer is at setpoint.

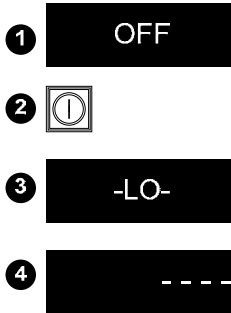

Launch Cook Cycle

- 1: FRY appears in all lanes.
- 2: Press a lane key.
- 3: The display changes to the cooktime for the fries, alternating with FRY.
- 4: SHAK is displayed if a shake time was programmed.
- 5: Shake the basket and press the lane key to silence the alarm.
- 6: DONE appears at the end of the cook cycle.
- 7: Press Lane key to eliminate DONE display.
- 8: Display alternates between FRY and quality countdown.

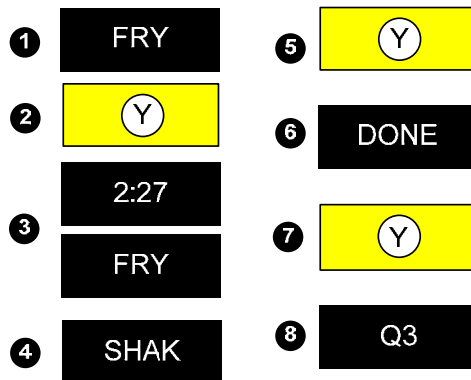

NOTE: To halt a cook cycle, press and hold the lane key under the displayed item for about five seconds.

Programming New Menu Items in Multi Product Computer

Follow these steps to enter a new product in the computer. The actions to be taken are in the right column; the computer displays are shown in the left and middle columns.

Left Display	Right Display	Action
	OFF	Press ✓
CODE		Enter 5050 with numbered keys.
	OFF	Press ✓
CODE		Enter 1650 with numbered keys. Press lane key B (Blue) to advance cursor, Y (yellow) key to go back. (NOTE: Press ✓ if the controller is in any language except English, or the left display will be blank.)
TEND CC	1 YES	Press key to advance to desired position.
Product to be changed or open position	Number and Yes	Press ↓ .
Product name with cursor flashing under first character.	Edit	Enter first letter of new product with numbered key. Press until desired letter appears. Advance cursor left key. Repeat until eight-letter or less name of product is entered. Eliminate characters with 0 key.
New product name	Edit	Press ↓ .
Position number or version of previous name.	Edit	Enter four-letter abbreviated name, which will alternate with the cook time display during cook cycles.
Abbreviated name	Edit	Press ↓ .
Full name		Press ✓.
SHAKE 1	M:00	Press ↓ to toggle between M (manually cancelling alarm) and A (automatically cancelling alarm). Enter time in the cook cycle to shake the basket with the numbered keys.
SHAKE 1	Your settings	Press ✓.
SHAKE 2	M:00	Press ↓ to toggle between M and A. Enter the time in the cook cycle to shake the basket a second time.
SHAKE 2	Your settings	Press ✓.
REMOVE	M:00	Enter cook time in minutes and seconds with numbered keys. Press ↓ to toggle between auto and manually cancelling alarm.
REMOVE	Your settings	Press ✓.
QUAL	M: 00	Enter time product can be held after cooking. Press ↓ to toggle between auto and manually cancelling alarm.
QUAL	Your Settings	Press ✓.
SENS	0	Sens allows the fryer controller to adjust cooking times slightly, ensuring small and large loads cook identically. Setting the number to 0 allows no time adjustment; a setting of 9 produces the most time adjustment. Enter setting with numbered key.
SENS	Your setting	Press ✓.
New Product		If a key assignment is needed: press a menu key. Note: This eliminates any previous link associated with the chosen key. Key not needed: skip to next step
New Product	YES Key Number	Press Ⓟ (power key).

Programming New Menu Items in Multi Product Computer

Assigning Products to Menu Keys

Left Display	Right Display	Action
	OFF	Press ✓.
CODE		Enter 1650 with numbered keys.
Menu items	YES	Press B (Blue) key to advance through menu items.
Desired menu item	YES	Press key to be used to cook product. Note: This eliminates any previous link associated with the chosen key.
Product name	Number YES	Press ① (power key).

Changing Menu Items in Dedicated Computer

Follow these steps to change a product in the computer. The actions to be taken are in the right column; the computer displays are shown in the left and middle columns.

Left Display	Right Display	Action
	OFF	Press ✓
CODE		Enter 5060 with numbered keys.
	OFF	Press ✓
CODE		Enter 1650 with numbered keys. Press lane key B (Blue) to advance cursor, Y (yellow) key to go back.
FRIES	YES	Press ↓.
Product name with cursor flashing under first character.	Edit	Enter first letter of product name with numbered key. Press until desired letter appears. Advance cursor left key. Repeat until eight-letter or less name of product is entered. Eliminate characters with 0 key.
Product name	Edit	Press ↓.
Previous abbreviated name.	Edit	Enter four-letter abbreviated name, which will alternate with the cook time display during cook cycles.
Abbreviated name	Edit	Press ↓.
Full name	YES	Press ✓.
SHAK 1	A :30	Press ↓ to toggle between M (manually cancelling alarm) and A (automatically cancelling alarm). Enter time in the cook cycle to shake the basket with the numbered keys.
SHAK 1	Your settings	Press ✓.
SHAK 2	A :00	Press ↓ to toggle between M and A. Enter the time in the cook cycle to shake the basket a
SHAK 2	Your settings	Press ✓.

Left Display	Right Display	Action
REMOVE	M 2:35	Enter cook time in minutes and seconds with numbered keys. Press ↓ to toggle between auto and manually cancelling alarm.
REMOVE	Your settings	Press ✓ .
QUAL	M 7:00	Enter time product can be held after cooking. Press ↓ to toggle between auto and manually cancelling alarm.
QUAL	Your Settings	Press ✓ .
SENS	0	Sens allows the fryer controller to adjust cooking times slightly, ensuring small and large loads cook identically. Setting the number to 0 allows no time adjustment; a setting of 9 produces the most time adjustment. Enter setting with numbered keys.
SENS	Your setting	Press ✓ .
FRIES	YES	Press Ⓜ (power key).
	OFF	

Computer Setup, Codes

Follow these steps to prepare the computer for placement on a fryer:

Left Display	Right Display	Action
	OFF	Press ✓.
CODE		1656 with numbered keys.
GAS	YES	Press ↓ to toggle between YES and NO. Leave at NO for electric fryer.
GAS	YES or NO	With desired answer in place press ✓.
2 BASKET	NO	Press ↓ to toggle between YES and NO. Leave at NO for three baskets.
2 BASKET	YES or NO	With desired answer in place, press ✓.
SET-TEMP	NOND 360	Enter cooking temperature for non-dedicated items with the numbered keys; 360°F is the default setting.
SET-TEMP	Entered temperature.	Press ✓.
SET-TEMP	DED 350	Enter cooking temperature for dedicated items with the numbered keys; 350°F is the default setting.
SET-TEMP	Entered temperature.	Press ✓.
	OFF	None. Setup is complete.

Left Display	Right Display	Action
	OFF	Press ✓
CODE		Enter <ul style="list-style-type: none"> • 1650: Add or edit menus • 1651: toggles ----- constant temp • 1656: Setup, change energy source • 3322: Reload factory default settings • 5000: Displays total cook cycles. • 5005 Clears total cook cycles. • 5050: Sets unit to multi-product. • 5060: Sets unit to French Fries. • 1652: Recovery • 1653: Boil Out • 1658: Change from F° to C° • 1656: Setup • 1655: Language Choice

THIS PAGE INTENTIONALLY LEFT BLANK

Frymaster[®]

FRYMASTER
8700 LINE AVENUE, SHREVEPORT, LA 71106-6800

800-551-8633
318-865-1711
WWW.FRYMASTER.COM
EMAIL: FRYSERVICE@WELBILT.COM



Welbilt offers fully-integrated kitchen systems and our products are backed by KitchenCare[®] aftermarket parts and service. Welbilt's portfolio of award-winning brands includes Cleveland[™], Convotherm[®], Crem[®], Delfield[®], Frymaster[®], Garland[®], Kolpak[®], Lincoln[®], Merco[®], Merrychef[®] and Multiplex[®].

Bringing innovation to the table • welbilt.com

©2023 Frymaster LLC. except where explicitly stated otherwise. All rights reserved. Continuing product improvement may necessitate change of specifications without notice.

Part Number FRY_IOM_8196558 03/2023