


# Electrolux

## Factory Parts Catalog

Product No.	E57CO60ESS	E57LB60ESS	E57LK60ESS	E57NB60ESS	E57NK60ESS
Series	57" elec/ign	57" elec/ign	57" elec/ign	57" elec/ign	57" elec/ign
Market	North America	North America	North America	North America	North America
Color	stainless	stainless	stainless	stainless	stainless
Owner's Guide	RMP-122-E57IMen	RMP-122-E57IMen	RMP-122-E57IMen	RMP-122-E57IMen	RMP-122-E57IMen



# Electrolux

Electrolux Major Appliances  
 North & Latin America  
 P.O. BOX 212378  
 AUGUSTA, GA 30917

 
Publication No.  
**5995435210**  
 05/04/27  
 (EN/SERVICE/BJH)  
 099

## GAS GRILL

Model No.  
 E57CO60E / E57LB60E /  
 E57LK60E / E57NB60E /  
 E57NK60E

Copyright © 2005 Electrolux Home Products, Inc.  
 All rights reserved.

### RECOMMENDED SPARE PARTS

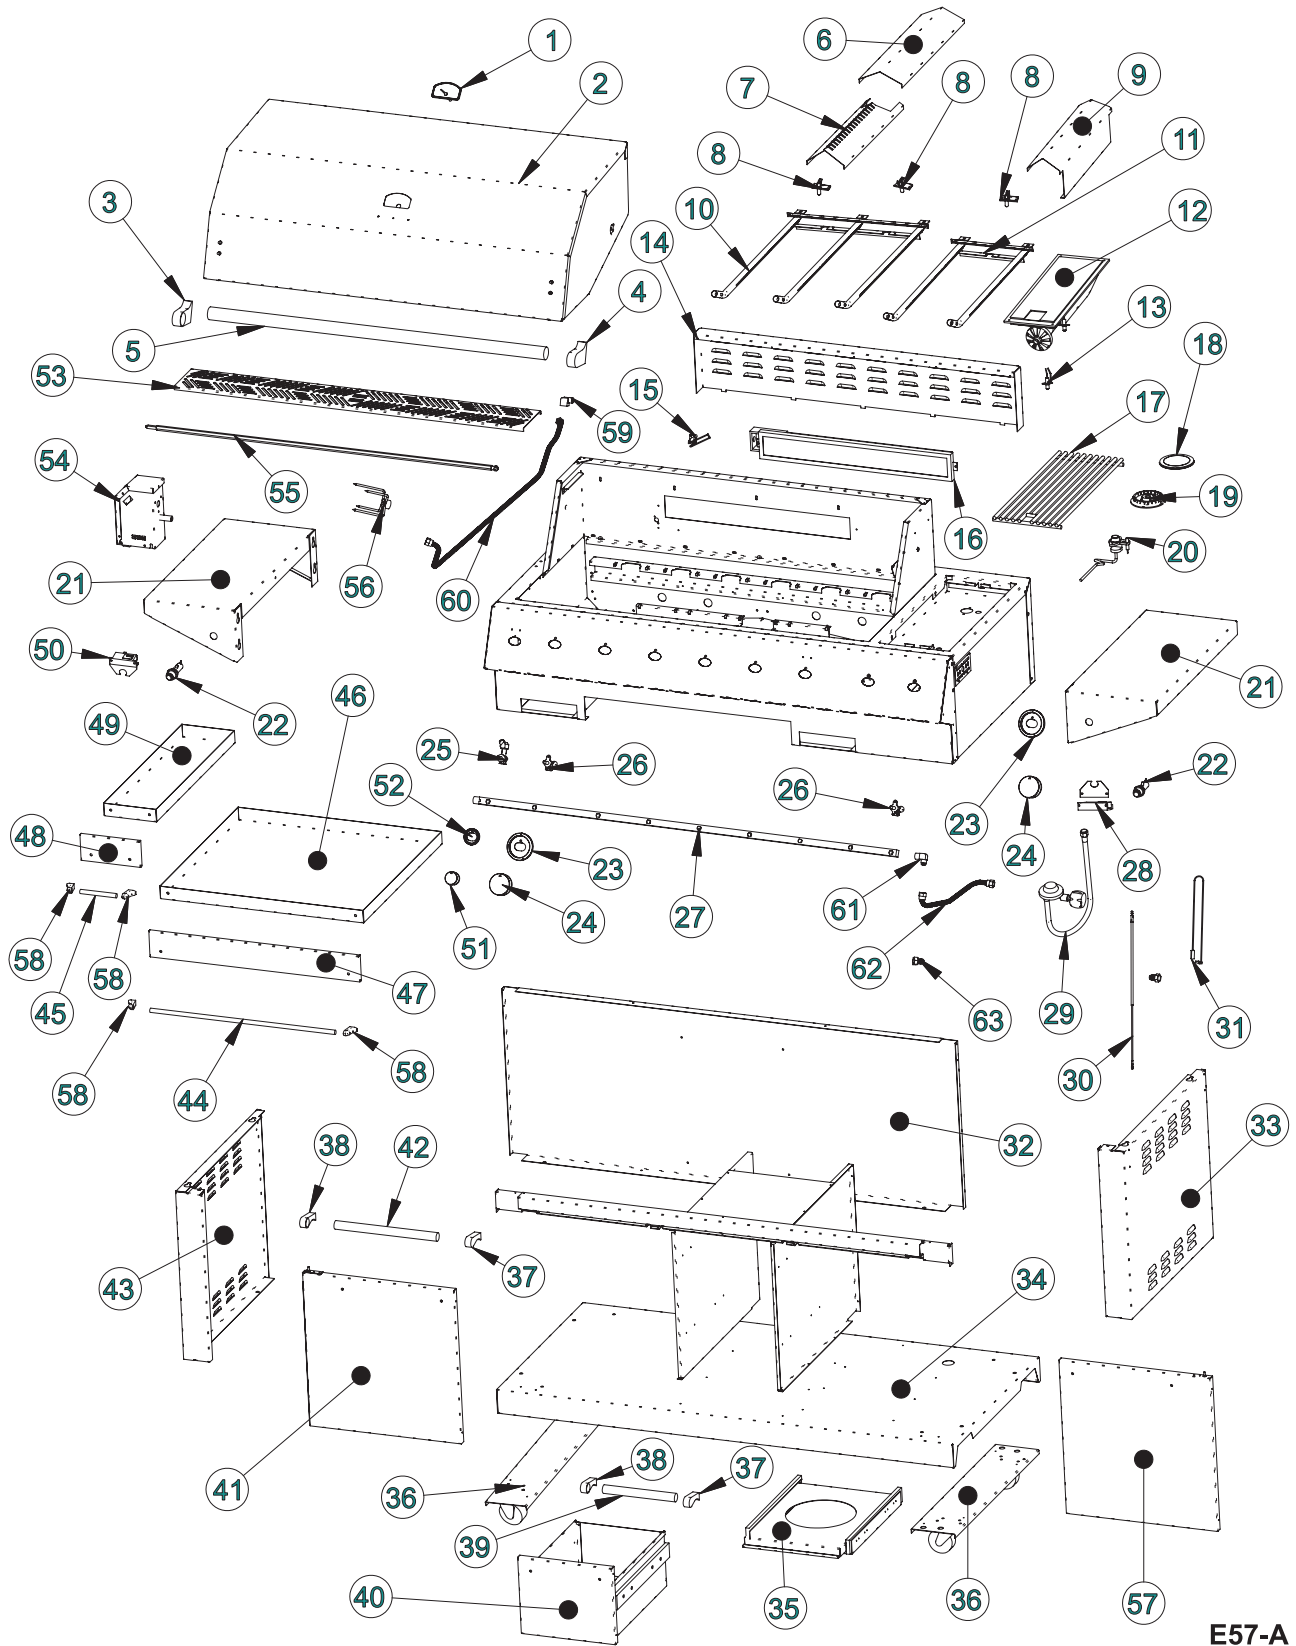


E57-A

**RECOMMENDED SPARE PARTS**

 Model Index: A E57LK60E (E57LK60ESS)  
 B E57NK60E (E57NK60ESS)  
 C E57LB60E (E57LB60ESS)  
 D E57NB60E (E57NB60ESS)  
 E E57CO60E (E57CO60ESS)

POS. NO	PART NO.	DESCRIPTION
1 #	5304444392	A B C D - Guage, temperature
2	5304444664	A B C D - Hood, grill
3	5304444388	A B C D - Handle End, hood, left
4	5304444390	A B C D - Handle End, hood, right
5	5304444665	A B C D - Handle, hood, 42 inch
6	5304444666	A B C D - Flavor Grid, burner cover, top, angle
7	5304444667	A B C D - Flavor Grid, igniter cover, bottom, angle
8 #	5304444439	A B C D - Electrode, main burner
9	5304444668	A B C D - Flavor Grid, burner cover, top-right side, angle
10 #	5304444669	A B C D - Burner, main, 3 cell
11 #	5304444670	A B C D - Burner, main, 2 cell
12 #	5304444635	A B C D - Burner, infrared, bottom
13 #	5304444636	A B C D - Electrode, infrared burner, bottom
14	5304444671	A B C D - Cover, infrared burner
15	5304444393	A B C D - Electrode, infrared burner, back
16 #	5304444638	A B C D - Burner, infrared, back
17	5304444672	A B C D - Grate, burner, main/side
18	5304444525	A B C D - Cap, burner, side
19	5304444526	A B C D - Head, burner, side
20	5304444530	A - C - - Base, orifice, side burner, LP
20	5304444531	- B - D - Base, orifice, side burner, NG
21	5304444653	A B - - E Shelf, side
22	5304444404	A B - - E Housing, igniter battery
23	5304444406	A B C D - Bezel, knob
24	5304444529	A B C D - Knob, burner
25	5304444433	A - C - - Valve, IR burner, back, LP
25	5304444434	- B - D - Valve, IR burner, back, NG
26	5304444435	A - C - - Valve, burner, main/side, LP
26	5304444436	- B - D - Valve, burner, main/side, NG
27 #	5304444673	A B C D - Manifold
28 #	5304444674	A B - - E Igniter, 4-pole, no ground, with bracket
29 #	5304444675	A - C - - Regulator, LP
29 #	5304444424	- B - D - Regulator, NG
30 #	5304444431	A B - - E Wire, igniter, positive
31 #	5304444432	A B - - E Wire, igniter, negative
32	5304444676	A B - - E Panel, cart, back
33	5304444677	A B - - E Panel, cart, right side
34	5304444678	A B - - E Base, cart
35	5304444538	A B - - E Tray, gas tank
36	5304444648	A B - - E Channel, wheel, swivel
37	5304444426	A B - - E Handle End, door, right
38	5304444425	A B - - E Handle End, door, left
39	5304444679	A B - - E Handle, drawer
40	5304444680	A B - - E Drawer, cart, storage
41	5304444681	A B - - E Door, cart, left
42	5304444682	A B - - E Handle, cart door

### RECOMMENDED SPARE PARTS

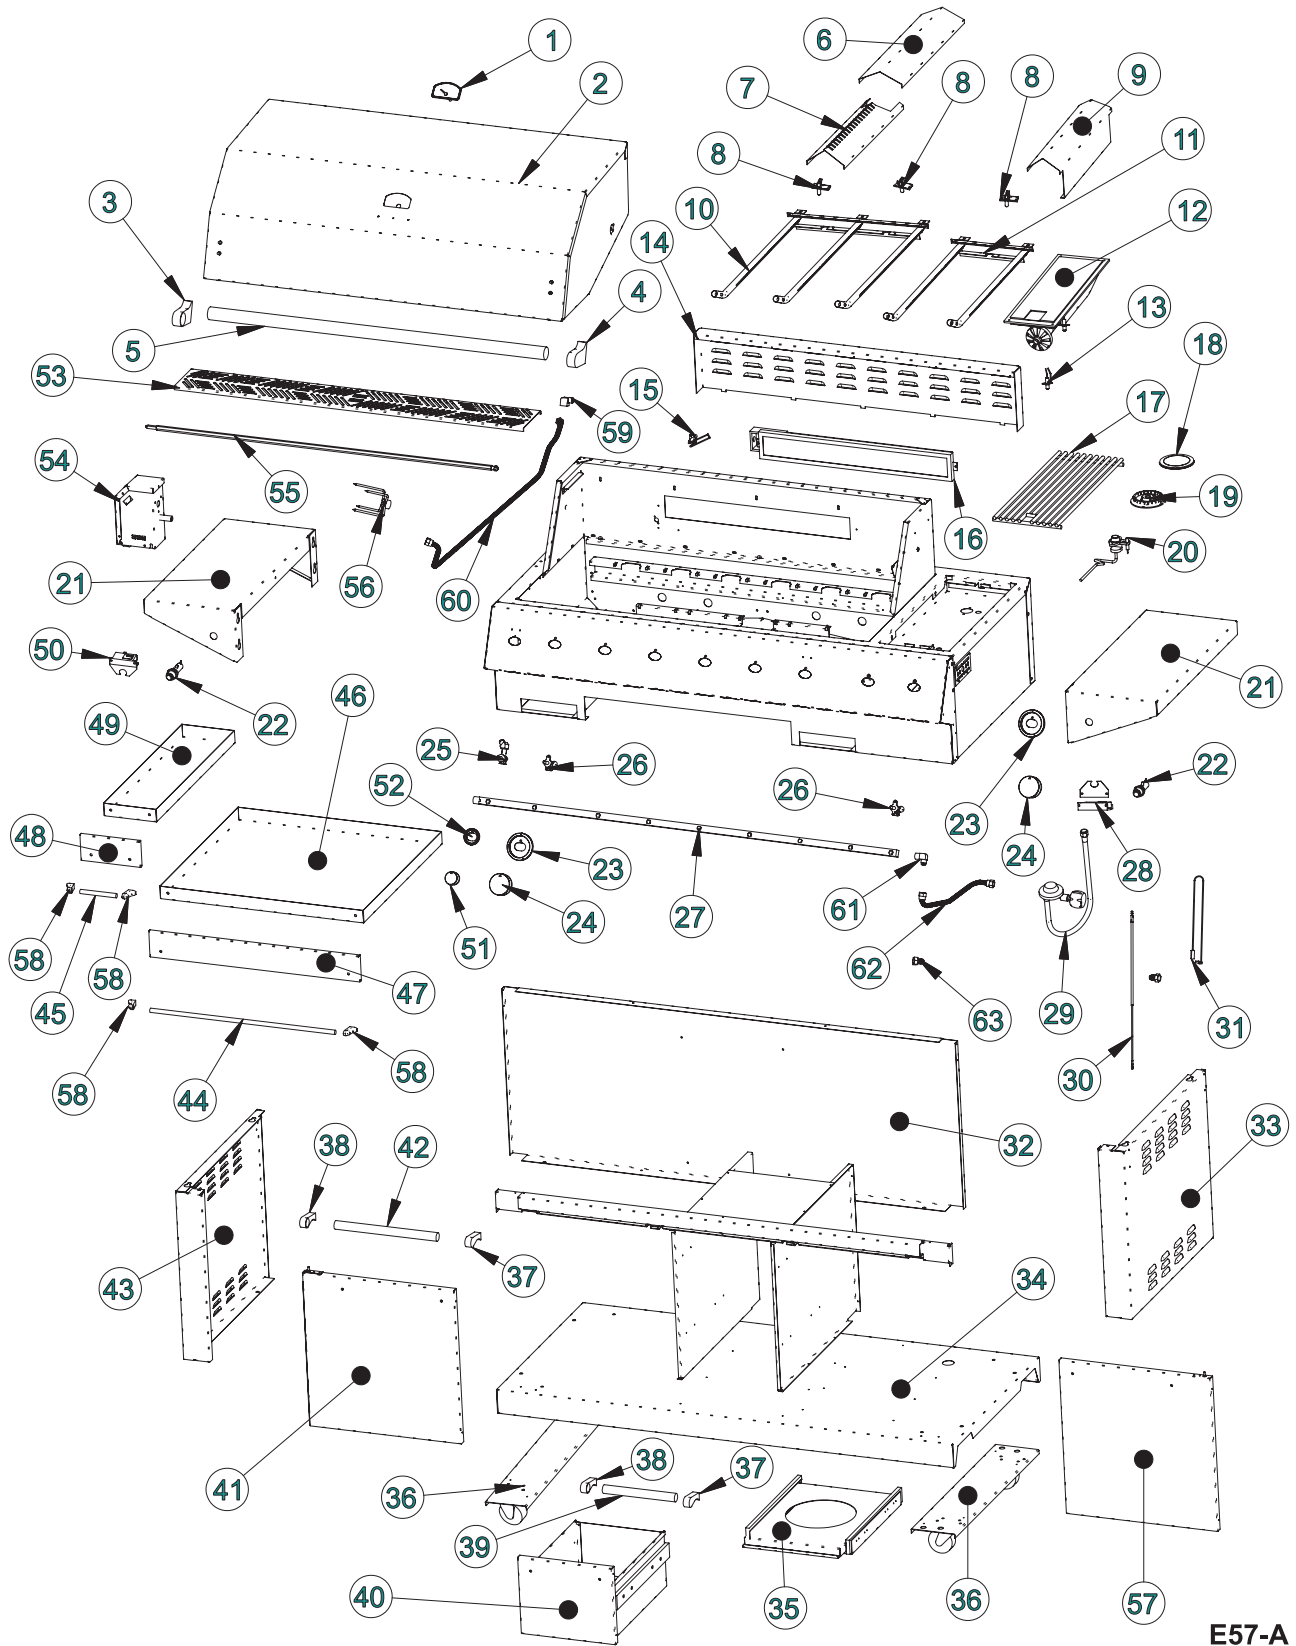

E57-A

**RECOMMENDED SPARE PARTS**

*Model Index:* A E57LK60E (E57LK60ESS)  
 B E57NK60E (E57NK60ESS)  
 C E57LB60E (E57LB60ESS)  
 D E57NB60E (E57NB60ESS)  
 E E57CO60E (E57CO60ESS)

POS. NO	PART NO.		DESCRIPTION
43	5304444683	A B - - E	Panel, cart, left side
44	5304444684	A B C D -	Handle, warming tray
45	5304444645	A B C D -	Handle, drip pan
46	5304444685	A B C D -	Drawer, warming
47	5304444686	A B C D -	Panel, warming drawer, front
48	5304444687	A B C D -	Panel, drip pan, front
49	5304444643	A B C D -	Tray, drip pan
50 #	5304444555	A B - - E	Igniter, 4-pole, no ground, with bracket
51	5304444547	A B C D -	Knob, infrared burner
52	5304444429	A B C D -	Bezel, infrared knob
53	5304444688	A B C D -	Shelf, warming rack
54 #	5304444689	A B C D -	Motor, rotisserie
55	5304444690	A B C D -	Spit, rotisserie
56	5304444551	A B C D -	Fork, rotisserie
57	5304444691	A B - - E	Door, cart, right
58	5304444543	A B C D -	Handle End, warming tray
59	5304447625	A - C - -	Elbow, LP fitting, infrared burner, rear
59	5304447626	- B - D -	Elbow, NG fitting, infrared burner, rear
60 #	5304447620	A B C D -	Hose, gas, infrared burner, rear
61	5304447621	A B C D -	Elbow, gas fitting, manifold/hose
62 #	5304447622	- B - D -	Hose, gas, 10", main supply
63 #	5304447627	- B - D -	Fitting, NG, regulator
*	5304444692	A B C D -	Wire, igniter, infrared burner, back
*	5304444694	A B C D -	Wire, igniter, infrared burner, bottom
*	5304444695	A B C D -	Wire, igniter, side burner, front
*	5304444696	A B C D -	Wire, igniter, side burner, rear
*	5304444697	A B C D -	Wire, igniter, main burner, left
*	5304444698	A B C D -	Wire, igniter, main burner, left
*	5304444699	A B C D -	Wire, igniter, main burner, right
*	5304444441	A B C D -	Bolt, valve/manifold
*	5304444442	A B - - E	Bolt, wheel & cart
*	5304444443	A B - - E	Nut, door, bottom pivot
*	5304444444	A B - - E	Screw, door, bottom pivot
*	5304444445	A B C D -	Screw, bezel to valve
*	5304444446	A B C D -	Screw, hood handle end
*	5304444447	A B C D E	Screw, self-tapping