



Instruction Manual

Deluxe Apple Hacker

Model No. 4185 and 4187





GOLD MEDAL[®] PRODUCTS CO.


10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA




SAFETY PRECAUTIONS


	⚠ DANGER
	Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. 014_020416

	⚠ WARNING
	This machinery contains sharp blades. Keep hands and body parts clear at all times. 037_103114



	⚠ WARNING
	ALWAYS wear safety glasses when servicing this equipment. 010_010914

	⚠ WARNING
	No user serviceable parts inside. Refer servicing to qualified service personnel. 011_051514

	⚠ WARNING
	Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862 022_060215

	⚠ WARNING
	DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012_010914



	 WARNING
	This machine is NOT to be operated by minors. 007_010914

Note: Improvements are always being made to Gold Medal’s equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal’s Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.) General images may be used in manual for reference only.

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Description

4185: Deluxe Apple Hacker, cuts apple into 8 slices.

4187: Deluxe Apple Hacker, cuts apple into 12 slices.

 
Items Included with this Unit

- (4) Rubber Suction Feet (for attaching unit to work surface)

Setup

This unit has been tested at the factory.


1. Remove all packaging and tape prior to operation.
2. Place unit on a sturdy, level base for use.
3. Attach the four Suction Cup Feet as shown in image below.
4. After setup, the unit should be cleaned prior to use (see Care and Cleaning section of this manual).

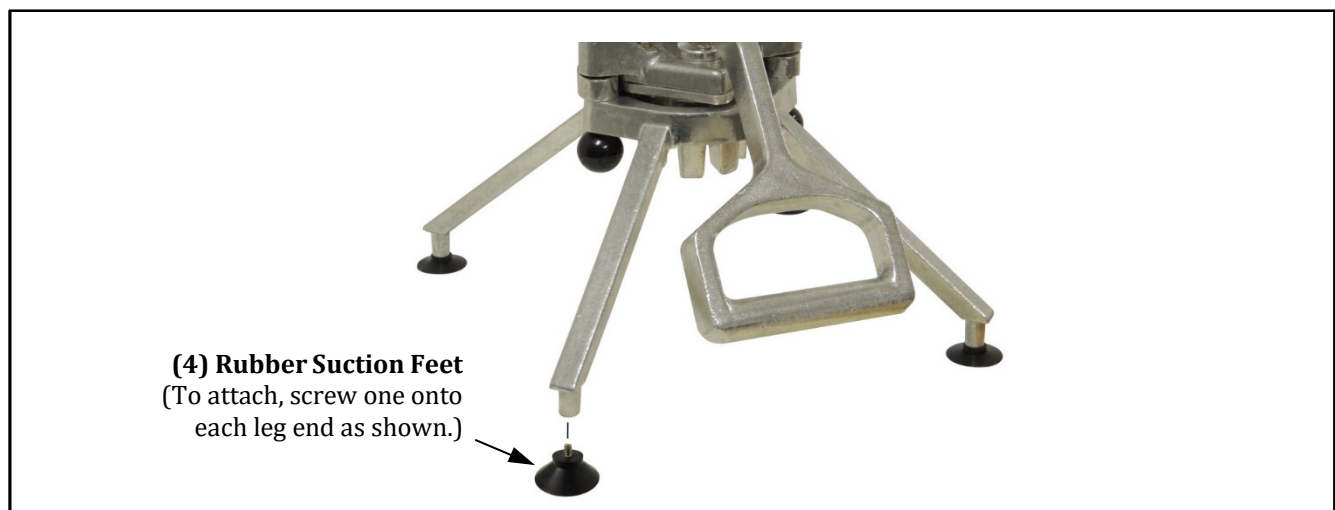

OPERATING INSTRUCTIONS

The following instructions are for operating the Apple Hacker unit. Use caution when operating (handling) this unit, the blades are extremely sharp.

 1. Place the unit on a smooth, level surface and attach it with the suction cup feet.
2. Place an apple on the blade assembly.
3. Remove hands and fingers from the cutting area and all other moving parts before attempting to lower the handle.
4. In a smooth motion, push down on the handle to lower the push block and force the apple through the blades.
5. Guide handle back to open position before releasing a grip on the handle (springs on the guide rods allow handle to remain in the open position).

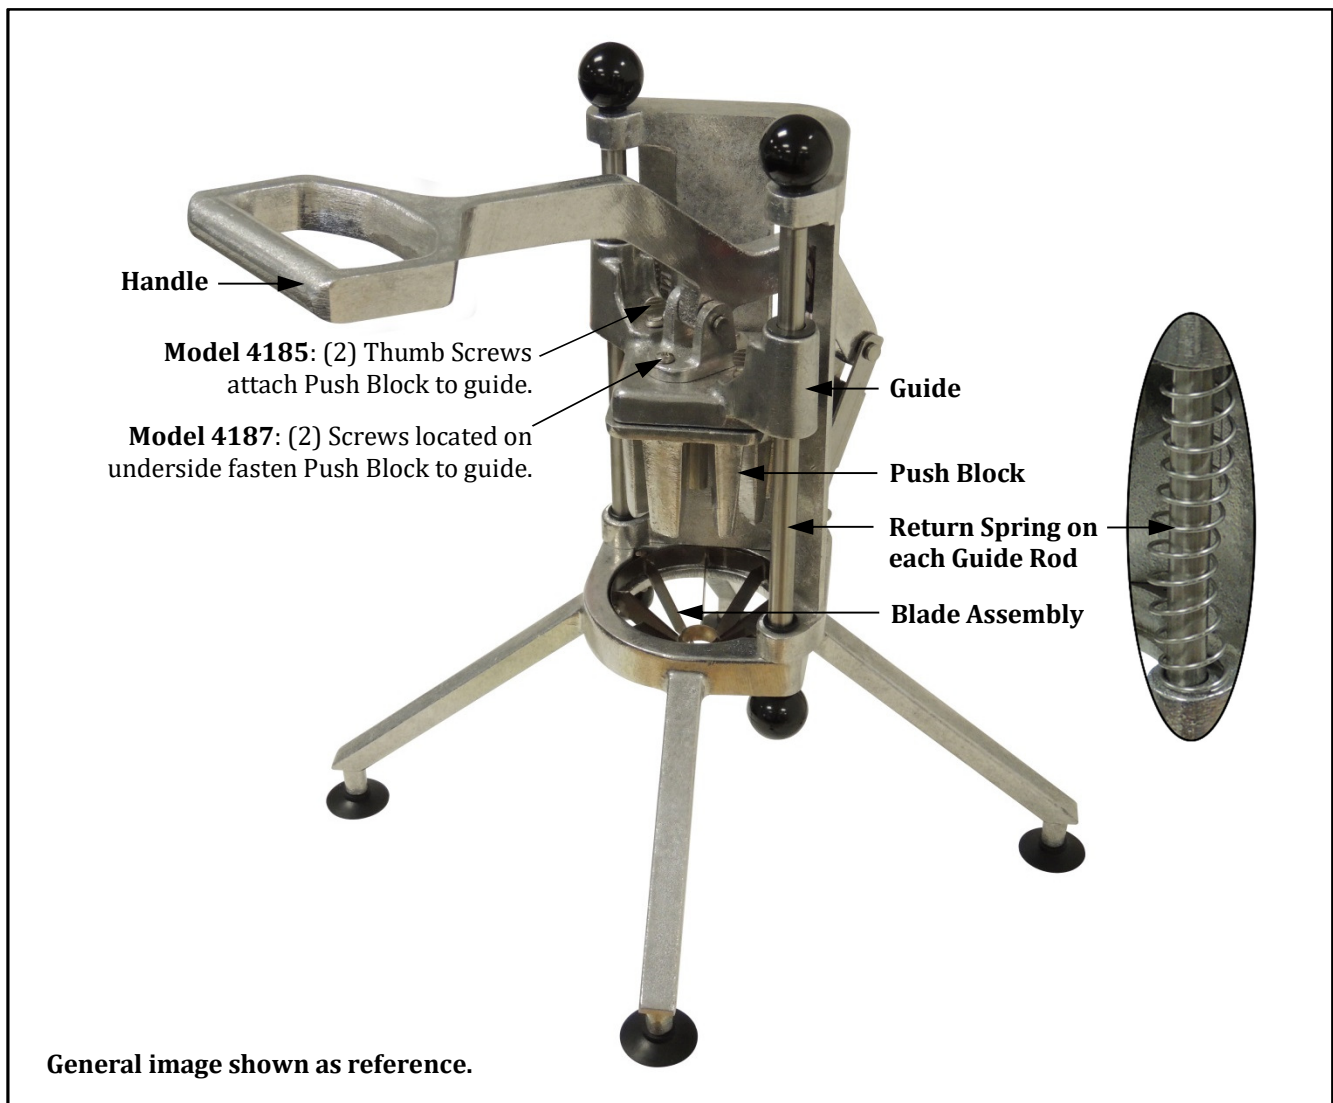



Unit Disassembly/Assembly Instructions

The following instructions are for disassembling and assembling the Apple Hacker unit. Use caution when handling (operating) this unit, the blades are extremely sharp.

Use the Steps below to disassemble unit for blade removal and general cleaning or repair:

Step 1:

Model 4185: Remove the 2 thumb screws on the guide to remove the Push Block.

Model 4187: Remove the 2 screws located on the underside of the Push Block to remove it from the guide.





Step 2: Remove the 2 bottom Knobs securing the Stand, and then lift the upper portion of the unit off the Stand.

Step 3: Carefully lift the Blade Assembly out of the Stand.

Step 4: As needed, the unit can be disassembled further by removing the Hitch Pins and Pins to release the Handle and Yoke. Then, remove the upper Knobs to pull the Guide Rods out of the frame and guide.

Step 5: Reassemble unit in reverse order.

General images shown as reference.

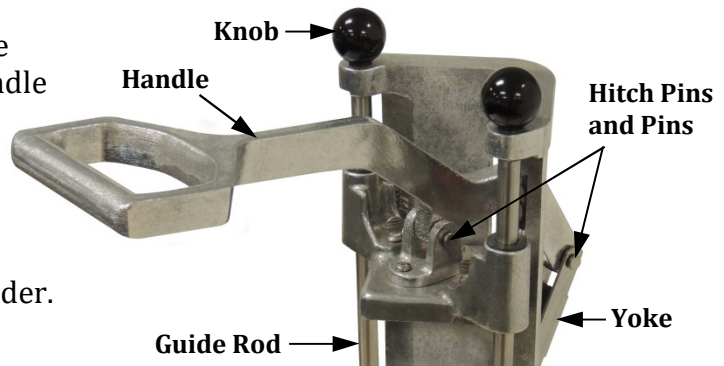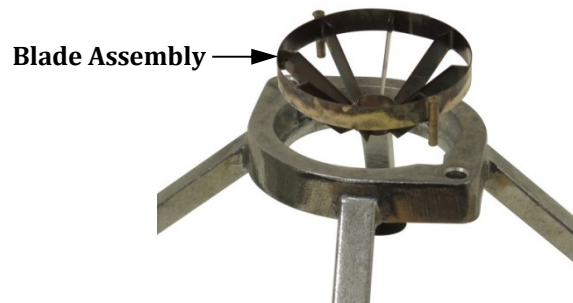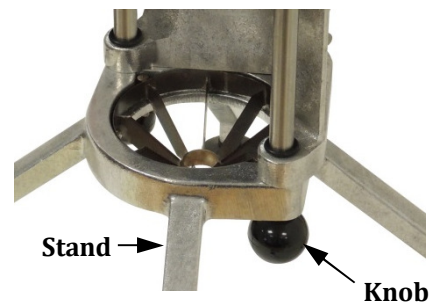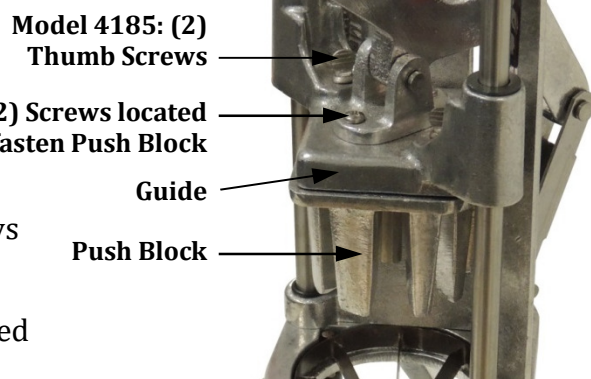    



Care and Cleaning

Good sanitation practice demands that all food preparation equipment be cleaned regularly. A clean looking, well-kept machine is one of the best ways of advertising your product.

Follow the directions below to clean and sanitize the unit each day after use. (Reference the Disassembly/Assembly Instruction section of this manual.)

1. Make sure to clean all of the parts in order to sanitize them before each use. Use caution when handling this unit, the blades are extremely sharp.
2. The Push Block may be disassembled and taken to the sink to clean.
3. The Blade Assembly may be disassembled and taken to the sink to clean.
4. Clean the unit with a soft cloth dampened with soap and hot water. If needed, the unit may be disassembled further for cleaning, see the Disassembly/Assembly Instruction section.



DO NOT use oven cleaners or abrasive materials as they will damage parts of the machine.
5. Thoroughly dry unit, then reassemble.



Lubricating the Unit



When needed, lubricate the guide rods with mineral oil, food grade grease, or rub them with paraffin. **DO NOT** lubricate with cooking oil (it gets sticky).



MAINTENANCE INSTRUCTIONS

	 DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>

	 WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>

	 CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH THIS EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p> <p>027c_051514</p>



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. Use only approved replacement parts when servicing this unit.
3. When ordering, please include part number, part name, and quantity needed.
4. Please include your model number, serial number, and date of manufacture (located on the machine nameplate/data plate) with your order.
5. Address all parts orders to:

 
Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676
Fax: (800) 542-1496
(513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com



Deluxe Apple Hacker - Parts Breakdown

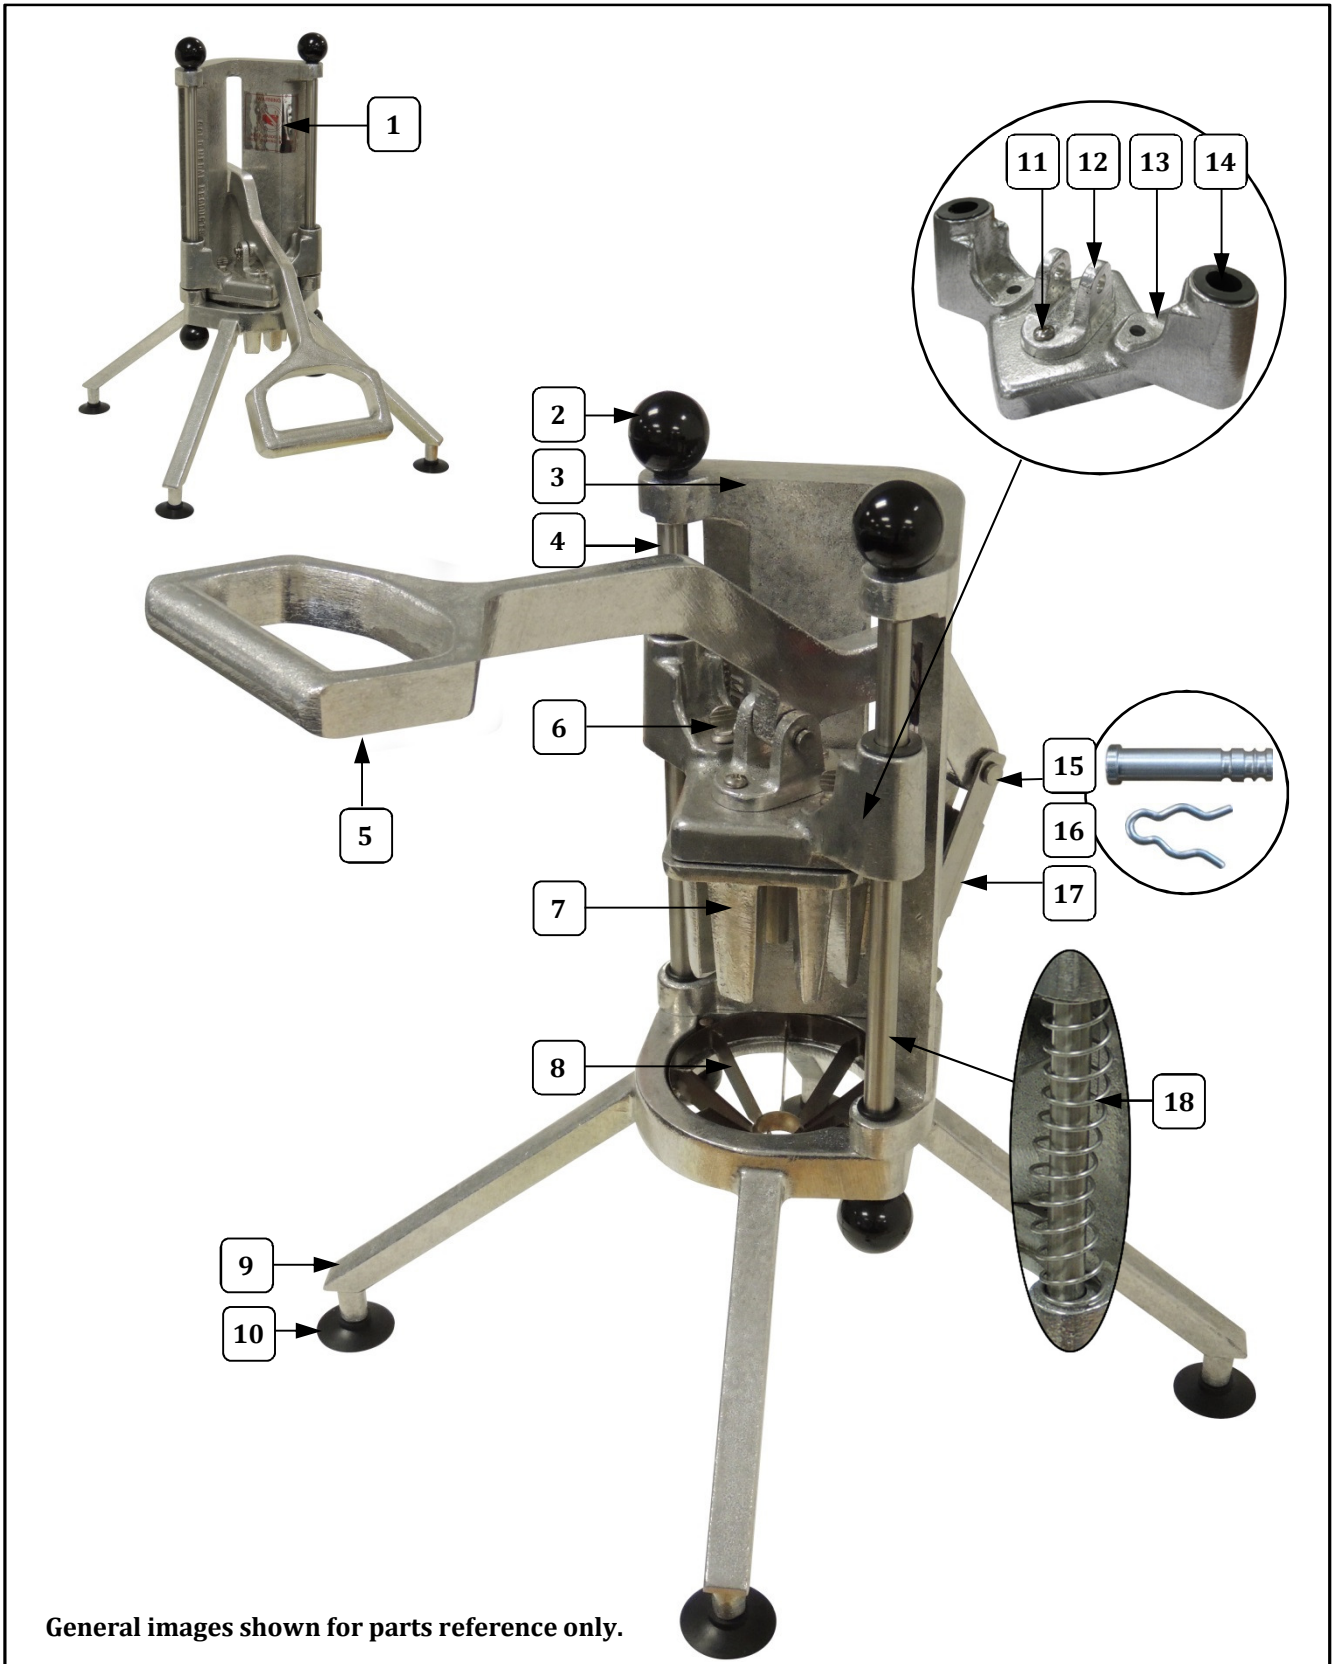

General images shown for parts reference only.



Deluxe Apple Hacker - Parts List

Item	Part Description	Part Number	
		4185	4187
1	DECAL, SHARP BLADES	38323	38323
2	KNOB	47110	47110
3	FRAME	38371	38371
4	GUIDE ROD	38376	38376
5	HANDLE, LEVER	38374	38374
6	THUMB SCREW 1/4-20 X 3/4" (2 required)	38379	
7	PUSH BLOCK	38373	103206
8	BLADE ASSY, APPLE HACKER	38336	103203
9	STAND	38370	38370
10	RUBBER SUCTION FEET	114410	114410
11	10-24 X 7/8 M/S 18-8	38383	
	10-24 x 1/2 SERRATED HEX (4 screws required, 2 fastened from top and 2 fastened from underside of Push Block)		76652
12	PIVOT BLOCK	38385	38385
13	GUIDE WITH BEARINGS	38386	38386
14	NYLON STD FLANGE BEARING	38382	38382
15	PIN	38377	38377
16	#3 EXTERNAL HITCH PIN	38384	38384
17	YOKE	38375	38375
18	RETURN SPRING	111480	111480



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500

© 2019 – The text, descriptions, graphics, layout, and other material in this publication are the exclusive property of Gold Medal Products Co. and shall not be used, copied, reproduced, or published in any fashion, including website display, without its express written consent.