

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench

PARTS LIST

Item No	Model #	Model #	Description
	5510	5512	
	Part No	Part No	
1	74264	74264	Heat Element 600 Watt
2			Heat Element 10 Watt Foil
3	42798	42798	Rocker On/Off Switch
4	40721	40721	Axial Fan
5	47199	47199	Blower Plug and Cord
6	41020	41020	Light Tube Holder
7	41021	41021	Light Tube Holder W/ Starter
8	41022	41022	Ballast
9	41023	75026	Light Starter
10	41057	39016	Light Tube
11	74216	74228	Light Shield
12	38995	38995	Heater Deflector
13	74211	74231	Access Cover
14	74212	74230	Top Plate Weldment
15	74219	74226	Doors
16	74218	74227	Shelf
17	74220	74220	Hammer Head Screws
18	87996	87996	Thermostat 149 Degree F
19	38915	38915	Base Rail (Short)
		74238	Base Rail (Long)
20	38916	38916	Corner Post
21	38917	38917	Top Rail (Short)
		74239	Top Rail (Long)
22	38919	38919	Verticle Door Track
23	74200		Upper Door Track (Short)
		74241	Upper Door Track (Long)
24	74215	74215	Upper Rail (Short)
		74240	Upper Rail (Long)
25	74210	74242	Horizontal Door Track
26	74207	74207	End Connectors
27	74217	74217	Groove Filler Long
28	74270	74270	Groove Filler Short
29	74201	74201	Side Plate
30	74243	74243	Control Side Plate
31	74244	74244	Switch Plate
32		74232	Back Plate
33	74202	74235	Sign Plate
34	74268	74269	Sign
35	74779	74779	Front and Side Glass
36		74245	Front Glass
37	74213	74229	Base Plate Weldment
38	74266	74266	Wrench