



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218



Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218




Cabinet Exterior – Parts Breakdown



Item	Part Description	Part No.
1	TOP RAIL	38917
2	SMALL SIGN (Nachos Sign)	74268
3	SIGN PLATE (Clear Acrylic Cover)	74202
4	CONTROL SIDE PLATE	74243
5	SWITCH PLATE	74244
6	SWITCH LABEL	74263
7	LIGHTED ROCKER SWITCH	42798
8	SIDE PLATE	74201
9	UPPER RAIL	74215
10	UPPER DOOR TRACK	74200
11	DOOR	17388
12	CORNER POST	74221
13	VERTICLE DOOR TRACK	74222
14	HORIZONTAL DOOR TRACK	74210
15	BASE RAIL	38915
16	SHELF	74218




Cabinet Exterior – Bottom View

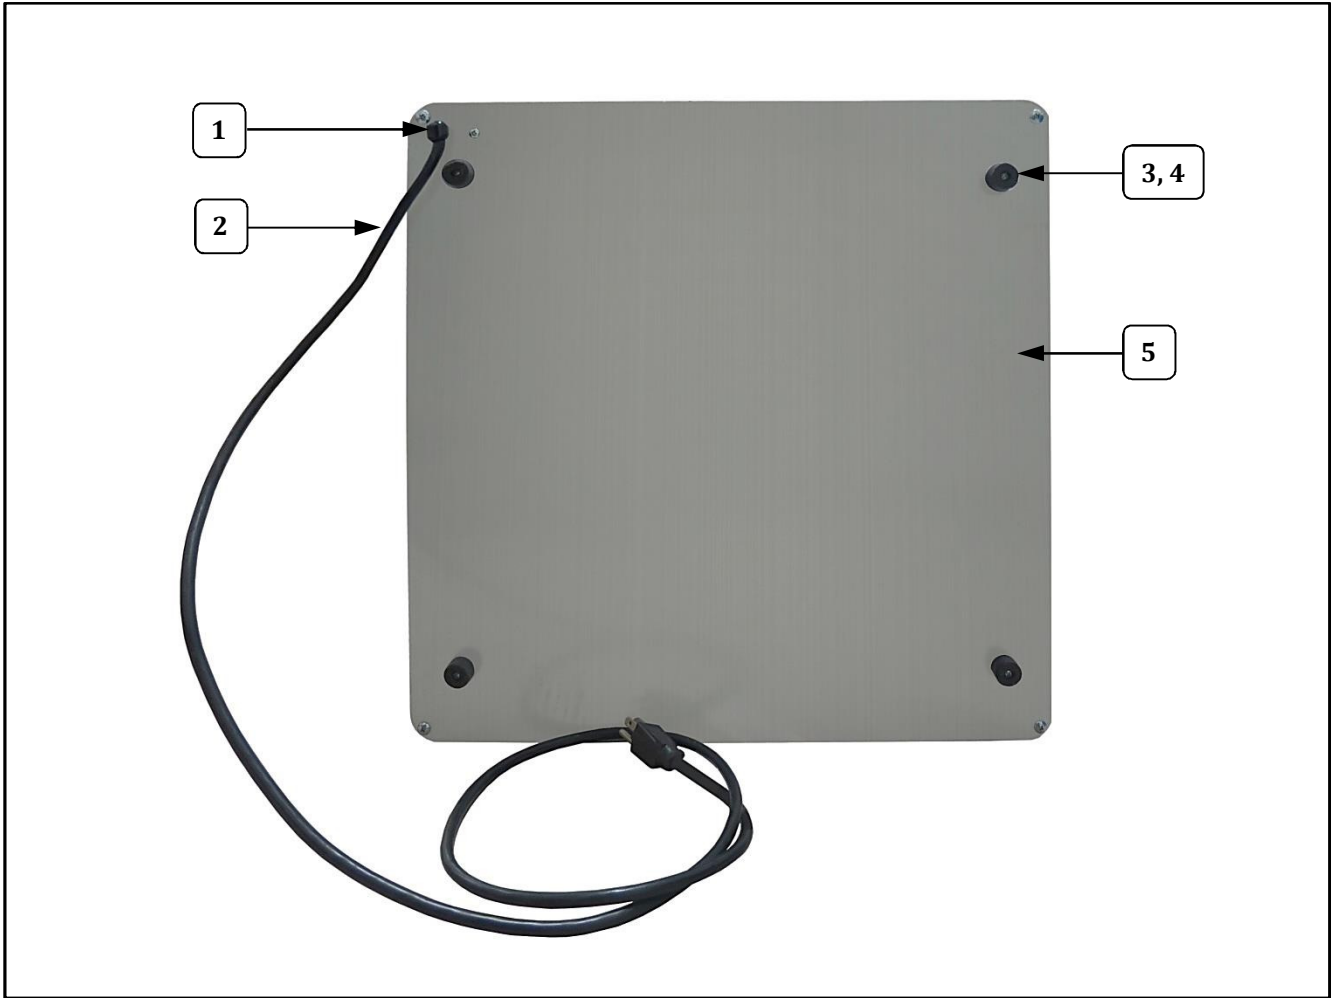

Item	Part Description	Part No.
1	SR-10-2 STRAIN RELIEF	87163
2	LEAD-IN CORD 15 AMP PLUG	22038
3	3/4 INCH HIGH RUBBER FEET	47155
4	10-24 X 3/4 HEX HD SCREW	41314
5	BOTTOM PLATE	74206




Cabinet Exterior – Bottom View

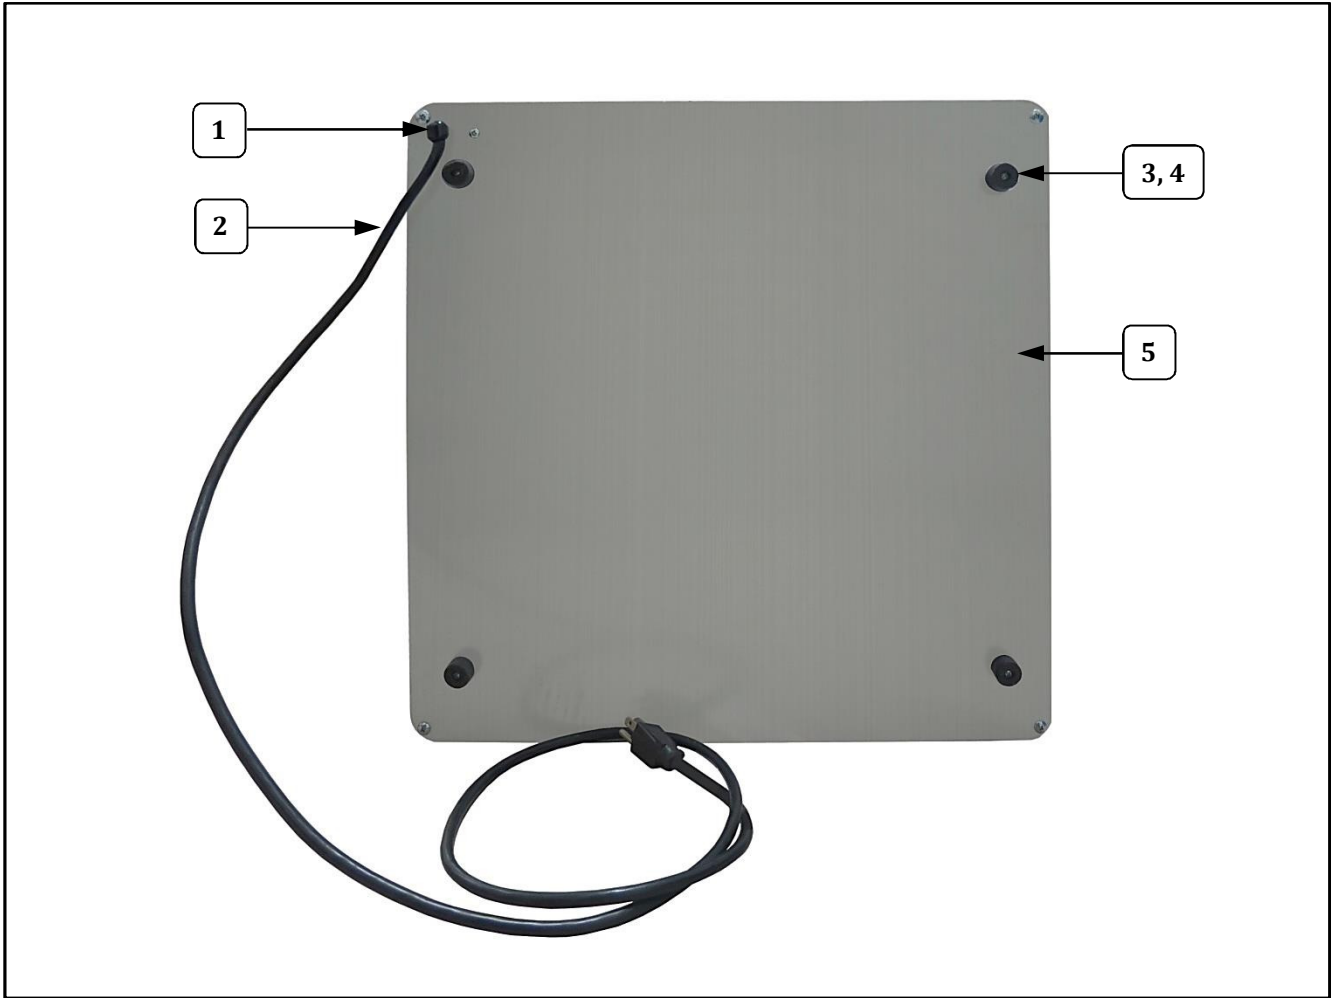

Item	Part Description	Part No.
1	SR-10-2 STRAIN RELIEF	87163
2	LEAD-IN CORD 15 AMP PLUG	22038
3	3/4 INCH HIGH RUBBER FEET	47155
4	10-24 X 3/4 HEX HD SCREW	41314
5	BOTTOM PLATE	74206




Cabinet Exterior – Bottom View

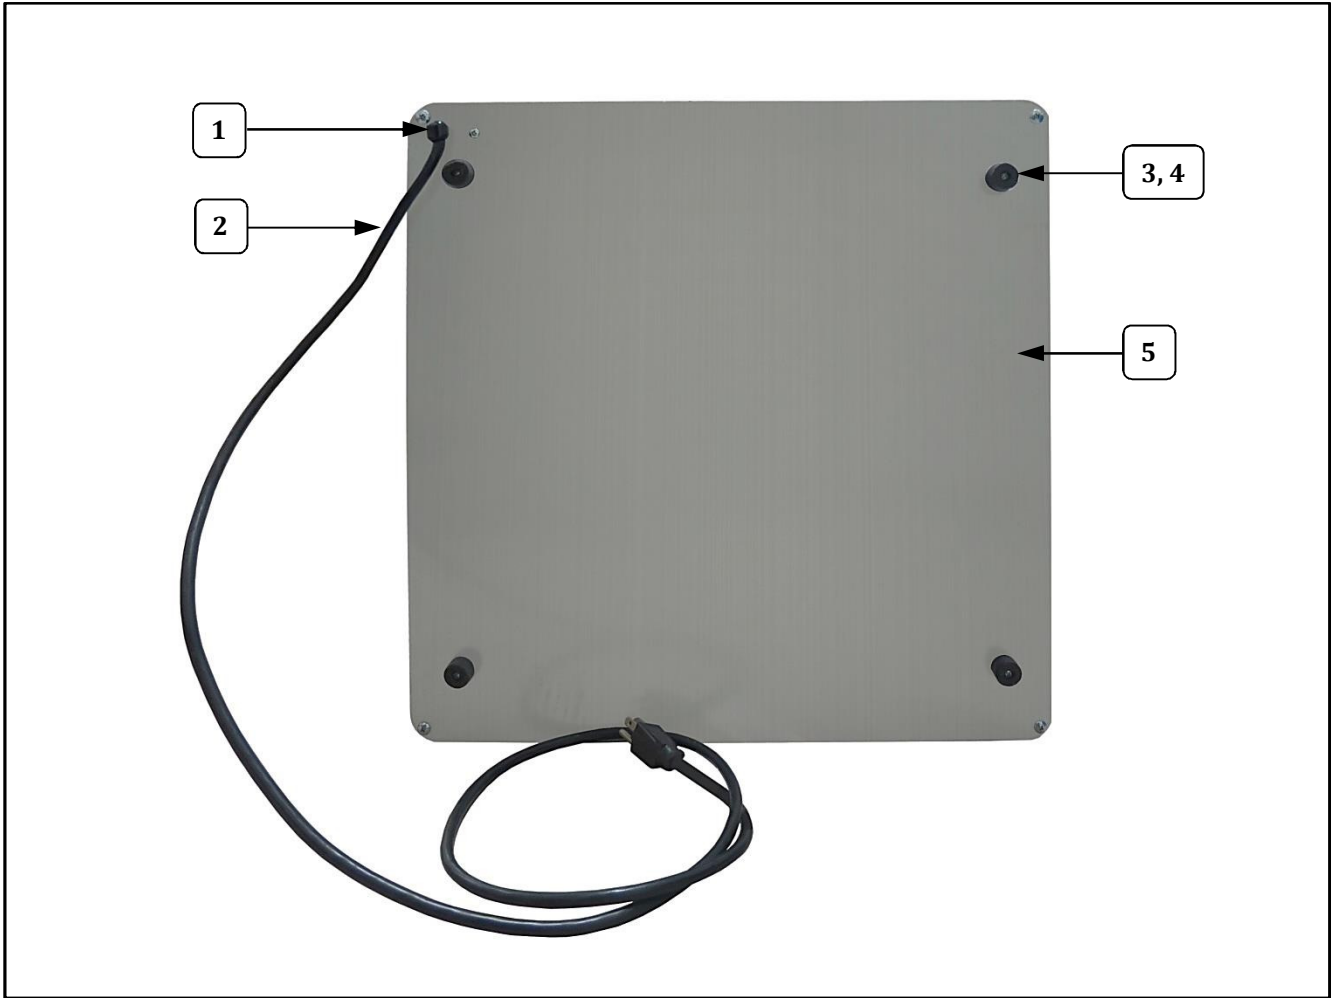

Item	Part Description	Part No.
1	SR-10-2 STRAIN RELIEF	87163
2	LEAD-IN CORD 15 AMP PLUG	22038
3	$\frac{3}{4}$ INCH HIGH RUBBER FEET	47155
4	10-24 X $\frac{3}{4}$ HEX HD SCREW	41314
5	BOTTOM PLATE	74206




Cabinet Exterior – Bottom View

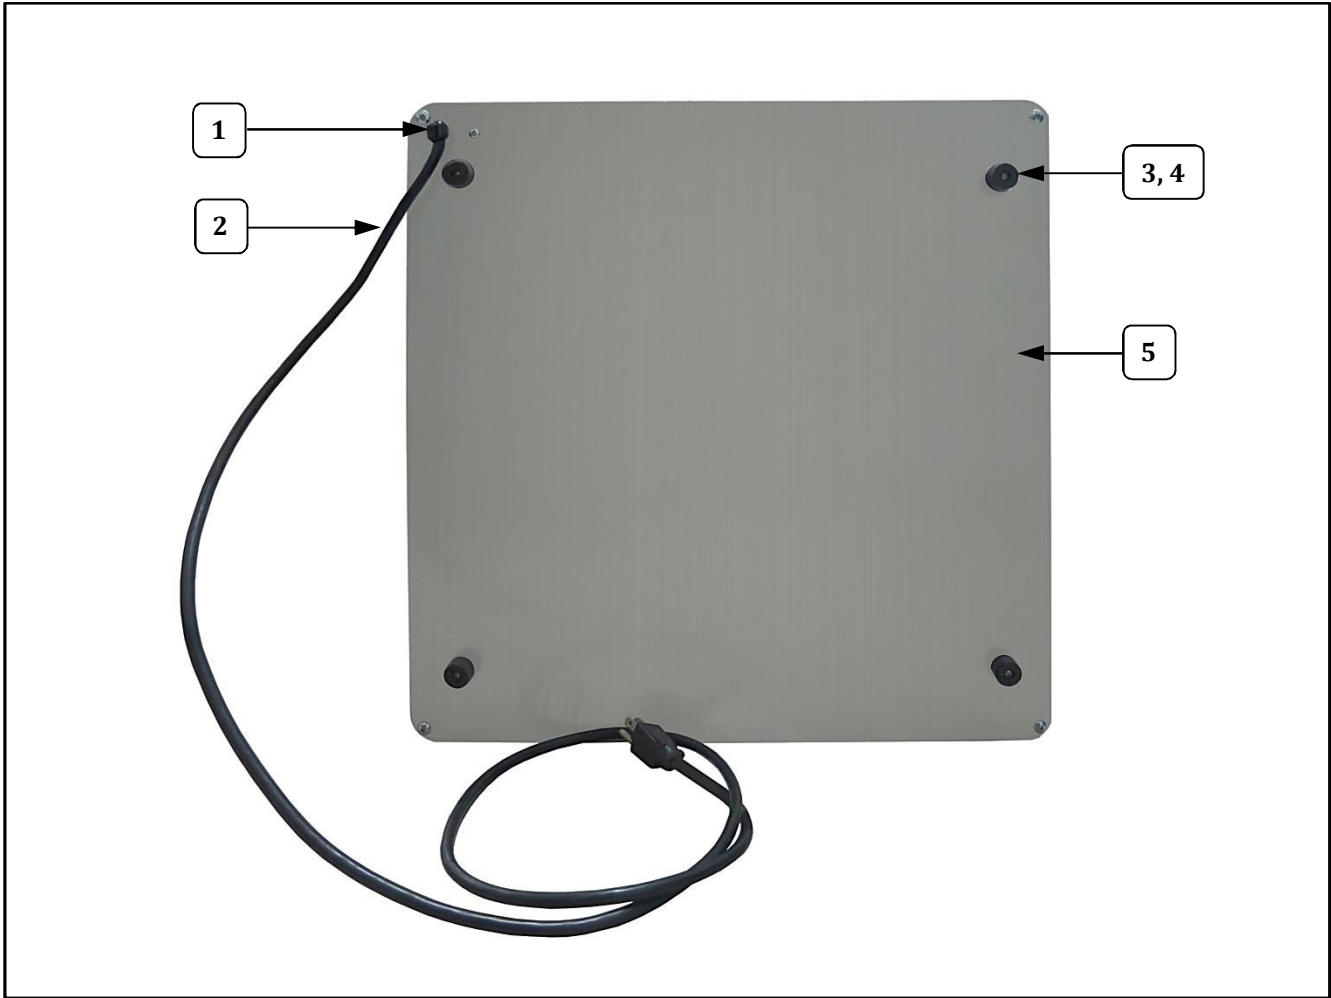

Item	Part Description	Part No.
1	SR-10-2 STRAIN RELIEF	87163
2	LEAD-IN CORD 15 AMP PLUG	22038
3	3/4 INCH HIGH RUBBER FEET	47155
4	10-24 X 3/4 HEX HD SCREW	41314
5	BOTTOM PLATE	74206




Cabinet Interior – Front View

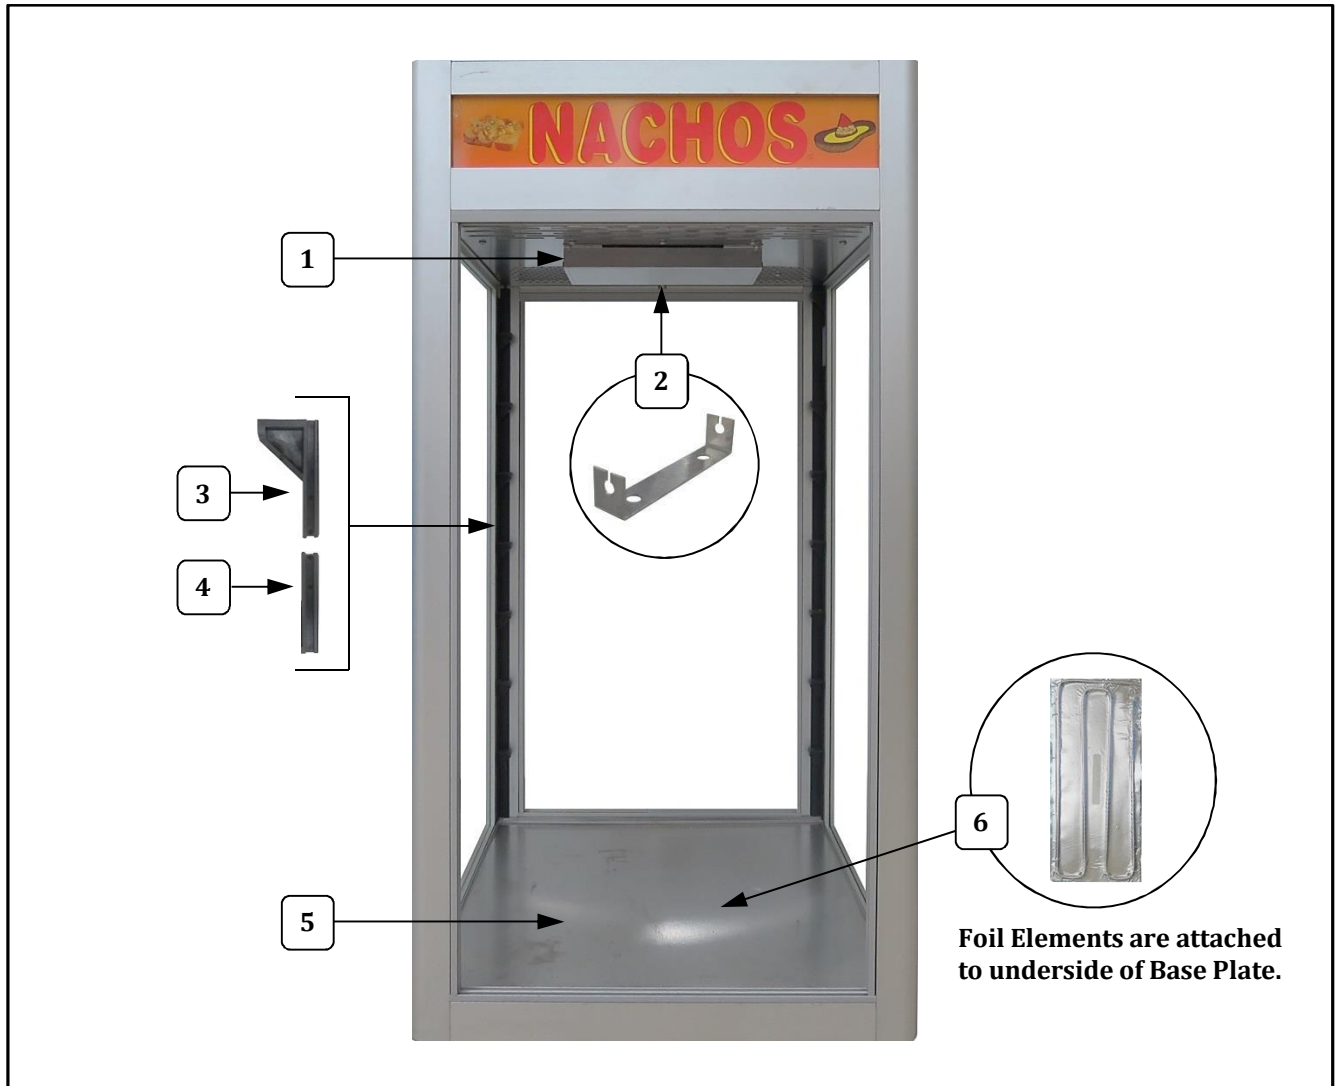

Item	Part Description	Part No.
1	HEAT DEFLECTOR	38995
2	BULB KEEPER	42658
3	RACK HOLDER	39899
4	2 INCH GROOVE FILLER	39903
5	BASE PLATE WELDMENT	74213
6	10 WATT FOIL ELEMENT (2 req'd) Foil Elements are attached to underside of Base Plate	38914




Cabinet Interior – Front View

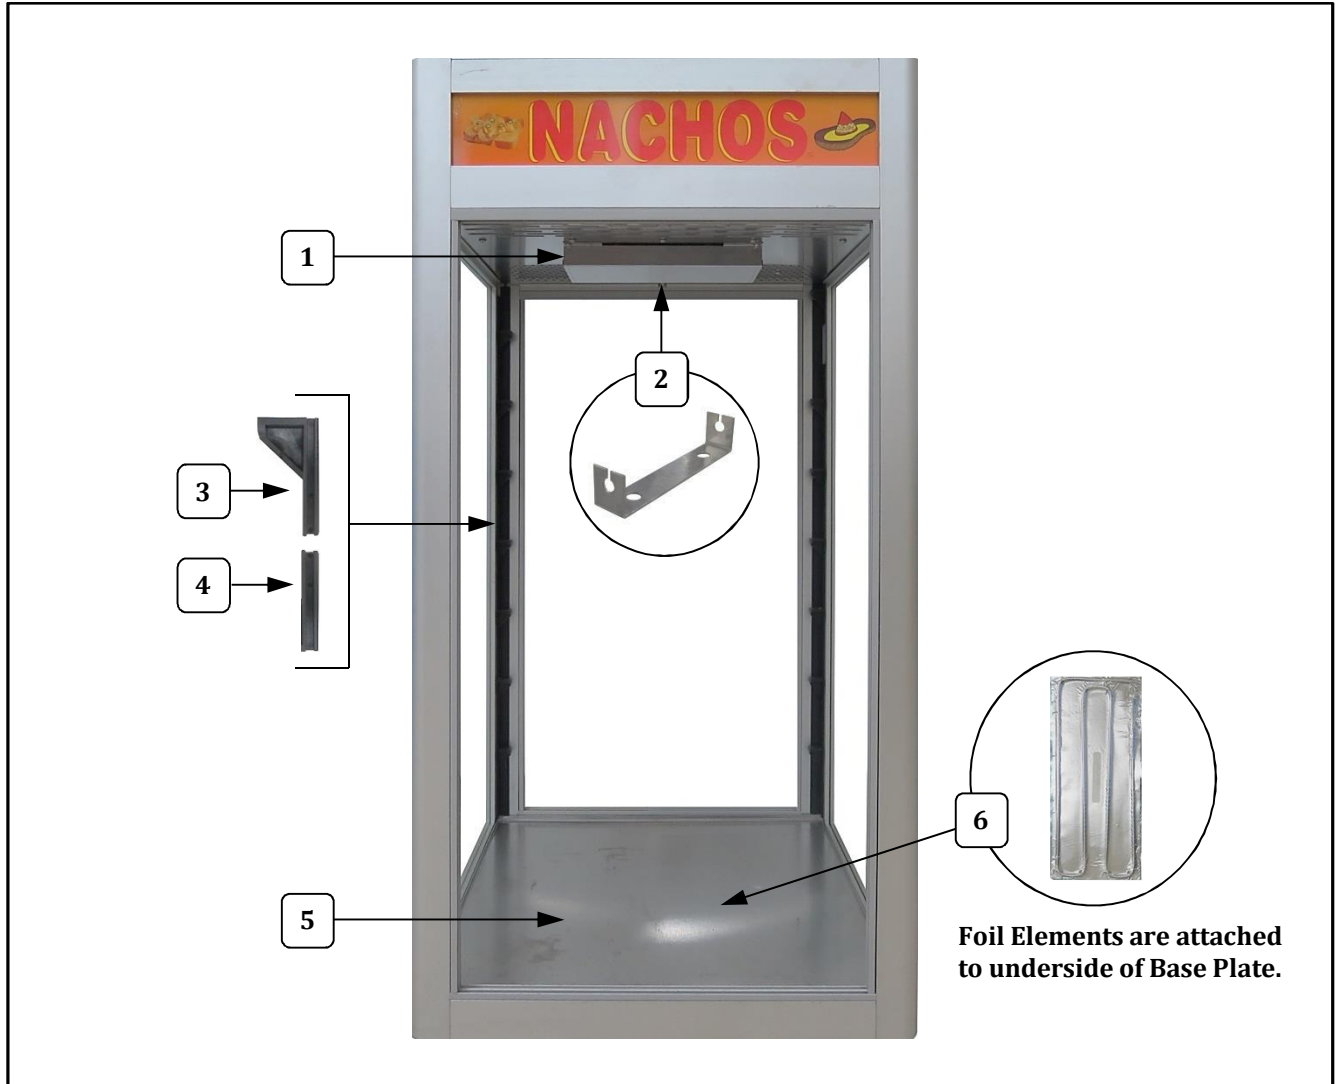

Item	Part Description	Part No.
1	HEAT DEFLECTOR	38995
2	BULB KEEPER	42658
3	RACK HOLDER	39899
4	2 INCH GROOVE FILLER	39903
5	BASE PLATE WELDMENT	74213
6	10 WATT FOIL ELEMENT (2 req'd) Foil Elements are attached to underside of Base Plate	38914




Cabinet Interior – Front View

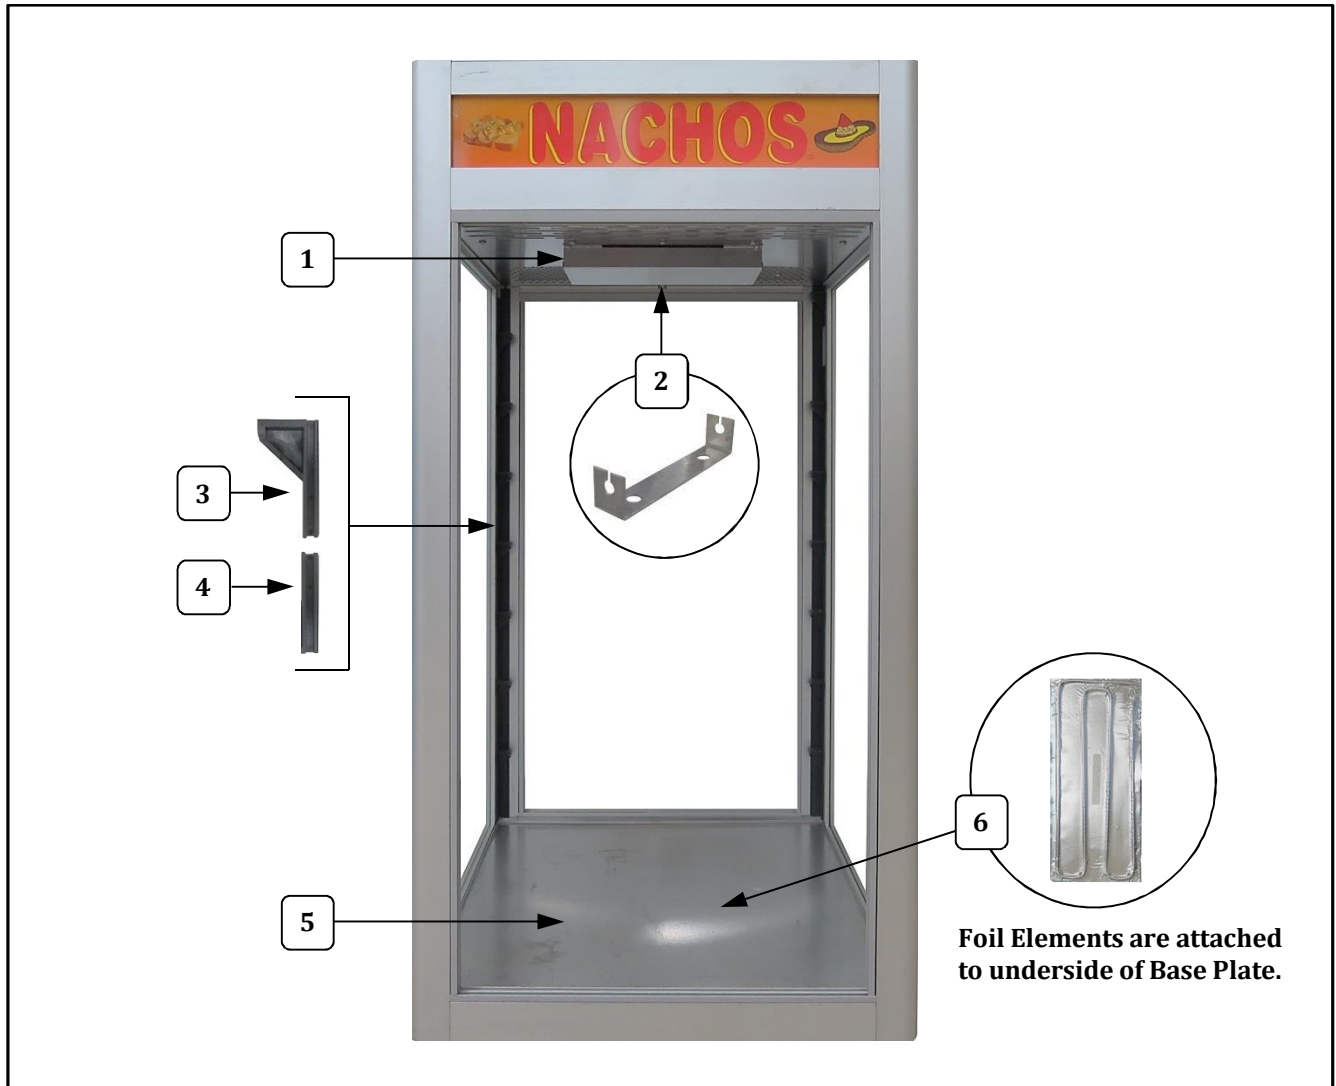

Item	Part Description	Part No.
1	HEAT DEFLECTOR	38995
2	BULB KEEPER	42658
3	RACK HOLDER	39899
4	2 INCH GROOVE FILLER	39903
5	BASE PLATE WELDMENT	74213
6	10 WATT FOIL ELEMENT (2 req'd) Foil Elements are attached to underside of Base Plate	38914




Cabinet Interior – Front View

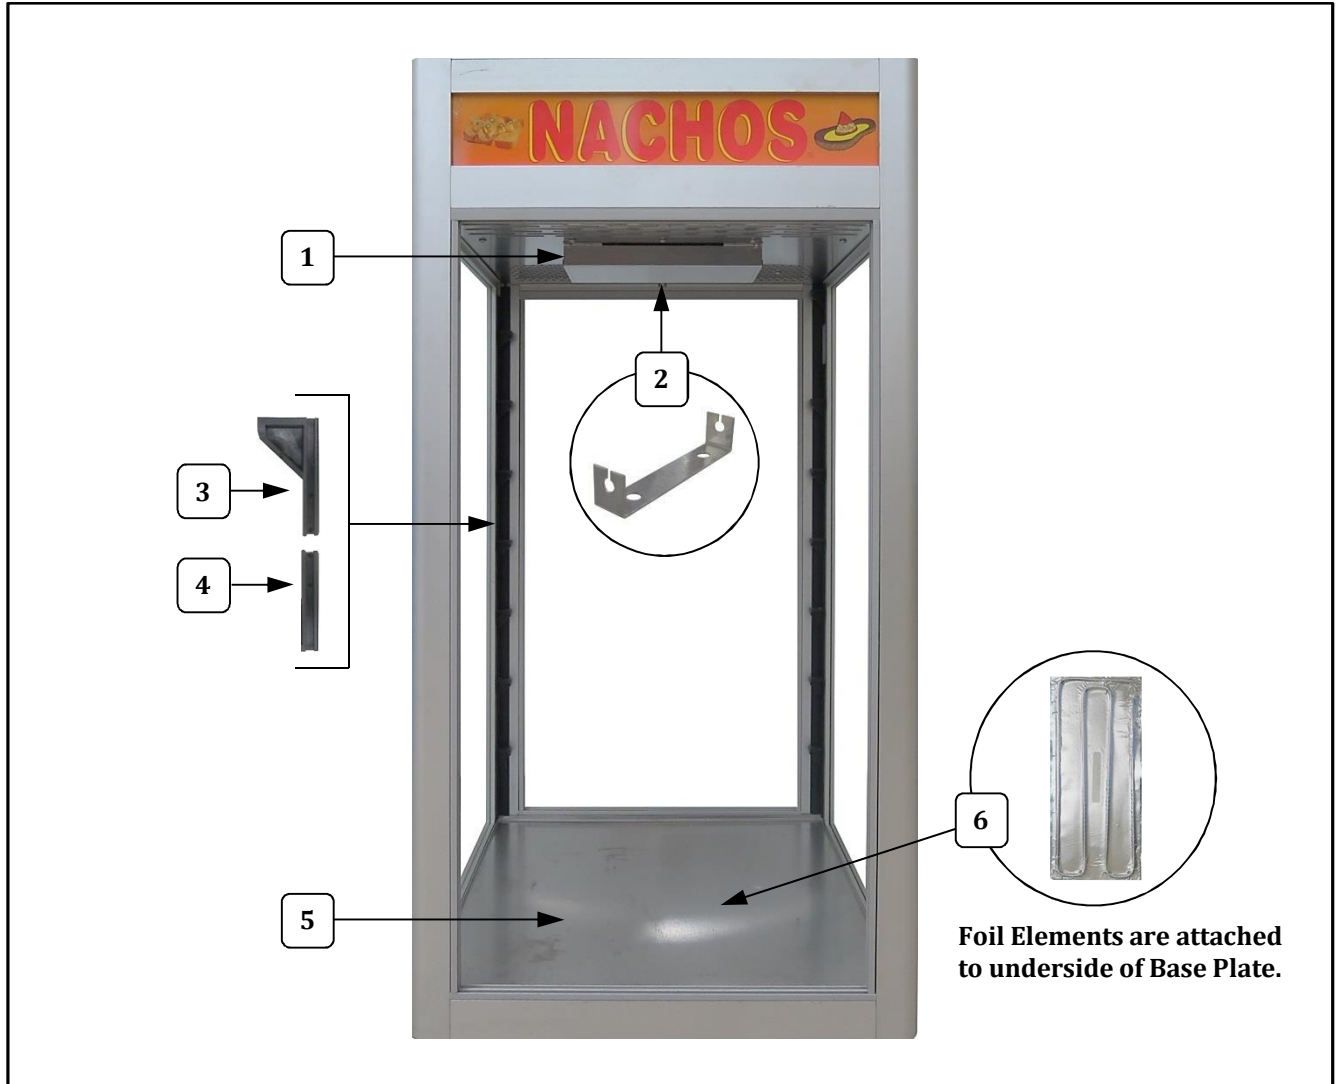

Item	Part Description	Part No.
1	HEAT DEFLECTOR	38995
2	BULB KEEPER	42658
3	RACK HOLDER	39899
4	2 INCH GROOVE FILLER	39903
5	BASE PLATE WELDMENT	74213
6	10 WATT FOIL ELEMENT (2 req'd) Foil Elements are attached to underside of Base Plate	38914



Cabinet Interior – Front View

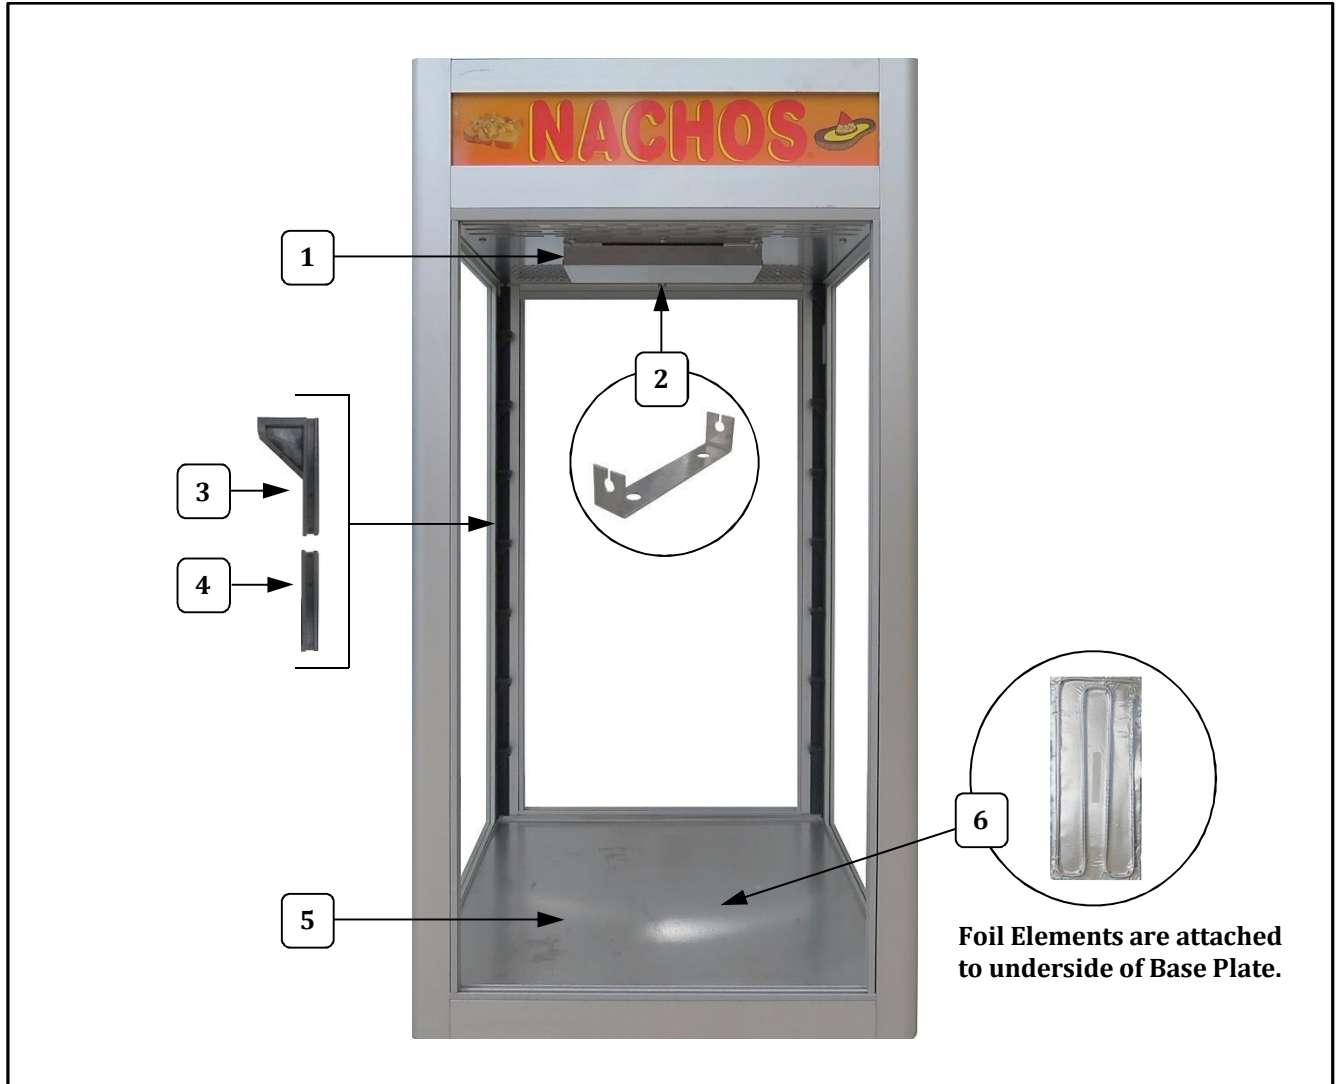

Item	Part Description	Part No.
1	HEAT DEFLECTOR	38995
2	BULB KEEPER	42658
3	RACK HOLDER	39899
4	2 INCH GROOVE FILLER	39903
5	BASE PLATE WELDMENT	74213
6	10 WATT FOIL ELEMENT (2 req'd) Foil Elements are attached to underside of Base Plate	38914



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021



Cabinet Interior – Top View – Parts List

Item	Part Description	Part No.
1	TOP PLATE	74203
2	ACCESS COVER	74211
3	THERMOSTAT BRACKET	74265
4	145°F THERMOSTAT	87996
5	600 WATT HEAT ELEMENT	74264
6	AXIAL FAN	40721
7	EXHAUST BLOWER PLUG AND CORD	47199
8	END CONNECTOR	74207
9	LIGHT TUBE HOLDER	41020
10	LIGHT SHIELD	74216
11	LIGHT TUBE	41057
12	120 VOLT LIGHT BALLAST	41022
13	LIGHT STARTER	41023
14	LIGHT TUBER STARTER HOLDER	41021