



GG36G



Serial #: _____



Conforms to ANSI
STD Z83.11b -2009
Certified to CSA
STD 1.8b -2009

Intertek

Conversion Kit Instructions for the Globe Gas Countertop Manual Griddle Models:

Manually Controlled: GG15G, GG24G, GG36G, GG48G,

For Installation and Service on Your Gas Griddle:

1. Visit our website at www.globefoodequip.com
2. Or call the Globe Service Department at 937-299-8625 and ask for contact information for your local service company.

Visit our website for information on additional products available from Globe.

www.globefoodequip.com

Slicers, Mixers, Countertop Cooking Equipment, Meat Choppers & Scales

- IMPORTANT NOTICE -

Conversion instructions are for conversion of the MANUAL GRIDDLE. The instructions provided in this kit are for the conversion of Natural Gas to L.P. Gas and refer to the conversion of the unit and kit provided. An authorized licensed technician must be called to perform the complete conversion of the unit. Failure to properly convert this unit can result in serious injury, property damage or death, and will void the warranty.



Gas Griddle (Manually Controlled) Conversion Kit Instructions



Conforms to ANSI
STD Z83.11b -2009
Certified to CSA
STD 1.8b -2009

Intertek




WARNING Do not attempt gas conversion by yourself. Gas conversion of your unit is to be made by a certified/licensed technician. Locate an authorized Globe servicer at www.globefoodequip.com or call 800-347-5423.

CONVERSION


Instructions are for conversion from Natural Gas to Propane (L.P.) on all models. The conversion should be done before connecting the unit to the gas supply. Units are shipped from the factory equipped for use on natural gas. Parts necessary for L.P. (liquid propane) are provided with the unit. **Turn off the main gas supply before doing any maintenance. (Use only factory supplied regulator!)**



1. Remove the knobs and front panel to help with access.

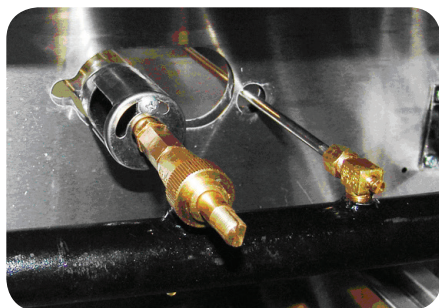


2. Unscrew bolts and pilot valve, then remove the manifold.

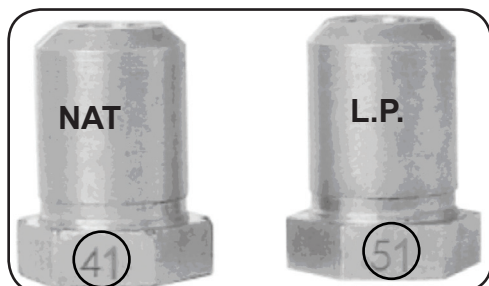

3. Replace the orifice fittings into the valve.
Note: Unit Number on side of orifice fittings.


4. Replace the front panel and knobs

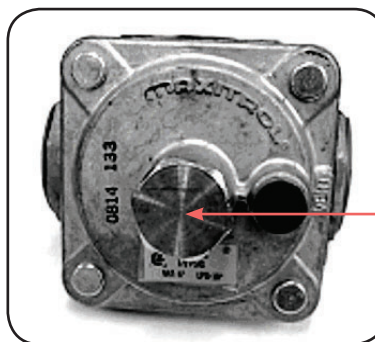


Convertible regulator with octagon cap. Unscrew from regulator.

5. Before installing the included convertible regulator, unscrew the octagon cap. You can read (NAT) on the plastic insert attached to the head of the cap; flip it over and snap back in place.

Pictured is the plastic insert. Pull off insert from octagon cap and reverse the plastic insert position so that the L.P. position is attached to the octagon cap head.

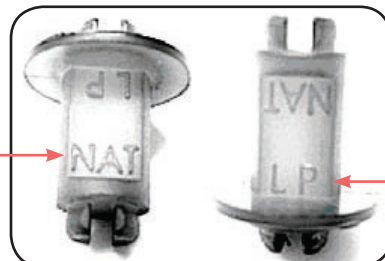

L.P. Position of insert. Regulator is now converted to L.P.

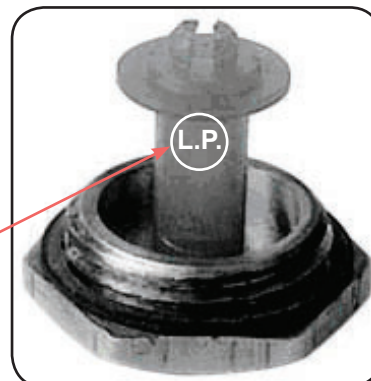

L.P. Position

6. Continue with installation.



Specifications are subject to change without notice.

