

Limited Scale Warranty

Globe Food Equipment Company ("GFE") warrants to the original purchaser of new equipment that said equipment, when installed in accordance with our instructions within the United States and subject to normal use, is free from defects in material or workmanship for a period of one year (excludes wear/ expendable parts) from purchase date. Contact factory for warranty procedures if scale failure occurs.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED. GFE EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR EXPRESSED OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

GFE'S OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIRING OR REPLACING EQUIPMENT WHICH PROVES TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITHIN THE APPLICABLE WARRANTY PERIOD. All repairs pursuant to this Warranty will be performed by an Authorized Designated GFE Service Location during normal working hours. IN NO EVENT SHALL GFE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES TO BUYER OR ANY THIRD PARTY, INCLUDING, WITHOUT LIMITATION, LOSS OF PROPERTY, PERSONAL INJURY, LOSS OF BUSINESS OR PROFITS OR OTHER ECONOMIC LOSSES, OR STATUTORY OR EXEMPLARY DAMAGES, WHETHER IN NEGLIGENCE, WARRANTY, STRICT LIABILITY, OR OTHERWISE.

This warranty is given only to the first purchaser from a retail dealer. No warranty is given to subsequent transferees.

Periodic maintenance of equipment including but not limited to weight checks or recalibration, damage to load cell, lost parts, misuse and abuse, adjustments, water damage, improper installation, and normal wear are not covered under this warranty.

This warranty is not in force until such time as an online registration form has been received by GFE within 30 days from the date of installation.
Register at www.globefoodequip.com/support/warranty-registration-form.

THE FOREGOING WARRANTY PROVISIONS ARE A COMPLETE AND EXCLUSIVE STATEMENT BETWEEN THE BUYER AND SELLER. GFE NEITHER ASSUMES NOR AUTHORIZES ANY PERSONS TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SAID EQUIPMENT.

Visit our website to register your product
WWW.GLOBEFOODEQUIP.COM

WARRANTY REGISTRATION
GO TO WWW.GLOBEFOODEQUIP.COM
TO FILL OUT AND SUBMIT YOUR WARRANTY REGISTRATION.

www.globefoodequip.com/support/warranty-registration-form



Serial #: _____



***NOT LEGAL FOR TRADE**
IP67 Waterproof

Instruction Manual for **Chefmate®** Portion Control Scale Model **GPS10-S**

For all after sales support, visit www.globefoodequip.com

- Complete the Warranty Registration
- Find an Authorized Servicer
- View Parts Catalogs

For additional Technical Support call Globe at 1-866-260-0522.

- IMPORTANT SAFETY NOTICE -

This manual contains important safety instructions which must be strictly followed when using this equipment.

Maintain and use this manual as a reference for training.

Safety Tips

This manual contains a number of precautions to follow in order to help promote safe use of this equipment.

Warnings related to possible damage to the equipment are indicated by:

⚠ CAUTION

Warnings affecting your personal safety are indicated by:

⚠ WARNING

To ensure proper and safe operation, the general safety tips below must be followed.

- **DO NOT** disassemble the scale.
- **ONLY** trained and qualified service personnel should attempt repairs.
- **DO NOT** drop or apply a strong shock to the scale.
- **DO NOT** leave any items on the weighing platter. This can damage the scale.
- **DO NOT** put the scale in a dishwasher.
- **NEVER** immerse the scale in water without weighing platter installed.

Installation

1. Place the scale on a stable flat surface.
2. Get power to the unit by one of two ways:
 - a. Installing Batteries – Remove six screws from battery cover on the bottom of the scale.
 - aa. Install three AA-batteries. **NOTE:** Batteries are not included with the scale.
 - ab. Install battery cover and six screws to secure batteries in scale.
 - b. Open the AC Adapter power plug cover located on the rear of the scale. Connect the AC Adaptor to the receptacle and plug into an electrical outlet.
3. Place stainless steel weighing platter over top portion of scale.

Operating Instructions

1. Make sure nothing is on or touching weighing platter.
2. Turn the unit on by pressing the On/Off key. Scale display will initially show all 8's and after three seconds display will show 0's.

NOTE: A "Lo" warning will appear on display when battery power is insufficient.
3. Scale weighs in: pounds (lb), ounces (oz), pounds (lb) & ounces (oz), kilograms (kg), and grams (g) mode. Press the Units key to switch between weighing modes. An arrow will illuminate on the display screen next to the unit of measure selected.
4. Scale can weigh in Gross or Net modes.
 - a. If Net weighing is needed, place empty container (or tare weight) on the weighing platter and press the Tare/Zero key.

Operating Instructions

- b. The display will show zeros and an arrow will illuminate on the left of the display next to Tare.
- c. When the empty container is removed from weighing platter, the tare weight is shown as a negative amount and is indicated by an arrow on the display next to tare.

NOTE: When no tare weight is used, you are in the Gross weighing mode and there will be no arrow next to tare.

5. Place the product (including container if tare weight is being used) on the stainless steel weighing platter. The total weight is displayed.

NOTE: If the weight of the object is over the maximum capacity, the display will show "----". Remove the object from the platter and reduce the weight of the object.

6. Remove the first product and continue weighing the next item. If the tare weight needs to be changed for a new product, then press the Tare/Zero key again to set it to zero and repeat the steps above for Net weighing.
7. Press the On/Off key to turn the scale off.

NOTE: The scale will automatically shut-off after 5 minutes of no activity whether it is operating on battery or AC power.

Cleaning

⚠ CAUTION

- **NEVER** place scale in sink without weighing platter installed.
 - **DO NOT** hose down or pressure wash any part of the scale.
 - **Excess moisture will damage scale and void warranty.**
1. If the scale is running on AC power, unplug the scale.
 2. Close the AC Adapter power plug cover.

NOTE: When platter is installed, scale is fully submersible for easy clean-up. Rated IP67, the scale is protected from dust and water proof up to 1 meter for 30 minutes.
 3. Make sure weighing platter is installed on the scale.
 4. Place scale in sink with a warm water solution.
 5. Use a clean cloth and a mild detergent to wipe down the entire scale.
 6. Remove scale from sink.
 7. Remove weighing platter. Use a clean, damp cloth and a mild detergent to wipe down scale housing.
 8. Install weighing platter. Use a mild, non-bleach, non-chlorine sanitizer.

Dilute sanitizer per supplier's instruction!