

OPERATOR AND SERVICE MANUAL

Part Number 141910 Rev A

INA/2
DOMESTIC

MODEL: INA/2
Inclined Agitator Mixer Assembly

Stainless Steel
Tilt Out Agitator Drive System
Variable Speed Agitator Controls
For 40, 60 & 80 Gallon Kettles
DEE/4T- (40,60) INA/2
DHT- (40,60) INA/2
D - (40,60,80) INA/2



Model D INA/2



THIS MANUAL MUST BE RETAINED FOR FUTURE REFERENCE. READ, UNDERSTAND AND FOLLOW THE INSTRUCTIONS AND WARNINGS CONTAINED IN THIS MANUAL.

WARNING
DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.



Information contained in this document is known to be current and accurate at the time of printing/creation. Unified Brands recommends referencing our product line websites, unifiedbrands.net, for the most updated product information and specifications.



IMPORTANT — READ FIRST — IMPORTANT

- CAUTION:** BE SURE ALL OPERATORS READ, UNDERSTAND AND FOLLOW THE OPERATING INSTRUCTIONS, CAUTIONS, AND SAFETY INSTRUCTIONS CONTAINED IN THIS MANUAL.
- WARNING:** THIS UNIT IS INTENDED FOR USE IN THE COMMERCIAL HEATING, COOKING AND HOLDING OF WATER AND FOOD PRODUCTS, PER THE INSTRUCTIONS CONTAINED IN THIS MANUAL. ANY OTHER USE COULD RESULT IN SERIOUS PERSONAL INJURY OR DAMAGE TO THE EQUIPMENT AND WILL VOID WARRANTY.
- WARNING:** THE KETTLE MUST BE INSTALLED BY PERSONNEL QUALIFIED TO WORK WITH ELECTRICITY. IMPROPER INSTALLATION CAN RESULT IN INJURY TO PERSONNEL AND/OR DAMAGE TO EQUIPMENT.
- DANGER:** ELECTRICALLY GROUND THE UNIT AT THE TERMINAL PROVIDED. FAILURE TO GROUND UNIT COULD RESULT IN ELECTROCUTION AND DEATH.
- WARNING:** AVOID ALL DIRECT CONTACT WITH HOT EQUIPMENT SURFACES. DIRECT SKIN CONTACT COULD RESULT IN SEVERE BURNS.
- WARNING:** AVOID ALL DIRECT CONTACT WITH HOT FOOD OR WATER IN THE KETTLE. DIRECT CONTACT COULD RESULT IN SEVERE BURNS.
- CAUTION:** DO NOT OVER FILL THE KETTLE WHEN COOKING, HOLDING OR CLEANING. KEEP LIQUIDS A MINIMUM OF 2-3" (5-8 cm) BELOW THE KETTLE BODY RIM TO ALLOW CLEARANCE FOR STIRRING, BOILING AND SAFE PRODUCT TRANSFER.
- WARNING:** TAKE SPECIAL CARE TO AVOID CONTACT WITH HOT KETTLE BODY OR HOT PRODUCT WHEN ADDING INGREDIENTS, STIRRING OR TRANSFERRING PRODUCT TO ANOTHER CONTAINER.
- WARNING:** DO NOT STAND ON OR APPLY UNNECESSARY WEIGHT OR PRESSURE ON THE KETTLE FRONT OR POURING LIP. THIS COULD RESULT IN OVERLOAD AND FAILURE OF THE TILT MECHANISM, AND POSSIBLE SERIOUS INJURY AND BURNS TO THE OPERATOR AND OTHERS.
- WARNING:** WHEN TILTING KETTLE FOR PRODUCT TRANSFER:
- 1) WEAR PROTECTIVE OVEN MITT AND PROTECTIVE APRON.
 - 2) USE CONTAINER DEEP ENOUGH TO CONTAIN AND MINIMIZE PRODUCT SPLASHING.
 - 3) PLACE CONTAINER ON STABLE, FLAT SURFACE, AS CLOSE TO THE KETTLE AS POSSIBLE.
 - 4) STAND TO LEFT OR RIGHT SIDE OF KETTLE (DEPENDING ON TILTING HANDLE PLACEMENT) WHILE POURING. DO NOT STAND DIRECTLY IN POUR PATH OF HOT CONTENTS.
 - 5) POUR SLOWLY, MAINTAIN CONTROL OF KETTLE BODY HANDLE AT ALL TIMES, AND RETURN KETTLE BODY TO UPRIGHT POSITION AFTER CONTAINER IS FILLED OR TRANSFER IS COMPLETE.
 - 6) DO NOT OVER FILL CONTAINER. AVOID DIRECT SKIN CONTACT WITH HOT CONTAINER AND ITS CONTENTS.
- CAUTION:** KEEP FLOORS IN FRONT OF KETTLE WORK AREA CLEAN AND DRY. IF SPILLS OCCUR, CLEAN IMMEDIATELY, TO AVOID SLIPS OR FALLS.
- WARNING:** FAILURE TO CHECK PRESSURE RELIEF VALVE OPERATION PERIODICALLY COULD RESULT IN PERSONAL INJURY AND/OR DAMAGE TO EQUIPMENT.
- WARNING:** WHEN TESTING, AVOID ANY EXPOSURE TO THE STEAM BLOWING OUT OF THE PRESSURE RELIEF VALVE. DIRECT CONTACT COULD RESULT IN SEVERE BURNS.
- WARNING:** TO AVOID INJURY, READ AND FOLLOW ALL PRECAUTIONS STATED ON THE LABEL OF THE WATER TREATMENT COMPOUND.
- WARNING:** BEFORE REPLACING ANY PARTS, DISCONNECT THE UNIT FROM THE ELECTRIC POWER SUPPLY.
- WARNING:** TURN OFF POWER AT THE CIRCUIT BREAKER PRIOR TO INSTALLATION OR SERVICE.
- WARNING:** THE MIXER MUST BE INSTALLED BY PERSONNEL WHO ARE QUALIFIED TO WORK WITH ELECTRICITY, IMPROPER INSTALLATION CAN RESULT IN INJURY TO PERSONNEL AND/OR DAMAGE TO EQUIPMENT.
- WARNING:** ANY MECHANICAL OR ELECTRICAL CHANGE MUST BE APPROVED BY THE GROEN FOOD SERVICE ENGINEERING DEPARTMENT.
- WARNING:** TURN OFF AGITATOR BEFORE ADDING INGREDIENTS OR INSPECTING KETTLE CONTENTS. DO NOT WEAR LOOSE CLOTHING OR JEWELRY AROUND OPERATING MIXER KETTLE. KEEP WELL CLEAR OF ROTATING MIXER ARMS AND PADDLES AT ALL TIMES.

IMPORTANT — READ FIRST — IMPORTANT

- WARNING:** THE UNIT IS EQUIPPED WITH AN AUTOMATIC CUTOFF SWITCH. IF POWER IS ON WHEN A TILTED MIXER IS LOWERED INTO THE OPERATING POSITION, THE MIXER WILL AUTOMATICALLY START.
- CAUTION:** STARTING WITH THE MIXER SET AT HIGH SPEED MAY CAUSE MATERIAL TO SPILL OUT OF THE KETTLE ON TWO SPEED AND VARIABLE SPEED UNITS.
- CAUTION:** UNDER HEAVY LOAD DO NOT RUN THE MIXER CONTINUOUSLY AT SLOWER THAN 5% OF FULL SPEED. SLOWER OPERATION COULD DAMAGE THE SPEED CONTROL.
- WARNING:** BEFORE CLEANING ANY PART OF THE MIXER, OTHER THAN THE AGITATOR, DISCONNECT THE ELECTRICAL SUPPLY AT THE CIRCUIT BREAKER OR FUSE BOX TO AVOID POSSIBLE ELECTRICAL SHOCK.
- WARNING:** KEEP WATER AND SOLUTIONS OUT OF THE CONTROLS, ELECTRICAL WIRING, AND DRIVE MECHANISM. NEVER SPRAY OR HOSE THE MIXER.
- CAUTION:** WHEN YOU CONNECT THE SCRAPER WITH THE YOKE, MAKE SURE THE SCRAPER IS CURVED THE SAME WAY AS THE KETTLE. A REVERSED SCRAPER WILL NOT SCRAPE AND CAN CAUSE SERIOUS DAMAGE.
- WARNING:** AVOID CONTACT WITH CLEANING PRODUCTS IN ACCORDANCE WITH SUPPLIER AND MANUFACTURER RECOMMENDATIONS. MANY CLEANERS ARE HARMFUL TO THE SKIN, EYES, MUCOUS MEMBRANES AND CLOTHING. READ THE WARNINGS AND FOLLOW DIRECTIONS ON THE CLEANER LABEL.
- WARNING:** USE OF ANY REPLACEMENT PARTS OTHER THAN THOSE SUPPLIED BY GROEN OR THEIR AUTHORIZED DISTRIBUTOR VOIDS ALL WARRANTIES AND CAN CAUSE BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT.
- WARNING:** SERVICE PERFORMED BY OTHER THAN FACTORY AUTHORIZED PERSONNEL WITH VOID ALL WARRANTIES.
- WARNING:** BEFORE REPLACING ANY PARTS, SHUT OFF ALL ELECTRIC POWER SUPPLIES TO THE COOKER/MIXER.
- WARNING:** USE ONLY GROEN-SUPPLIED PARTS. SUBSTITUTION OF UNAUTHORIZED OR GENERIC PARTS CAN RESULT IN BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT.



WARNING

**DO NOT PLACE HANDS, TOOLS, OR HOSES IN KETTLE
WHILE AGITATOR IS MOVING**

AGITATOR INSTRUCTIONS

***WARNING* AGITATOR AREA MUST BE CLEAR OF OBSTRUCTION BEFORE OPERATION**

TO RUN AGITATOR

ENSURE KETTLE IS FULLY UPRIGHT

ENSURE MIXER HEAD IS FULLY DOWN AND LATCHED

SET THE SPEED DIAL TO DESIRED SPEED

TURN THE START SWITCH TO ON

TO STOP AGITATOR

PRESS THE RED STOP BUTTON OR TURN THE SWITCH TO OFF



WARNING

**DO NOT PLACE HANDS, TOOLS, OR HOSES IN KETTLE
WHILE AGITATOR IS MOVING**

Table of Contents

IMPORTANT OPERATOR WARNINGS 2-3
REFERENCES 5
EQUIPMENT DESCRIPTION 6
INSTALLATION AND START-UP 6
OPERATION 8
CLEANING 9
MAINTENANCE 11
TROUBLESHOOTING 12
PARTS LIST 13
ELECTRICAL SCHEMATIC 14
SERVICE LOG 15
WARRANTY 16-17

References

NATIONAL FIRE PROTECTION ASSOCIATION
60 Battery March Park
Quincy, Massachusetts 02269

NFPA/70 The National Electrical Code

Equipment Description

The Groen INA/2 assembly is an electrically powered mixer with an inclined agitator, which is incorporated into Groen kettles of 40 to 80 gallon capacity. The patented design provides a gentle lifting and folding action which avoids the build-up of heavy particles at the bottom of the kettle. This action is uniquely efficient in preparing such products as stews, ground meat, pie fillings, franks and beans, and similar items.

The agitator frame is constructed of tubular stainless steel and fitted with shovel-type scrapers. It is easily removed for cleaning.

The mixer has a variable speed drive with electrical speed control.

For a description of the kettle component of your cooker/mixer, see the separate kettle manual.

Installation and Start-Up



WARNING
TURN OFF POWER AT THE CIRCUIT BREAKER PRIOR TO INSTALLATION.

THE MIXER MUST BE INSTALLED BY PERSONNEL WHO ARE QUALIFIED TO WORK WITH ELECTRICITY. IMPROPER INSTALLATION CAN RESULT IN INJURY TO PERSONNEL AND/OR DAMAGE TO EQUIPMENT.

ANY MECHANICAL OR ELECTRICAL CHANGE MUST BE APPROVED BY THE GROEN FOOD SERVICE ENGINEERING DEPARTMENT.

Your Groen mixer has been test operated at the factory and is furnished with all internal wiring. It is complete and ready for final connection. A wiring diagram is furnished at the rear of this manual.

A. Installation is as follows:

1. Set the cooker/mixer in place and level it. If the mixer is a tilting model, confirm that there is enough rear or side clearance, depending on model, and overhead clearance to tilt the mixer safely through its entire tilting range. Provide enough clearance to permit access for service as well. Fasten the cooker/mixer to the floor or deck to reduce chances that the unit

could tip over if unit is provided with flanged feet.

2. Provide the proper electric power supply as specified on the electrical information plate attached to the mixer. Observe local codes and/or The National Electrical Code in accordance with ANSI/NFPA 70 - latest edition. The installation must conform to the code that has the more strict requirements.
3. Your mixer requires a permanent connection with the electrical service. Use waterproof conduit and waterproof connectors for this connection.
4. Any electrical service for the kettle will require a separate connection. See the specific kettle manual.



WARNING
TO PREVENT POSSIBLE ELECTRIC SHOCK, GROUND THE UNIT AT THE TERMINAL PROVIDED.

5. Use the following check list to confirm that the installation is correct.

Unit level

Adequate clearance for tilting

Access for service

Unit fastened down

Mixer power supply conforms to information plate and code

Electrical conduit and connections are waterproof

Mixer grounded

For instructions on installing the kettle component of your cooker/mixer, see the separate kettle manual.

B. Initial Start-Up


After the mixer is installed, take the following actions to confirm that the equipment is operating correctly.

1. Tilt the mixer through its complete tilting range to ensure that there is no hazard or interference.
2. Make sure the agitator is properly coupled with its drive shaft. If the mixer has a slip-on coupling, the drive pin must be positioned at the end of the J-slot. If a bolted coupling is employed, the bolts must be turned to the proper position and the nuts must be tightened. (See photographs).
3. When the mixer is in operating position, each scraper blade should touch the inside of the kettle during at least part of each revolution of the agitator.
4. At the circuit breaker or fuse box, turn on the electric power supply to the mixer.
5. Switch on the drive and confirm that the mixer operates smoothly throughout its speed range.
6. Make sure the agitator turns in the correct direction, so it pushes the nylon scraper blades ahead of the agitator bar.


If the unit functions as described above, it is ready for use. If the unit does not function as intended, call your local Groen authorized service agency.

For instructions on initial start-up of the kettle component of your cooker/mixer, see the separate kettle manual.

WARNING
TURN OFF AGITATOR BEFORE ADDING INGREDIENTS OR INSPECTING KETTLE CONTENTS. DO NOT WEAR LOOSE CLOTHING OR JEWELRY AROUND OPERATING MIXER KETTLE. KEEP WELL CLEAR OF ROTATING MIXER ARMS AND PADDLES AT ALL TIMES.

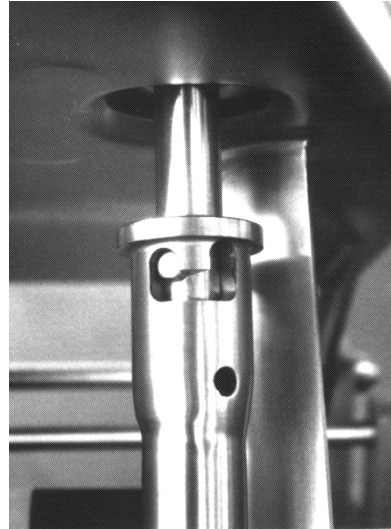

Slip-On Coupling

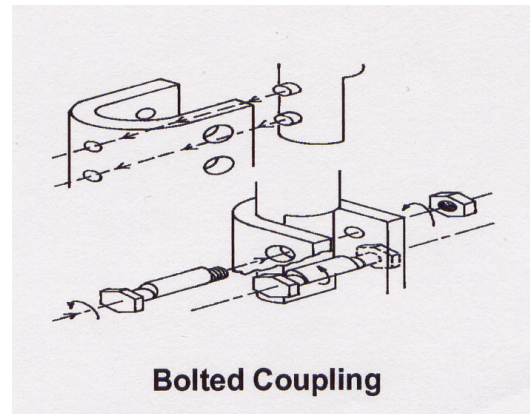

Bolted Coupling

Kettles with 100 Gallon capacity and larger

Operation

WARNING
TURN OFF AGITATOR BEFORE ADDING INGREDIENTS OR INSPECTING KETTLE CONTENTS. DO NOT WEAR LOOSE CLOTHING OR JEWELRY AROUND OPERATING MIXER KETTLE. KEEP WELL CLEAR OF ROTATING MIXER ARMS AND PADDLES AT ALL TIMES.

1. Before you operate the mixer, make sure that the agitator is firmly connected with the drive shaft and properly positioned in the kettle. The agitator must be positioned so every scraper blade touches the kettle during at least part of each revolution. To connect the agitator:
 - a. Slip-on Coupling: Slide the coupling up onto the shaft as far as it will go. Then turn the agitator and pull it down, so that the drive pin on the shaft becomes firmly seated against the end of the J-slot.
 - b. Bolted Coupling:
 1. Guide the two pins of the drive shaft into the holes in the coupling.
 2. **With the lobe of the cam pointing up**, and while holding the two cam bolts, insert the bolts through the larger holes in the side of the coupling. The bolts must pass the flat part of the shaft, and through the smaller holes in the other side of the coupling.
 3. Turn the cam bolts toward the shaft 1/8 turn or until the lobe of the cam is snug against the flat side of the shaft.
 4. Fasten the bolts in place with the supplied hex nuts, and tighten the nuts.

2. If the mixer has been tilted up, lower it into operating position.

WARNING
THE UNIT IS EQUIPPED WITH AN AUTOMATIC TILT CUTOFF SWITCH. IF POWER IS ON WHEN A TILTED MIXER IS LOWERED INTO OPERATING POSITION, THE MIXER WILL AUTOMATICALLY START.

3. Turn on electric power to the unit at the circuit breaker or fuse box.
4. Switch on the drive.
5. Set the desired mixing speed.


CAUTION
STARTING WITH THE MIXER SET AT HIGH SPEED MAY CAUSE MATERIAL TO SPILL OUT OF THE KETTLE ON VARIABLE SPEED UNITS.

- a. On a variable speed drive with electrical speed control, turn the speed adjustment knob.

CAUTION
UNDER HEAVY LOAD DO NOT RUN THE MIXER CONTINUOUSLY AT SLOWER THAN 5% OF FULL SPEED. SLOWER OPERATION COULD DAMAGE THE SPEED CONTROL.

6. To stop the mixer, switch off the drive. If the cooker/mixer will be cleaned or serviced, or will not be used for a week or longer, cut off all power supplies to the unit at the circuit breaker or fuse box.
7. Switch off the drive, before you tilt the mixer. To tilt the mixer, first unlatch it (See Photograph). For some units, you may need to tilt the kettle forward slightly to let the agitator clear the kettle wall as you tilt the mixer.
8. As you tilt the mixer out of the kettle, clean any clinging product from the agitator, so product will not drip onto the outside of the kettle or surroundings, and so the weight of product will not make the mixer fall down.

To operate the kettle component of your cooker/mixer, see the separate kettle manual

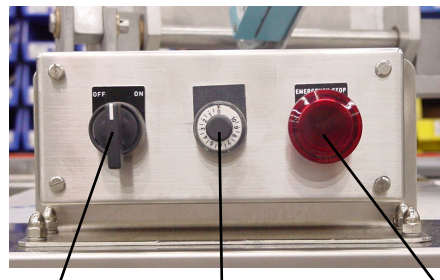

ON/OFF Switch Mixer Speed Control Knob Emergency Stop Switch

Cleaning

A. Suggested Tools & Materials.


1. A good stainless steel cleaner.
2. Stiff brush.
3. Sanitizer Solution

B. Precautions

WARNING
BEFORE CLEANING ANY PART OF THE MIXER, OTHER THAN THE AGITATOR, SHUT OFF ALL ELECTRIC POWER TO THE COOKER/MIXER AT THE CIRCUIT BREAKER OR FUSE BOX, TO AVOID POSSIBLE ELECTRIC SHOCK.

KEEP WATER AND SOLUTIONS OUT OF THE CONTROLS, ELECTRICAL WIRING, AND DRIVE MECHANISM. NEVER SPRAY OR HOSE THE MIXER.

blade (Figure 8). Position the loop of the locking clip, so the hairpin clip will pass through it, when the hairpin clip is

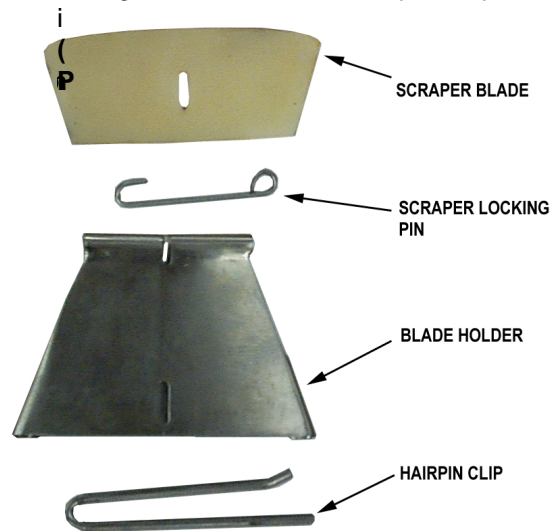


There are four parts to each scraper blade.

C. Procedure

1. Wash the agitator as soon as possible after use. If the unit is in continuous use, thoroughly clean and sanitize all parts of the mixer at least once every 12 hours
2. Disassemble the scrapers and clean them along with the rest of the agitator, then reassemble them. To disassemble a scraper:
 - a. Pull the hairpin clip out of the yoke. To make this easier, squeeze the ends of the clip closer together. (See Photos).
 - b. Remove the locking clip, then pull the plastic scraper blade out of its holder.

To reassemble the scraper:

- a. Push the blade as far as it will go into the holder
- b. From the back or convex side of the holder (the side that will be facing the kettle wall), hook the locking clip through the slot in the

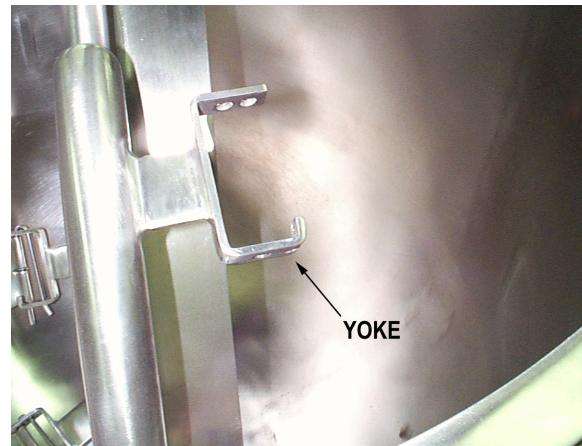

CAUTION

WHEN YOU CONNECT THE SCRAPER WITH THE YOKE, MAKE SURE THE SCRAPER IS CURVED THE SAME WAY AS THE KETTLE. A REVERSED SCRAPER WILL NOT SCRAPE AND CAN CAUSE SERIOUS DAMAGE.

- c. Position the scraper in the yoke, then insert the hairpin clip. Squeeze the ends of the clip closer together to help them pass through the second side of the yoke. **Make sure the hairpin clip has passed through the loop of the locking clip.**

WARNING

AVOID CONTACT WITH ANY CLEANER, AS RECOMMENDED BY THE SUPPLIER. CAREFULLY READ THE WARNINGS AND FOLLOW THE DIRECTIONS ON THE LABEL OF THE CLEANER. MANY CLEANERS ARE HARMFUL TO THE SKIN, EYES, MUCOUS MEMBRANES, AND CLOTHING.

3. Prepare a hot solution of the cleaning compound as instructed by the supplier. Wash the agitator parts and rinse them well. Use a cloth moistened with the cleaning solution to clean other parts of the mixer.
4. To remove materials stuck to the agitator, use a brush, sponge, cloth, plastic or rubber scraper, or plastic wool along with the cleaning solution. To make washing easier, let the cleaning solution soak into the residue. When you clean the stainless steel parts, do **not** use any abrasive material (like metal sponges or scouring powder) or metal implement (like a spoon, scraper, or wire brush) that might scratch the surface. Scratches make the surface hard to clean and provide places for bacteria to grow. Do **not** use steel wool, which may leave particles imbedded in the surface and cause eventual corrosion and pitting.
5. As part of the daily cleaning program, clean all surfaces that may have been soiled. Remember to check such parts as the back and underside of the drive housing.
6. When the agitator needs to be sanitized, use a sanitizing solution equivalent to one that supplies 100 parts per million available chlorine. Obtain advice on the best sanitizing agent from your supplier of sanitation products. Following the supplier's directions, apply the sanitizer after the agitator has been washed, then rinse off the sanitizer

completely. It is recommended that the agitator be sanitized just before use.

CAUTION

NEVER LEAVE A SANITIZER IN CONTACT WITH THE SURFACE OF STAINLESS STEEL LONGER THAN 20 MINUTES. LONGER CONTACT CAN CAUSE CORROSION.

7. The exterior of the unit may be polished with a good quality stainless steel cleaner.

Cleaning procedures for the kettle component of your cooker/mixer are described in the separate kettle manual.

Maintenance

WARNING

USE OF ANY REPLACEMENT PARTS OTHER THAN THOSE SUPPLIED BY GROEN OR THEIR AUTHORIZED DISTRIBUTOR VOIDS ALL WARRANTIES AND CAN CAUSE BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT.

SERVICE PERFORMED BY OTHER THAN FACTORY AUTHORIZED PERSONNEL WILL VOID ALL WARRANTIES.

A. Periodic Service

1. The interior of control and drive housings should be kept clean and dry.
2. Electrical wiring should be kept securely connected and in good condition.
3. Regular service of the mixer should include cleaning the motor and checking the reducer gearcase. Check oil level at 3000 hrs of operation or every 6 months. Change oil completely every 3 years or 15,000 hrs. Lubricant type is "GG Arctic SHC 23". Food grade lubricant (Mobil product)

B. Component Replacement

WARNING

BEFORE REPLACING ANY PARTS, SHUT OFF ALL ELECTRIC POWER SUPPLIES TO THE COOKER/MIXER.

All internal wiring is marked as shown on the schematic drawings in this manual. Be sure that new components are wired in the same manner as the old components.

C. Service Records

A Service Log is provided at the rear of this manual. Each time service is performed on this equipment, enter the date on which the work was done, what was done, and who did it. Keep this log with the equipment.

Service procedures for the kettle component of the cooker/mixer are described in the separate kettle manual.

Troubleshooting

Your Groen Mixer will operate smoothly and efficiently if properly maintained. However, the following is a list of checks to make in the event of a problem. If the actions suggested do not solve the problem, call your authorized Groen Service Representative. For the phone number of the nearest agency, check the Groen web site at www.groen.com, ask your area Groen representative or call the Groen Parts and Service Department. If an item on the list is followed by X, the work should only be performed by a qualified service representative.


WARNING		
USE OF ANY REPLACEMENT PARTS OTHER THAN THOSE SUPPLIED BY GROEN OR THEIR AUTHORIZED DISTRIBUTORS CAN CAUSE INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT AND WILL VOID ALL WARRANTIES.		
SERVICE PERFORMED BY OTHER THAN FACTORY-AUTHORIZED PERSONNEL WILL VOID ALL WARRANTIES.		
SYMPTOM	WHO	WHAT TO CHECK
		X indicates items which must be performed by an authorized technician.
Motor will not run.	User	a. Power supply to the unit. b. For a mechanical overload. (example: frozen product) c. Circuit breaker or fuse.
	Auth Service Rep Only	d. That the tilt switch is closed. X e. For a ground or short in the motor. X f. Overload heaters. X
Motor runs slowly.	User	a. For a mechanical overload.
	Auth Service Rep Only	b. For open motor field circuit, by checking field current. X
Motor speed varies rapidly.	User	a. For an oscillating load, by disconnecting the mixer drive from the agitator and checking motor speed.
	Auth Service Rep Only	b. Variable speed controller. X
Motor overheats and/or sparks excessively.	User	a. For a mechanical overload. b. Ambient temperature is high.
	Auth Service Rep Only	c. Incorrect supply voltage to motor. X d. Excessive variation (under voltage or over voltage) in supply voltage. X e. Single phasing due to loose connection in supply line or a blow fuse. X
Circuit breaker or heater cuts out frequently.	User	a. For a mechanical overload.
	Auth Service Rep Only	b. Whether line voltage is too high. X c. Motor armature and wiring for ground or short. X d. For open motor field circuit, by checking field current. X e. For defective circuit breaker. X f. Motor is improperly connected. X

Troubleshooting guidance for the kettle component of your cooker/mixer is contained in the separate kettle manual.

Parts List

To order parts, contact your authorized Groen Service Agency. Supply the model designation, part description, part number and quantity required. Where applicable, provide the voltage and phase as well.

WARNING
USE ONLY GROEN-SUPPLIED PARTS. SUBSTITUTION OF UNAUTHORIZED OR GENERIC PARTS CAN RESULT IN BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT.

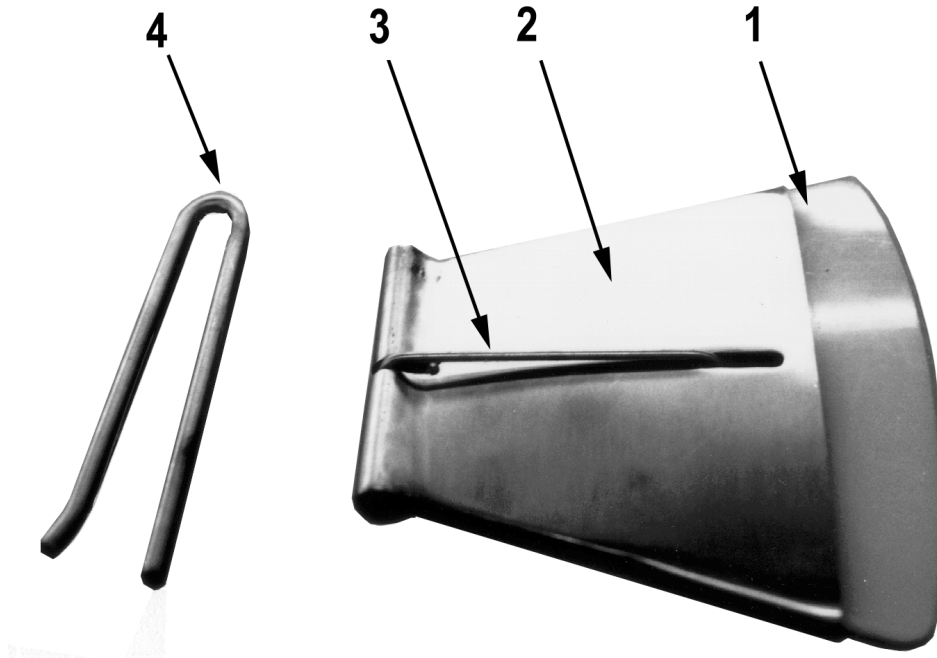


Key	Description	Part No.
1	Blade Assembly, Scraper	005100
2	Blade, Scraper, Nylon	005098
3	Holder, Blade Assembly	123270
4	Clip, Scraper Locking	003655
5	Clip, Hairpin Retaining	003652

Parts List

Description	Part No.	Description	Part No.
Switch Assembly Agitator	128485	Blade Scraper	005098
Switch Assembly Speed Control	115341	Holder Scraper Blade	123270
Switch Assembly Emergency Stop	115342	Spacer D/INA/2 Motor	003727
Enclosure Nema	128458	Plate Bridge	040180
Enclosure , 12" x 16" x8"	128460	Plate Pivot	040181
Inverter 230 Vac	120436	Breaker Bar For D/INA	073487
Inverter 380/460V	128975	Drive 208/360V 1.5HP	141902
Terminal Block 3 - Pole	003888	Drive 1.5 HP 240/480V	141901
Contactoer 12Amp 4 Pole	111072	Drive 2 HP 240/480V	128972
Fuse Block	096809	Drive,2HP 360Volt	115303B
Fuse 20 Amp	071489	Control Mounting Bracket	128490
Transformer, 100 Va	115356	Connector Straight	001674
Lug, Ground 14-6 AWG	119829	Connector	N58643
Wiring Kit, Variable Speed	132383	Bracket, Enclosure Mounting	128515
Relay, Control	115358	Mounting Plate	128519
Socket Relay	115359	Mounting Bracket Assembly	128516
Wiring Schematic Variable	128491	Ring Basic External	006792
Wiring Harness	128482	Limit Switch	081019
Wiring Harness Control Box	128483	Latch	009188
Wiring Harness Control Box to Agitator	128484	Handle & Latch Sub-Assy	016101
Fuse Block (Type M) 3 Pole	120706	Handle & Bracket Assy	009185
Cover Agitator Tilt	006972	Handle & Spring Rod Assy	009181
Switch Limit	081019	Handle 3/8" x 1" x 21"	001932
Mounting Tilt Switch Bracket	137966	Knob Red Ball Handle	012961
Latch	009188	Ting Tollerence	012962
Handle & Latch	044115	Bearing Cylindrical	009236
Handle & Spring	009180	Spring .162" Wire x .098" OD x3"	009237
Handle 3/8" x 1" x 12"	001931	Plunger/Spring	MS17005
Handle & Bracket	009238	Insert handle & latch Assy	016219
Knob Red Ball Handle	012691	Cover Handle & Latch Assy	016220
Ring Tolerance	012692	Mounting Plate	016221
Shaft Drive INA Type	116168	Mount Arm Angle 3" x 3" x3"	016223
Shield Drip	026709	Shaft Drive 'INA' Type	116168
Post Pivot Assy	040193	Shield Drip	026709
Power-Aid Assy	040196	Post Pivot Assy	040193
Agitator Assy 40Gal	043540	Power Aid Assy	040196
Agitator Assembly 60 Gal	040207	Coupling Agitator	003883
Agitator Assy 80Gal	026684	Plate Bridge	040180
Yoke Blade	004923	Plate Pivot	040181
Scraper Blade Assy	005100	Breaker Bar 3/16" x2 1/2 " x 2 1/2 " x 30"	073487
Pin Agitator Blade	003652	Bar Mounting Drive	N56890
Clip Scraper Locking	003655		

OM/INA/2

Electrical Schematics

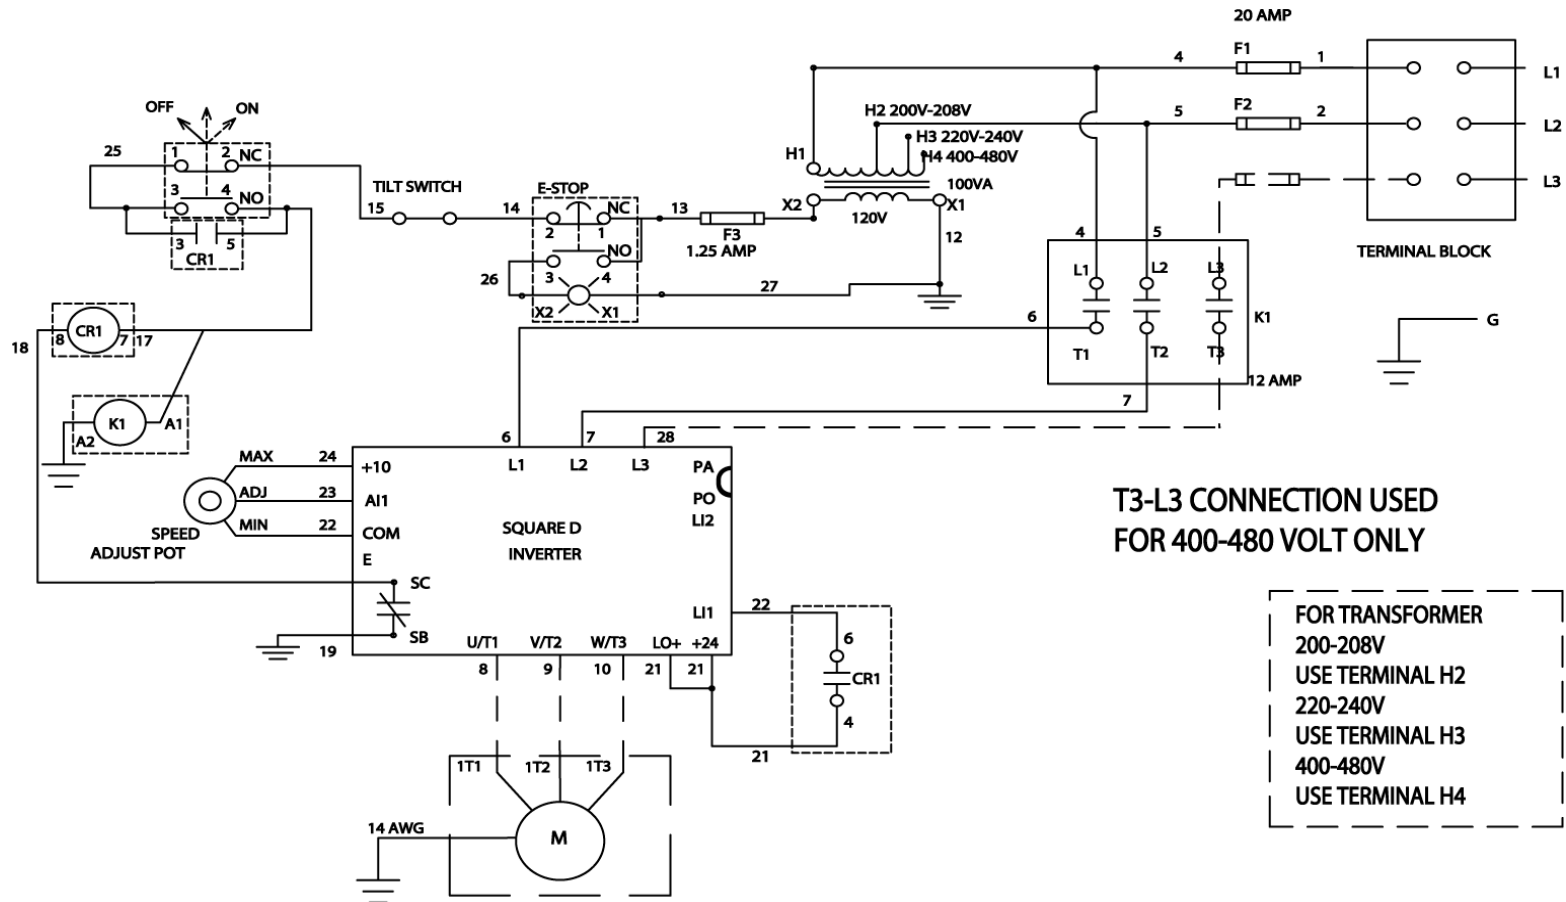

**T3-L3 CONNECTION USED
FOR 400-480 VOLT ONLY**

FOR TRANSFORMER
200-208V
USE TERMINAL H2
220-240V
USE TERMINAL H3
400-480V
USE TERMINAL H4

P/N 128491
REV. B

LIMITED WARRANTY TO
COMMERCIAL PURCHASERS*
(U.S. & Canadian Sales Only.)

Groen warrants to original commercial purchaser/users that foodservice equipment manufactured by Groen ("Groen Equipment") (other than CapKold foodservice equipment) shall be free from defects in material and workmanship for (12) twelve months from the date of installation or fifteen (15) months from date of shipment from Groen, whichever date first occurs (the "Warranty Period"), in accordance with the following terms and conditions:

- I. This warranty is limited to replacement parts and related labor for Groen Equipment located at its original place of installation in the United States and Canada.
- II. Damage to Groen Equipment that occurs during shipment must be reported to the carrier, and is not covered under this warranty. The reporting of any damage during shipment is the sole responsibility of the commercial purchaser/user of such Groen Equipment.
- III. For Groen Convection Combo™ Steamer-Ovens, HyPerSteam™ Convection Steamers and HyPlus™ Pressureless Steamers, Groen further warrants to the original commercial purchaser/users of such Groen Equipment that the atmospheric steam generators or boilers contained in such Groen Equipment shall be free from defects in material and workmanship for twenty-four (24) months from the date of installation or twenty-seven (27) months from date of shipment from Groen, whichever date first occurs, provided that: (a) the original purchaser/user shall have also purchased and installed a Groen PureSteam Water Treatment System™ for use in connection with such Groen Convection Combo™ Steamer-Oven, HyPerSteam™ Convection Steamer or HyPlus™ Pressureless Steamer on or before the date such Groen Equipment was installed, (b) the original purchaser/user has continuously used such Water Treatment System in connection with such Groen Equipment from the date of installation, and (c) the commercial purchaser/user shall have maintained such Water Treatment System in accordance with the maintenance and filter cartridge replacement recommendations of Groen, and otherwise maintained such Oven or Steamer in accordance with all other operational and maintenance recommendations of Groen.
- IV. Groen further warrants to the original commercial purchaser/users of Groen Convection Combo™ Steamer-Ovens that the electronic relay and control board contained in such Groen Convection Combo™ Steamer-Oven shall be free from defects in material and workmanship for twenty-four (24) months from the date of installation or twenty-seven (27) months from date of shipment from Groen, whichever date first occurs.
- V. During the Warranty Period, Groen, directly or through its authorized service representative, will either repair or replace, at Groen's sole election, any Groen Equipment determined by Groen to have a defect in material or workmanship. As to any such warranty service during the Warranty Period, Groen will be responsible for related reasonable labor and portal to portal transportation expenses (time & mileage) incurred within the United States and Canada.
- VI. This warranty does not cover boiler maintenance, calibration, periodic adjustments as specified in operating instructions or manuals, consumable parts (such as scraper blades, gaskets, packing, etc.), and labor costs incurred for removal of adjacent equipment or objects to gain access to Groen Equipment. This warranty does not cover defects caused by improper installation, abuse, careless operation, or improper maintenance of Groen Equipment. This warranty does not cover damage to Groen Equipment caused by poor water quality or improper boiler maintenance.

OM/INA/2

- VII. THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EACH OF WHICH IS HEREBY EXPRESSLY DISCLAIMED. THE REMEDIES DESCRIBED ABOVE ARE EXCLUSIVE AND IN NO EVENT SHALL GROEN BE LIABLE FOR SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES FOR THE BREACH OR DELAY IN PERFORMANCE OF THIS WARRANTY.
- VIII. Groen Equipment is for commercial use only. If sold as a component of another (O.E.M.) manufacturer's equipment, or if used as a consumer product, such Equipment is sold AS IS and without any warranty.

* (Covers all Groen Equipment (other than CapKold foodservice equipment) ordered after September 11, 2001).



1055 Mendell Davis Drive
Jackson, MS 39272
Telephone 601 372-3903
FAX 601 373-9587

OM/INA/2
(Revised 3/03)
Part Number 141910 Rev A