

Spare Parts List

NO	DESCRIPTION	Serial #	QTY	COMPONENT PNC	Model Number	Model PNC
1	Cabinet	ALL	1	N/A	KCICDC4FH	738371
2	Glass cover Bracket	ALL	2	0USDMH	KCICDC4FH	738371
3	Front LED Light	ALL	3	0USDOF	KCICDC4FH	738371
4	Front Glass	ALL	1	0USDOD	KCICDC4FH	738371
5	Bottom Bracket	ALL	1	0USDN9	KCICDC4FH	738371
6	Middle Bracket	ALL	1	0USDN8	KCICDC4FH	738371
7	Glass	ALL	1	0USDOC	KCICDC4FH	738371
8	Left Cover	ALL	1	0USDMA	KCICDC4FH	738371
9	Left Glass	ALL	1	0USDMK	KCICDC4FH	738371
10	Front Glass Bracket	ALL	2	0USDMP	KCICDC4FH	738371
11	Top Bracket(F)	ALL	1	0USDN6	KCICDC4FH	738371
11a	Top Bracket(R)	ALL	1	0USDN7	KCICDC4FH	738371
12	Glass Back Door	ALL	2	0USDOE	KCICDC4FH	738371
13	Right Glass	ALL	1	0USDML	KCICDC4FH	738371
14	Gasket/Grip	< 004332000182	4	0USX04	KCICDC4FH	738371
		≥ 004332000182	4	0USO60	KCICDC4FH	738371
15	Glass Clamp 2	ALL	4	0USDOZ	KCICDC4FH	738371
16	Back Door	ALL	1	0USDN5	KCICDC4FH	738371
16a	Back Door Gasket	ALL	1	0USO42	KCICDC4FH	738371
16b	Back Door Hinge	ALL	1	0USO44	KCICDC4FH	738371
16c	Back Door Latch	ALL	1	0USO45	KCICDC4FH	738371
17	Right Cover	ALL	1	0USDMB	KCICDC4FH	738371
18	Plug	ALL	1	0USDQJ	KCICDC4FH	738371
19	Shelf Components	ALL	1	N/A	KCICDC4FH	738371
19a1	Tub Bracket 1 - Front/Back	ALL	2	0USDMX	KCICDC4FH	738371
19a2	10.16" Lower Tub Bracket Insert for Standard Tub	< 004332000182	0	N/A	KCICDC4FH	738371
		≥ 004332000182	4	0USX05	KCICDC4FH	738371
19a2-1	Bracket Rubber Grip	ALL	16	0USFB1	KCICDC4FH	738371
19a3	Tub Bracket Panel (Lower brackets welded to panel) Tub Bracket Panel (with slits for removable brackets)	< 004332000182	1	0USDMY	KCICDC4FH	738371
		≥ 004332000182	1	0USX06	KCICDC4FH	738371
19a4	8.25" Lower Tub Bracket Insert for Ropak Tub	< 004332000182	0	N/A	KCICDC4FH	738371
		≥ 004332000182	4	0USFB5	KCICDC4FH	738371
19a4-1	Bracket Rubber Grip	ALL	16	0USFB1	KCICDC4FH	738371
19a5	Tub Cover Bracket 1 - Front/Back	ALL	2	0USDMW	KCICDC4FH	738371
19a6	Tub Cover Bracket 2	ALL	1	0USDMZ	KCICDC4FH	738371
19a7	Tub Cover	ALL	1	0USDN0	KCICDC4FH	738371
20	Back Platform	ALL	1	0USDOA	KCICDC4FH	738371
21	Back Door Guide	ALL	1	0USDOB	KCICDC4FH	738371
22	Back Platform Bracket	ALL	2	0USDMG	KCICDC4FH	738371
23	Lower Glass Lid	ALL	1	0USDN4	KCICDC4FH	738371
24	Lock and Key	ALL	1	0USDMV	KCICDC4FH	738371
25	Upper Glass Lid	ALL	1	0USDN3	KCICDC4FH	738371
26	Inner Cabinet LED Light	ALL	1	0USDQK	KCICDC4FH	738371
27	Screw Cover	ALL	10	0USDMI	KCICDC4FH	738371
28	Rear Cover	ALL	1	0USDKP	KCICDC4FH	738371
29	Control Bracket	ALL	1	0USDL0	KCICDC4FH	738371
30	Control Panel	ALL	1	0USDL7	KCICDC4FH	738371
31	Digital Thermostat	ALL	1	0USDQI	KCICDC4FH	738371
32	Switch	ALL	1	0USD86	KCICDC4FH	738371
33	Frost Removal - Ice scraper	ALL	1	0USDMQ	KCICDC4FH	738371
34	Filter Dryer	< 003162000182	1	0USD78	KCICDC4FH	738371
		≥ 003162000182	1	0USO59	KCICDC4FH	738371
35	external condenser	ALL	1	0USDL4	KCICDC4FH	738371
36	Cover	ALL	1	0USDKS	KCICDC4FH	738371
37	Fan	ALL	1	0USD69	KCICDC4FH	738371
37a	Fan Blade	ALL	1	0USDQO	KCICDC4FH	738371
38	Fan Bracket	< 004332000182	1	0USD70	KCICDC4FH	738371
		≥ 004332000182	1	0USO65	KCICDC4FH	738371
39	Power Cord	ALL	1	0USDL8	KCICDC4FH	738371
40	Compressor	ALL	1	0USDQQ	KCICDC4FH	738371
40a	Relay	ALL	1	0USDQX	KCICDC4FH	738371
40b	Overload	ALL	1	0USDQV	KCICDC4FH	738371
40c	Start Capacitor	ALL	1	0USDQW	KCICDC4FH	738371

40d	Run Capacitor	ALL	1	0USDQY	KCICDC4FH	738371
41	Control Connection Wire	ALL	1	0USDL5	KCICDC4FH	738371
42	Transformer (Inner Cabinet and Front LED)	ALL	1	0USDMU	KCICDC4FH	738371
43	Transformer - FRONT LED	ALL	0	N/A	KCICDC4FH	738371
44	Castor without Brake	ALL	2	0USDKQ	KCICDC4FH	738371
45	Water Collector	ALL	1	0USDKO	KCICDC4FH	738371
46	Dipping Well Mounting Screw	ALL	0	N/A	KCICDC4FH	738371
47	Castor with Brake	ALL	2	0USDKR	KCICDC4FH	738371
48	Load Boundaries	ALL	1	0USDKN	KCICDC4FH	738371

Exploded View Of KCICDC4FH

