

OWNER'S MANUAL

CAPELLA STEAMER

MODELS:

- CAPELLA - 4
- CAPELLA - 6
- CAPELLA - 8
- CAPELLA - 10
- CAPELLA - 12

- INSTALLATION
- OPERATION
- MAINTENANCE
- STEAM COOKING
GUIDELINES
- PARTS LISTS
- PARTS & SERVICE



35 Garvey Street, Everett, MA 02149:
Tel: (617) 387-4100
Fax: (617) 387-4458
custserv@mfi.com, www.mfi.com

1/2012

REV. 2

TABLE OF CONTENTS

DESCRIPTION

IMPORTANT NOTES FOR SAFETY, INSTALLATION AND OPERATION 4

A INTRODUCTION 5

- 1) Product Description: 5
- 2) Safety Features: 5
- 3) Dimensions: 5
- 4) Service Contacts: 6

B SERVICE CONNECTIONS 7

C INSTALLATION 9

D STARTUP PROCEDURE 10

E OPERATION 10

F CLEANING GUIDELINES 12

- 1) Daily Cleaning 12
- 2) Monthly Cleaning 12

G STEAM COOKING GUIDELINES 14

- 1) Cooking with atmospheric / pressureless steam: 14
- 2) Recommended Uses: 14
- 3) Typical Foods: 14
- 4) Tips on cooking frozen product 14
- 5) Blanching: 14
- 6) Tips on pan use 14
- 7) Other helpful hints 15

H WARNINGS AND CAUTIONS 15

- 1) Warnings 15
- 2) Cautions 16

I WIRING DIAGRAM 17

- 1) 208/240 Volts 17
- Figure 1* 17
- 2) 480 Volts 18
- Figure 2* 18

J ILLUSTRATED PARTS LIST 19

- 1) Cabinet Assembly 19
- Figure 3* 19
- Figure 4* 19
- Figure 5* 20
- Figure 6* 20
- 2) Door Assembly 21
- Figure 7* 21
- Figure 8* 21
- 3) General Assembly 22
- Figure 9* 22
- Figure 10* 23
- Figure 11* 23
- 4) Control Panel Components & Heating Elements 24

<i>Figure 12</i>	24
<i>Figure 13</i>	24
<i>Figure 14</i>	25
<i>Figure 15</i>	26
<i>Figure 16</i>	26
<i>Figure 17</i>	27
5) Convection Fan and Motor Components	28
<i>Figure 18</i>	28
<i>Figure 19</i>	28

IMPORTANT NOTES FOR SAFETY, INSTALLATION AND OPERATION

!	WARNING: This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
---	--

!	WARNING: Improper installation adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.
---	--

!	WARNING: Never spray water into electrical components.
---	---

!	WARNING: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
---	---

!	WARNING: Please make certain that every operator of this piece of equipment has been instructed on its proper and safe use, and has read and understands all warnings, cautions, and notes in this manual.
---	---

This equipment is to be installed with backflow protection to comply with applicable Federal, State and local codes. (For units with automatic water-fill only)

This manual should be retained for future reference.

Intended for commercial use only. Not for household use.

It is recommended that this manual be read thoroughly and that all instructions be followed carefully.

A INTRODUCTION

1) Product Description:

Congratulations on purchasing the Market Forge *Capella*. The *Capella* is a single compartment countertop or two-compartment floor model steamer featuring pressureless steam cooking and a circulating fan inside the cooking chamber to speed cooking. The cooking chamber of the *Capella* is treated with a scratch resistant, non-stick surface. A low water probe prevents the steamer from running dry and a ball valve drain is provided for easy safe draining.

CAUTION: Do not use utensils, steel wool, or other harsh abrasives to clean your steamer. Scratching of the non-stick surface and stainless steel casing may occur.

2) Safety Features:

As with any cooking process, or with any piece of commercial cooking equipment, there are potential hazards to both the operator and the piece of equipment if care is not taken. In designing the *Capella* steamer, safety features have been built in to protect against many of these potential hazards, but TRAINING OF EACH OPERATOR AND CAREFUL ADHERENCE TO ALL WARNINGS ARE NECESSARY TO ENSURE THE SAFETY OF USERS.

- a) **Diagnostic sensor shut-off:** The thermostat controller has a built in diagnostic feature that will automatically shut down all heaters if the sensor probe fails, which will avoid overheating.
- b) **Low water shutoff** In the event of a low water condition, the Add Water indicator light on the control panel will light up. If the steamer is not refilled within one minute, the steamer will shut down
- c) **High Limit shutoff:** If the steamer runs dry the heaters will shut down.
- d) **Door open safety switch:** There is a safety switch built into the door frame that shuts down heaters, fan and lights when the door is opened. Once the door is closed, all functions return. **THE DOOR MUST BE FIRMLY CLOSED IN ORDER FOR THE STEAMER TO FUNCTION. IF STEAM IS ESCAPING, DOOR IS NOT PROPERLY SHUT AND MAY AFFECT COOK TIMES, PRODUCT QUALITY AND WATER CONSUMPTION.**

3) Dimensions:

- 4-pan: External dimensions are 24" wide x 26¼" high (plus 4"-6" adjustable legs) x 28 ¾" deep (plus vent pipe).
- 6-pan: External dimensions are 24" wide x 33¼" high (plus 4"-6" adjustable legs) x 28 ¾" deep (plus vent pipe).
- 8-pan: External dimensions are 24" wide x 52½" high (plus 6"-9" adjustable legs) x 28 ¾" deep (plus vent pipe).
- 10-pan: External dimensions are 24" wide x 59½" high (plus 6"-9" adjustable legs) x 28 ¾" deep (plus vent pipe).
- 12-pan: External dimensions are 24" wide x 66½" high (plus 6"-9" adjustable legs) x 28 ¾" deep (plus vent pipe).

4) Service Contacts:

Should repairs be required, a network of authorized agencies is available to assist with prompt service.

A current Directory of Authorized Service Agencies may be obtained by contacting:

Market Forge Industries, Inc.
35 Garvey Street
Everett, Massachusetts 02149-4403
Telephone: (617) 387-4100
Toll Free: (866) 698-3188
Fax: (617) 387-4458
Outside MA Fax: (800) 227-2659
Parts / Price / Service Telephone: (888) 259-7076
Email: custserv@mfii.com
Web Site: www.mfii.com

B SERVICE CONNECTIONS

Models: Capella – 4 & Capella – 6

Capella Service Connections:

EC	Electrical Connection – 1 1/8" knock-out hole for electrical connection. Rating provided on data label.
D	Drain – A 6 ft. removable drain hose

ELECTRICAL (Capella - 4) 60 Hz


Voltage	pH	kW	Amps
208	1	8	39
240	1	8	33
208	3	8	22
240	3	8	19
480	3	7.2	9

ELECTRICAL (Capella - 6) 60 Hz

Voltage	pH	kW	Amps
208	1	8	38.5
240	1	8	33.3
208	3	8	22.2
240	3	8	19.3
208	1	9.8	47
240	1	9.8	41
208	3	9.8	27
240	3	9.8	24
480	3	9	12

NOTES:

- 4" clearance left mandatory, right and rear is recommended.
- Location near a floor drain is recommended.
- Refer to the electrical charts (above and to the left) for proper voltage requirements for each steamer.

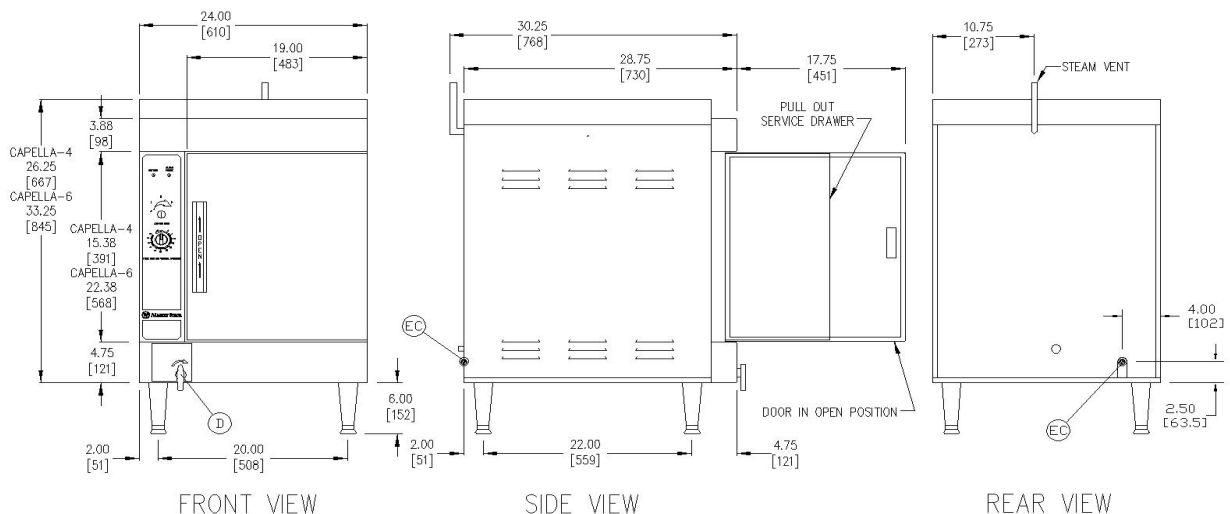

SERVICE CONNECTIONS (continued)

Models: Capella – 8, Capella – 10 & Capella – 12

Capella Service Connections:

EC	Electrical Connection – 1 1/8" knock-out hole for electrical connection. Rating provided on data label.
D	Drain – A 6 ft. removable drain hose

ELECTRICAL (Capella - 4) 60 Hz


Voltage	pH	kW	Amps
208	1	8	39
240	1	8	33
208	3	8	22
240	3	8	19
480	3	7.2	9

ELECTRICAL (Capella - 6) 60 Hz

Voltage	pH	kW	Amps
208	1	8	38.5
240	1	8	33.3
208	3	8	22.2
240	3	8	19.3
208	1	9.8	47
240	1	9.8	41
208	3	9.8	27
240	3	9.8	24
480	3	9	12

NOTES:

- 4" clearance left mandatory, right and rear is recommended.
- Location near a floor drain is recommended.
- Steamer sizes can be mix matched. Two 4-pan (Capella-4) stacked together makes an 8-pan steamer (Capella-8), a 4-pan and 6-pan (Capella-4 & -6) stacked together makes a 10-pan steamer (Capella-10), and two 6-pans (Capella-6) stacked together makes a 12-pan steamer (Capella-12).
- Refer to the electrical charts (above and to the left) for proper voltage requirements for each steamer.
- Each compartment, stacked or single, requires a separate electrical connection.

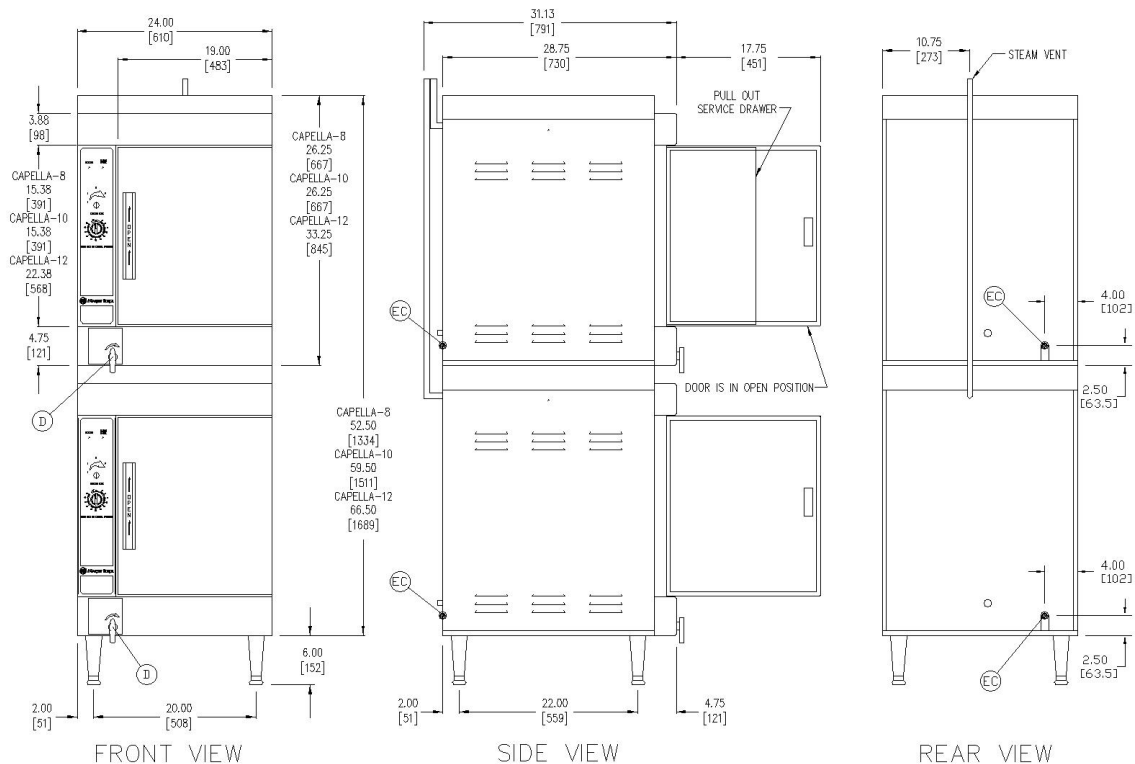

C INSTALLATION

- 1) **Damage Inspection:** Reporting shipping damage is the responsibility of the purchaser. Do not discard packaging if filing a freight damage claim. Upon receipt of steamer immediately inspect the exterior of packaging for damage. Remove wrapping. Inspect the exterior of the *Capella* for visible shipping damage.
- 2) **Unpacking / removal from pallet:** To remove the steamer from the pallet, carefully cut the strapping.
- 3) **Legs / caster installation:** Install 4 legs or casters (shipped inside the steamer) into the threaded mounting holes located on the base of the unit. If casters are supplied, locking casters should be on the front of the steamer.
- 4) **Vent pipe installation (double & single compartment steamers):** Steamers come with the vent piping in rear of unit completely assembled. DO NOT BLOCK VENT PIPE.
- 5) **Drain Hose:** Shipped inside the steamer is the hose used for draining the steamer. DO NOT DISCARD.
- 6) **Physical location of steamer:** 98% of all maintenance and service can be done from the front or left side. Some local codes may require installation under ventilation, but ventilation is not required in most cases. A minimum of 4" clearance from adjacent equipment on the left side and rear is recommended.

NOTE: A location near water and a floor sink or drain is useful, but not necessary.

NOTE: A qualified electrician must perform all electrical hookups and meet all local codes. Installation is the responsibility of the purchaser.

- 7) **Electrical hookups:** The access hole to electrically wire your steamer is located in the bottom right corner (facing the back of the steamer) on the rear panel. Your electrician may install a cord set to make the steamer more portable or the unit may be hard-wired. Please follow local codes when installing the cord set.

NOTE: Stacked units will require 2 separate electrical connections.

- 8) **Electrical Diagrams:** The electrical diagrams are located on the inside of the left side access panel.
- 9) **Recommended water quality:** This steamer does not require filtered water. However, it is important to properly drain and clean your water reservoir at least daily (see 6.0 Cleaning Guidelines in this manual).

NOTE: Low water probe will not sense water level if steamer uses de-ionized water or reverse osmosis water.

- 10) **Ball valve drain:** Drain is activated by a manual ball valve on the lower left front of the steamer. Turn counterclockwise to open, clockwise to close. Drain hose, supplied with steamer, must be connected to threaded drain before opening valve.

!

WARNING: The water may be very hot. It is advisable to allow the water to cool down before draining. Leaving the door open will aid cooling.

- 11) **Leveling:** Once the legs have been installed and the steamer has been placed in its final location, the unit must be leveled. This is done by turning the base of the leg. Use the top of the steamer casing as a reference. It is recommended to use a level to ensure proper installation.

!

WARNING: The steamer must be level in order for the low water sensor to function properly.

- 12) **Rack Installation:** Two pan support racks have been included with the steamer. Both racks are identical; there is no specific left or right side rack. To install, position a rack inside the cooking chamber so that the mounting bracket, with the 'tear-drop' shaped

hole, fits over the pre-installed rack screws at the top of the cooking chamber wall. The curved wires on the rack should be facing to the front of the steamer. Repeat this process for the rack mounted on the other side. These racks are designed to be removed easily for cleaning.

- 13) Function tests / inspection:** Once your steamer is in place and properly leveled, plumbed and wired, test unit to make sure it is functioning properly.

D STARTUP PROCEDURE

- 1) Using a soft sponge and mild detergent, wipe out the interior of the cooking chamber to remove shipping debris prior to use. Rinse with clean water.

CAUTION: Do not use any abrasive cleaners, utensils or scrubbers on the non-stick coating. Use vinegar and water to clean reservoir. Nylon bristle brushes or soft sponges are recommended.

- 2) Make sure drain valve is in the **CLOSE** position. Fill the cooking chamber with 2 ½ gallons of water – or to about 1" below the door opening. Make sure water is above the level of the water probe on the lower left side of the cooking chamber.
- 3) Power on/heat up: Make sure the door is closed and turn the cooking mode selector to the **1** position. The Amber **HEAT** light on the upper left corner of the control panel will turn on. You may smell smoke from oils left from manufacturing – don't be alarmed, they will burn off quickly. When the **HEAT** light goes out you are ready to test the steamer.
- 4) Turn the cooking mode selector switch to the **2** position. The **HEATING** light will go on as heat is called for. You may open the door and inspect the steaming process (note that the **HEAT** light goes out and the heaters are turned off when the door is opened).
- 5) Connect the drain hose and put the open end in a bucket or near a floor drain. With the door shut, open the drain and allow the water to drain below the water level probe. The **ADD WATER** light should illuminate.
- 6) To shut down your steamer, turn the cooking mode selector to the **OFF** position (**⓪**).
- 7) Open the steamer door to allow it to cool and complete draining the cooking chamber. If draining into a bucket, remember that the cooking chamber can hold 2 ½ gallons of hot water.

WARNING: The water hose or ball valve may be very hot. It is advisable to allow the water to cool down before draining. Leaving the door open will aid in cooling.

E OPERATION

- 1) **Electrical Connection:** Make sure unit is plugged into a proper receptacle or wired properly and the breaker for the circuit is on.
- 2) **Add water:** Make sure drain valve is in the **CLOSE** position. Pour 2 ½ gallons of water into the cooking chamber through the door opening – or to about 1" below the door opening. Make sure water is above the level of the water probe on the lower left side of the cooking chamber. Water should not touch the bottom of the lowest pan. If the steamer is hot from prior use DO NOT add water to a hot, dry cooking chamber. Allow cooking chamber to cool with the door open first.
- 3) **Reservoir fill / Add Water light:** During the course of the day, as the water level decreases, the **ADD WATER** light (green) on the control panel will come on. If this light is on for more than one minute a safety sensor will shut down power to the heaters. The light will remain on until water is added. When water is added the cooking chamber will come back to the set temperature and resume cooking. If water is added and the **ADD WATER** light remains on, the water level sensing probe must be cleaned. Lower the water level until the probe is above water and clean probe with a sponge or cloth. Refill the cooking chamber. The **ADD WATER** light should go out. If water is not added or the probe is not cleaned within 15 minutes, the **CLEAN PROBE** light (red) will come on. When water is added, both **CLEAN PROBE** and **ADD WATER** light should go out. If the

water level sensing probe still needs to be cleaned, both lights will remain on until the probe is cleaned.

CAUTION: Do not add water to a hot, dry cooking chamber. Damage to the cooking chamber may result. If the cooking chamber has run dry, let it cool before refilling.

- 4) **Clean probe light:** If the **CLEAN PROBE** light (red) is illuminated, the water level sensing probe is unable to sense water. The probe is on the lower left side of the cooking chamber. Lower the water level until the probe is above water and clean the metal portion of the probe with a sponge or cloth. When the probe is clean and water is added, the **CLEAN PROBE** light will go out.
- 5) **Condensate trough:** The trough under the door catches water dripping from the door and can be easily removed for emptying.
- 6) **Power on / heat up:** Turn the cooking mode selector switch to the desired setting, **1, 2** or **3**. The steamer will begin warming up. The Amber colored **HEAT** light will turn on and remain on until the pre-heating is completed. Throughout the cooking process the **HEAT** light will come on periodically whenever the heaters are on.

CAUTION: If the door is open, nothing will happen. Close the door and the steamer will turn on and begin warming up.

- 7) **Door operation:** The door must be closed at all times while cooking. If the door is opened during cooking, the heaters will shut down and the amber **HEAT** light will go off until the door is closed. You may open the door at any time to check the progress of cooking, stir product and add or remove cooking pans. If the door handle is loose the door is not firmly shut; re-shut the door by slamming firmly.

8) **Pan combinations:**

Pan Size	Quantity per 4-pan steamer	Quantity per 6-pan steamer
12 x 20 x 1 ¼	8	12
12 x 20 x 2 ½	4	6
12 x 20 x 4	2	4

The Capella steamer accommodates 4" and 6" deep pans. However, for best steam cooking performance 1 ¼" or 2 ½" deep pans work best. Other combinations of these pan sizes will fit in your steamer. The steamer will accommodate gastronorm pans.

- 9) **Cooking:** When ready to cook turn the cooking mode selector dial to the desired setting:

Setting	Temperature	Use for
1	180°	Green vegetables, delicate egg dishes, and seafood for higher yield. Cook times will be slower than steaming.
2	212°	Steam cooking
3	steam plus radiant heat	Heavy dense foods like meat or potatoes, retherm frozen foods.

NOTE: If starchy food products (potatoes, pasta) cause water to get frothy add 2 tablespoons of cooking oil to the water to control foaming.

10) **Shut down and draining of steamer.**

- a) **Shut down:** To shut down the steamer at the end of the day just turn the cooking mode selector dial to **⓪** (OFF).
- b) **Water reservoir draining:** To drain the cooking chamber, first place the open end of the hose into a water receptacle (bucket, floor sink or floor drain) prior to attaching the hose to the steamer. Screw the hose to the brass fitting. Turn valve handle counter-clockwise to open drain. Once the water stops draining, turn valve handle clockwise to close drain and unscrew the drain hose from the steamer. Store the hose in a convenient location for daily use.

!	WARNING: The reservoir water may still be hot. It is advisable to let the water cool down prior to draining.
----------	---

NOTE: Opening the steamer door will speed the cooling process. It is also advisable to leave the steamer door open when not in use. This will lengthen the life of the door gasket.
--

F CLEANING GUIDELINES

1) Daily Cleaning

Once the power is off and the reservoir has been drained, a simple cleaning process should be followed:

!	WARNING: The cooking chamber is designed to retain heat. It may still be hot to the touch when cleaning. Wear protective gloves, or wait for the surface to cool before cleaning. Do not add cold water to a hot, empty cooking chamber until it has cooled down, or damage may result.
----------	--

- Lift the pan racks up and off mounting screws, and remove from the steamer for cleaning.
- Using a soft sponge, clean the non-stick coating on the interior of the cooking chamber.
- Clean the door gasket with gentle soap and water and allow to air dry.

NOTICE: Only use mild soap, vinegar, and water to clean your steamer. Do not use abrasive utensils, caustic cleaners, or products containing chlorine, lye, or phosphorus (such as *Lime-A-Way*). After cleaning, rinse thoroughly by wiping with a wet cloth dampened with fresh water. Never spray water on your steamer.

FAILURE TO FOLLOW PROPER INSTRUCTIONS MAY CAUSE AN UNSAFE CONDITION AND/OR DAMAGE YOUR STEAMER, AND WILL VOID YOUR WARRANTY.

- Rinse the cooking chamber and door area with clean water. Rinse the cavity. Wipe with clean towel or soft sponge.
- Clean the water level sensor probe on the lower left interior with a sponge or cloth to remove ant mineral build up. The probe must be clean for the steamer to operate.
- To remove the white mineral deposits at and below the water line, spray vinegar directly on the mineral build-up using a spray bottle. For heavy mineral deposits, pour two cups of vinegar in the cooking chamber, fill to above the water level sensor probe with water and turn the steamer on for 20 minutes. Turn the steamer off and leave the door open. Allow to soak for several hours. Loosen mineral deposits with a nylon bristled brush. Drain, wipe and rinse with clean water.
- Wipe out the condensate trough located under the door. Remove food particles.

NOTE: It is always advisable to leave the steamer door open when the unit is shut down for the evening. This will extend the life of your gasket.

- Your steamer is now ready for another day's work!

2) Monthly Cleaning

It is recommended to use the Stellar Descaling Powder to clean your steamer on a monthly basis or whenever necessary.

- Make sure the steamer is off and cool.
- Drain water from the cooking cavity and wipe away any food debris.
- Make sure the drain valve is closed.
- Pour one pound of descaling powder per steamer into the bottom of the cooking cavity.

NOTE: One pound is equal to 16 scoops (measuring scoop included), or one-half of a 2lb. jar of descaling powder.
--

For Capella (manual water fill) Steamer:

- Pour 2 ½ gallons water into the bottom of the cooking chamber and set the control to Steam (#2) position.
- Allow the unit to reach steaming temperature and continue steaming for one hour. It may be necessary to add water before the hour is complete. If this is the case, add water, return to steaming temperature, and continue steaming until a total of one hour steaming has been reached.
- Turn the unit off, and allow it to cool for one hour.
- Drain the unit, and rinse the entire cooking cavity thoroughly
- If the unit is heavily scaled, it may be necessary to repeat the process.

To reorder Stellar Descaling Powder, Part Number 92-1009 (case of four 2 lb. bottles), contact your local Parts and Service agency or:

Market Forge Industries, Inc.
 35 Garvey Street
 Everett, Massachusetts 02149-4403
 Telephone: (617) 387-4100
 Toll Free: (866) 698-3188
 Fax: (617) 387-4458
 Outside MA Fax: (800) 227-2659
 Parts / Price / Service Telephone: (888) 259-7076
 Email: custserv@mfii.com
 Web Site: www.mfii.com

G STEAM COOKING GUIDELINES

1) Cooking with atmospheric / pressureless steam:

- Atmospheric or pressureless steaming is perfect for a la carte cooking. The door can always be opened during cooking to add or remove pans of food, to season food or to check on its progress.
- Multiple products can be cooked at one time because there is no crossover of cooking flavors in atmospheric steam. Large and small portions of food can be cooked at the same time.
- Less attention is required to cooking foods and over-cooking is rare.

2) Recommended Uses:

- | | |
|--------------|------------------|
| • a la carte | • blanching |
| • thawing | • poaching |
| • simmering | • stewing |
| • preserving | • rethermalizing |

3) Typical Foods:

- | | |
|-------------------------------|----------------------------|
| • casseroles, fresh or frozen | • cereals |
| • desserts | • eggs |
| • fruits | • meats |
| • pasta | • poultry |
| • potatoes | • prepared foods |
| • rice | • sauces |
| • vegetables, fresh or frozen | • seafood, fresh or frozen |
| • and much more | |

4) Tips on cooking frozen product

- a) Preheat cooking compartment.
- b) Break up frozen vegetables or product, if possible.
- c) If product is an ice block, set it in the pan on its narrowest side. This allows the steam to contact a greater surface area.
- d) Thawing is faster and better for the food in atmospheric steaming.
- e) Make sure frozen product is uniform in size to get best results.
- f) Season vegetables AFTER steaming.
- g) Less seasoning is required because steaming preserves natural flavors.
- h) When reheating prepared foods, stir occasionally to speed heating.
- i) Shallower pans will allow faster cooking times.

5) Blanching:

Many foods can be blanched in atmospheric steam before being finished in ovens, fryers, or on grills and griddles. This reduces total cooking time, helps ensure complete cooking and a moist product. Potatoes, poultry and seafood are excellent examples. Blanching before frying reduces grease absorption by food products.

6) Tips on pan use

- a) For faster cook times, 2 ½" deep perforated pans are recommended.
- b) It is not necessary and we do not recommend covering most pans of product. When cooking with only one pan, place it in the center of the cooking chamber.

- c) Use solid pans where appropriate: scrambled eggs, rice, beans, dehydrated foods, prepared casseroles, sauces, cake or other desserts (you can bake a cake in atmospheric steam), and when you want to prevent food from dripping on a lower pan.
- d) When cooking proteins (meat, poultry or seafood) use a solid catch pan under the perforated pan. Accumulated juices can be used for soup stock, gravy or broth.
- e) Protein foods (meat, poultry or seafood) can be cooked in perforated or solid pans. If you are batch-cooking protein foods use perforated pans and place a solid pan on the bottom rail. All the juices will then accumulate in this pan for later use and to keep them out of the water reservoir.
- f) When atmospheric steaming, a pan cover can increase the cooking time up to 400%. Items such as frozen casseroles, meat loaf, or sauces can be covered to avoid excess condensation.
- g) Root vegetables should be steamed in a perforated pan.
- h) Eggs can be hard cooked out of the shell and then chopped to avoid peeling shells.
- i) Always cook potatoes in perforated pans. This allows steam to circulate properly.

7) Other helpful hints

- a) Got a tough cleaning problem, pot, pan, utensil? Put it in your steamer to loosen burned-on food; it makes washing much easier.
- b) Stale or frozen bread can be thawed or renewed in your steamer.
- c) Allow adequate spacing between pans for even steam circulation. Your pan rails and the shape of the steamer walls are designed to maximize steam flow. Do not try to load more than the rack is designed for. Maximum capacity loads cook best with perforated pans.
- d) Loosely packed pans will cook faster than tightly packed pans.
- e) To skin tomatoes, oranges etc. more easily, steam for a short time, then chill in cold water.
- f) When steaming pasta, shrimp, or ground meat, nesting a perforated pan in a solid pan works well. Lift out the perforated pan to drain.
- g) Never have the water high enough or a pan low enough to touch water. Allow enough space for steam circulation. Steam has 6 times more energy than boiling water – use the steam to cook.
- h) When possible, cook in two shallow pans instead of one deeper one – it cooks faster and you avoid bruising the product.
- i) If using ½ size or smaller pans on one level, with different products, load the faster cooking items last, this will make unloading easier.
- j) In steam cooking, load size has little effect on the cooking time. For the highest efficiency cook with full loads.
- k) Pre-cook roasts, especially fat-encrusted roasts, in steam for 1/3 of their cooking time, then place in oven. Juices are sealed in, there is more flavor, more nutrients are retained and the roast shrinks less.
- l) Cook whole poultry the same way, only cook it until it is nearly completed and allow just enough time in the oven to finish and brown.

H WARNINGS AND CAUTIONS

1) Warnings

- a) A qualified electrician must perform all electrical hookups and meet all local codes. Installation is the responsibility of the purchaser.
- b) Drain hose must be connected to drain or empty out to a properly sized bucket before opening drain valve.
- c) The reservoir water may still be hot. It is advisable to let the water cool down prior to draining.

- d) The cooking chamber is designed to retain heat. It may still be hot to the touch when cleaning. Wear protective gloves, or wait for the surface to cool before cleaning. Do not add cold water to a hot empty cooking chamber until unit has cooled down or damage may result.

2) Cautions

- a) Do not use utensils, steel wool, or other harsh abrasives to clean your steamer. Scratching of the non-stick surface and stainless steel casing may occur.
- b) The steamer must be level in order for the water sensor to function properly.
- c) Do not use any abrasive cleaners, utensils or scrubbers on the non-stick coating – this will damage the coating. Use vinegar and water to clean reservoir. Nylon bristle brushes or soft sponges are recommended.
- d) Do not manually refill hot, dry reservoir with cold water. Damage to the interior may result if cold water is added to a hot, dry reservoir.
- e) Starchy foods (potatoes, pasta, peas) can cause the cooking water to become frothy. Add 2 tablespoons of cooking oil to the water to control foaming.

1) 208/240 Volts

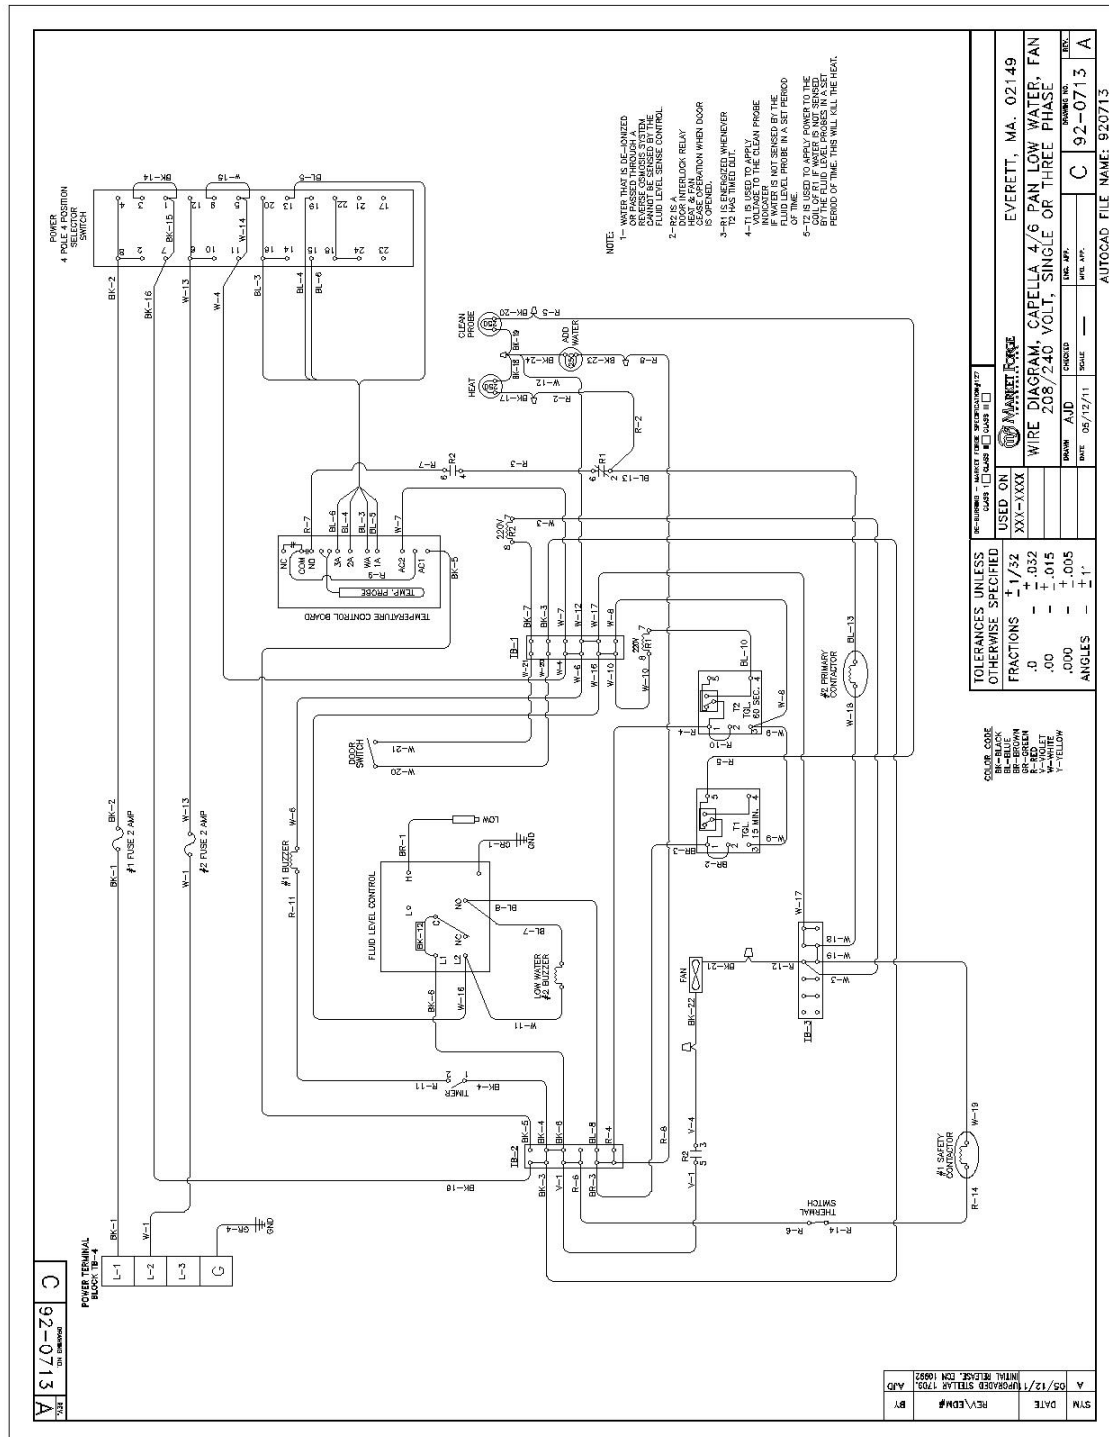


Figure 1

18

J ILLUSTRATED PARTS LIST

1) Cabinet Assembly



Figure 3
Full Front View

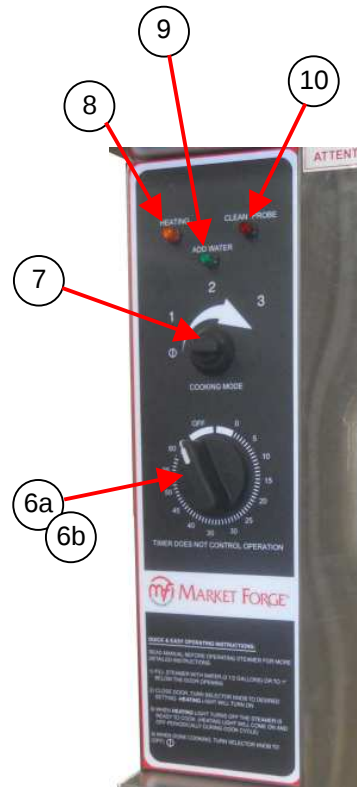


Figure 4
Control Panel

ITEM No.	PART No.	DESCRIPTION	QTY
1	92-0727	Panel, Left Side (4 Pan)	1
1	92-0729	Panel, Left Side (6 Pan) - <i>Not Shown</i>	1
2	92-0726	Panel, Right Side (4 Pan) - <i>Not Shown</i>	1
2	92-0728	Panel, Right Side (6 Pan) - <i>Not Shown</i>	1
3	92-0008	Panel, Rear (4 Pan) - <i>Not Shown</i>	1
3	92-0357	Panel, Rear (6 Pan) - <i>Not Shown</i>	1
4	92-0213	Ball Valve	1
5	92-0721	Washer, Flat 7/8"(ID) x 1 3/8"(OD), Stainless Steel	1
6a	92-0137	Timer, 240V, 60 Minutes	1
6b	92-0138	Timer, Knob	1
7	92-0125	Rotary Switch, 4 Position	1
8	92-0184	Light, Amber, 250V	1
9	92-0231	Light, Green, 250V	1
10	92-0185	Light, Red, 250V	1

Cabinet Assembly continued

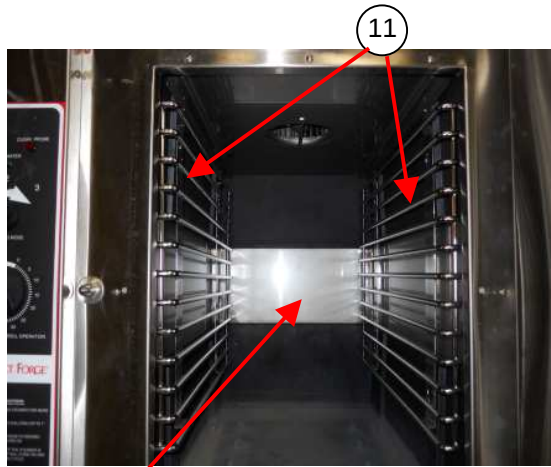


Figure 5
Oven Cavity (with Wire Racks)



Figure 6
Oven Cavity (no Wire Racks)

ITEM No.	PART No.	DESCRIPTION	QTY
11	92-0116 92-0160	Wire Rack, Left and Right (4 Pan unit) Wire Rack, Left and Right (6 Pan unit)	2
12	92-0404	Oven Cavity Bolster (Extender), Stainless Steel (6 Pan unit only)	1
13	92-0054	Water Level Probe	1
14	92-0078	Thermostat Probe	1
15	92-0076	Oven Cavity Top	1
16	92-0011	Fan Baffle (Shield)	1
17	92-0092	Machine Screw, 6-32 x 1", Slot, Pan Hd, (Fan Baffle Fasteners)	4
18	92-0082	Machine Screw, ¼ - 20 x ¾", Oval Hd, S/S, (Wire Rack Fastener)	4
19	92-0222	Oven Cavity Bottom	1

2) Door Assembly

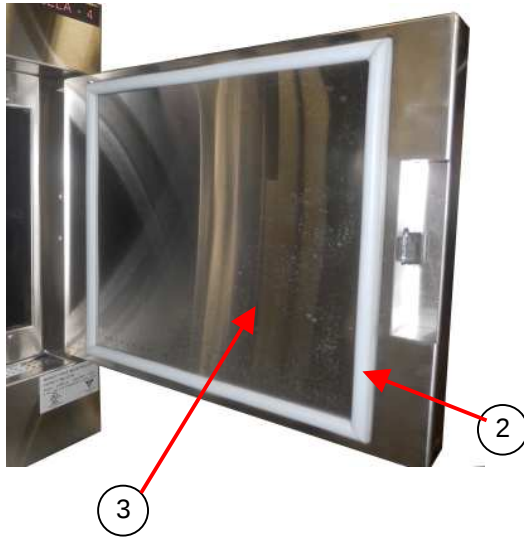


Figure 7
Inside View of Door



Figure 8
Outside View of Door

ITEM No.	PART No.	DESCRIPTION	QTY
1	92-0548	Door Assembly (4 Pan)	1
1	92-0549	Door Assembly (6 Pan)	1
2	92-0063	Door Gasket (4 Pan)	1
2	92-0159	Door Gasket (6 Pan)	1
3	92-0380	Gasket Plate (4 Pan)	1
3	92-0381	Gasket Plate (6 Pan)	1
4	92-0064	Paddle Latch Assembly	1

3) General Assembly

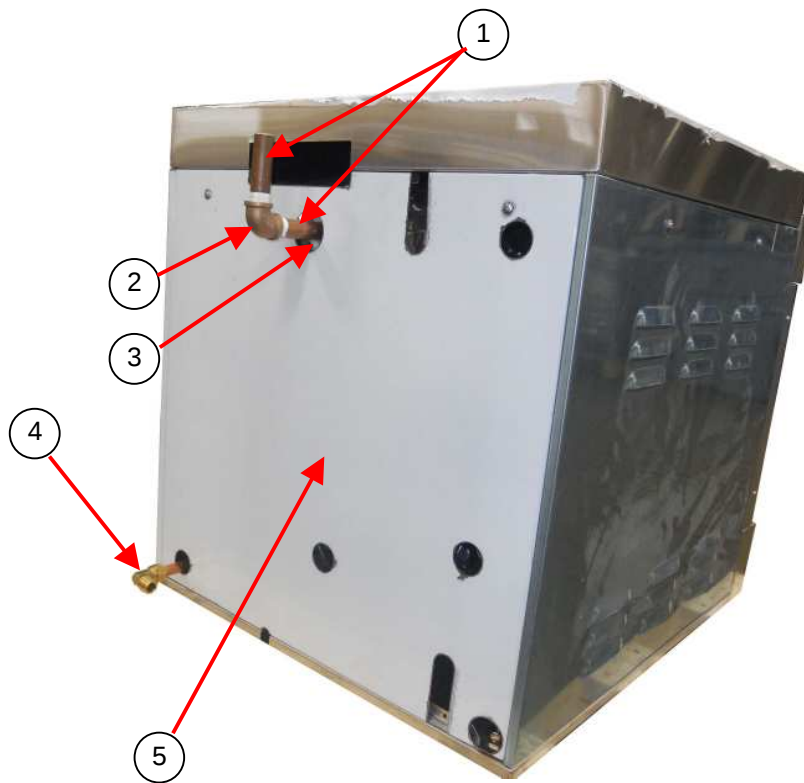


Figure 9
Oven Rear View

ITEM No.	PART No.	DESCRIPTION	QTY
1	08-5433	Copper Tubing, 1/2" Dia. x, 6" Length	2
2	10-2793	Elbow 1/2", 90°, IPS, Brass	1
3	92-0225	Bushing, 3/4" x 1/2" NPT Hex Stainless Steel (<i>not Shown</i>)	1
4	92-0021	Elbow, 90°, 5/8" Compression x 1/2" MNPT, Brass	1
5	92-0008	Panel, Rear (4 Pan)	1
5	92-0357	Panel, Rear (6 Pan)	1

General Assembly (continued)

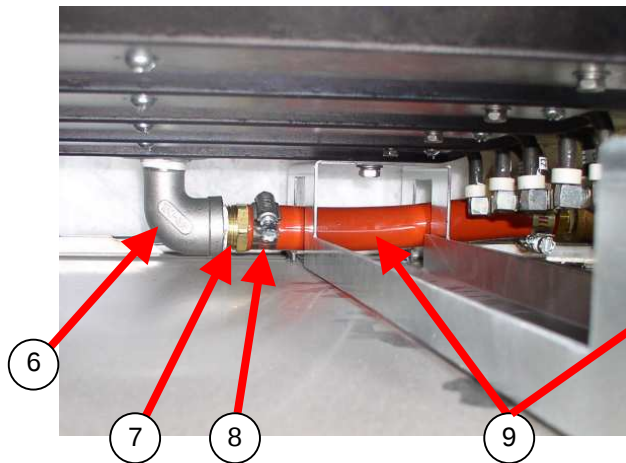


Figure 10
Inside Drain Line

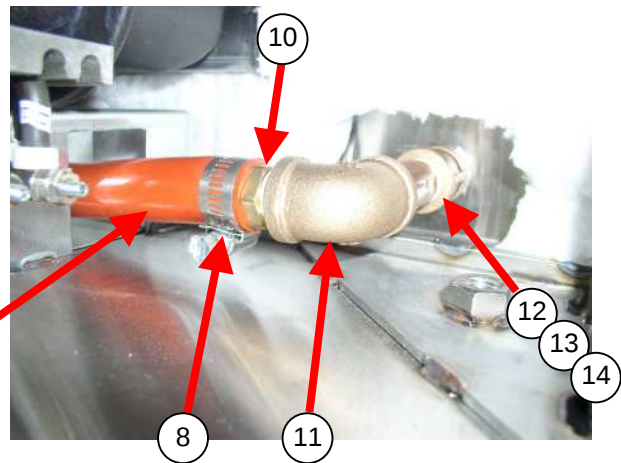


Figure 11
Inside Drain Line Exit

ITEM No.	PART No.	DESCRIPTION	QTY
6	92-0227	Elbow, ¾" Street, Stainless Steel	1
7	08-4852	Hose Barb Adapter, ¾"	1
8	92-0088	Clamp, Hose	2
9	92-0090	Tubing, Silicone, 1" OD	1
10	92-0220	Hose Barb Adapter, ½" X ¾"	1
11	10-2793	Elbow, Brass, ½"	1
12	08-5436	Nipple, ½" x 3" Length	1
13	92-0217	Coupling, Brass	1
14	10-4586	Nut, Seal, Stainless Steel	1

4) Control Panel Components & Heating Elements

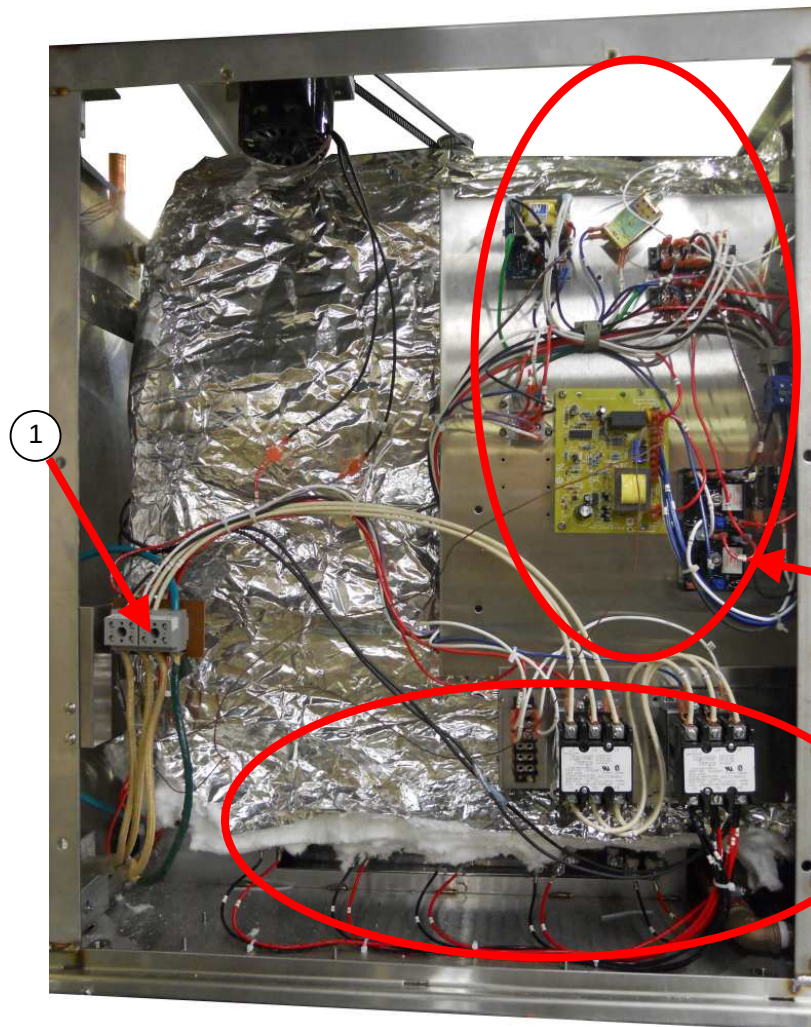


Figure 13
Left Side, Full view, Open

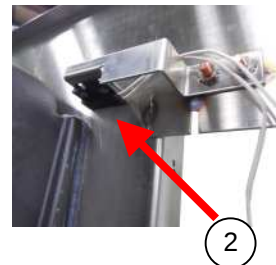


Figure 12
View looking up from
behind Control Panel

See Figure 14
For Details

See Figure 15
For Details

ITEM No.	PART No.	DESCRIPTION	QTY
1	92-0069	Terminal Block	1
2	08-6308	Reed (Proximity) Switch, (Door Safety Switch)	1

Control Panel Components & Heating Elements (continued)

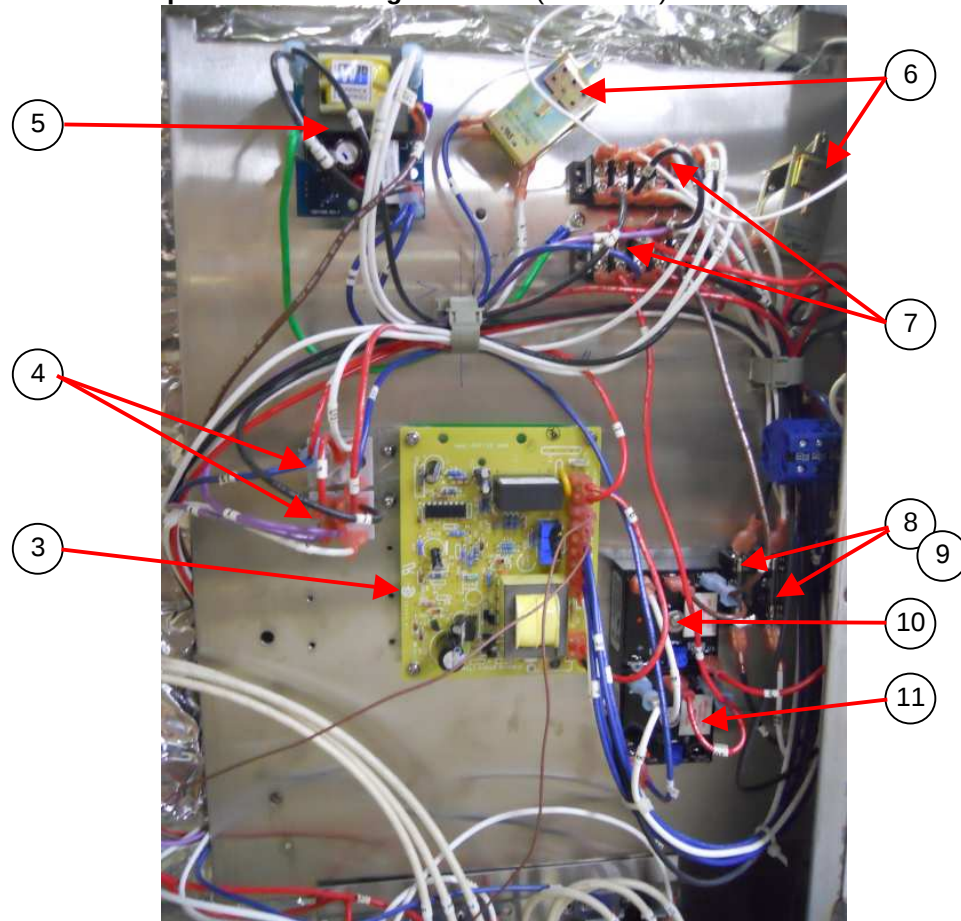


Figure 14
Slide Out Component Panel (Upper)

ITEM No.	PART No.	DESCRIPTION	QTY
3	92-0183	Controller, Temperature, 240V	1
4	92-0189	Relay, 220V, DPDT	2
5	92-0230	Controller, Waterfill, 208V/240V	1
6	92-0186	Buzzer, 240V	2
7	92-0140	Terminal Strip, 6 Pole	2
8	92-0414	Fuse, 2 Amp	2
9	08-6469	Fuse Block (Holder)	2
10	92-0228	Timer Delay, 1000sec, 230V	1
11	92-0187	Timer Delay, 1 – 60 sec, 220V	1

Control Panel Components & Heating Elements (continued)

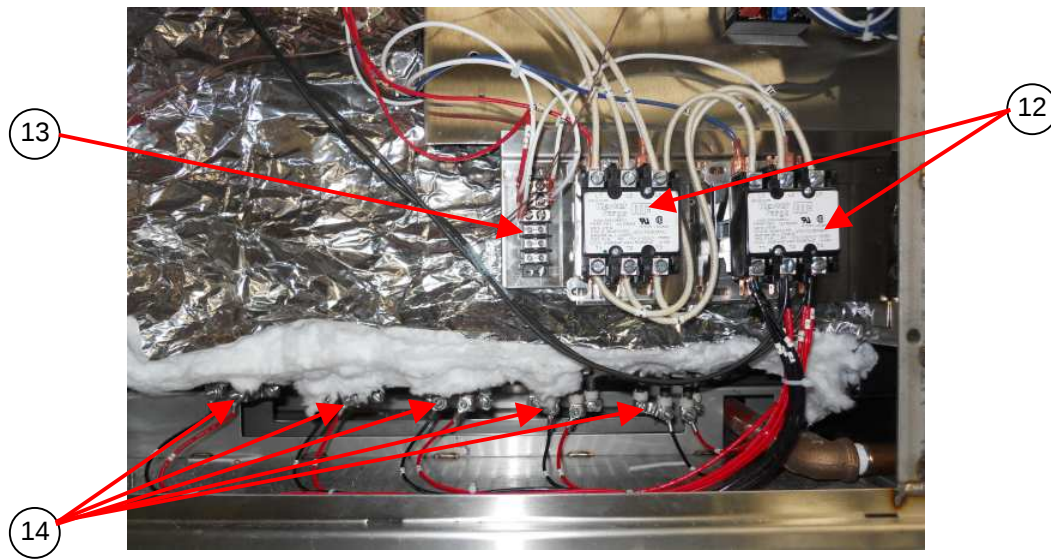


Figure 15
Stationary Component Panel (Lower) and Heating Elements



Figure 16
Upper Inside of Cavity View (with no Fan Baffle (Shield))

ITEM No.	PART No.	DESCRIPTION	QTY
12	10-5943	Contactor, 240V	2
13	92-0140	Terminal Strip, 6 Pole	1
14	92-0199	Heater Element, Alum (for all 208V units)	4 (4 Pan unit) 5 (6 Pan unit)
14	92-0411	Heater Element, Alum (for all 240Vunits)	4 (4 Pan unit) 5 (6 Pan unit)
14	92-0412	Heater Element, Alum (for all 480V units)	4 (4 Pan unit) 5 (6 Pan unit)
15	92-0704	Tubular Heater, (for all 240Vunits)	1
15	92-0731	Tubular Heater, (for all 480V units)	1
16	92-0732	Gasket, Tubular Heater	1

Control Panel Components & Heating Elements (continued)

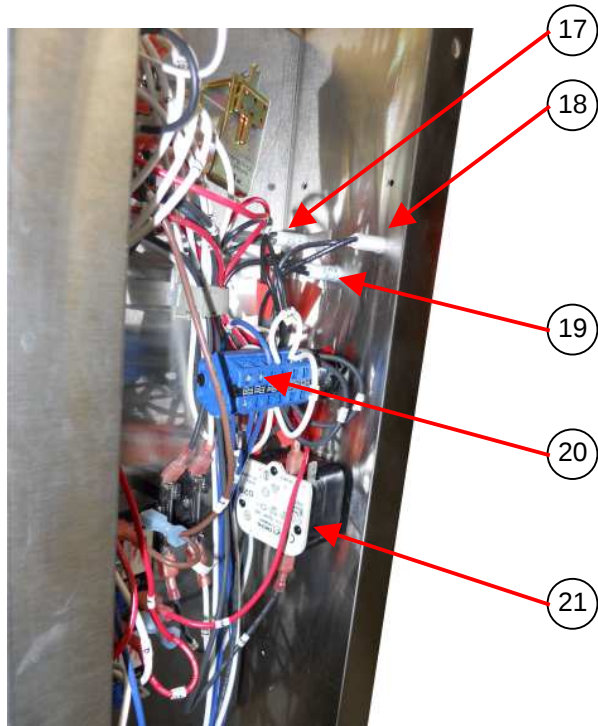


Figure 17
Slide Out Control Panel

ITEM No.	PART No.	DESCRIPTION	QTY
17	92-0185	Light, Red, 250V	1
18	92-0184	Light, Amber, 250V	1
19	92-0231	Light, Green, 250V	1
20	92-0125	Rotary Switch, 4 Position	1
21	92-0137	Timer, 240V, 60 Minutes	1

5) Convection Fan and Motor Components

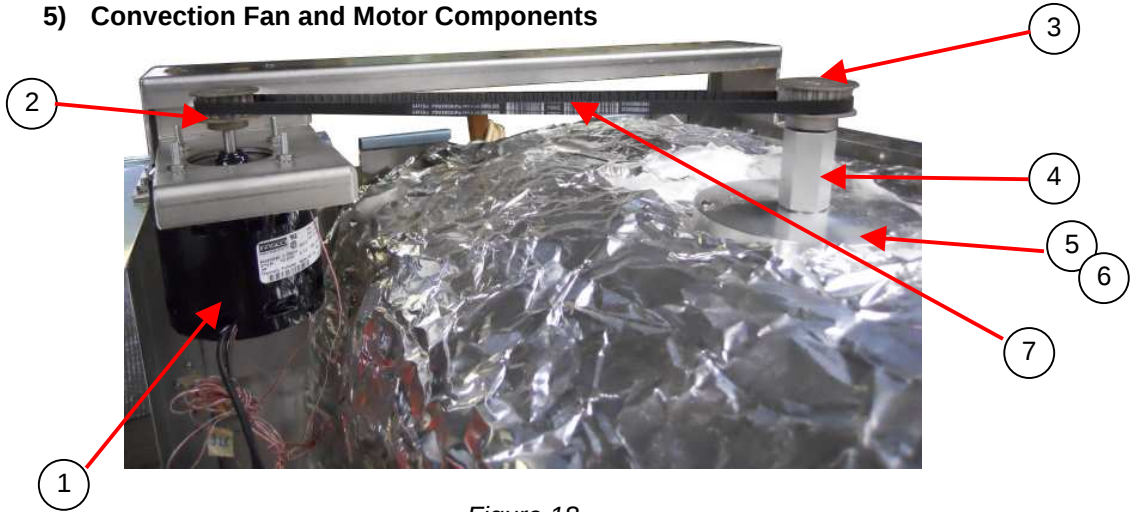


Figure 18

Fan Motor and Pulley Assembly



Figure 19

Convection Fan

ITEM No.	PART No.	DESCRIPTION	QTY
1	08-6905	Fan Motor (230V)	1
2	08-5601	Pulley, .25" Dia. Bore, (22 Teeth)	1
3	08-5600	Pulley, .25" Dia. Bore, (18 Teeth)	1
4	92-0606	Mounting Pedestal	1
5	92-0605	Mounting Plate	1
6	92-0676	Blower Drive Insulation (Not Shown)	1
7	08-1414	Belt	1
8	92-0016	Convection Fan (Blower Wheel)	1