

# NEMCO FOOD EQUIPMENT

301 MEUSE ARGONNE, HICKSVILLE, OHIO 43526 PHONE (419) 542-7751

NEMCO Hot Plates

6310-1, 6310-2, 6310-3

6310-1-240, 6310-2-240, 6310-3-240

6311-1-240, 6311-2-240

## INSTALLATION INSTRUCTIONS

### To Unpack:

- 1.) Remove the top packing pieces.
- 2.) Lift unit out of box.
- 3.) Remove any outside packaging.
- 4.) Remove the internal packaging.

### Initial Setup:

- 1.) Remove the plastic coating from all stainless steel surfaces.
- 2.) Install the adjustable legs into the pre-threaded holes in the base of the unit. Unit must be operated with the legs provided.
- 3.) Clean unit with mild detergent and water. Be sure to dry unit.
- 4.) **CAUTION – To reduce the risk of fire, the appliance is to be installed in non-combustible surroundings only, with no combustible material within 18 inches of the sides, front, or rear of the appliance or within 40 inches above the appliance. The appliance is to be mounted on floors of noncombustible construction with non-combustible flooring and surface finish and with no combustible material against the underside, or on noncombustible slabs or arches that have no combustible material against the underside. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.**

Place the unit on a sturdy table or counter top and be sure it is out of reach from children.

“WARNING” During normal operation the exterior of the unit is **HOT**.

## OPERATING INSTRUCTIONS

- 1.) Plug the unit into the appropriate power supply as indicated on the data plate.
- 2.) Adjust to desired temperature.
- 3.) After use, turn thermostat knob to off position.

*Please Note: 120v models are not designed for saucepots over 4 quarts. They are designed for pan frying sautéing, or simmering.*

## MAINTENANCE AND CLEANING INSTRUCTIONS

### Daily Cleaning:

- 1.) Unplug unit prior to cleaning.
- 2.) Clean unit with a mild detergent and warm water. Be sure to dry unit.
- 3.) Do not immerse in water.

### Maintenance:

If unit fails to operate properly call NEMCO customer service at 1-800-782-6761

### TROUBLESHOOTING

Won't Heat	Check that unit is plugged in
	Check that switch is turned to desired heat setting
	Check receptacle for proper voltage
Product Cold/Not to Temperature	Adjust switch to increase temperature.
Product too Hot	Adjust switch to decrease temperature.
Unit Blows Fuse or Circuit Breaker	Check to make sure circuit is not overloaded.

### Service Parts List

- 45380 Pilot Light 120V (6310-1, 6310-2, 6310-3)
- 45495 Foot (6311-1-240, 6311-2-240)
- 45781 Pilot Light 220V (all 220V models)
- 46376 Cord Grip (6310-1)
- 46751 Cord Set (6310-1)
- 46789 Switch (all models)
- 46927 Leg Adjustable ( 6310-1, 6310-2, 6310-3, 6310-1-240, 6310-2-240, 6310-3-240)
- 46931 Knob, Thermostat (All Models)
- 47402 Cord Grip (6310-2, 6310-3, 6310-1-240, 6310-2-240, 6310-3-240, 6311-1-240)
- 47405 Cord Grip (6311-2-240)
- 47416 Cord Set (6310-2, 6310-3)
- 47417 Cord Set 240V (6310-1-240, 6310-2-240, 6310-3-240, 6311-1-240)
- 47434 Cord Set (6311-2-240)
- 67101 Element 240V 1500W (6310-2-240, 6310-3-240, 6311-1-240, 6311-2-240)
- 67102 Element 240V 2000W & 120V 500W (6310-2, 6310-3, 6310-1-240, 6311-2-240)
- 67306 Element 120V 1500W (6310-1, 6310-2, 6310-3)



Intertek

46029

3/31/2011