 
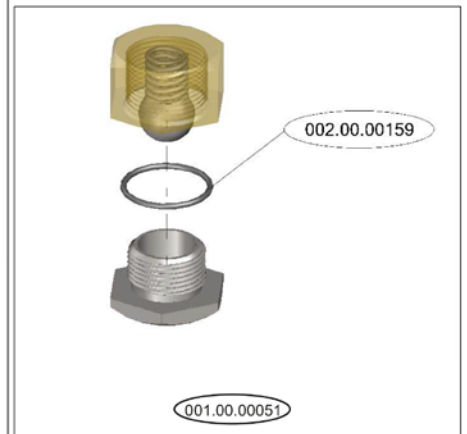 
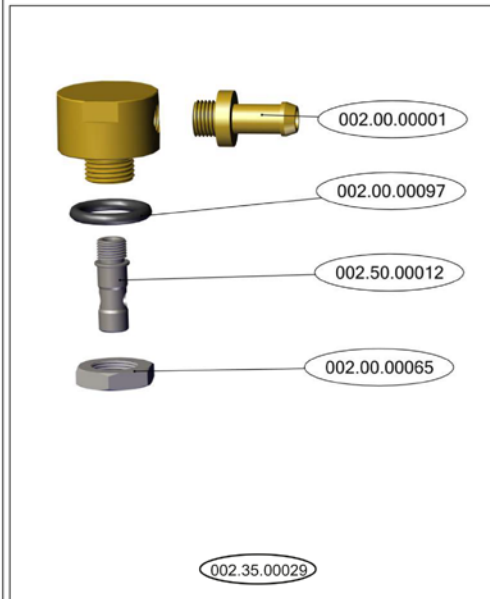 
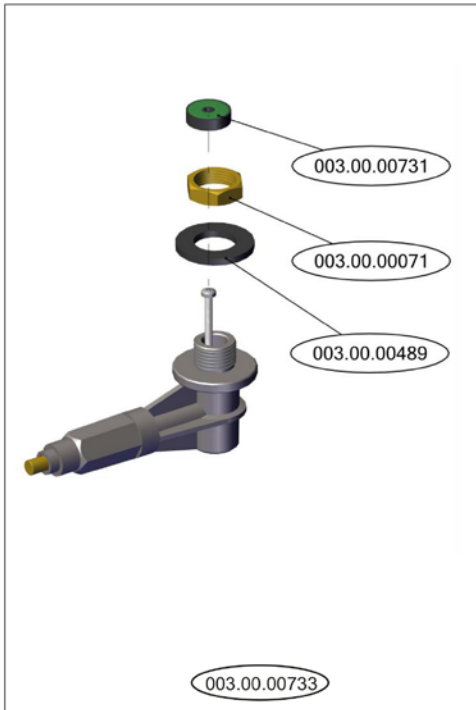 



# Parts Breakdown

Model CD-GR-0500 46798

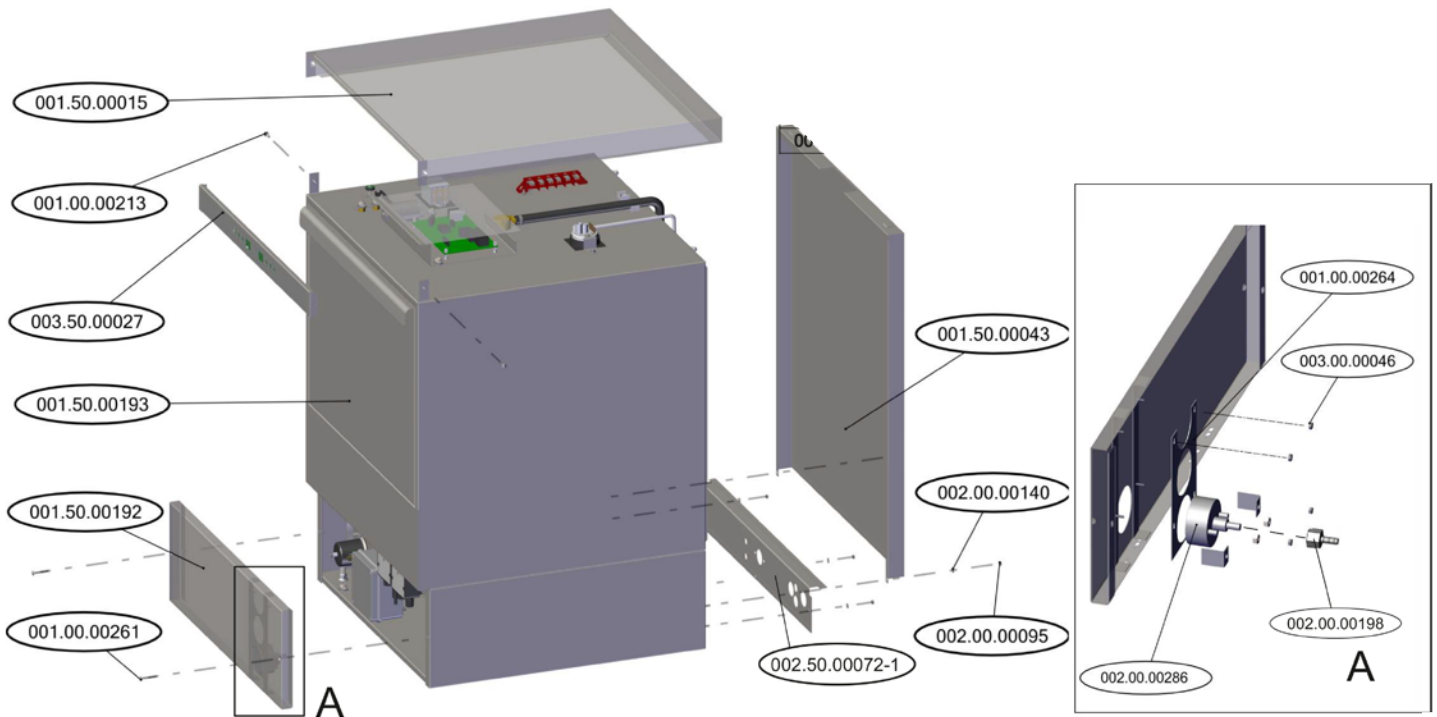



# Parts Breakdown

 Model CD-GR-0500 46798

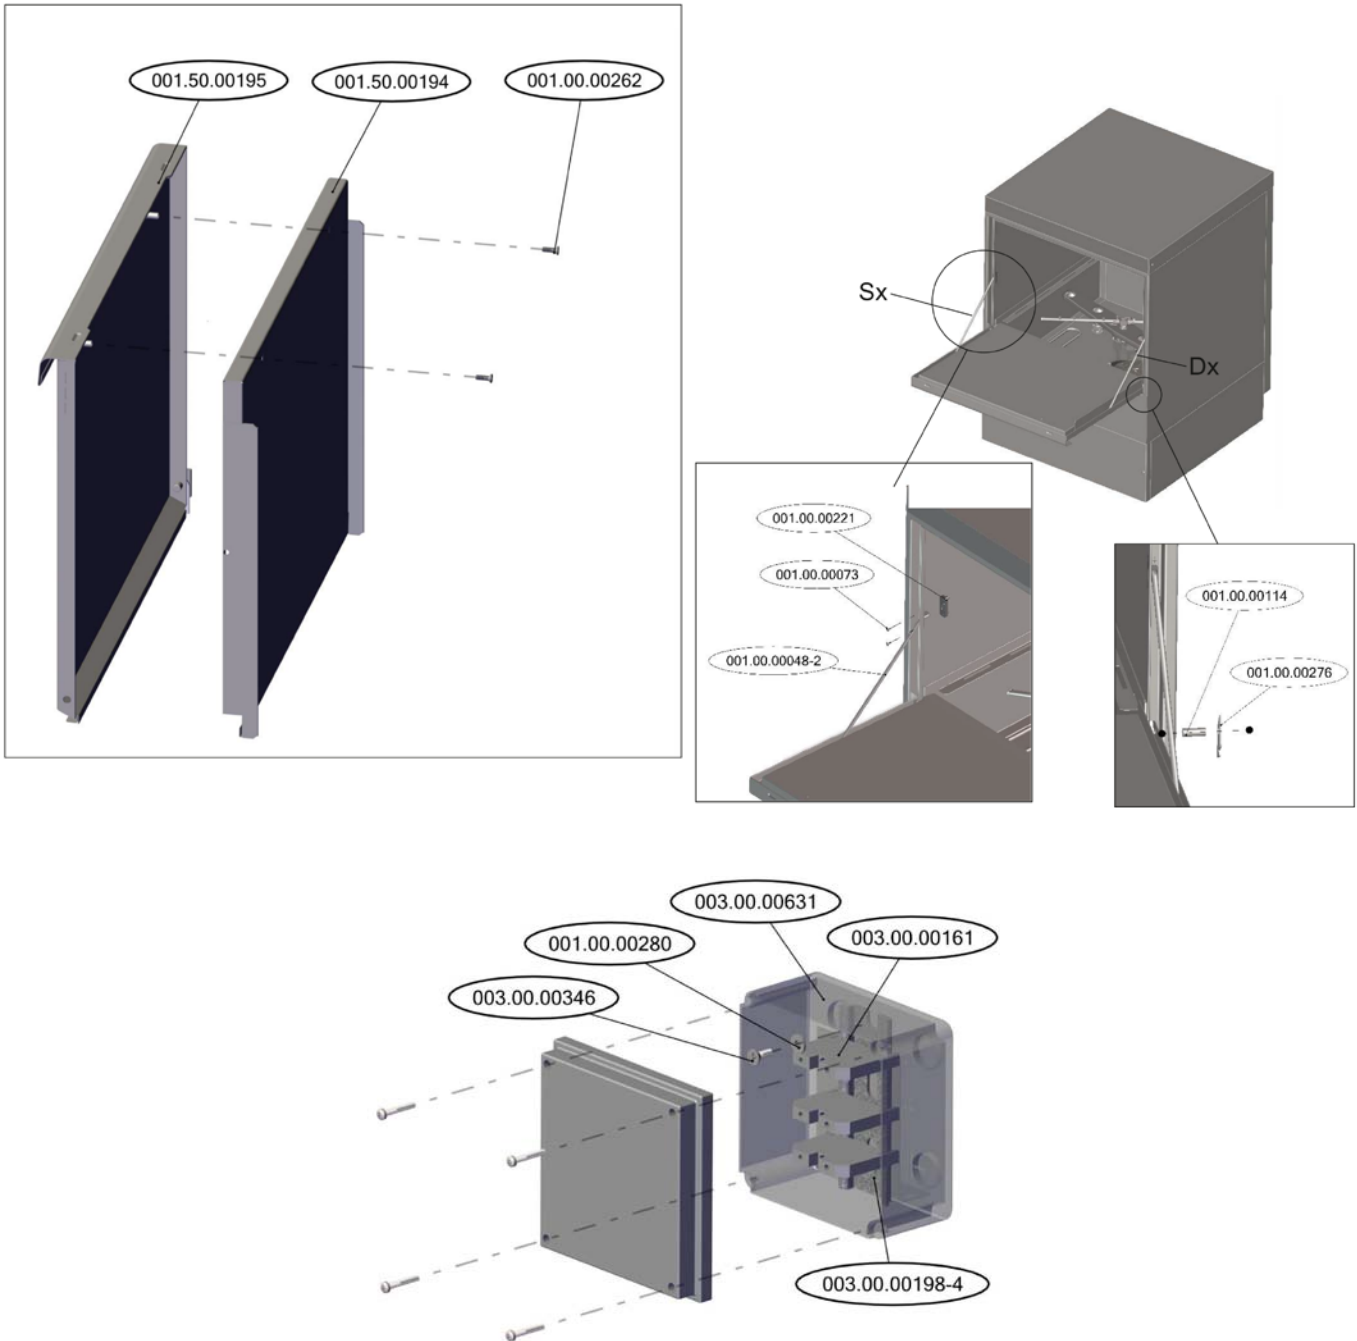




# Parts Breakdown

  Model CD-GR-0500 46798

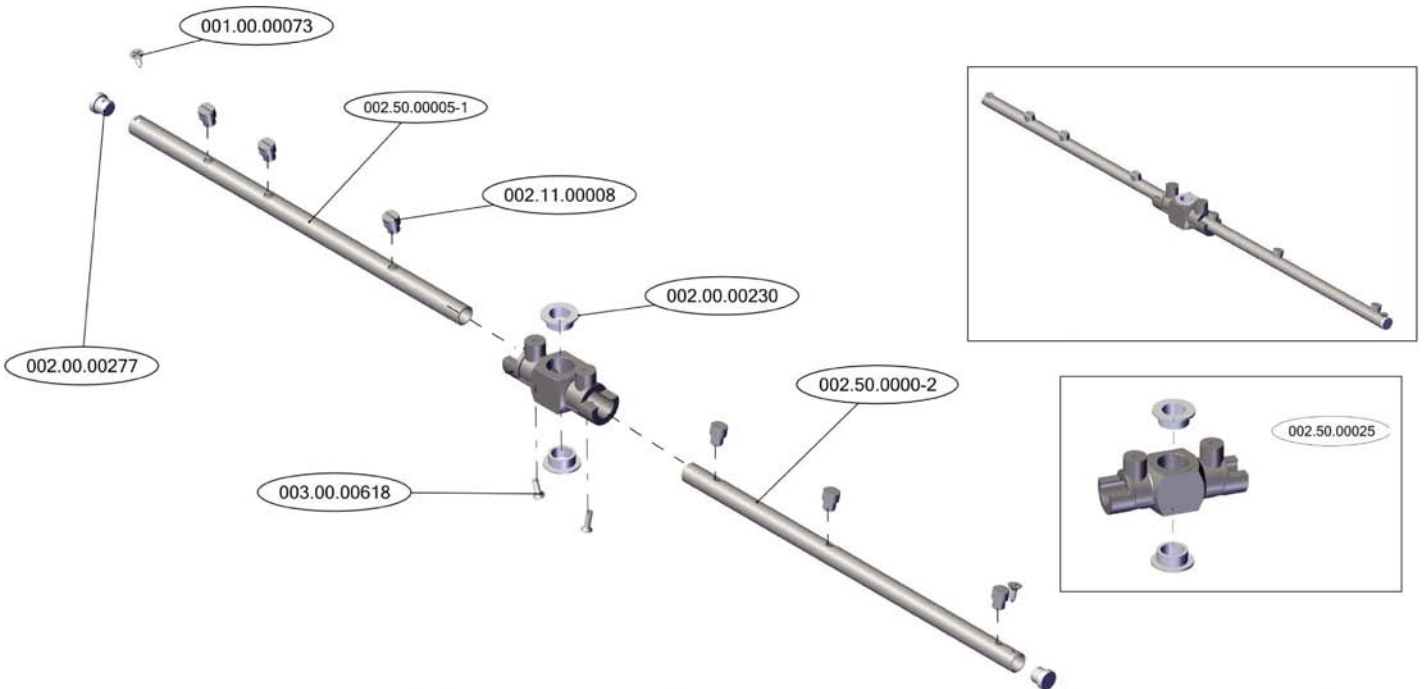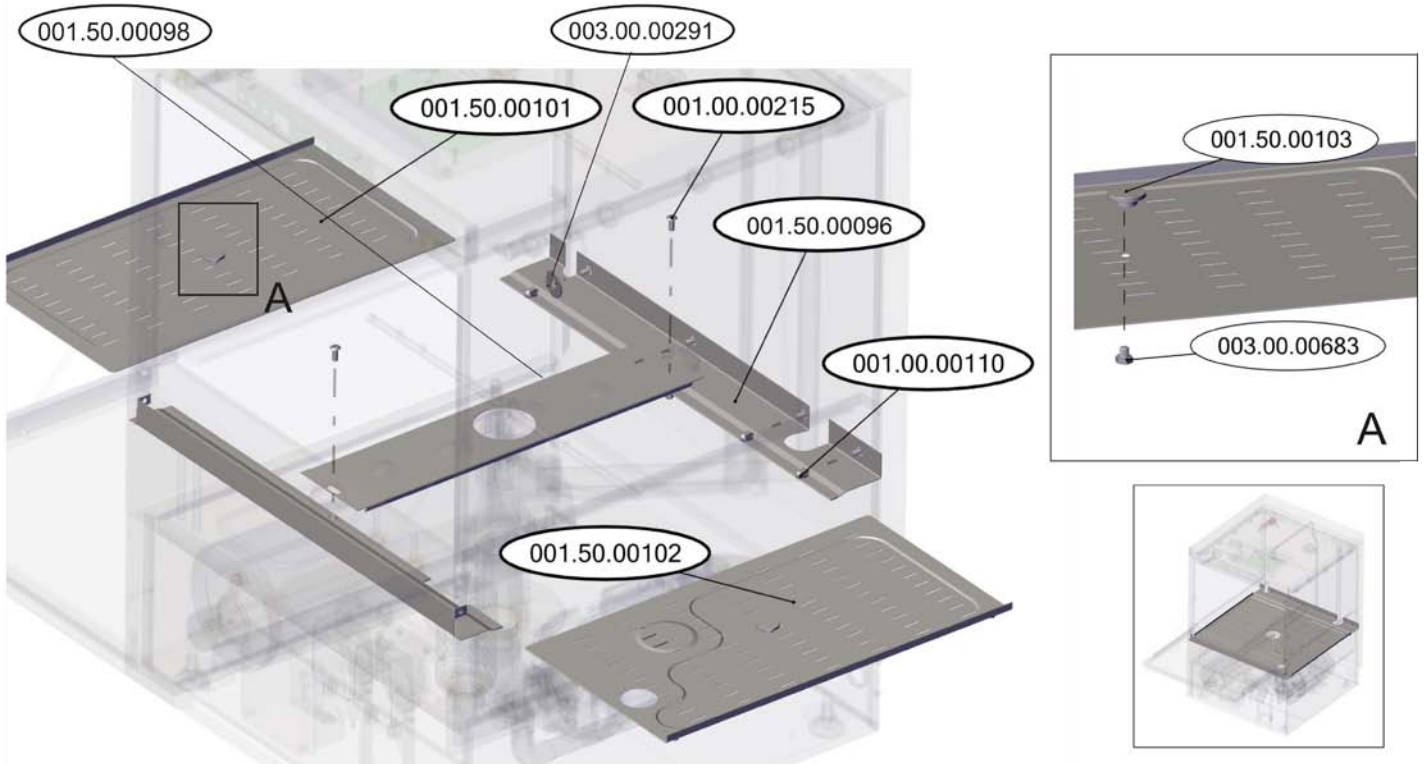



# Parts Breakdown

   Model CD-GR-0500 46798

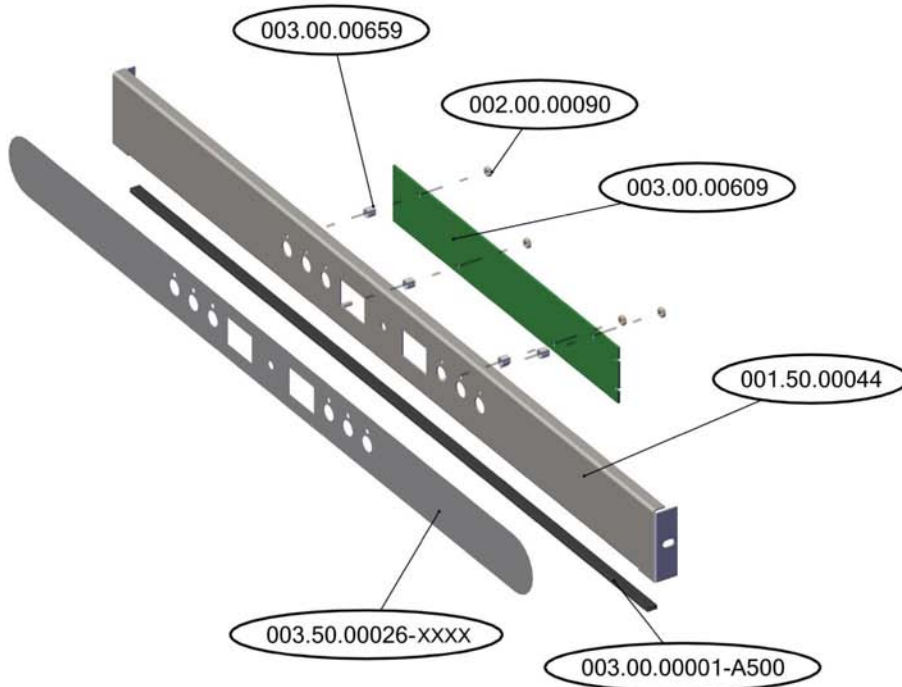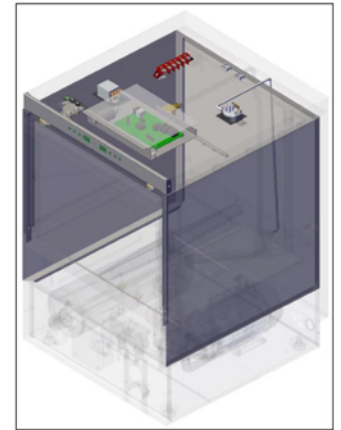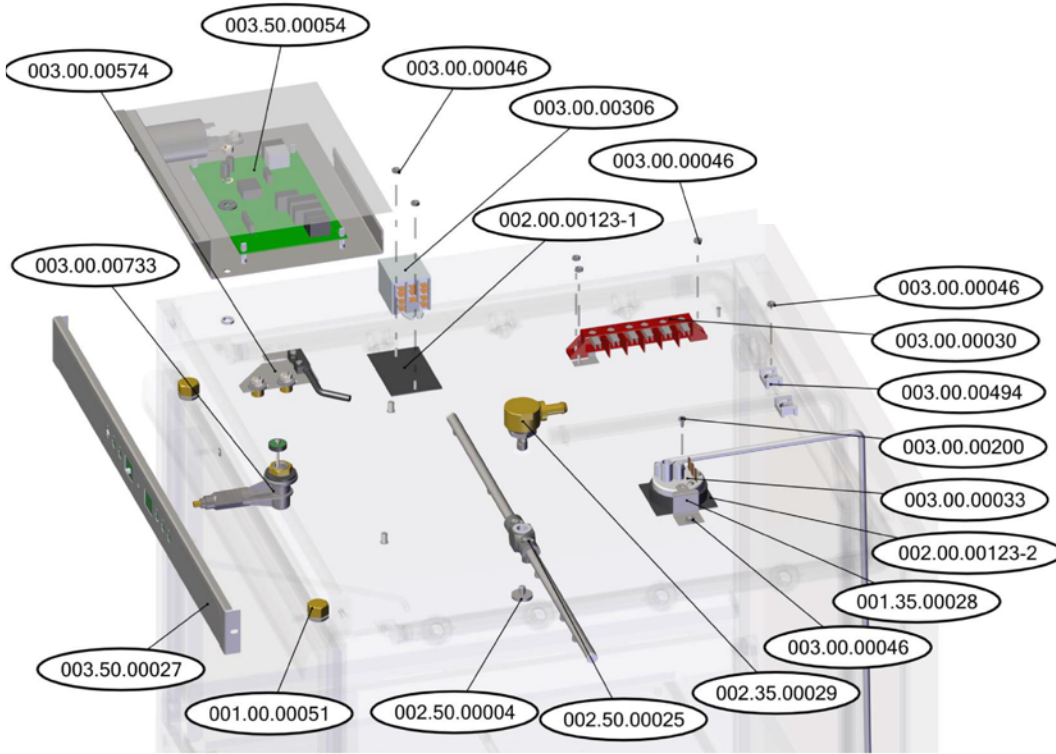



# Parts Breakdown

  Model CD-GR-0500 46798

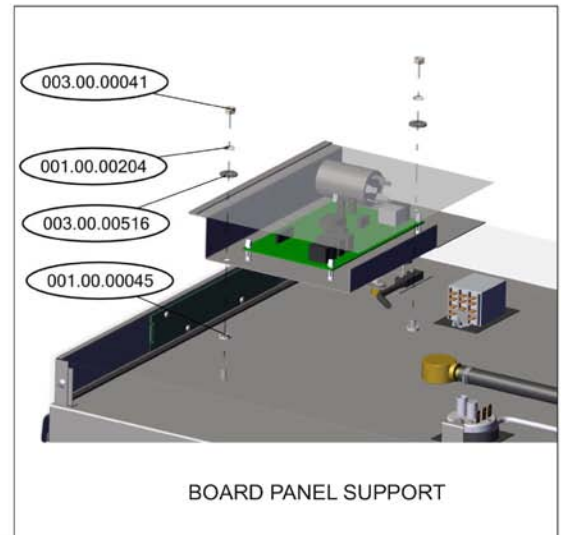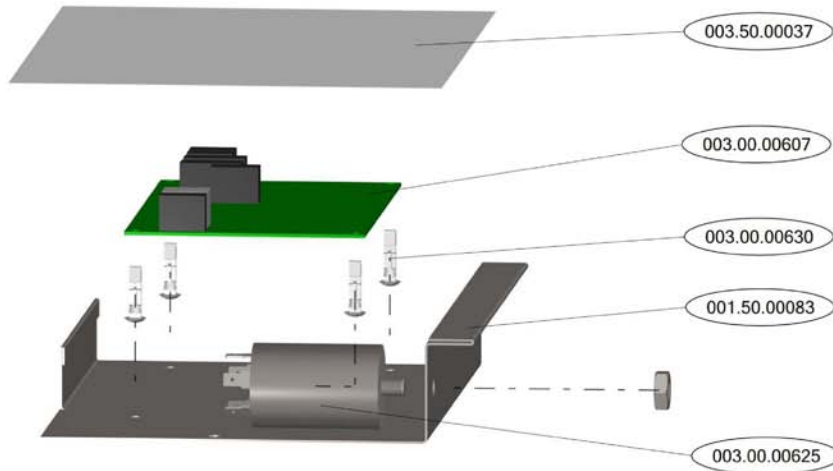


DOOR SWITCH ELECTRICAL PART - SUPPORT

  DOOR SWITCH ELECTRICAL PART - ASSEMBLY

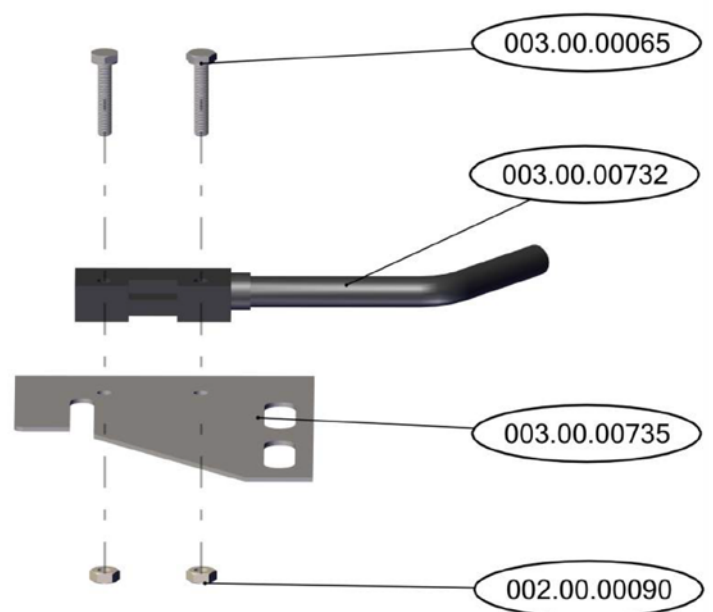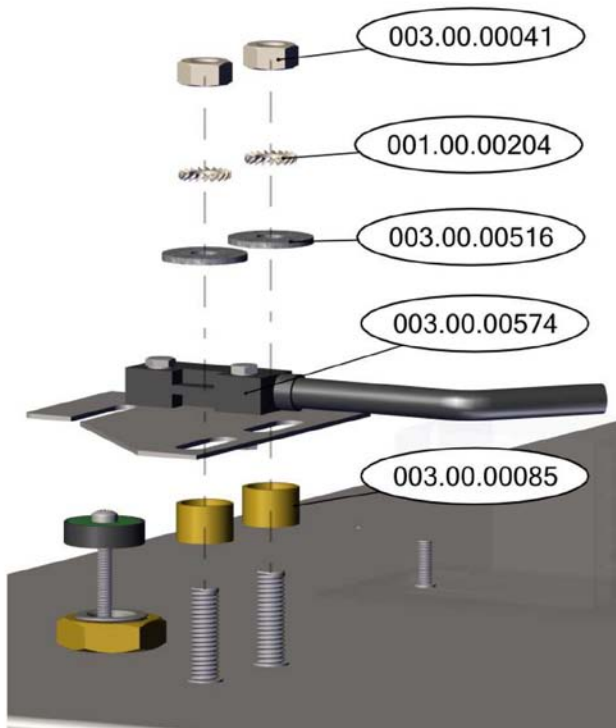



# Parts Breakdown

 Model CD-GR-0500 46798

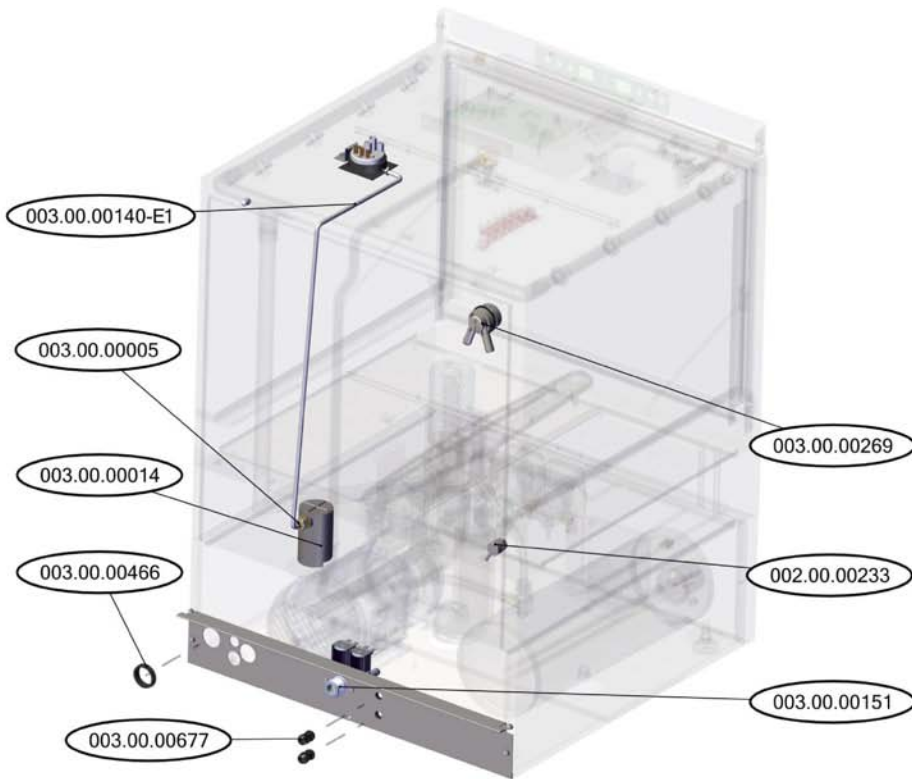


# Parts Breakdown

  Model CD-GR-0500 46798

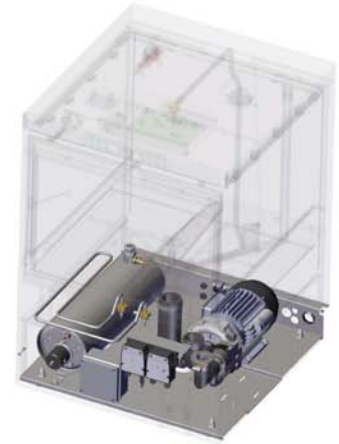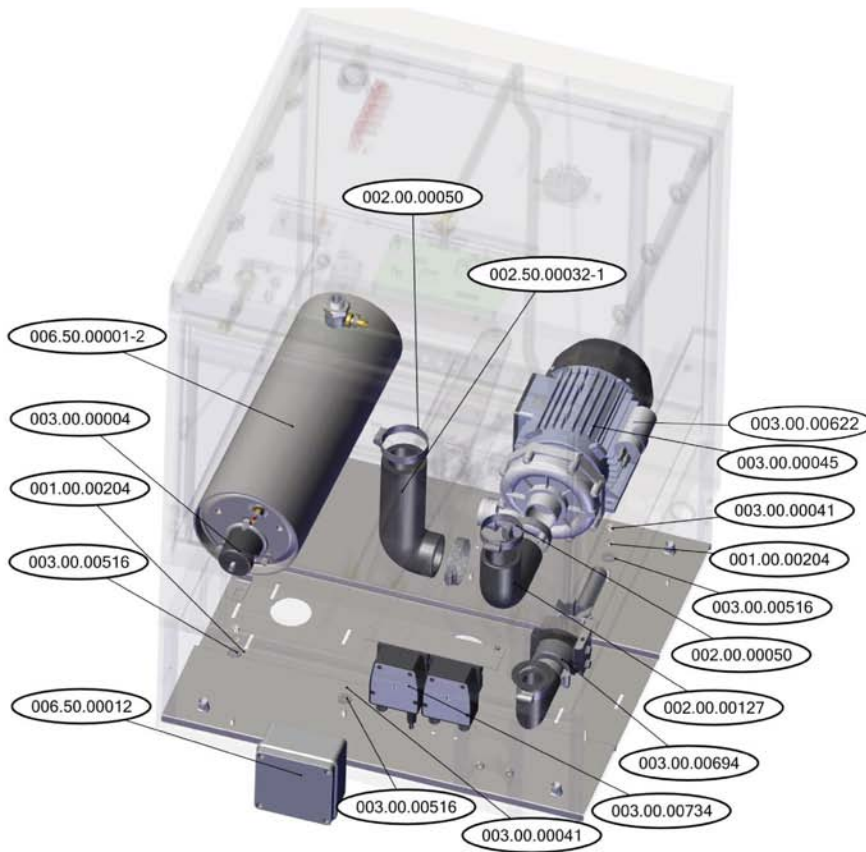


# Parts Breakdown

 Model CD-GR-0500 46798

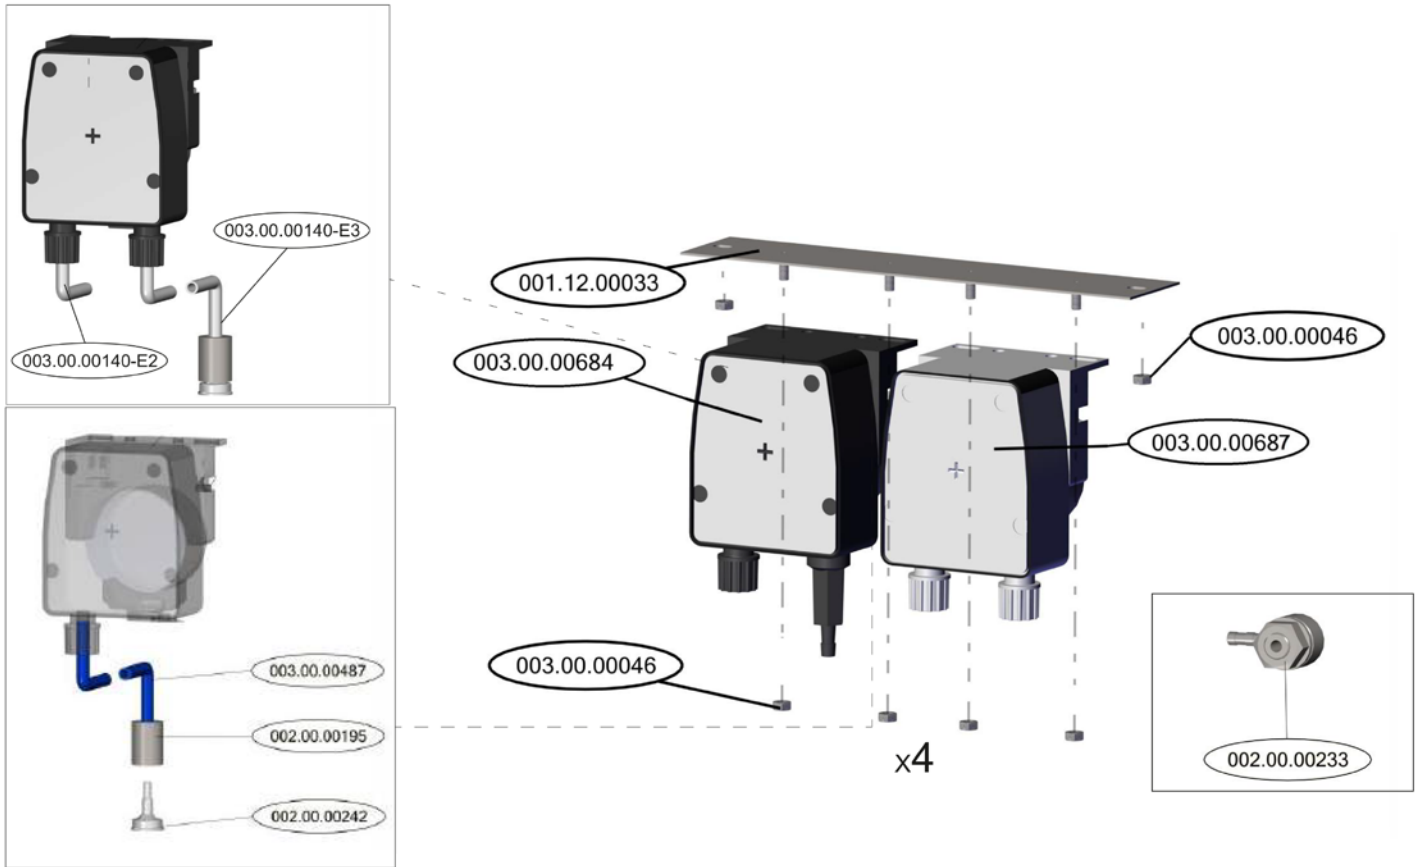


# Parts Breakdown

 Model CD-GR-0500 46798

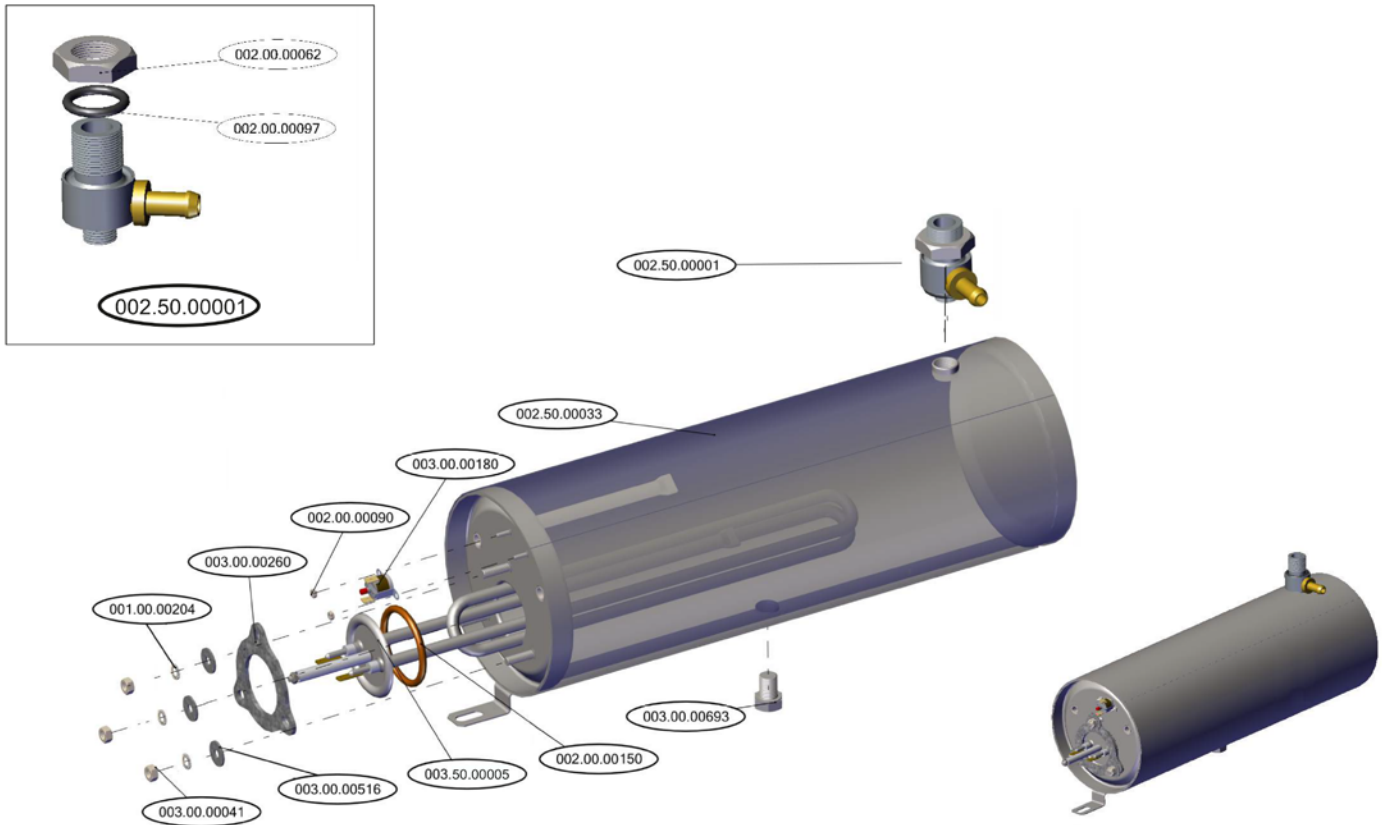



# Parts Breakdown

 Model CD-GR-0500 46798

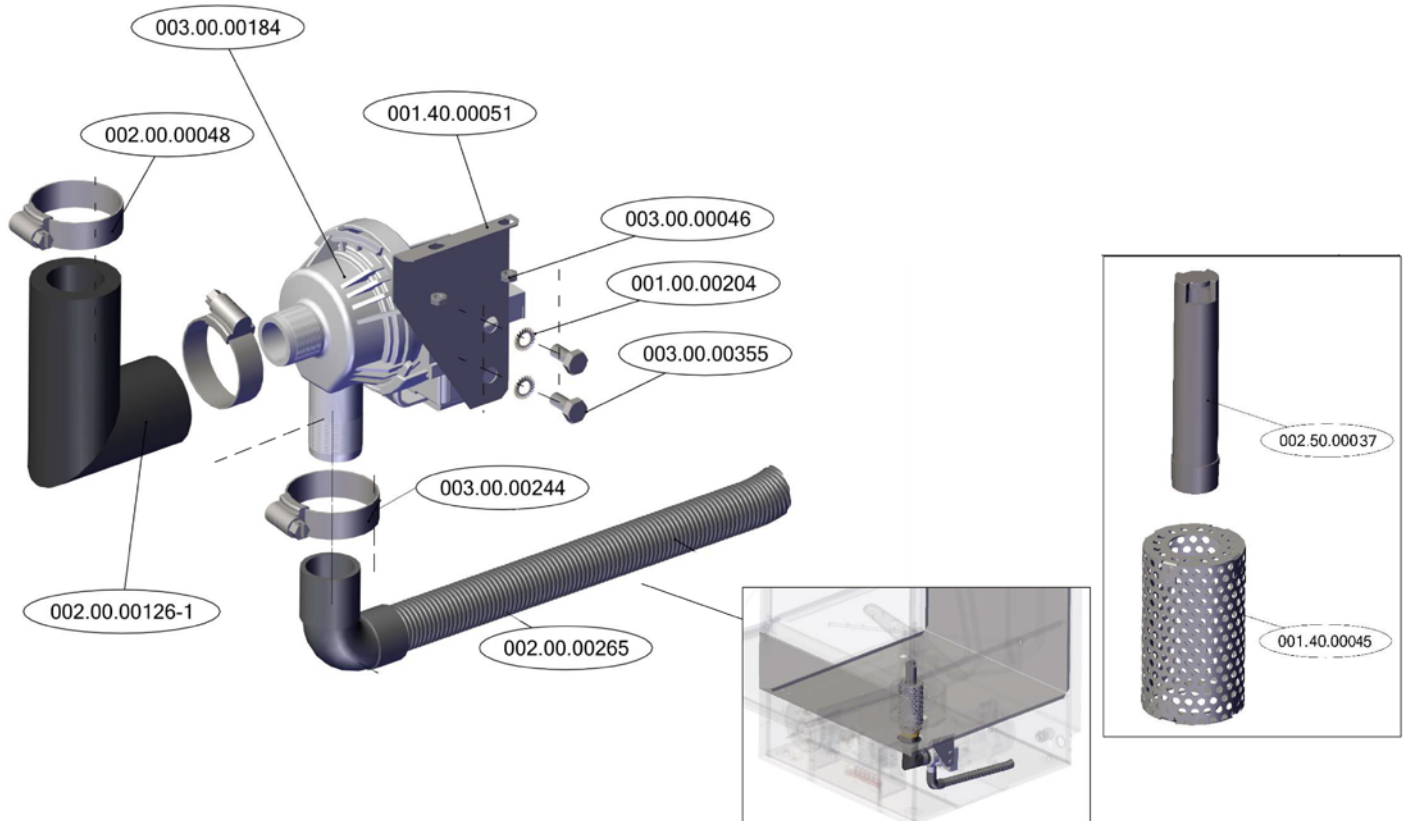


# Parts Breakdown

  Model CD-GR-0500 46798

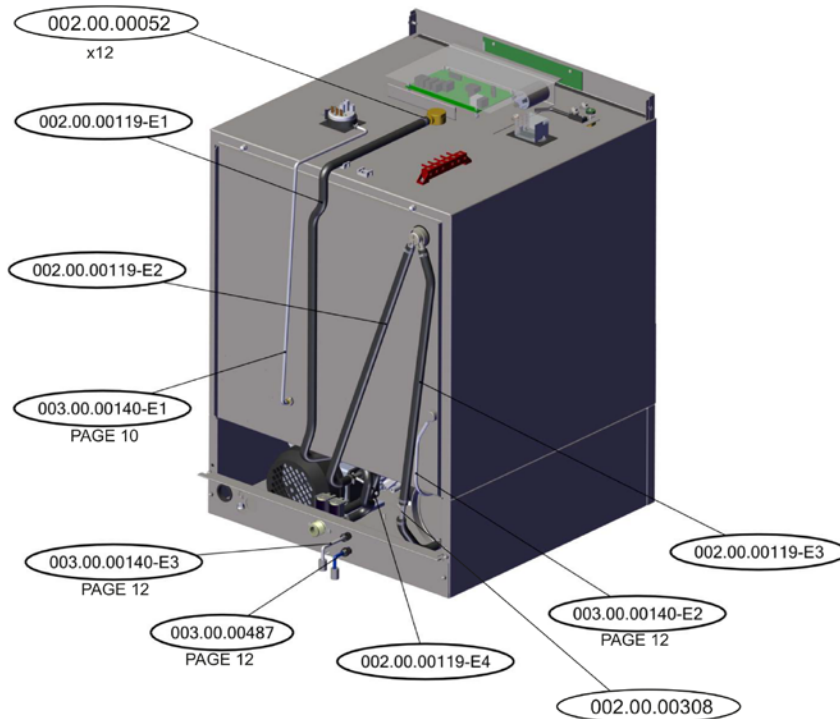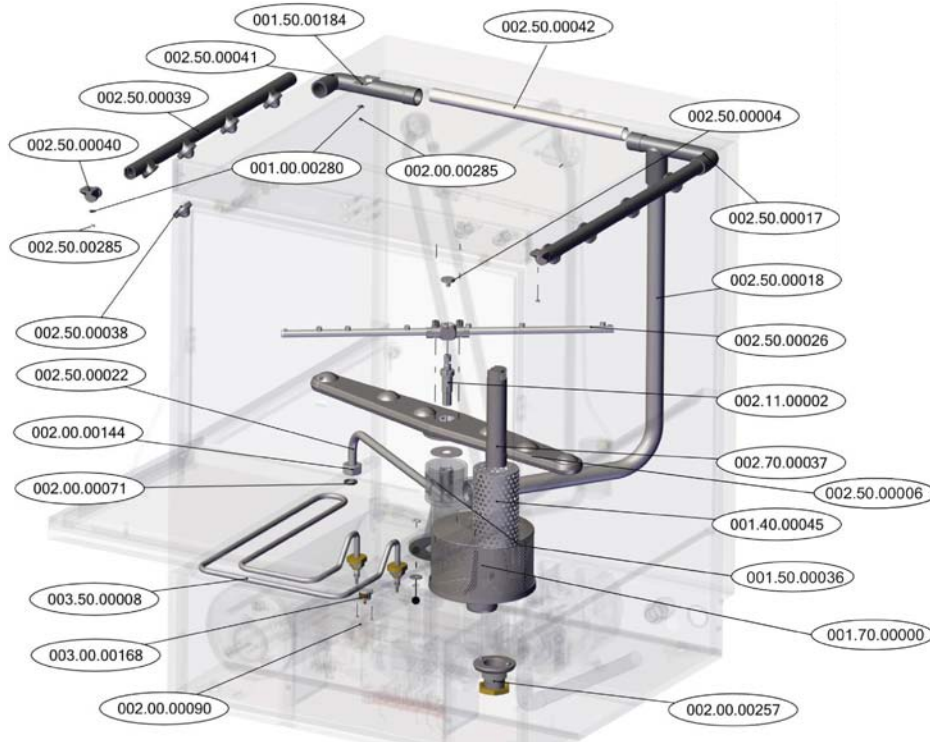






# Parts Breakdown

 Model CD-GR-0500 46798

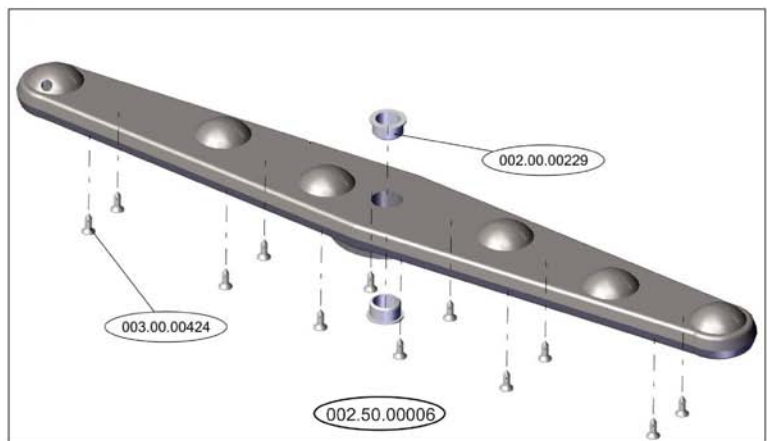


# Parts Breakdown

     Model CD-GR-0500 46798

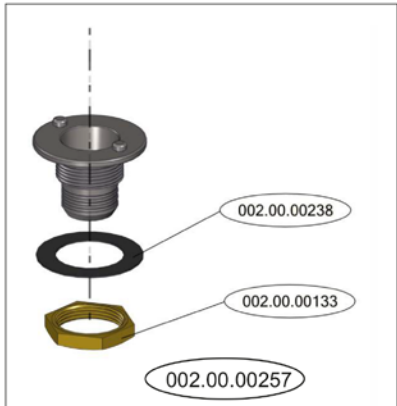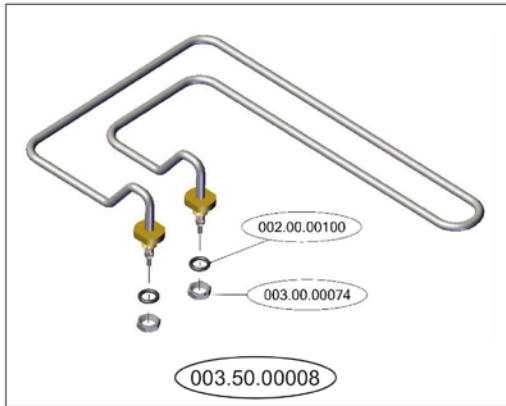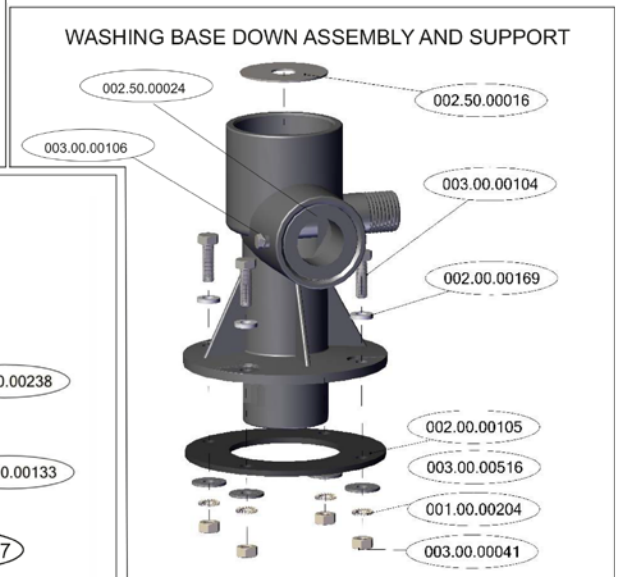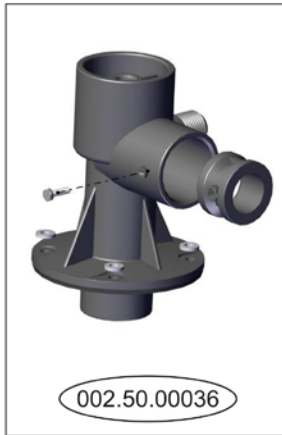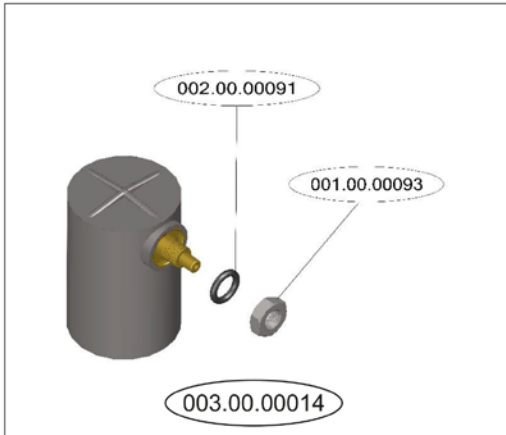

# Parts Breakdown

 Model CD-GR-0500 46798

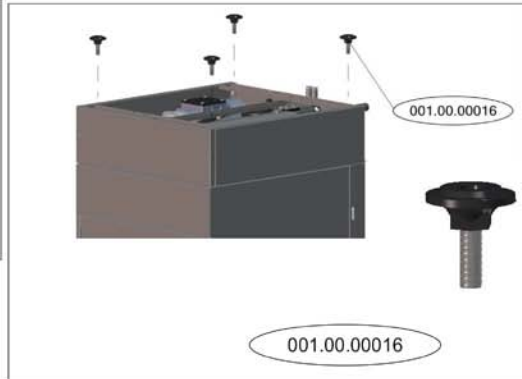



# Parts Breakdown

## Model CD-GR-0500 46798

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
41141	Small Leveling Feet Black for 46798	001.00.00016	65677	Inox Knob for Surface Filter for 46798	001.50.00103	AD903	Hose Black (1/4) 6x12 L: 830mm Pressure Gauge - T Connector (Hose not Visible) for 46798	002.00.00132-E2
73794	Filter Retaining Nut for 46798	001.00.00017	AD891	Inox Base for Washing Arm for 46798	001.50.00184	61001	Bronze Nut M36 for 46798	002.00.00133
AD878	Teflon Washer D 12.5x8x2.5 for 46798	001.00.00045	AD892	Front Cover Inox for 46798	001.50.00192	73831	Lock Washer Inox 4 for 46798	002.00.00140
AD879	Door Support Axle DX (M6x300) for 46798	001.00.00048-1	AD893	Door Complete for 46798	001.50.00193	41139	Rinse Pipe Retaining Nut for 46798	002.00.00144
AD880	Door Support Axle SX (M6x300) for 46798	001.00.00048-2	AD894	Inside Part of the Door for 46798	001.50.00194	60978	O-Ring 45x6 for 46798	002.00.00150
41089	Door Snap Set for 46798	001.00.00051	AD895	External Part of the Door for 46798	001.50.00195	AD904	O-Ring 10x1.5 for 46798	002.00.00159
73825	Inox Screw 2.9x10 for 46798	001.00.00073	60997	Filter in the Tank for the Pump V-KN for 46798	001.70.00000	AD905	Lock Washer M4 for 46798	002.00.00162
73833	M10 Nut DIN 439 Inox for 46798	001.00.00093	60960	Fittings 1/4x10 for 46798	002.00.00001	73871	Teflon 12-6-2 for 46798	002.00.00169
73774	Domed Cap Nut M6 for 46798	001.00.00110	73780	Drain and Overflow Base Nut 1 1/2 for 46798	002.00.00037	61006	Balance F15x20 for 46798	002.00.00195
AD881	Door Support 8x23 for 46798	001.00.00114	73765	Clamp 25-40 for 46798	002.00.00048	AD906	Fittings 1/4x7 FEM for 46798	002.00.00198
73800	Galvanized Lock Washer 6.4x11x0.7 for 46798	001.00.00204	73766	Clamp 40-60 for 46798	002.00.00050	41100	Teflon 23 10 for 46798	002.00.00229
60951	Inox Screw M4x15 for 46798	001.00.00213	61019	Clamp 10-16 for 46798	002.00.00052	41101	Teflon 18x6 for 46798	002.00.00230
65674	Bolt Inox M6x15 for 46798	001.00.00215	73841	Nut 1/2 for 46798	002.00.00062	61018	Clamp 8-12 for 46798	002.00.00231
73848	Plastic Guide for Door Axle for 46798	001.00.00221	60962	Nut 3/8 for 46798	002.00.00065	73773	Detergent Tank Injector for 46798	002.00.00233
60953	Inox Screw M4x30 for 46798	001.00.00261	61004	O-Ring 4x11 for 46798	002.00.00071	61000	Rubber Gasket 35x55x1 for 46798	002.00.00238
60956	Inox Tapped Screw M5x16 for 46798	001.00.00262	60998	Plastic Base for Tank Filter V-K for 46798	002.00.00081	61007	Filter Plastic for Rinse Aid Valve for 46798	002.00.00242
60982	Bracket for Pressure Gauge - Thermometer (NSF Approved) for 46798	001.00.00264	73821	Inox Nut M3 for 46798	002.00.00090	60376	Elbow Draining Pipe OD22-ID19mm 1.5-Drain Hose for 46798	002.00.00265
45963	Door Spacer for 46798	001.00.00276	41140	O Ring 10.5x3 for 46798	002.00.00091	60992	Cap for Rinse Arms for 46798	002.00.00277
AD882	Washer 4x10 for 46798	001.00.00280	60999	O-Ring 52x2.5 for 46798	002.00.00093	60981	Pressure Gauge 2" 0/60 PSI 1/4 NPT (NSF Approved) for 46798	002.00.00286
AD883	Nut M4 Inox for 46798	001.00.00285	60952	Inox Nut M4 for 46798	002.00.00095	65670	PRV Valve for 46798	002.00.00307
AD884	Bracket for Peristaltic Pumps for 46798	001.12.00033	73749	O-Ring 20x4 for 46798	002.00.00097	65669	T-Connection Boiler 10 - 6 for 46798	002.00.00308
73782	Drain Pump Filter for 46798	001.40.00045	60995	O-Ring 14x3.5 for 46798	002.00.00100	73751	Axle Inox for Base Down for 46798	002.11.00002
AD885	Inox Base for Draining Pump for 46798	001.40.00051	61003	Rubber Gasket 103x58x3 for 46798	002.00.00105	41085	Sprayer for Rinsing Arm for 46798	002.11.00008
73879	Upper Cover Inox for 46798	001.50.00015	64817	Inlet Hose 1500mm 10x14.5 Hot Water Straight/Elbow with Gasket for 46798	002.00.00109	73880	Upper Rinsing Base Complete for 46798	002.35.00029
73753	Back Cover Inox for 46798	001.50.00043	AD896	Hose Black (3/8) 10x16.5 L: 1200mm Boiler - Upper Rinse Arm for 46798	002.00.00119-E1	73844	Outlet Base Boiler for 46798	002.50.00001
AD886	Panel Switch Inox EU40 for 46798	001.50.00044-A500	AD897	Hose Black (3/8) 10x16.5 L: 830mm Water Valve - No Return Valve for 46798	002.00.00119-E2	41099	Wash and Rinse Group Fixing Screw for 46798	002.50.00004
AD887	Inox Lower Back Cover for 46798	001.50.00072-1	AD898	Hose Black (3/8) 10x16.5 L: 750mm Boiler - No Return Valve for 46798	002.00.00119-E3	AD907	Pipe D10x220 for 46798	002.50.00005-1
AD888	Board Base Inox for 46798	001.50.00083	AD899	Hose Black (3/8) 10x16.5 L: 160mm Water Valve - T Connector for 46798	002.00.00119-E4	AD908	Pipe D10x220 for 46798	002.50.00005-2
65672	Filter Support Back for 46798	001.50.00096	AD900	Rubber Sheet 1mm for 46798	002.00.00123-1-2	41094	Washing Arm Lower for 46798	002.50.00006
65673	Filter Support Middle for 46798	001.50.00098	AD901	Wash Pump Hose (Input) for 46798	002.00.00126-1	60961	Inox Axle Rinse Base BL VE KN for 46798	002.50.00012
AD889	Filter Left Complete for 46798	001.50.00101	41106	Wash Pump Inlet Hose for 46798	002.00.00127	73796	Flow Control Disk for Base for 46798	002.50.00016
AD890	Filter Right Complete for 46798	001.50.00102	AD902	Hose Black (1/4) 6x12 L: 610mm Rinse Pump - T Connector (Hose not Visible) for 46798	002.00.00132-E1	41095	Upper Washing Arm Plastic Connector for 46798	002.50.00017



# Parts Breakdown

## Model CD-GR-0500 46798

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
73887	Washing Upper System Inox Supply Pipe for 46798	002.50.00018	73816	Inox Hex Bolt M6x20 for 46798	003.00.00104	AD949	Door Switch Mechanical Part-Magnetic for 46798	003.00.00574
73857	Rinse Pipe Inox for 46798	002.50.00022	73814	Inox Hex Bolt M4x15 for 46798	003.00.00106	AK501	Thermocouple Sensor NTC 1.5M (not Visible) for 46798	003.00.00587
73750	Adaptor 40-25 for Wash Base for 46798	002.50.00024	AD922	Tubo Transparent 4x6 L: 760mm for 46798	003.00.00140-E1	AD935	Atlas Main Board Version for 46798	003.00.00607
73846	Plastic Base for Rinsing Arms for 46798	002.50.00025	AD923	Tubo Transparent 4x6 L: 1000mm for 46798	003.00.00140-E2	AD936	User Interface 7 SEGM Display Version for 46798	003.00.00609
41098	Rinse Arm Complete for 46798	002.50.00026	AD924	Tubo Transparent 4x6 L: 2100mm for 46798	003.00.00140-E3	AK502	Atlas-User Connection Cable L=500mm (not Visible) for 46798	003.00.00610
60975	Wash Pump Hose (Outlet) for 46798	002.50.00032-1	AD925	Double Water Input Valve for 46798	003.00.00151	AD937	Inox Screw M3x10 for 46798	003.00.00618
AD909	Boiler - Steel for 46798	002.50.00033-3	AD926	Terminal Block 4mm for 46798	003.00.00161	AD938	Capacitor 12.5IF Type UL for 46798	003.00.00622
61005	Washing Base Down V-K Complete for 46798	002.50.00036	AD927	Plast Basket 50x50 for 46798	003.00.00166	AD939	Electromagnetic Filter for 46798	003.00.00625
61002	Drain and Overflow Valve Plastic Part for 46798	002.50.00037	41087	Tank Thermofuse 90C for 46798	003.00.00168	AD940	Spacer Plastic PCB RC-14 for 46798	003.00.00630
AD910	Sprayer for Upper Wash Arm for 46798	002.50.00038	41088	Boiler Thermofuse 105C for 46798	003.00.00180	AD941	Box Plastic 100x100x70 for 46798	003.00.00631
AD911	Plastic Wash Arm Left-Right for 46798	002.50.00039	41113	Tank Draining Pump/Motor 230V-65W for 46798	003.00.00184	AD942	PCU Spacer 3.4x6x5 for 46798	003.00.00659
AD912	Plastic Cap for Wash Arm for 46798	002.50.00040	AD928	Terminal Block Support for 46798	003.00.00198-4	65668	Cable Gland PG-07 Black for 46798	003.00.00677
AD913	Connector Washing System 2 CON for 46798	002.50.00041	60959	Tapping Screw 3.5x9.5 for 46798	003.00.00200	65678	Inox Hex Bolt M6x6 for 46798	003.00.00683
AD914	Washing Upper Med Connection Part 310mm for 46798	002.50.00042	AD929	Clamp 20-32 for 46798	003.00.00244	AD943	Peristaltic Detergent Pump SEKO for 46798	003.00.00684
AD915	Drain and Overflow Valve Plastic Base Complete for 46798	002.50.00257	73758	Boiler Element Fitting Base for 46798	003.00.00260	AD944	Peristaltic Rinse-Aid Pump SEKO 0.7lt Fixed Flow for 46798	003.00.00687
AD916	T-Connector D10-D10 for 46798	002.51.00007	73839	Non Return Valve (DVGW) for 46798	003.00.00269	AD945	M12x16 Inox Hex (1.75) for 46798	003.00.00693
AD917	Rubber Insert Type U for 46798	003.00.00001-A500	60969	Galve. Bolt M4x10 for 46798	003.00.00278	AD946	Tank Draining Pump Kit for 46798	003.00.00694
73802	Heater Element Cover for 46798	003.00.00004	AD930	Washer Inox 6x18 Back for 46798	003.00.00291	AD947	Magnetic Unit D17-4 for 46798	003.00.00731
AD918	Tire Up 98x2.5 for 46798	003.00.00005	73838	Micro Relay 8 Pins Faston for 46798	003.00.00306	AD948	Magnetic Sensor (UL Type) for 46798	003.00.00732
41091	Pressostat Chamber for 46798	003.00.00014	73869	Tapping Screw 4.8x13 for 46798	003.00.00346	AD949	Door Switch Mechanical Part-Magnetic for 46798	003.00.00733
61031	Power Supply Board 6CON for 46798	003.00.00030	AD931	Lock Washer D6 for 46798	003.00.00352	AD950	Detergent-Rinse Aid Pump Kit for 46798	003.00.00734
41090	Pressostat Switch for 46798	003.00.00033-1	AD932	Hex Bolt M6x12 Galvanised for 46798	003.00.00355	41103	Boiler Heating Element 3 Kw for 46798	003.50.00005
73843	Nut M6 Galvanised for 46798	003.00.00041	AD933	Plastic Basket 500x000 for Glasses for 46798	003.00.00390	41102	Tank Heating Element 2.8 Kw for 46798	003.50.00008
73851	Pump 0.75HP 208-240V 60Hz 2P UL for 46798	003.00.00045	73826	Inox Screw 4.2x13 for 46798	003.00.00424	AD951	Film LCD for 46798	003.50.00026-xxxx
73834	M4 Nut Galvanized for 46798	003.00.00046	AD934	Plastic Cutlery Quadrato for 46798	003.00.00439	AD952	Display Panel Complete for 46798	003.50.00027
60957	Galv. Nut M3 for 46798	003.00.00065	60973	Pipe Rubber Protector for 46798	003.00.00466	AD953	Cover for Panel for 46798	003.50.00037
60994	Nut for Door Switch for 46798	003.00.00071	60311	Rinse Aid Inlet Tube 4x6mm (Blue) for 46798	003.00.00487	AD954	Main Wiring Set NED - (UL Wiring) not Visible for 46798	003.50.00043
73842	Nut 14 (Galv.) for 46798	003.00.00074	60993	Rubber Gasket 16x30x3 for 46798	003.00.00489	AD955	Board Panel Complete (UL/ETL) for 46798	003.50.00044
AD921	Steel Electrical Door Switch Plate for 46798	003.00.00077	73762	Cable Plastic Clamp for 46798	003.00.00494	AK503	Boiler Comp. with Heater Element 50-230V - NSF for 46798	006.50.00001-2
73862	Spacer for Door Switch for 46798	003.00.00085	73884	Washer Steel 6x18 for 46798	003.00.00516	AD957	Electrical Box for Power Supply for 46798	006.50.00012