


# Parts Breakdown

Model DW-CN-1194 21571

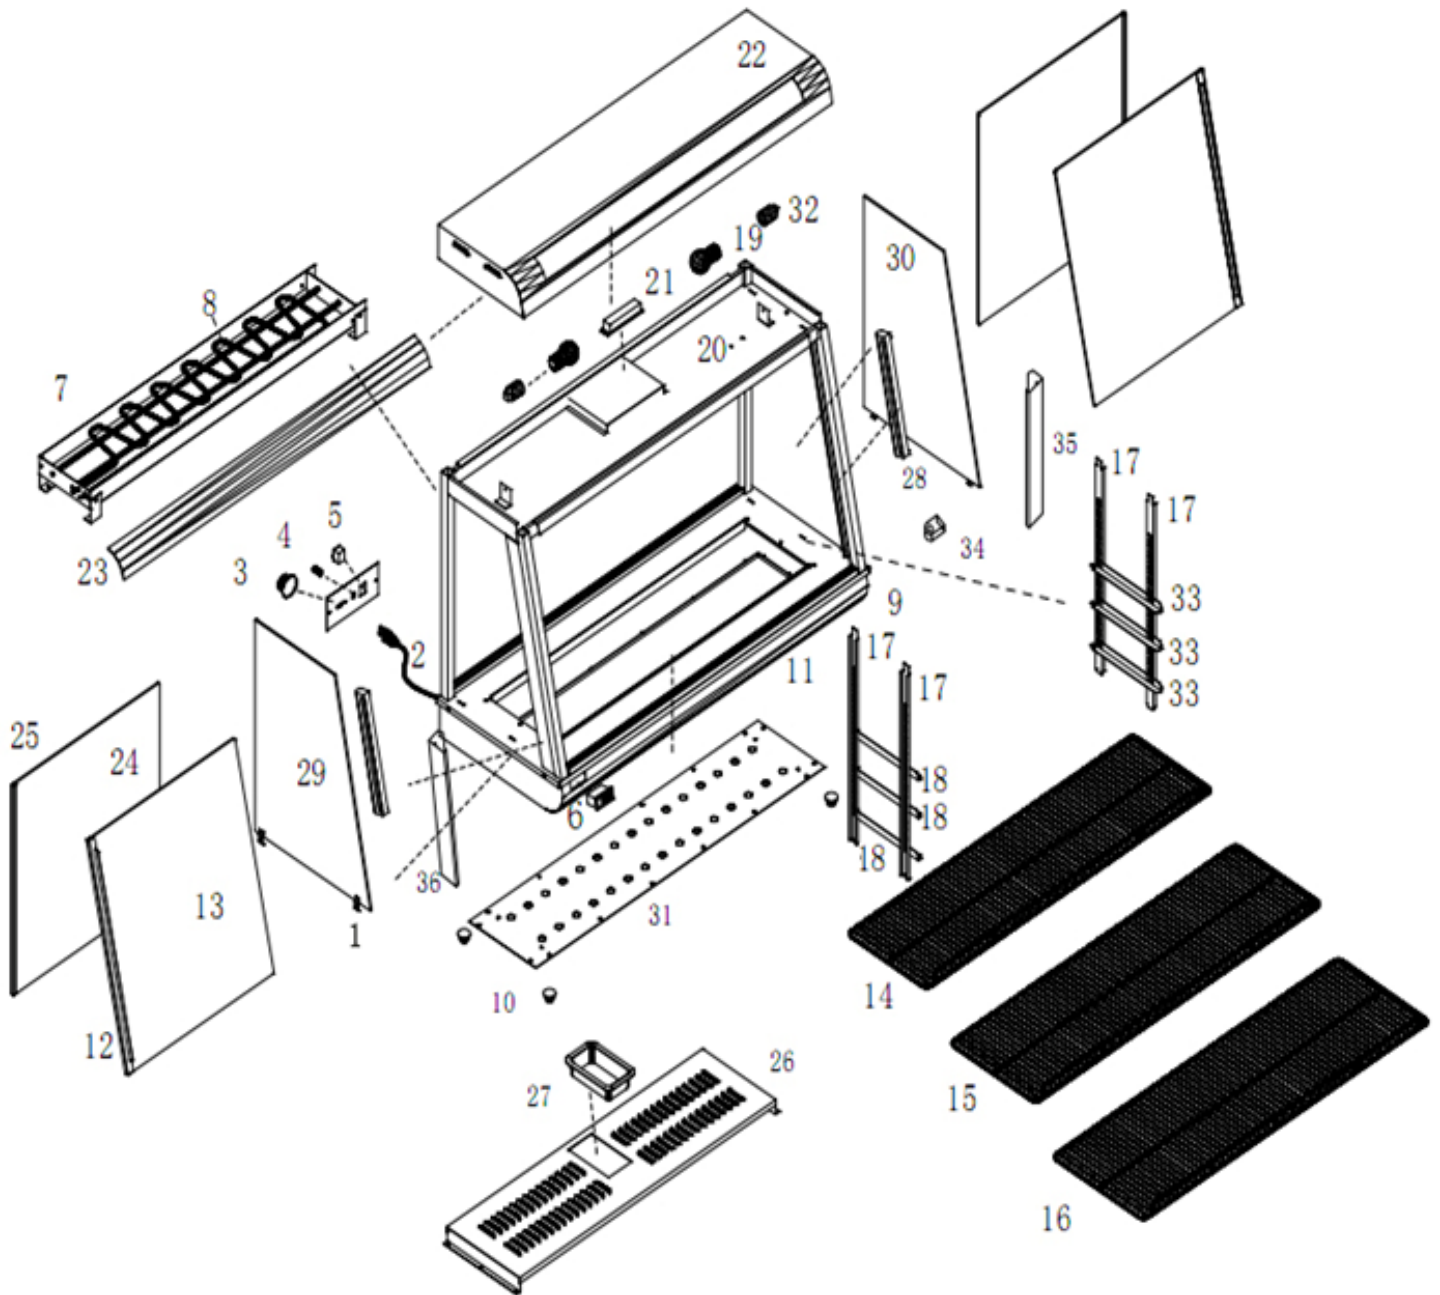

# Parts Breakdown

## Model DW-CN-1194 21571

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
66044	Clip with Screw for 21571	1	24823	Front Glass 606x567mm for 21571	13	24825	Cover of Heater for 21571	26
24746	Plug and Power Cord for 21571	2	24813	315 Shelf for 21571	14	24772	GN Pan for 21571	27
41081	Thermostat with Knob for 21571	3	24814	350 Shelf for 21571	15	26019	Fluorescent Tube only 8 Watt for 21571	28
24749	Indicator Light for 21571	4	24815	360 Shelf for 21571	16	21436	Right or Left Side Glass for 21571	29, 30
24750	Switch for 21571	5	24816	Vertical Support for 21571	17	28733	Base Cover for 21571	31
24751	Temperature Display for 21571	6	66066	Left Bracket for Shelf for 21571	18	66059	40W Light Holder for 21571	32
24806	Bracket of Heater for 21571	7	24764	40W Light for 21571	19	66068	Right Bracket for Shelf for 21571	33
24807	Heater for 21571	8	24819	Middle-Level Assembly for 21571	20	66069	Light Tube Holder for 21571	34
24808	Base for 21571	9	24766	110V Ballast for 21571	21	28737	Right Fluorescent Tube Cover for 21571	35
24755	Plastic Foot for 21571	10	24821	Top Cover for 21571	22	28738	Left Fluorescent Tube Cover for 21571	36
24810	Door Guide for 21571	11	24822	White Decorating Plate for 21571	23			
24770	Front / Back Door Handle for 21571	12, 25	24812	Back Glass 590x567mm for 21571	24			