

TANGO SOFTWARE UPDATE/INSTALL

Links for new Tango Software September 2021:

2 Step menu: Tango vs91.04.01 2S


1 Step menu: Tango vs910.04.01 1S

SECTION A: PREPARING USB SOFTWARE KEY


IMPORTANT: USB drive must be no greater capacity than 16GB and must always be formatted prior to installing/updating software.

1A. Install USB drive to computer and locate drive in file folder

2A. Right-click drive and select *Format...*

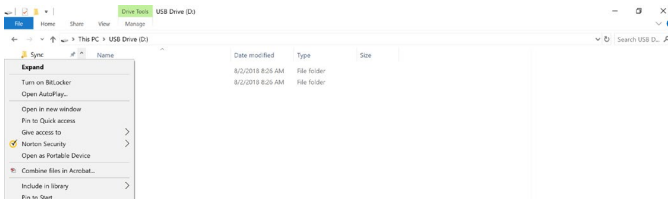


3A. Assign FAT32 as the filing system; name volume label in accordance with software version being installed; check that quick format is selected

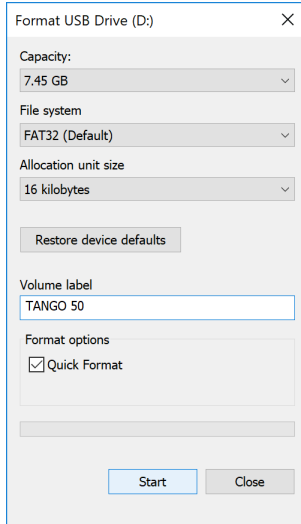


4A. Start format and close window when format is complete


5A. Click link to Sync folder provided in email received from Unic technical service representative

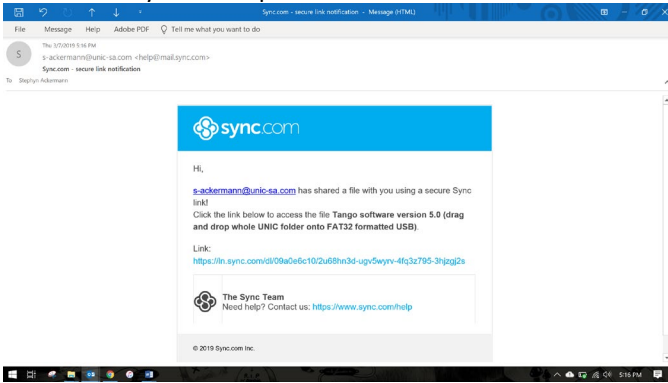

6A. Click *Download all* from Sync.com webpage

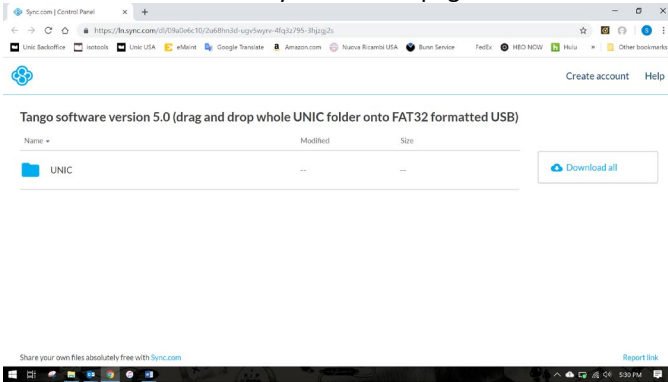


7A. Click *Download now*

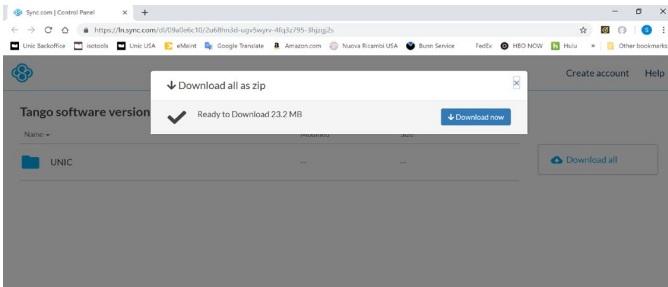


Right Click on folder and select "*Extract All*".

8A. Open *Downloads* and formatted USB drive file folders in two separate windows

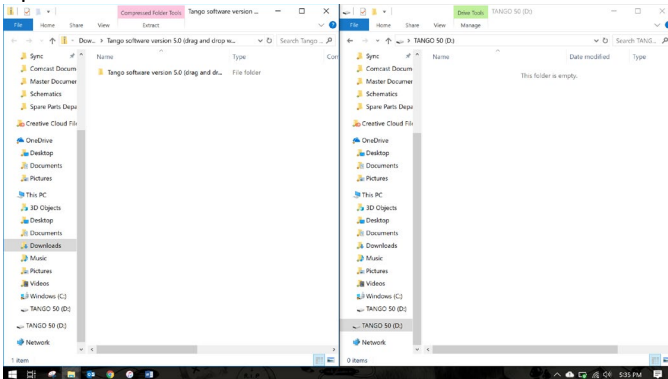


9A. Double-click *Tango software version...* folder to find enclosed *UNIC* folder containing new software files

10A. Drag/drop (copy/paste) UNIC folder to USB drive folder

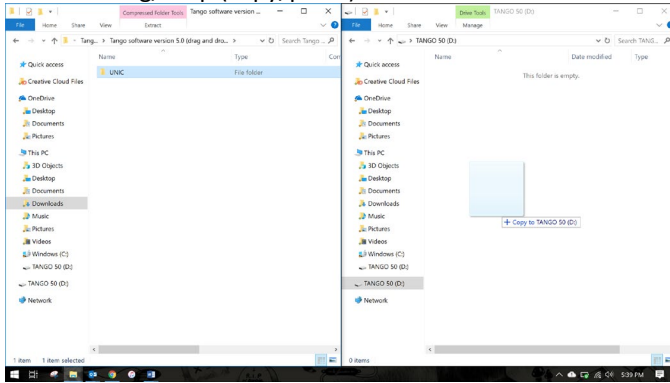


11A. Right-click USB drive when UNIC folder has finished installing and select Eject before removing USB drive from computer

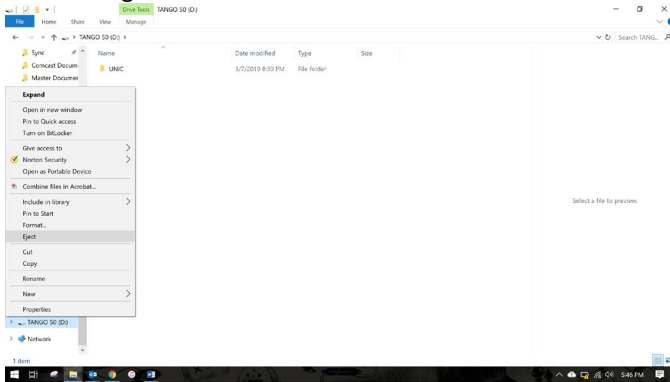


SECTION B: INSTALLING SOFTWARE TO TANGO

1B. Locate USB plug found at upper-left of cup warmer and remove plug cover


2B. Install Tango USB software drive to plug and select *Export drinks database* and *Export machine parameters* check boxes from *USB Operations selection* menu; press green *Confirm* box in lower-left of screen to save original machine format and drinks menu to USB drive; press check-mark icons for both export confirmation screens to continue

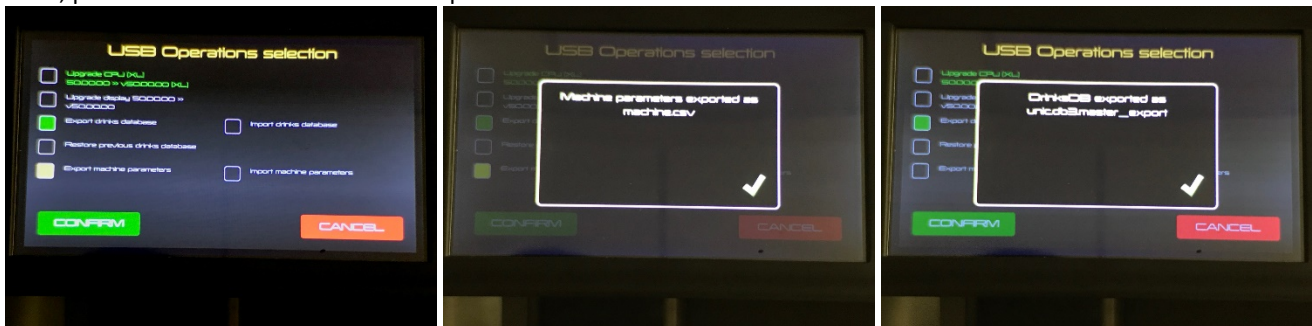


3B. Select *Upgrade display* check box from *USB Operations selection* menu; press green *Confirm* box in lower-left of screen to commence display update/install

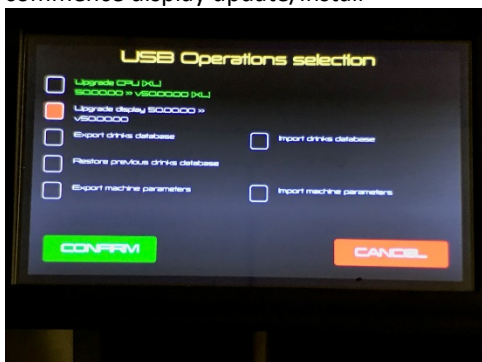

4B. Select available display file from *Select files* menu and press *OK*


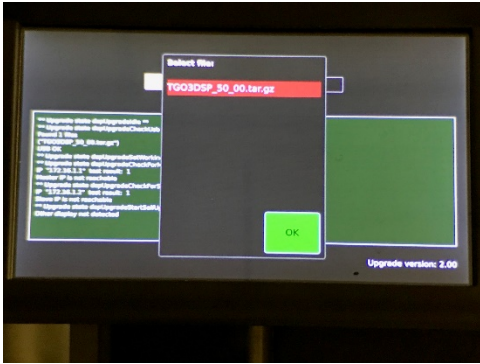


5B. Wait for screen to read *PLEASE RESTART MACHINE*, then power-cycle (restart) machine using breaker switch located at lower-left of drip tray with USB drive installed

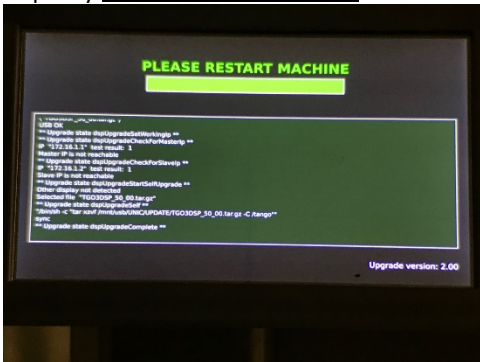


NOTE: Machine will default to foreign language (usually French) following display software update/install; allow machine to boot software and return to [foreign language: USB Operations selection] menu and continue as follows:

6B. Select *Upgrade CPU (XL)* check box from [foreign language: USB Operations selection] menu; press green [foreign language: Confirm] box in lower-left of screen to commence CUP update/install

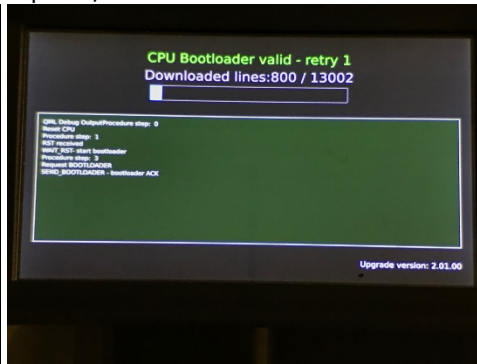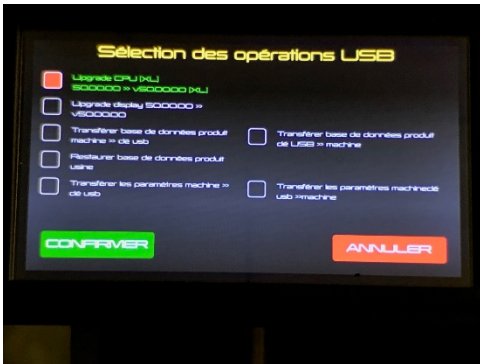

NOTE: CPU update will take approximately 10min to download

7B. Wait for screen to read *PLEASE RESTART MACHINE*, then remove USB drive and power-cycle (restart) machine using breaker switch located at lower-left of drip tray

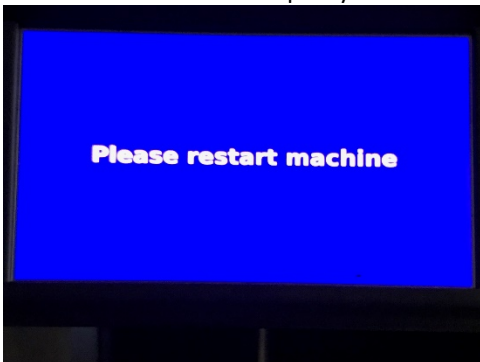


8B. Wait for machine to boot new software, [re]heat and perform auto-control procedure; following these processes, display will return to home drinks page; press *MENU* in lower-center of screen; enter code:9191 and press *OK*




9B. Press red (gears icon) key [*foreign language: Setup*] from root programming menu



10B. Press top-row/second-from-left (flag icon) key from [*foreign language: Setup*] sub-menu

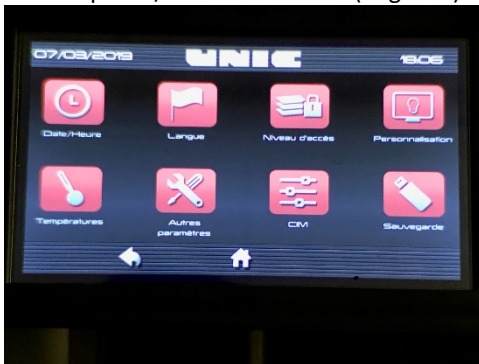


11B. Press top-row/first-from-left (Union Jack icon) key to change language to English

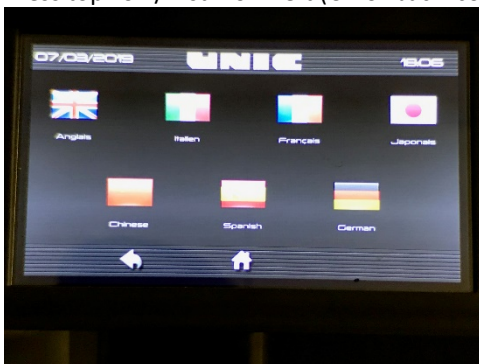


NOTE: screen reverts to home drink page following language change

- 12B. Re-install Tango USB software drive to plug and select *Import drinks database* and *Import machine parameters* check boxes from *USB Operations selection* menu; press green *Confirm* box in lower-left of screen to commence import of original machine format/drinks menu

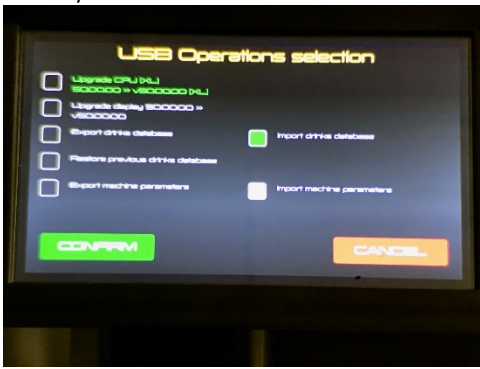

- 13B. Wait for screen to read *Machine parameters imported. Please restart the machine.* then remove USB drive and power-cycle (restart) machine using breaker switch located at lower-left of drip tray

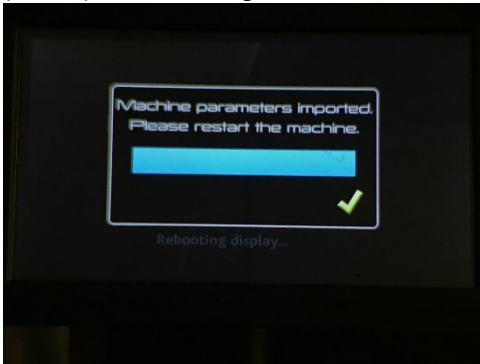

- 14B. Wait for machine to boot new software, [re]heat and perform auto-control procedure; following these processes, display will return to home drinks page; Software update/install is now complete and machine may return to regular service.