

CLEAN/ICE/OFF



SS

STOP



PB1


START/
HARVEST




PB2

ON CONTROL PANEL DOOR

OPTIONAL POWER MONITOR
LOCATED ON BACK OF
ENCLOSURE DOOR.

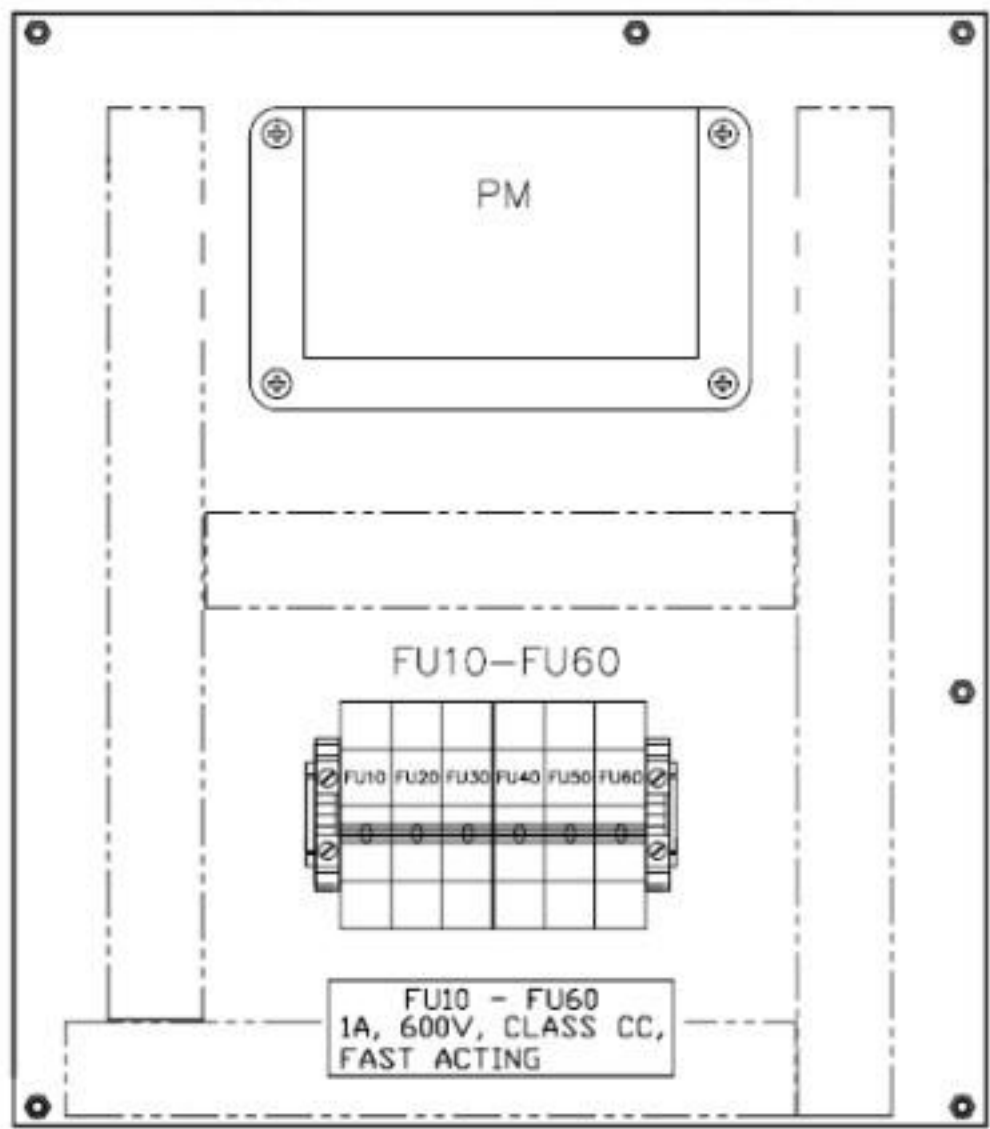

SWITCHES LOCATED ON
OUTSIDE OF CONTROL
PANEL DOOR

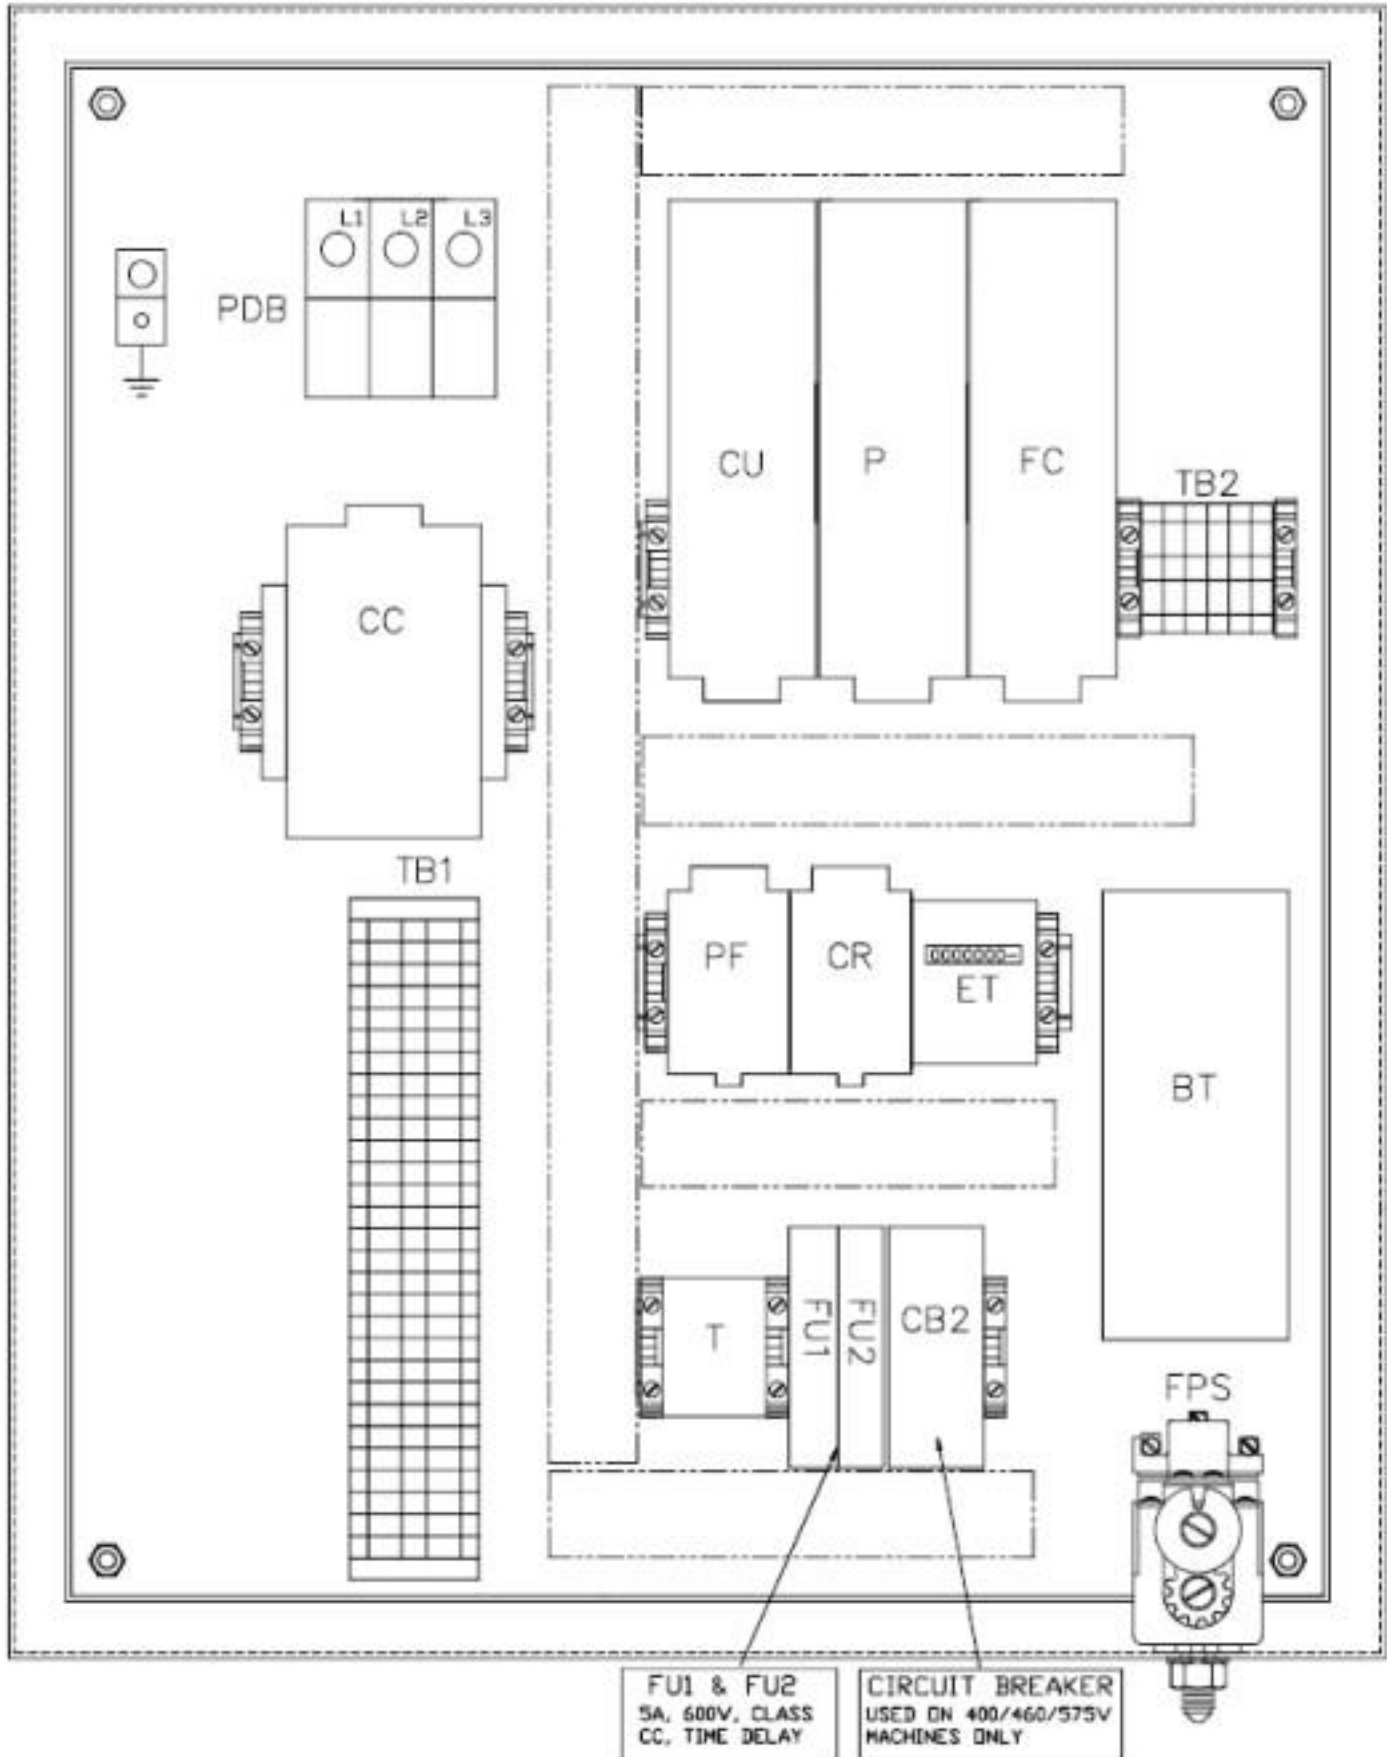

FU1 & FU2
 5A, 600V, CLASS
 CC, TIME DELAY

CIRCUIT BREAKER
 USED ON 400/460/575V
 MACHINES ONLY

