


Illustration#	Part#	Description
1	028863	Crumb Tray
2	032930 028864	Toaster Drawer <i>(on units after 1/5/2012)</i> Toaster Drawer
3	028865	Foot (4 required)
4	029683	Conveyor Belt
5	029684	Red LED Cover
6	029685	Green LED Cover
7	029769	On/Off Toggle Switch
8	029235	Set Screw (knob and motor sprocket)
9	029105	Conveyor Speed Knob
10	029768	Standby Rocker Switch
11	032721 029688	62 pitch Chain <i>(on units after 3/30/2009)</i> 68 pitch Chain
12	032719	Motor Sprocket <i>(on units after 3/30/2009)</i>
13	032779	AC Motor <i>(on units after 3/30/2009)</i>
14	029691	Nylon Clamp Bushing
15	032720	VR PCB Assembly
16	029694	Conveyor Sprocket
17	029695	Space Tube (2 required)
18	029772	Thermo Switch
19	029697	Power Connection PCB Assembly
20	029773	Fan Assembly
21	029700	Cable Clamp (strain relief)
22	029774 035128	Heater Set (upper & lower) <i>(Replaceable starting with a date code of October 2011)</i> CTS1000CND Heater Set (upper & lower) <i>(Replaceable starting with a date code of October 2011)</i>
23	035126	Thermostat with Leads <i>(for heater on units after 6/2013)</i>
24	029847 029799 029848	CTS1000 Cord CTS10006 Cord CTS1000CND Cord

Parts No Longer Used

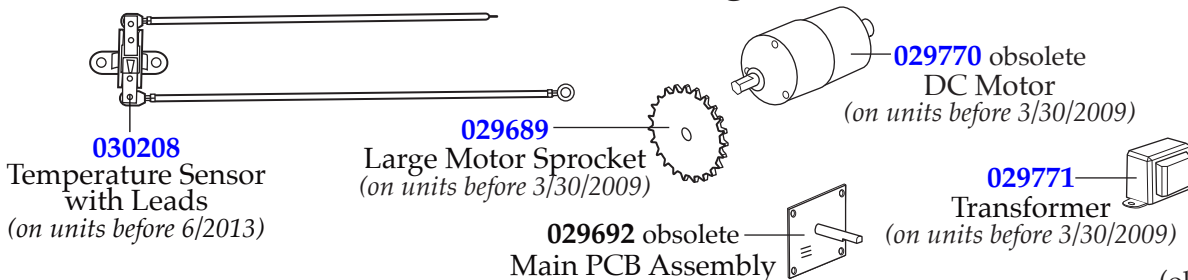

(old panel configuration)