

ALTO-SHAAM®

Catering Warmer
Electric



500-E/HD

Models:

500-E/HD
500-E/Deluxe




500-E/Deluxe

- **INSTALLATION**
- **OPERATION**
- **MAINTENANCE**

HALO
HEAT®

24•7
Your Service Hotline
1-800-558-8744

W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 USA
PHONE: 262.251.3800 • 800.558.8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY
www.alto-shaam.com

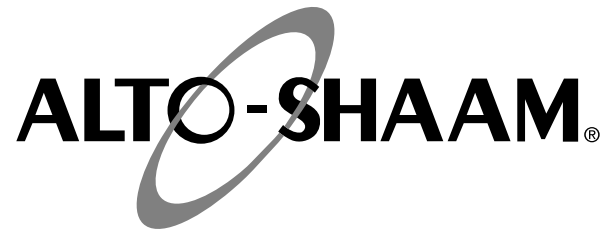

| | |
|---|---|
| Delivery | 1 |
| Unpacking | 1 |
| Safety Procedures and Precautions | 2 |

Installation

| | |
|---------------------------------|---|
| Site Installation | 3 |
| Clearance Requirements | 3 |
| Weights | 3 |
| Dimension Drawing | 4 |
| Stacking | 4 |
| Options and Accessories | 4 |
| Electrical Specifications | 5 |

Operating Instructions

| | |
|---|---|
| User Safety Information | 6 |
| Heating Characteristics | 6 |
| Product Capacity | 6 |
| Manual Control - Before Initial Use | 7 |
| Electronic Control - Control Identification | 8 |
| Electronic Control - Before Initial Use | 8 |
| General Holding Guidelines | 9 |

Care and Cleaning

| | |
|---|----|
| Cleaning and Preventative Maintenance | 10 |
| Protecting Stainless Steel Surfaces | 10 |
| Cleaning Agents | 10 |
| Cleaning Materials | 10 |
| Care and Cleaning | 11 |

Sanitation

| | |
|--|----|
| Sanitation/Food Safety | 12 |
| Internal Food Product Temperatures | 12 |

Service

Manual Control

| | |
|--|----|
| Thermostat and Heat Light Sequence | 13 |
| Thermostat Calibration | 13 |

Electronic Control


| | |
|--|-------|
| Trouble Shooting Internal Electronic Components .. | 13 |
| Trouble Shooting - Error Codes | 14 |
| Probe and Air Sensor Testing | 14 |
| Service View - Manual Control | 15 |
| Heat Cable Replacement Kits | 16 |
| Service Views - Electronic Control | 16-17 |

Wire Diagrams

Always refer to the wire diagram(s) included with the unit for most current version.

Warranty

| | |
|--|------------|
| Transportation Damage and Claims | Back Cover |
| Limited Warranty | Back Cover |

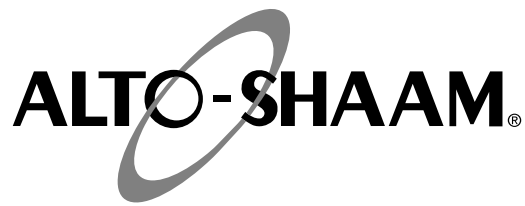

DELIVERY

This Alto-Shaam appliance has been thoroughly tested and inspected to ensure only the highest quality unit is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. *See Transportation Damage and Claims section located in this manual.*

This appliance, complete with unattached items and accessories, may have been delivered in one or more packages. Check to ensure that all standard items and options have been received with each model as ordered.

Save all the information and instructions packed with the appliance. Complete and return the warranty card to the factory as soon as possible to ensure prompt service in the event of a warranty parts and labor claim.


This manual must be read and understood by all people using or installing the equipment model. Contact the Alto-Shaam Tech Team Service Department if you have any questions concerning installation, operation, or maintenance.

NOTE: All claims for warranty must include the full model number and serial number of the unit.

UNPACKING

1. Carefully remove the appliance from the carton or crate.

NOTE: Do not discard the carton and other packaging material until you have inspected the unit for hidden damage and tested it for proper operation.

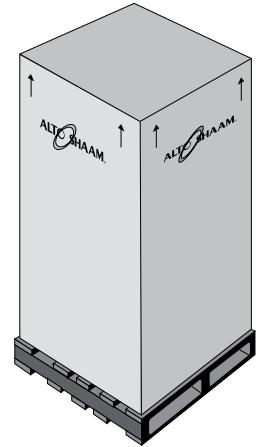

2. Read all instructions in this manual carefully before initiating the installation of this appliance.


DO NOT DISCARD THIS MANUAL.


This manual is considered to be part of the appliance and is to be provided to the owner or manager of the business or to the person responsible for training operators. *Additional manuals are available from the Alto-Shaam Tech Team Service Department.*


3. Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.

SAFETY PROCEDURES AND PRECAUTIONS

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. In accordance with generally accepted product safety labeling guidelines for potential hazards, the following signal words and symbols may be used throughout this manual.

| DANGER | |
|---|---|
|  | Used to indicate the presence of a hazard that WILL cause severe personal injury, death, or substantial property damage if the warning included with this symbol is ignored. |

| WARNING | |
|--|--|
|  | Used to indicate the presence of a hazard that CAN cause personal injury, possible death, or major property damage if the warning included with this symbol is ignored. |

| CAUTION | |
|---|---|
|  | Used to indicate the presence of a hazard that can or will cause minor or moderate personal injury or property damage if the warning included with this symbol is ignored. |

| CAUTION | |
|---|--|
| Used to indicate the presence of a hazard that can or will cause minor personal injury, property damage, or a potential unsafe practice if the warning included with this symbol is ignored. | |

| |
|--|
| NOTE: Used to notify personnel of installation, operation, or maintenance information that is important but not hazard related. |
|--|

1. This appliance is intended to cook, hold or process foods for the purpose of human consumption. No other use for this appliance is authorized or recommended.
2. This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users.
3. Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified technical personnel.
4. This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.

| NOTE | |
|--|---|
|  | For equipment delivered for use in any location regulated by the following directive: DO NOT DISPOSE OF ELECTRICAL OR ELECTRONIC EQUIPMENT WITH OTHER MUNICIPAL WASTE. |

INSTALLATION

SITE INSTALLATION

This appliance, complete with unattached items and accessories, may be delivered in one or more packages. Check to insure that all accessories that were ordered have been received with the unit.

Alto-Shaam holding cabinets are designed for the purpose of maintaining hot food at a temperature for safe consumption. The unit must be installed on a level surface in a location that will permit the equipment to function for its intended purpose and allow adequate access for proper cleaning and maintenance.

The appliance must not be used in any area where it will be affected by steam, grease, dripping water, high temperatures, or any other severely adverse conditions.

CLEARANCE REQUIREMENTS

3 inches (76mm)
top, bottom, right and left

NET WEIGHT

500-E/HD: 59 lb. (27 kg)
500-E/Deluxe: 76 lb. (34 kg)



DANGER



ELECTRICAL CONNECTIONS MUST BE MADE BY A QUALIFIED SERVICE TECHNICIAN IN ACCORDANCE WITH APPLICABLE ELECTRICAL CODES.


CAUTION



TO PREVENT PERSONAL INJURY, USE CAUTION WHEN MOVING OR LEVELING THIS APPLIANCE.


INSTALLATION

SITE INSTALLATION


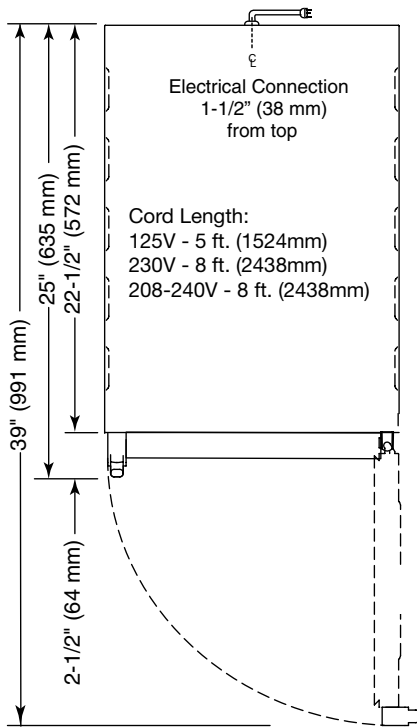


Outside Dimensions

500-E/HD

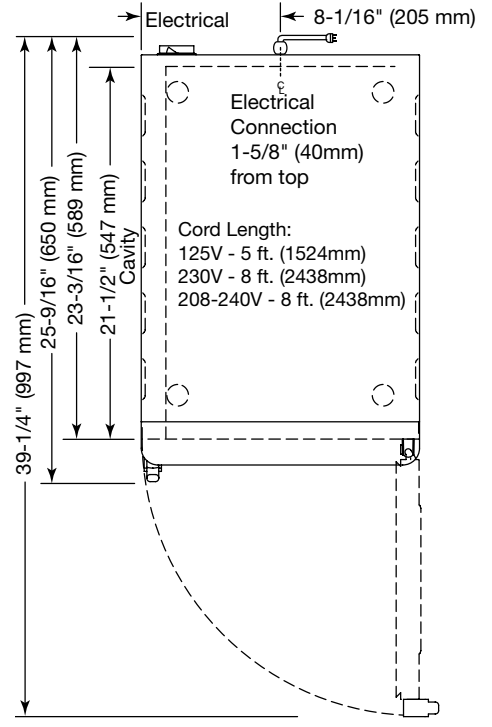

500-E/Deluxe

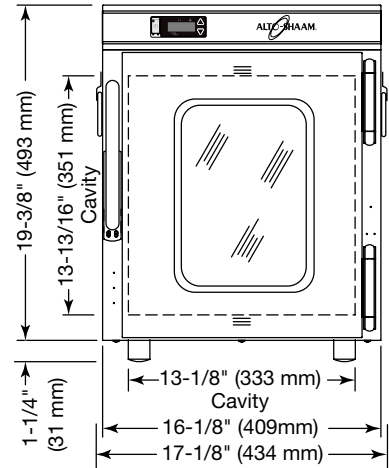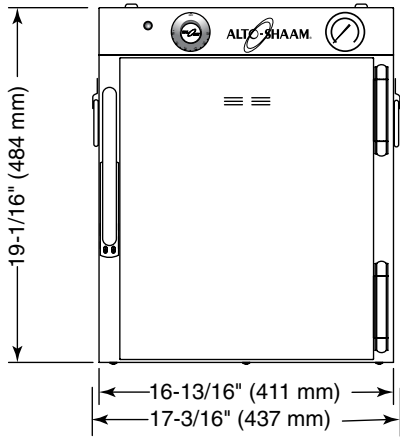

STACKING

Cabinets can be stacked in multiples. There are four (4) 3/16" (5mm) rounded projections on the top and bottom of each cabinet to permit stacking. A center support stacking hardware kit (E-5091) must be used to stack the deluxe cabinets.

500-E/HD stacked height: 38-1/8" (968mm)

500-E/Deluxe stacked height: 40-1/16" (1018mm)

| OPTIONS & ACCESSORIES | 500-E/HD | 500-E/Deluxe |
|---|----------|--------------|
| Casters*, 3" (76mm) (4) | — | 14227* |
| Casters*, 5" (127mm) (4) | — | 4007* |
| Caster Stand Assembly with 5" (127mm) casters (4) | 15377 | — |
| Legs*, 6" (152mm) (4) | — | 5205* |
| Leg Stand Assembly, with 6" (152mm) legs (4) | 15378 | — |
| Pan Slide Support (2 REQUIRED) | 11002 | — |
| Shelf, chrome plated wire | SH-2107 | — |
| Stand Base Assembly | — | E-5089* |
| Stacking Hardware (CENTER SUPPORT, BETWEEN UNITS) | — | E-5091 |
| Transport Door Latches (FACTORY INSTALLATION) | LT-2035 | — |

*stand base assembly must be ordered when ordering casters or legs

INSTALLATION

ELECTRICAL

1. An identification tag is permanently mounted on the cabinet.
2. Plug the unit into a properly grounded receptacle ONLY. Arcing will occur when connecting or disconnecting the unit unless all controls are in the "OFF" position.
3. Position the unit so the cord is easily accessible in case of any emergencies. If necessary, a proper receptacle or outlet configuration, as required for the unit, must be installed by a licensed electrician in accordance with applicable, local electrical codes.

For CE approved units: To prevent an electrical shock hazard between the appliance and other appliances or metal parts in close vicinity, an equalization-bonding stud is provided. An equalization bonding lead must be connected to this stud and the other appliances / metal parts to provide sufficient protection against potential difference. The terminal is marked with the following symbol.



NOTE: CE approved appliances must be connected to an electrical circuit that is protected by an external GFCI outlet.

| ELECTRICAL | | | | | | |
|----------------|-------|----------|------|-----|--|-----------------------------|
| 500-E/HD | | | | | | |
| VOLTAGE | PHASE | CYCLE/HZ | AMPS | kW | | PLUG CONFIG. |
| 125 (AGCY) | 1 | 60 | 4.0 | 0.5 | | NEMA 5-15P 15A-125V PLUG |
| 208-240 (AGCY) | 1 | 50/60 | 5.0 | 1.2 | | NEMA 6-15P |
| | | 50/60 | 4.4 | 0.9 | | 15A-250V PLUG |
| at 240V | | 50/60 | 5.0 | 1.2 | | |
| 230 (AGCY) | 1 | 50/60 | 4.8 | 1.1 | | CEE 7/7 220-230V PLUG |
| 500-E/DELUXE | | | | | | |
| VOLTAGE | PHASE | CYCLE/HZ | AMPS | kW | | PLUG CONFIG. |
| 125 (AGCY) | 1 | 60 | 4.8 | 0.6 | | NEMA 5-15P 15A-125V PLUG |
| 208-240V | 1 | 50/60 | 3.4 | 0.8 | | NEMA 6-15P |
| | | 50/60 | 3.0 | 0.6 | | 15A-250V PLUG |
| at 240 | | 50/60 | 3.0 | 0.6 | | |
| 230 (AGCY) | 1 | 50/60 | 3.3 | 0.8 | | CEE 7/7 220-230V PLUG |

Wire diagrams are located inside the bonnet of the unit.

DANGER

**ENSURE POWER SOURCE
MATCHES VOLTAGE STAMPED
ON APPLIANCE NAMEPLATE.**

DANGER

To avoid electrical shock, this appliance MUST be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.

DANGER

IMPROPER INSTALLATION, ALTERATION, ADJUSTMENT, SERVICE, OR MAINTENANCE COULD RESULT IN SEVERE INJURY, DEATH, OR CAUSE PROPERTY DAMAGE.

READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

CAUTION

THIS SECTION IS PROVIDED FOR THE ASSISTANCE OF QUALIFIED SERVICE TECHNICIANS ONLY AND IS NOT INTENDED FOR USE BY UNTRAINED OR UNAUTHORIZED SERVICE PERSONNEL.

INSTALLATION

USER SAFETY INFORMATION

This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users.

Make sure the unit is connected to the appropriate power source.

1. Use hand protection when handling hot items.
2. Be certain only hot foods are placed into the cabinet.
3. To avoid personal injury and damage to the unit, treat glass with care. Remember — glass can shatter.

HEATING CHARACTERISTICS

The cabinet is equipped with a special, low heat density, heating cable. Through the Halo Heat concept, the heating cable is mounted against the walls of the warming compartment to provide an evenly applied, thermostat controlled, heat source. The design and operational characteristics of the cabinet eliminate the need for a moisture pan or a heat circulating fan. Through even heat application, the quality of a food product is maintained up to several hours.

CAPACITY

Up to approximately 87 lbs. (39.45 kg)

STANDARD:

- FULL SIZE PANS: GASTRONORM:
— Three (3) 12" x 20" x 4" (1/1: 530 x 325 x 100mm)
- ONE-HALF SIZE PANS:
— Six (6) 12" x 10" x 4" (1/2: 265 x 325 x 100mm)


OPTION:

- FULL SIZE PANS: GASTRONORM:
— Four (4) 12" x 20" x 2-1/2" (1/1: 530 x 325 x 65mm)
- ONE-HALF SIZE PANS:
— Eight (8) 12" x 10" x 2-1/2" (1/2: 265 x 325 x 65mm)

For the option to accommodate 2-1/2" (65mm) deep pans, one set of (2) #11002 Pan Slide Supports are required.


Remove the two (2) #1220 Pan Slides Supports from the center pan position inside the cabinet, and replace with the two (2) #11002 Pan Slide Supports using the same Pan Slide Mounting Screws (SC-2268).

STANDARD

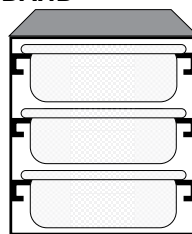

6: #1220 PAN SLIDES

OPTIONAL

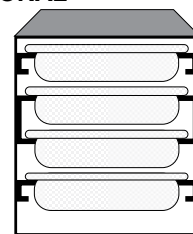

4: #1220 PAN SLIDES
2: #11002 PAN SLIDES

CAUTION



TO PREVENT PERSONAL INJURY,
USE CAUTION WHEN MOVING OR
LEVELING THIS APPLIANCE.

OPERATION

MANUAL CONTROL

BEFORE INITIAL USE

Clean appliance with a clean, damp cloth and mild soap solution. Clean and install the pans, shelves and side racks.

1. Turn thermostat to 200°F (93°C) and preheat for 30 minutes.

When the thermostat is turned clockwise to an "ON" position, the indicator light will illuminate and will remain lit as long as the unit is calling for heat. Close the ventilation openings inside the door to accelerate heating.

The indicator light will go OUT when the air temperature inside the unit reaches the temperature set by the operator. It will then cycle "ON/OFF" at this holding point. Verify the full preheated temperature with the holding temperature gauge located on the control panel of the cabinet.

2. Load the cabinet with hot food only.


The purpose of the holding cabinet is to maintain hot food at proper serving temperature. Before loading the cabinet with food, use a food thermometer to make certain all products are at an internal temperature range of 140° to 160°F (60° to 71°C). Any food product not within the proper temperature range should be heated before loading into the holding cabinet.

Some foods (ribs, fish, potatoes, etc.) will create humidity inside the warmer. Allow the surface of these foods to stabilize for a short period of time before placing the warm food inside the unit. Do not add water to the unit.

3. Reset the thermostat to 160°F (71°C). For potatoes - 180°F (82°C).


Check to make certain the cabinet door is securely closed, and reset the thermostat to 160°F (71°C). THIS WILL NOT NECESSARILY BE THE FINAL SETTING. The proper temperature range for the products being held will depend on the type and quantity of product. When holding food for prolonged periods, it is advisable to periodically check the internal temperature of each item with a food thermometer to assure maintenance of the proper temperature range of 140° to 160°F (60° to 71°C).

Verify that the fan in the back of the unit is operating and turning without any visual restrictions.

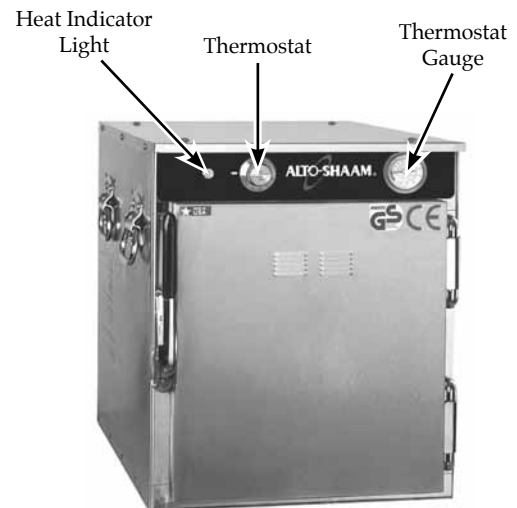


OPERATION

ELECTRONIC CONTROL

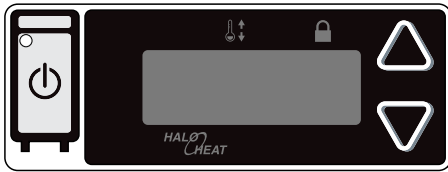

ON/OFF Key



Press the ON/OFF key once and the power indicator light will illuminate. Press and hold the ON/OFF key until the LED display turns off (at least three seconds) and power indicator light goes out.

UP/DOWN Arrow Key



The UP and DOWN arrow keys are used for a variety of settings when selecting the holding temperature. If an arrow key is pressed and released, the display will show the current set temperature for two seconds. If an arrow key is held (at least eight seconds), the value will change at a rapid rate. If the arrow key is pressed and released in rapid succession, the set temperature will change by increments of one degree.

ENABLE/DISABLE BEEPER



A beeper sounds when an error code is displayed. To choose between beeper on and beeper off mode, the control must be off, then press and hold the DOWN arrow key until either "ON" or "OFF" is shown in the LED display. Release arrow key when desired mode is displayed.

FAHRENHEIT/CELSIUS



With the control off, to choose between Fahrenheit and Celsius, press and hold the UP arrow key until either °F or °C is shown in LED display. Release key when desired setting is displayed.



The control has a four-digit LED display. When the display is on, it will show current holding temperature, as well as diagnostic information.

CONTROL LOCK

The warmer controls can be locked so that no changes can be made to the set temperature.

To lock the display, press and hold the ON/OFF key and the Up Arrow key at the same time. The lock LED will illuminate. When the lock LED is illuminated, additional programming will not be functional other than the key sequence required to unlock the panel.

To unlock the display, press and hold the ON/OFF key and the Down Arrow key at the same time. The lock LED will extinguish. The panel keys will resume normal function.

Before Initial Use:

Clean appliance with a clean, damp cloth and mild soap solution. Glass cleaner or distilled vinegar can be used on any glass. Clean and install the pans, shelves and side racks.

1. Preheat at 200°F (93°C) for 30 minutes.

Press the ON key, and set the temperature to 200°F (93°) by using the UP/DOWN arrow keys. Allow a minimum of 30 minutes preheating time before loading the holding cabinet with food. Closing the vents on the inside of the door will speed the preheating process. The LED heat indicator light will go "Out" after approximately 30 minutes preheat time, or when the air temperature inside the unit reaches the temperature set by the operator. The Set indicator will light up anytime the temperature is set or reset.

2. Load with hot food only.

The purpose of the holding cabinet is to maintain hot food at proper serving temperature. Only hot food should be placed into the cabinet. Before loading the cabinet with food, use a food thermometer to make certain all products are at an internal temperature range of 140° to 160°F (60° to 71°C). Any food product not within the proper temperature range should be heated before loading into the holding cabinet.

3. Reset the control to 160°F (71°C).

Check to make certain the cabinet door is securely closed, and reset to 160°F (71°C) by using the UP/DOWN keys. **THIS WILL NOT NECESSARILY BE THE FINAL SETTING.** The proper temperature range--or closing or opening the door vents--will depend on the type and quantity of product. When holding food for prolonged periods, it is advisable to periodically check the internal temperature of each item with a food thermometer to assure maintenance of the proper temperature range of 140° to 160°F (60° to 71°C).

OPERATION

GENERAL HOLDING GUIDELINES

Chefs, cooks and other specialized food service personnel employ varied methods of cooking. Proper holding temperatures for a specific food product must be based on the moisture content of the product, product density, volume, and proper serving temperatures. Safe holding temperatures must also be correlated with palatability in determining the length of holding time for a specific product.

Halo Heat maintains the maximum amount of product moisture content without the addition of water, water vapor, or steam. Maintaining maximum natural product moisture preserves the natural flavor of the product and provides a more genuine taste. In addition to product moisture retention, the gentle properties of Halo Heat maintain a consistent temperature throughout the cabinet without the necessity of a heat distribution fan, thereby preventing further moisture loss due to evaporation or dehydration.

When product is removed from a high temperature cooking environment for immediate transfer into equipment with the lower temperature required for hot food holding, condensation can form on the outside of the product and on the inside of plastic containers used in self-service applications. Allowing the product to release the initial steam and heat produced by high temperature cooking can alleviate this condition. To preserve the safety and quality of freshly cooked foods however, a maximum of 1 to 2 minutes must be the only time period allowed for the initial heat to be released from the product.

This unit is equipped with a thermostat control between 60° and 200°F (16° and 93°C). If the unit is equipped with vents, close the vents for moist holding and open the vents for crisp holding. Use a metal-stemmed thermometer to measure the internal temperature of the product being held. Adjust the thermostat setting to achieve the best overall setting based on internal product temperature.

| HOLDING TEMPERATURE RANGE | | |
|--|--------------|------------|
| MEAT | FAHRENHEIT | CELSIUS |
| BEEF ROAST — Rare | 130°F | 54°C |
| BEEF ROAST — Med/Well Done | 155°F | 68°C |
| BEEF BRISKET | 160° — 175°F | 71° — 79°C |
| CORN BEEF | 160° — 175°F | 71° — 79°C |
| PASTRAMI | 160° — 175°F | 71° — 79°C |
| PRIME RIB — Rare | 130°F | 54°C |
| STEAKS — Broiled/Fried | 140° — 160°F | 60° — 71°C |
| RIBS — Beef or Pork | 160°F | 71°C |
| VEAL | 160° — 175°F | 71° — 79°C |
| HAM | 160° — 175°F | 71° — 79°C |
| PORK | 160° — 175°F | 71° — 79°C |
| LAMB | 160° — 175°F | 71° — 79°C |
| POULTRY | | |
| CHICKEN — Fried/Baked | 160° — 175°F | 71° — 79°C |
| DUCK | 160° — 175°F | 71° — 79°C |
| TURKEY | 160° — 175°F | 71° — 79°C |
| GENERAL | 160° — 175°F | 71° — 79°C |
| FISH/SEAFOOD | | |
| FISH — Baked/Fried | 160° — 175°F | 71° — 79°C |
| LOBSTER | 160° — 175°F | 71° — 79°C |
| SHRIMP — Fried | 160° — 175°F | 71° — 79°C |
| BAKED GOODS | | |
| BREADS/ROLLS | 120° — 140°F | 49° — 60°C |
| MISCELLANEOUS | | |
| CASSEROLES | 160° — 175°F | 71° — 79°C |
| DOUGH — Proofing | 80° — 100°F | 27° — 38°C |
| EGGS — Fried | 150° — 160°F | 66° — 71°C |
| FROZEN ENTREES | 160° — 175°F | 71° — 79°C |
| HORS D'OEUVRES | 160° — 180°F | 71° — 82°C |
| PASTA | 160° — 180°F | 71° — 82°C |
| PIZZA | 160° — 180°F | 71° — 82°C |
| POTATOES | 180°F | 82°C |
| PLATED MEALS | 140° — 165°F | 60° — 74°C |
| SAUCES | 140° — 200°F | 60° — 93°C |
| SOUP | 140° — 200°F | 60° — 93°C |
| VEGETABLES | 160° — 175°F | 71° — 79°C |
| THE HOLDING TEMPERATURES LISTED ARE SUGGESTED GUIDELINES ONLY. ALL FOOD HOLDING SHOULD BE BASED ON INTERNAL PRODUCT TEMPERATURES. ALWAYS FOLLOW LOCAL HEALTH (HYGIENE) REGULATIONS FOR ALL INTERNAL TEMPERATURE REQUIREMENTS. | | |

CLEANING AND PREVENTIVE MAINTENANCE

PROTECTING STAINLESS STEEL SURFACES



It is important to guard against corrosion in the care of stainless steel surfaces. Harsh, corrosive, or inappropriate chemicals can completely destroy the protective surface layer of stainless steel. Abrasive

pads, steel wool, or metal implements will abrade surfaces causing damage to this protective coating and will eventually result in areas of corrosion. Even water, particularly hard water that contains high to moderate concentrations of chloride, will cause oxidation and pitting that result in rust and corrosion. In addition, many acidic foods spilled and left to remain on metal surfaces are contributing factors that will corrode surfaces.




Proper cleaning agents, materials, and methods are vital to maintaining the appearance and life of this appliance. Spilled foods should be removed and the area wiped as soon as possible but at the very least, a minimum of once a day. Always thoroughly rinse surfaces after using a cleaning agent and wipe standing water as quickly as possible after rinsing.

CLEANING AGENTS

Use non-abrasive cleaning products designed for use on stainless steel surfaces. Cleaning agents must be chloride-free compounds and must not contain quaternary salts. Never use hydrochloric acid (muriatic acid) on stainless steel surfaces. Always use the proper cleaning agent at the manufacturer's recommended strength. Contact your local cleaning supplier for product recommendations.

CLEANING MATERIALS

The cleaning function can usually be accomplished with the proper cleaning agent and a soft, clean cloth. When more aggressive methods must be employed, use a non-abrasive scouring pad on difficult areas and make certain to scrub with the visible grain of surface metal to avoid surface scratches. Never use wire brushes, metal scouring pads, or scrapers to remove food residue.

|  CAUTION | |
|--|---|
|  NO SCRAPERS | TO PROTECT STAINLESS STEEL SURFACES, COMPLETELY AVOID THE USE OF ABRASIVE CLEANING COMPOUNDS, CHLORIDE BASED CLEANERS, OR CLEANERS CONTAINING QUATERNARY SALTS. NEVER USE HYDROCHLORIC ACID (MURIATIC ACID) ON STAINLESS STEEL. NEVER USE WIRE BRUSHES, METAL SCOURING PADS OR SCRAPERS. |
|  NO WIRE BRUSHES | |
|  NO STEEL PADS | |

CARE AND CLEANING

The cleanliness and appearance of this unit will contribute considerably to operating efficiency and savory, appetizing food. Good equipment that is kept clean works better and lasts longer.



CLEAN THE UNIT THOROUGHLY AFTER EACH USE



1. Disconnect unit from power source, and let cool.
2. Remove, cover or wrap, and store unused products under refrigeration.
3. Remove all detachable items such as wire shelves, side racks, and any drip pan. Clean these items separately.
4. Clean interior with a damp cloth or sponge and any good commercial detergent at the recommended strength.
5. Spray heavily soiled areas with a water soluble degreaser and let stand for 10 minutes, then remove soil with a plastic scouring pad.





NOTE: Avoid the use of abrasive cleaning compounds, chloride based cleaners, or cleaners containing quaternary salts. *Never* use hydrochloric acid (muriatic acid) on stainless steel.

6. Clean control panel, door vents, door handles, and door gaskets thoroughly since these areas harbor food debris.
7. Rinse surfaces by wiping with sponge and clean warm water.
8. Remove excess water with sponge and wipe dry with a clean cloth or air dry. Leave door open until interior is completely dry. Replace shelves.
9. Interior can be wiped with a sanitizing solution after cleaning and rinsing. This solution must be approved for use on stainless steel food contact surfaces.
10. To help maintain the protective film coating on polished stainless steel, clean the exterior of the cabinet with a cleaner recommended for stainless steel surfaces. Spray the cleaning agent on a clean cloth and wipe with the grain of the stainless steel.
11. Clean glass with a window cleaner.

Always follow appropriate state or local health (hygiene) regulations regarding all applicable cleaning and sanitation requirements for foodservice equipment.

| | |
|---|--|
|  DANGER | |
|  | DISCONNECT UNIT FROM POWER SOURCE BEFORE CLEANING OR SERVICING. |

| | |
|--|--|
| DANGER | |
|  | AT NO TIME SHOULD THE INTERIOR OR EXTERIOR BE STEAM CLEANED, HOSED DOWN, OR FLOODED WITH WATER OR LIQUID SOLUTION OF ANY KIND. DO NOT USE WATER JET TO CLEAN. |
|  | SEVERE DAMAGE OR ELECTRICAL HAZARD COULD RESULT. WARRANTY BECOMES VOID IF APPLIANCE IS FLOODED |

SANITATION

Food flavor and aroma are usually so closely related that it is difficult, if not impossible, to separate them. There is also an important, inseparable relationship between cleanliness and food flavor. Cleanliness, top operating efficiency, and appearance of equipment contribute considerably to savory, appetizing foods. Good equipment that is kept clean, works better and lasts longer.

Most food imparts its own particular aroma and many foods also absorb existing odors. Unfortunately, during this absorption there is not distinction between GOOD and BAD odors. The majority of objectionable flavors and odors troubling food service operations are caused by bacteria growth. Sourness, rancidity, mustiness, stale or other OFF flavors are usually the result of germ activity.

The easiest way to insure full, natural food flavor is through comprehensive cleanliness. This means good control of both visible soil (dirt) and invisible soil (germs). A thorough approach to sanitation will provide essential cleanliness. It will assure an attractive appearance of equipment, along with maximum efficiency and utility. More importantly, a good sanitation program provides one of the key elements in the prevention of food-borne illnesses.

A controlled holding environment for prepared foods is just one of the important factors involved in the prevention of food-borne illnesses. Temperature monitoring and control during receiving, storage, preparation, and the service of foods are of equal importance.

The most accurate method of measuring safe temperatures of both hot and cold foods is by internal product temperature. A quality thermometer is an effective tool for this purpose, and should be routinely used on all products that require holding at a specific temperature.

A comprehensive sanitation program should focus on the training of staff in basic sanitation procedures. This includes personal hygiene, proper handling of raw foods, cooking to a safe internal product temperature, and the routine monitoring of internal temperatures from receiving through service.

Most food-borne illnesses can be prevented through proper temperature control and a comprehensive program of sanitation. Both these factors are important to build quality service as the foundation of customer satisfaction. Safe food handling practices to prevent food-borne illness is of critical importance to the health and safety of your customers.

HACCP, an acronym for Hazard Analysis (at) Critical Control Points, is a quality control program of operating procedures to assure food integrity, quality, and safety. Taking steps necessary to augment food safety practices is both cost effective and relatively simple. While HACCP guidelines go far beyond the scope of this manual, additional information is available by contacting:

**CENTER FOR FOOD SAFETY AND APPLIED
NUTRITION FOOD AND DRUG ADMINISTRATION
1-888-SAFEFOOD**

| INTERNAL FOOD PRODUCT TEMPERATURES | | |
|------------------------------------|---------------|------------------|
| HOT FOODS | | |
| DANGER ZONE | 40° TO 140°F | (4° TO 60°C) |
| CRITICAL ZONE | 70° TO 120°F | (21° TO 49°C) |
| SAFE ZONE | 140° TO 165°F | (60° TO 74°C) |
| COLD FOODS | | |
| DANGER ZONE | ABOVE 40°F | (ABOVE 4°C) |
| SAFE ZONE | 36° TO 40°F | (2° TO 4°C) |
| FROZEN FOODS | | |
| DANGER ZONE | ABOVE 32°F | (ABOVE 0°C) |
| CRITICAL ZONE | 0° TO 32°F | (-18° TO 0°C) |
| SAFE ZONE | 0°F or below | (-18°C or below) |

THERMOSTAT & INDICATOR LIGHT SEQUENCE

Whenever the thermostat is turned "ON," the indicator light will indicate the power ON/OFF condition of the heating cable, and consequently, the cycling of the cabinet as it maintains the dialed cavity temperature. If this light does not illuminate after normal start-up, the main power source, thermostat, and/or indicator light must be checked.

If the warming cabinet does not hold the temperature as dialed, the calibration of the thermostat must be checked. If the warming cabinet fails to heat or heats continuously with the thermostat "OFF," the thermostat must be initially checked for proper operation. If these items are checked and found to be in order, a continuity and resistance check of the heating cable should be made. SEE CIRCUIT DIAGRAM.



THERMOSTAT CALIBRATION

The thermostat is precision calibrated at the factory. Normally, no adjustment or recalibration is necessary unless the thermostat has been mishandled in transit, changed or abused while in service. A thermostat with a sensing bulb operates on hydraulic pressure, consequently, any bending of the bulb results in a change in its volume, and alters the accuracy of the thermostat calibration.

A thermostat should be checked or recalibrated by placing a quality, thermal indicator at the center of an empty holding cavity. **DO NOT CALIBRATE WITH ANY FOOD PRODUCT IN THE CABINET.** The thermostat should be set, and should be allowed to stabilize at that setting for a minimum of one hour. The center of the thermal swing of the air temperature within the cabinet should approximately coincide with the thermostat setting.

If calibration is necessary, the calibration screw should be adjusted with great care. The calibration screw of the thermostat is located in the thermostat dial shaft. With the shaft held stationary, a minute, clockwise motion of the calibration screw appreciably lowers the thermostat setting. A reverse, or counter-clockwise motion appreciably raises the thermostat setting. After achieving the desired cycling of the thermostat, the calibration screw must be sealed. Place a few drops of enamel sealant directly on the calibration screw.

(Red nail polish or equivalent is acceptable.)

TROUBLE SHOOTING INTERNAL ELECTRICAL COMPONENTS

A. No power. Display will not light.

1. Verify that power is available at the outlet or junction box.
2. Verify that the circuit breaker switch on the back of the unit is turned on.
3. Verify that the power cord is not open. Check continuity with a VOM meter.
4. If none of the above steps help, call a qualified service technician or refer to the Service Manual for this particular oven.

This section is provided for the assistance of qualified technicians only and is not intended for use by untrained or unauthorized service personnel. If your Alto-Shaam® unit is not operating properly, check the following before calling your Authorized Alto-Shaam® Service Agent:

- Check the power flow to the unit. Plug in outlet? Circuit breaker switch at back of unit turned on? **Do not attempt to repair or service the unit beyond this point. Contact Alto-Shaam® for the nearest authorized service agent. Repairs made by any other service agents without prior authorization by Alto-Shaam® will void the warranty on the unit.**

SERVICE • ELECTRONIC CONTROL

TROUBLE SHOOTING

| Error Code | Description | Possible Cause |
|------------|---|---|
| E-10 | Cavity air sensor shorted | Cavity air sensor reading < 5°F. Verify sensor integrity. See sensor test instructions below. |
| E-11 | Cavity air sensor open | Cavity air sensor reading > 517°F. Verify sensor integrity. See sensor test instructions below. |
| E-20 | Product probe is shorted <i>Oven will cook in time only</i> | Product probe reading < 5°F. Verify sensor integrity. See sensor test instructions below. |
| E-21 | Product probe is open <i>Oven will cook in time only</i> | Product Probe reading > 517°F. Verify sensor integrity. See sensor test instructions below. |
| E-30 | Under temperature | Unit has not reached set-point for more than 90 minutes. Note: 30 minutes for Rotisseries and Convection Ovens |
| E-31 | Over temperature | Unit has been higher than 25°F above the maximum cavity set-point for more than 2 minutes. Note: Holding Cabinets with this error code are more than 145°F higher than the maximum set-point. |
| E-50 | Temp. measurement error | Contact factory. |
| E-51 | Temp. measurement error | Contact factory. |
| E-60 | Real time clock error | Data set to factory default. Ensure that date and time are correct if applicable. |
| E-61 | Real time clock error | Contact factory. |
| E-70 | Configuration connector error (DIP switch) | Refer to wiring diagram for the particular model and ensure dip switches on the control match the settings called out on the WD. If the dip switch settings are correct according to the print replace the control. |
| E-78 | Voltage low | Voltage below 90 VAC on a 125 VAC unit, or below 190 VAC on a 208-240 VAC unit. Correct voltage. |
| E-79 | Voltage high | Voltage over 135 VAC on a 125 VAC unit, or over 250 VAC on a 208-240 VAC unit. Correct voltage. |
| E-80 | EEPROM Error | Ensure that all temperatures and times are properly set. Contact factory if problem persists. |
| E-81 | EEPROM Error | Contact factory. |
| E-82 | EEPROM Error | Contact factory. |
| E-83 | EEPROM Error | Contact factory. |
| E-85 | EEPROM Error | All timers, if previously on, are now off. Possible bad EEPROM. |
| E-86 | EEPROM Error | Stored HACCP memory corrupted. HACCP Address reset to 1. Possible bad EEPROM. Contact factory if problem persists. |
| E-87 | EEPROM Error | Stored offsets corrupted. Offsets reset to 0. Control may need a recalibration. Possible bad EEPROM. Contact factory if problem persists. |
| E-88 | EEPROM Error | All timer set-points are reset to 1 minute. Timers, if previously on, are now off. Possible bad EEPROM. |
| E-90 | Button stuck | A button has been held down for >60 seconds. Adjust control. Error will reset when the problem has been resolved. |
| E-dS | Datakey error | Datakey digital signature incompatible. Cycle power, and install compatible Datakey if error persists. |
| E-dT | Datakey error | Datakey incompatible with control. Install compatible Datakey. |
| E-dU | Datakey unplugged | Install Datakey and cycle power to control to clear error. |


Note: If in doubt, always cycle the power to the control and contact factory if the problem persists.

To test probe and air sensor:

Test probe and air sensor by placing sensor in ice water bath and using an ohmmeter set on the ohm scale. The reading should be 100 ohms resistance. If it is more than 2 ohms higher or lower, sensor needs to be replaced.

SERVICE

MANUAL CONTROL

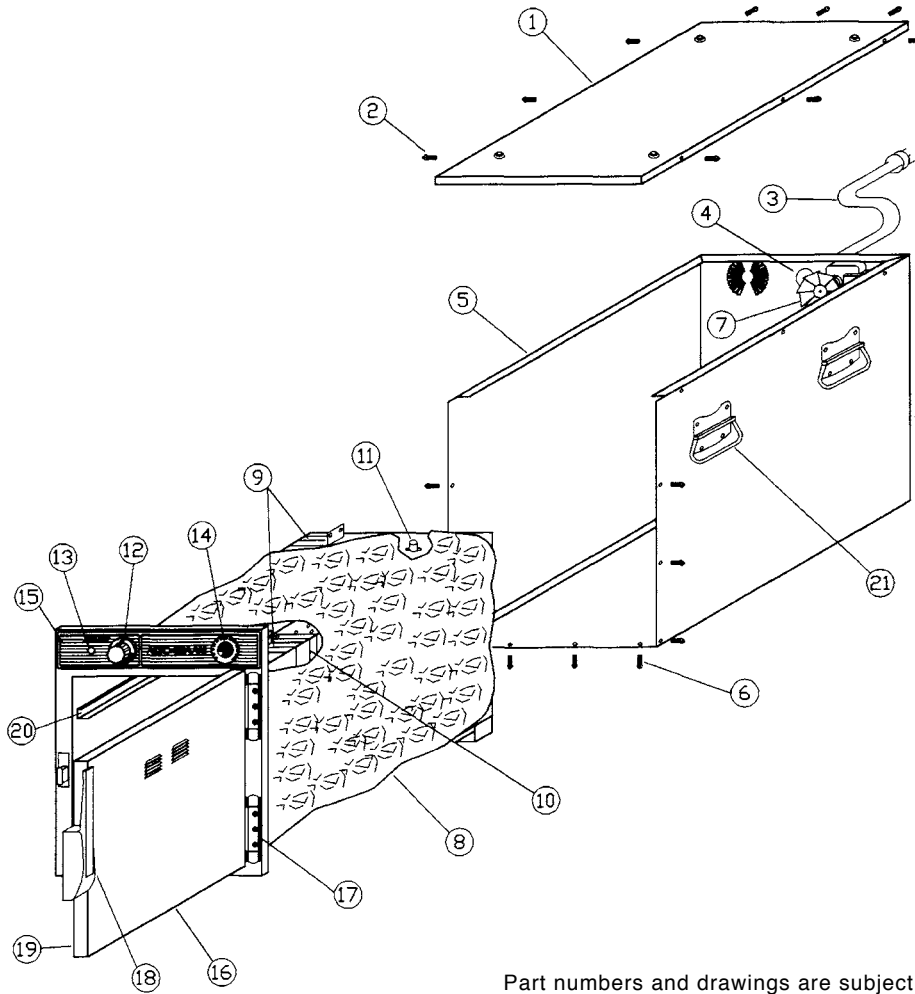

Part numbers and drawings are subject to change without notice.

| ITEM | DESCRIPTION | PART NO. | QTY | ITEM | DESCRIPTION | PART NO. | QTY |
|------|---------------------------------|-----------|-----|------|-------------------------------------|----------|-----|
| 1 | TOP | 4986 | 1 | 11 | HI-LIMIT THERMOSTAT (230V) | TT-3859 | 1 |
| 2 | TOP MOUNTING SCREWS | SC-2425 | 9 | 12 | THERMOSTAT | TT-3057 | 1 |
| 3 | CORDSET: 230V | CD-3029 | 1 | | THERMOSTAT KNOB (Fahrenheit) | KN-3469 | 1 |
| | CORDSET: 208-240V | CD-3984 | 1 | | THERMOSTAT KNOB (Celsius) | KN-3474 | 1 |
| | CORDSET: 208-240V | CD-3858 | 1 | 13 | HEAT INDICATOR LIGHT (125V) | LI-3027 | 1 |
| 4 | INLET (125V) | IT-3001 | 1 | | HEAT INDICATOR (230V and 208-240V) | LI-3951 | 1 |
| | INLET (208-240V) | IT-3857 | 1 | 14 | INTERIOR AMBIENT TEMP. GAUGE | GU-3273 | 1 |
| | INLET (230V) | IT-33173 | 1 | 15 | CONTROL PANEL OVERLAY | PE-2882 | 1 |
| 5 | CASING, BOTTOM | 1360/1355 | 1 | 16 | DOOR ASSEMBLY, RIGHT-HAND | 15016 | 1 |
| 6 | CASING, BOTTOM, MOUNTING RIVETS | RI-2100 | 10 | | DOOR ASSEMBLY, LEFT-HAND | 5125 | 1 |
| 7 | FAN, 125V | FA-3485 | 1 | 17 | HINGE SET (1 pair of 2 hinges) | HG-2015 | 1 |
| | FAN, 208-240V, 230V | FA-3342 | 1 | | HINGE MOUNTING SCREWS | SC-2072 | 12 |
| | FAN BLADE | FA-33073 | 1 | 18 | DOOR HANDLE | HD-2007 | 1 |
| 8 | INSULATION: | | | | DOOR HANDLE MOUNTING SCREWS | SC-2073 | 3 |
| | 25" x 54" (635mm x 1372mm) | IN-22364 | 1 | | DOOR STRIKER MOUNTING SCREWS | SC-2071 | 3 |
| | 25" x 54" (635mm x 1372mm) 125V | IN-2381 | 1 | 19 | DOOR GASKET (length): 5.1' (1555mm) | GS-2398 | 1 |
| 9* | CABLE CONNECTION HARDWARE | | | 20 | PAN SLIDES | 1220 | 6 |
| 10 | CABLE KIT, 230V | 4873 | 1 | | PAN SLIDE MOUNTING SCREWS | SC-2268 | 12 |
| | CABLE KIT, 208-240V | 4878 | 1 | 21 | CARRYING HANDLE | HD-2021 | 4 |
| | CABLE KIT, 230V | 4979 | 1 | | MOUNTING SCREWS | SC-2070 | 16 |

SERVICE

ELECTRONIC CONTROL

Exterior View



| ITEM | DESCRIPTION | PART NO. | QTY | ITEM | DESCRIPTION | PART NO. | QTY |
|------|--------------------------|--------------------------|-----|------|--------------------------|--------------------------|-----|
| 1 | CONTROL PANEL | PE-25464 | 1 | 8 | CASING | 1001383 | 1 |
| 2 | HINGE | HG-2015 | 2 | 9 | DOOR HANDLE STRIKER ONLY | HD-2575 | 1 |
| 3 | DOOR GASKET | E2132GS | 1 | 10 | CARRY HANDLES | HD-2010 | 4 |
| 4 | DOOR HANDLE WITH STRIKER | HD-2007 | 1 | 11 | CARRY HANDLE BACKER | 11017 | 4 |
| 5 | DOOR WITH WINDOW | E5078 | 1 | 12 | SENSOR | SN-33541 | 1 |
| 6 | SIDE RAILS | SR-25477 | 2 | 13 | SENSOR BLOCK | BK-24427 | 1 |
| 7 | FEET | BM-22606 | 4 | 14 | TOP | 1001349 | 1 |

Part numbers and drawings are subject to change without notice.

HEAT CABLE REPLACEMENT SERVICE KITS

| PART | DESCRIPTION | #4873 125V | #4878 208-240V | #4879 230V |
|-------------------------|-----------------------|---------------|-------------------|---------------|
| CB-3045 | CABLE HEATING ELEMENT | — | 85 feet | 112 feet |
| CB-3044 | CABLE HEATING ELEMENT | 52 feet | — | — |
| CR-3226 | RING CONNECTOR | 4 | 4 | 6 |
| IN-3488 | INSULATION CORNER | 1 foot | 1 foot | 1 foot |
| BU-3105 | SHOULDER BUSHING | 4 | 4 | 6 |
| BU-3106 | CUP BUSHING | 4 | 4 | 6 |
| ST-2439 | STUD | 4 | 4 | 6 |
| NU-2215 | HEX NUT | 8 | 8 | 12 |
| SL-3063 | INSULATING SLEEVE | 4 | 4 | 6 |
| TA-3540 | ELECTRICAL TAPE | 1 roll | 1 roll | 1 roll |

Part numbers and drawings are subject to change without notice.

SERVICE


ELECTRONIC CONTROL

Electrical Components



| ITEM | DESCRIPTION | PART NO. | QTY |
|------|-------------------------|----------|-----|
| 1 | BUSHING | BU-3013 | 1 |
| 2 | BEEPER | BP-3567 | 1 |
| 3 | BUSHING | BU-3007 | 2 |
| 4 | RELAY | RL-34434 | 1 |
| 5 | CLAMP | CM-3585 | 1 |
| 6 | BOARD, POWER | BA-33554 | 1 |
| 7 | SENSOR BLOCK | SN-33546 | 1 |
| 8 | TERMINAL BLOCK | BK-3019 | 1 |
| 9 | GROUND SCREW | SC-2190 | 1 |
| 10 | SWITCH, CIRCUIT BREAKER | SW-33826 | 1 |
| 11 | CONTROL ASSEMBLY | CC-34222 | 1 |
| 12 | BUSHING | BU-3964 | 1 |
| 13 | CORDSET, 125V | CD-3232 | 1 |
| | CORDSET, 230V | CD-3922 | 1 |
| | CORDSET, 208-240V | CD-3551 | 1 |

Part numbers and drawings are subject to change without notice.

Cabinet Front

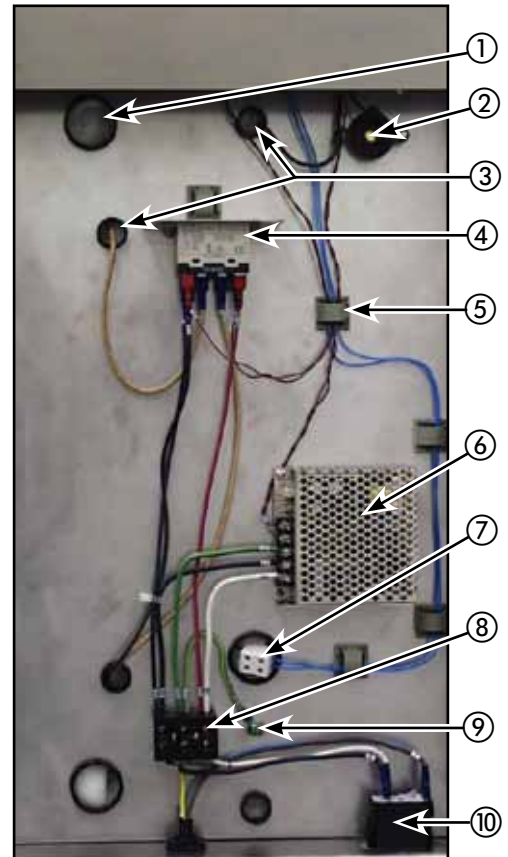

Back of Cabinet

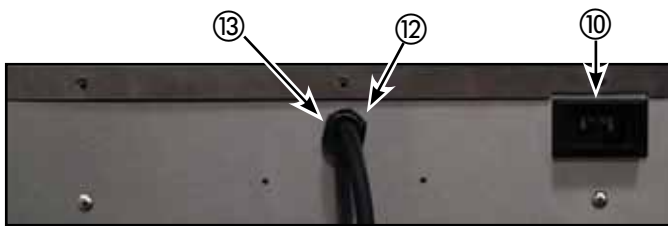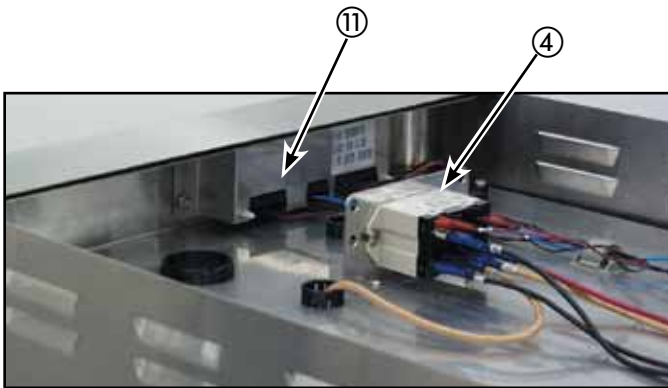

Top Rear View




DANGER



**DISCONNECT UNIT FROM
POWER SOURCE BEFORE
CLEANING OR SERVICING.**

CAUTION

THIS SECTION IS PROVIDED FOR THE ASSISTANCE OF QUALIFIED SERVICE TECHNICIANS ONLY AND IS NOT INTENDED FOR USE BY UNTRAINED OR UNAUTHORIZED SERVICE PERSONNEL.

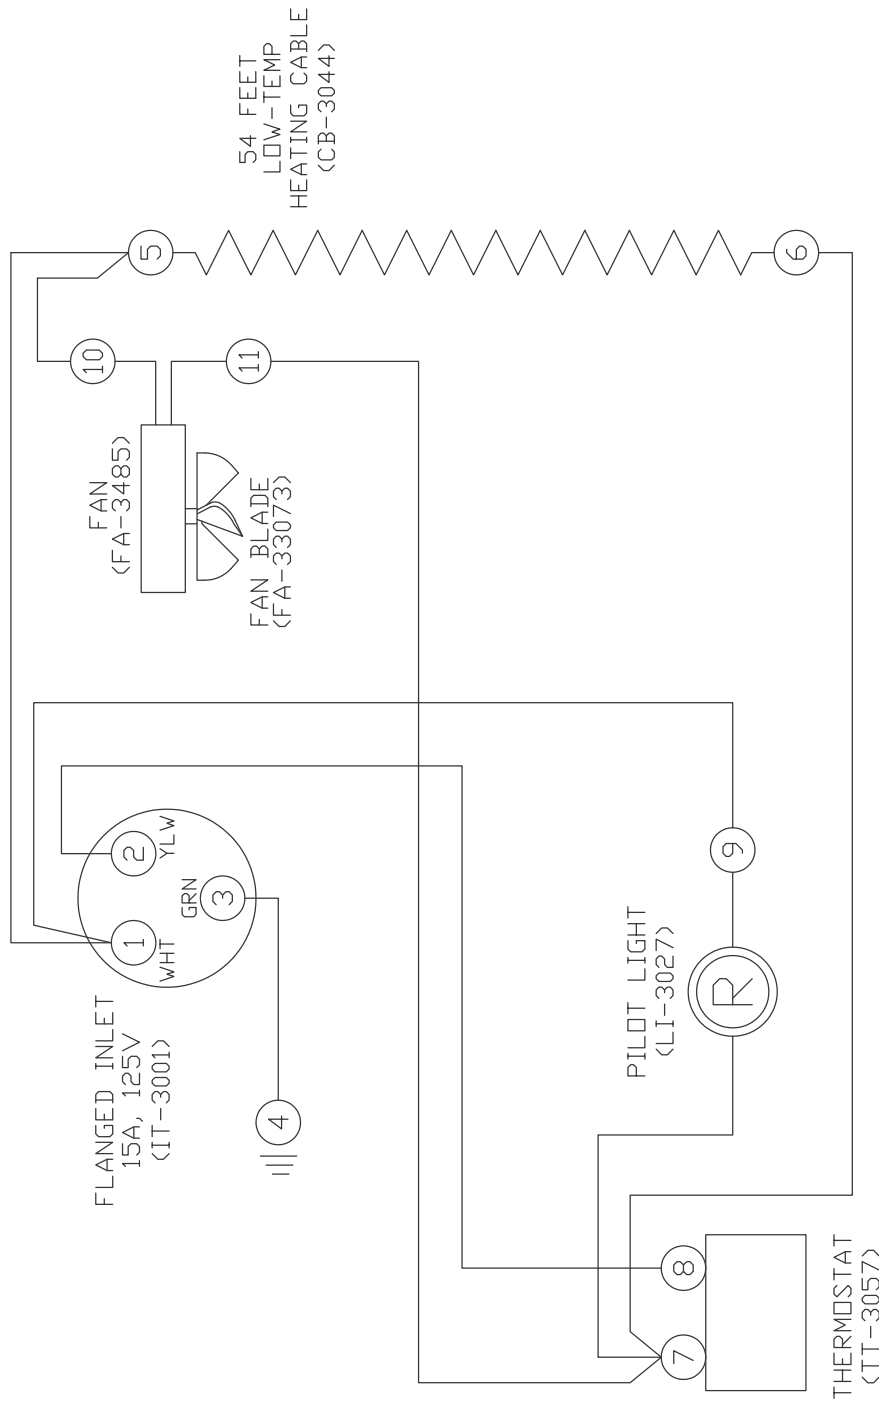


| | | | | |
|-----------------------|------|-----------------------|---------------|--------|
| 2 | 5605 | RELEASE TO PRODUCTION | 2/19/2010 | MLP |
| 1.01 | - | WIRE KAIZEN CHANGES | 1/29/10 | JPK |
| 1 | - | - | 3/9/94 | RS |
| REV | ECO | DESCRIPTION | DATE | APP |
| | | 500-E | 125V | 60HZ |
| ALTO-SHAAM | | | | |
| BY: ALD | | | DATE: 3/17/77 | |
| DWG: A-7055 | | | SHEET | 1_OF_1 |
| WIRING DIAGRAM | | | | |

| DESIGN | VOLTS | WATTS | AMPS |
|--------|-------|-------|------|
| AS | 125V | 540W | 4.3A |
| AS | 125V | 500W | 4A |

NOTE #1: ALL NUMBERS IN () = ALTO-SHAAM PART NUMBERS

NOTE #2: SEE DRW. #B-8084 FOR WIRE ASSEMBLY

NOTE: AG = AGENCY

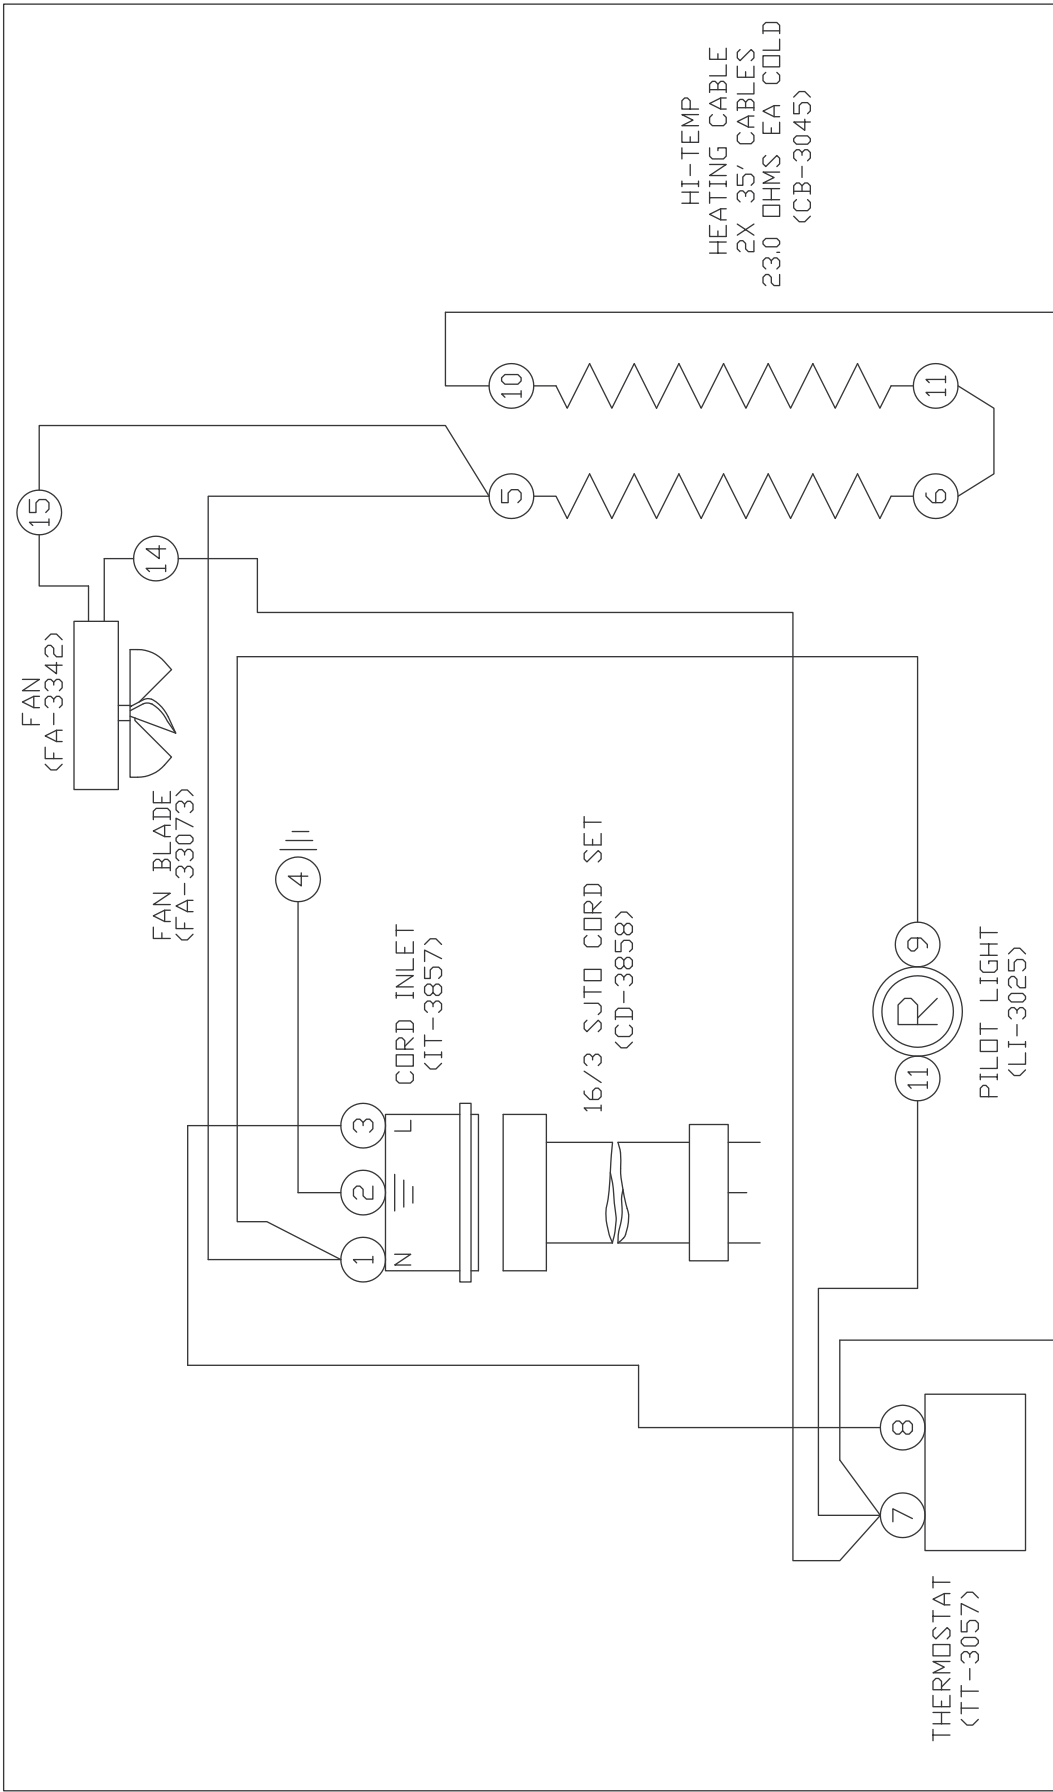

HI-TEMP
HEATING CABLE
2X 35' CABLES
23:0 OHMS EA COLD
(CB-3045)


| | | | | |
|-------------------------------|------|-----------------------|---------------|--------------|
| 3 | 5605 | RELEASE TO PRODUCTION | 2/19/2010 | MLP |
| 2.01 | - | WIRE KAIZEN CHANGES | 1/29/10 | JPK |
| 2 | - | - | 10/29/03 | DDF |
| REV | ECO | DESCRIPTION | DATE | APP |
| 500-E (NA-UNIT) 208-240V 60HZ | | | | |
| ALTO-SHAAM | | | | |
| WIRING DIAGRAM | | | | |
| BY: RS | | | DATE: 5/22/95 | DWG: A-7413 |
| | | | | SHEET 1_OF_1 |

| DESIGN | VOLTS | WATTS | AMPS |
|--------|----------|-------|------|
| 1 | 208V | 912W | 4.4A |
| 2 | 240V | 1214W | 5A |
| 3 | 208-240V | 1200W | 5A |

NOTE: AG = AGENCY

NOTE #1: ALL NUMBERS IN () = ALTO-SHAAM PART NUMBERS

NOTE #2: SEE DRW. #B-8737 FOR WIRE ASSEMBLIES

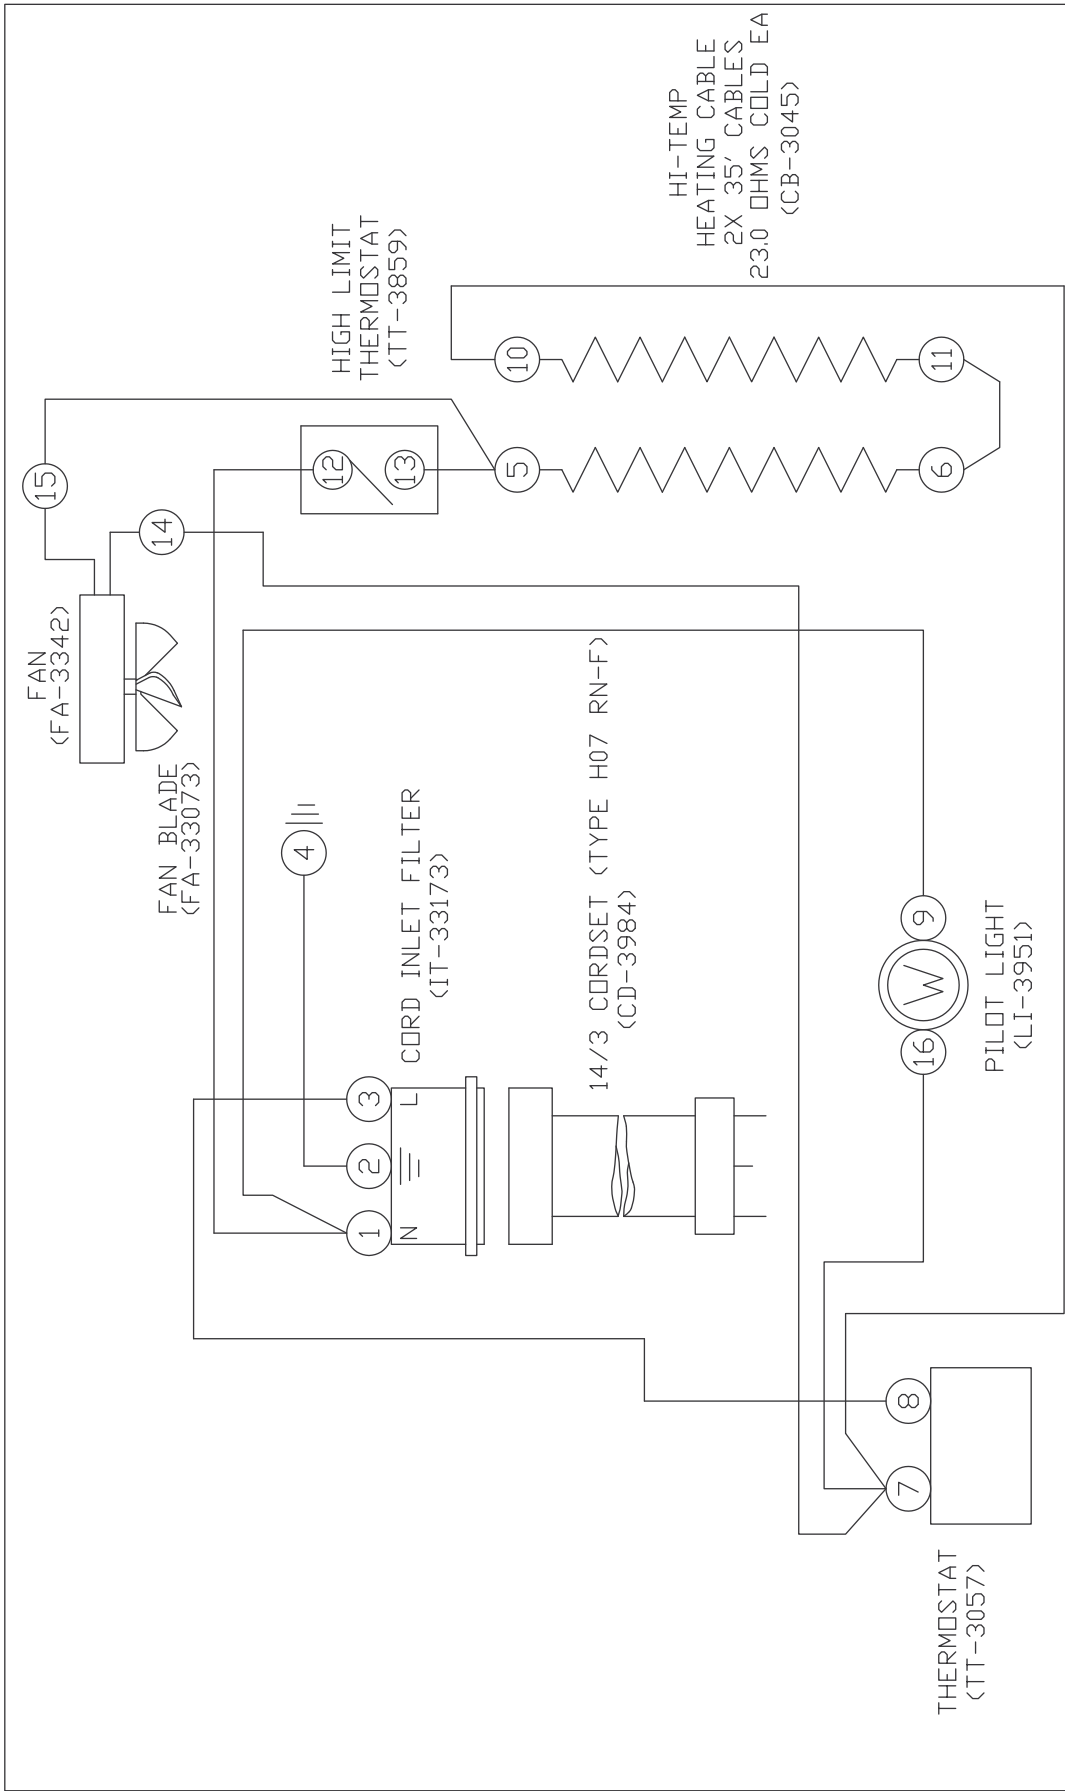

NOTE #1: ALL NUMBERS IN () = ALTO-SHAAM PART NUMBERS
 NOTE #2: SEE DRW. #B-8214 FOR WIRE ASSEMBLIES

| DESIGN | VOLTS | WATTS | AMPS |
|--------|-------|-------|------|
| 2 | 230V | 1115W | 4.8A |
| 2 | 230V | 1100W | 4.8A |


NOTE: AG = AGENCY

| REV | ECO | DESCRIPTION | DATE | APP |
|------|------|-----------------------|----------|-----|
| 10 | 5605 | RELEASE TO PRODUCTION | 2/19/10 | MLP |
| 9.01 | - | WIRE KAIZEN CHANGES | 2/1/10 | JPK |
| 9 | - | - | 10/29/03 | DDF |

500-E (NA-UNIT) 230V 50/60HZ

| WIRING DIAGRAM | |
|----------------|--------------|
| DWG: A-7140 | SHEET 1_DF_1 |

BY: ALD DATE: 1/9/79

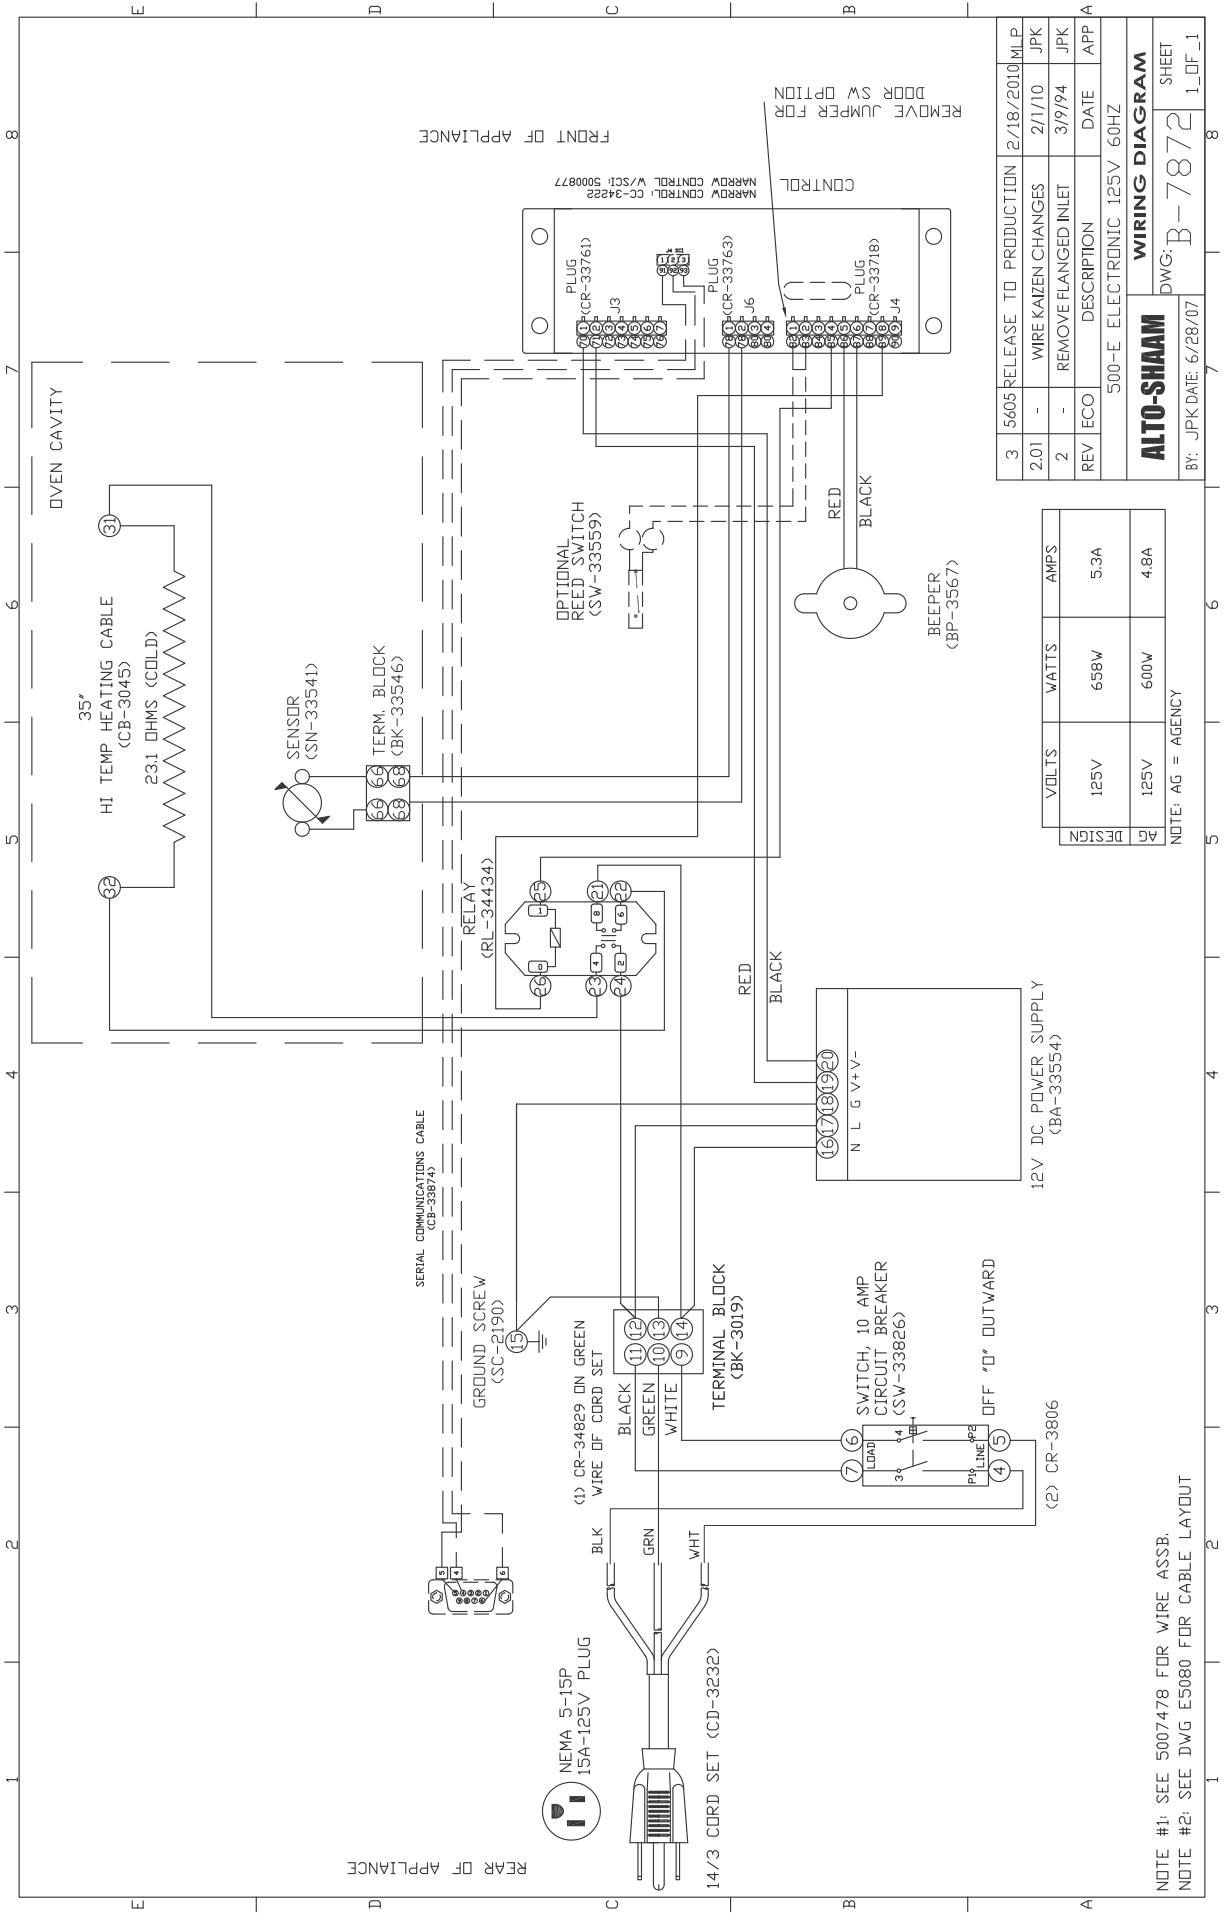

| REV | ECO | DESCRIPTION | DATE | APP |
|------|------|-----------------------|-----------|-----|
| 3 | 5605 | RELEASE TO PRODUCTION | 2/18/2010 | MLP |
| 2.01 | - | WIRE KAIZEN CHANGES | 2/11/10 | JPK |
| 2 | - | REMOVE FLANGED INLET | 3/9/94 | JPK |

| REV | ECO | DESCRIPTION | DATE | APP |
|------|------|-----------------------|-----------|-----|
| 3 | 5605 | RELEASE TO PRODUCTION | 2/18/2010 | MLP |
| 2.01 | - | WIRE KAIZEN CHANGES | 2/11/10 | JPK |
| 2 | - | REMOVE FLANGED INLET | 3/9/94 | JPK |

| DESIGN | VOLTS | WATTS | AMPS |
|--------|-------|-------|------|
| A6 | 125V | 658W | 5.3A |
| A6 | 125V | 600W | 4.8A |

ALTO-SHAAM

BY: JPK DATE: 6/28/07

500-E ELECTRONIC 125V 60HZ
 WIRING DIAGRAM
 DWG: B-7872
 SHEET
 I_DF_1

NOTE #1: SEE 5007478 FOR WIRE ASSB.
 NOTE #2: SEE DWG E5080 FOR CABLE LAYOUT

TRANSPORTATION DAMAGE and CLAIMS



All Alto-Shaam equipment is sold F.O.B. shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

1. Make an immediate inspection while the equipment is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the material is moved to a storage area.
2. Do not sign a delivery receipt or a freight bill until you have made a proper count and inspection of all merchandise received.
3. Note all damage to packages directly on the carrier's delivery receipt.
4. Make certain the driver signs this receipt. If he refuses to sign, make a notation of this refusal on the receipt.
5. If the driver refuses to allow inspection, write the following on the delivery receipt:
Driver refuses to allow inspection of containers for visible damage.
6. Telephone the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation of the time, date, and the person called.
7. Save any packages and packing material for further inspection by the carrier.
8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

We will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. We cannot, however, file any damage claims for you, assume the responsibility of any claims, or accept deductions in payment for such claims.

LIMITED WARRANTY

Alto-Shaam, Inc. warrants to the original purchaser only that any original part that is found to be defective in material or workmanship will, at Alto-Shaam's option, subject to provisions hereinafter stated, be replaced with a new or rebuilt part.

The parts warranty period is as follows:

For the refrigeration compressor on Alto-Shaam Quickchillers™, five (5) years from the date of installation.

For the heating element on Halo Heat® cook/hold ovens, as long as the original purchaser owns the oven.

For all other parts, one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any additional fees.

To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

THIS WARRANTY DOES NOT APPLY TO:

1. Calibration.
2. Replacement of light bulbs, door gaskets, and/or the replacement of glass due to damage of any kind.
3. Equipment damage caused by accident, shipping, improper installation or alteration.
4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
5. Damage incurred as a direct result of poor water quality, inadequate maintenance of steam generators and/or surfaces affected by water quality. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator.
6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm® Cleaner, including but not limited to damage due to chlorine or other harmful chemicals. **Use of Alto-Shaam's Combitherm® Cleaner on Combitherm® ovens is highly recommended.**
7. Any losses or damage resulting from malfunction, including loss of product or consequential or incidental damages of any kind.
8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. In no event shall Alto-Shaam be liable for loss of use, loss of revenue or profit, or loss of product, or for any indirect, special, incidental, or consequential damages. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.

Effective 09/10



RECORD THE MODEL AND SERIAL NUMBER OF THE APPLIANCE FOR EASY REFERENCE.

ALWAYS REFER TO BOTH MODEL AND SERIAL NUMBER IN ANY CONTACT WITH ALTO-SHAAM REGARDING THIS APPLIANCE.

Model: _____ Date Installed: _____

Voltage: _____ Purchased From: _____

Serial Number: _____

W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 • U.S.A.

PHONE: 262.251.3800 • 800.558-8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY

www.alto-shaam.com

PRINTED IN U.S.A.