



Instruction Manual

Tornado and Deluxe Whirlwind

Model No. 3005ED, 3005XED, 3008ED





GOLD MEDAL® PRODUCTS CO.


10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA





SAFETY PRECAUTIONS


	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning.</p> <p>008_012221</p>

	⚠ DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>


	⚠ WARNING
	<p>Floss head rotates at high speeds. Operator MUST keep hands and face clear of the floss head to avoid injury. Operator must wear eye protection. Keep all spectators at a reasonable distance, and use a Floss Bubble for added customer protection.</p> <p>015_062714</p>

	⚠ WARNING
	<p>Keep all foreign objects out of floss head. To avoid eye injury, DO NOT fill floss head with sugar while the head is on and rotating.</p> <p>016_010914</p>


	⚠ WARNING
	<p>Burn Hazard. DO NOT touch spinner head. Allow to cool before cleaning or servicing. Avoid contact with molten sugar.</p> <p>006_092414</p>


	⚠ WARNING
	<p>ALWAYS wear safety glasses when servicing this equipment.</p> <p>010_010914</p>



	⚠ WARNING
	No user serviceable parts inside. Refer servicing to qualified service personnel. 011_051514

	⚠ WARNING
	Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862 022_060215

	⚠ WARNING
	DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012_010914

	⚠ WARNING
	This machine is NOT to be operated by minors. 007_010914

DO NOT install equipment in an area where a water jet is used.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Unit to be in a supervised location.

Install unit on a level surface. Locate machine in a protected environment.

Note: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.) General images may be used in manual for reference only.

INSTALLATION INSTRUCTIONS



Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control.

Setup

Your new floss machine unit is completely assembled and tested at the factory. Remove all packing material and tape before starting operation.

1. You **MUST** remove the 4 shipping brackets placed around the motor mount casting before operation. To do so, remove the bolts that hold the brackets in; this can be done with any wrench or socket. Failing to do so may result in damage to your floss machine or in personal injury.
2. Make sure the floss ribbon (heating element) located inside the head assembly has not shaken out of the band during transportation. If the ribbon is out of the band, push it back into place manually.

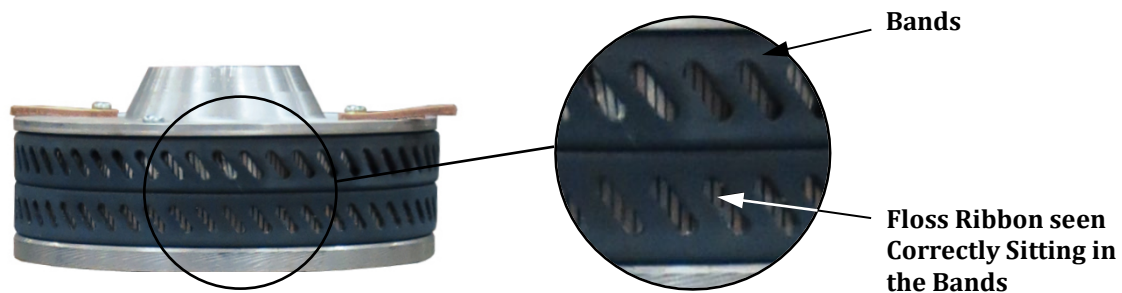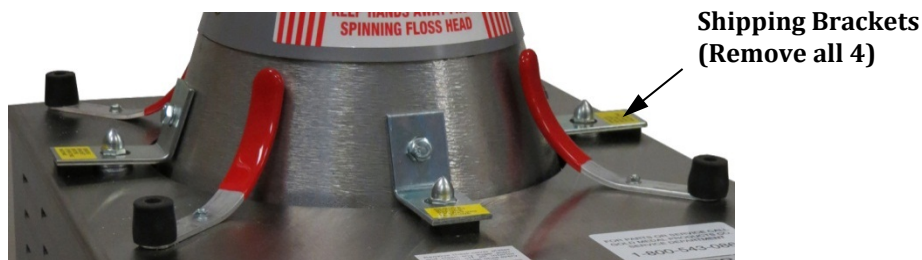




Electrical Requirements

The following power supply must be provided (reference unit Data Plate for Wattage requirement):

3005ED, 3008ED: 120 V~, 60 Hz


3005XED: 220-230 V~, 50/60 Hz

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning. 008_012221

A certified electrician must furnish sufficient power for proper machine operation and install any supplied receptacle (reference unit Data Plate for model specific Volts AC, Hertz, and Wattage requirements). We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are OFF before plugging equipment into receptacle.
2. Make sure wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter (where applicable).
5. Install unit in a level position.


	⚠ CAUTION
	If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard. 039_080614



INSTALLATION OF FLOSS STABILIZER

Place Floss Machine Pan on unit and install Whirl Grip Floss Stabilizer as shown below.

- 1) Place a Non-Metallic Whirl Clip over the rim of the Floss Pan. The out facing hooks go to the inside of the Floss Pan.
- 2) Hang the Non-Metallic screening material onto the up facing hook with the screening approximately flush with the top of the pan. Gently pull the screening down and attach to the down facing hook on the clip to secure screen in place.
- 3) Check the clip spacing and the air space required between the pan and the stabilizer for proper operation.
- 4) Continue this process with all clips, keeping equal spacing around the pan.

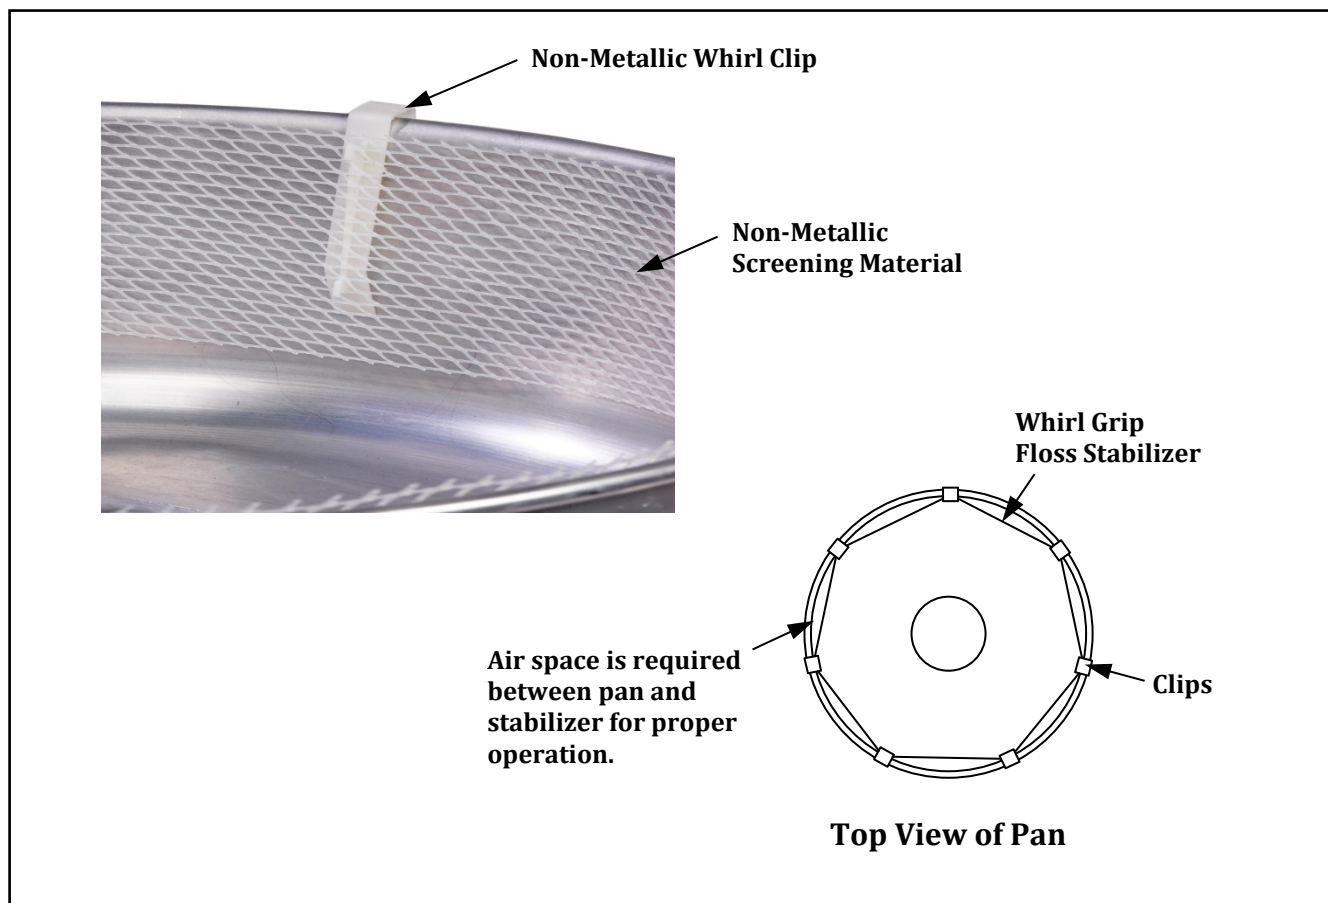

OPERATING INSTRUCTIONS

Controls and Their Functions

MAIN SWITCH (Motor Switch)

Turns motor “ON” or “OFF” and supplies voltage to the heat switch.


HEAT SWITCH

Turns voltage to the heating element (ribbon) “ON” or “OFF”.

HEAT CONTROL KNOB

Increases or decreases power to heating element (ribbon) using a graduated dial.

Note: The maximum is 99% for a 115 Volt (230 Volt) input to the machine. If the voltage is less than maximum, power setting will be less than 99%.

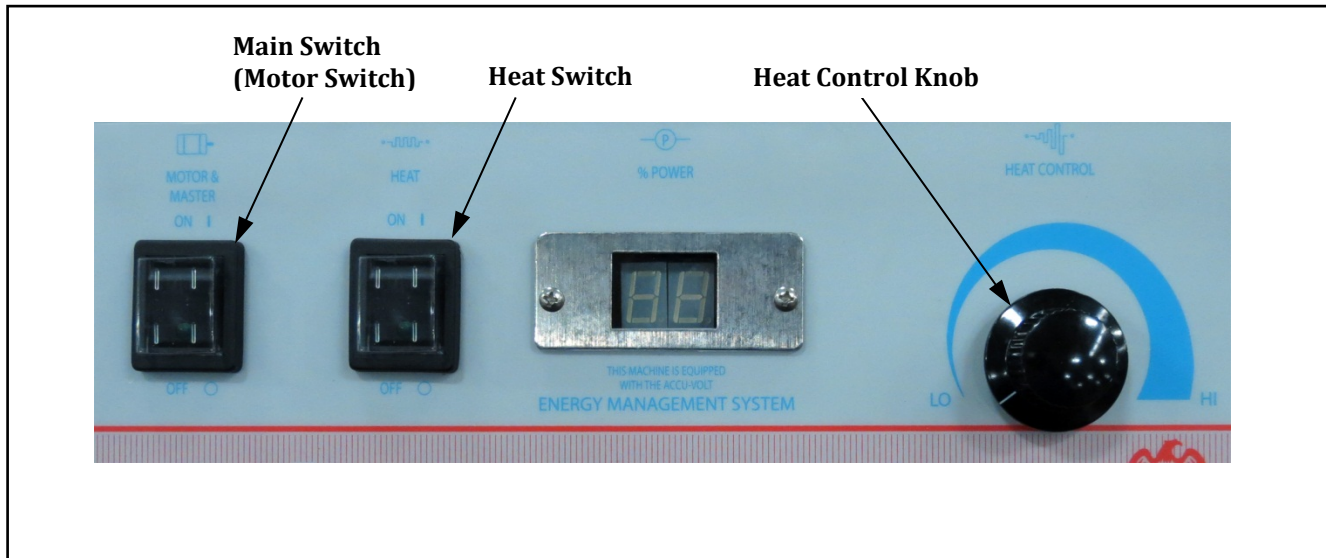



Sugar for Your Candy

Ready to Use Flossugar

Our ready to use Flossugar is the preferred sugar for your new cotton candy machine; however 100% pure cane or beet sugar will do just fine. Our Flossugar gives you good rich colors, and great flavors, too. It is packed in handy half-gallon sealed cartons, with an E-Z pour spout for filling your machine. Flossugar comes in many flavors, and you can easily change flavors for greatest variety, and best sales.

Mix Your Own

If you want to mix your own use our Flossine, please follow our directions. If you want a deeper color slightly dampen the mixed sugar. Use a tablespoon of water per five pounds of sugar, sprinkle water over sugar, and mix well. **DO NOT USE EXCESS COLOR!** Too much color will ruin the ribbons on your machine and could create a bitter taste to the candy. There is a limit as to how dark you can make cotton candy. That's because cotton candy is 98% air, and we cannot color the air.

Sugar Considerations


Today 99% of the sugar manufactured is extra fine granulated, which does have some small particles which can slip thru the ribbons without being melted. If this becomes objectionable, you can seek out medium coarse or sanding sugars. The larger crystal size will require a little more heat to melt.

Today we see some free flowing sugars for restaurants. Free flowing sugars contain cornstarch which will burn onto your ribbons clogging them rapidly. We have also seen some off-brand sugars that are a blend of sugar and dextrose or corn syrup. This product makes very poor cotton candy. Please make sure you get good sugar for your cotton candy machine.



HEAT CONTROL SETTINGS TEST


Settings Test

	CAUTION
	Floss head operates at high speeds. Operator MUST keep hands and face clear of the floss head to avoid possible injury. Keep all spectators at a reasonable distance, and use a Floss Bubble for added customer protection.

1. Follow the guidelines described on page 4 for supplying power to machine.
2. With Main Switch still off, fill floss head. Always fill it 90% full with sugar. This 90% level is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!** Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.

Important: NEVER add sugar when motor is running.

3. Turn the Main Switch and Heat Switch "ON".
4. Turn the Heat Control Knob clockwise to maximum setting to initiate the fastest possible warm up.
5. The machine should start making floss in a few seconds. When the unit starts making floss, you must reduce the heat setting. Turn the Heat Control Knob counter clockwise to eliminate smoking. If you operate the unit at "startup" setting, you will carbonize the ribbon.

	CAUTION
	Never operate the equipment for a prolonged period of time with the HEAT CONTROL in a position that causes the sugar to smoke. This will result in excessive carbonization of the ribbon (heat element). If you smell burning sugar or see smoke, reduce the heat.

6. Once you find the ideal setting for the HEAT CONTROL, operate with the setting near this position each time. The machine will automatically adjust to keep the power to the head constant during incoming voltage changes from the power source.




MAKING FLOSS

Pick a cone, if it sticks in the stack of cones, twist it off the stack.

	⚠ CAUTION
	Keep hands away from spinning head!

Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly. See steps 1 thru 8 shown below.

If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. This leaves giant pockets and makes the final product appear larger. Make sure room humidity is not too high, or product will be "heavy".

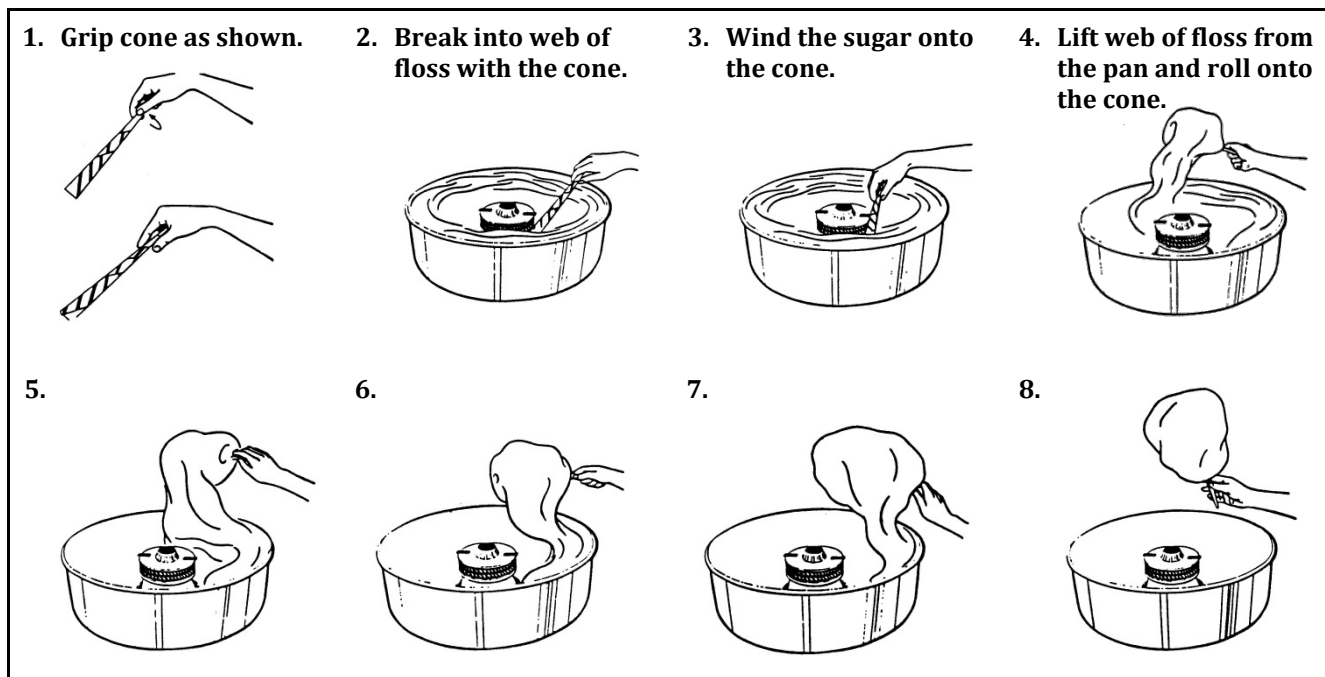


- **DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD.**
- **DO NOT FILL SPINNER HEAD WITH SUGAR WHILE IT IS ROTATING.**
- **WEAR EYE PROTECTION.**
- **DO NOT PUT HANDS NEAR ROTATING SPINNER HEAD.**
- **USE FLOSS CONE TO COLLECT COTTON CANDY.**

FLOATER ADJUSTMENTS

In operation, the floss will collect on the FLOSS STABILIZER. If the floss collects “low” on the stabilizer, twist the front (leading) edge of the leather floaters down. You get more lift and the floss will collect higher.

Form leather floaters as shown below. This creates a lifting action to float the floss higher on the outside wall of the floss pan.

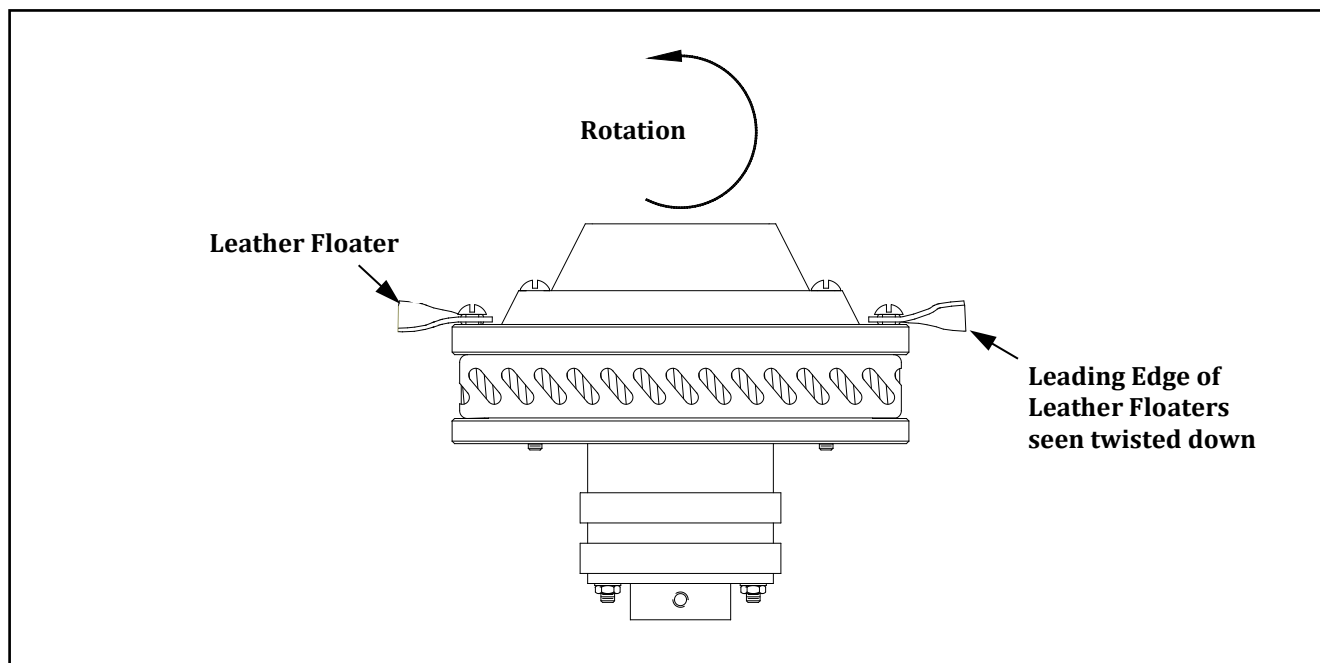

Shut Down Procedure

When completing operation for the day (or any prolonged period), run all the sugar out of the floss head. When empty, turn the heat to highest position for approximately one minute to “clean” the band by baking off remaining sugar. **NEVER** put water in the floss head.

Cleaning Instructions


Unplug the machine and wait for the floss head to cool down to room temperature. Wipe all surfaces with a clean, damp cloth.

Floss Bands and Ribbons

Gold Medal Floss Bands are designed to give long life and trouble-free service with little care. **DO NOT** scratch the band. Gold Medal Floss Ribbons (heat elements) are made of nickel wire with insulation at the terminal point and on the lead wires. They are designed to be as reliable as the bands; however, the ribbons must be handled carefully. **DO NOT** stretch the ribbon or it will not function properly. Reference steps and image below for disassembly and reassembly.

Disassembly and Removal of Floss Band

1. Unplug the machine from the power source and allow floss head to cool completely.
2. Remove all sugar from the head of the machine before disassembling. If needed, carefully turn the machine on its side and shake the sugar out.
3. Remove the four spinner cap retainer screws and spinner cap. In some cases, the sugar has caused the cap and band to stick together. Applying gentle pressure with the heel of the hand should free the parts for removal.
4. Remove the nylon acorn nut, lock nut, and terminal guard.
5. Remove the element lead wire retaining screws (using a 1/4" (9.5mm) nut driver), which fasten the element lead wires to the terminals. This will allow the band and ribbon(s) to be removed. **DO NOT PULL OR STRETCH BAND TO REMOVE.**
6. If there is excessive sugar buildup, soak the band and ribbon(s) in hot water until the sugar dissolves. When the sugar has been removed, tap the band in the palm of your hand to loosen the ribbon(s) for removal.
7. Inspect, then clean or replace the band and ribbon(s). The primary reason for ribbon replacement is carbon build up inside the ribbon; an additional hot water soak may help remove some of the carbon buildup.
8. When the sugar has been removed, allow the band and element(s) to air dry overnight.
Note: For models with separate heat and motor switches, the best way to dry the floss head after reassembly is to spin it dry for 10 minutes **WITHOUT HEAT** (use motor switch only).
9. Re-assemble floss head components in reverse order using the steps above as reference.

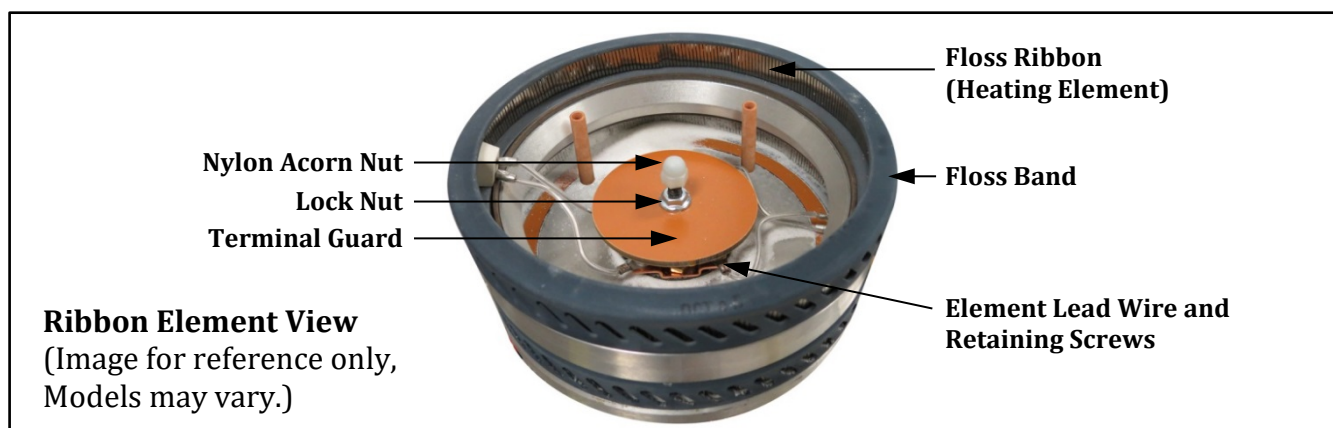



TROUBLESHOOTING

Low Production

- Check for excessive carbon on the ribbons. Follow the instructions for removing and cleaning band and ribbon if needed.
- Check heat control for correct setting.
- Check the line voltage. A primary reason for low production and poor equipment performance is low line voltage. Have an electrician check the line voltage and add new lines for all of the various equipment you have plugged into the electric circuit if there is not enough current for the requirement listed on the equipment nameplate.
- Check the ribbons. For machines with two ribbons, one burned out or shorted ribbon will cut production in half.
- Foreign objects in the head assembly may short out a ribbon or cause an out-of-balance condition.

Excessive Smoke

- Check heat control setting. After warm up, equipment should make good floss at a reduced setting. Never let the machine operate with the heat so high it produces smoke or if you can smell burned sugar. This condition quickly fills the ribbon with carbonized sugar.
- Check the product mixture being used. For best results, use nothing with a cornstarch base.
- Check the band and ribbon for excessive sugar build up and remove if needed as described on page 11 of this manual.



Excessive Vibration



- If the equipment is new, verify that shipping bolts have been loosened and packing materials were removed from the machine.
- When adding sugar to the floss head, always fill it 90% full to obtain a balanced condition in the head and eliminate vibration. **DO NOT** add sugar with motor running!
- Check for stretched or uneven suspension springs.
- Run the sugar completely out, then check for foreign objects or sugar lumps in the head assembly.







—THE FOLLOWING SECTIONS ARE FOR QUALIFIED SERVICE PERSONNEL ONLY—

MAINTENANCE INSTRUCTIONS


	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning.</p> <p>008_012221</p>

	 DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>

	 WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>

	 CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p> <p>027_010914</p>

HOW TO CHECK A TRIAC

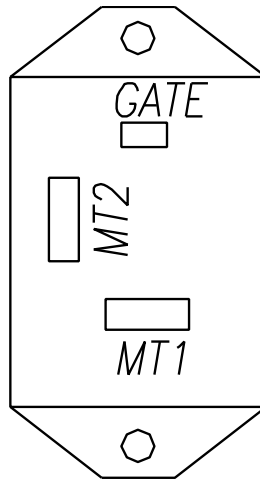

Triac - Top View

1. Set the multimeter for ohms or continuity.
2. Disconnect all machine leads from the triac.
3. Connect the positive ohmmeter lead to MT2 and the negative lead to MT1. The ohmmeter should indicate no continuity (OL) through the triac.
4. Using a separate jumper lead, connect the gate of the triac to MT2. The ohmmeter should indicate continuity. (less than 100 ohms)
5. Reconnect the triac so MT1 is connected to the positive ohmmeter lead and the negative lead to MT2. The ohmmeter should indicate no continuity (OL) through the triac.
6. Using a separate jumper lead, connect the gate of the triac to MT2. The ohmmeter should indicate continuity. (less than 100 ohms)



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model number, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:


Phone: (800) 543-0862
(513) 769-7676

Fax: (800) 542-1496
(513) 769-8500

E-mail: info@gmpopcorn.com

Web Page: www.gmpopcorn.com


Exterior View

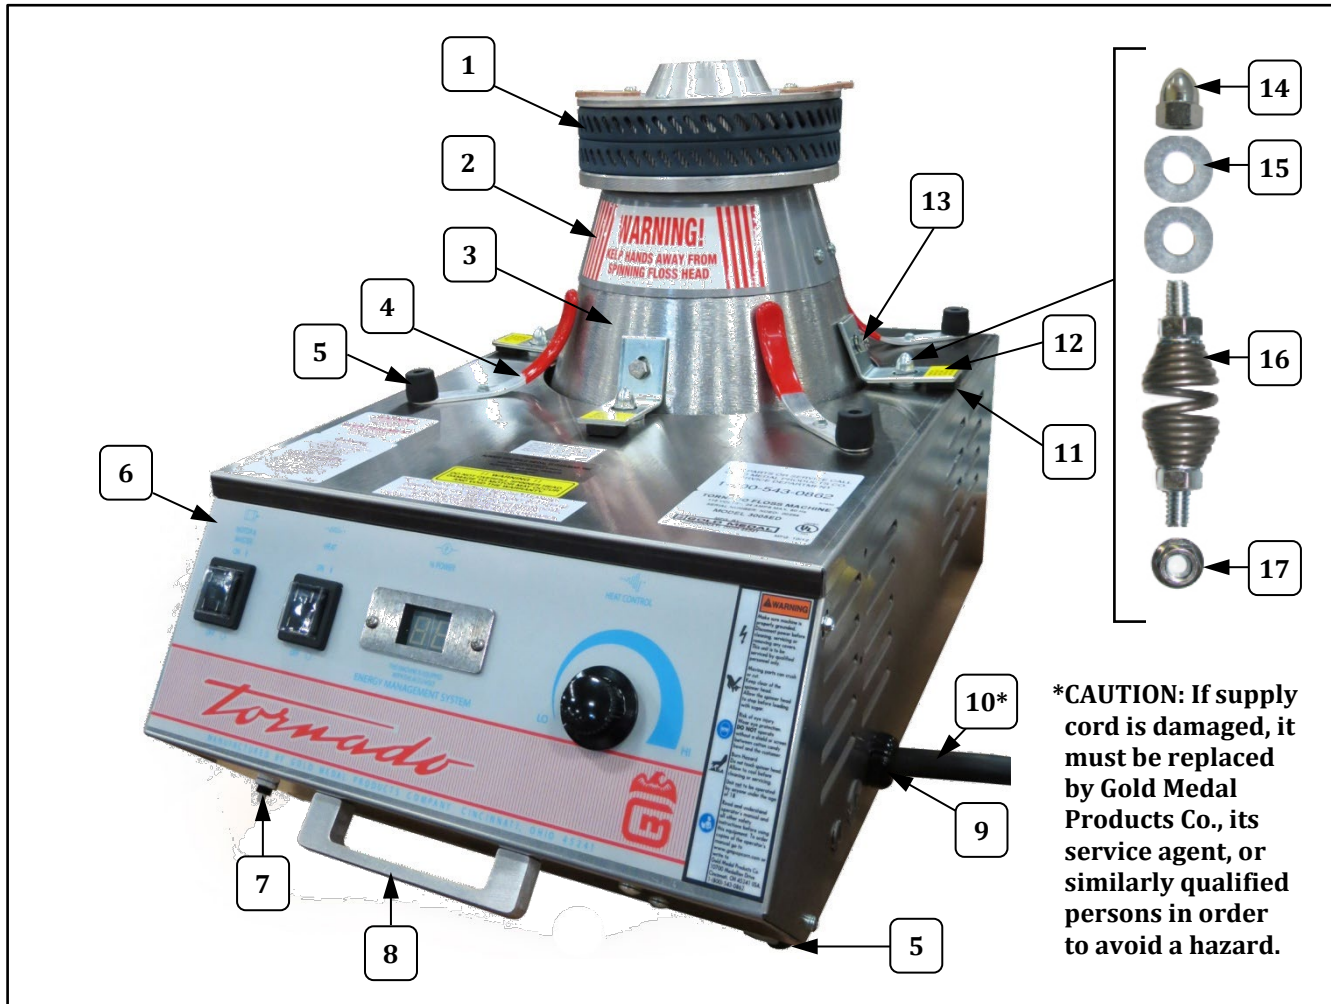

Item	Part Description	Qty.	Part Number		
			3005ED	3008ED	3005XED
1	SPINNER HEAD COMPLETE	1	43026	42325	43026EX
2	BRUSH COVER	2	42008NM	42008NM	42008NM
3	MOTOR CASTING	1	42034	42034	42034
4	PAN SUPPORT	4	42049	42049	42049
5	RUBBER FEET 3/4IN HIGH	8	47155	47155	47155
6	NAME & INSTRUCTION PLATE	1	48672	48699	48672EX
7	CIRCUIT BREAKER 15 AMP	1	47364	47364	
8	HANDLE	1	67069	67069	67069
9	STRAIN RELIEF#SR-9P-2	1	47026	47026	76026
10	POWER SUPPLY CORD	1	47603	47603	42369
11	RUBBER PAD	4	75243	75243	75243
12	SUPPORT ANGLE, SHIPPING	4	48019	48019	48019
13	1/4-20 X 1 HHC GR2 ZINC	4	41903	41903	41903
14	5/16 ACORN NUT	4	77610	77610	77610
15	5/16 WASHER	8	74134	74134	74134
16	SUSPENSION SPRING	4	20006	20006	20006
17	5/16 FLANGE NUT	4	49317	49317	49317




Front Panel

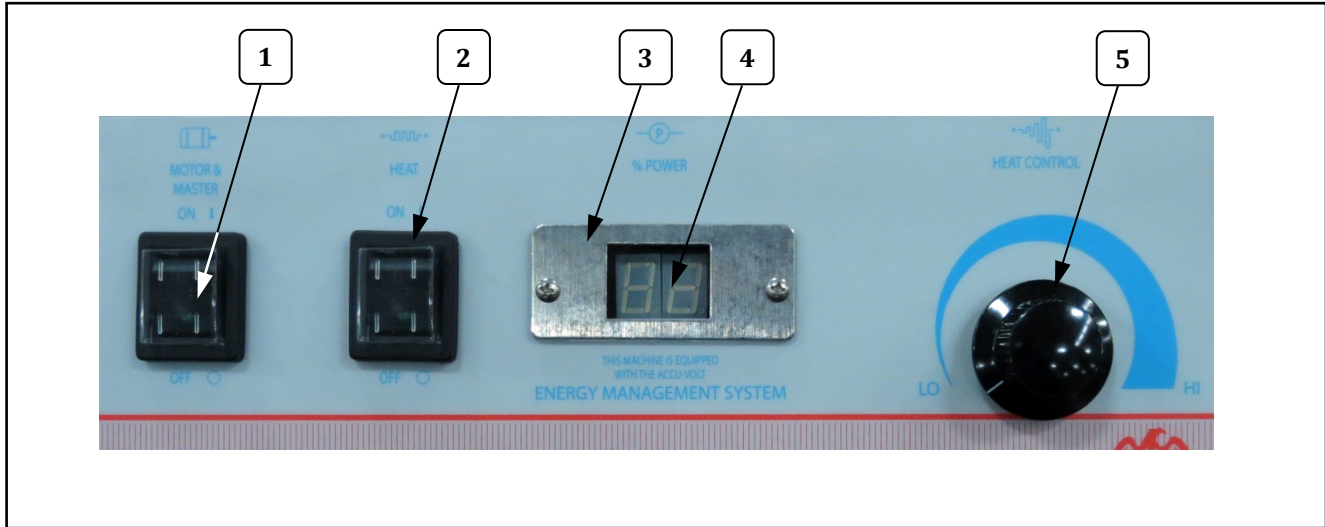


Item	Part Description	Qty.	Part Number		
			3005ED	3008ED	3005XED
1	SWITCH, LIGHTED ROCKER GR	2	42798	42798	42798
2	ROCKER SWITCH COVER	2	48786	48786	48786
3	BEZEL, POWER DISPLAY	1	55435	55435	55435
4	COVER, DIGITAL METER	1	48756	48756	48756
5	KNOB, PAKTRONIC CONTROL	1	40793	40793	40793

Spinner Head Assembly – Model 3005ED, 3008ED (Domestic)

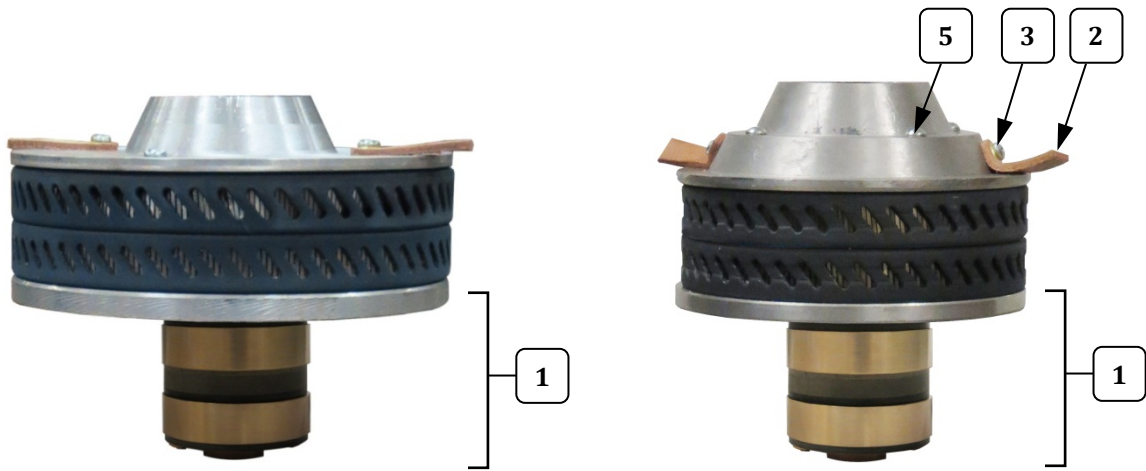

Model 3005ED
7" Spinner Head Complete

Model 3008ED
5" Spinner Head Complete

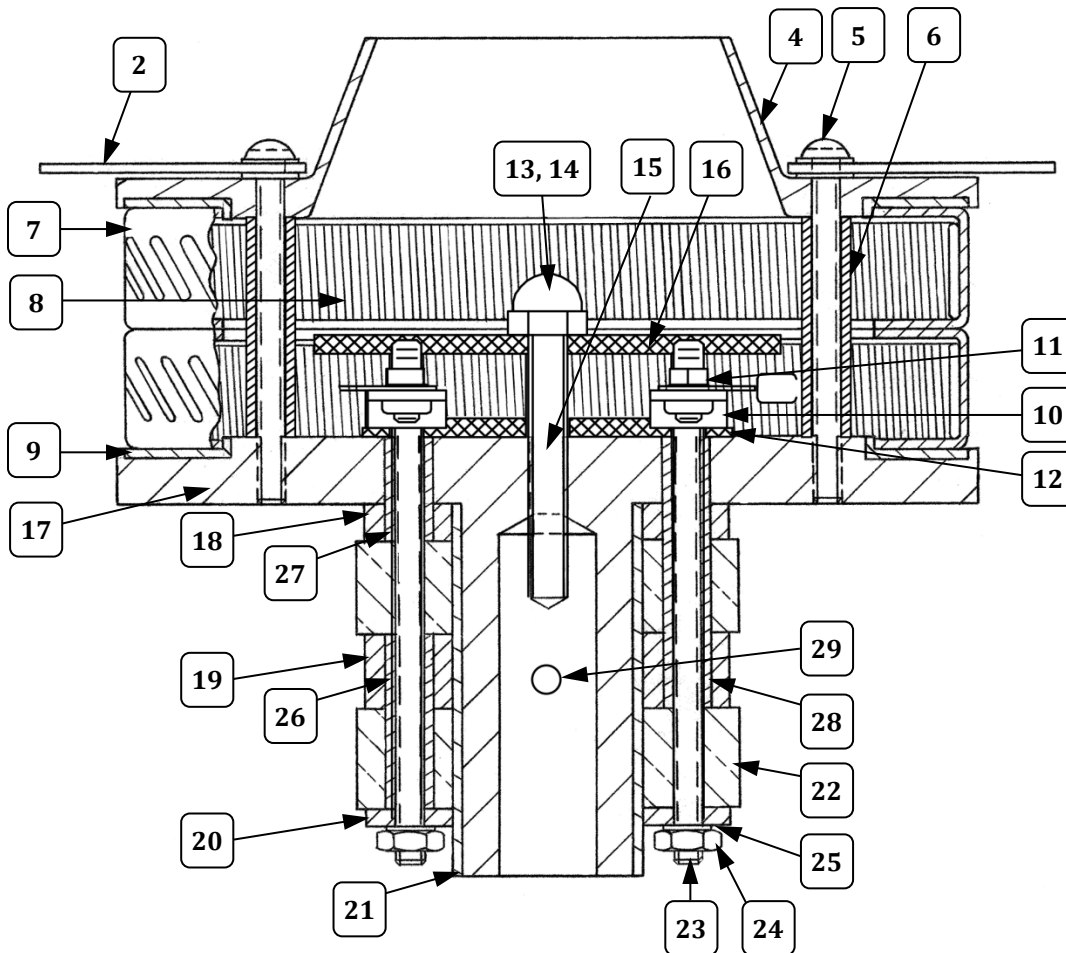





Spinner Head Assembly – Parts List Model No. 3005ED, 3008ED

Item	Part Description	Qty.	Part Number	
			3005ED	3008ED
	5 INCH SPINNER HEAD COMPLETE	1		42325
	7 INCH SPINNER HEAD COMPLETE	1	43026	
1	SPINNER HEAD BOTTOM ONLY	1	43008	42318
2	LEATHER FLOATER	2	20010	20010
3	8-32 X 5/16 PH PAN M/S	2		89247
4	SPINNER CAP	1	43014	42170
5	10-24 X 2 1/4 PH PAN HEAD	4	20050	
	10-24 X 2 3/4 PH PAN M/S	4		42199
6	STUD INSULATOR 1-23/64 IN	4	42308	42308
7	5 IN DBL FLOSS BAND	1		42213
	7 IN DBL FLOSS BAND	1	42214	
8	5 IN RIBBON ASSY 120V 8A	2		42327
	7 IN RIBBON ASSY 120V 9A	2	43028	
9	PHENOLIC BAND INSULATOR	2	42217	42216
10	TERMINAL ASSY	2	42305	42305
11	8-32 X 1/4 HX HD WHIZLOCK	4	42045	42045
12	PHENOLIC INSULATOR TERML	1	42304	42304
13	ACORN NUT NYLON 1/4-20	1	48041	48041
14	1/4-20 SERRATED LOCK NUT	1	46311	46311
15	SET SCREW 1/4-20 X 2-3/4	1	42413	42413
16	PHENOLIC TERMINAL GUARD	1	42303	42303
17	HEAD CASTING	1	43015	42053
18	TOP PHENOLIC WASHER	1	42025	42025
19	CENTER PHENOLIC WASHER	1	42026	42026
20	BOTTOM PHENOLIC WASHER.	1	20054	20054
21	INSULATOR SLEEVE	1	42028	42028
22	SLIP RING 5/8 INCH	2	20020HD	20020HD
23	HEAD STUD 3 1/2 LG, BRASS	2	42032	
	BRASS SLIP RING STUDS (3 1/4 inch)	2		42309
24	HEX NUT #10-32 BRASS	4	42301	42301
25	#10 INTERNAL TOOTH WASHER	4	12573	12573
26	STUD INSULATOR 1-3/32 IN	1	42029	42029
27	STUD INSULATOR 5/8"	1	42030	42030
28	STUD INSULATOR 1-3/4"	1	42037	42037
29	SET SCREW 1/4-20 X 3/8	1	74125	74125


Spinner Head Assembly – Model 3005XED (Export)

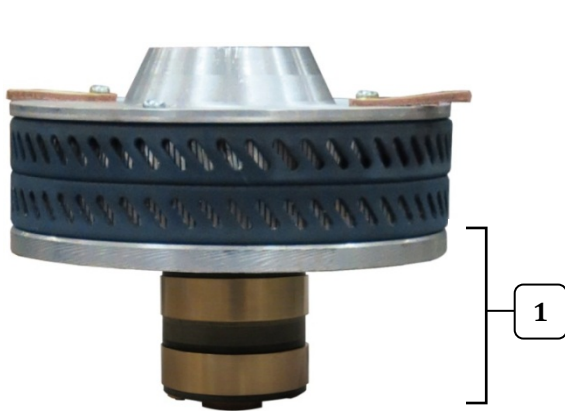

**Model 3005EDX
7" Spinner Head Complete**

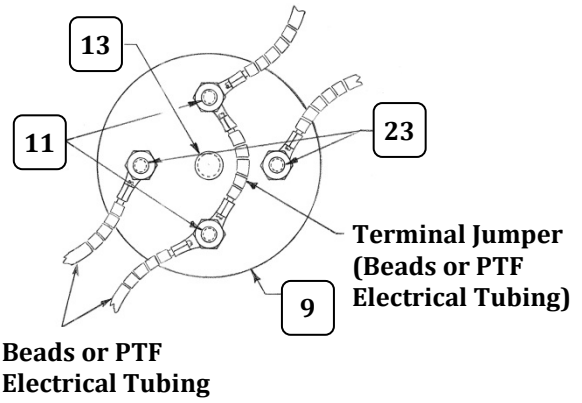

Terminal Wiring

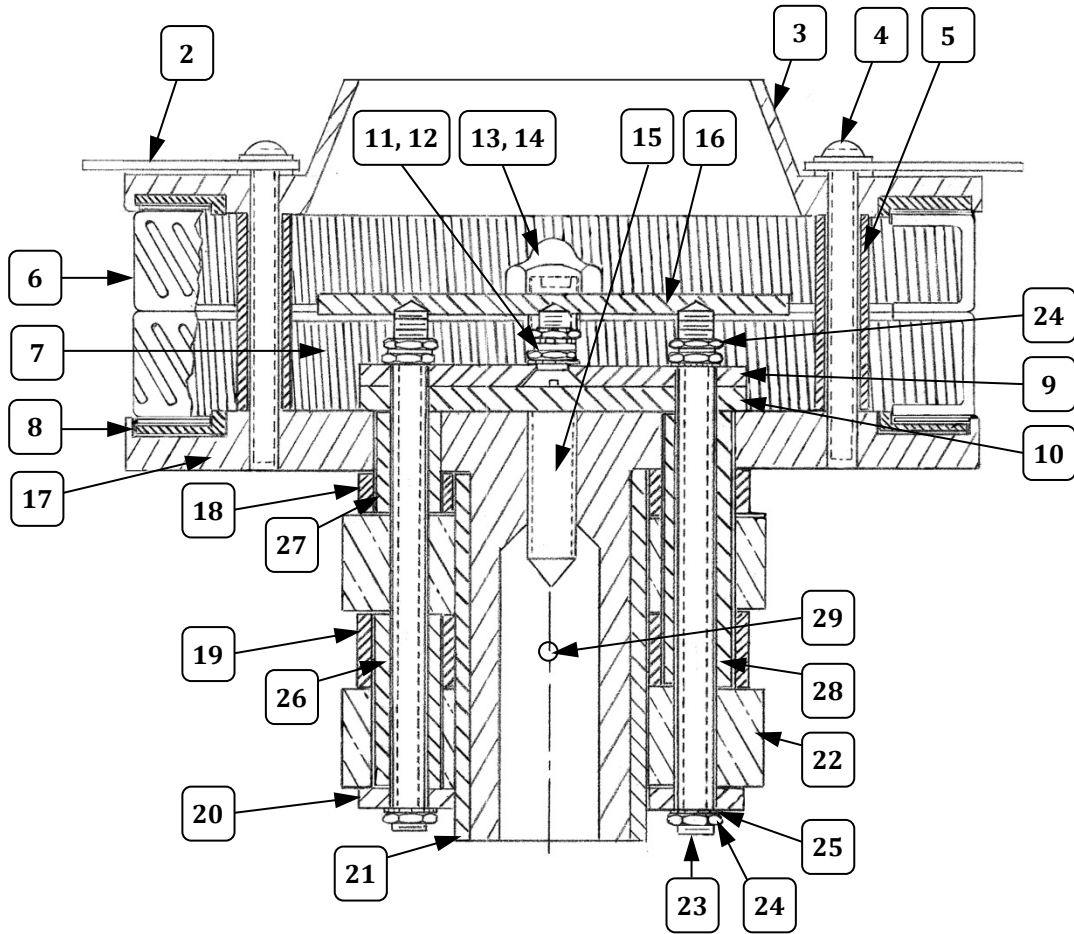




Spinner Head Assembly – Parts List Model No. 3005XED


Item	Part Description	Qty.	Part No.
			3005XED
	7 INCH SPINNER HEAD COMPLETE	1	43026EX
1	SPINNER HEAD BOTTOM ONLY	1	43008EX
2	LEATHER FLOATER	2	20010
3	SPINNER CAP	1	43014
4	10-24 X 2 1/4 PH PAN HEAD	4	20050
5	STUD INSULATOR 1-23/64 IN	4	42308
6	7 IN DBL FLOSS BAND	1	42214EX
7	7 IN RIBBON ASSY 120V 9A	2	43028
8	PHENOLIC BAND INSULATOR	2	42217
9	TOP TERMINAL INSULATOR	1	42367
10	BOTTOM TERMINAL INSULATOR	1	42368
11	10-32 X 1/2 PHIL FLAT M/S	2	59052
12	HEX NUT #10-32 ZINC PLATED	4	74143
13	ACORN NUT NYLON 1/4-20	1	48041
14	1/4-20 SERRATED LOCK NUT	1	46311
15	SET SCREW 1/4-20 X 2-3/4	1	42413
16	PHENOLIC TERMINAL GUARD	1	42303
17	HEAD CASTING	1	43015
18	TOP PHENOLIC WASHER	1	42025
19	CENTER PHENOLIC WASHER	1	42026
20	BOTTOM PHENOLIC WASHER.	1	20054
21	INSULATOR SLEEVE	1	42028
22	SLIP RING 5/8 INCH	2	20020HD
23	HEAD STUD 3 1/2 LG, BRASS	2	42032
24	HEX NUT #10-32 BRASS	6	42301
25	#10 INTERNAL TOOTH WASHER	8	12573
26	STUD INSULATOR 1-3/32 IN	1	42029
27	STUD INSULATOR 5/8"	1	42030
28	STUD INSULATOR 1-3/4"	1	42037
29	SET SCREW 1/4-20 X 3/8	1	74125

Brush Assembly and Motor

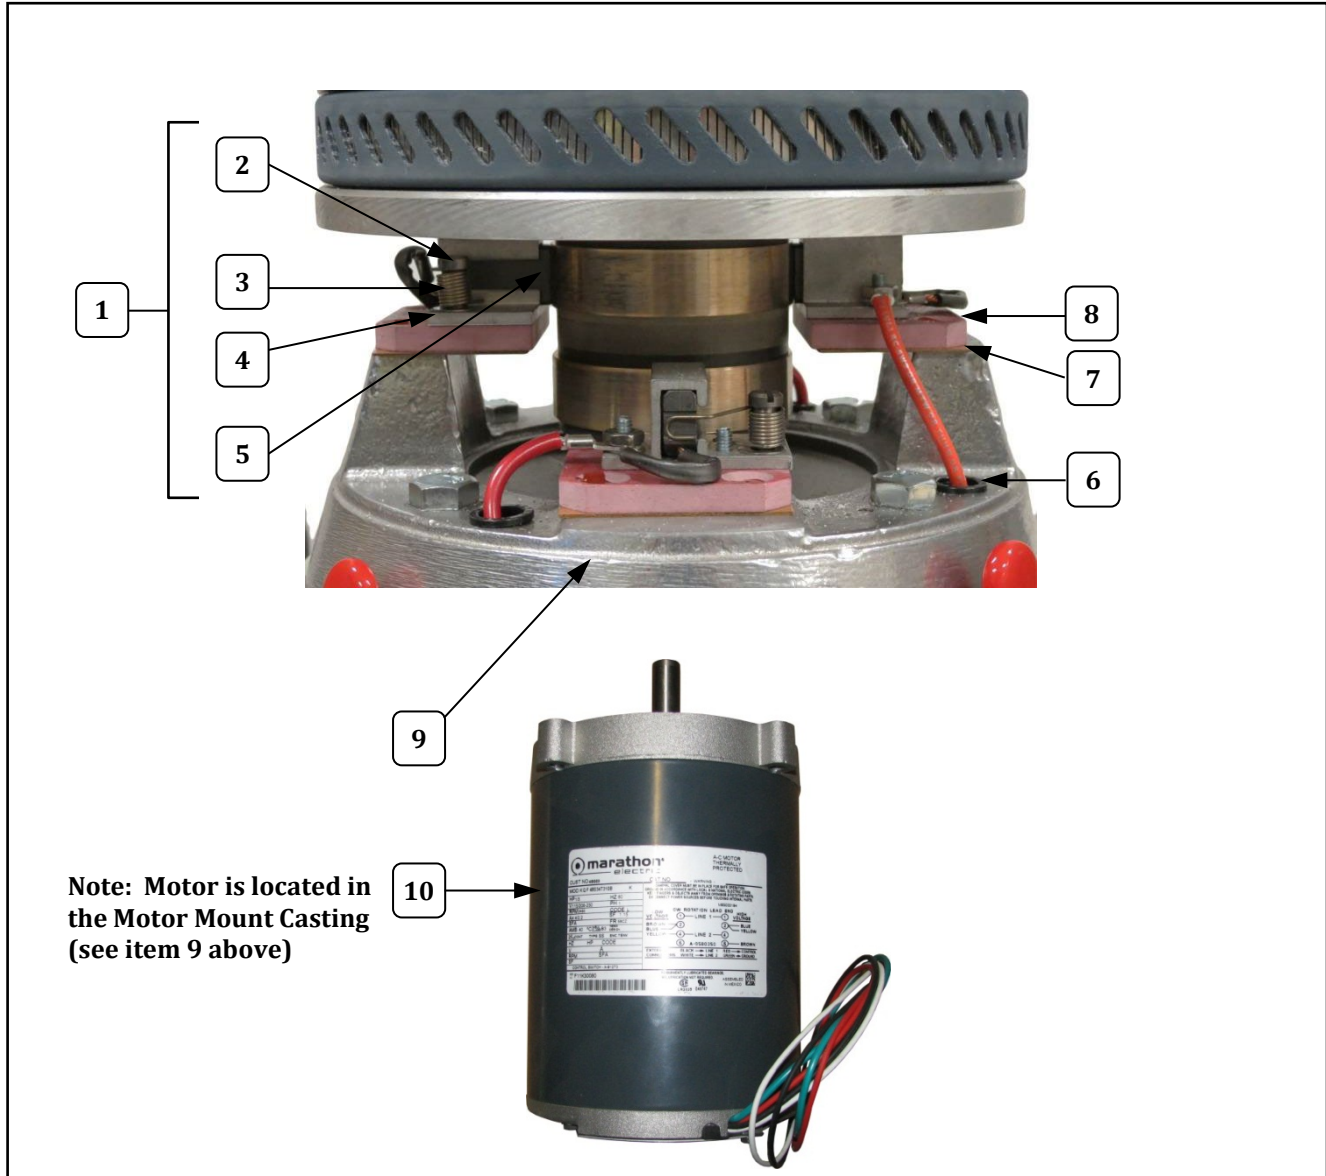


Item	Part Description	Qty.	Part Number		
			3005ED	3008ED	3005XED
1	BRUSH ASSEMBLY W/BRUSH	4	42320	42320	42320
2	SCREW BRUSH SPRING	4	20052	20052	20052
3	SPRING BRUSH TENSION	4	20033	20033	20033
4	BRUSH HOLDER	4	20032	20032	20032
5	CARBON BRUSH	4	20034	20034	20034
6	BUSHING, SNAP .500 IN	4	47236	47236	47236
7	INSULATOR BRUSH HOLDER	4	48017	48017	48017
8	BRUSH PAD	4	42035	42035	42035
9	MOTOR CASTING	1	42034	42034	42034
10	MOTOR, 1/3 HP 115VAC	1	48669	48669	
	MOTOR, 1/3 HP 230VAC	1			48669EX

Unit Interior - Model 3005ED, 3008ED (Domestic)

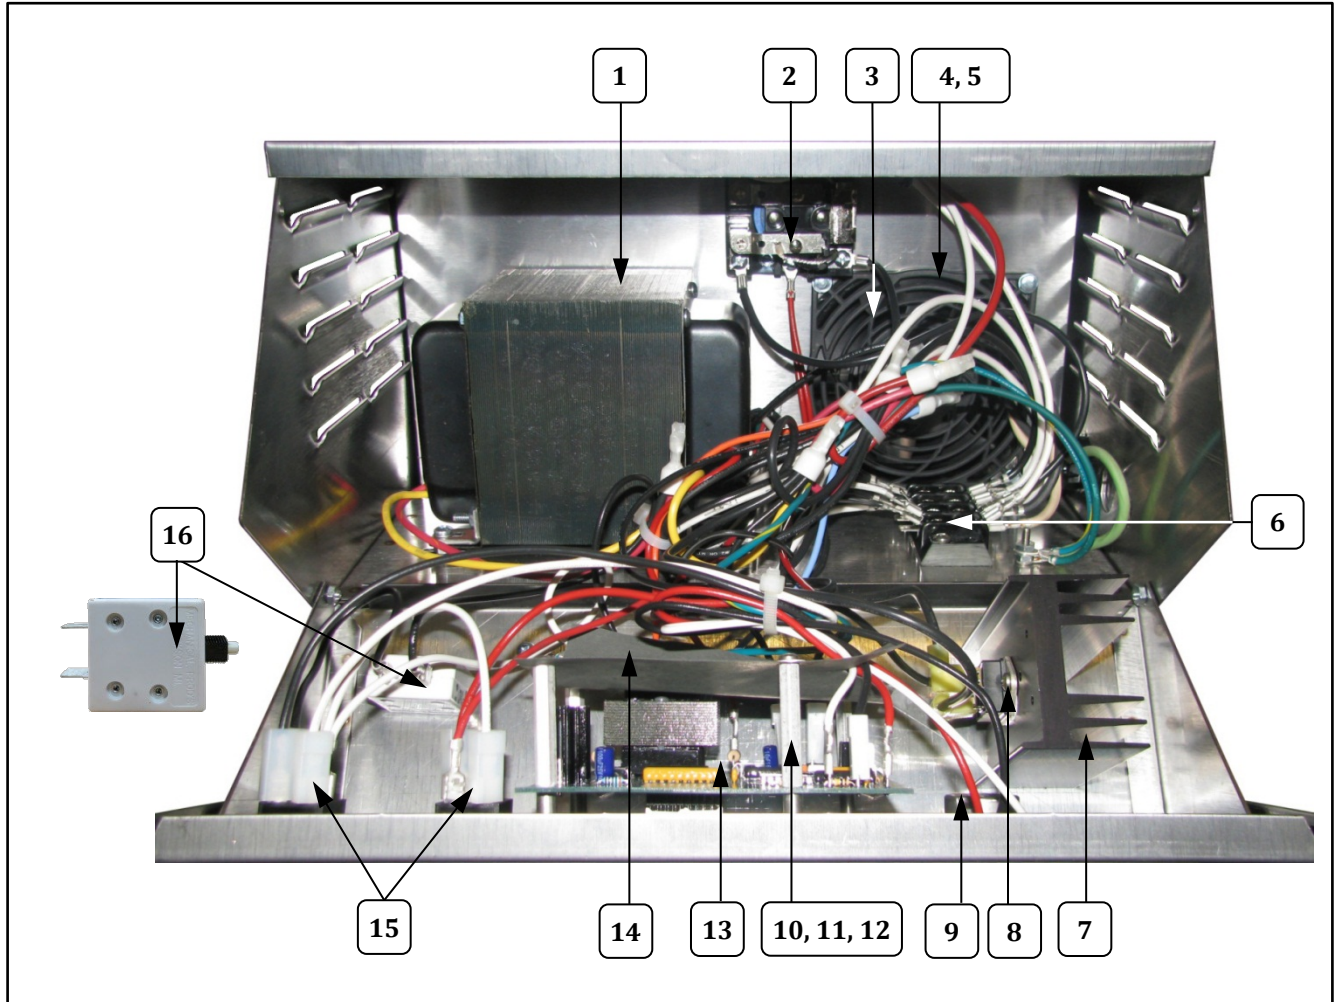


Item	Part Description	Qty.	Part Number	
			3005ED	3008ED
1	TRANSFORMER	1	43006	42005
2	RELAY, 30A DPST 120V		55219	55219
3	FINGER GUARD	1	47200	47200
4	EXHAUST BLOWER 120V,60CY	1	48018	48018
5	BLOWER PLUG AND CORD	1	47199	47199
6	TERMINAL BLOCK	1	42006	42006
7	HEAT SINK	1	48673	48673
8	TRIAC, 35A 600V	1	55155	55155
9	POTENTIOMETER 1K	1	55263	55263
10	STANDOFF 1-1/2 IN 6-32	4	55467	55467
11	6-32 X 3/8 PHIL PAN M/S	4	39000	39000
12	#6 SAE WASHER	4	12351	12351
13	HEAT CONTROL, POWER DISPLAY	1	55364	55364
14	FISH PAPER COVER	1	55468	55468
15	SWITCH, LIGHTED ROCKER GR	2	42798	42798
16	CIRCUIT BREAKER 15 AMP	1	47364	47364

Unit Interior – Model 3005XED (Export)

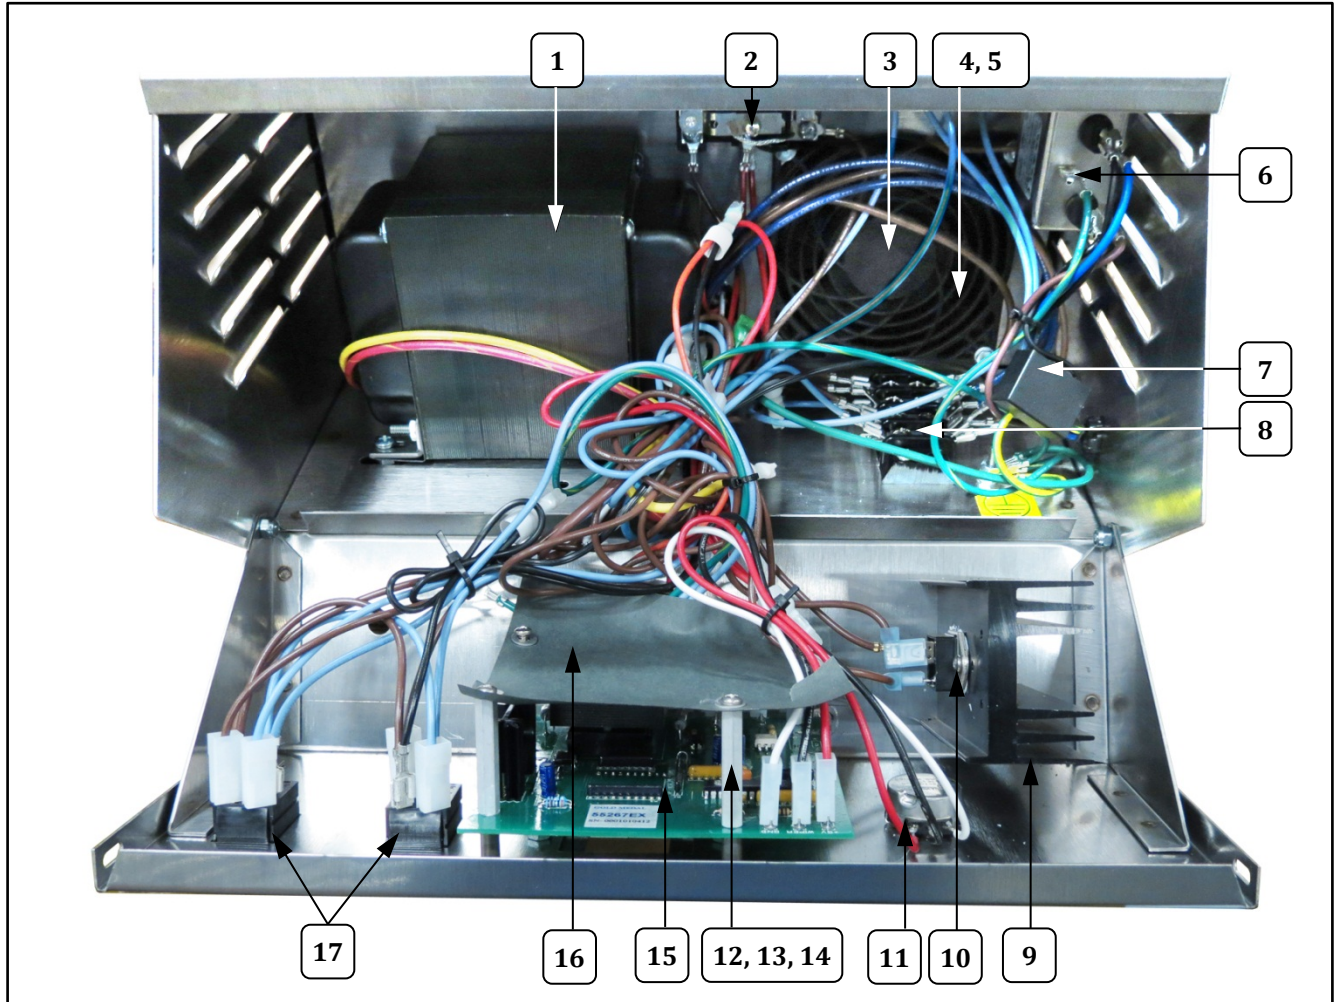


Item	Part Description	Qty.	Part No.
			3005XED
1	TRANSFORMER	1	43011
2	RELAY, 30A DPST 240V		55219EX
3	FINGER GUARD	1	47200
4	EXHAUST BLOWER 220V,60CY	1	48037
5	BLOWER PLUG AND CORD	1	47199
6	FILTER, EMI 20 AMP	1	48695
7	3uF 250VAC CAPACITOR	1	55527
8	TERMINAL BLOCK	1	42006
9	HEAT SINK	1	48673
10	TRIAC, 35A 600V	1	55155
11	POTENTIOMETER 1K	1	55263
12	STANDOFF 1-1/2 IN 6-32	4	55467
13	6-32 X 3/8 PHIL PAN M/S	4	39000
14	#6 SAE WASHER	4	12351
15	HEAT CONTROL, POWER DISPLAY	1	55267EX
16	FISH PAPER COVER	1	55468
17	SWITCH, LIGHTED ROCKER GR	2	42798

Floss Pan and Whirlgrip Stabilizer

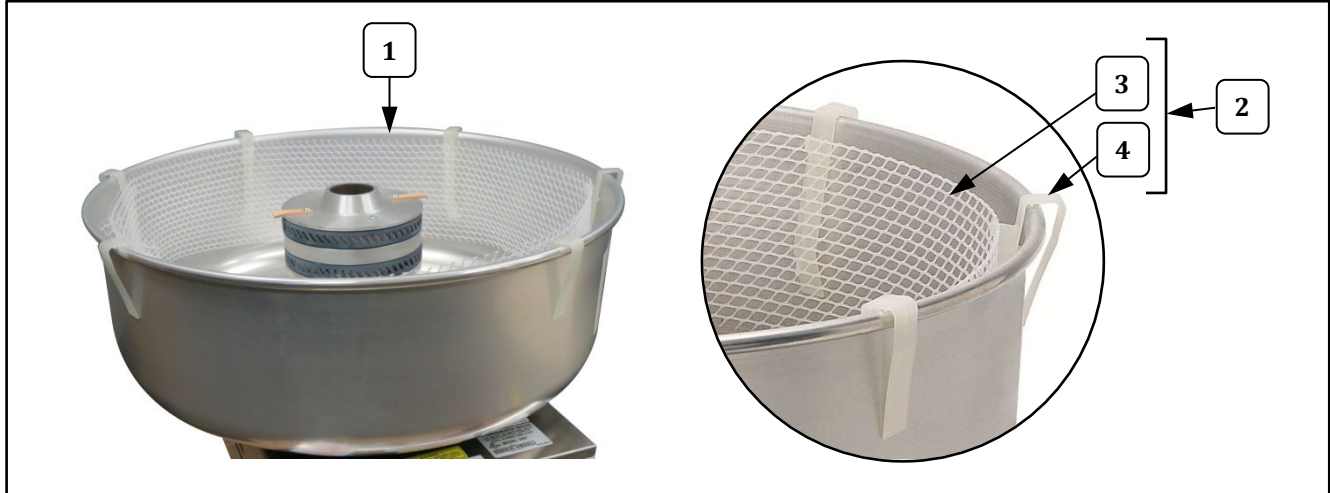

Item	Part Description	Qty.	Part Number		
			3005ED	3008ED	3005XED
1	FLOSS PAN	1	42040	42040	42040
2	WHIRLGRIP STABILIZER (Includes Floss Stabilizer and Clips)	1	3010	3010	3010
3	FLOSS STABILIZER (Web)	1	43032	43032	43032
4	WHIRLGRIP CLIPS	6	77470	77470	77470


Accessories – Model No. 3005ED and 3008ED

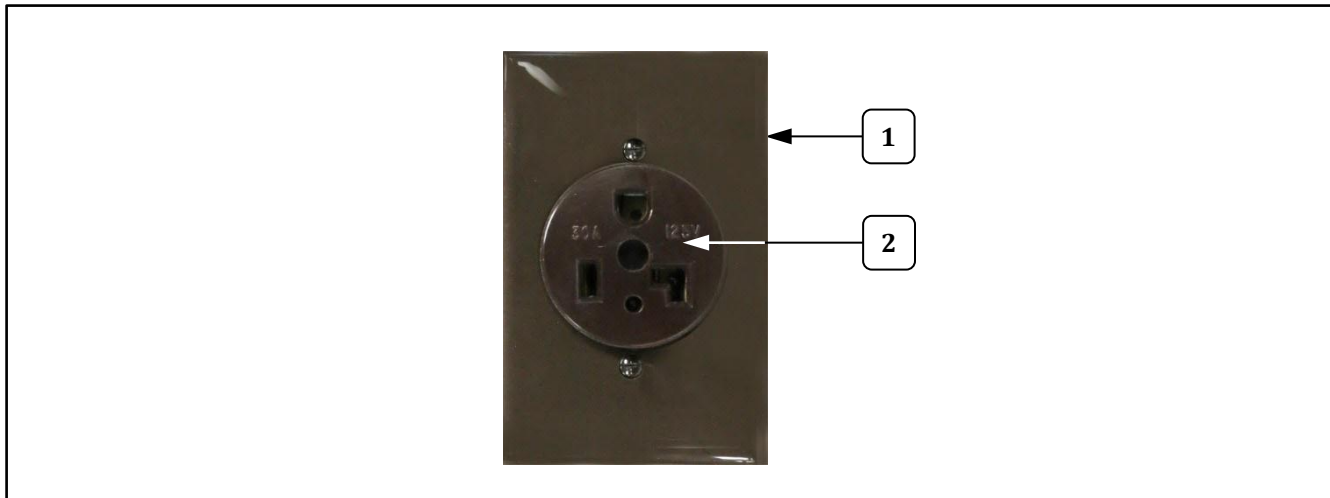

Item	Part Description	Qty.	Part Number	
			3005ED	3008ED
1	RECPT POWER SUPPLY	1	47211	47211
2	RECPT COVER	1	47377	47377



Model No. 3005XED (Export)

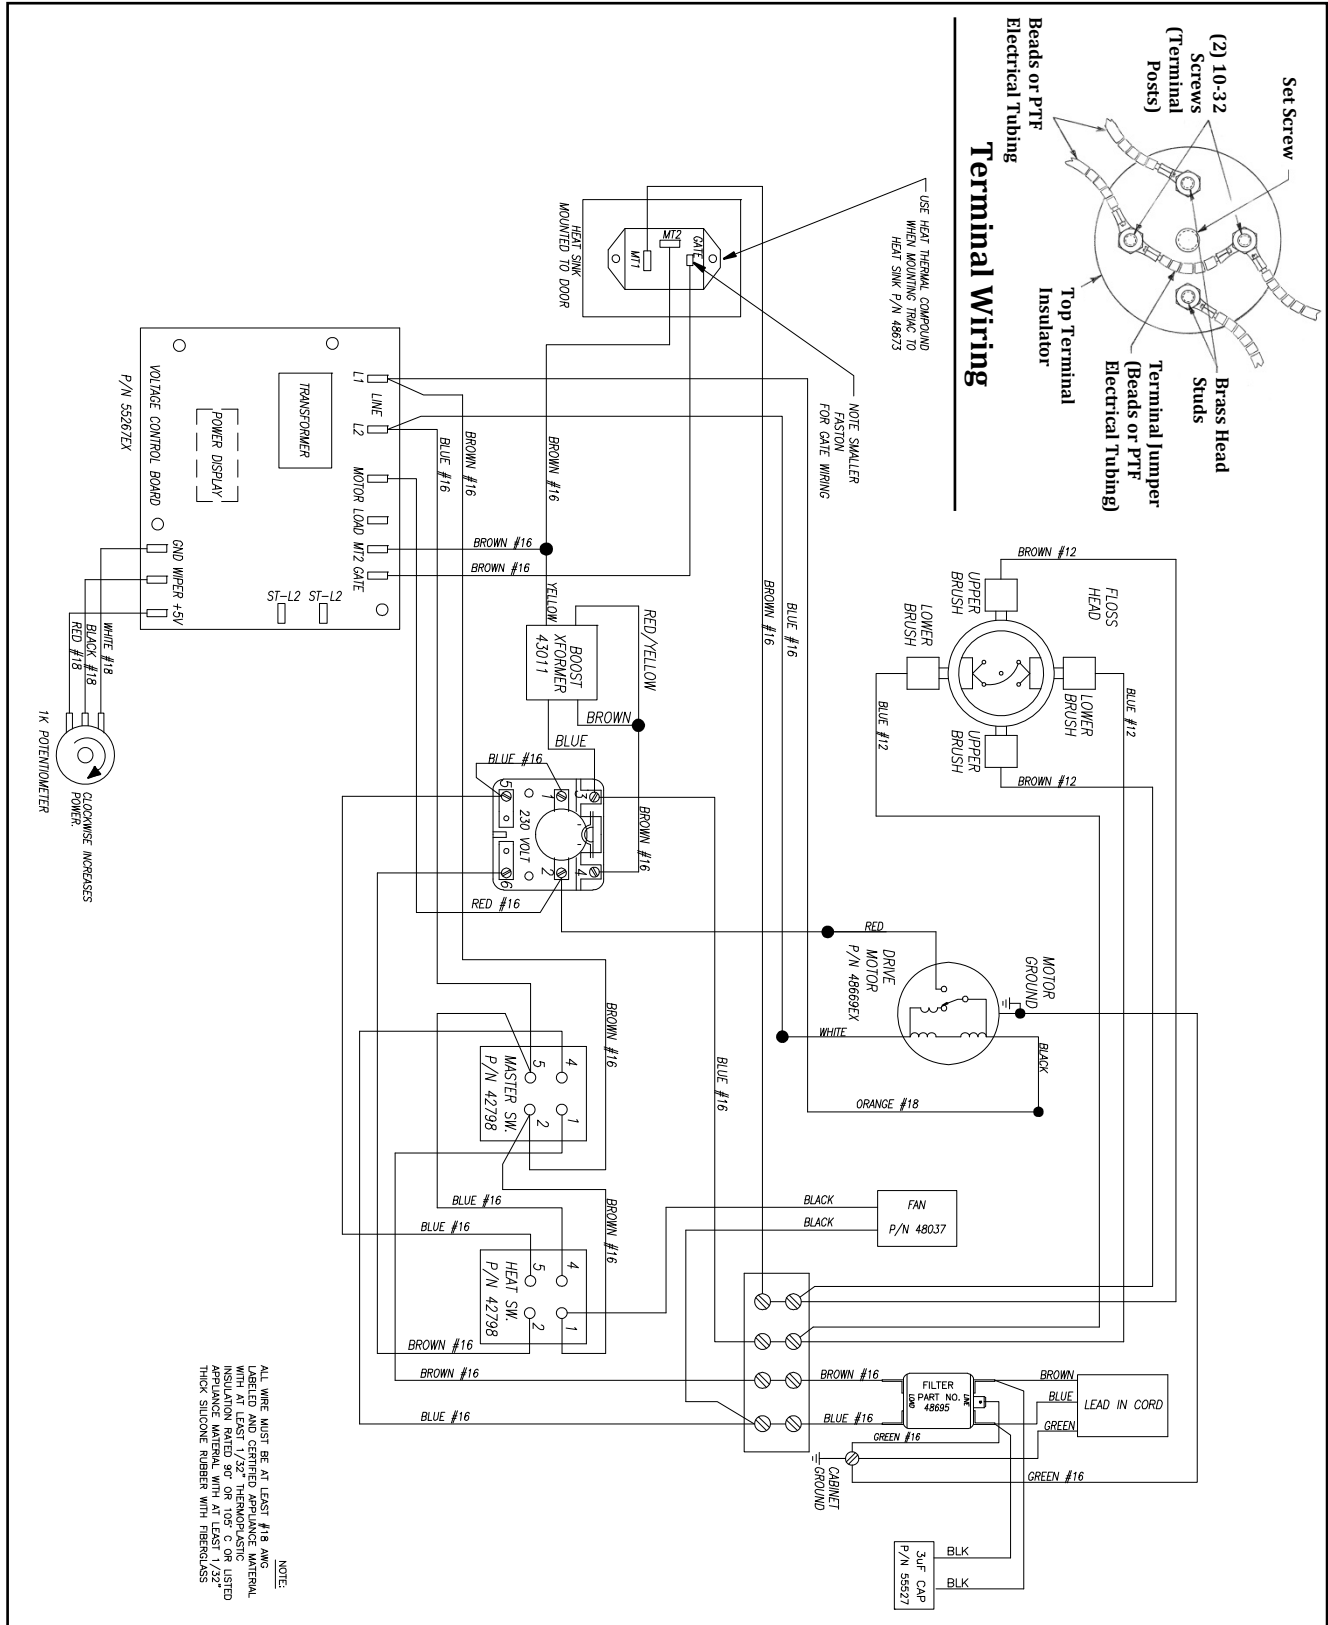



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500