



Electric Stationary and Tilting Kettles

K20EL	ML-136073
K40EL	ML-136074
K60EL	ML-136075
K20ELT	ML-136077
K40ELT	ML-136078
K60ELT	ML-136079

- NOTICE -

This Manual is prepared for the use of trained Hobart Service Technicians and should not be used by those not properly qualified.

This manual is not intended to be all encompassing. If you have not attended a Hobart Service School for this product, you should read, in its entirety, the repair procedure you wish to perform to determine if you have the necessary tools, instruments and skills required to perform the procedure. Procedures for which you do not have the necessary tools, instruments and skills should be performed by a trained Hobart Service Technician.

The reproduction, transfer, sale or other use of this manual, without the express written consent of Hobart, is prohibited.

This manual has been provided to you by ITW Food Equipment Group LLC ("ITW FEG") without charge and remains the property of ITW FEG, and by accepting this manual you agree that you will return it to ITW FEG promptly upon its request for such return at any time in the future.

TABLE OF CONTENTS

SERVICE UPDATES	3
SERVICE UPDATES	3
General	4
INTRODUCTION	4
GENERAL	4
STATIONARY AND TILTING KETTLES	4
MODELS COVERED	4
CONTROL PANEL	4
TOOLS	4
SPECIFICATIONS	5
OPERATION, CLEANING AND MAINTAINENCE	5
REMOVAL AND REPLACEMENT OF PARTS	6
CONTROL BOX COVER	6
BOTTOM COVER	6
COMPONENT PANELS	6
HEATING CONTACTORS	7
TEMPERATURE CONTROLLER	7
WATER LEVEL CONTROL	7
MAIN TRANSFORMER	8
HEATING ELEMENT	8
WATER LEVEL PROBE (LLCO)	10
TEMPERATURE SENSOR	11
PRESSURE SWITCH	11
POTENTIOMETER	12
SWITCH ASSEMBLY	12
GEARBOX (TILT MODELS ONLY)	13
TILT BEARING	14
SERVICE PROCEDURES AND ADJUSTMENTS	15
TEMPERATURE CONTROLLER TEST	15
POTENTIOMETER TEST	16
THERMOCOUPLE TEST	16
VENTING	16
FILLING THE RESERVOIR JACKET	17
PARTIAL REFILL	17
COMPLETE DRAINING AND REFILL	18
HEATING ELEMENT	19
KETTLE TILT ADJUSTMENT (TILT MODELS ONLY)	19
ELECTRICAL OPERATION	21
COMPONENT FUNCTION	21
COMPONENT LOCATION	22
WATER LEVEL CONTROL (WLC LLCO)	23
SEQUENCE OF OPERATION	24
SCHEMATIC DIAGRAM	26
WIRING DIAGRAMS	27
TROUBLESHOOTING	30
TROUBLESHOOTING	30

SERVICE UPDATES

SERVICE UPDATES

December 2020

- Updated HEATING ELEMENT.

July 2018

- Updated TOOLS.

October 2017

- Updated FILLING THE RESERVOIR JACKET

General

INTRODUCTION

General

The procedures in this manual apply to all models unless otherwise specified. The pictures and illustrations are of a model K40ELT kettle unless otherwise noted. All information and specifications contained in this manual are based on the latest product information available at the time of printing.

Stationary and Tilting Kettles

The electric stationary and tilting kettles are self contained two thirds jacketed kettles. The lower two thirds of the kettle bowl is a double wall stainless steel construction that provides a reservoir for a solution of heat transfer fluid and distilled water for improved heating of the kettle contents. The kettles are used to prepare a variety of liquid or semi-liquid food products such as soups, stews and sauces.

MODELS COVERED

Electric Stationary and Tilting Kettles
K20EL Stationary Kettle - 20 Gallon
K40EL Stationary Kettle - 40 Gallon
K60EL Stationary Kettle - 60 Gallon
K20ELT Tilting Kettle - 20 Gallon
K40ELT Tilting Kettle - 40 Gallon
K60ELT Tilting Kettle - 60 Gallon

CONTROL PANEL

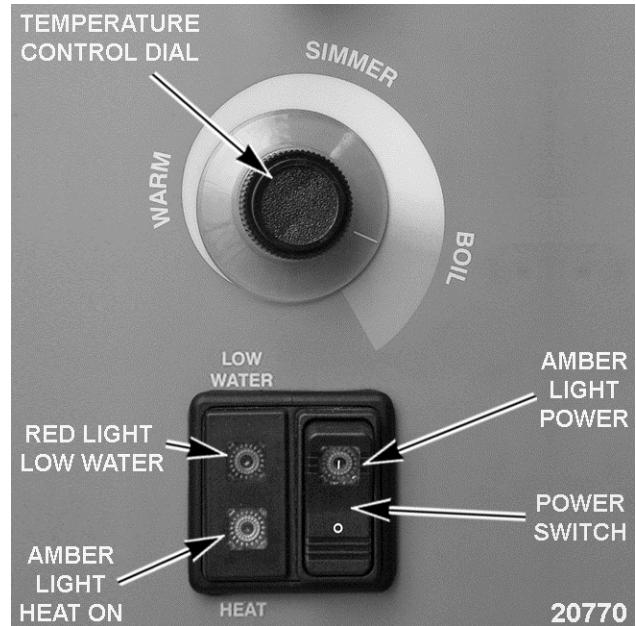


Fig. 1

TOOLS

Standard

- Standard set of hand tools.
- Metric set of hand tools.
- VOM with measuring micro amp current tester. Any VOM with minimum of CAT III 600V, CE certified. Sensitivity of at least 20,000 ohms per volt can be used. In addition, meter leads must also be a minimum of CAT III 600V.
- Clamp on type amp meter with minimum of NFPA-70E CAT III 600V, UL/CSA/TUV listed.
- Field service grounding kit.
- Pipe thread sealant.
- Temperature meter (thermocouple type). Use for checking kettle temperature.
- 6 gallon container to hold drained reservoir jacket fluid.

Special

- Torque wrench (ft-lbs) for tightening heating element mounting bolts.
- Dowfrost™ heat transfer fluid Part No. 558038 (5 gallon). Refer to FILLING THE RESERVOIR JACKET for volumes.

- Distilled water only for re-filling of the jacket (purchase locally). Refer to [FILLING THE RESERVOIR JACKET](#) for volumes.

SPECIFICATIONS

Reservoir Jacket Fluid

- Water - Use only distilled water for partial re-filling of the jacket (purchase locally).
- Dowfrost heat transfer fluid Part No. 558038 (5 gallon). Use during a complete re-fill of the jacket with new fluid. Refer to service procedures for volumes.

ELECTRICAL SPECIFICATIONS								
MODEL	KW	PHASE	Amperage per Line			Minimum Circuit Ampacity		
			208V	240V	480V	208V	240V	480V
K20EL/ELT	12	1	57.7	---	---	75	---	---
		3	33.3	---	14.4	45	---	20
	16	1	---	66.7	---	---	85	---
		3	---	38.5	---	---	50	---
K40EL/ELT K60EL/ELT	18	3	50.0	43.3	21.7	65	55	30
K40EL/ELT K60EL/ELT	24	3	66.6	57.7	28.9	85	75	40

The 208/240V electric kettles are wired from the factory for a 208V 3-phase supply. If connecting to 240V 3-phase supply, the primary voltage tap on the transformer must be changed to this voltage. For connecting to a single phase supply, the wiring between terminal block and contactors must be changed as shown in the [WIRING DIAGRAMS](#).

OPERATION, CLEANING AND MAINTAINENCE

Refer to F35457 Installation & Operation Manual for specific instructions. The manual includes:

- A page from the Stainless Steel Care and Cleaning Guide for proper care and cleaning of stainless steel.
- Draw-Off Valve and Plug Valve dissassembly & cleaning instructions.


REMOVAL AND REPLACEMENT OF PARTS

CONTROL BOX COVER



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

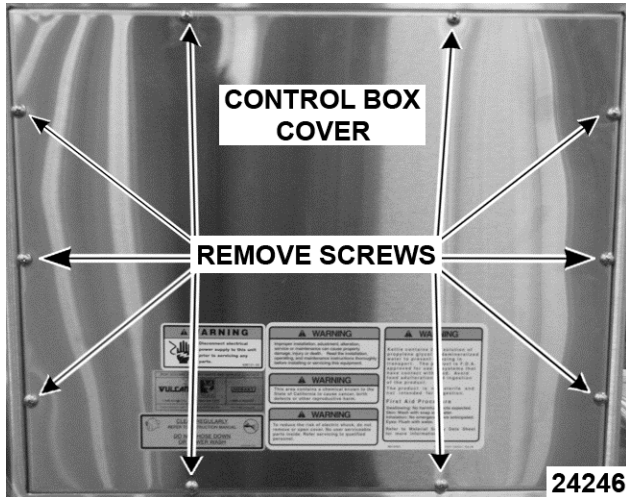


Control Box Cover

BOTTOM COVER



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

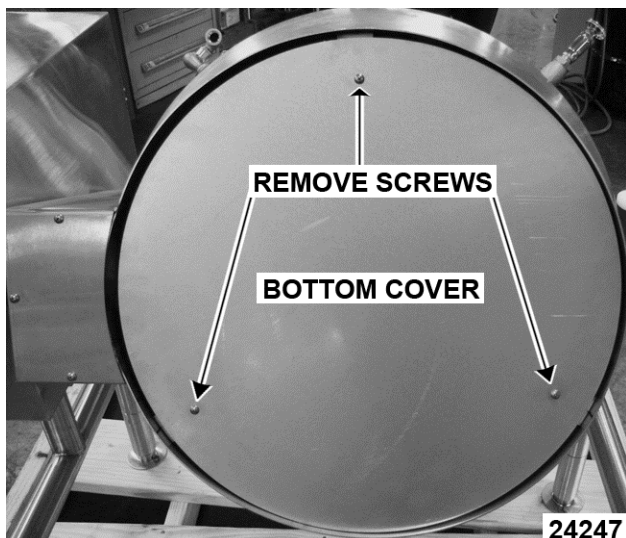

Bottom Cover


COMPONENT PANELS




⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.


The following pictures show the Stationary Kettle, the Tilting Kettle and the Bottom component panels. Use these pictures to assist in removal and replacement of the components in these kettles.

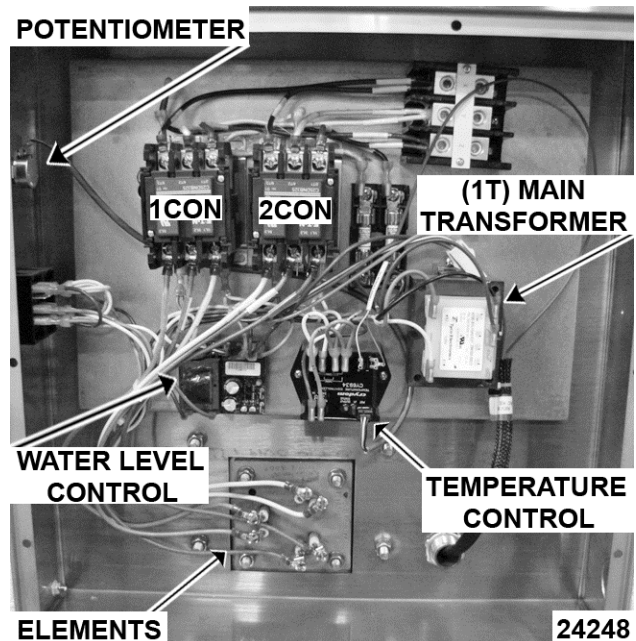

Stationary Kettle

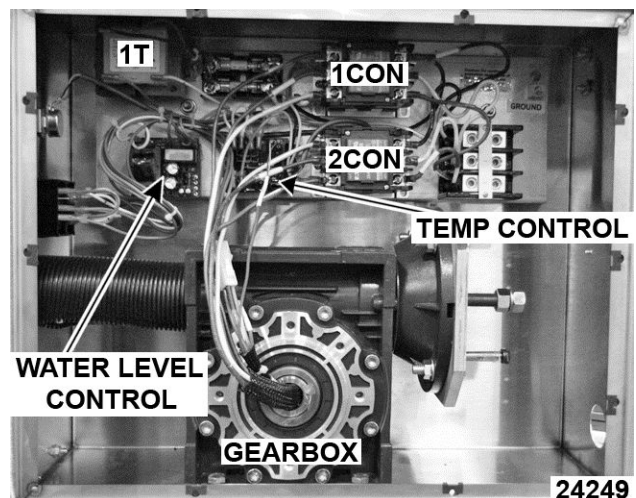

Tilting Kettle

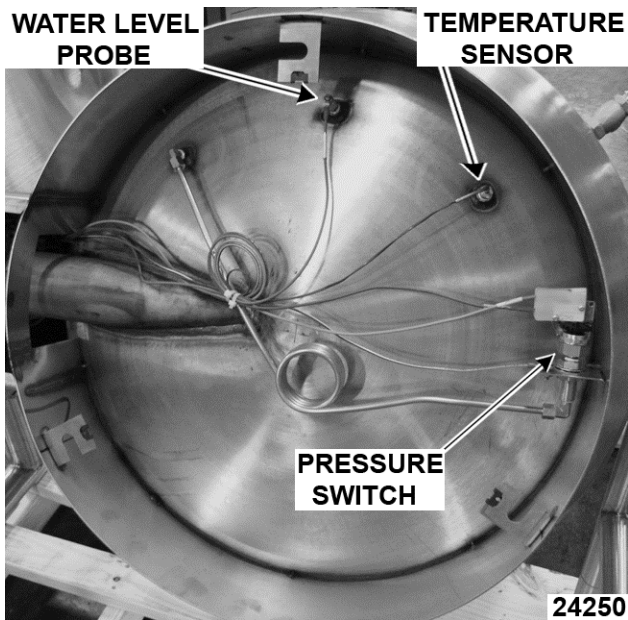

Bottom

HEATING CONTACTORS



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Remove CONTROL BOX COVER.
2. Note location of lead wires then disconnect the wires from contactor being replaced.
3. Remove screws securing the contactor to panel.
4. Reverse procedure to install and check for proper operation.

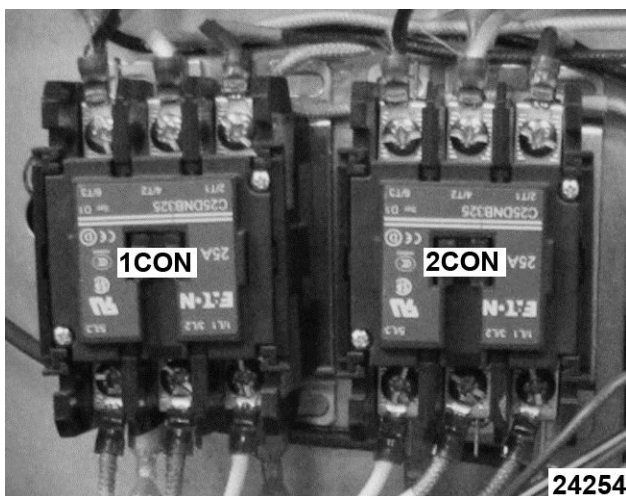


Fig. 7

TEMPERATURE CONTROLLER



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Remove CONTROL BOX COVER.
2. Disconnect lead wires from temperature controller.
3. Remove screws securing the temperature controller to panel.
4. Reverse procedure to install and check for proper operation.

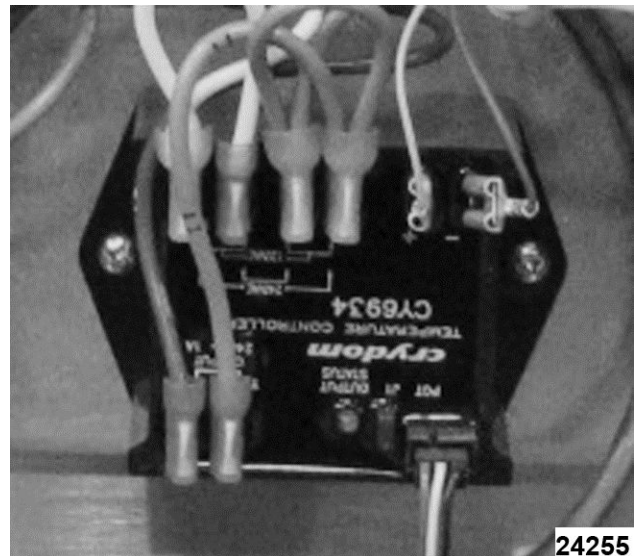


Fig. 8

WATER LEVEL CONTROL



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Remove CONTROL BOX COVER.
2. Disconnect lead wires from the water level control.
3. Remove screws securing the water level control to panel.
4. Reverse procedure to install and check for proper operation.

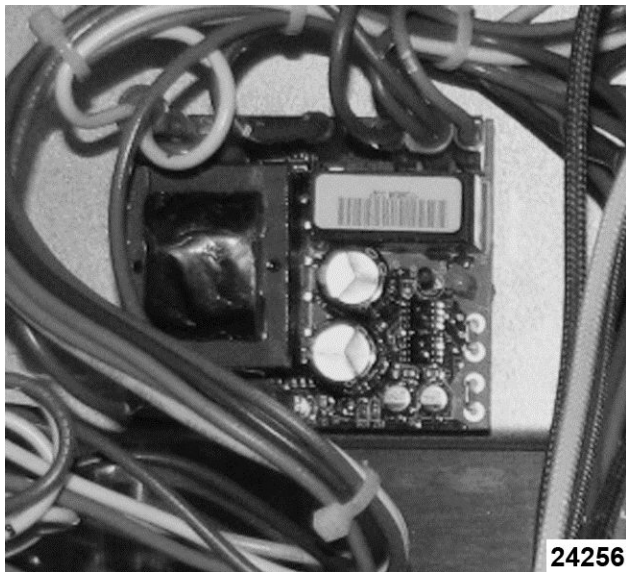


Fig. 9

MAIN TRANSFORMER



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Remove CONTROL BOX COVER.
2. Disconnect lead wires from the transformer.
3. Remove screws securing the transformer to panel.
4. Reverse procedure to install and check for proper operation.

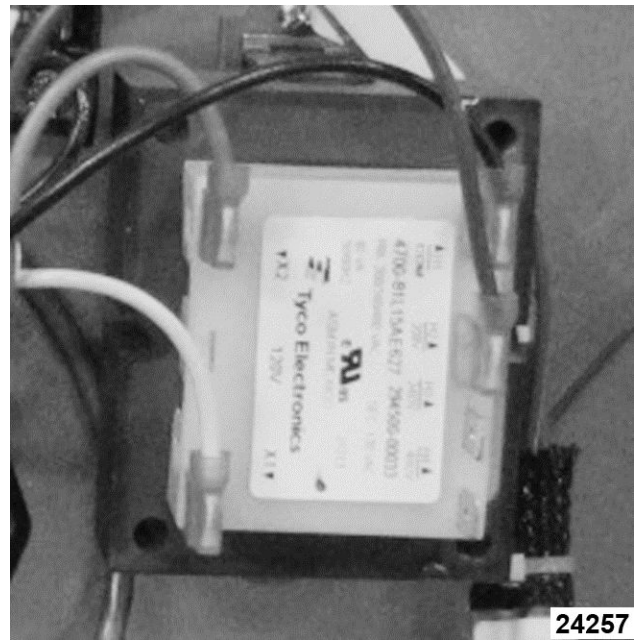


Fig. 10

HEATING ELEMENT



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

TILTING KETTLE

1. Open pressure relief valve until reservoir jacket is completely vented.
2. Remove BOTTOM COVER.
3. Remove wire from water level probe (LLCO).
4. Place a large container under the kettle. Remove water level probe (LLCO) and open the fill valve (40 & 60 gallon kettles) or remove pipe plug from fill elbow (20 gallon kettles) to vent the jacket and drain liquid from kettle.



Fig. 11

NOTE: If liquid drained from kettle is still clean, save for reuse.

5. Remove heater access cover.

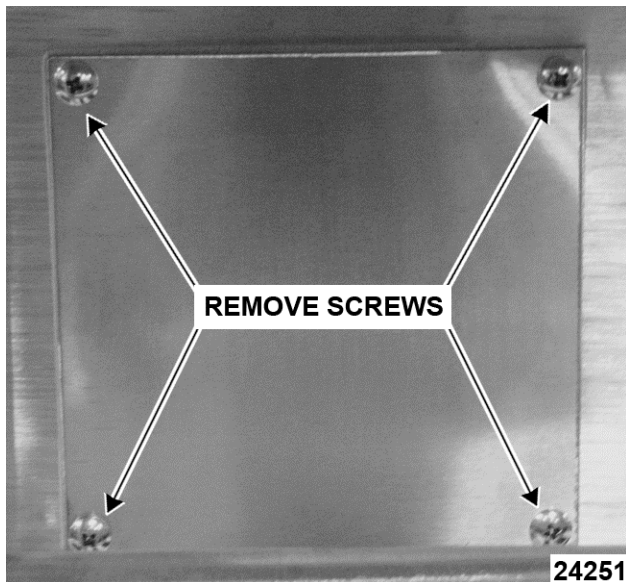


Fig. 12

6. Note lead wire locations and disconnect wires from heating element.
7. Remove mounting bolts securing heating element to kettle.

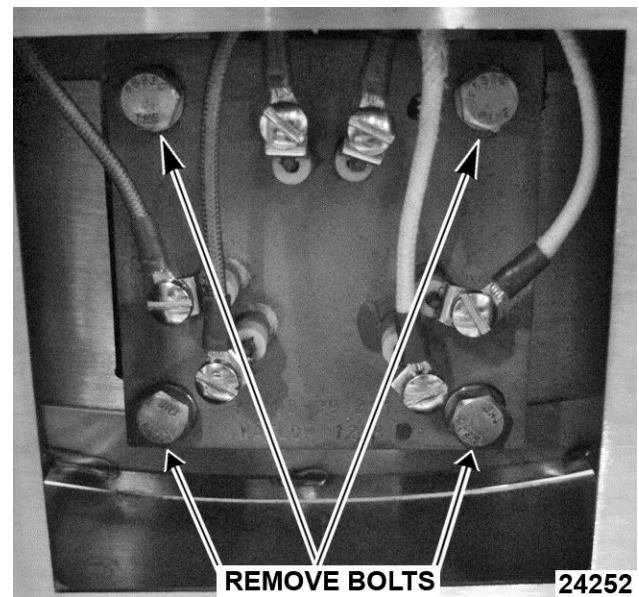


Fig. 13

8. Remove heating element from kettle.
9. Reverse procedure to install. Use a new heating element seal whenever installing heating element. Torque mounting nuts to 40 ft-lbs and tighten in an alternating pattern.
10. Refill jacket with fluid. See FILLING THE RESERVOIR JACKET.
11. Remove air from reservoir jacket as outlined under VENTING.
12. Check for proper operation and leaks around heating element.

STATIONARY KETTLE

1. Open pressure relief valve until reservoir jacket is completely vented.
2. Remove BOTTOM COVER.
3. Remove wire from Water Level Probe (LLCO).
4. Place a large container under the kettle. Remove water level probe (LLCO) and open the fill valve (40 & 60 gallon kettles) or remove pipe plug from fill elbow (20 gallon kettles) to vent the jacket and drain liquid from kettle.



Fig. 14

NOTE: If liquid drained from kettle is still clean, save for reuse.

5. Remove CONTROL BOX COVER.
6. Note lead wire locations and disconnect wires from heating element.
7. Remove mounting nuts securing heating element to kettle.

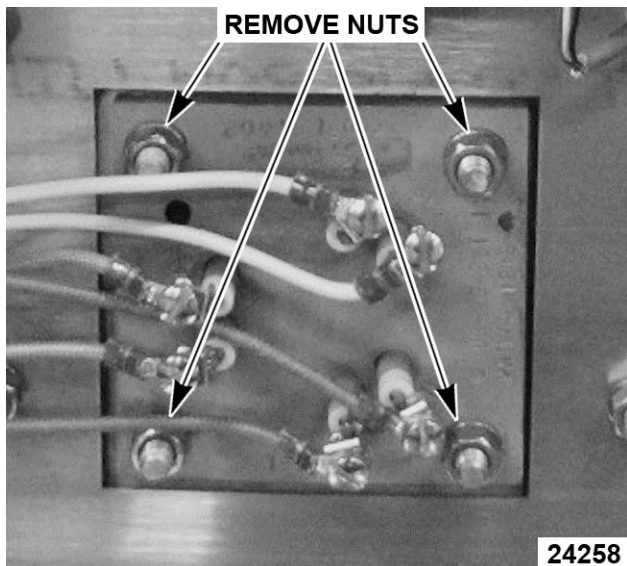


Fig. 15

8. Remove heating element from kettle.
9. Reverse procedure to install. Use a new heating element seal whenever installing heating element. Torque mounting bolts to 40 ft-lbs and tighten in an alternating pattern.

10. Refill jacket with fluid. See FILLING THE RESERVOIR JACKET.

11. Remove air from reservoir jacket as outlined under VENTING.

NOTE: Step 12 is applicable for flange change on production units starting with serial number break 46-3030197.

12. Torque all flange bolts to 38 Ft/Lbs. in 3 passes as shown in Fig. 16.

NOTICE

It is recommended to heat kettle up to boil for one hour. After kettle cools down to -20 to -30 HG and recheck torque to verify 38 Ft/Lbs.

- A. 1st pass 13 ft/lbs.
- B. 2nd pass 26 ft/lbs.
- C. 3rd pass 38 ft/lbs.

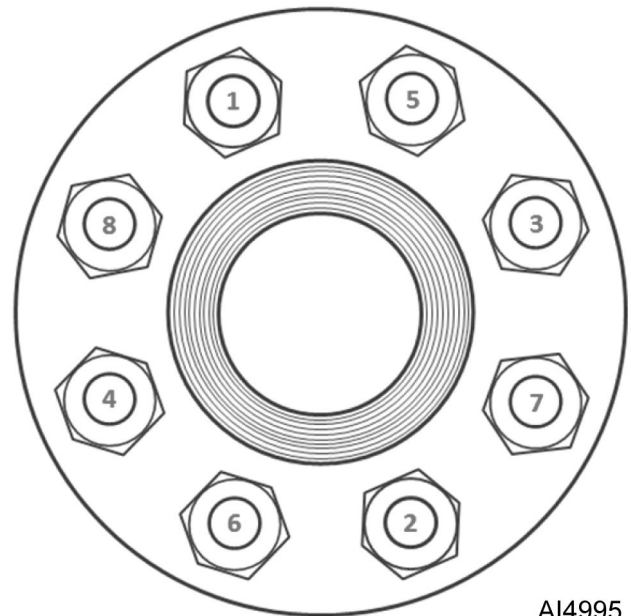


Fig. 16

13. Check for proper operation and leaks around heating element.

WATER LEVEL PROBE (LLCO)



WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Open pressure relief valve until reservoir jacket is completely vented.

2. Remove BOTTOM COVER.
3. Disconnect lead wires from the water level probe .

REMOVE WATER LEVEL PROBE

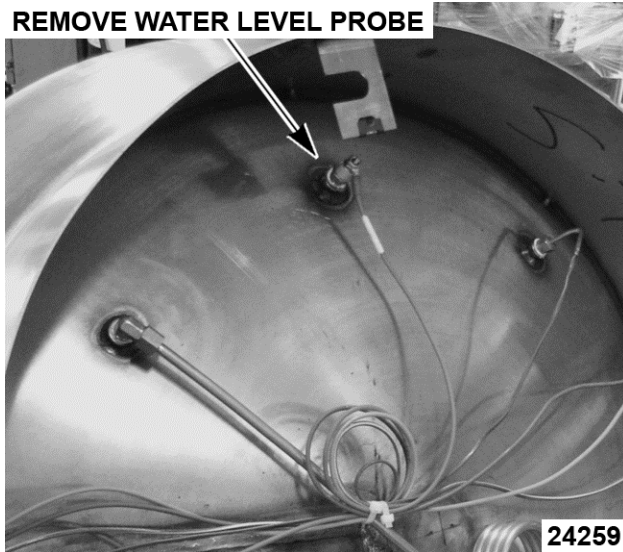


Fig. 17

4. Place a large container under kettle to catch liquid that drains from kettle.

NOTE: If liquid drained from kettle is still clean, save for reuse.

5. Remove component from bottom of kettle.
6. Reverse procedure to install.

NOTE: Clean threads and apply pipe thread sealant when replacing water level probe.

7. Refill jacket with fluid. See FILLING THE RESERVOIR JACKET.
8. Remove air from reservoir jacket as outlined under VENTING.
9. Check for proper operation.

TEMPERATURE SENSOR



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Open pressure relief valve until reservoir jacket is completely vented.
2. Remove BOTTOM COVER.
3. Place a large container under the kettle to catch liquid that drains from kettle.

NOTE: If liquid drained from kettle is still clean, save for reuse.

4. Remove component from bottom of kettle.

REMOVE TEMPERATURE SENSOR

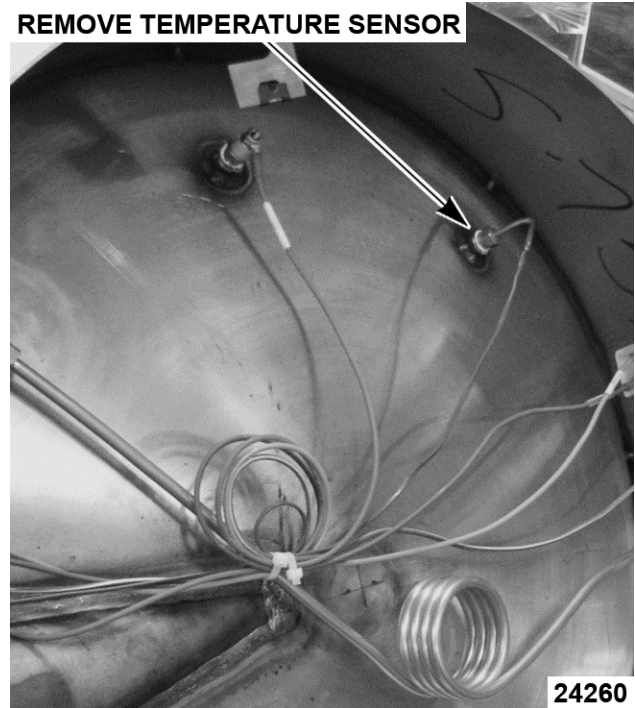


Fig. 18

5. Reverse procedure to install.

NOTE: Clean threads and apply pipe thread sealant when replacing temperature sensor.

6. Refill jacket with fluid. See FILLING THE RESERVOIR JACKET.
7. Remove air from reservoir jacket as outlined under VENTING.
8. Check for proper operation.

PRESSURE SWITCH



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Open pressure relief valve until reservoir jacket is completely vented.
2. Remove BOTTOM COVER.
3. Disconnect lead wires from the pressure switch.
4. Place a large container under the kettle to catch liquid that drains from kettle.

NOTE: If liquid drained from kettle is still clean, save for reuse.

5. Disconnect compression fitting from elbow near the pressure switch.
6. Remove top nut on brass fitting to remove pressure switch from mounting bracket.
7. Remove component from bottom of kettle.

REMOVE WIRING

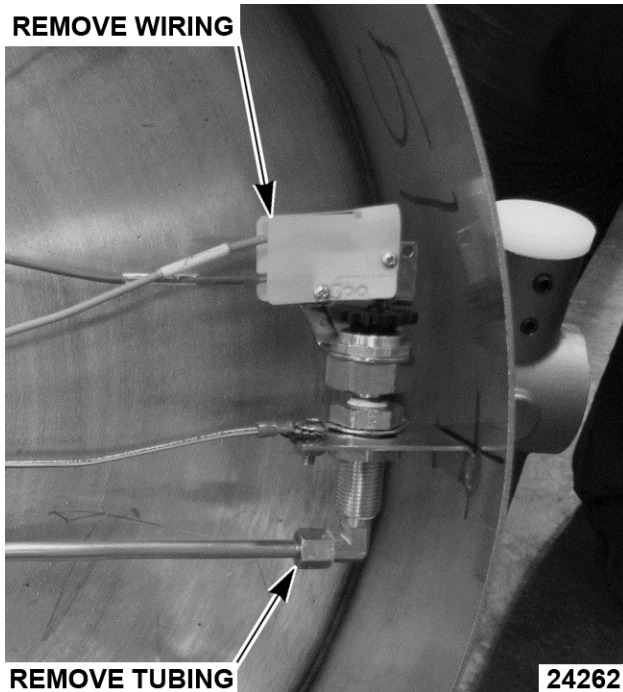


Fig. 19

8. Reverse procedure to install.

NOTE: Pressure switch setting is fixed and should not be adjusted. Clean threads and apply pipe thread sealant when replacing pressure switch.

9. Refill jacket with fluid. See FILLING THE RESERVOIR JACKET.
10. Remove air from reservoir jacket as outlined under VENTING.
11. Check for proper operation.

POTENTIOMETER



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Remove CONTROL BOX COVER.
2. Disconnect potentiometer wire from temperature control.

3. Pull temperature dial from potentiometer shaft and remove seal nut.

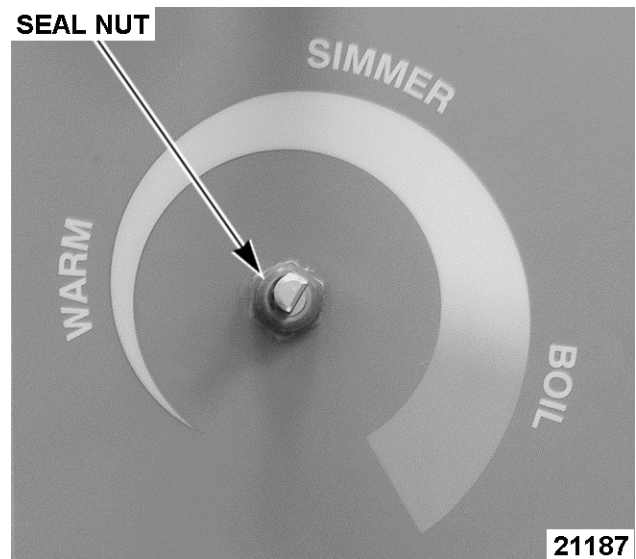


Fig. 20

4. Remove potentiometer from control panel.
5. Reverse procedure to install and check for proper operation.

NOTE: When installing, ensure potentiometer alignment tab is seated in positioning bracket.

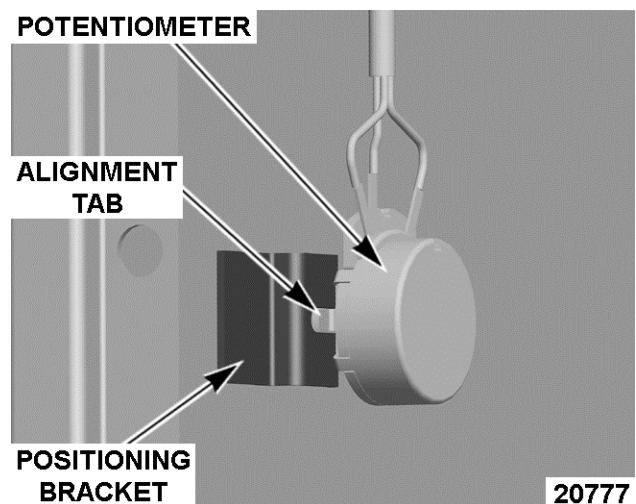


Fig. 21

SWITCH ASSEMBLY



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Remove CONTROL BOX COVER.

2. Note lead wire location and disconnect wires from switch.
3. Press down on tabs to free switch from housing.

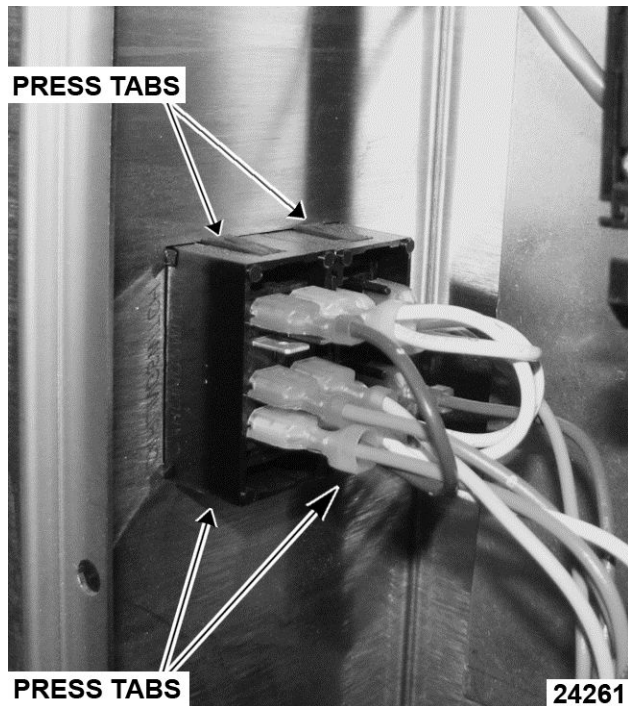


Fig. 22

4. Reverse procedure to install.

GEARBOX (TILT MODELS ONLY)



WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Place a pallet jack under the kettle of the unit.

NOTE: Place pallet jack under kettle and not under the tubular frame.

NOTE: Place 2x4 or 4x4s on the pallet jack if needed to reach the bottom of the kettle.

2. Remove CONTROL BOX COVER.
3. Note location of wiring and remove element, pressure switch wires and unplug the sensor plug.

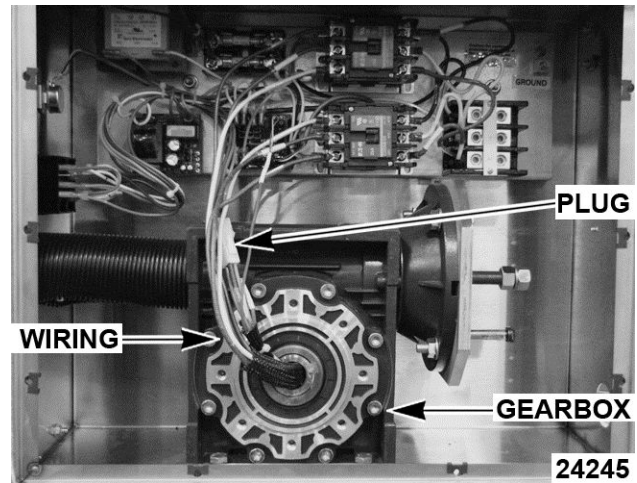


Fig. 23

4. Remove the four bolts holding the gearbox to the component box.
5. Lift the kettle just high enough to slide the gearbox off of the shaft and clear the component box lip.

NOTE: Be careful not to damage the wiring as you remove gearbox from shaft.

6. Remove the positive stop plate assembly from the old gearbox and install it on the new one.

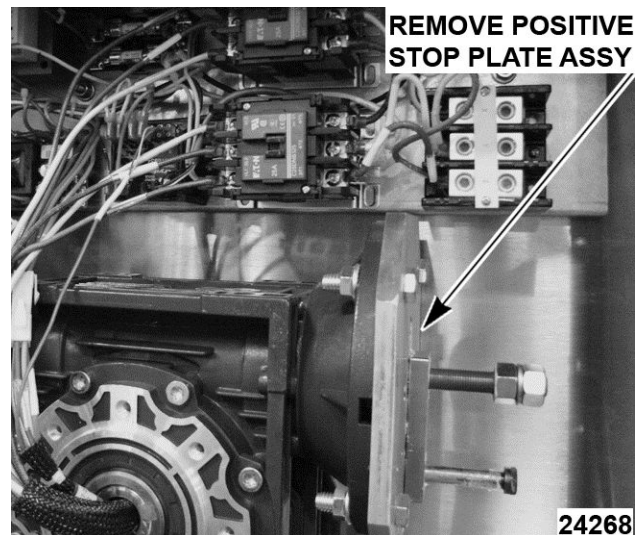


Fig. 24

7. Install new gearbox in kettle.
8. Lower the gearbox until it touches component box housing.

NOTE: Only lower the gearbox enough to align the holes and bolt the gearbox down.

9. Lower the kettle and remove pallet jack.
10. Connect the wiring.
11. Check operation of kettle.

TILT BEARING



⚠ WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

1. Place pallet jack under kettle.

NOTE: Make sure pallet jack is under kettle and not under the tubular frame.

NOTE: Place 2x4 or 4x4s on the pallet jack if needed to obtain the proper height.

2. Loosen set screws on bearing assembly.



Fig. 25

3. Lift kettle high enough to pull bearing assembly off of stand.
4. Slide bearing assembly off of kettle shaft.
5. Reverse procedure to install new bearing assembly.

SERVICE PROCEDURES AND ADJUSTMENTS

⚠ WARNING

Certain procedures in this section require electrical test or measurements while power is applied to the machine. Exercise extreme caution at all times. If test points are not easily accessible, disconnect power and follow lockout / tagout procedures, attach test equipment and reapply power to the test.

TEMPERATURE CONTROLLER TEST

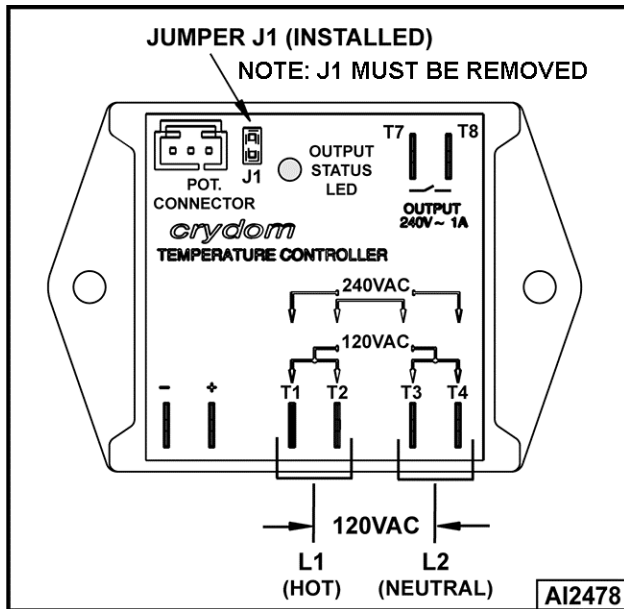


Fig. 26

1. Place kettle in full upright position. (tilt kettles only)
2. Set temperature dial to lowest setting. Kettle must be below 110°F before verifying the potentiometer output to the controller is good over the full range of temperature dial travel.
3. Access TEMPERATURE CONTROLLER.
4. Check all lead wires for secure connections to the controller terminals. Wiring harness lead wires must be connected to T1-T2 and T3-T4 for proper input to controller.
5. Re-connect power to the machine.
6. Turn power switch on.
7. Verify temperature controller is receiving 120VAC at terminals T1-T3 and T2-T4 and machine is properly grounded.
8. Slowly turn temperature dial to the highest setting and monitor heat light over the full range of travel.
 - A. Verify heat light (amber) comes on and heating element is energized.
 - B. If heat light does not remain on or flashes momentarily as temperature setting is slowly increased, verify condition of potentiometer as outlined under POTENTIOMETER TEST.
 - C. If heat light and heating element do not turn on.
 - 1) Verify condition of thermocouple as outlined under THERMOCOUPLE TEST.
 - 2) Verify output from terminal T8 on controller as outlined in the steps below.
9. Disconnect lead wire from terminal T7 on the controller.
 - A. Verify 120VAC between lead wire from T7 and X1 on the output of main transformer. If correct, re-connect lead wire to terminal T7 and continue with procedure.
 - B. If incorrect, check pressure switch (1PS) and water level controller (WLC LLCO).
10. Verify 120VAC between T8 and X1 on the output of main transformer. If correct, output from controller is functioning properly.
 - A. If incorrect, install a replacement temperature controller and check for proper operation.

POTENTIOMETER TEST

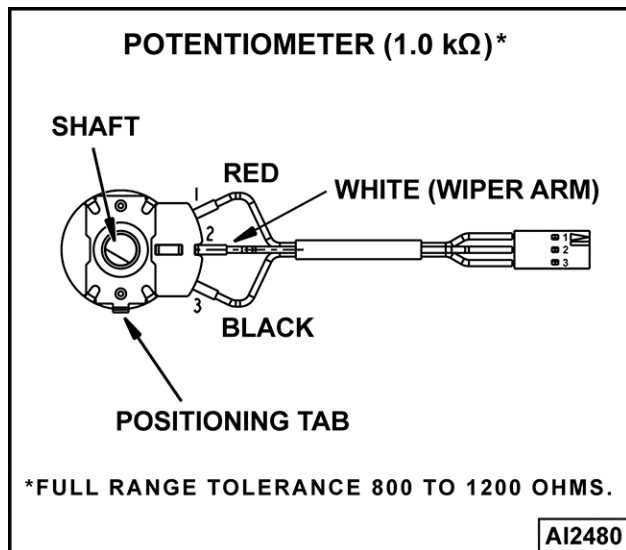


Fig. 27

1. Remove POTENTIOMETER.
2. Turn potentiometer shaft fully counterclockwise to the lowest setting.
3. Set VOM to measure resistance.
4. Connect meter leads to the white and black lead wires on potentiometer terminals.
 - A. Resistance should measure approximately zero ohms.
5. Slowly turn potentiometer shaft clockwise over the full range of travel and monitor resistance change on the meter.
 - A. Resistance should measure 800 to 1200 ohms with shaft turned fully clockwise.
 - B. If the resistance value increased smoothly without sudden drops or spikes and the full travel resistance value is within tolerance then potentiometer is functioning properly.
 - C. If the resistance value did not increase smoothly but had drops or spikes over the full travel range then potentiometer is not functioning properly. Install a replacement potentiometer and check for proper operation.

THERMOCOUPLE TEST

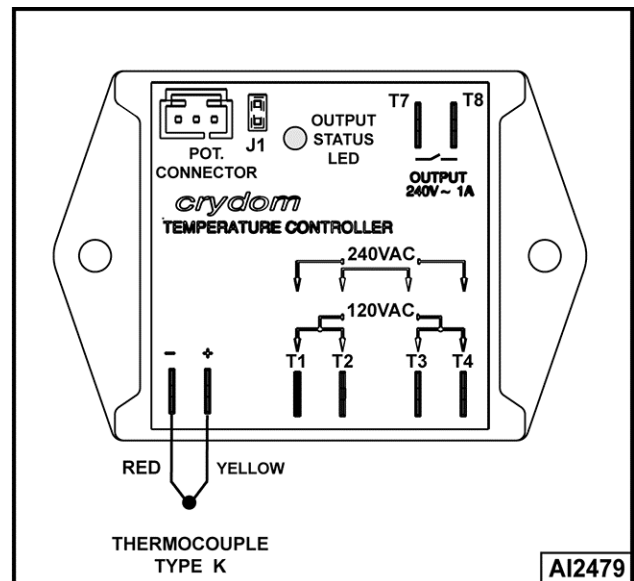
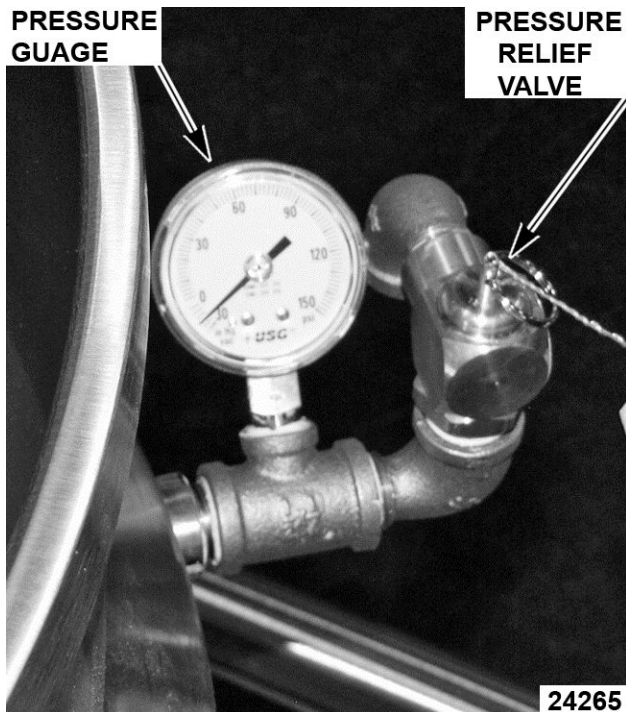


Fig. 28

1. Access TEMPERATURE CONTROLLER.
2. Remove thermocouple lead wires from temperature controller.
3. Check thermocouple for a measurable resistance (approximately 5 to 10 ohms at room temperature). If meter reads an overload (OL) condition (open), or zero ohms (short) replace the thermocouple and check temperature controller for proper operation.

VENTING

NOTE: This procedure outlines venting the reservoir jacket to remove air for proper heat transfer to the kettle contents.

**Fig. 29**

1. With the kettle at room temperature, verify pressure gauge is in the vacuum zone and reading 25 to 30 in. Hg.
 - A. If vacuum is below minimum listed, air must be removed from reservoir jacket. Continue with procedure to vent as necessary.
2. Place kettle in full upright position.
3. Turn power switch on.
4. Set temperature dial to highest setting. Allow kettle to heat until the heat indicator light turns off.
5. Open pressure relief valve for approximately 10 seconds.
6. Turn power switch off and allow kettle to cool (room temperature).
7. Verify pressure gauge reading is within the correct vacuum range.
 - A. If reading is below minimum listed or will not maintain proper vacuum, check all threaded fittings extending from the kettle couplings (right and rear) for leaks and tightness.
 - 1) Check pressure relief valve for leaks from poor valve seating or built up debris. Manually operate the valve several times to reseal. Repeat venting procedure.
 - 2) If pressure relief valve is malfunctioning, install a replacement and check for proper operation.

FILLING THE RESERVOIR JACKET


NOTE: The reservoir water level must be maintained high enough to submerge the heating element. If low water light comes on during use, the level may be below water level probe (LLCO) and must be replenished before heating can continue. The low water light will come on when kettle is tilted (tilt models only).


NOTICE

When filling reservoir jacket, use only distilled water and heat transfer fluid. The ratio is 75% distilled water and the 25% heat transfer fluid.

Partial Refill

1. Place kettle in full upright position. (tilt kettle only)
2. Turn power switch on. If low water light is on, continue with procedure.
3. Set temperature dial to lowest setting.
4. Open pressure relief valve until reservoir jacket is completely vented.
5. Remove 1/2" pipe plug from the reservoir jacket fill elbow at back of kettle. Open fill valve. (40 and 60 gallon kettles only)

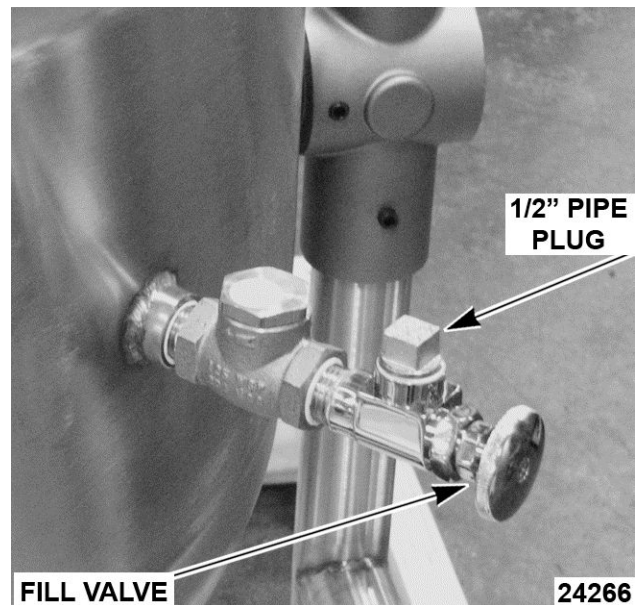**K40EL/K40ELT and K60EL/K60ELT**

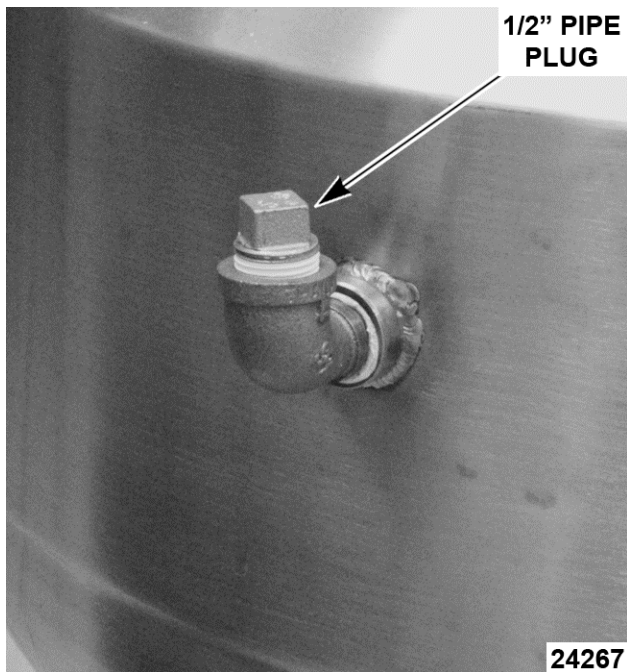**K20ELT, K20ELT**

- A. Insert funnel into the opening and slowly add a mixture of water and heat transfer fluid until low water light turns off (LLCO probe is satisfied).
- B. Set the thermostat and power switch to OFF position.
- C. Continue adding a mixture of water and heat transfer fluid to bring fluid to the proper operating level per the amount listed in table below.

Model	Add Fluid for Proper Operating Level (Qt)
K20EL / K20ELT	2.25
K40EL / K40ELT	2.50
K60EL / K60ELT	3.125

6. Clean pipe plug threads and apply thread sealant. Install pipe plug and tighten to prevent leaks. Close fill valve. (40 and 60 gallon kettles only)
7. Turn power switch on and verify low water light is off. If low water light is on, there may be a problem with the water level control circuit. See troubleshooting.
8. Remove air from reservoir jacket as outlined under VENTING.
9. Check kettle for proper operation.

Complete Draining and Refill**⚠ WARNING**

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

NOTE: Appearance of fluid will no longer be clear after usage in kettle.

1. Disconnect power supply and set temperature dial to lowest setting.
2. Open pressure relief valve until reservoir jacket is completely vented.
3. Remove BOTTOM COVER.
4. Place a large container under kettle to catch liquid.
5. Remove WATER LEVEL PROBE (LLCO).
6. Remove 1/2" pipe plug from reservoir jacket fill elbow (rear of kettle) to facilitate draining and provide opening for re-fill. (Open fill valve on 40 and 60 gallon kettles)

NOTE: Clean threads and apply sealant before reinstalling pipe fittings.

7. Re-install water level probe.
8. To Refill.
 - A. Remove pressure gauge to allow reservoir jacket to vent during fill procedure.
 - B. Insert funnel into the reservoir jacket fill elbow. Slowly fill the jacket according to the volumes listed in the table below.

RESERVOIR JACKET VOLUME			
Model	Total Fluid Volume (Qt)	Water (Qt)	Heat Transfer Fluid (Qt)
K20EL/ K20ELT	12.0	8.0	4.0
K40EL/ K40ELT	18.0	12.0	6.0
K60EL/ K60ELT	21.0	14.0	7.0

9. Install pipe plug and pressure gauge. Tighten to prevent leaks.
10. Reapply power and turn power switch on and verify low water light is off. If low water light is on, there may be a problem with the water level control circuit. See troubleshooting.
11. Remove air from reservoir jacket as outlined under VENTING.

12. Check kettle for proper operation and leaks.
13. Install covers.

HEATING ELEMENT

1. Access HEATING ELEMENT.
2. Measure voltage at heating element terminals and verify it against the data plate voltage.
 - A. If voltage is incorrect, find the source of the problem.

3. If voltage is correct, check current draw (amps) through the heating element lead wires. If current draw is correct then heating element is ok. See table below for proper values.

NOTE: Checking current draw is the preferred method over a resistance check when an amp clamp meter is available.

- A. If current draw is not correct then, replace heating element.

4. Check for proper operation.

MODEL	VOLTAGE	KW PER ELEMENT	CURRENT PER ELEMENT	RESISTANCE PER ELEMENT (OHMS)
K20EL/K20ELT	208	4	19.2	10.8
	240	16	22.2	10.8
	480	12	14.4	19.2
K40EL/K40ELT	208	6	28.8	7.2
	240	6	25.0	9.6
	480	6	21.7	12.8
K60EL/K60ELT	208	8	38.5	5.4
	240	8	33.3	7.2
	480	8	28.9	6.0

NOTE: Values in table are nominal. Tolerance is $\pm 10\%$.


KETTLE TILT ADJUSTMENT (TILT MODELS ONLY)

NOTE: Perform this procedure whenever the kettle is not returning to a horizontal position when upright, or when kettle is not tilting past 90° to empty contents.

1. With kettle fully upright, the top of kettle should be horizontal when viewed from either side.
2. Turn crank handle clockwise to tilt the kettle until it stops. Kettle should be tilted past 90° to allow contents to drain.
3. If adjustment is necessary, continue with procedure.
4. Remove CONTROL BOX COVER.
5. Return kettle to fully upright position.
 - A. The inner jam nut should be in solid contact with positive stop traveller.
 - B. To adjust upright position (horizontal):


- 1) Loosen outer jam nut 2 to 3 turns counterclockwise and turn the inner jam nut in the same direction and amount.
- 2) Turn crank handle to position the top of kettle horizontally.
- 3) Turn inner jam nut clockwise until it stops against the positive stop traveller. Tighten outer jam nut to secure the stop position.

- C. Turn crank handle to verify operation. Repeat adjustment as necessary.

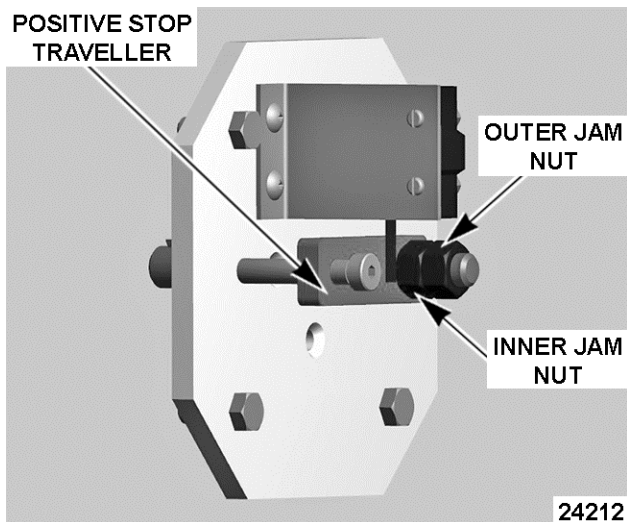

Kettle Fully Upright - Traveller Contacts Inner Jam Nut

6. Fully tilt the kettle until crank handle stops.
 - A. Verify positive stop traveller is in solid contact with stop plate.
 - B. To adjust fully tilted position:
 - 1) Remove shoulder screw from stop plate.
 - 2) Remove tilt switch bracket from stop plate.

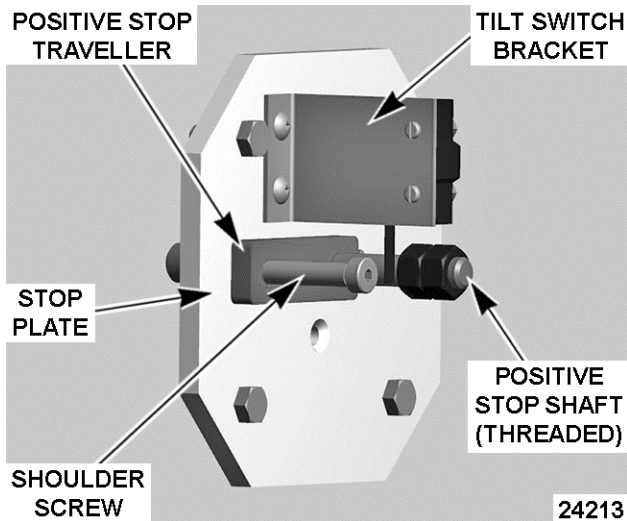

Kettle Fully Tilted - Traveller Contacts Stop Plate

- 3) Turn crank handle clockwise to tilt the kettle and empty its contents. Kettle should be tilted approximately 95° to 100°.
- 4) Turn positive stop traveller on the positive stop shaft (threaded) until it contacts the stop plate.


- 5) Adjust position of positive stop traveller as needed to align the shoulder screw mounting hole to the threaded hole in stop plate. Install shoulder screw.
 - 6) Turn crank handle to verify operation. Repeat adjustment as necessary.
 - 7) Install tilt switch bracket.
7. Install control panel cover.

ELECTRICAL OPERATION

COMPONENT FUNCTION


Water Level Control (WLC LLCO)	Low water level control. Monitors condition of the WLC LLCO water level probe. Protects kettle from a low water condition in the reservoir jacket and removes power from heating circuit when kettle is tilted.
Probe, Water Level (LLCO)	Low Level Cut-Off (LLCO) probe connected to WLC (LLCO). Controls power to heating circuit.
Contactors (1CON) Limiting	Connects one side of heating element to power. Energized whenever WLC (LLCO) coil is energized (WLC LLCO contacts closed).
Contactors (2CON) Regulating	Connects heating element to power. On constantly when temperature controller is calling for heat (temperature controller contacts closed).
Element, Heating	Heats reservoir jacket fluid. The heat in the fluid is then transferred to kettle.
Fuse, (1FU & 2FU)	Slow blow 3A fuse. Located on primary side of main transformer (1T). Protects control circuitry from over-currents.
Switch (1PAS), Pressure	Pressure cut-out protection for the reservoir jacket. Range is between 38 to 42 PSI. Removes power from control circuit if pressure in the jacket rises above switch setting.
Transformer (1T), Main	Step down transformer from line voltage to 120VAC control circuit voltage.
Switch (1S), Power ...	Controls 120VAC to kettle control circuit
Temperature Controller	Cycles power to regulating contactor (2CON) to maintain the set point temperature. An external set point potentiometer is used for temperature adjustments.
Lamp (1LT), Power ...	Amber (AM) colored lamp. On when power switch is on.
Lamp (2LT), Low Water	Red (RD) colored lamp. On when water level in the reservoir jacket drops below water level (LLCO) probe or when kettle is tilted (tilting models only).
Lamp (3LT), Heat	Amber (AM) colored lamp. On when temperature controller is calling for heat.

COMPONENT LOCATION

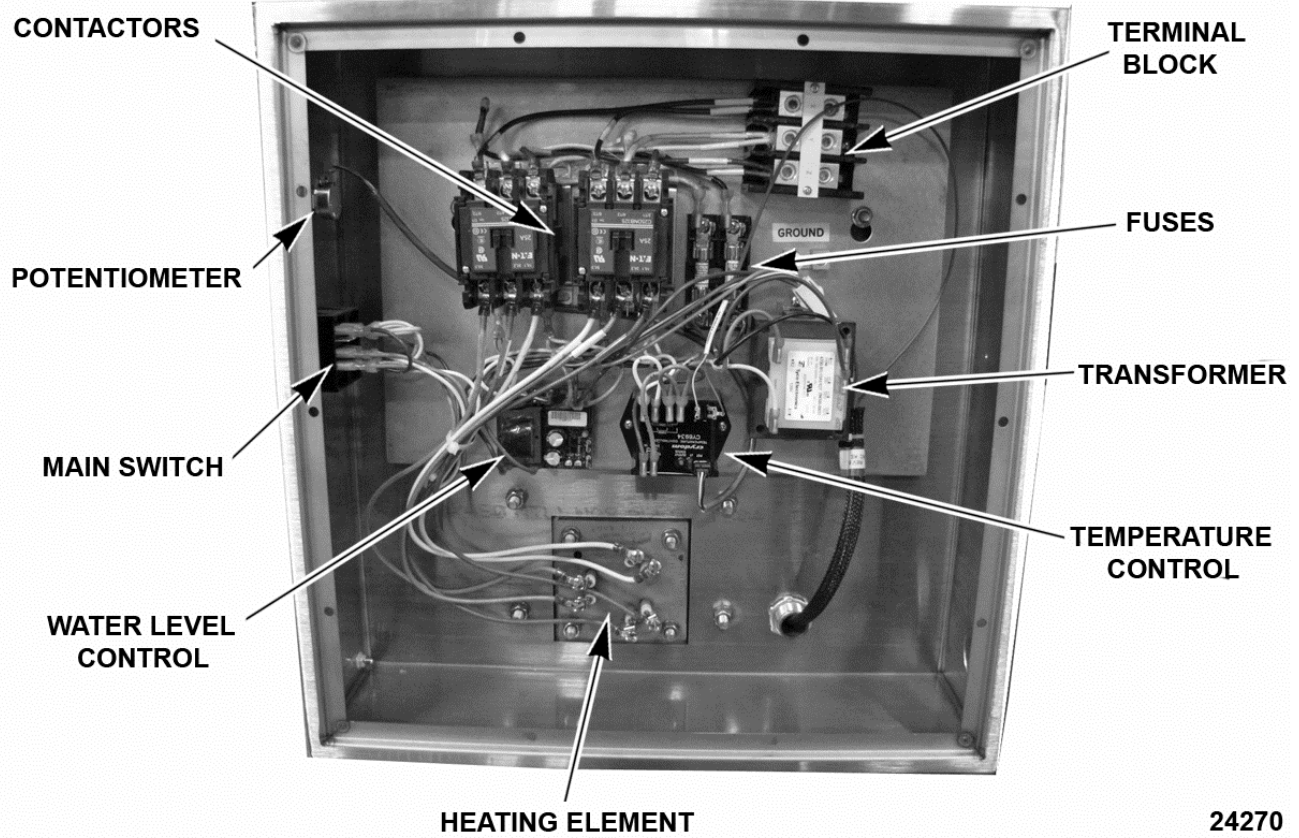


24270

STATIONARY KETTLE COMPONENTS

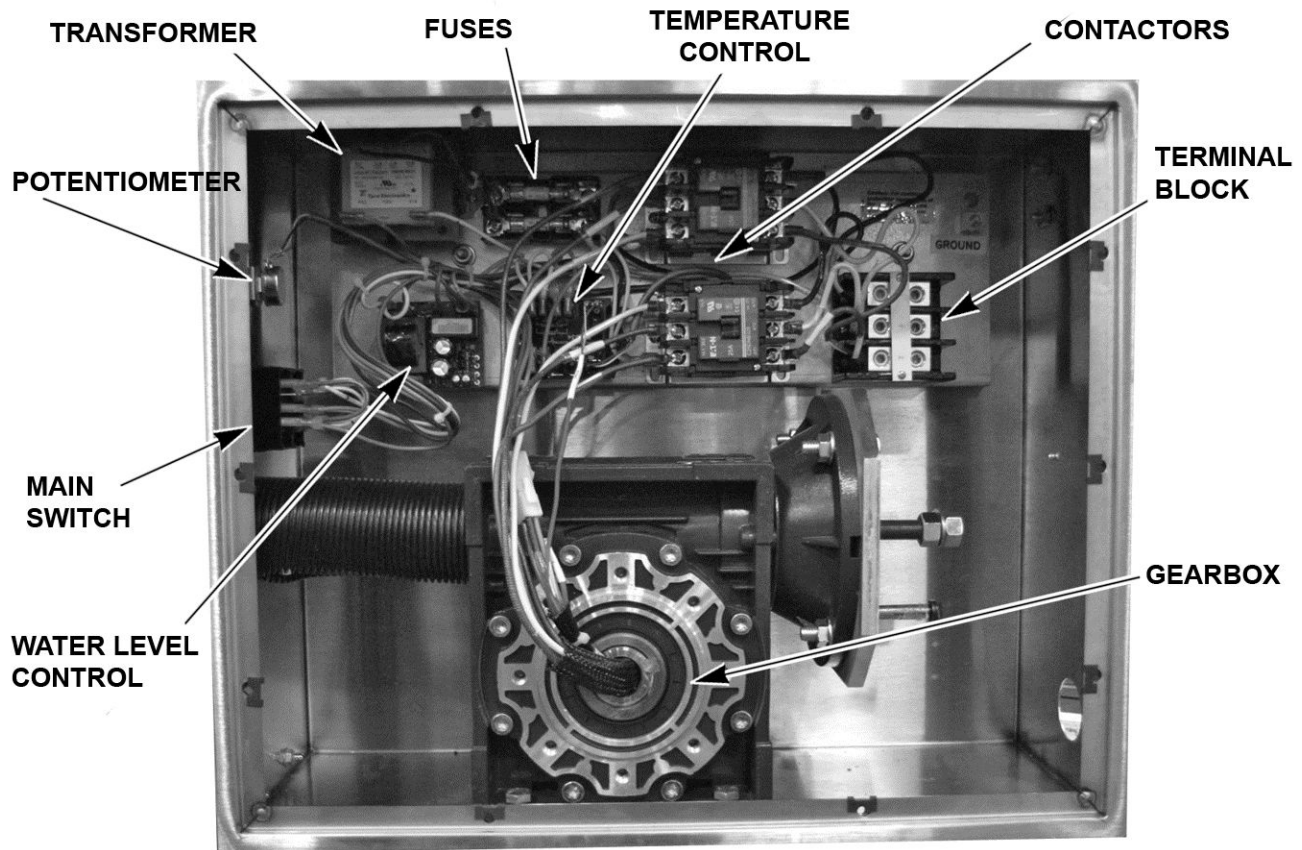

24271

TILTING KETTLE COMPONENTS

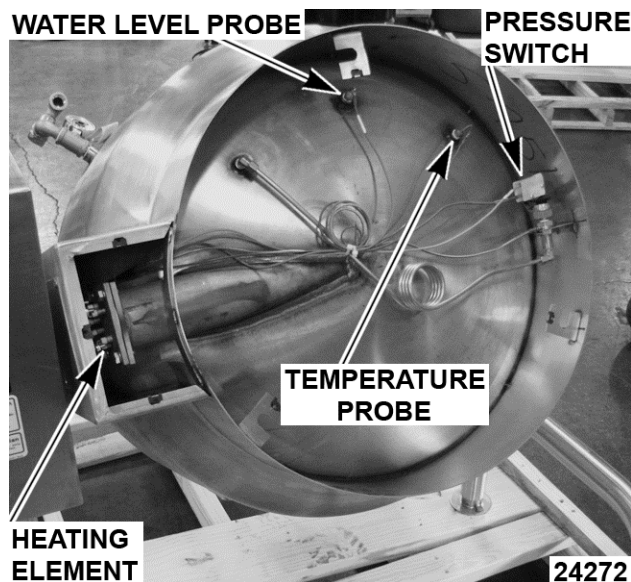

24272

STATIONARY AND TILTING KETTLE BOTTOM COMPONENTS

WATER LEVEL CONTROL (WLC LLCO)

The water level control provides low level cut-off protection to shut off the heat source in case the fluid

level in the kettle reservoir jacket drops below the WLC LLCO probe. A single low level cut-off probe (LLCO) is connected to the control.

The water level control has input voltage of 120VAC across terminals L1 and L2 which powers the primary side of the transformer on the board. One side of the

- 1) LLCO LED comes on.
- B. WLC LLCO N.C. contacts open. Low water light (2LT) (red) remains off.
- C. WLC LLCO N.O. contacts close.
 - 1) Limiting contactor (1CON) energized (power to one side of heating elements).
 - 2) Power to temperature controller.
4. Set the temperature dial to call for heat (warm/simmer/boil).
 - A. 120VAC output from T8 on temperature controller.
 - 1) Heat light (3LT) (amber) comes on.
 - 2) Regulating contactor (2CON) energized and heating elements are powered.
5. Kettle reaches set point temperature.
 - A. Voltage output removed from T8 on temperature controller.
 - 1) Heat light (3LT) (amber) goes out.
- 2) Regulating contactor (2CON) de-energized and power is removed from heating elements.
6. Kettle heat cycles with the temperature controller.
7. Kettle tilted to empty contents.
 - A. WLC LLCO probe no longer satisfied (fluid in kettle reservoir jacket not in contact with probe). Water level control (WLC) LLCO relay de-energized.
 - 1) LLCO LED turns off.
 - B. WLC (LLCO) N.C. contacts close and low water light (2LT) (red) comes on.
 - C. WLC (LLCO) N.O. contacts open and power is removed from heating circuit.
8. Kettle returned to upright position. Water level control (WLC) circuit returns to normal operation and heating cycle resumes. Kettle heating will continue to cycle with the temperature controller until the temperature dial is turned fully CCW or power switch is turned OFF.

SCHEMATIC DIAGRAM

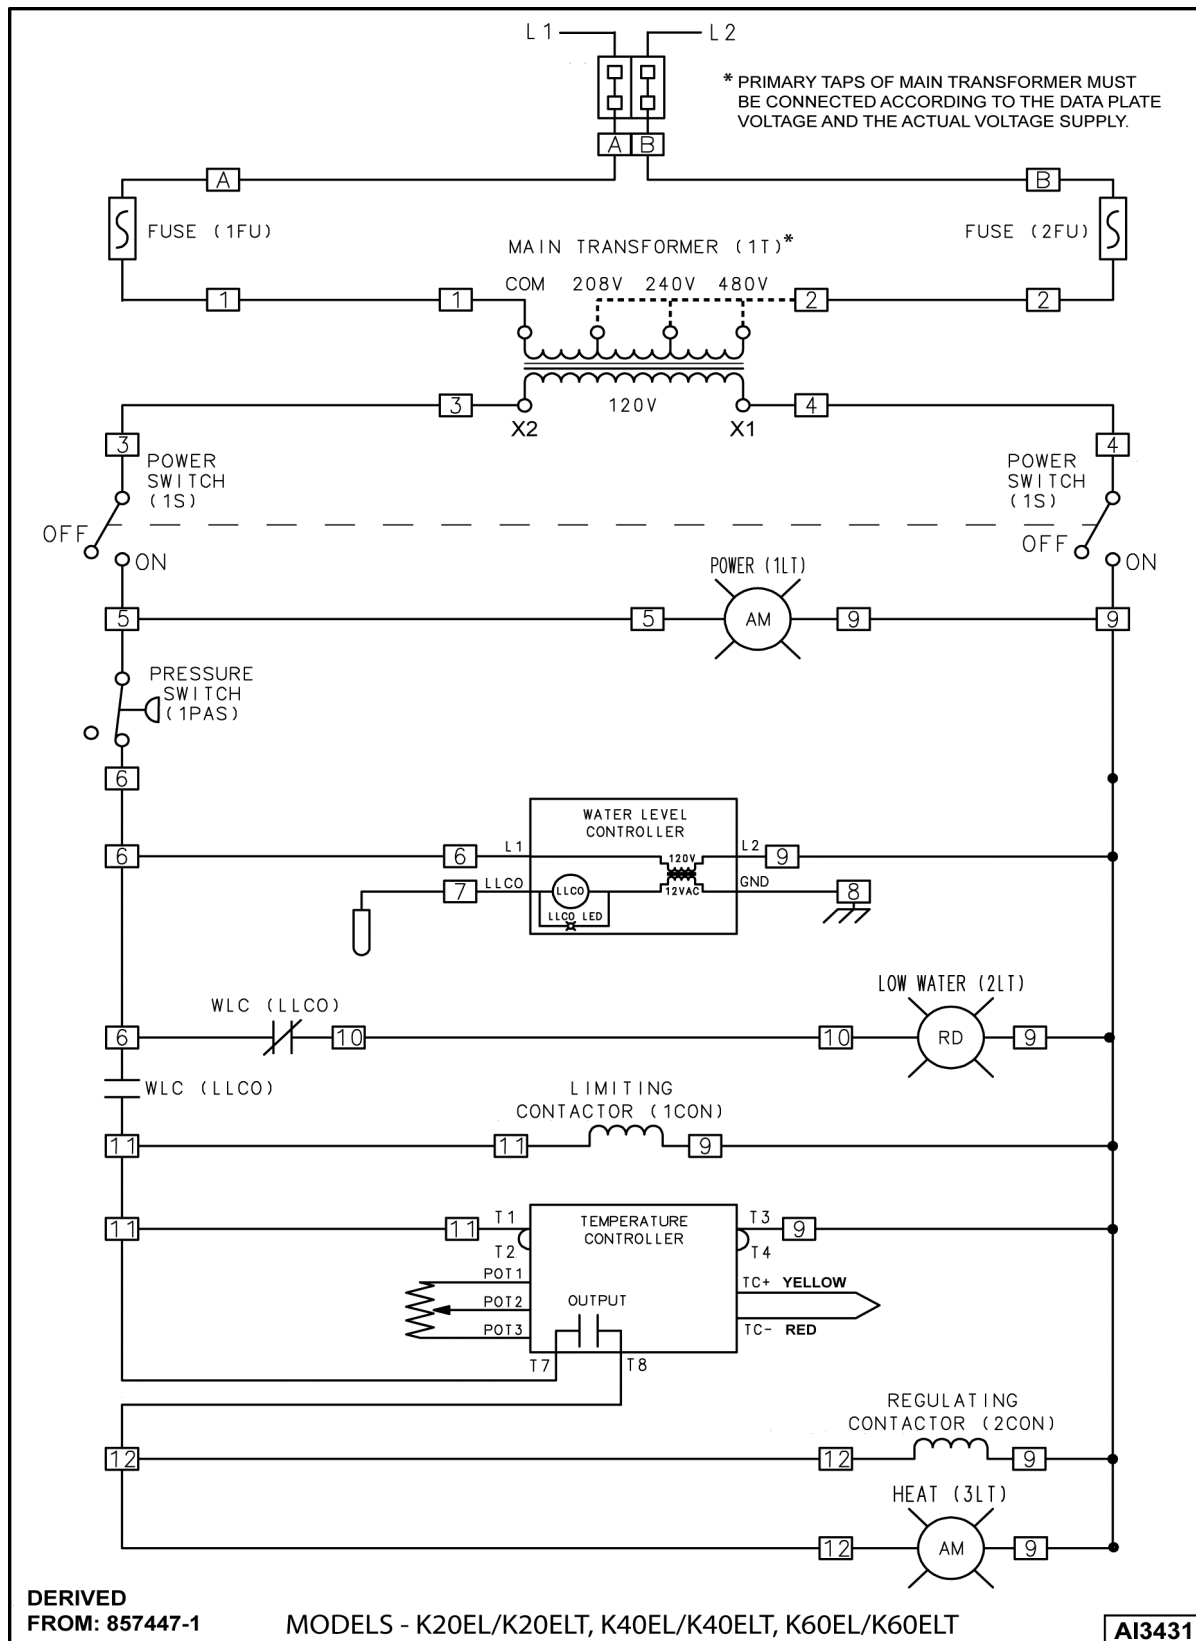


Fig. 39

WIRING DIAGRAMS



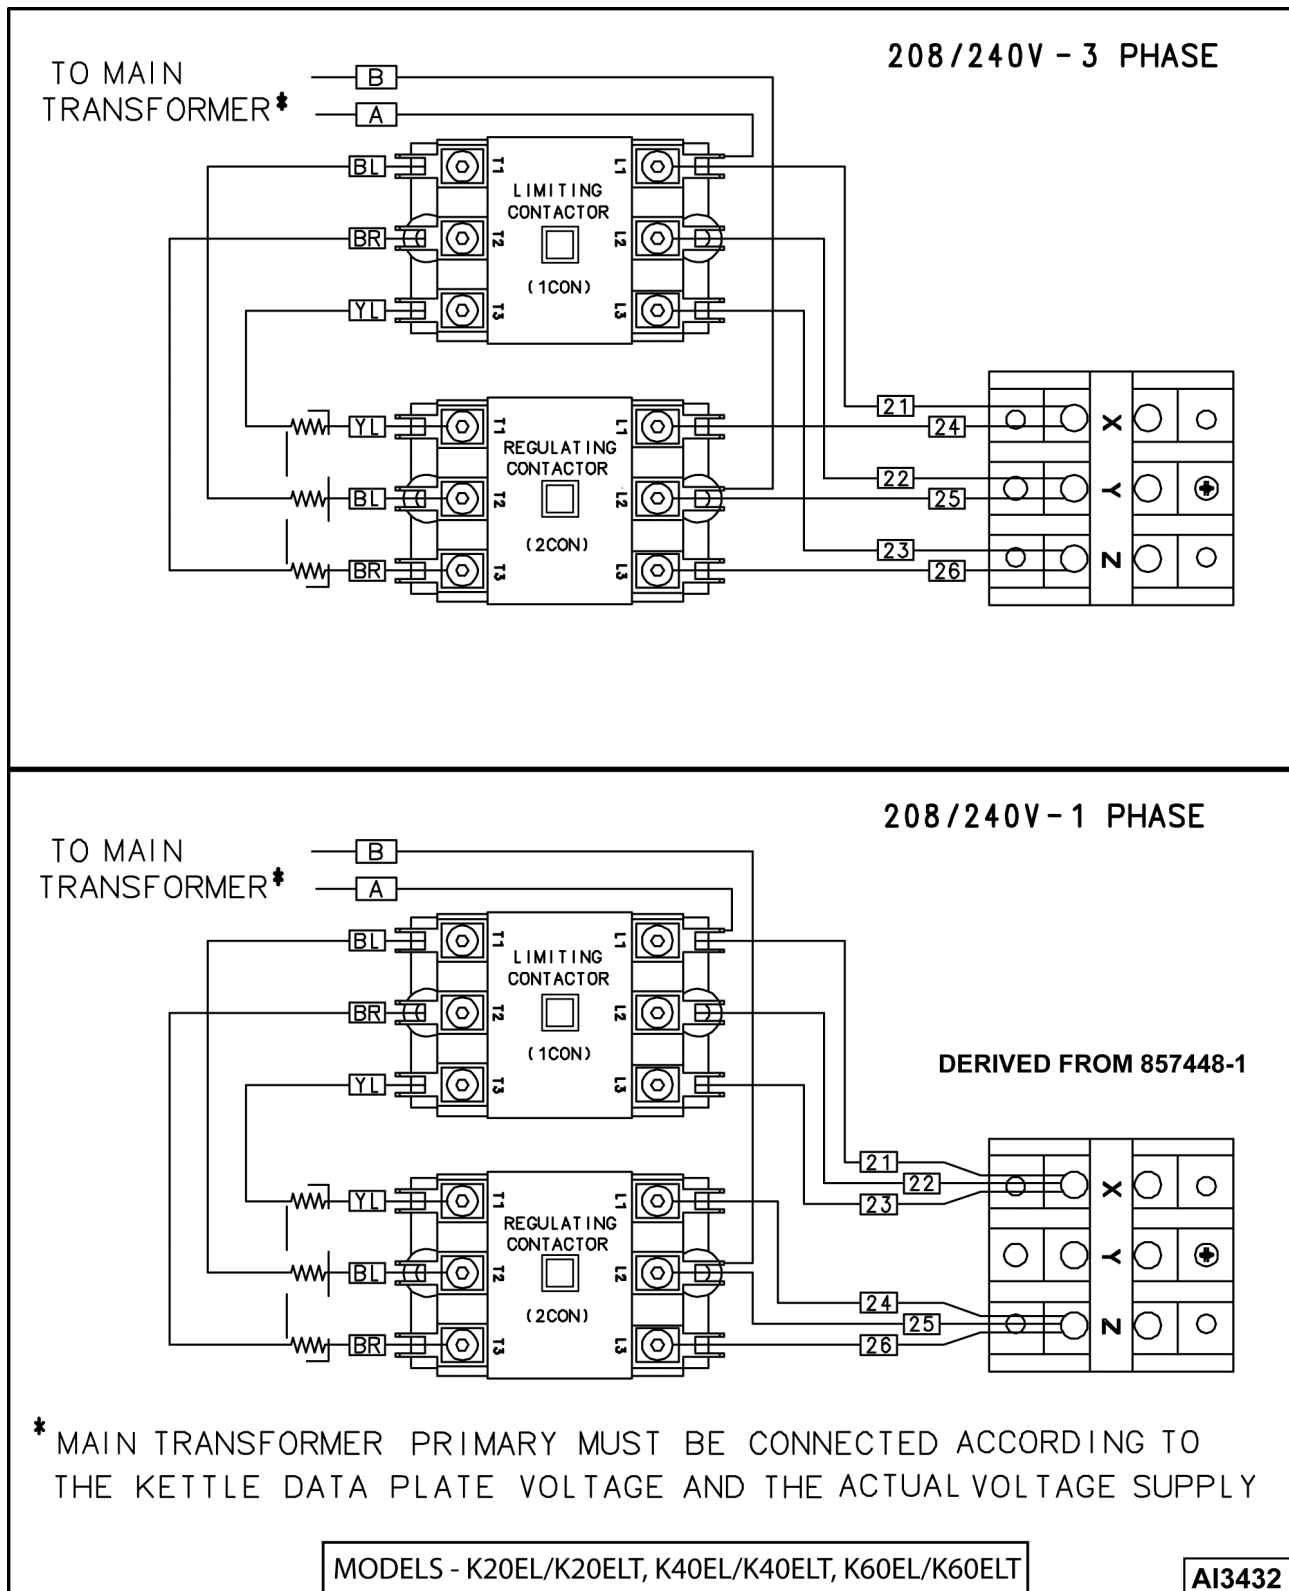


Fig. 40

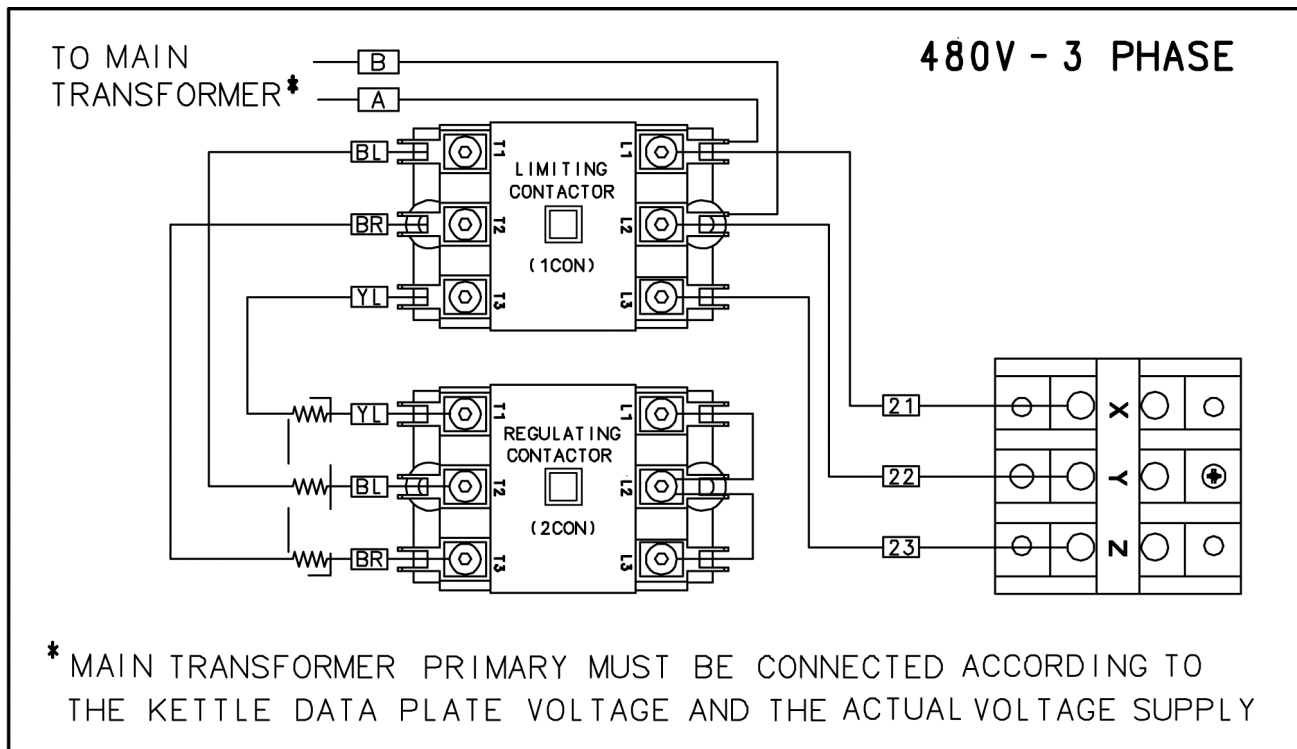

WIRING DIAGRAM 3-PH WYE

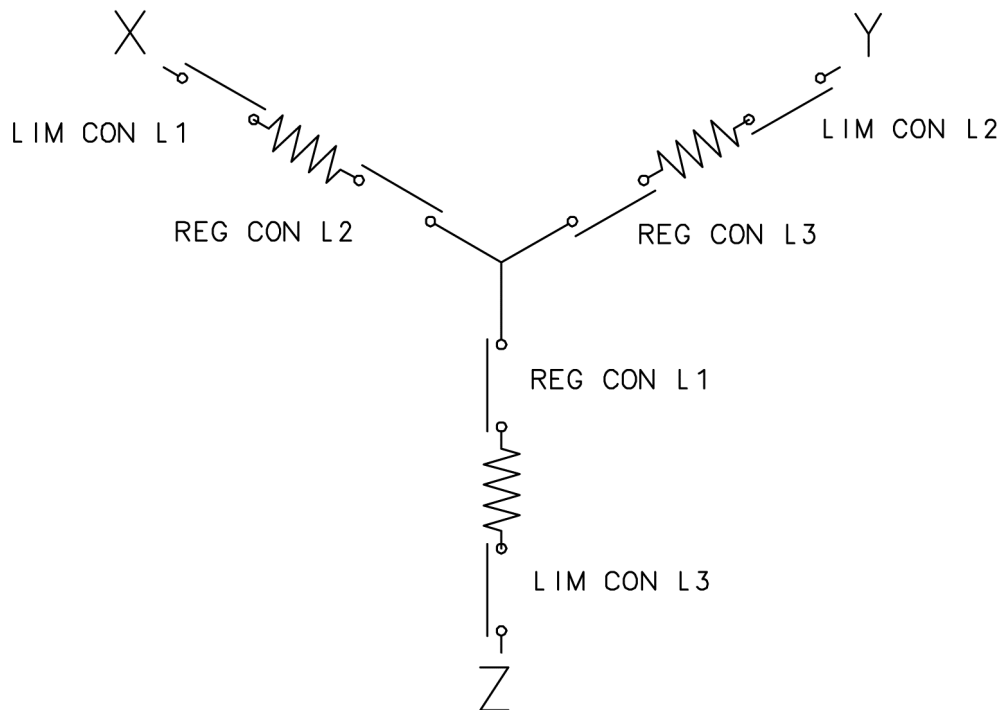

DERIVED FROM:
857449-1

MODELS - K20EL/K20ELT, K40EL/K40ELT, K60EL/K60ELT

AI3433

Fig. 41

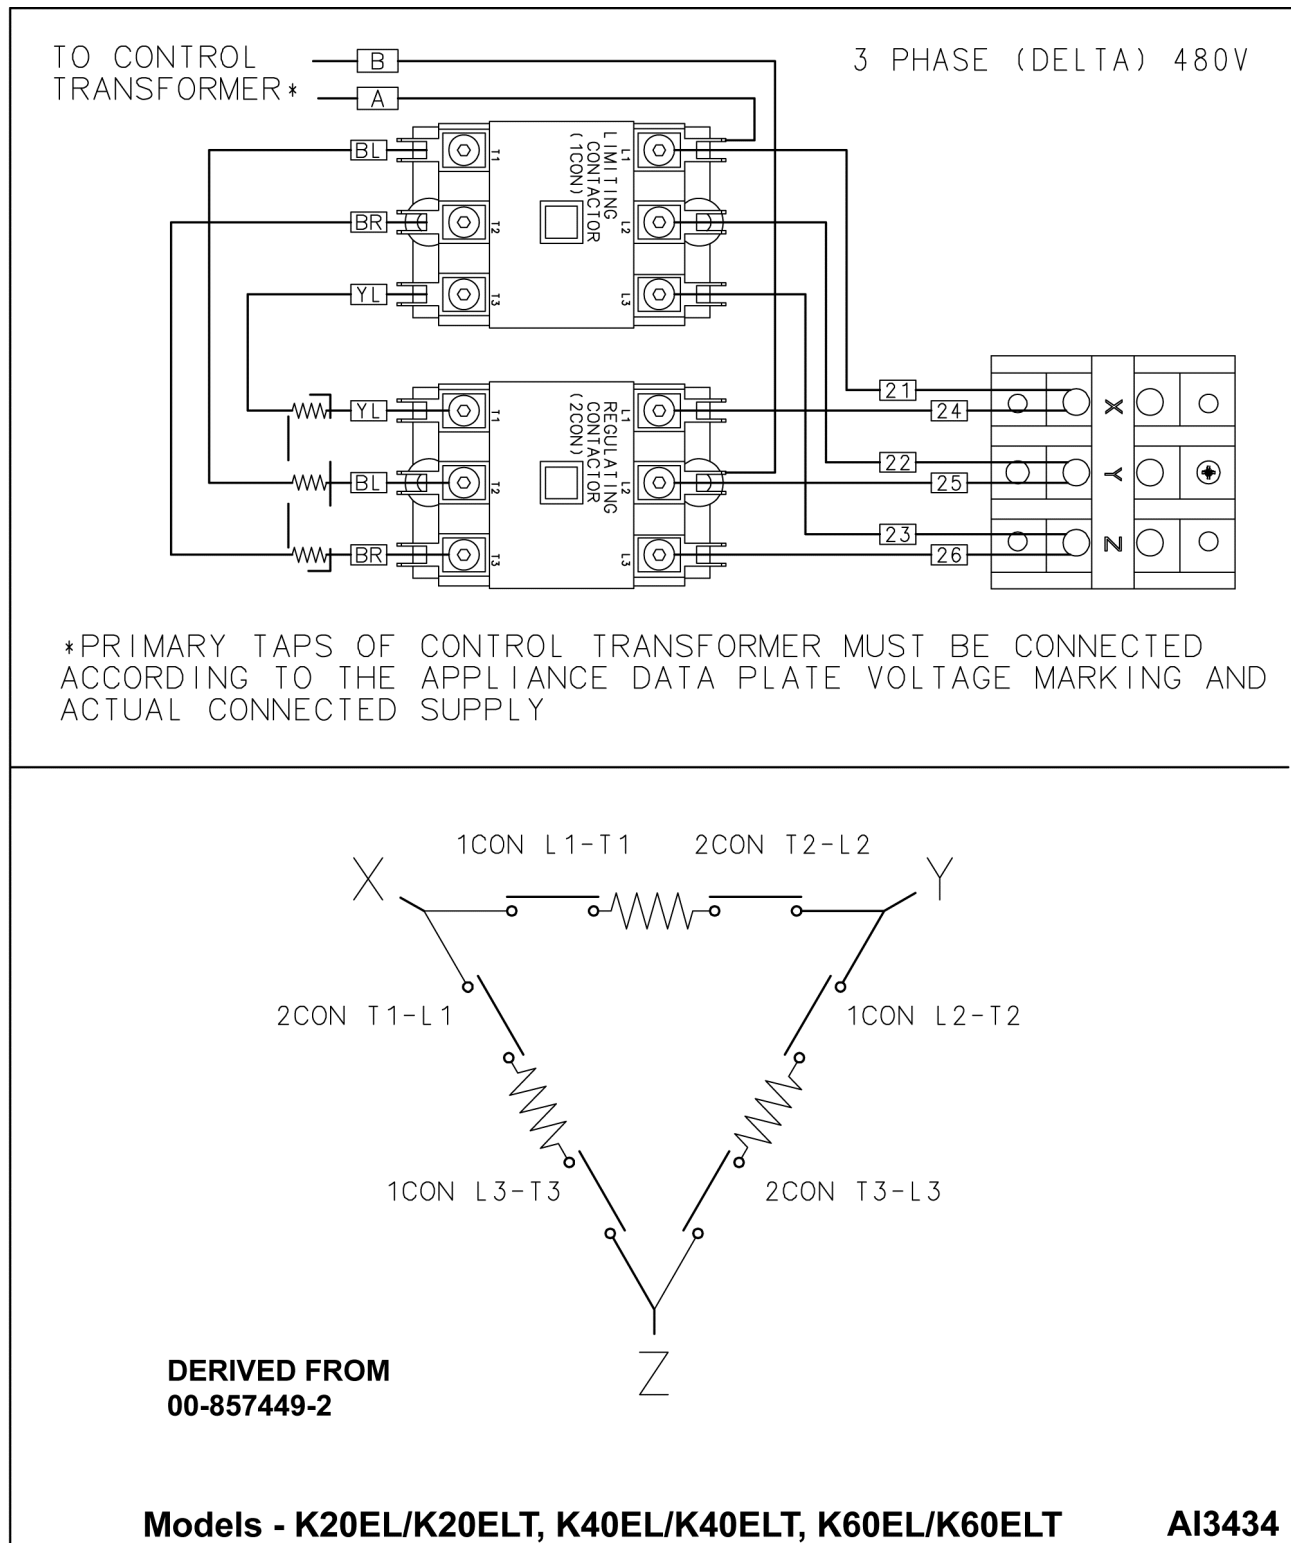


Fig. 42

TROUBLESHOOTING

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSES
Kettle does not heat, power light is lit, heat light is lit, low water light is not lit.	1. Limiting contactor (1CON) malfunction. 2. Regulating contactor (2CON) malfunction. 3. Heating element malfunction.
Kettle does not heat, power light is lit, low water light is lit, heat light is not lit.	1. Fluid level in reservoir jacket below water level probe (LLCO). 2. Water level probe (LLCO) wiring connection malfunction; or probe coated (not sensing fluid); or probe malfunction. 3. Water level control malfunction.
Kettle does not heat, power light is lit, low water light is not lit, heat light is not lit.	1. Pressure switch (1PAS) malfunction. 2. Temperature sensor malfunction; potentiometer malfunction or temperature controller malfunction. 3. Interconnecting wiring malfunction.
Kettle does not heat, power light is not lit.	1. Main circuit breaker off; or control circuit fuse F1 or F2 open. 2. Supply voltage incorrect. 3. Main transformer (1T) malfunction. 4. Power switch off or malfunction. 5. Interconnecting wiring malfunction.
Kettle heats up slow or will not boil product.	1. No vacuum in reservoir jacket when kettle is cold. 2. Supply voltage incorrect. 3. Heating element malfunction. 4. Temperature sensor malfunction; or potentiometer malfunction; or temperature controller malfunction.