BAKERS PRIDE

30 Pine Street • New Rochelle • New York • 10801
914 / 576 - 0200
914 / 576 - 0605 fax
1 - 800 - 431 - 2745 US & Canada
www.bakerspride.com web address

540 Series

(E-541, E-544, B-541, R-544)

Electric Deck Oven

PARTS LIST



Model: ***E-541*** ☐ ***E-544*** ☐ ***B541*** ☐ ***R-544*** ☐ 208V ☐ 220/240V ☐ 230/400V ☐

Serial Number _____ 1 Phase ☐ 3 Phase ☐

540 Series


(E-541, E-544, B-541, R-544)

Electric Deck Oven

30 Pine Street • New Rochelle • New York • 10801
914 / 576 - 0200
914 / 576 - 0605 fax
1 - 800 - 431 - 2745 US & Canada
www.bakerspride.com web address

BAKERS PRIDE

Figure A — ***Exterior / Controls / Door***

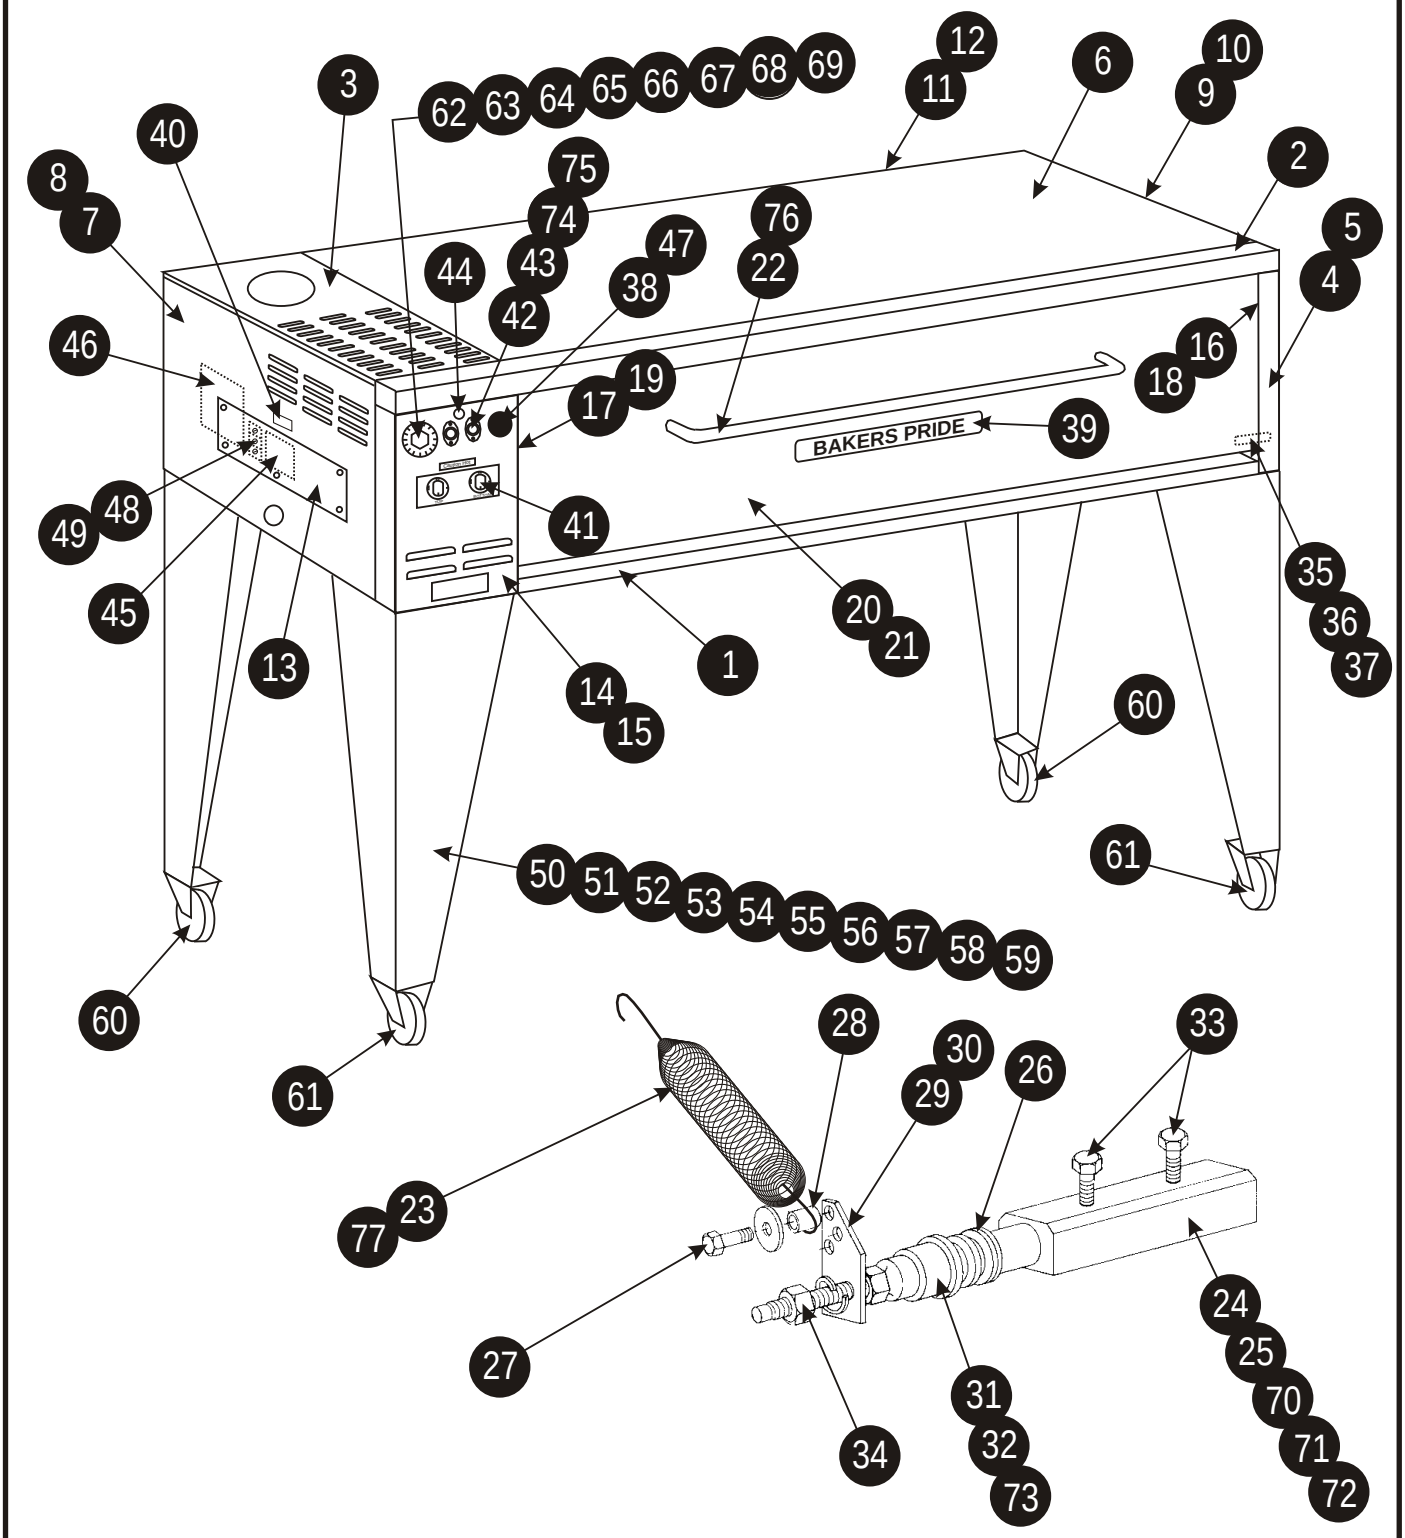

 Note: When ordering, ALWAYS specify Part #, Model #, Serial # and Voltage/Phase. **8/00**

BAKERS PRIDE

30 Pine Street • New Rochelle • New York • 10801
914 / 576 - 0200
914 / 576 - 0605 fax
1 - 800 - 431 - 2745 US & Canada
www.bakerspride.com web address

540 Series

(E-541, E-544, B-541, R-544)

Electric Deck Oven

Item	Part #	Description	Item	Part #	Description
		Exterior / Controls / Door			
1	C3014X	Bottom Apron, S/S	37	Q3023X	Spacer Kit, Door Pin
2	A1012X	Top Trim, S/S	38	S3038A	Push Pull Rod
3	C3033X	Top Access Panel, S/S	39	U1043X	Bakers Pride Logo, (13 3/4")
4	C3012X	Front Column, Right, S/S (E/B541)	40	U1210A	Label, Warning
5	C3013X	Front Column, Right, S/S (E544)	41	M1282X	Rotary Switch, EGO (2)
6	C3003X	Outer Top, S/S	42	P1064X	Fuse Holder, 15 Amp (2)
7	C3016K	Outer Side, Left, S/S (E/B541)	43	P1065X	Fuse, 15 Amp, #SC15, Time Delay (2)
8	C3011K	Outer Side, Left, S/S (E544)	44	P1127X	Pilot Light, Amber
9	C3018K	Outer Side, Right, S/S (E/B541)	45	M1030X	Contactor,4 Pole
10	C3009K	Outer Side, Right, S/S (E544)	46	M1238X	Transformer, 240/480V (If Applicable)
11	C3020K	Outer Back Assy, S/S (E/B541)	47	S1005X	Knob, Push Pull, 3/8"-16
12	C3022K	Outer Back Assy, S/S (E544)	48	P1048X	Terminal Block, 3 Pole
13	C3037X	Side Access Door, S/S	49	P1098X	Terminal Block, 4 Pole (CE)
14	C3081K	Control Panel, S/S (E/B541)	50	S1003Y	Legs, 16" (Set/4, w/Bolts)
15	C3082K	Control Panel, S/S (E544)	51	S1003X	Leg, 16" (ea)
16	K1187K	Door Shield, R.H. (E/B541)	52	S1004Y	Legs, 30" (Set/4, w/Bolts)
17	K1186K	Door Shield, L.H. (E/B541)	53	S1004X	Leg, 30" (ea)
18	K1189K	Door Shield, R.H. (E/B544)	54	S1039Y	Legs, 38" (Set/4, w/Bolts)
19	K1188K	Door Shield, L.H. (E/B544)	55	S1039T	Leg, 38" (ea)
20	A4136T	Door Assy, 8" (E/B541)	56	Q2102A	Bolt, Leg, 1/2-13 x 1 (ea)
21	A1468T	Door Assy, 12" (E544)	57	S1077X	S/S Leg Wrap, 16" (Set/2)
22	S1196X	Handle w/2 Screws, Door (30")	58	S1078X	S/S Leg Wrap, 30" (Set/2)
23	S3003X	Spring, Door, 1 1/8" x 9 3/4"	59	S1079X	S/S Leg Wrap, 38" (Set/2)
24	S3041W	Door Rod Assy, Left Side, 3/4" for 8", (E/B541)	60	S1022X	Caster, No Lock (ea)
25	S3041X	Door Rod, Left Side, 3/4" for 8", (All)	61	S1023X	Caster, w/Lock (ea)
26	Q3024X	Spacer Kit, Door Rod	62	M1098X	Thermostat, EGO, 380V, 3Ph (CE)
27	Q2301X	Shoulder Bolt, 3/8-16 x 1"	63	S1154X	Knob, Thermostat, CE, 340C
28	S3007X	Teflon Bushing Assy	64	M1019X	Thermostat, 300-650F, 36" (E541/4)
29	S3056X	Lever, Door Spring, 3 1/2" (All)	65	S1053X	Knob, Thermostat, 300-650F
30	S3055X	Lever, Door Spring, (O/S 12" Ovens)	66	M1192X	Thermostat, High Heat, 430C (Opt.CE)
31	S3135X	Bushing w/Insert, Door Rod (3/4")	67	S1293A	Knob, Thermostat, CE, 430C
32	S3133X	Insert Only (Duralon)	68	M1110X	Thermostat, KA-72, 550F (B541)
33	Q2303X	Bolt, Door Rod, 3/8-16 (2)	69	S1055X	Knob, Thermostat, 550F (B541)
34	Q2401X	Nut, Door Rod (9/16-18)	N/S	P1042A	Capillary Clip, 5/16" Victor
35	S3009X	Pin, Door, Right Side (9/16"-18 x 3")	N/S	P1105A	Capillary Clip, 1/8" Victor
36	S3138X	Sleeve Assy, Door Pin	N/S	K1044X	Capillary Guard Assy
		Older Models			
70	S3020W	Door Rod Assy, 9/16" (O/S E/B541)	74	P1008X	Fuse 20 Amp (O/S)
71	S3020X	Door Rod, 9/16" (All O/S)	75	P1007X	Fuse Holder, 20 Amp (O/S)
72	S3079X	Door Rod Assy, 9/16" (O/S 12" Ovens)	76	S1002X	Handle w/2 Screws, Door 17 1/2" (O/S)
73	S3008X	Bushing, Door Rod (9/16")	77	A1428X	Spring Retro Kit (O/S to N/S Door)

540 Series


(E-541, E-544, B-541, R-544)

Electric Deck Oven

30 Pine Street • New Rochelle • New York • 10801
914 / 576 - 0200
914 / 576 - 0605 fax
1 - 800 - 431 - 2745 US & Canada
www.bakerspride.com web address

BAKERS PRIDE

Figure B — Decks / Elements

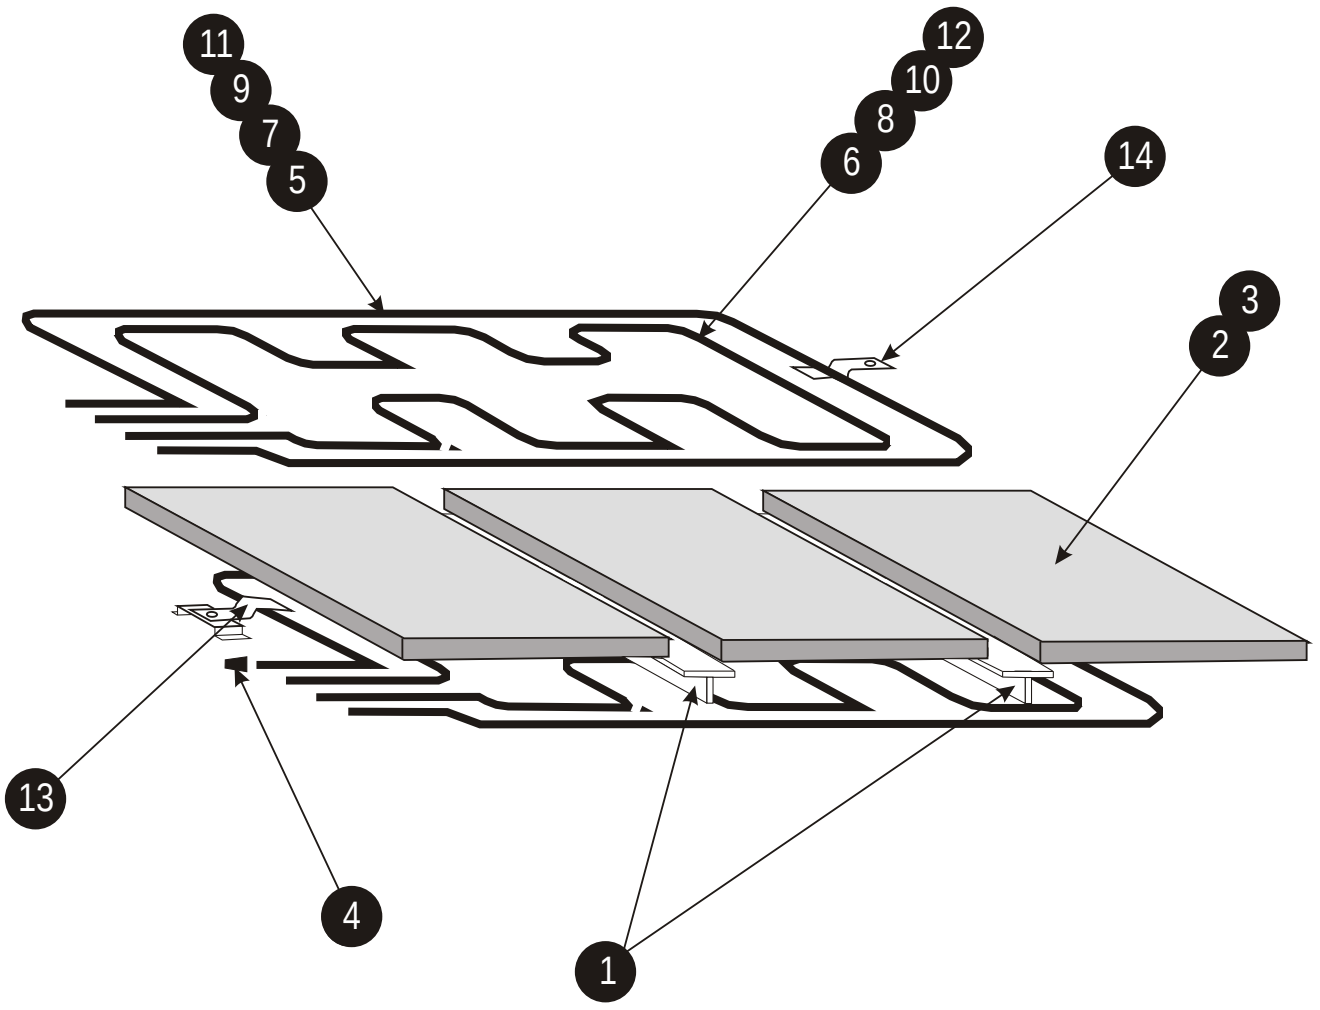

Item	Part #	Description	Item	Part #	Description
1	C3079T	Deck Support Assy (2)	9	L1150X	Element, Outer, 415V, 2700W (2)
2	T1165Z	Hearth Baking Deck, 18x36x1 (ea)	10	L1151X	Element, Inner, 415V, 3300W (2)
3	T1165X	Hearth Baking Deck, 18x36x1 (Set/3)	11	L1045X	Element, Outer, 480V, 2700W (2)
4	S1062A	Terminal Cap, 10/32 (8)	12	L1046X	Element, Inner, 480V, 3300W (2)
5	L1041X	Element, Outer, 208V, 2700W (2)	13	K1026X	Coil Clip Assy, Bottom Elements (22)
6	L1042X	Element, Inner, 208V, 3300W (2)	14	K1023X	Coil Snap Clip, Top Elements (28)
7	L1043X	Element, Outer, 240V, 2700W (2)	N/S	T1017X	Steel Baking Deck, w/Screws (Optional)
8	L1044X	Element, Inner, 240V, 3300W (2)			

 Note: When ordering, ALWAYS specify Part #, Model #, Serial # and Voltage/Phase.