

---


**Subway B1 Profile Glass Kit  
Installation Instructions**

---




**“Your Solutions Partner”**

# Subway B1 Profile Glass Kit Installation Instructions (cont'd)

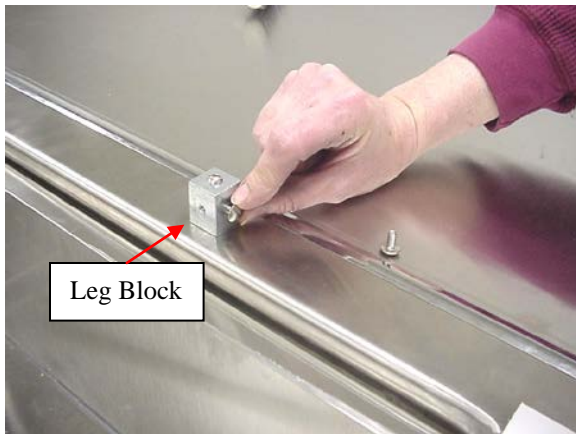


**Step 1.** Remove screws from sides of leg blocks. Place two legs over leg blocks on Cold Pan. Secure with screws.

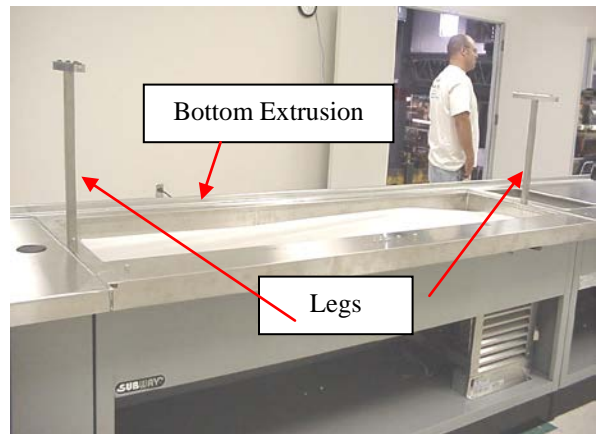

**Step 2.** Align bottom extrusion over pre-drilled holes on top. Secure with screws.



**Step 3.** Place leg with two glass clips over leg block on Hot Food Unit. Secure with screws.

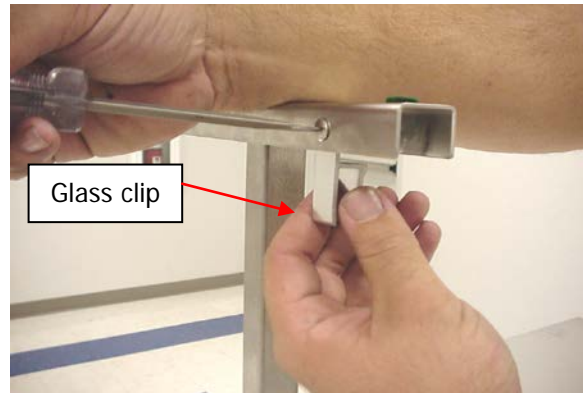

**Step 4.** Place leg with one glass clip over leg block on Cashier / Safe. Secure with screws. Remove glass clip from inside of legs on each end of lineup. Note how clip is positioned.



**Step 5.** Remove curved glass from box. Remove protective wrapping from glass.




**Step 6.** Place short rubber gasket onto bottom edge of curved glass. Note orientation of glass in photo. Leave space for U-Channel to fit in center of glass. Put liquid soap onto outside of rubber gasket.

# Subway B1 Profile Glass Kit Installation Instructions *(cont'd)*



**Step 7.** Place glass with rubber gasket into bottom extrusion. Align edges of glass and extrusion. Put vinyl U-channel over edge of glass at center of counter.

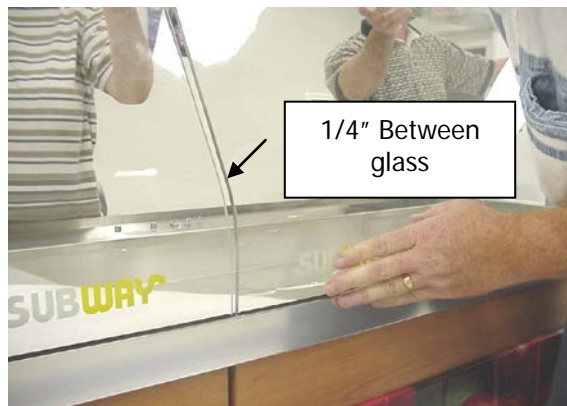

**Step 8.** Put U-channel over edge of second piece of glass. Place second piece of glass next to first piece of glass. Push glass together in the middle until U-channel meet and close gap.




**Step 10.** Put clear vinyl U-Channel over each end of the curved glass. If vinyl channels do not seat properly, apply NSF

sealant to secure. Start at top and slide until flush with bottom extrusion



**Step 11.** Slide second piece of glass next To first piece of glass to snugly fit against U-channel in center.

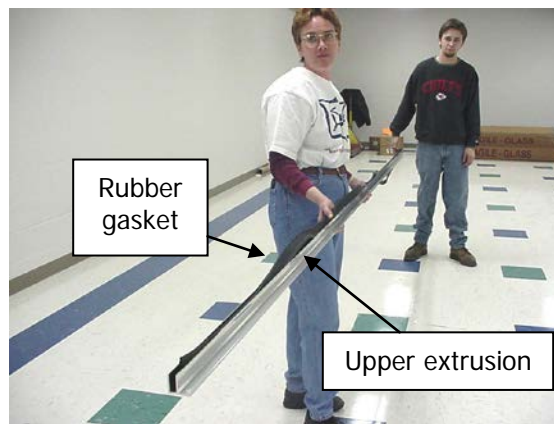


**Step 12.** Remove long rubber gasket from upper extrusion.

# Subway B1 Profile Glass Kit Installation Instructions *(cont'd)*




**Step 13.** Place rubber gasket over top edge of both pieces of glass.

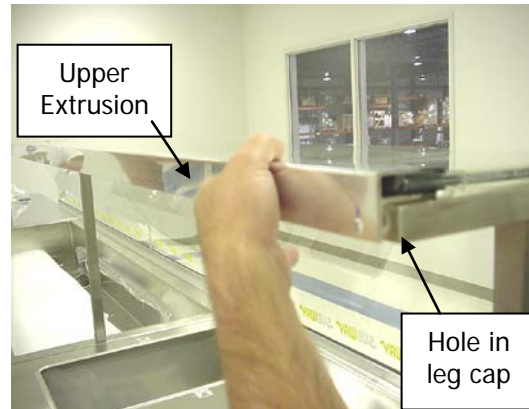


**Step 14.** Remove screws and nuts from each leg cap. Align upper extrusion over rubber gasket and holes of leg caps.




**Step 15.** Secure upper extrusion with screws and nuts. Rubber gaskets are supplied long. Trim excess from ends.

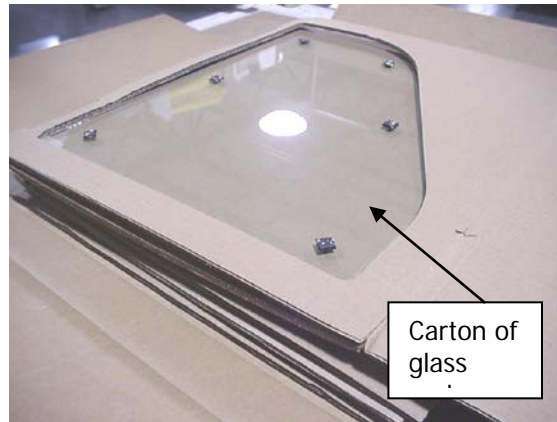

**Step 16.** Remove curved end glass panel from carton.

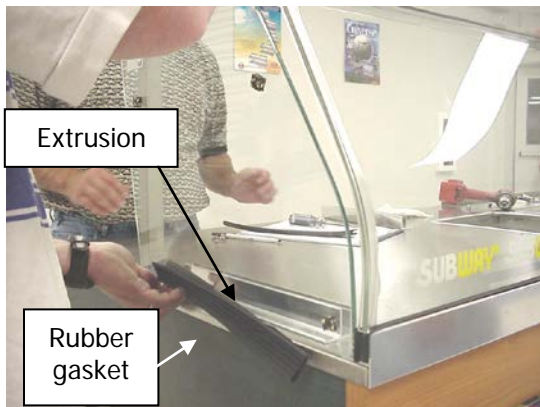


**Step 17.** Align end glass and extrusion. Place rubber gasket onto proper position of glass. Place glass into extrusion.

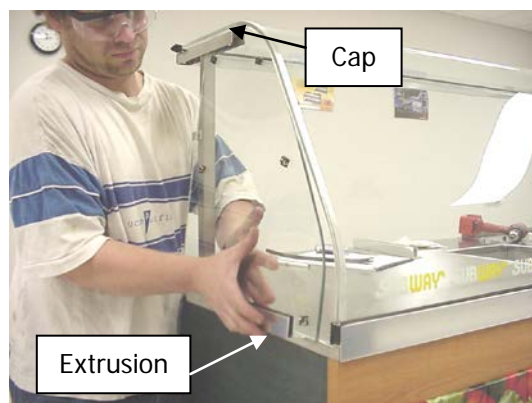


**Step 18.** Slide top of end glass into cap. Position extrusion onto top. Secure with screws. Repeat on opposite end.


# Subway B1 Profile Glass Kit Installation Instructions *(cont'd)*

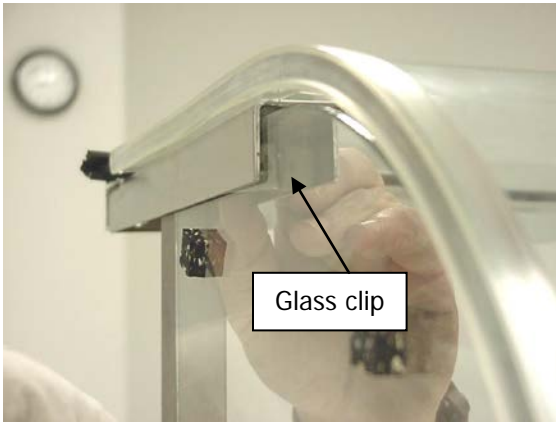


**Step 19.** Replace glass clip that was removed from inside of leg cap. Repeat on opposite end of lineup.

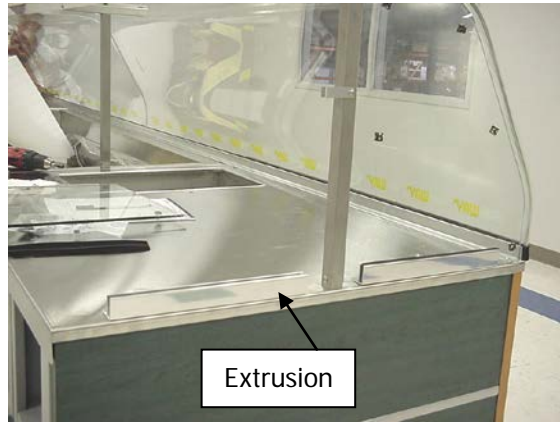

**Step 20.** Place extrusion onto Hot Food Unit. Secure with screws.

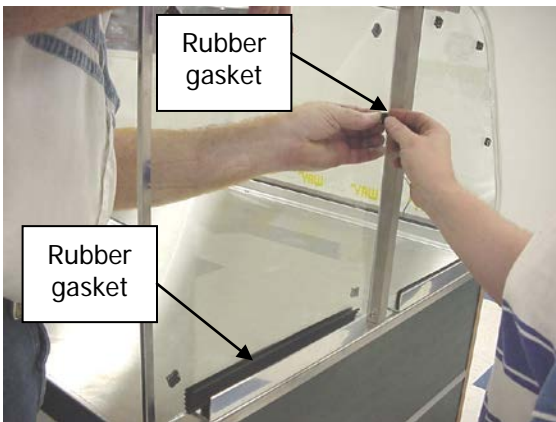

**Step 21.** Align rubber gasket onto square glass (on short side without metal trim). Align rubber gasket from parts bag onto edge of glass. Slide glass into extrusion.

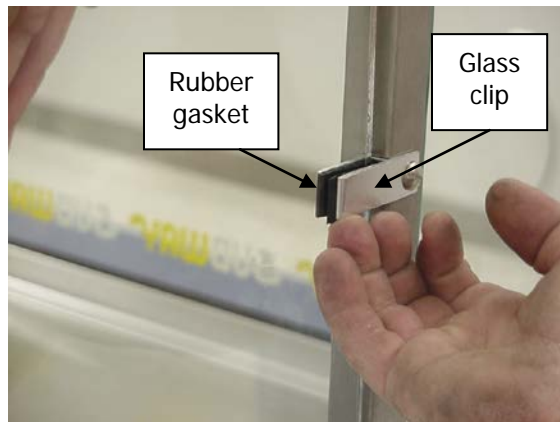

**Step 22.** Slide glass with rubber gasket into glass clip. Squeeze glass clip tight onto glass.