

THE PURSERAIL REPLACEMENT KIT WILL INSTRUCT HOW TO REPLACE DAMAGED OR WORN PURSERAILS ON YOUR TUSCANY DÉCOR PANELS IN LIEU OF REPLACING THE ENTIRE PANEL.



TOOLS REQUIRED: CORDLESS DRILL (PREFERRED), CLEAR SILICONE (INCLUDED), 3 POUND RUBBER Mallet, PENCIL, PUTTY KNIFE, 5/16" NUT DRIVER, PHILLIPS HEAD SCREWDRIVER OR PHILLIPS HEAD BIT, AND A SQUARE HEAD BIT (INCLUDED).



1. UNPLUG PURSERAIL LIGHTS FROM DUPLEX BOX LOCATED ON THE COMPRESSOR CAGE INSIDE THE UNIT.
(on side as shown or rear of cage)



2. LOOSEN THE SCREWS IN THE STAINLESS STEEL TOP THAT HOLD THE DÉCOR PANEL IN PLACE. NOTE: FOR FRONT COUNTERS WITH CURVED GLASS, THESE SCREWS FASTEN THE GLASS EXTRUSION TO THE TOP OF THE FRONT COUNTER. YOU SHOULD ONLY LOOSEN THE SCREWS ABOVE ONE PANEL AT A TIME RATHER THAN ALL THE SCREWS THAT HOLD THE EXTRUSION IN PLACE.



3. TO REMOVE THE DÉCOR PANEL, LIFT UP ON THE PANEL AND PULL THE BOTTOM OF THE PANEL AWAY FROM THE UNIT AS SHOWN ABOVE.



4. REMOVE THE DÉCOR PANEL FROM FRONT COUNTER.




5. PLACE YOUR DÉCOR PANEL ON A PADDED WORKING SURFACE SO THE GRAPHIC DOES NOT GET SCRATCHED WHEN THE PANEL IS TURNED FACE DOWN.



6. FOR 110VOLT LIGHTS YOU MAY PULL THE LIGHT CORD UP THROUGH THE GROMMET HOLE IN THE PANEL. SKIP STEPS 7-9. FOR 220VOLT LIGHTS, THE LIGHT CORD MUST BE DISCONNECTED. FOLLOW STEPS 7-9.



7. **220VOLT LIGHTS ONLY:** PLACE A PIECE OF CARDBOARD ON VEGGIE GRAPHIC BEFORE REMOVING SCREWS. WITH A PHILIPS SCREW DRIVER, REMOVE THE METAL LIGHT CLIP.

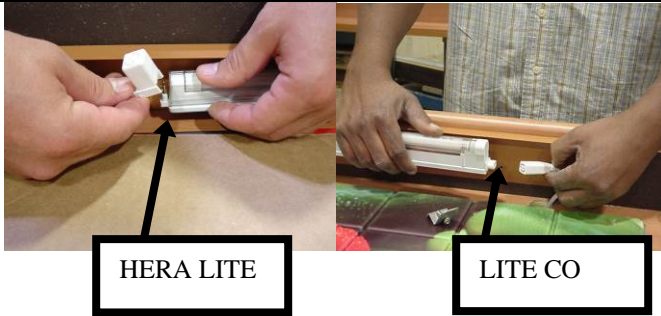

8. **220VOLT LIGHT ONLY:** DISCONNECT THE LIGHT CORD FROM THE LIGHT FIXTURE. THERE ARE TWO VERSIONS THAT EXIST. REFERENCE PICTURES.



9. **220VOLT LIGHT ONLY:** REMOVE THE GROMMET FROM THE CORD AND FEED THE CORD DOWN THROUGH THE HOLE IN THE PANEL.



10. PLACE A PIECE OF CARDBOARD ON THE VEGGIE GRAPHIC BEFORE REMOVING SCREWS. WITH THE 5/16" NUT DRIVER, REMOVE THE SCREWS WHICH ATTACH THE LIGHT COVER TO THE PURSERAIL.




11. REMOVE LIGHT ASSEMBLY FROM PURSERAIL.



12. TURN PANEL OVER AND PLACE FACE DOWN ON PADDED WORK SURFACE.



13. REMOVE SQUARE HEAD SCREWS WHICH ATTACH THE PURSERAIL. (QTY OF 12)

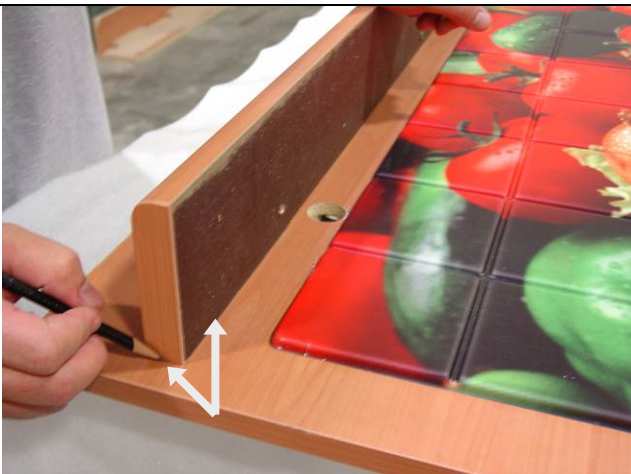

14. TURN PANEL OVER AND MARK EACH END AND UNDERSIDE OF PURSERAIL WITH A PENCIL.



15. YOU ARE NOW READY TO REMOVE THE PURSERAIL. START AT ONE END WITH THE PUTTY KNIFE AND MALLET.



16. YOU WILL LIKELY NEED TO TAP THE PURSERAIL WITH THE MALLET TO BREAK THE SILICONE LOOSE.



17. ONCE THE PURSERAIL IS LOOSE, PULL UP FROM ONE END AND REMOVE.



18. OLD PURSERAIL MAY BE REMOVED AND DISCARDED.



19. REMOVE THE DRIED SILICONE FROM THE PANEL USING A PUTTY KNIFE.



20. RUN A BEAD OF CLEAR SILICONE ALONG THE DÉCOR PANEL WHERE THE NEW PURSERAIL IS TO BE PLACED.



21. RUN A BEAD OF CLEAR SILICONE ALONG THE EDGE OF THE NEW PURSERAIL.



22. ALIGN THE NEW PURSERAIL TO PENCIL MARKS ON PANEL.



23. WHILE HOLDING PURSERAIL SECURE TO PANEL, PUT ONE SCREW INTO EACH END AND THE CENTER OF THE PURSERAIL BEFORE TURNING THE PANEL OVER.



24. TURN THE PANEL OVER AND INSERT THE REMAINING SCREWS WITH THE SQUARE HEAD BIT.



25. CENTER THE LIGHT ASSEMBLY ON THE BOTTOM SIDE OF THE PURSERAIL (LEFT TO RIGHT) AND COVER THE LAMINATE BY 1/4" ON THE BOTTOM WITH THE FRONT EDGE OF THE LIGHT SHIELD.



26. REATTACH THE LIGHT ASSEMBLY TO THE NEW PURSERAIL USING A 5/16" HEX HEAD BIT.



27. FOR 220VOLT, REATTACH CORD, GROMMET, AND LIGHT CLIP.



28. REMOVE ANY EXCESS SILICONE FROM TOP OF PURSERAIL WITH PUTTY KNIFE.



29. REINSTALL DÉCOR PANEL AND PLUG IN LIGHTS.