
INSTALLATION INSTRUCTIONS for HS-9
12" WIDE WALL MOUNT HAND SINK

INCLUDES:

(A) 12" HAND SINK
(B) BACKSPLASH WALL MOUNT FAUCET
(C) WALL MOUNT BRACKET

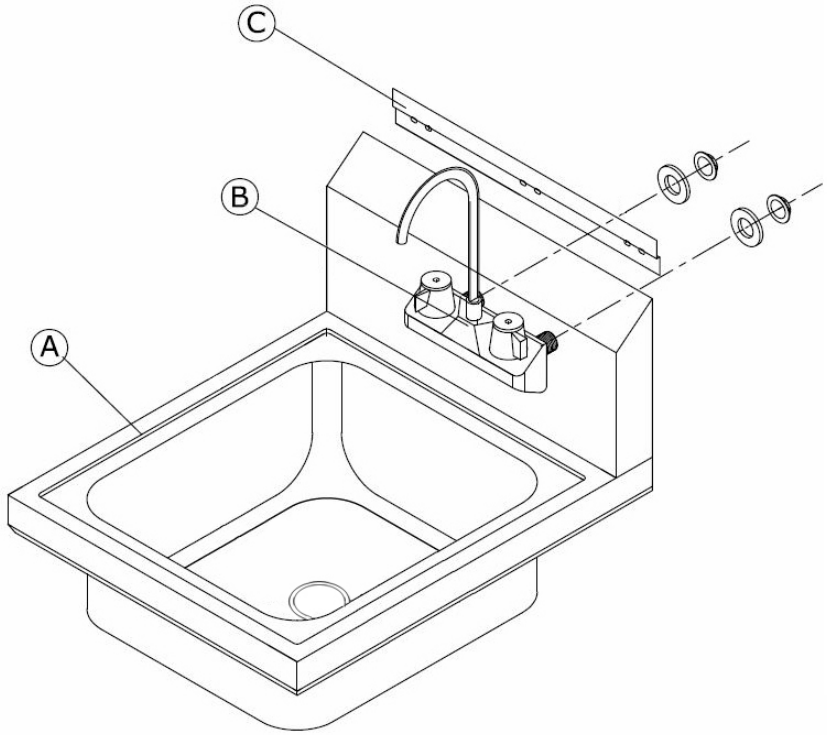

1. Install FAUCET (B) on 12" HAND SINK (A) and hook up water inlet leads (not provided)
2. Hang 12" HAND SINK (A) on WALL BRACKET (C).
3. Install Drain with plumbers putty on top and the rubber washer & locknut below. Make sure top of drain is below surface to allow proper drainage.
4. Hook up water and drain lines to complete the installation.

Printed in the USA

Krowne Metal Corporation
100 Haul Rd. Wayne, NJ 07470 • Toll Free: (800) 631-0442 • Fax: (973) 872-1129
sales@krowne.com • www.krowne.com • www.facebook.com/KrowneMetal • www.twitter.com/KrowneMetal

Rev. 1/2013
No. HS9-1.01