

TYPICAL

BP-7241E INSTALLATION

- 1) Quikserv windows must be installed level and square to work properly.
- 2) Anchor through each side jamb at two places approx. 5" at top and bottom of each jamb. (See Fig. 1)
- 3) Ensure to drill in between the eye wire and power cable located in the left jamb.
- 4) 115V / 15 Amp. Dedicated circuit required.
- 5) Recommended height from floor to service opening to be 36". (Check all local and city codes)
- 6) Silicone all exterior and interior joints.
- 7) All other type of anchoring to be approved by certified engineer.

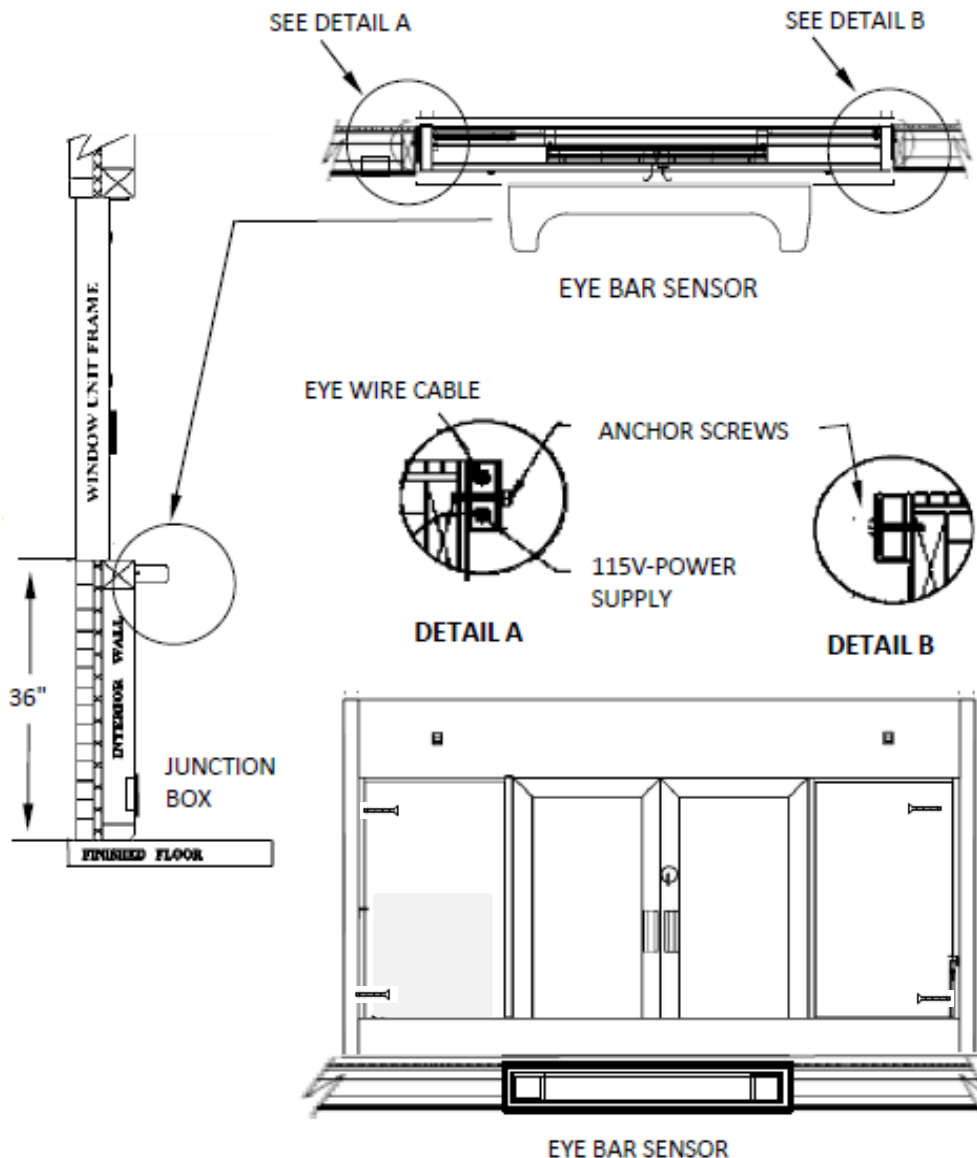


FIGURE 1

General Notes

Actual Dimension
72"(W) x 41"(H)

Service Opening
29-1/2" x 31"(H)

Rough Opening
72-1/2"(W) x 41-1/2"(H)

NOTE 1:

Eye set to be mounted directly below the service opening. Bar to be mounted on the wall. (See Fig. 1)

NOTE 2:

Anchor Screws to be supplied by contractor.

NOTE 3:

Junction box to be supplied by contractor.

CAUTION:

Use caution when drilling. The power supply cable and the eye bar cable are both located in the left jamb. (See Detail A)

QUIKSERV
11441 BRITTMORE PARK DR.
HOUSTON, TX., 77041

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETY DESIGN ORIGINATED AND OWNED BY QUIKSERV CORP., AND IS SUBMITTED UNDER A CONFIDENTIAL RELATIONS ALL PATENT, MANUFACTURING, SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING HIP. THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.

TITLE:

INSTALLATION PROCEDURE

Drawing Name

BP-7241E INSTALLATION DRAWING

DATE

6/21/2016

DRAWN BY

RBV

SCALE

NTS

SHEET

1 of 1

SIZE

A