



J612, J614 SERIES HOT FOOD COUNTERS


X. PARTS LIST

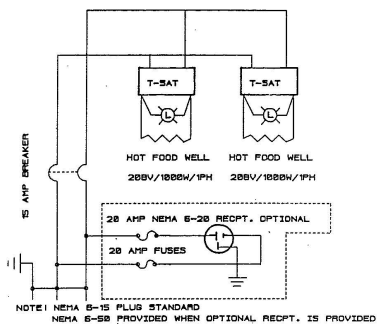


WIRING DIAGRAM MODEL J614

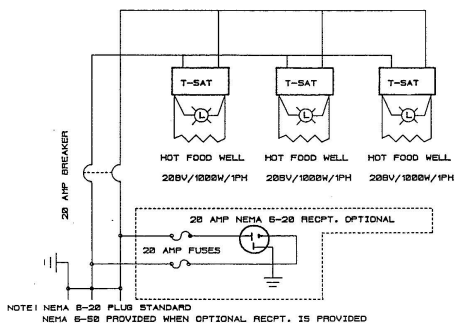

WIRING DIAGRAM MODELS J612 & J614A

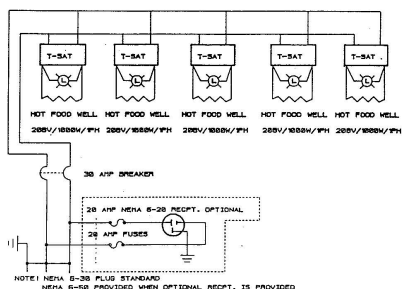

WIRING DIAGRAM MODEL J612B

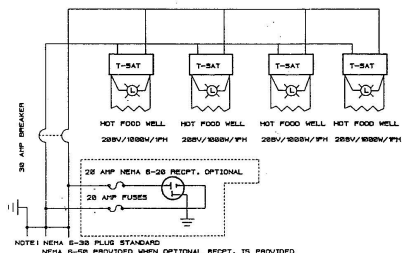

WIRING DIAGRAM MODELS J612A & J614R & J614L

No.	Aladdin Part No.	Stock No.	Item Name	Description
1		N/A	Hot food Well (total assembly)	Model LT-1008D S.S. well w/ T-stat & Heating Element
2	24856	1950	Heating Element	1000W/208V
3	24855	1954	Thermostat	450 Degree Max. w/Knob
4	24860	3580	Pilot Light	250V / Ruby Red
5		3322	Circuit Breaker	2 Pole 15 AMP (Used on J614)
5A		3322A	Circuit Breaker	2 Pole 20 AMP (Used on J612 & J614A)
5B	39977	3322B	Circuit Breaker	2 Pole 30 AMP (Used on J612A, J612B, J612R, J612L, J614R, J614L)
*6		3404	Receptacle	250V / 20 AMP Single
*7	24859	3582B	Fuse Holders	20A, 600 Volt
*8	39834	5138H	Fuses	20 AMP Type SC Class G
*9		2516	Cord	8/3 SO Cord (Used on J612, J614, J614A)
*9A		2517B	Cord	6/3 SO Cord (Used on J612A, J612B, J612, J614R, J614L)
*10		3452	Plug	250V/50 Amp NEMA6-50P (for models w/ specified outlet)
11		1310	Casters	5" Plate Type Swivel w/ Brakes
12		2370	Drain Valve	3/4" Gate Valve
13		2507	Cord	14/3 Cord (for standard model J614)
14		2510	Cord	12/3 Cord (for standard models J612 & J614A)
15		2515	Cord	10/3 Cord (for standard models J612A, J612B, J614R & J614L)
16		3407A	Plug	250V/15A NEMA 6-15P (for standard J614)
17		3405A	Plug	250V/20A NEMA 6-20P (for standard J614, 612, J614A)
18		3411	Plug	250V/30A NEMA 6-30P (for standard J612A, 612B, J612R & J612L)

NOTES: Heat lamps must be specified individually.

Cord and plug size may change with the addition of heat lamps.

Items marked by (*) are used when electrical receptacle option is specified.