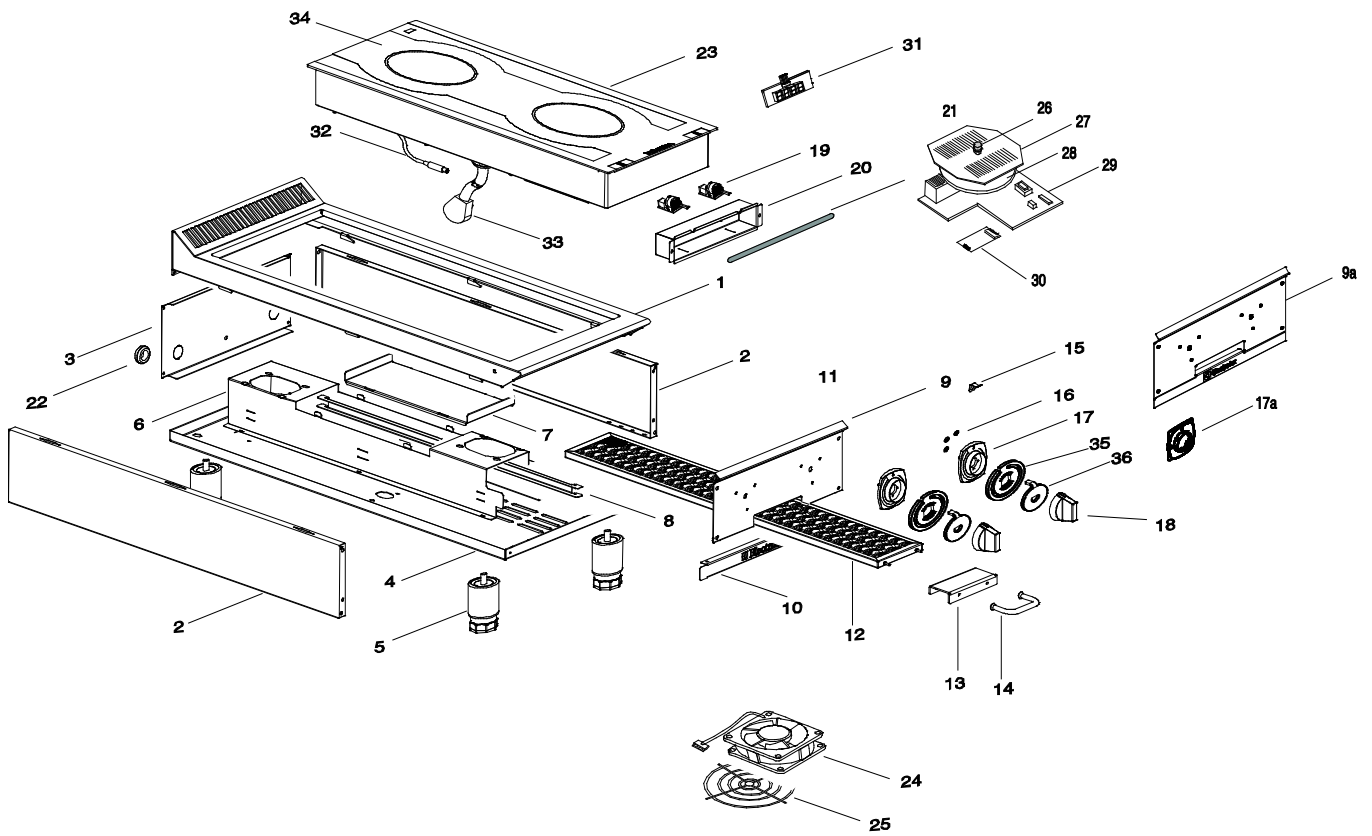

PNC	Model	Ref.	Page	NOTES
169007	AIZ16	a	1-3	ELECTRIC INDUCTION COOK TOP(2X3,2KW) 16"
169107	AIZ16	b	1-3	ELECT INDUCTION COOK TOP(2X3,5KW)16"-US

Pag	Index	Indice
2	Mobile e componenti	Structure and components
3	Lista ricambi	Spare parts list

Brand/Marchio: Electrolux
Factory code: 9PDX



INDUZIONE COMPACT INDUCTION COMPACT					
169007 AIZ16 a		ELECTRIC INDUCTION COOK TOP(2X3,2KW) 16"			
169107 AIZ16 b		ELECT INDUCTION COOK TOP(2X3,5KW)16"-US			
Pos	Factory Code	Spare part code	Descrizione	Description	Ref./ Notes
1	083089BW03	*	RIPIANO INDUZIONE	WORKTOP	
2	050389DP00	*	FIANCO	SIDE PANEL	
3	0503899D01	*	SCHIENALE	BACK SIDE PANEL	
4	050389BR01	*	FONDO	BOTTOM	
5	0835873400	0C6634	PIEDINO	FOOT	
6	0504899I02	0CA246	COLLETTORE ARIA	AIR CONVEYOR	
7	0504899U00	*	COPERTURA COLLETTORE ARIA	COVER FOR AIR CONVEYOR	
8	0505899N00	*	GUIDA FILTRO	RUNNER FOR FILTER	
9	083089C101	0C6809	CRUSCOTTO	CONTROL PANEL	a
9a	083089L800	0CA245	CRUSCOTTO	CONTROL PANEL	b
10	050389B300	0C6897	MARCHIO	LABEL	a
12	0800836500	0C3977	FILTRO	FILTER	
13	0505899F00	0C6816	FRONTALINO CASSETTO	DRTAWER FRONT PANEL	
14	050389CM01	0C6653	MANIGLIA	HANDLE	
15	050689AH00	0C6817	FRIZIONE A MOLLA	SPRING	a up to 235...
16	0218912211	069567	MOLLETTA FISSAGGIO GHIERA	SPRING FOR KNOB RING	
17	0548876F01	0C6807	GHIERA ANTERIORE	KNOB RING, FRONT COOKING ZONE	a
17	0548876J00	0C6808	GHIERA POSTERIORE	KNOB RING, BACK COOKING ZONE	a
17a	080589CT00	0CA248	ASSIEME GHIERA ANTERIORE	KNOB RING ASSEMBLY, FRONT COOKING ZONE	b
17a	080589CU00	0CA249	ASSIEME GHERA POSTERIORE	KNOB RING ASSEMBLY, BACK COOKING ZONE	b
18	0511850F01	0C6682	MANOPOLA	KNOB DIAM.6	
19	0835875800	0C6753	COMMUTATORE	SWITCH	
20	0505899P04	*	PROTEZIONE COMMUTATORI	SWITCH PROTECTION	a
20	050489TK00	0CA247	PROTEZIONE COMMUTATORI	SWITCH PROTECTION	b
21	0543821900	0C2496	GUARNIZIONE	GASKET	
22	0246530100	005382	PASSAFILO DIA.22	GROMMET	
23	0830899F00	*	ASSIEME INDUTTORI (VETRO + 2 INDUTTORI)	ASSEMBLY GLASS + 2 INDUCTION	
24	301110	0C6922	VENTOLA	FAN	
25	102653	0C6923	GRIGLIA PROTEZIONE	FAN GUARD	
26	300557	0C6919	SONDA	SENSOR	
27	301162	0C6917	COPERTURA BOBINA	GREEN ANTENNA	
28	300495	0C6916	BOBINA	COIL	
29	301226	0C6918	SCHEDA INVERTER	INVERTER	
30	300969+102955	0C6921	SHEDA +SOFTWARE	BOARD +SOFTWARE	
31	300585	0C6920	DISPLAY + CAVO FLAT	DISPLAY + FLAT CABLE	
32	300621	0C6925	CABLE 36"	CABLAGGIO 36"	
	300531	0C6926	CABLE 18"	CABLAGGIO 18"	
33	300764	0C6924	CAVO DI ALIMENTAZIONE	POWER CABLE	
34	301415	0C6900	VETROCERAMICA	GLASS	
35	050689C600	0C9986	RONDELLA	WASHER	
36	050689C701	0C9985	FERMA FINECORSIA	ROTATION STOPPER COUNTERPART	
	0151098052	088314	DETERGENTE REINIGER FD-PACTAN	CLEANER	
	0147098057	088313	PRIMER 1015 PACTAN	PRIMER	

**INDUZIONE COMPACT
INDUCTION COMPACT**

169007 AIZ16 a ELECTRIC INDUCTION COOK TOP(2X3,2KW) 16"
169107 AIZ16 b ELECT INDUCTION COOK TOP(2X3,5KW)16"-US

<i>Pos</i>	<i>Factory Code</i>	<i>Spare part code</i>	<i>Descrizione</i>	<i>Description</i>	<i>Ref./ Notes</i>
	0147098058	OC0074	SILIC.PACTAN HT6076	SILICONE	