

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Series Description

Reference the Electrical Requirements section for power supply information.

2212: Mega Pop - 12/14 oz. kettle, copper vein color, unit is equipped with a PowerOff™ Control feature


2213: Gay 90 Mega Pop – 12/14 oz. kettle

2214: Red Top-12 - 12/14 oz. kettle, red dome, unit is equipped with a PowerOff™ Control feature

2214ST: Pro Pop 12 Unimaxx – 12/14 oz. kettle, stainless steel top with LED lighted sign

2214JX: Export Red Top-12 (100V Model) – 12/14 oz. kettle

Items Included with this Unit

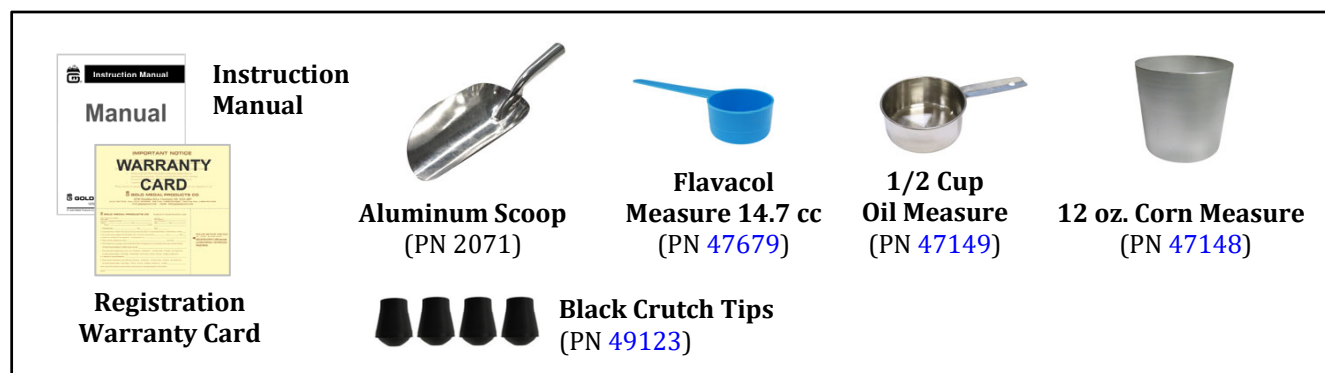

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Series Description

Reference the Electrical Requirements section for power supply information.

2212: Mega Pop - 12/14 oz. kettle, copper vein color, unit is equipped with a PowerOff™ Control feature


2213: Gay 90 Mega Pop – 12/14 oz. kettle

2214: Red Top-12 - 12/14 oz. kettle, red dome, unit is equipped with a PowerOff™ Control feature

2214ST: Pro Pop 12 Unimaxx – 12/14 oz. kettle, stainless steel top with LED lighted sign

2214JX: Export Red Top-12 (100V Model) – 12/14 oz. kettle

Items Included with this Unit

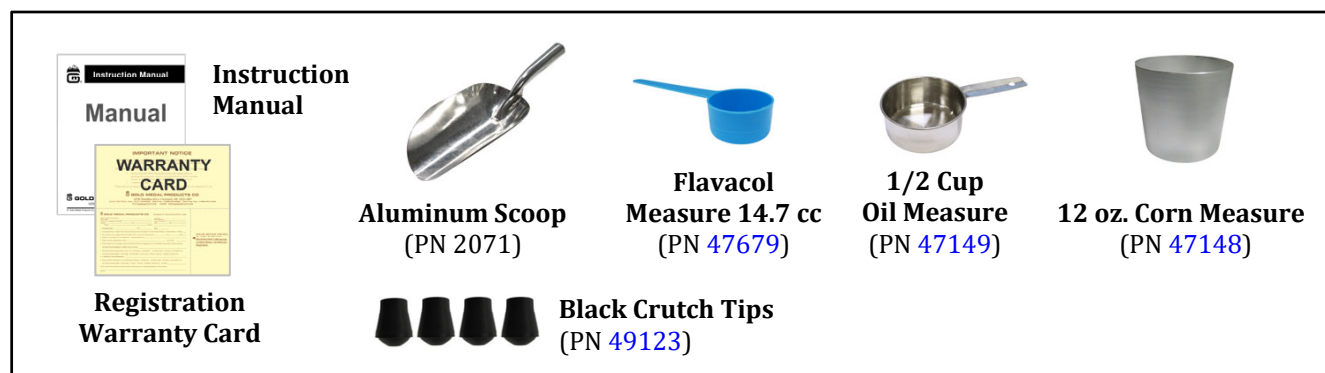

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Series Description

Reference the Electrical Requirements section for power supply information.

2212: Mega Pop - 12/14 oz. kettle, copper vein color, unit is equipped with a PowerOff™ Control feature


2213: Gay 90 Mega Pop – 12/14 oz. kettle

2214: Red Top-12 - 12/14 oz. kettle, red dome, unit is equipped with a PowerOff™ Control feature

2214ST: Pro Pop 12 Unimaxx – 12/14 oz. kettle, stainless steel top with LED lighted sign

2214JX: Export Red Top-12 (100V Model) – 12/14 oz. kettle

Items Included with this Unit

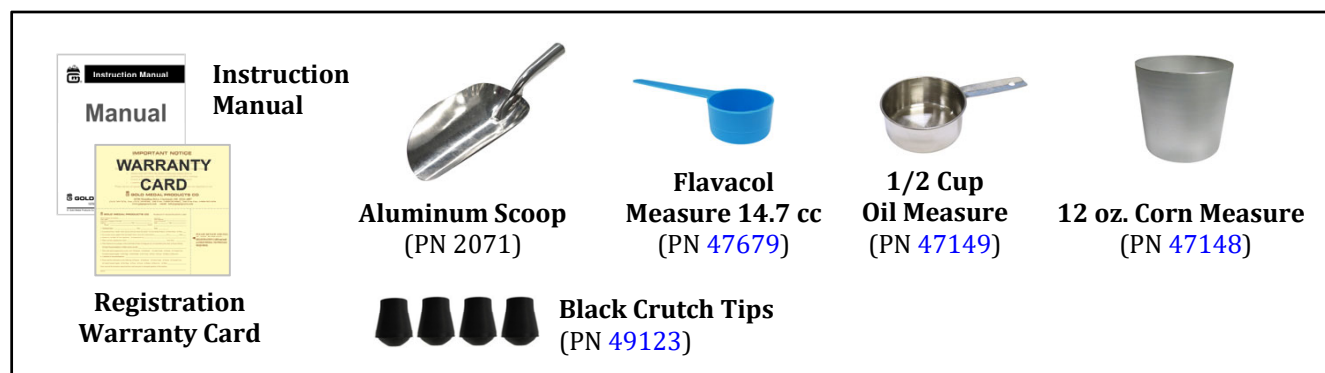

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Series Description

Reference the Electrical Requirements section for power supply information.

2212: Mega Pop - 12/14 oz. kettle, copper vein color, unit is equipped with a PowerOff™ Control feature


2213: Gay 90 Mega Pop – 12/14 oz. kettle

2214: Red Top-12 - 12/14 oz. kettle, red dome, unit is equipped with a PowerOff™ Control feature


2214ST: Pro Pop 12 Unimaxx – 12/14 oz. kettle, stainless steel top with LED lighted sign

2214JX: Export Red Top-12 (100V Model) – 12/14 oz. kettle

Items Included with this Unit

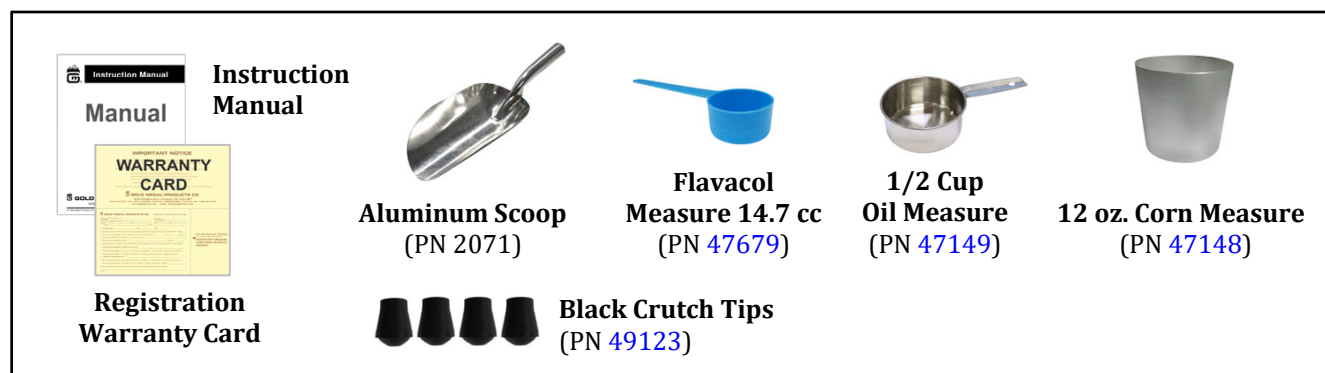


12/14 oz. Kettle Assy. (58220) – Agitator Assy.

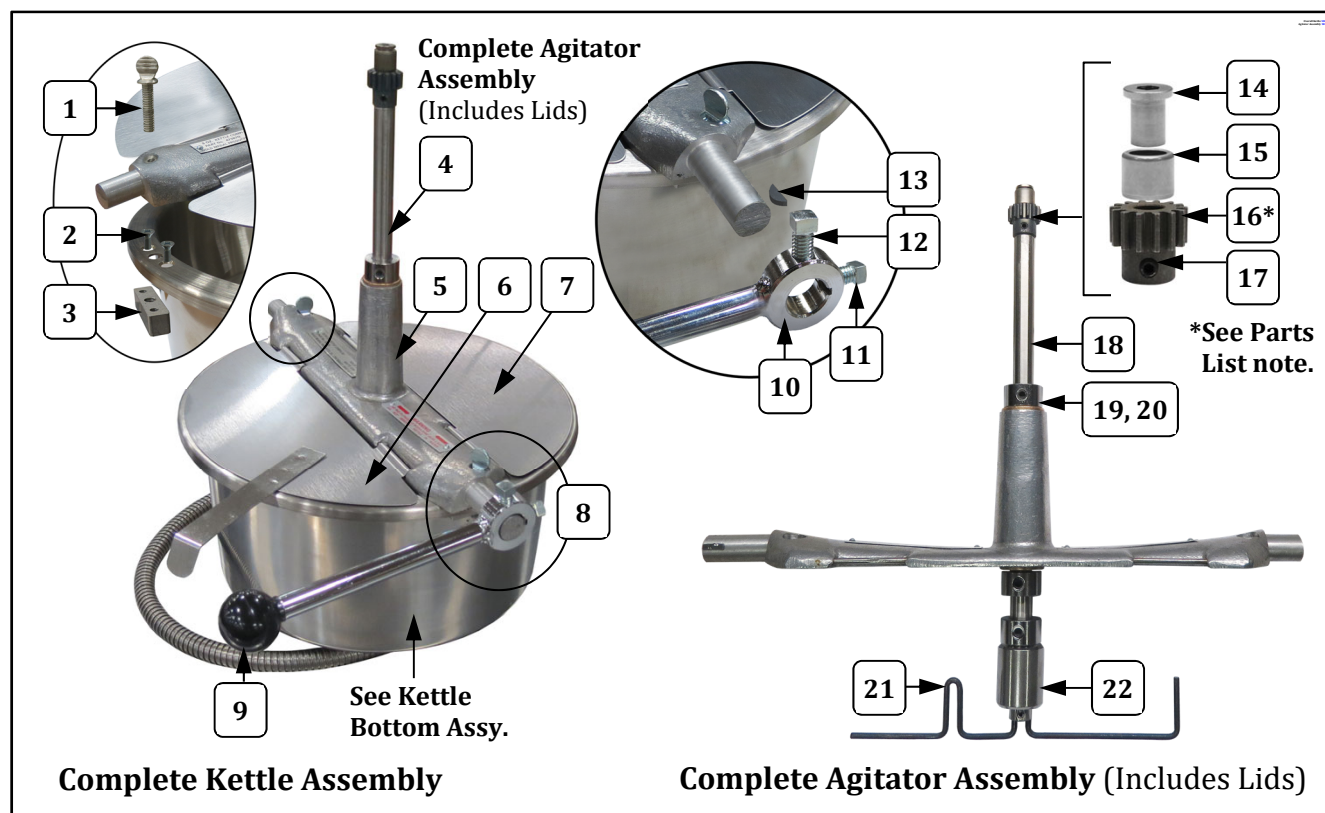


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

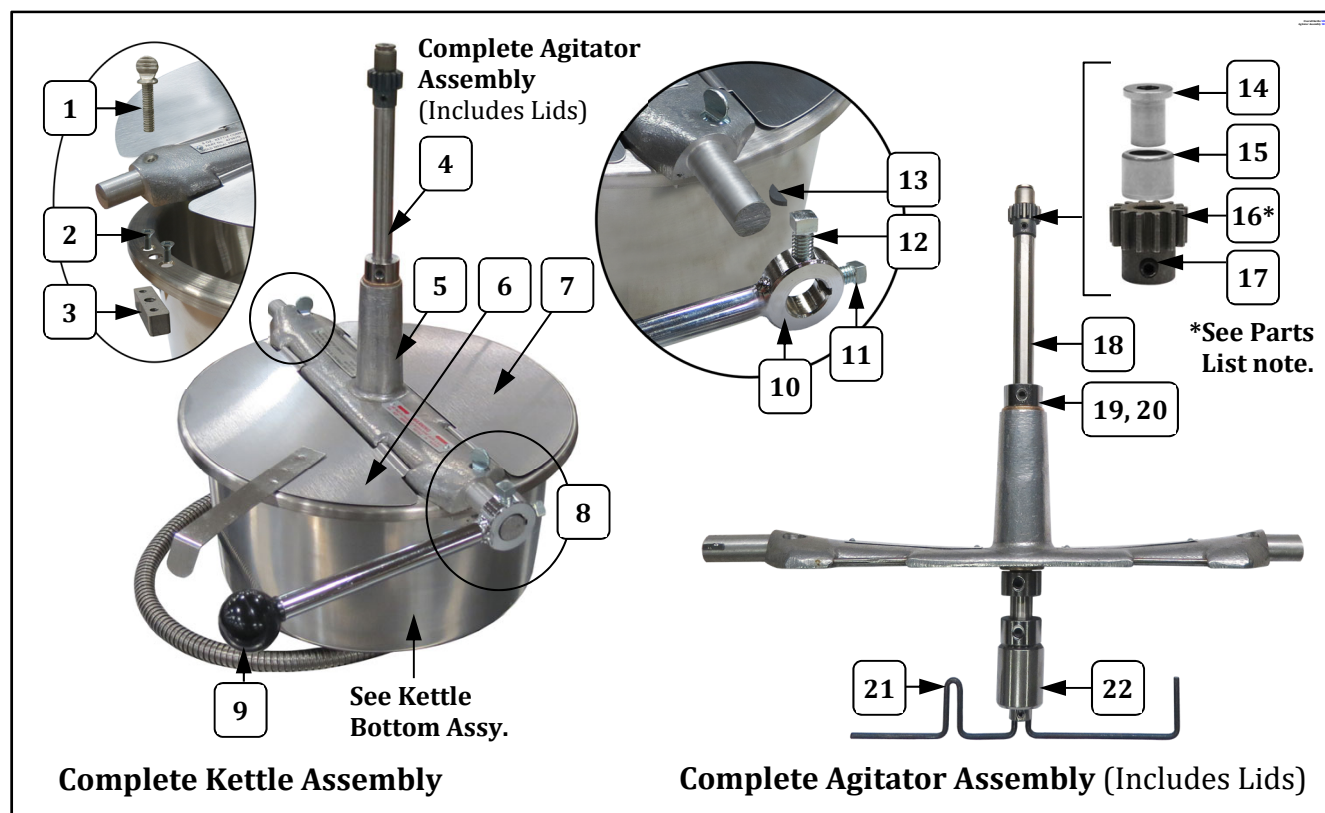


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

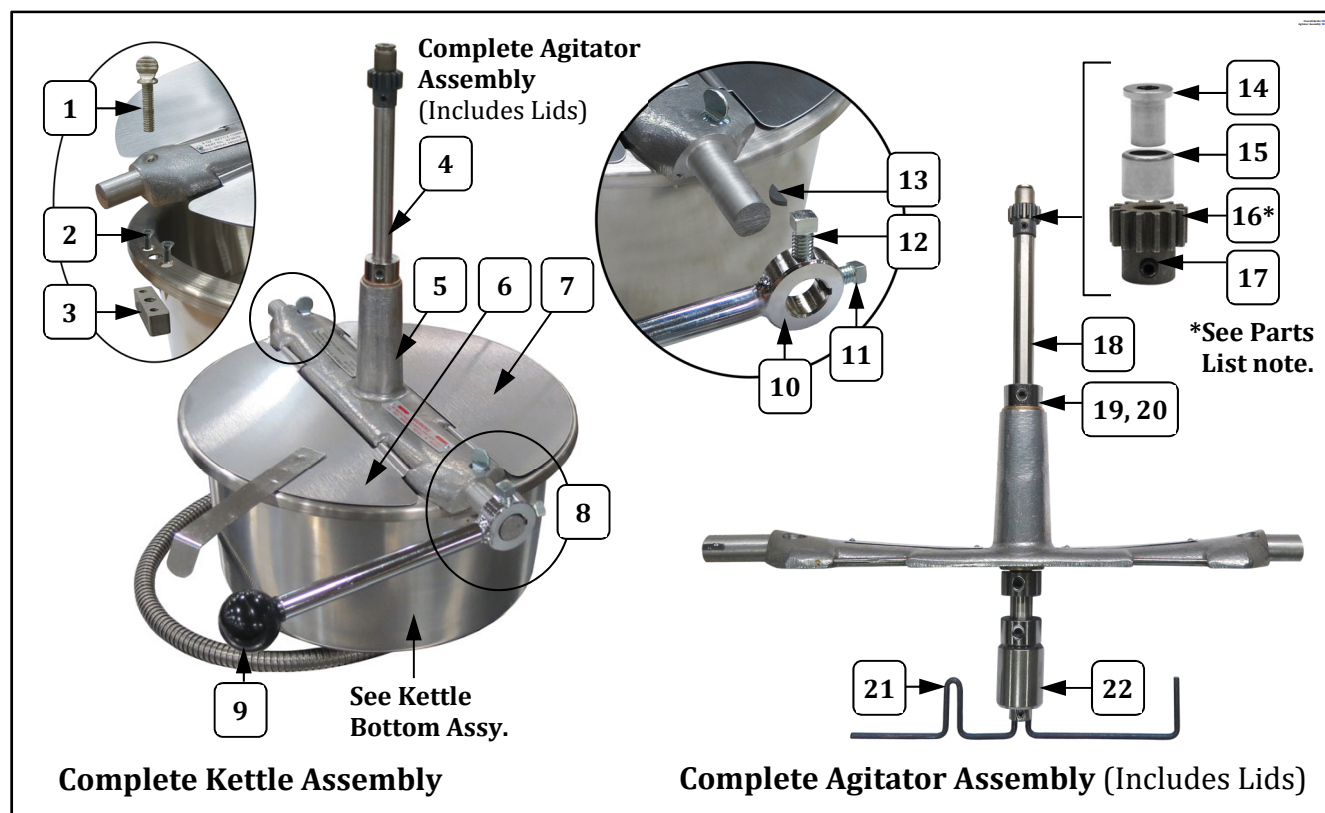


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

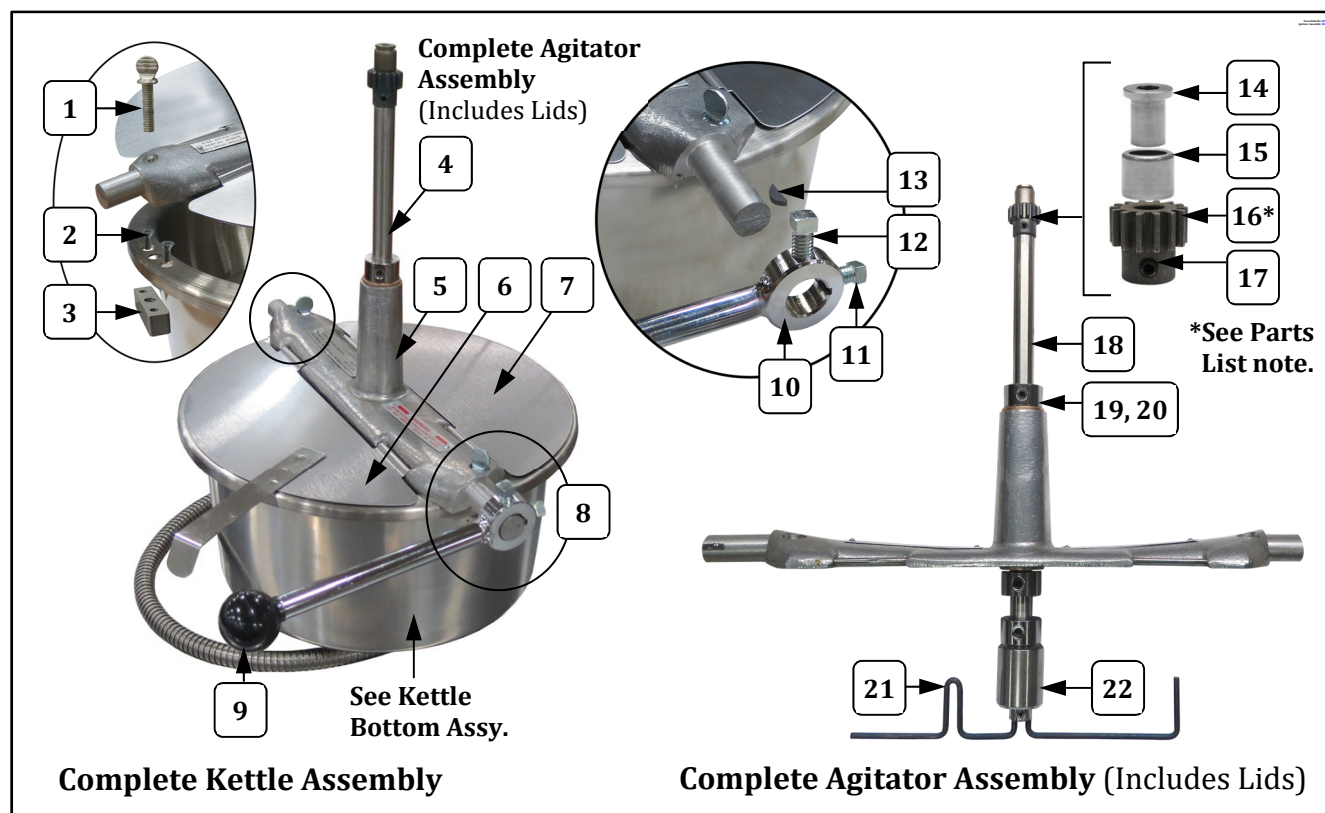


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

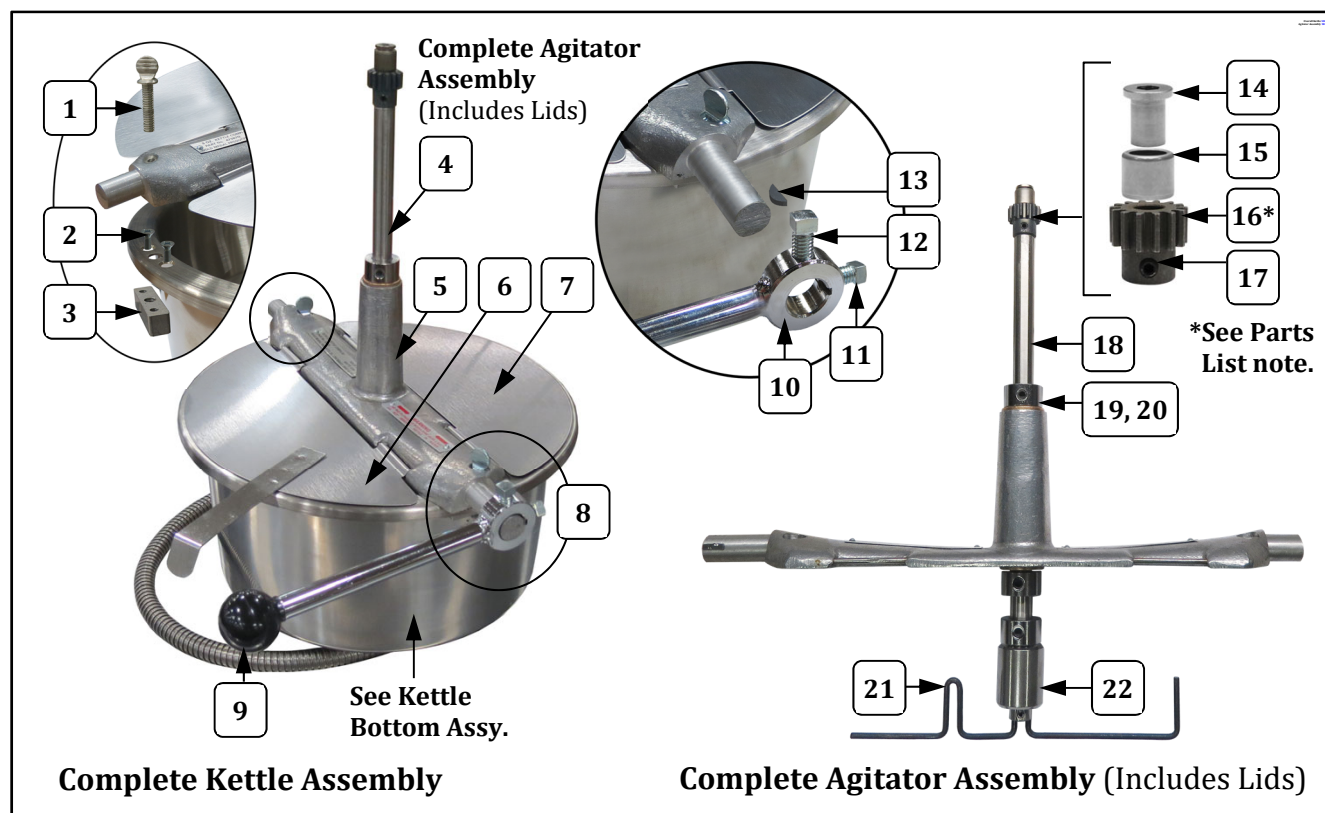


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

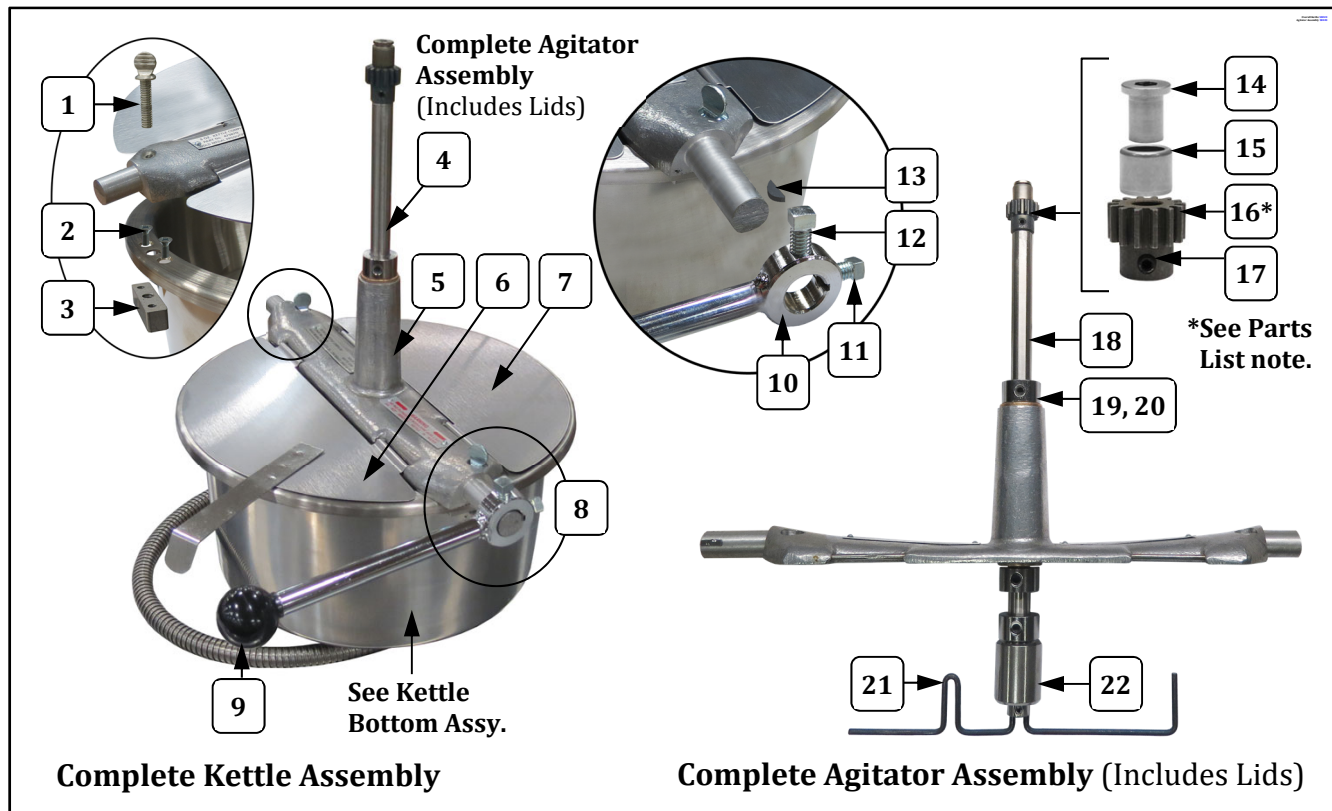


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

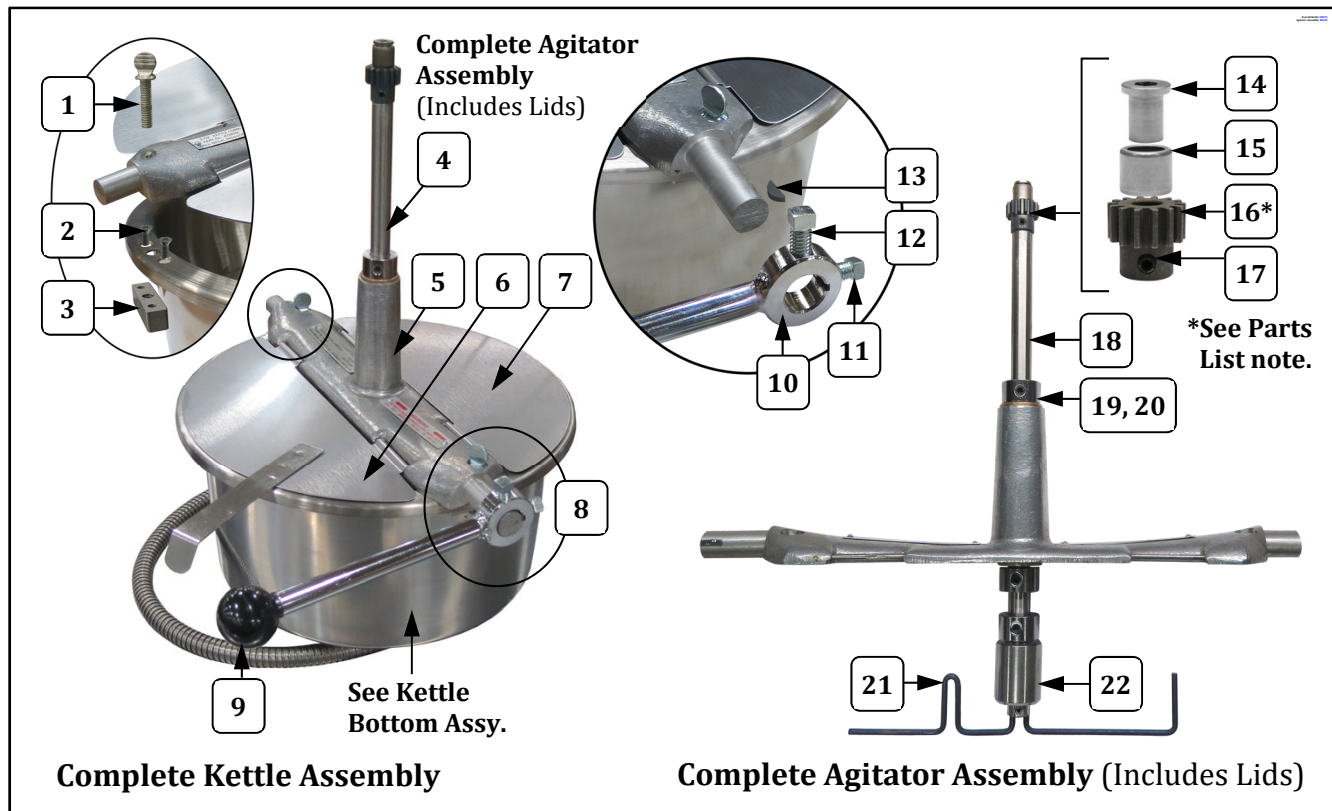


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

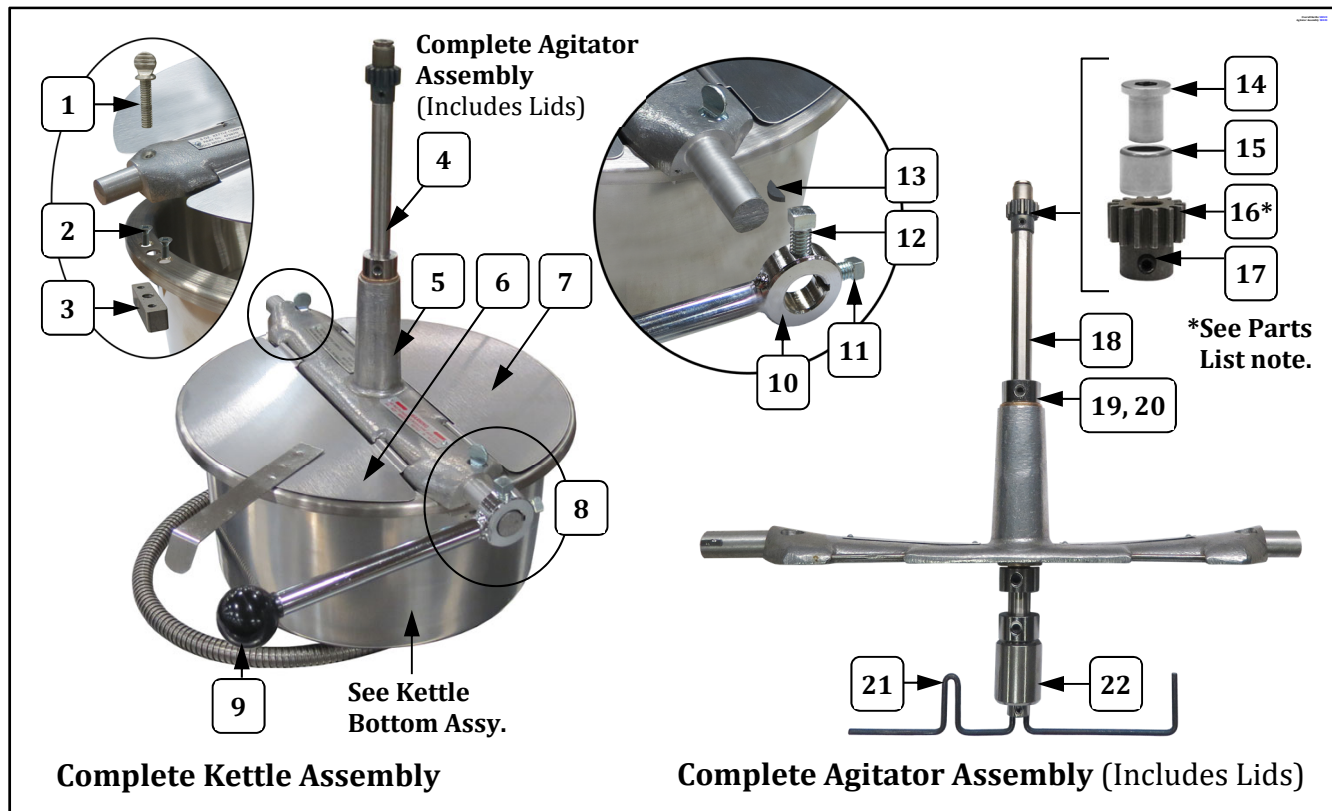


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

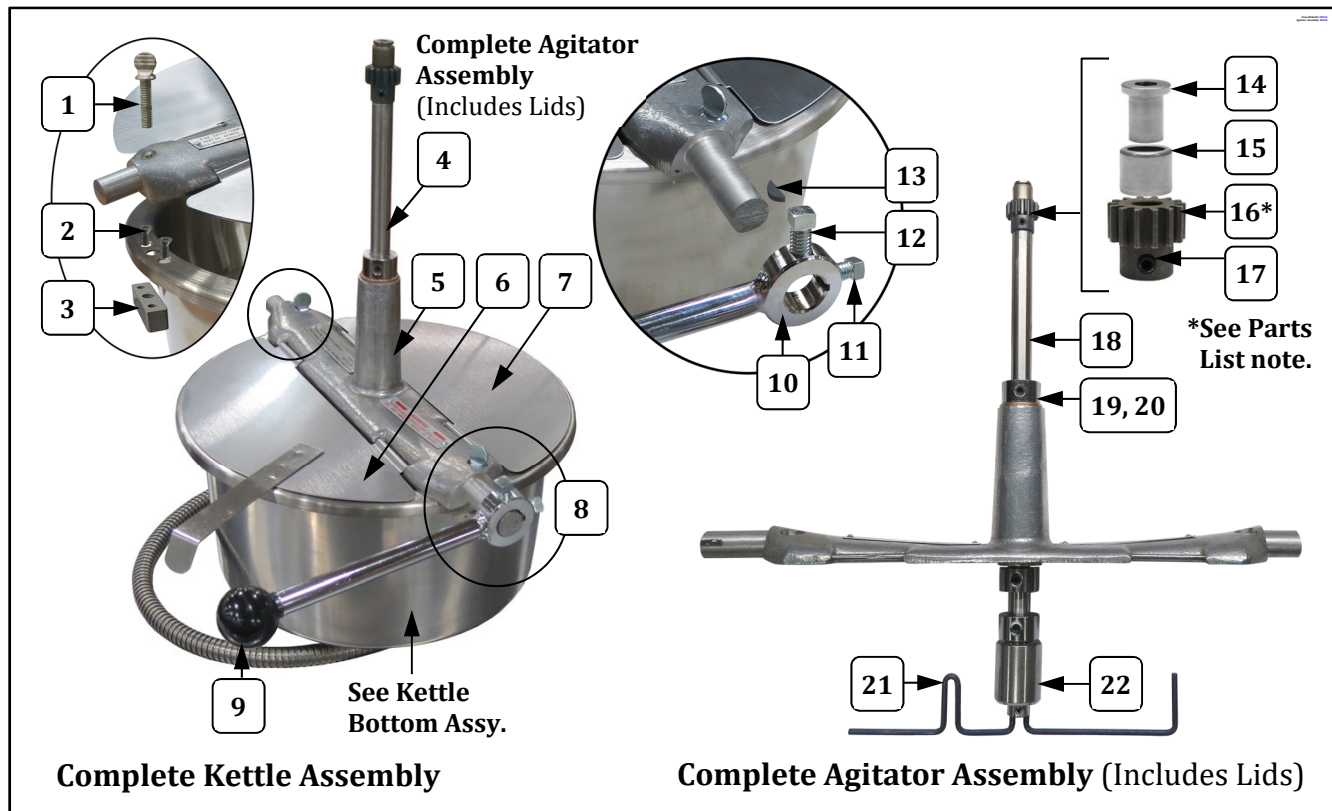


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

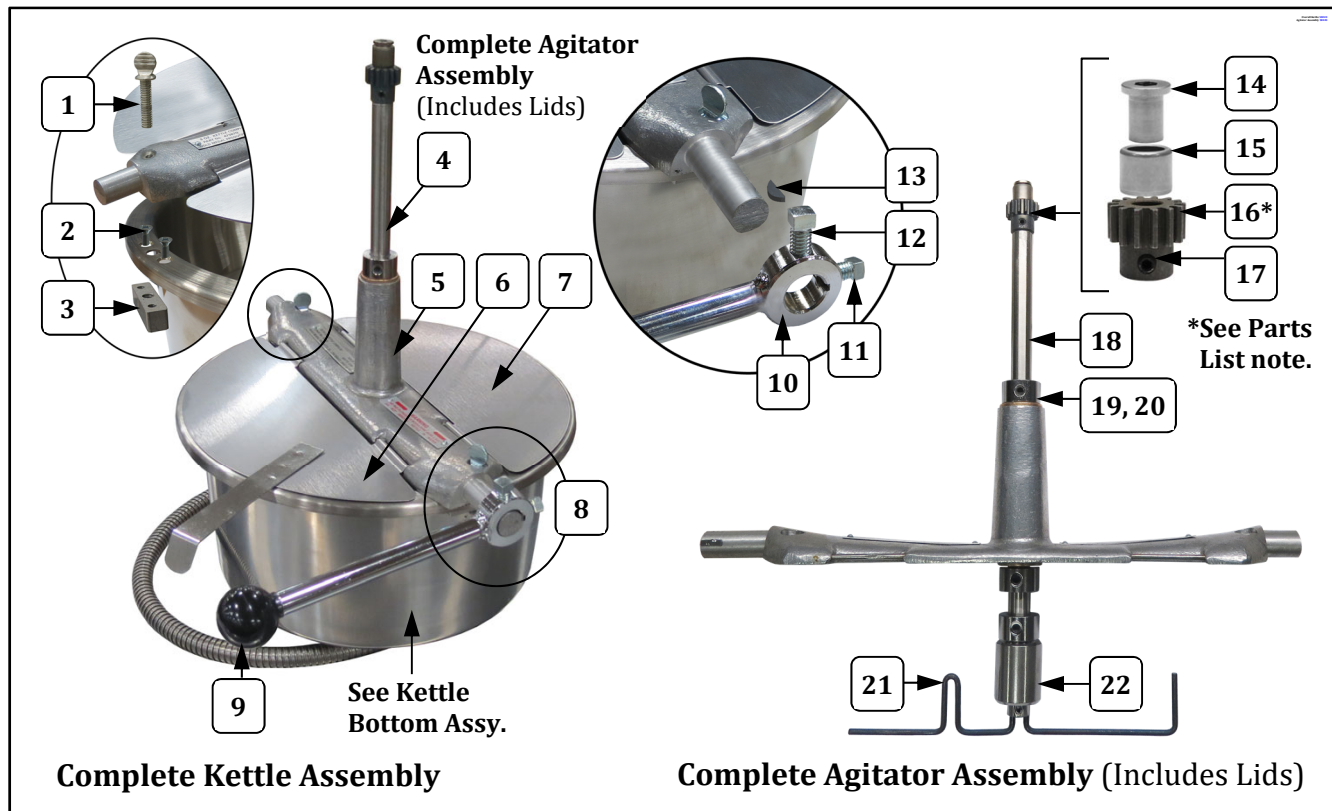


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

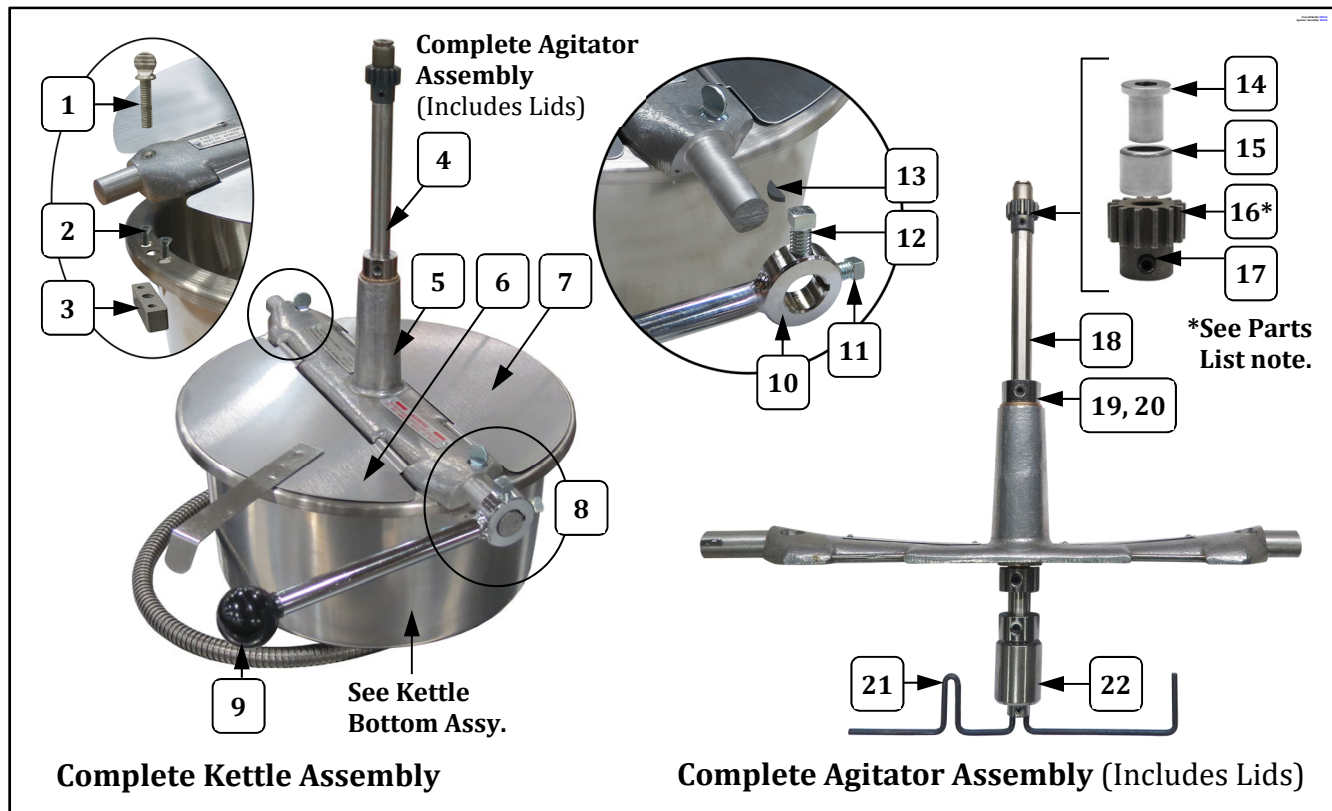


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

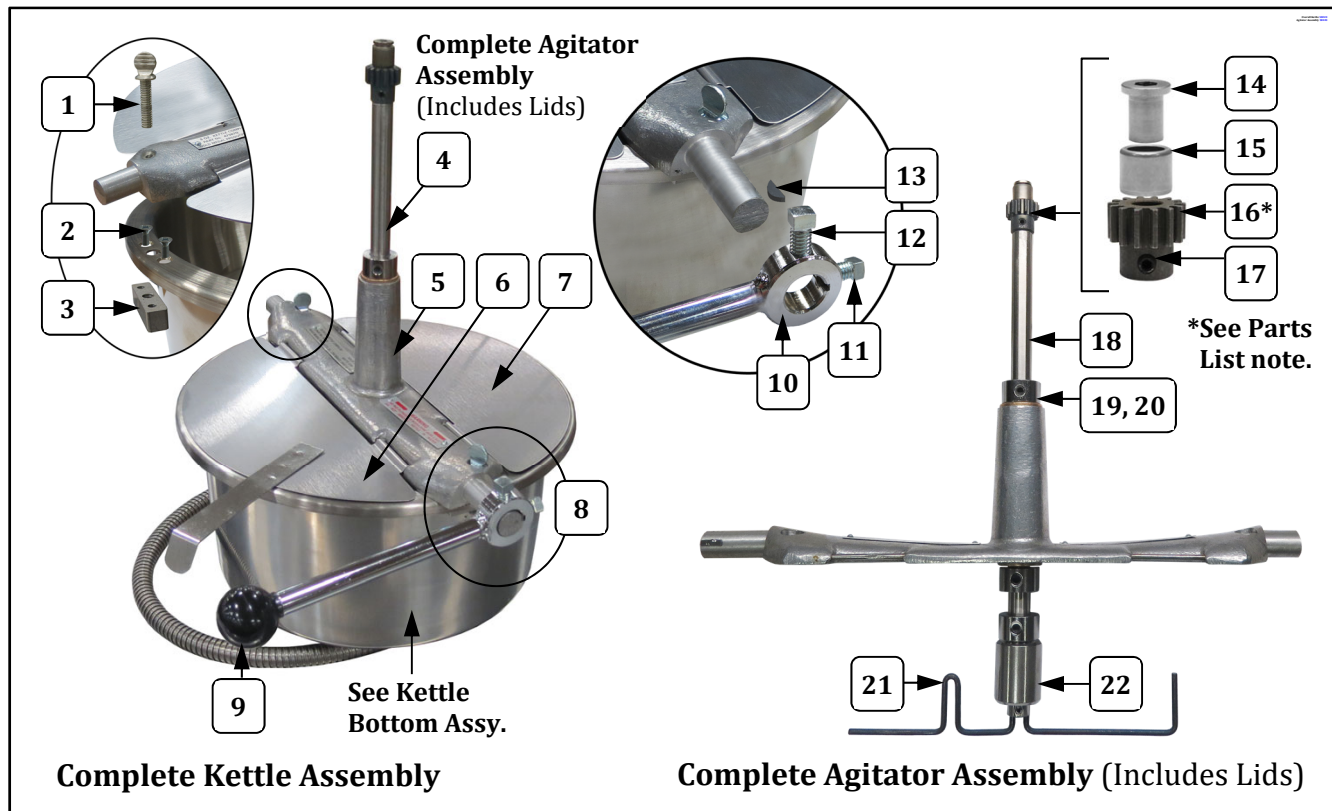


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

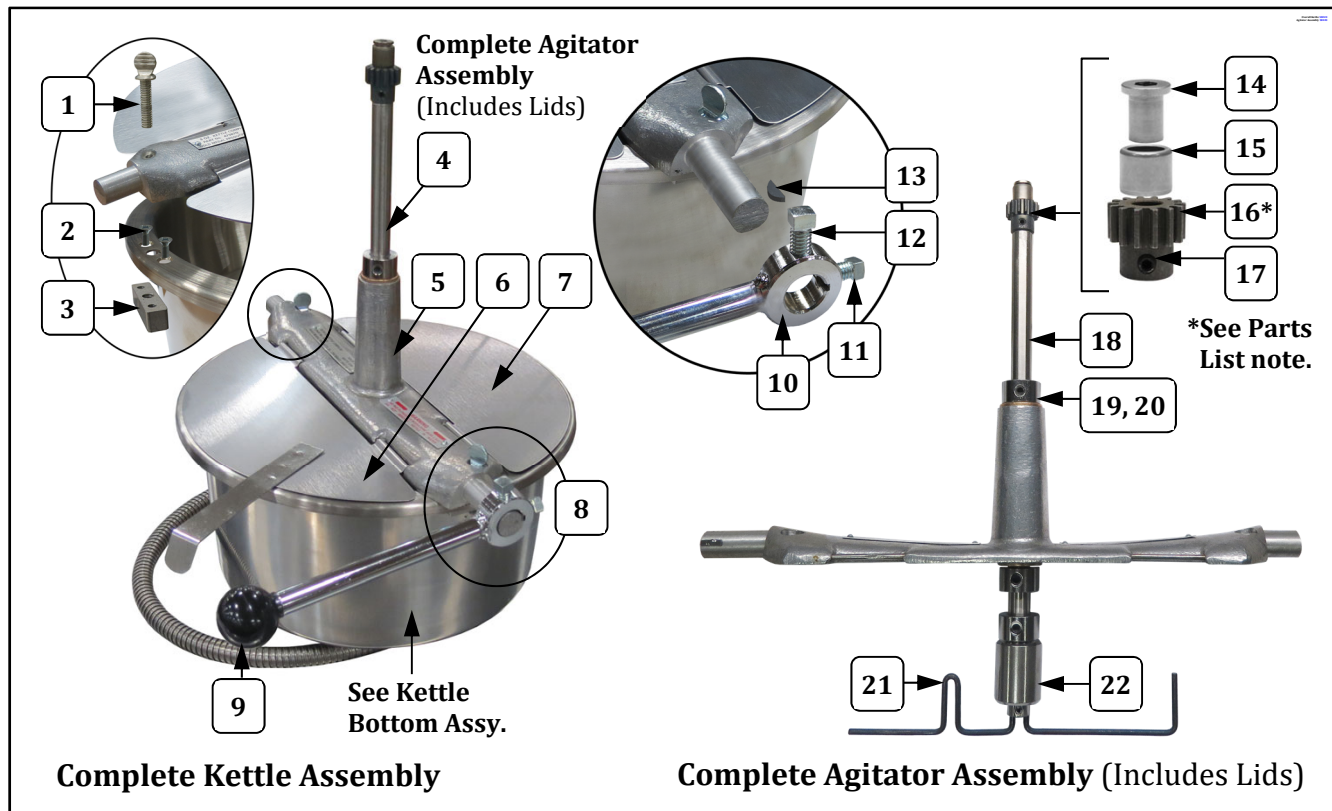


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

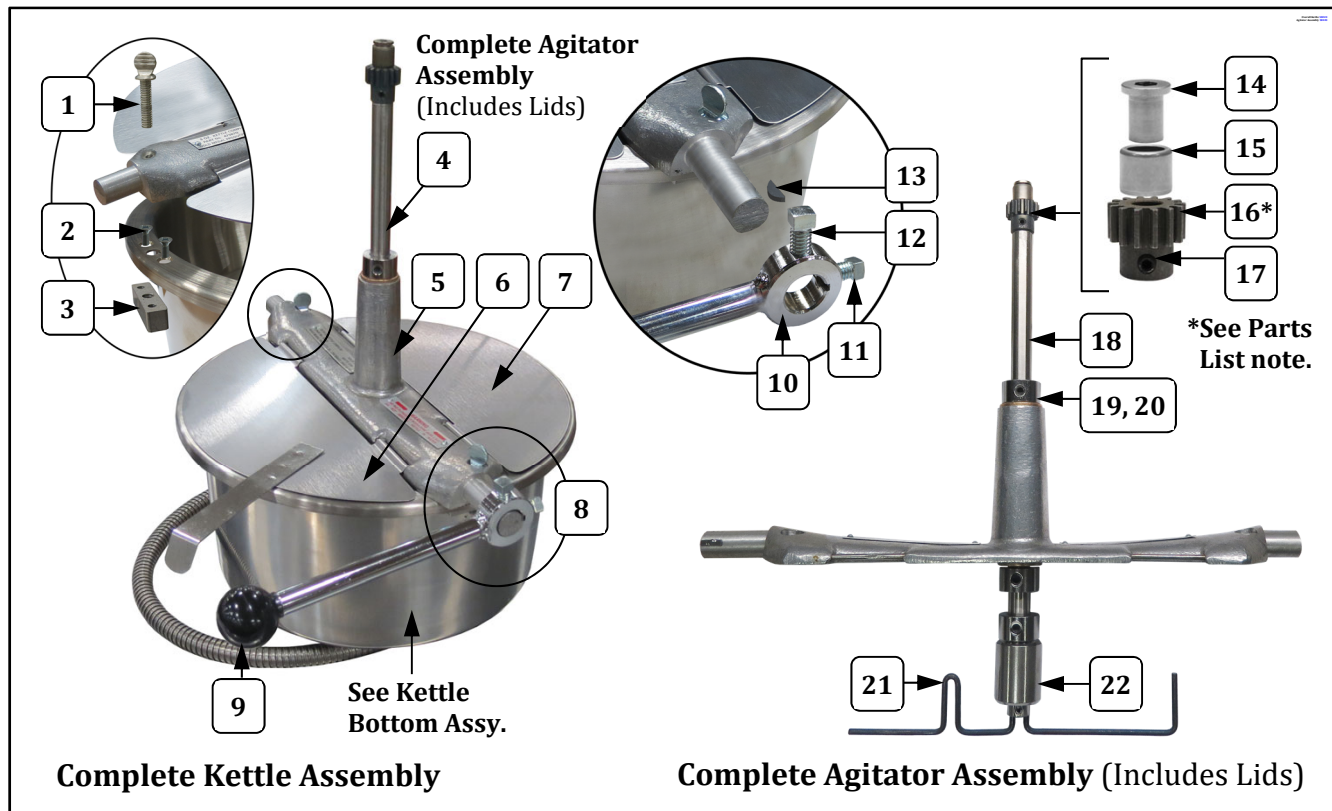


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

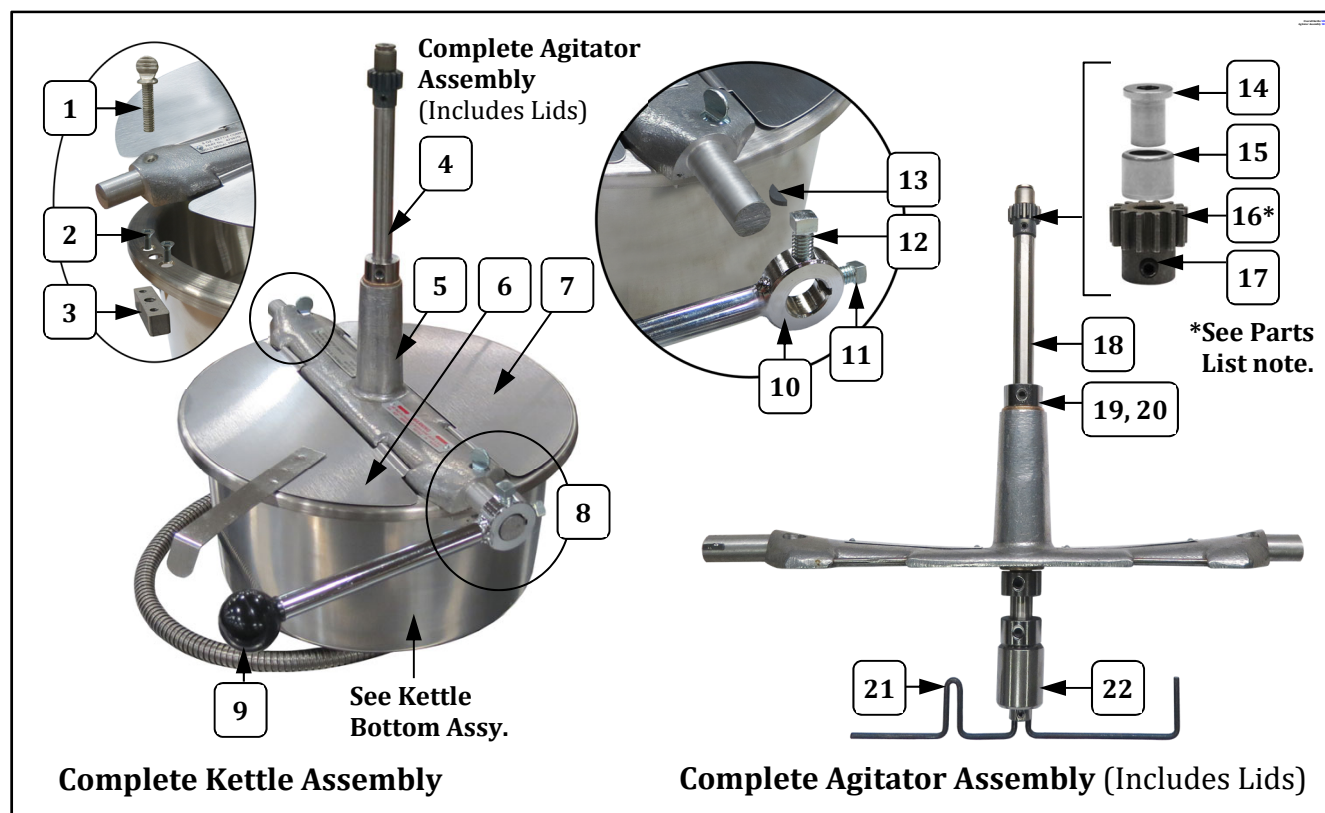


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

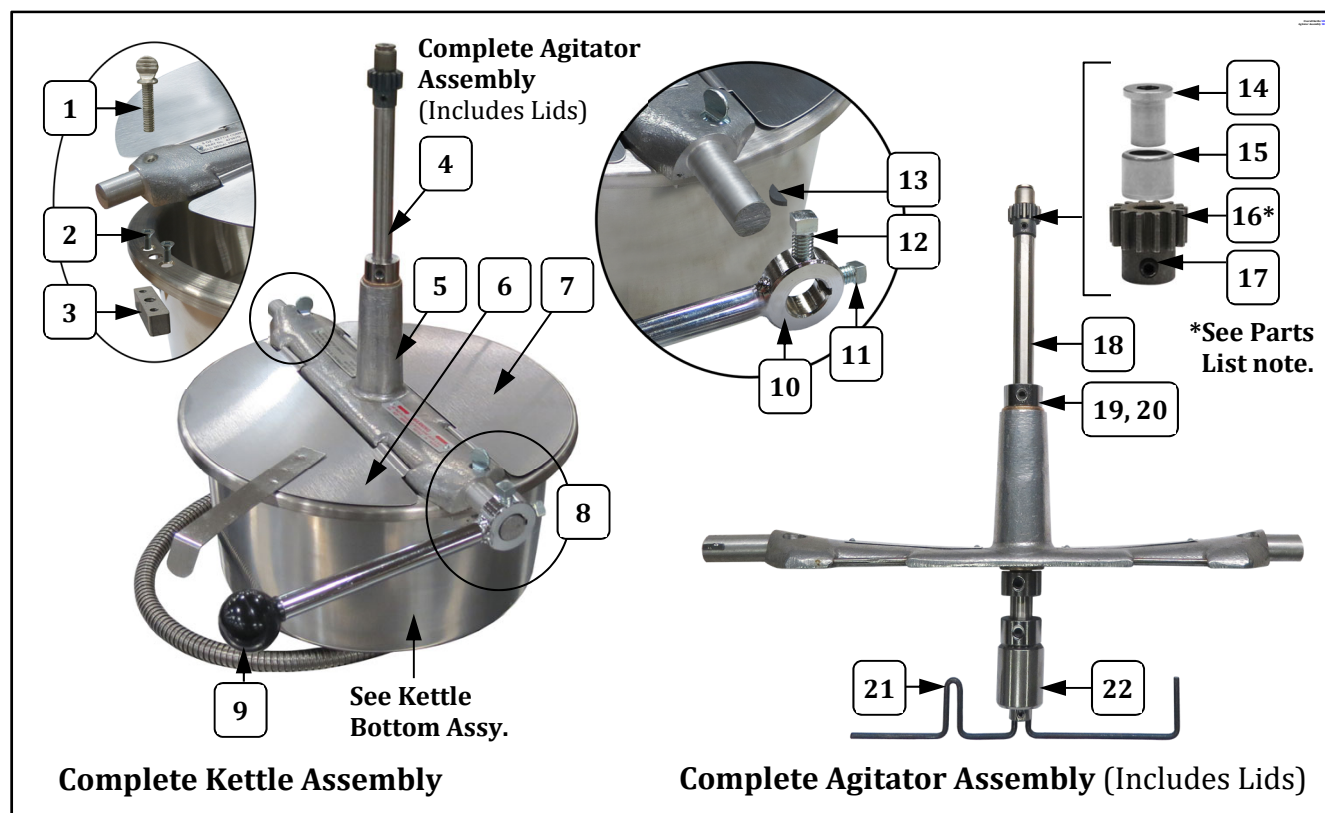


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

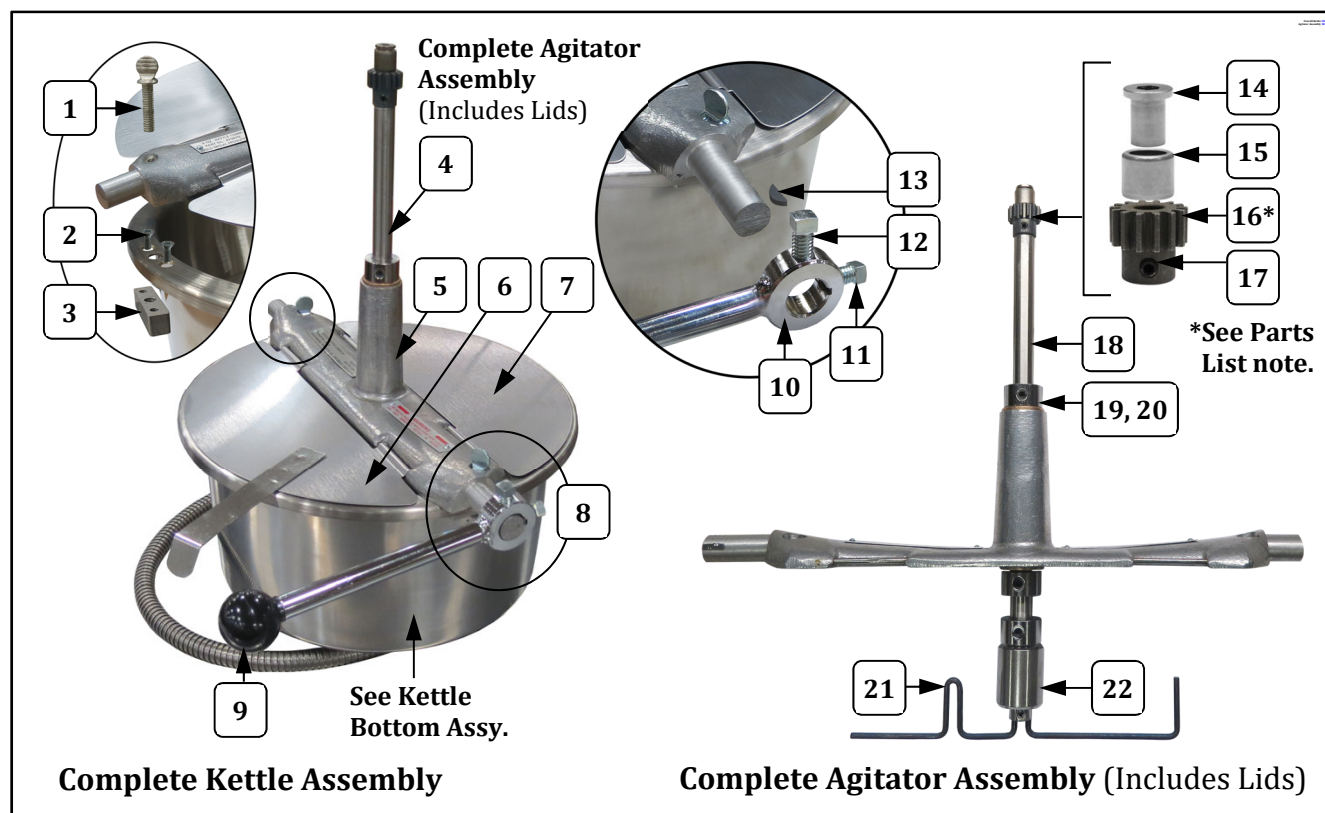


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

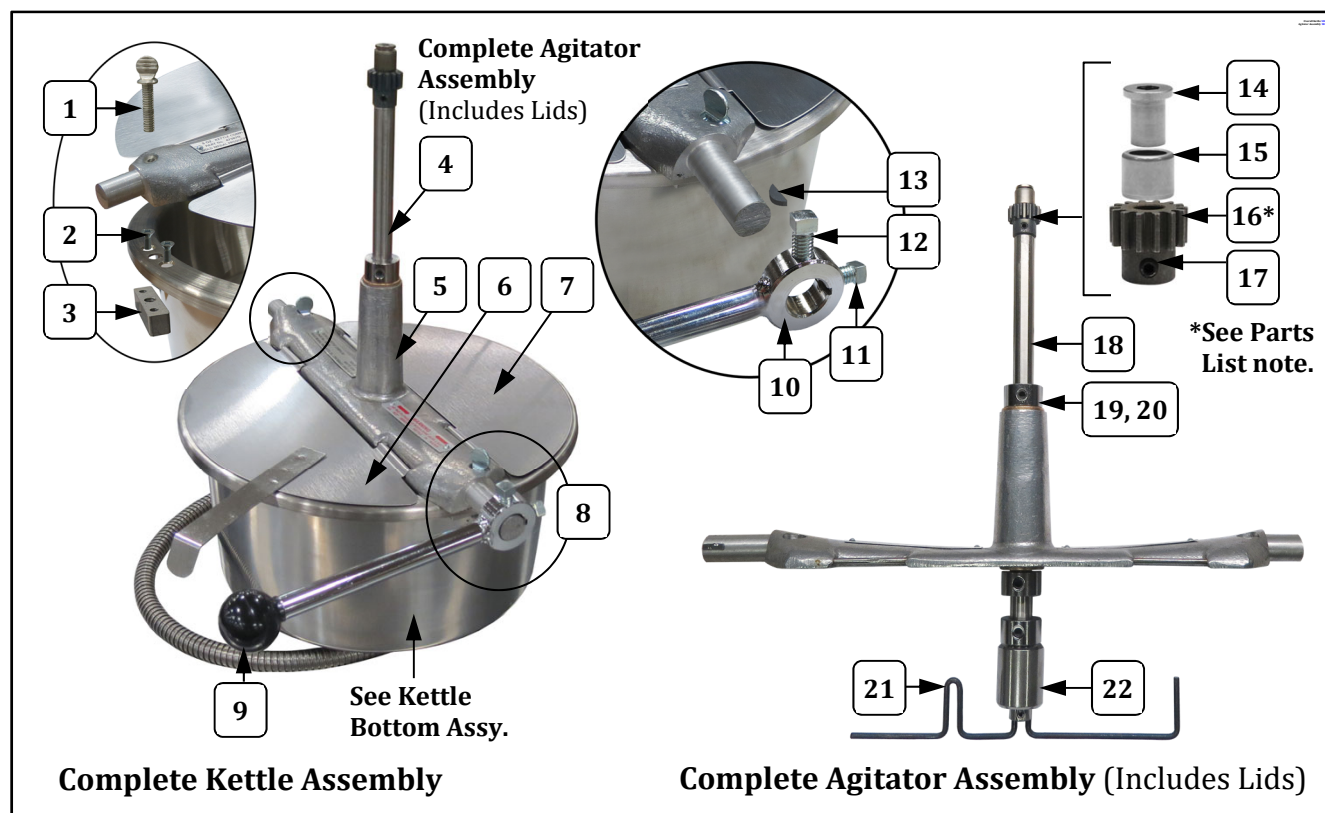


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

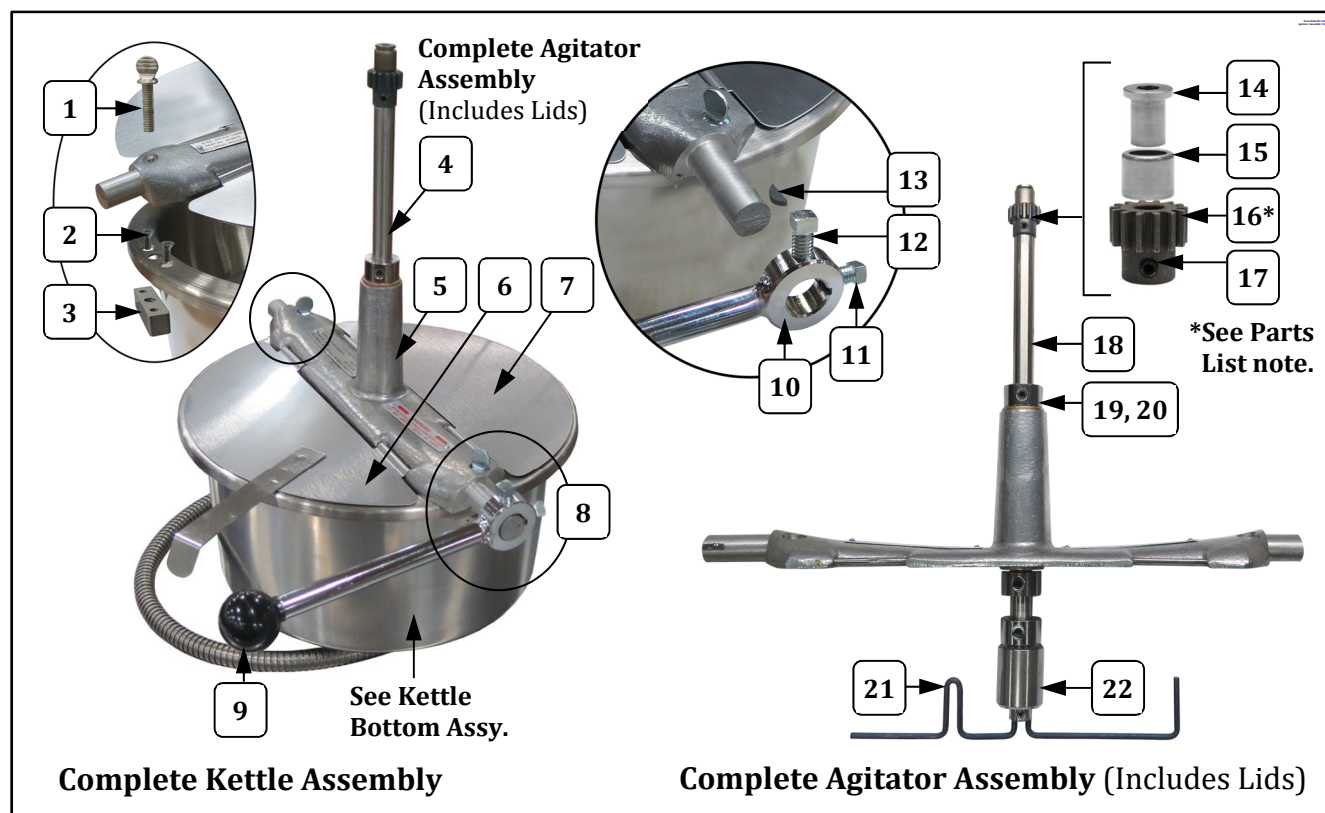


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

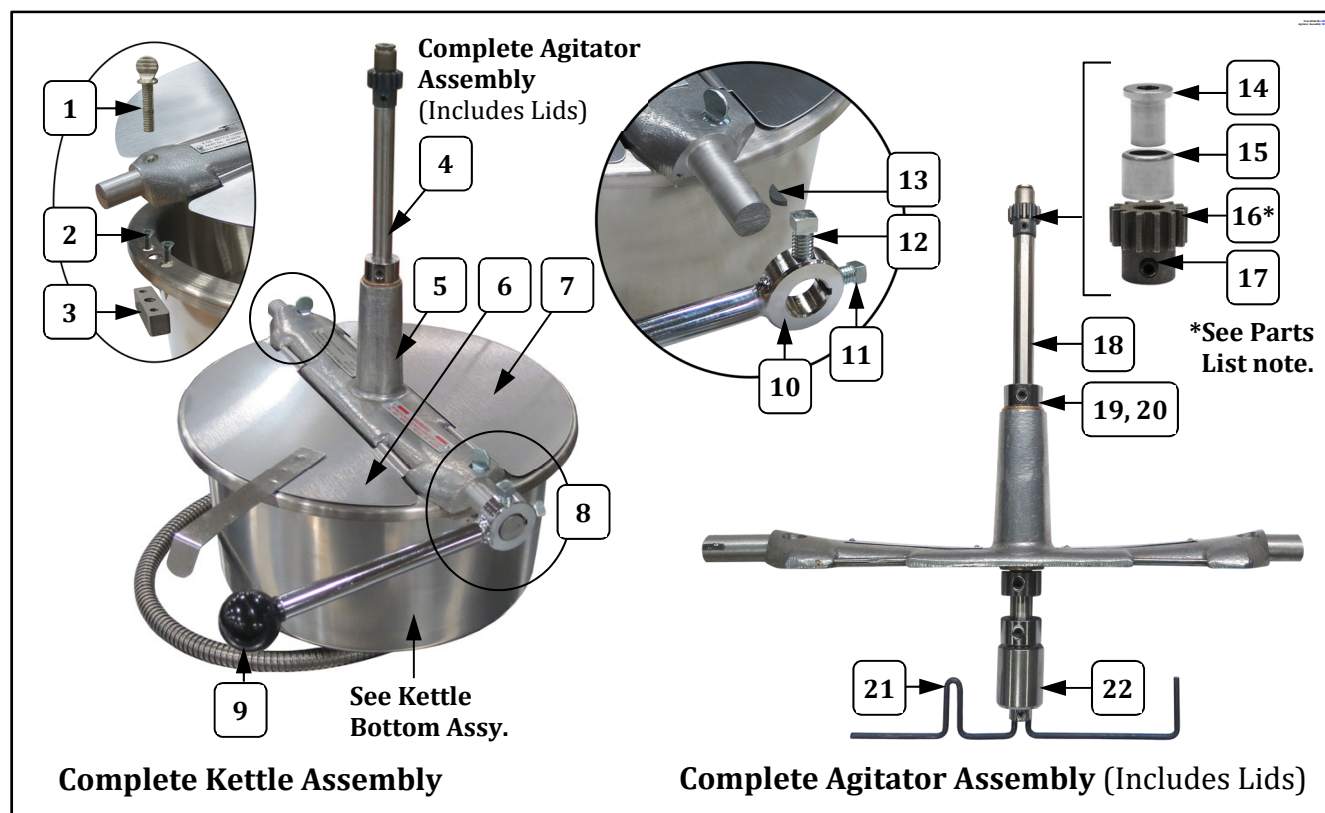


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

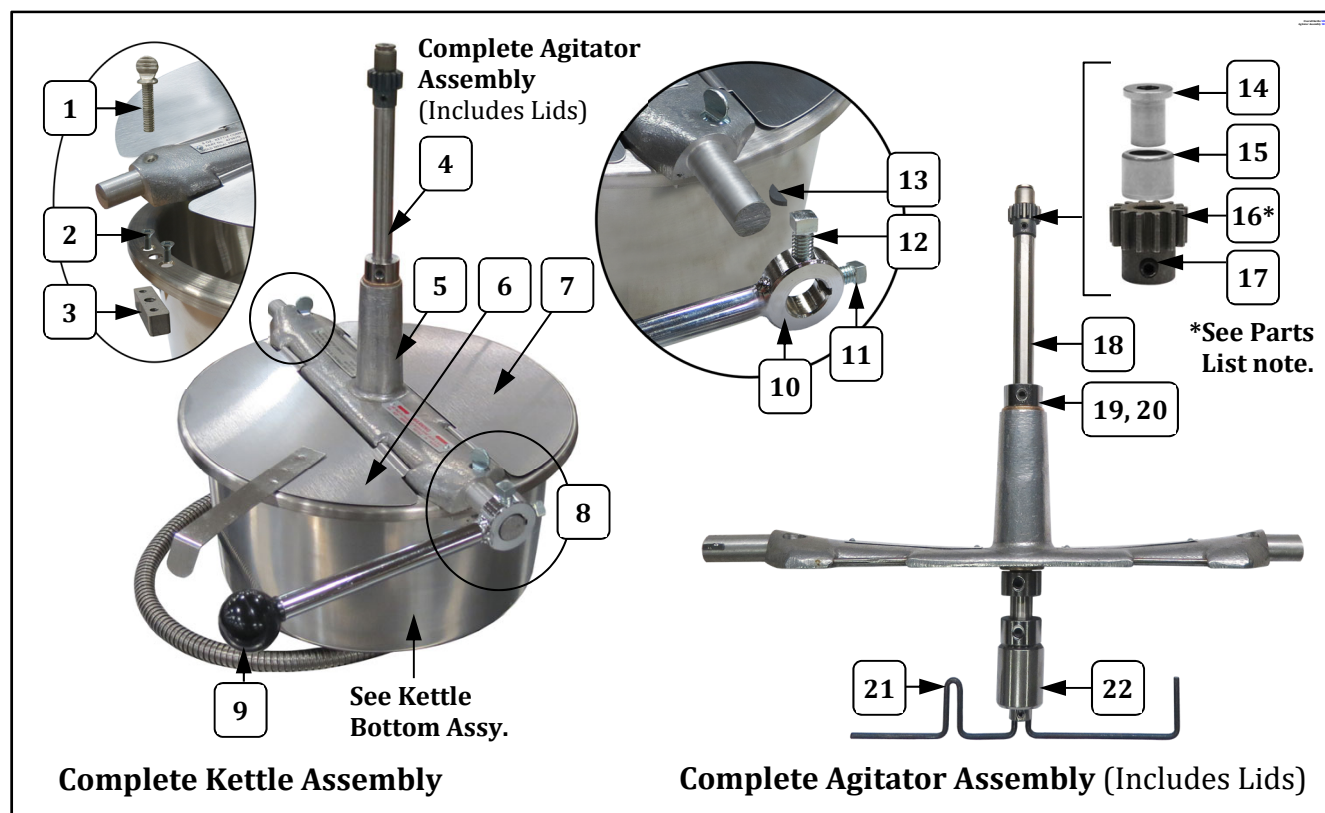


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

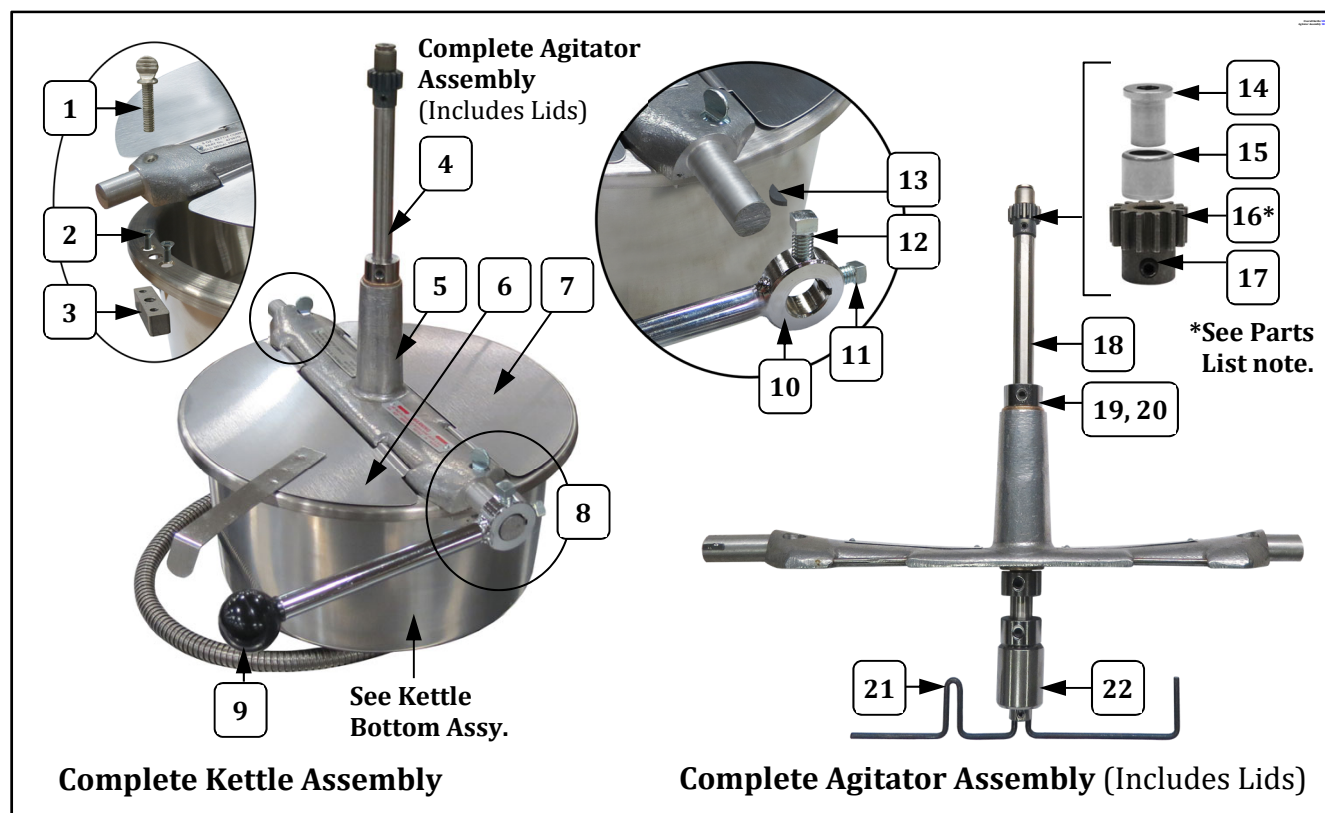


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

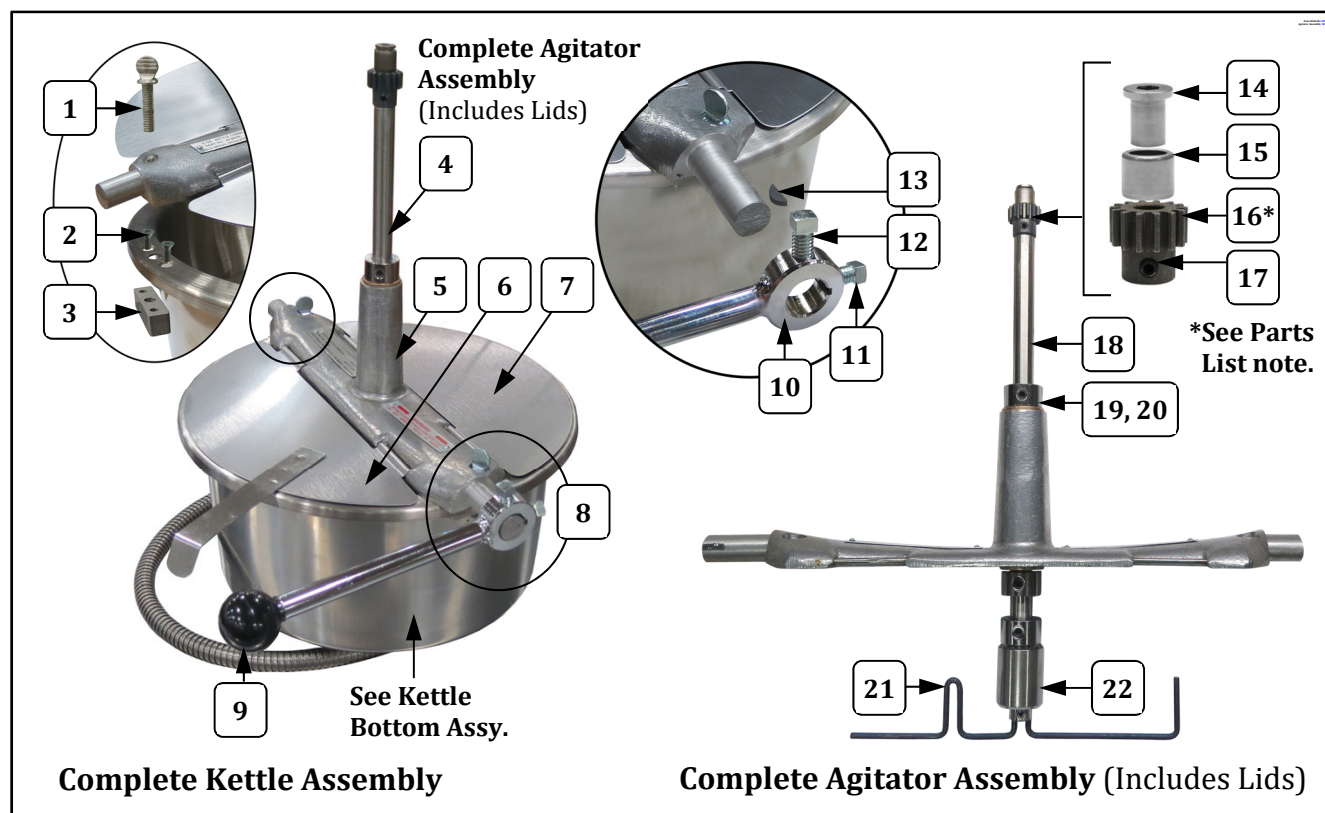


Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011

12/14 oz. Kettle Assy. (58220) – Agitator Assy.

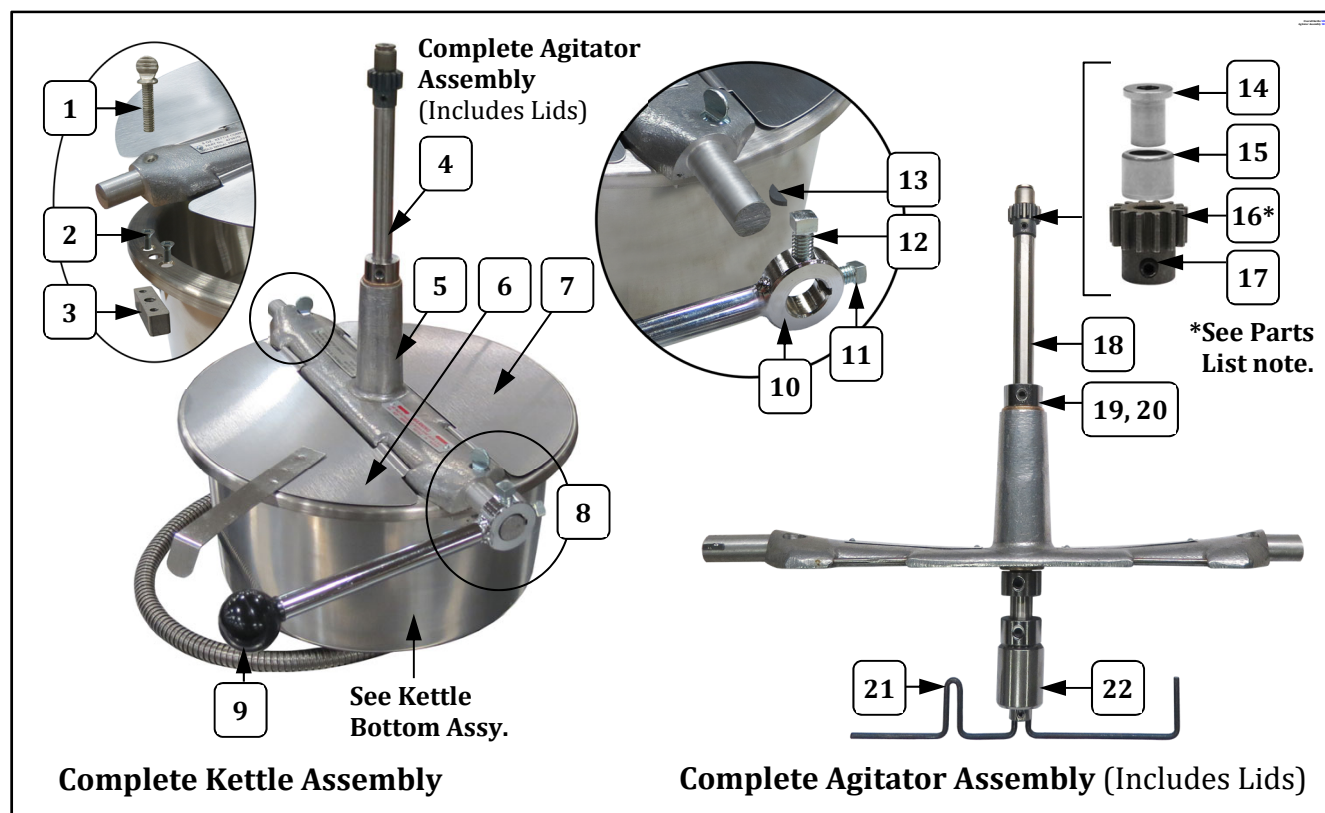

Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011


12/14 oz. Kettle Assy. (58220) – Agitator Assy.

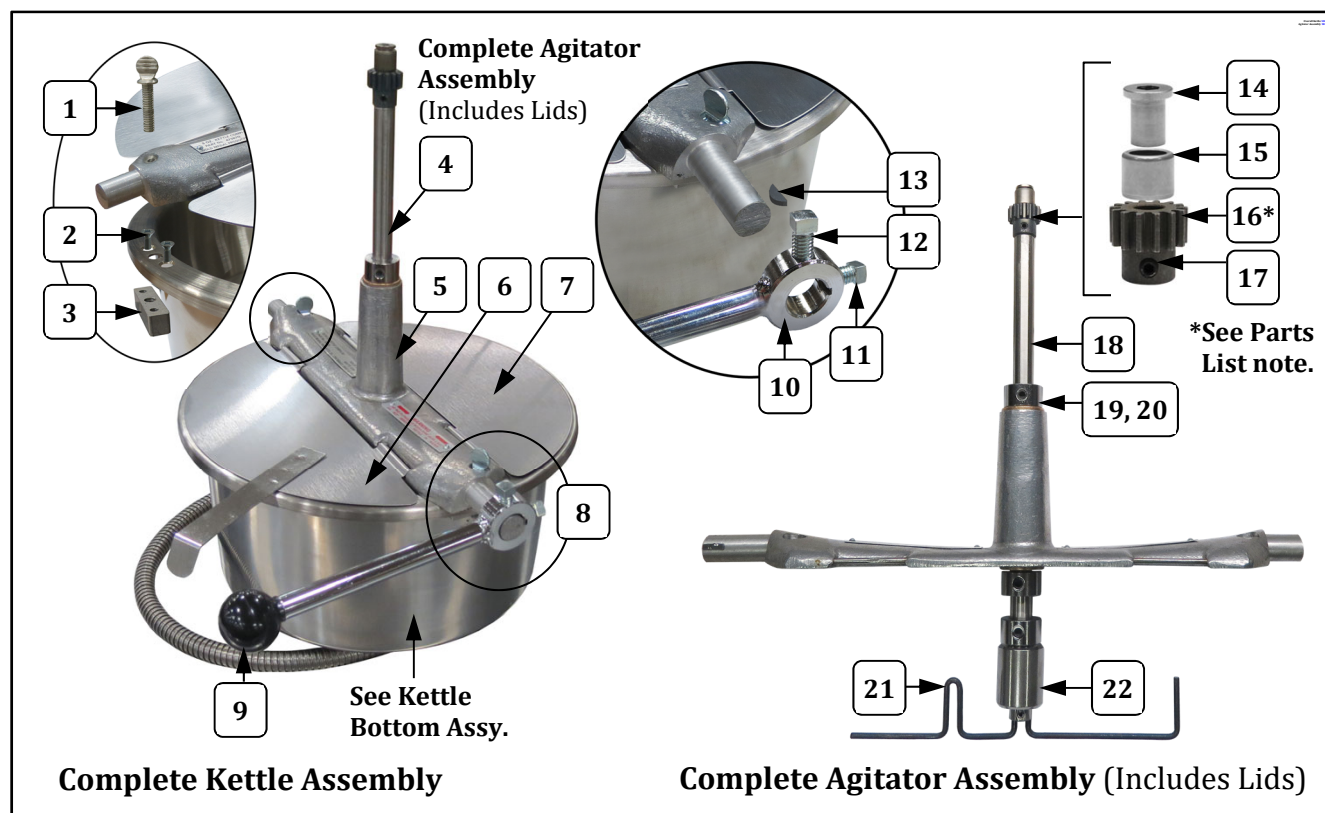

Item	Part Description	Part Number
		58220
1	1/4-20 X 1.25 THUMB SCREW	61068
2	8-32 x 1/2 FH MS PH	106064
3	SHELL & KETTLE BLOCK	61013
4	12/14 OZ LID&AGITATOR ASSY (Complete Assy.)	58219
5	CROSSBAR ASSEMBLY	61025
6	FORMED LID	47261
7	REAR KETTLE LID	47119
8	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
9	DUMP HANDLE KNOB	47110
10	DUMP HANDLE	47707
11	5/16-18 X 3/8 SQ HD SCREW (holds Key)	47662
12	5/16-18 X 1/2 SQ HD SCREW	47725
13	WOODRUFF KEY #3 1/8X1/2	41730
14	AGITATOR BEARING HUB	43434
15	NEEDLE BEARING	47106
16*	SPUR GEAR Kit (Includes 2 gears w/set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
17	10-32 X 3/16 SET SCREW	41742
18	AGITATOR SHAFT	61092
19	1/2ID X 7/8OD SET COLLAR	47326
20	SET SCREW 1/4-20 X 3/16	47751
21	AGITATOR WEIGHT	61093
22	STIR ROD	49011




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

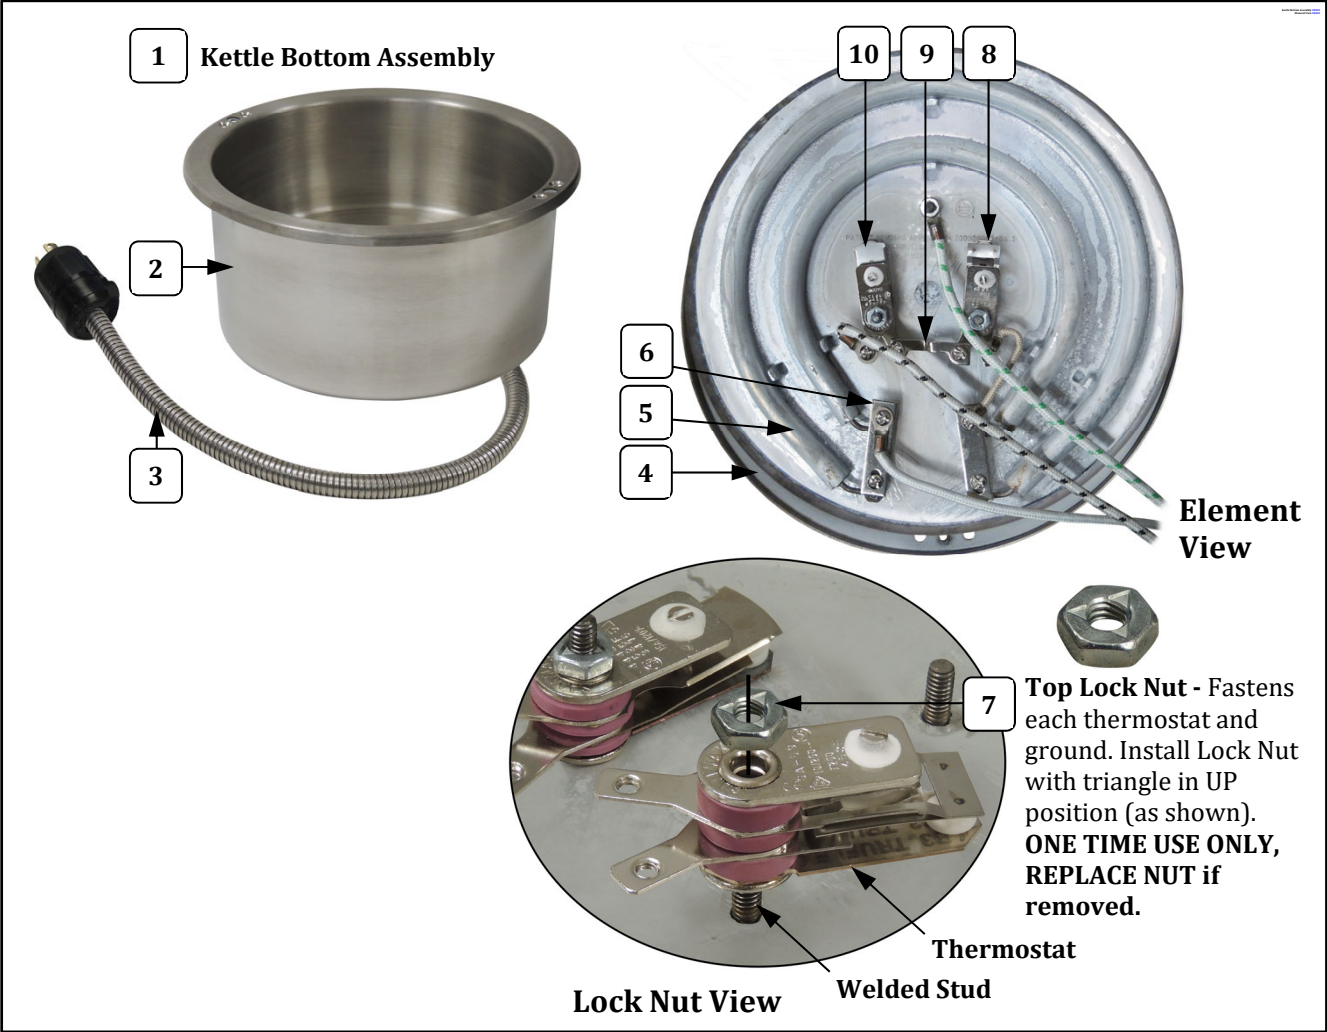

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

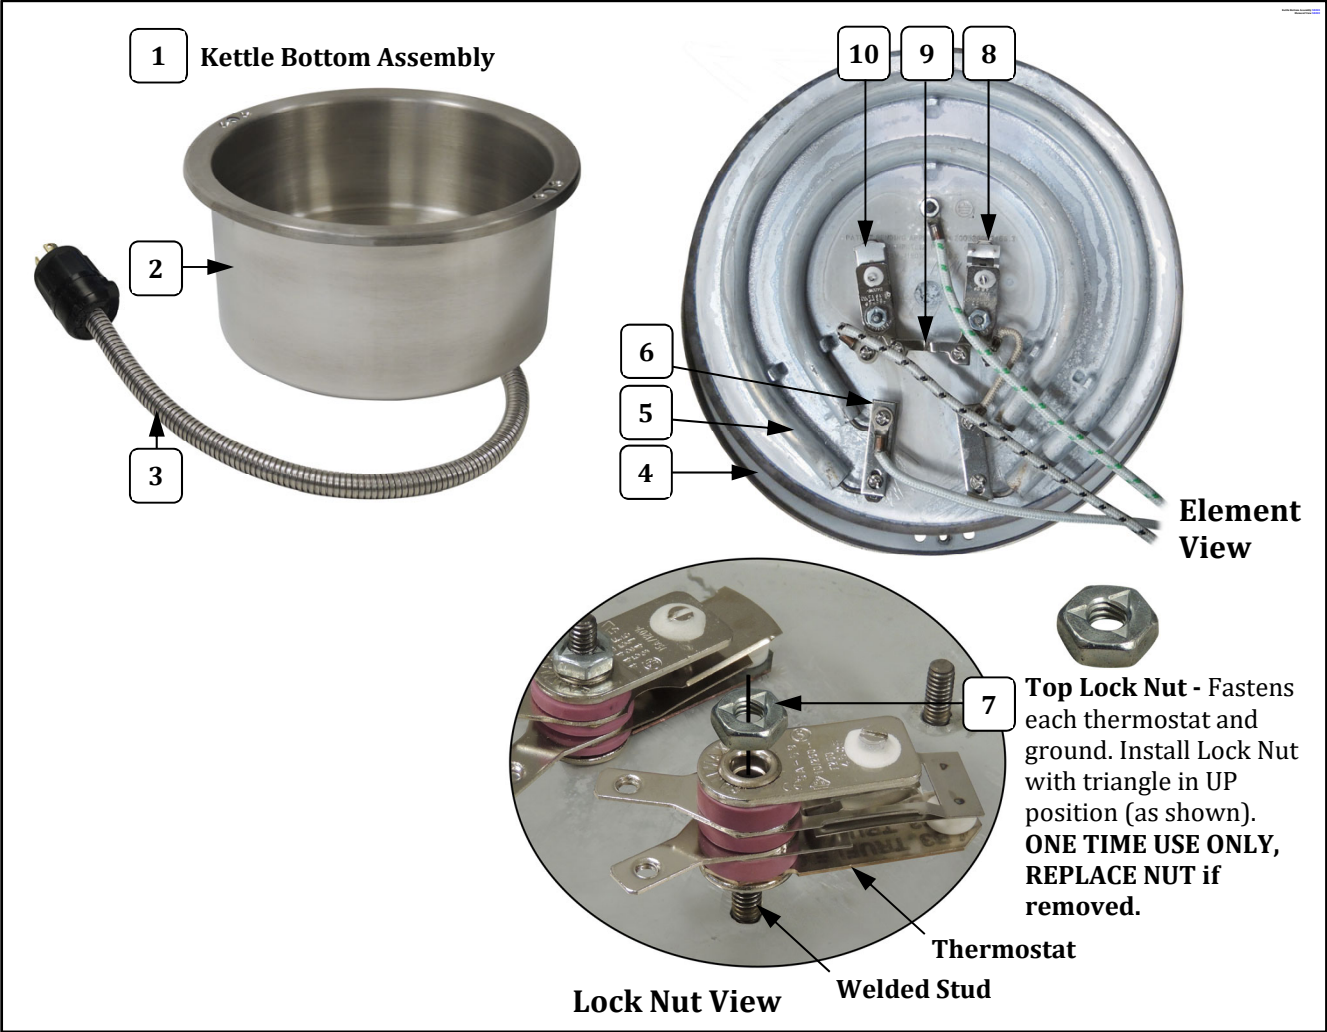

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

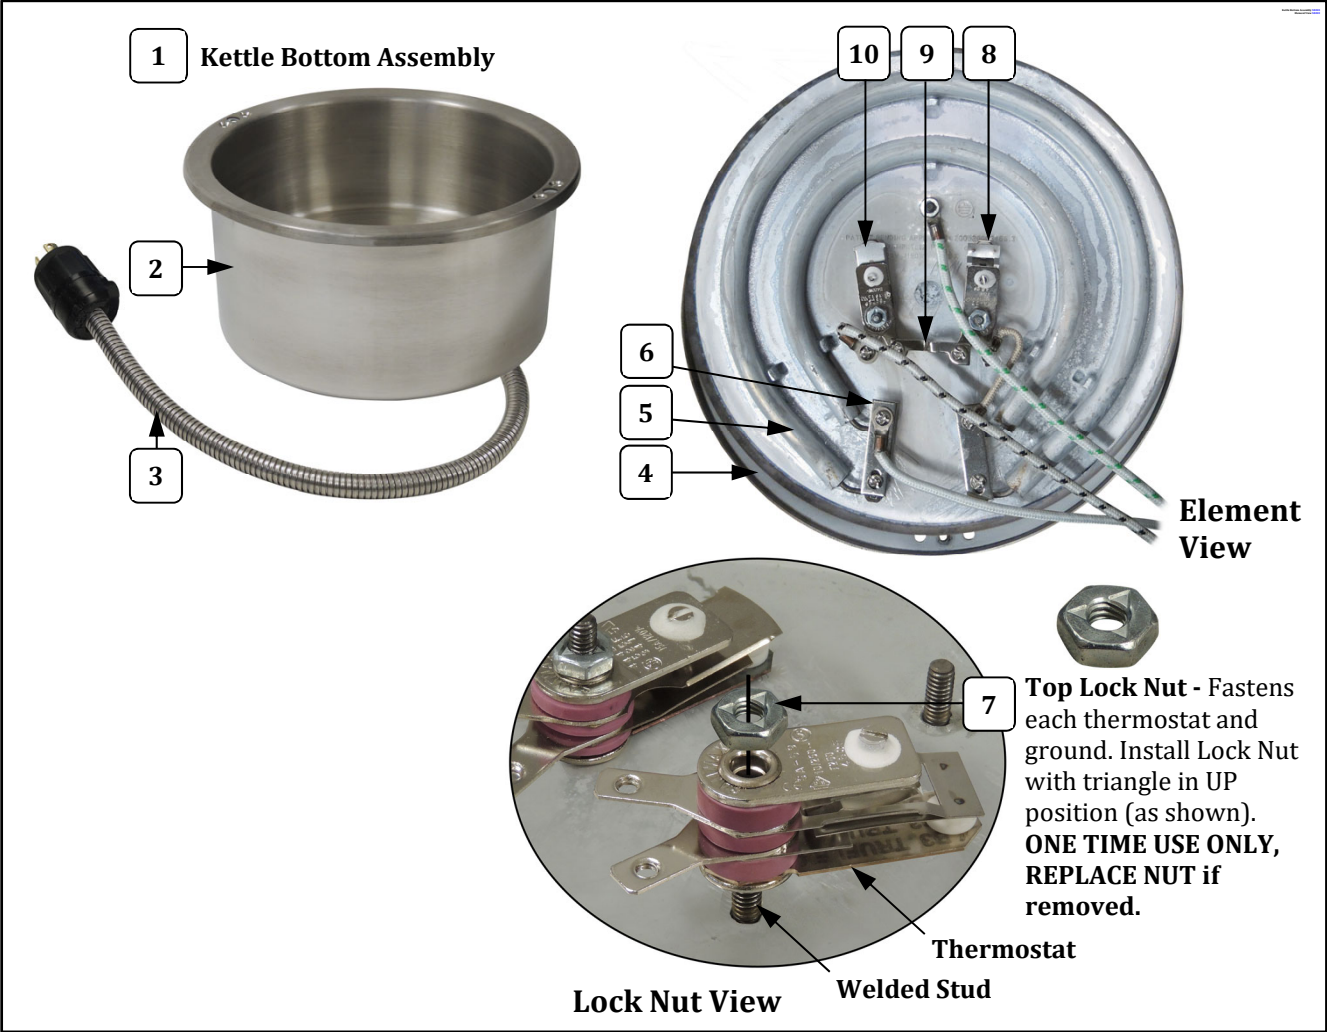

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

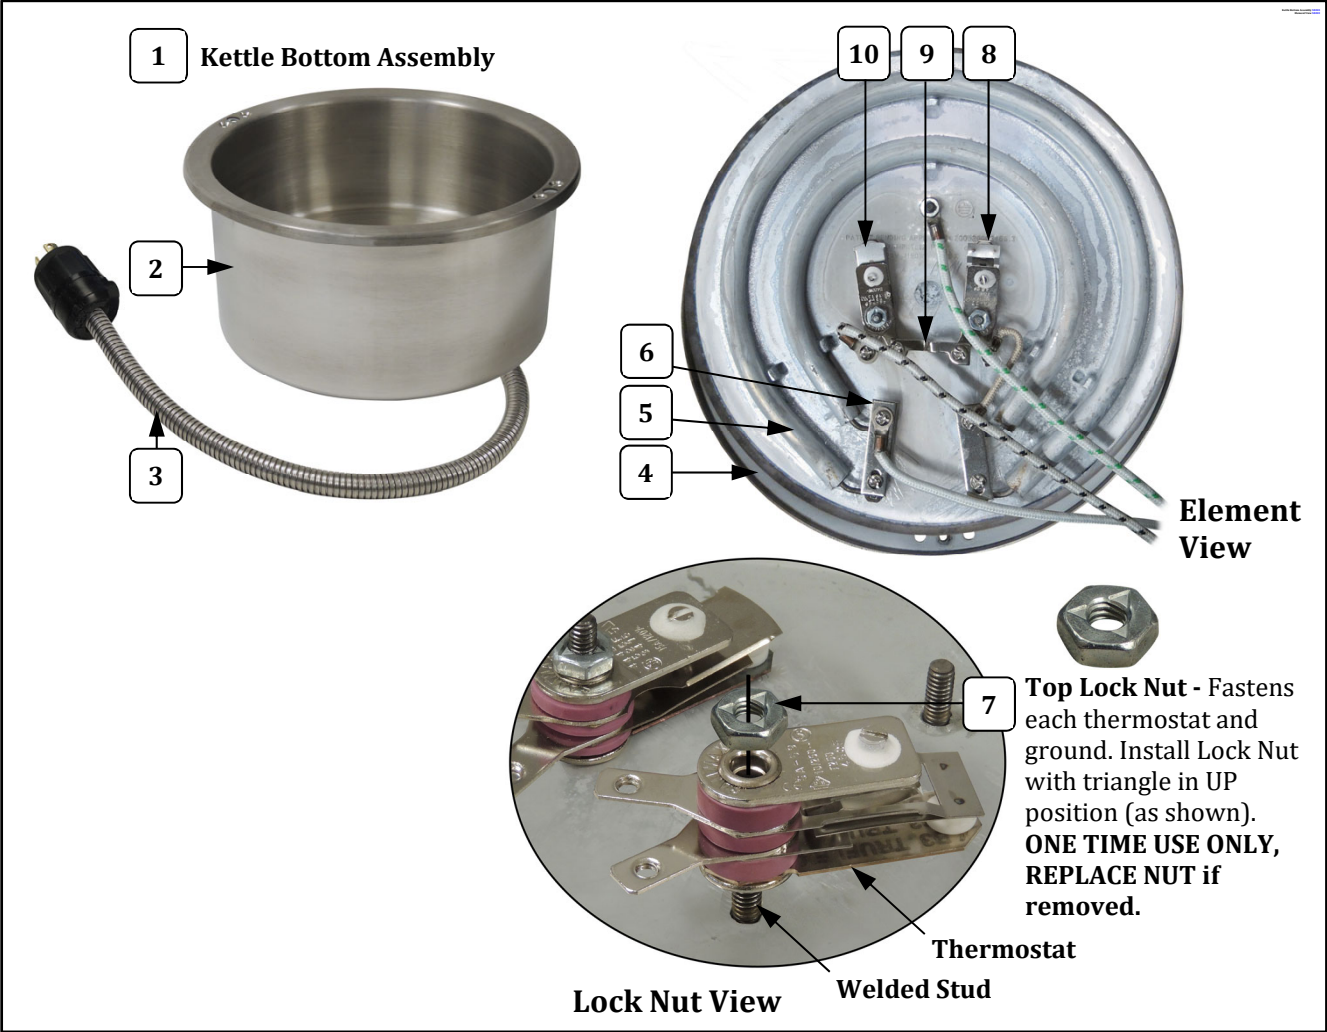

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

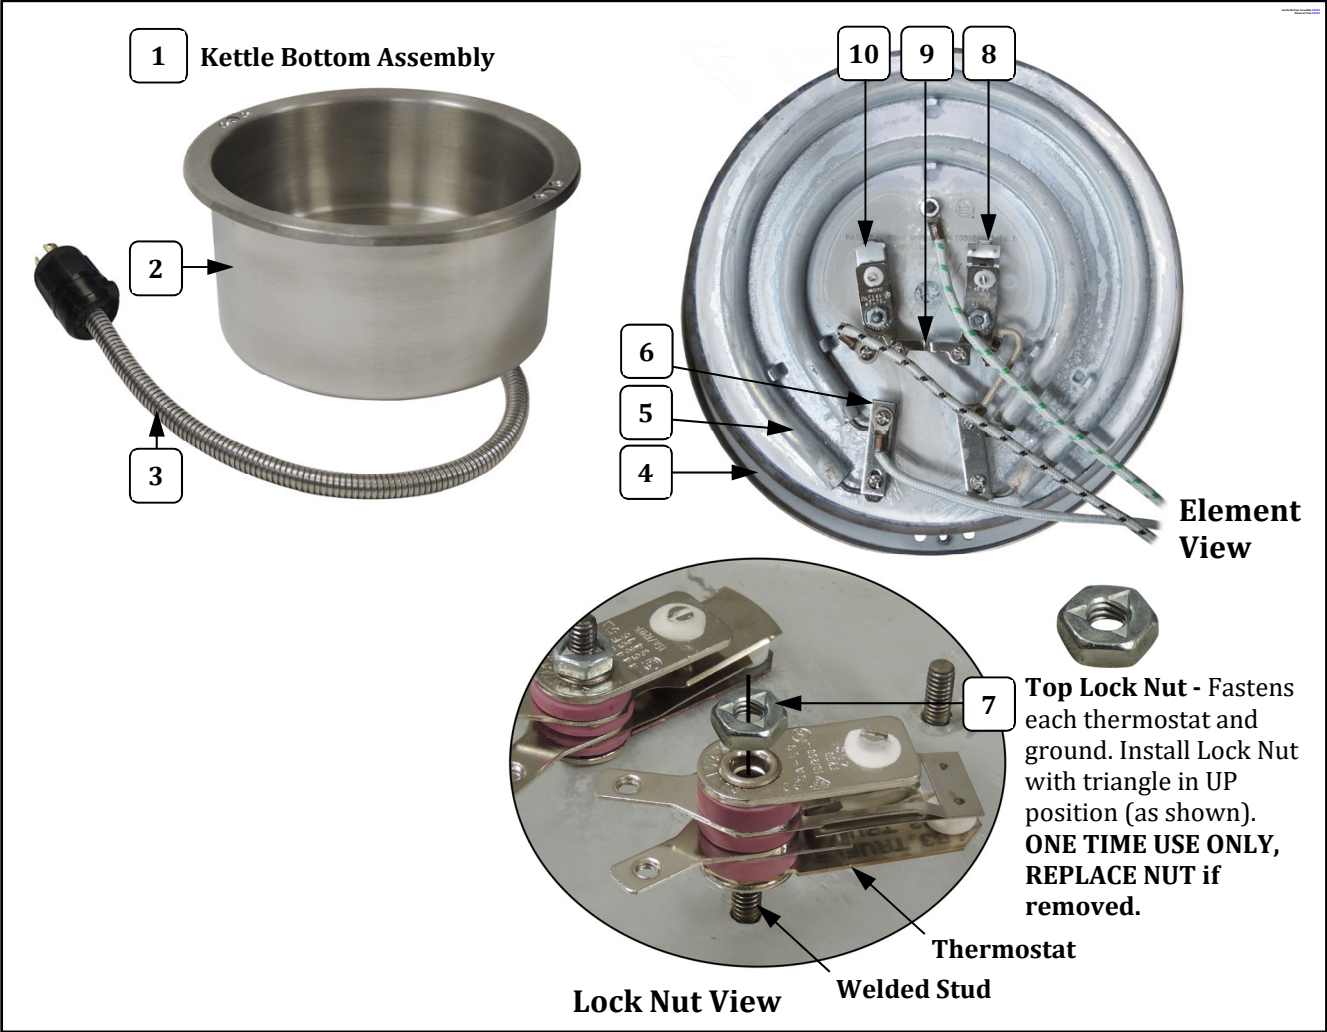

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

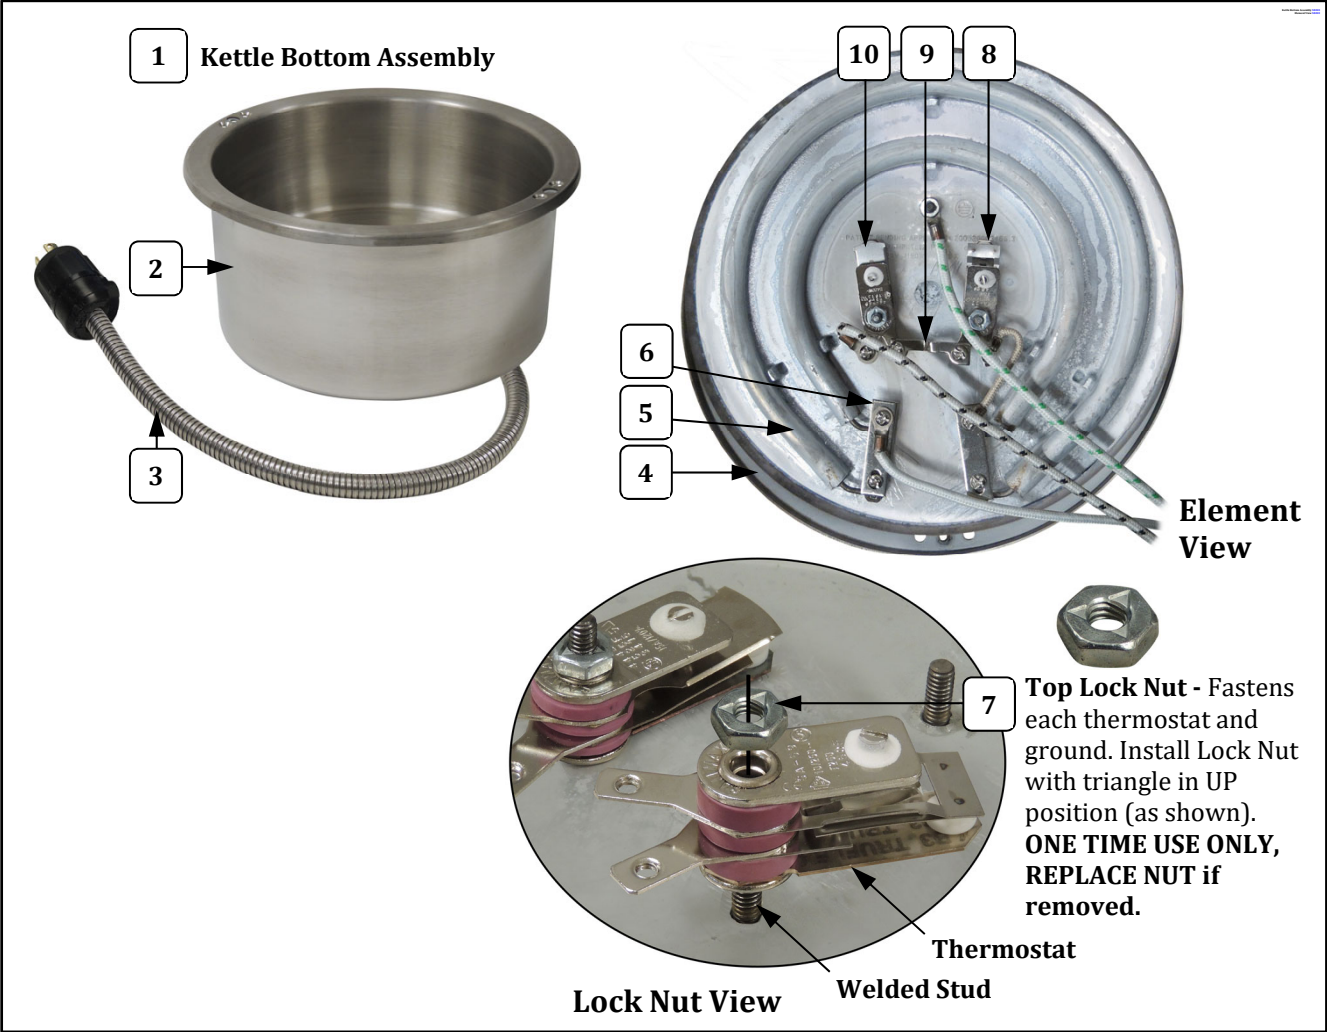

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

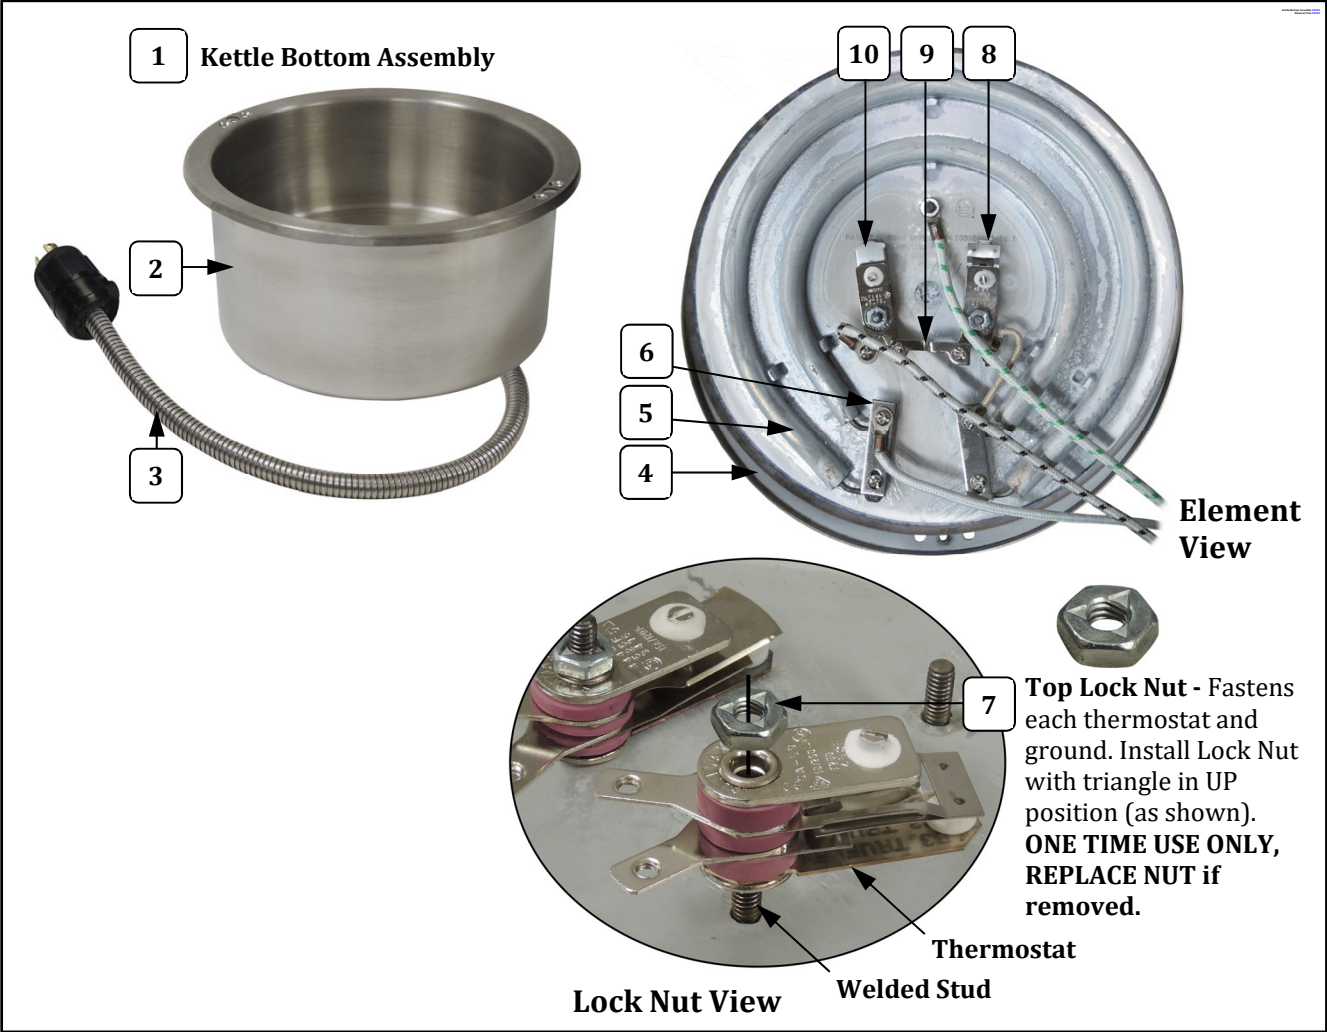

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

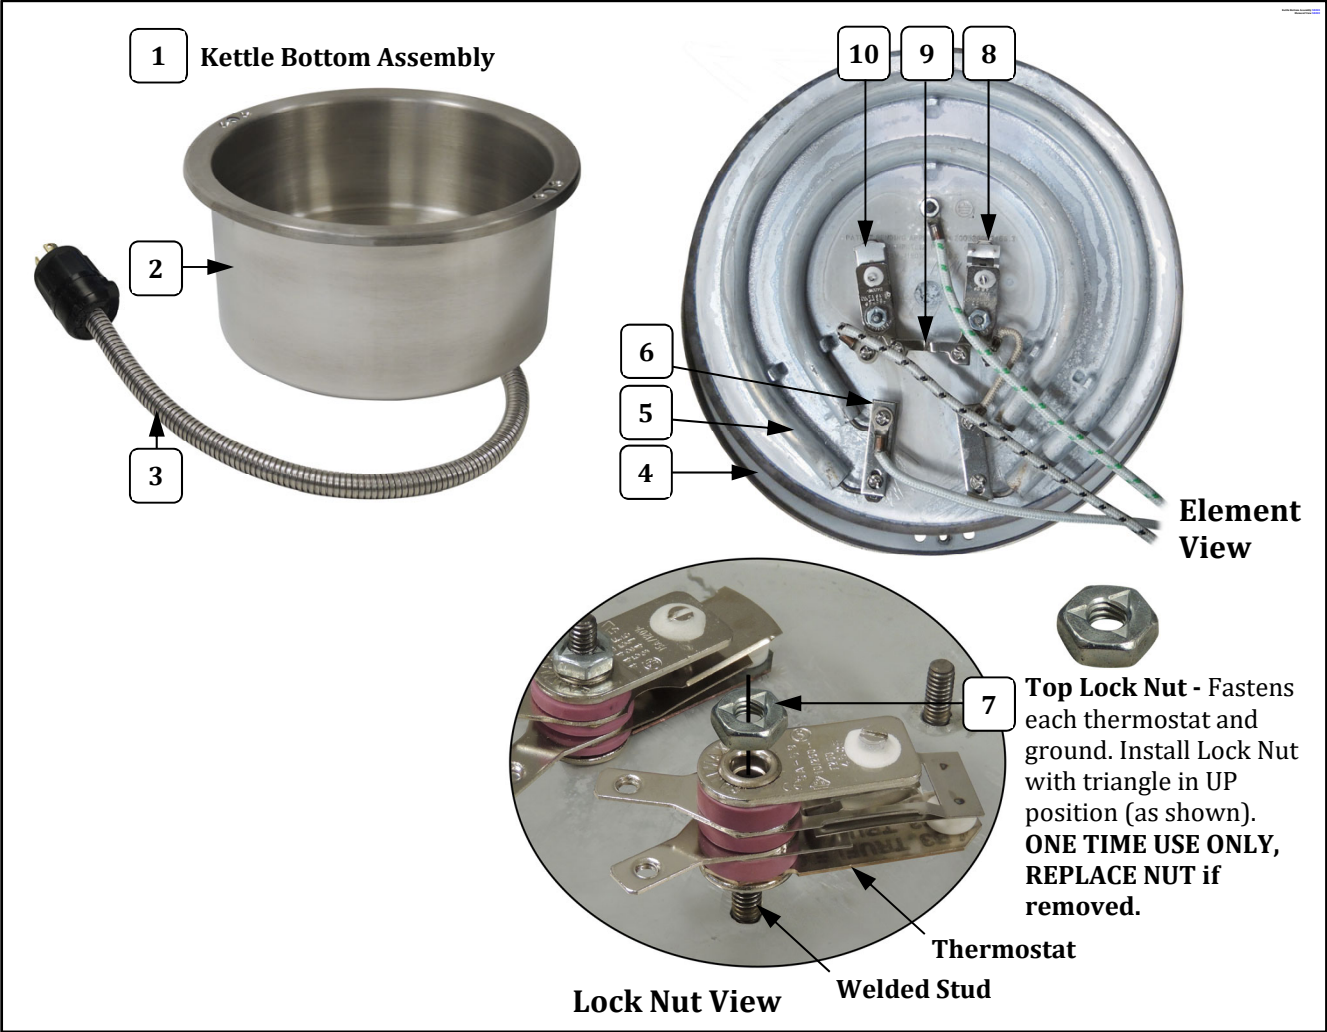

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

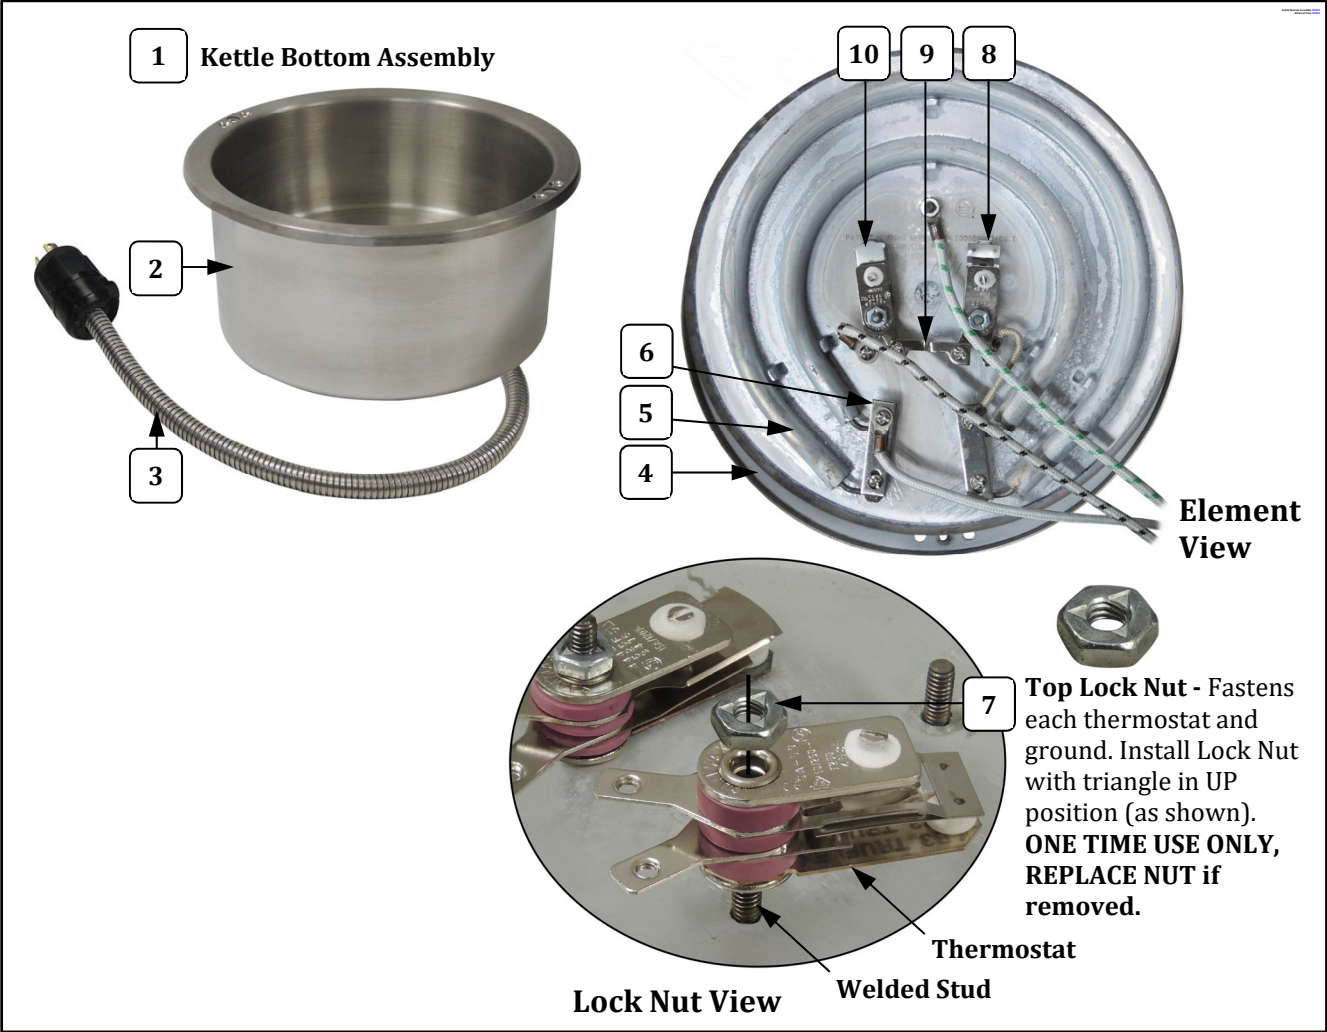

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

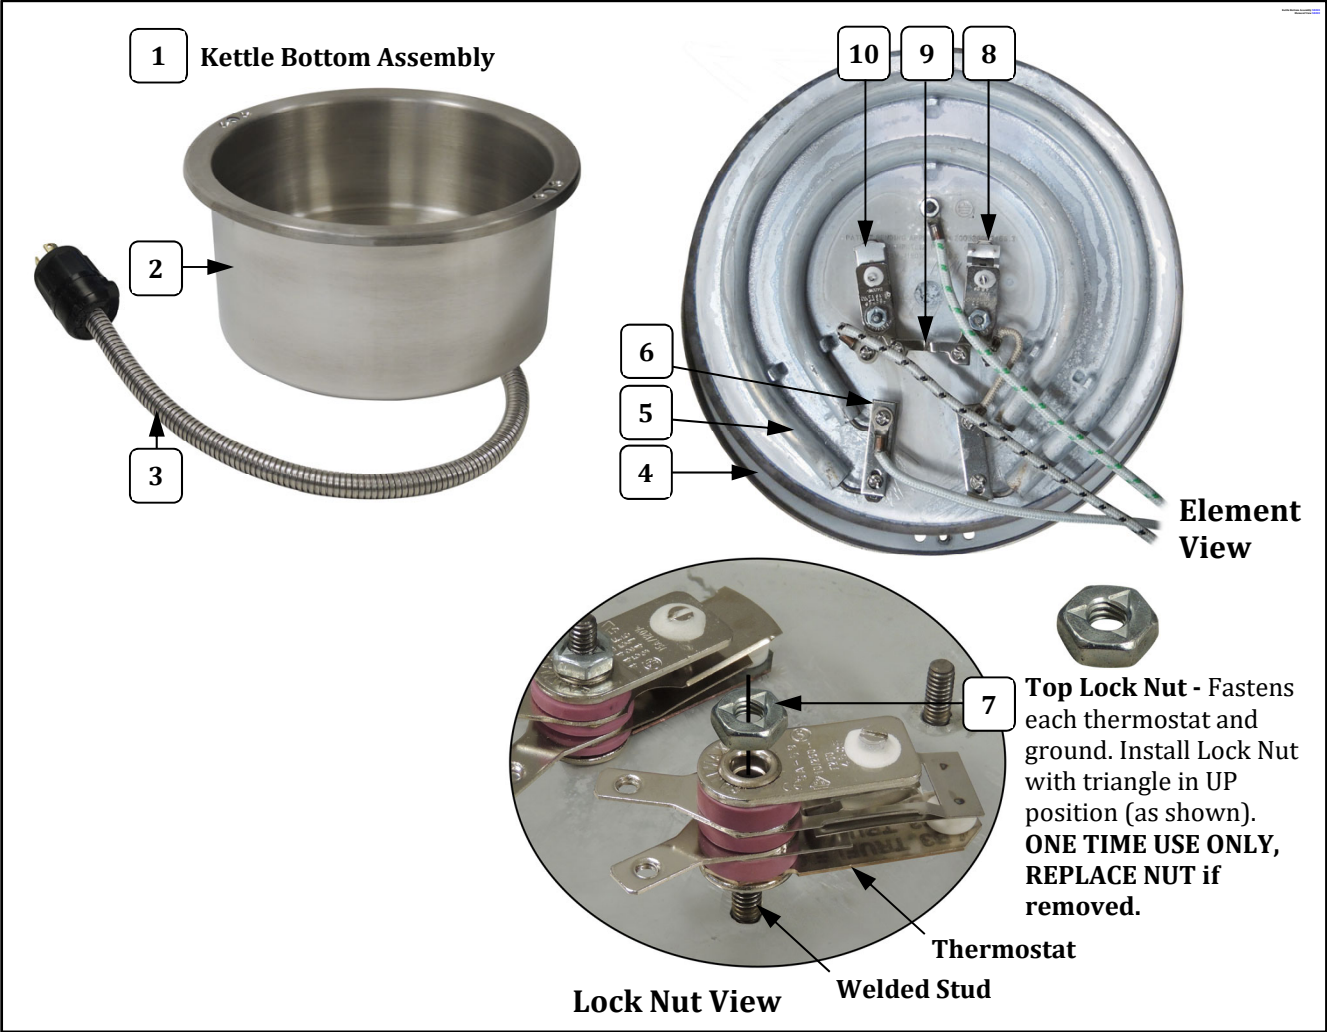

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

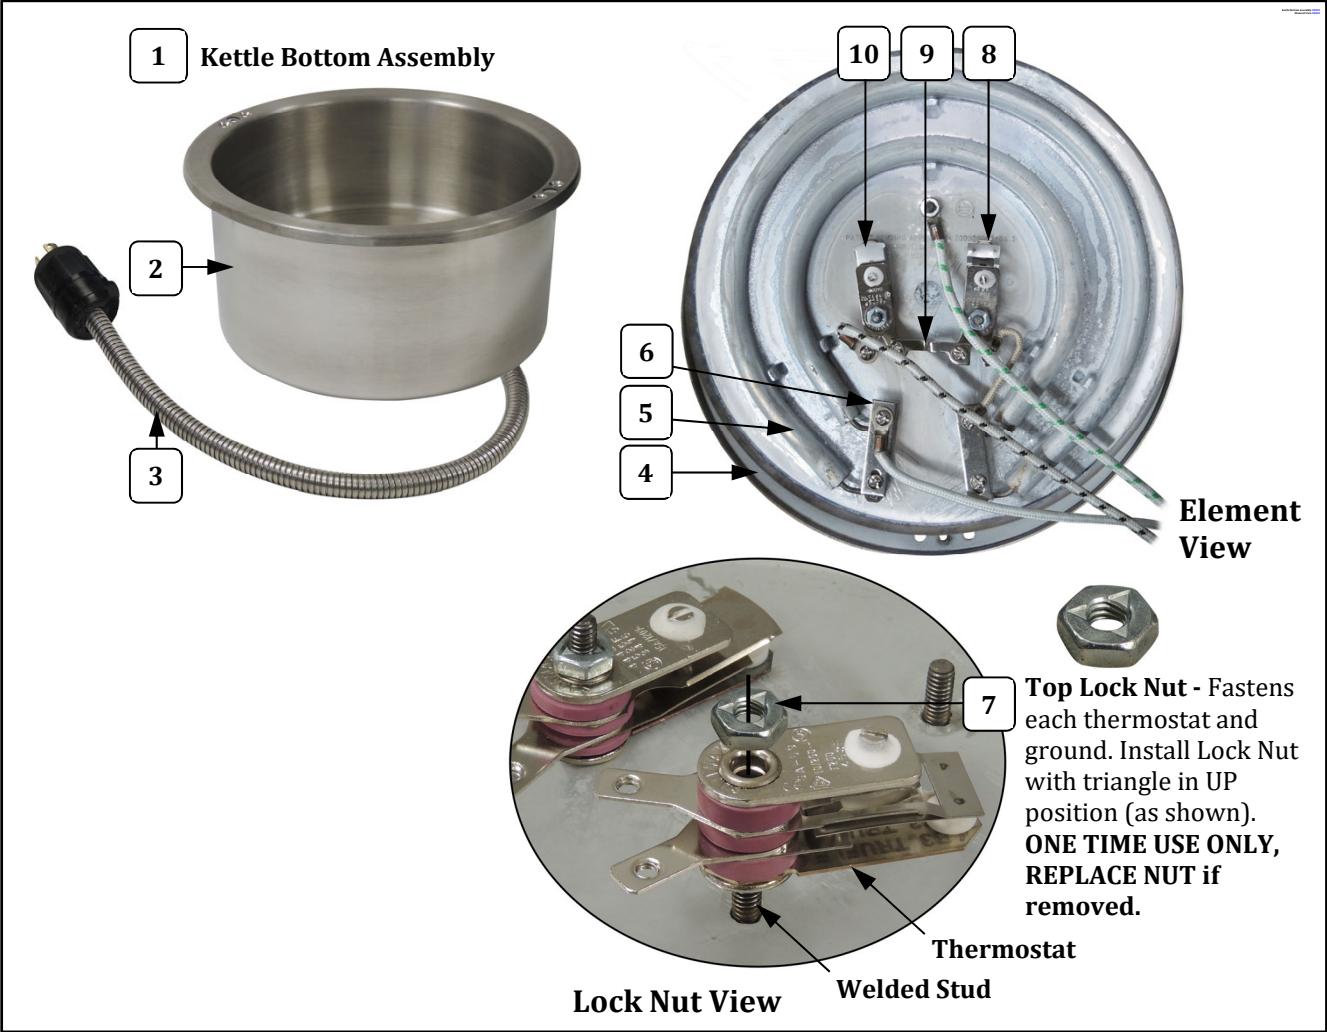

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

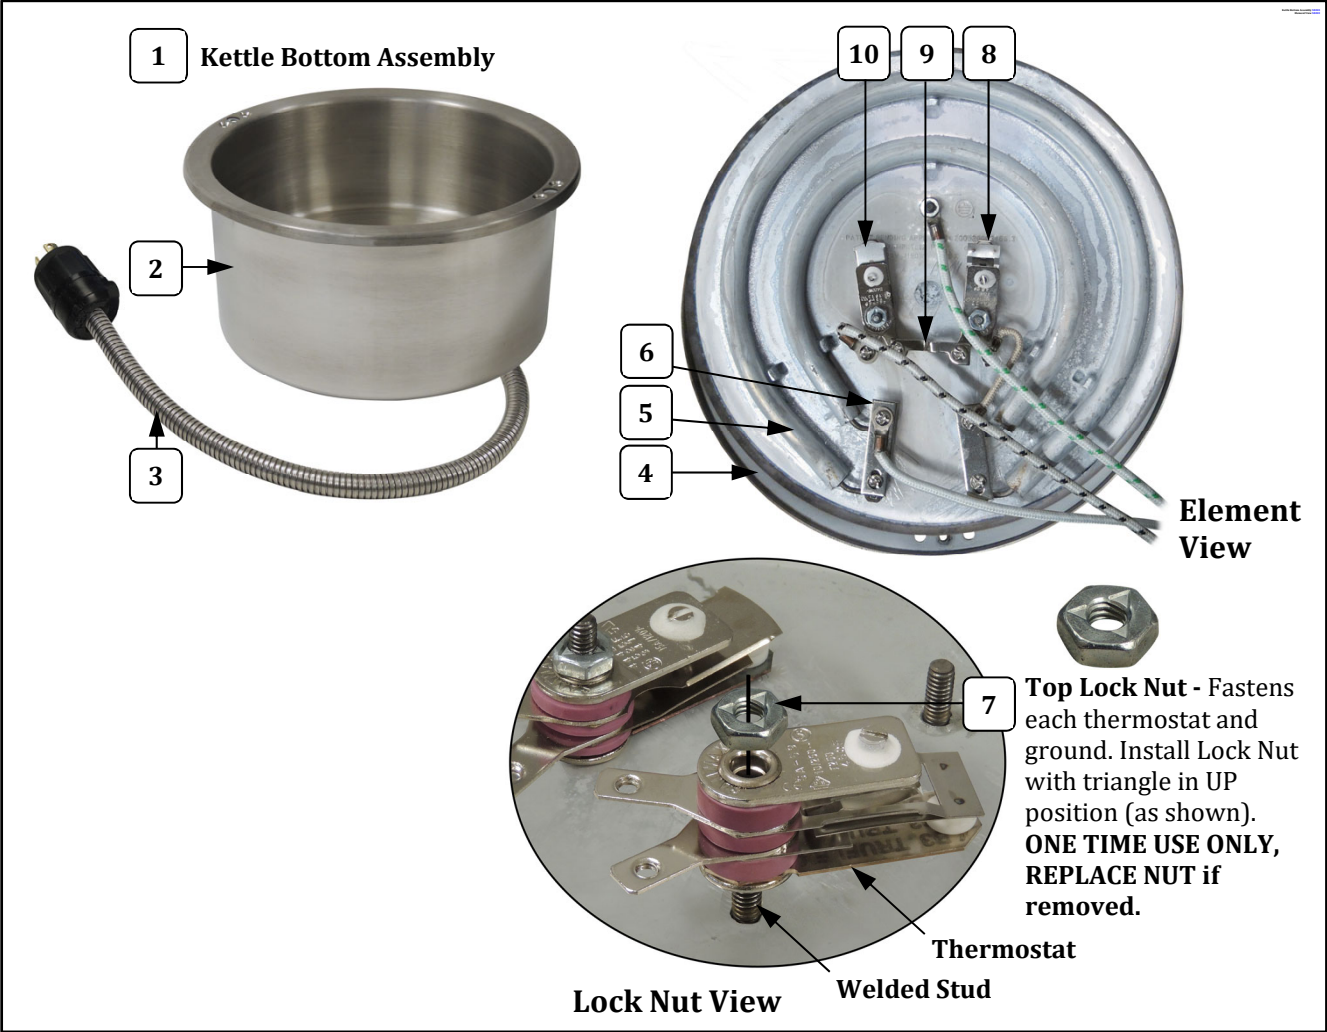

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

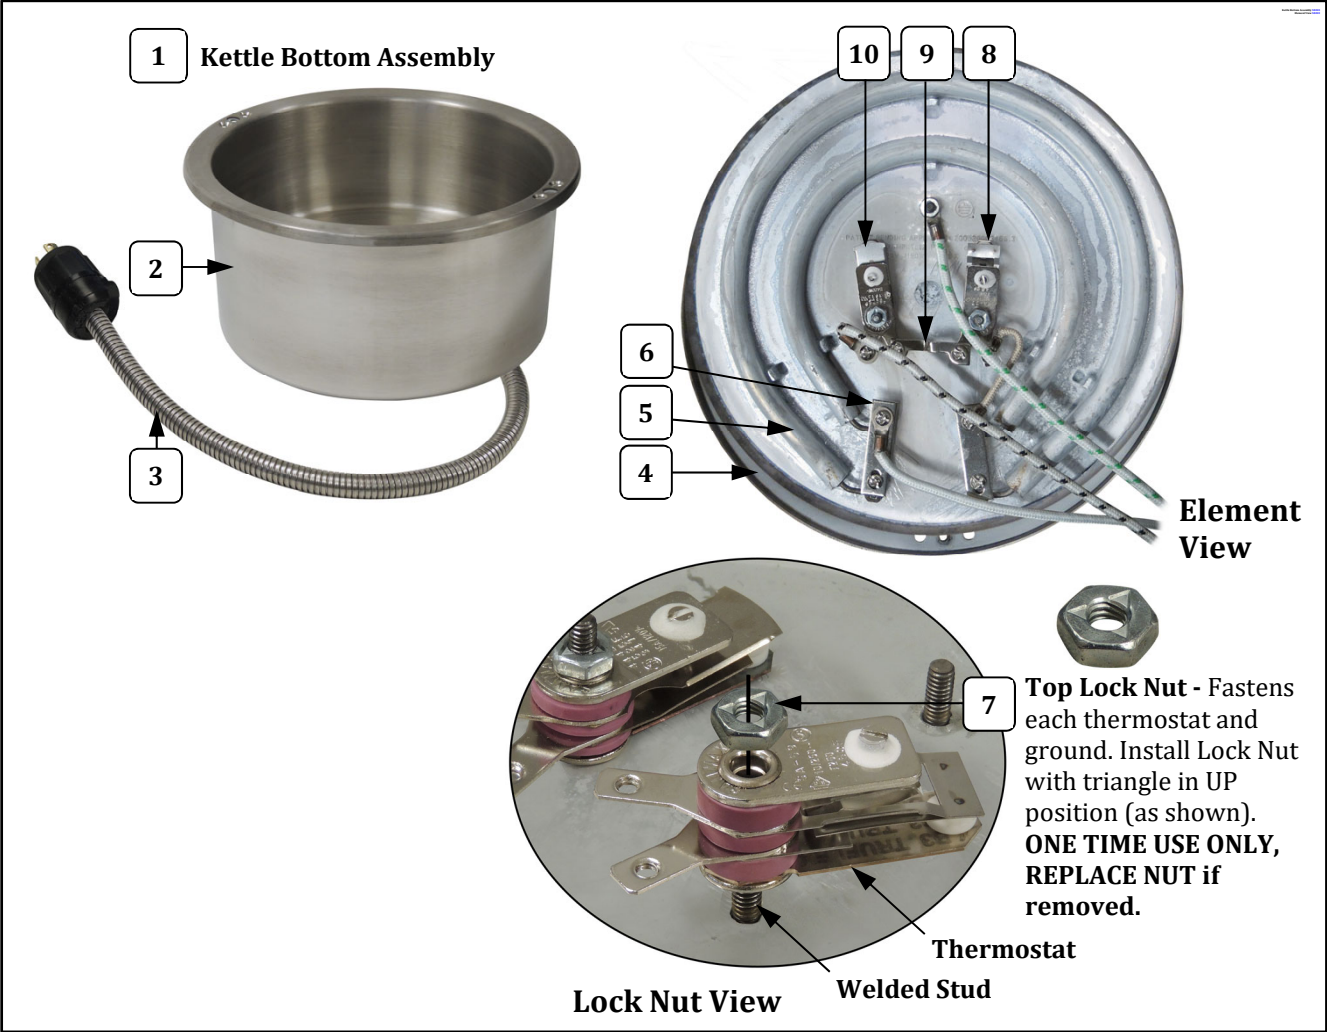

Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108




12/14 oz. Kettle Assembly (58220) – Kettle Bottom View

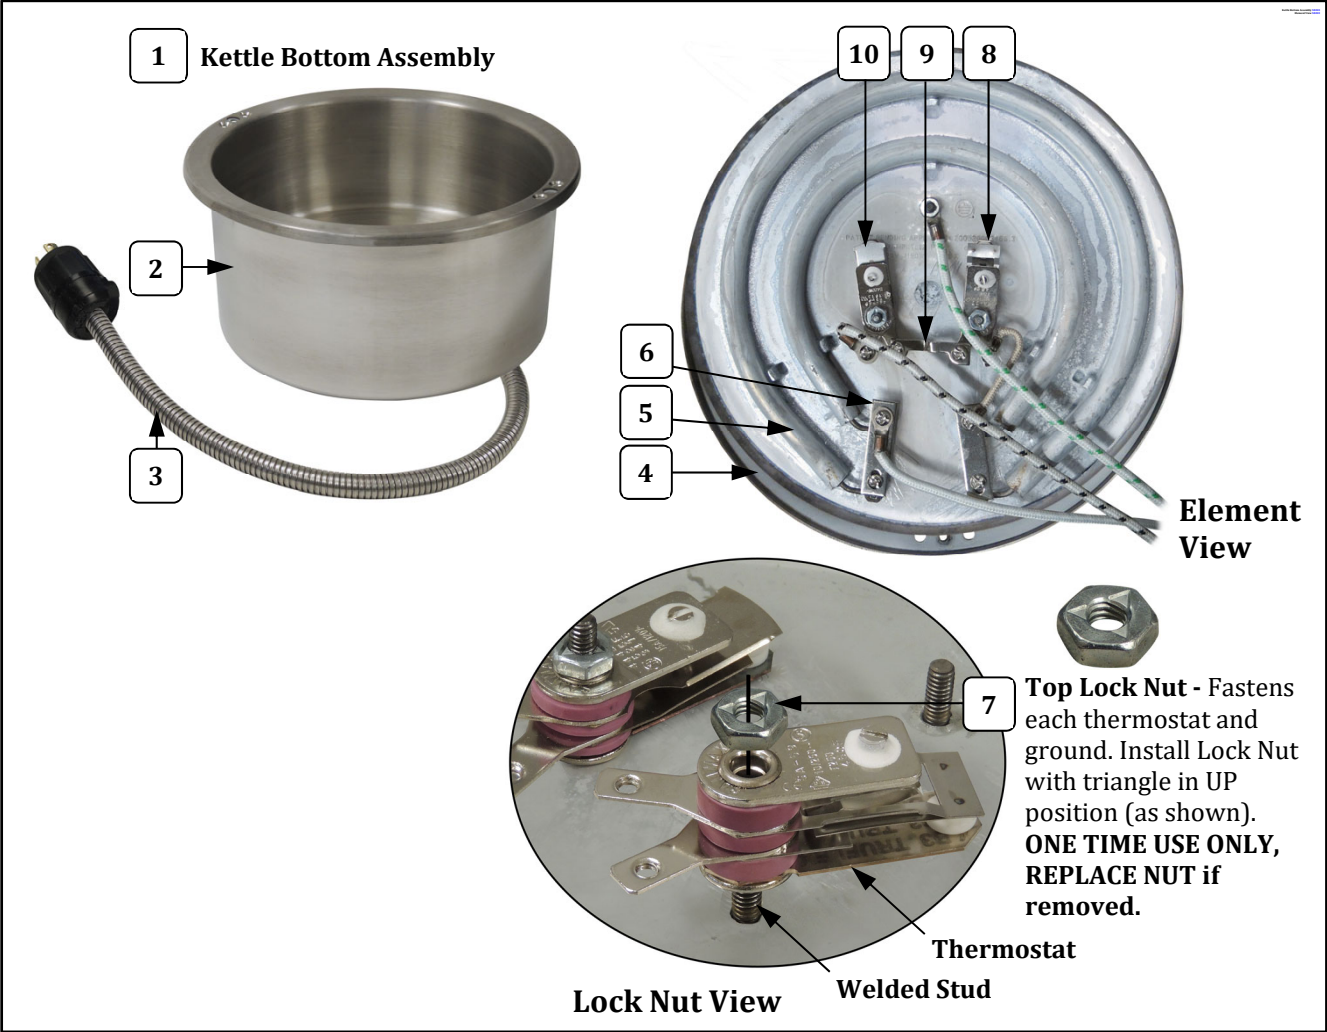


Item	Part Description	Part Number
		58220
1	12/14 OZ. KETTLE BOTTOM ASSEMBLY (includes parts listed below)	58221
2	KETTLE SHELL	61017
3	KETTLE LEAD ASSY	61053
4	KETTLE GASKET	61012
5	KETTLE INTEGRAL HTR 12/14	58011
6	12/14OZ SHUNT BAR	77879
7	8-32 TOP LOCK NUT (always replace if removed)	67943
8	482°F THERMOSTAT (includes two 6-32 screws)	76708
8	450°F THERMOSTAT (includes two 6-32 screws)	
9	THERMOSTAT SHUNT BAR	47193
10	550°F THERMOSTAT (includes two 6-32 screws)	77108

Cabinet Exterior – Front View

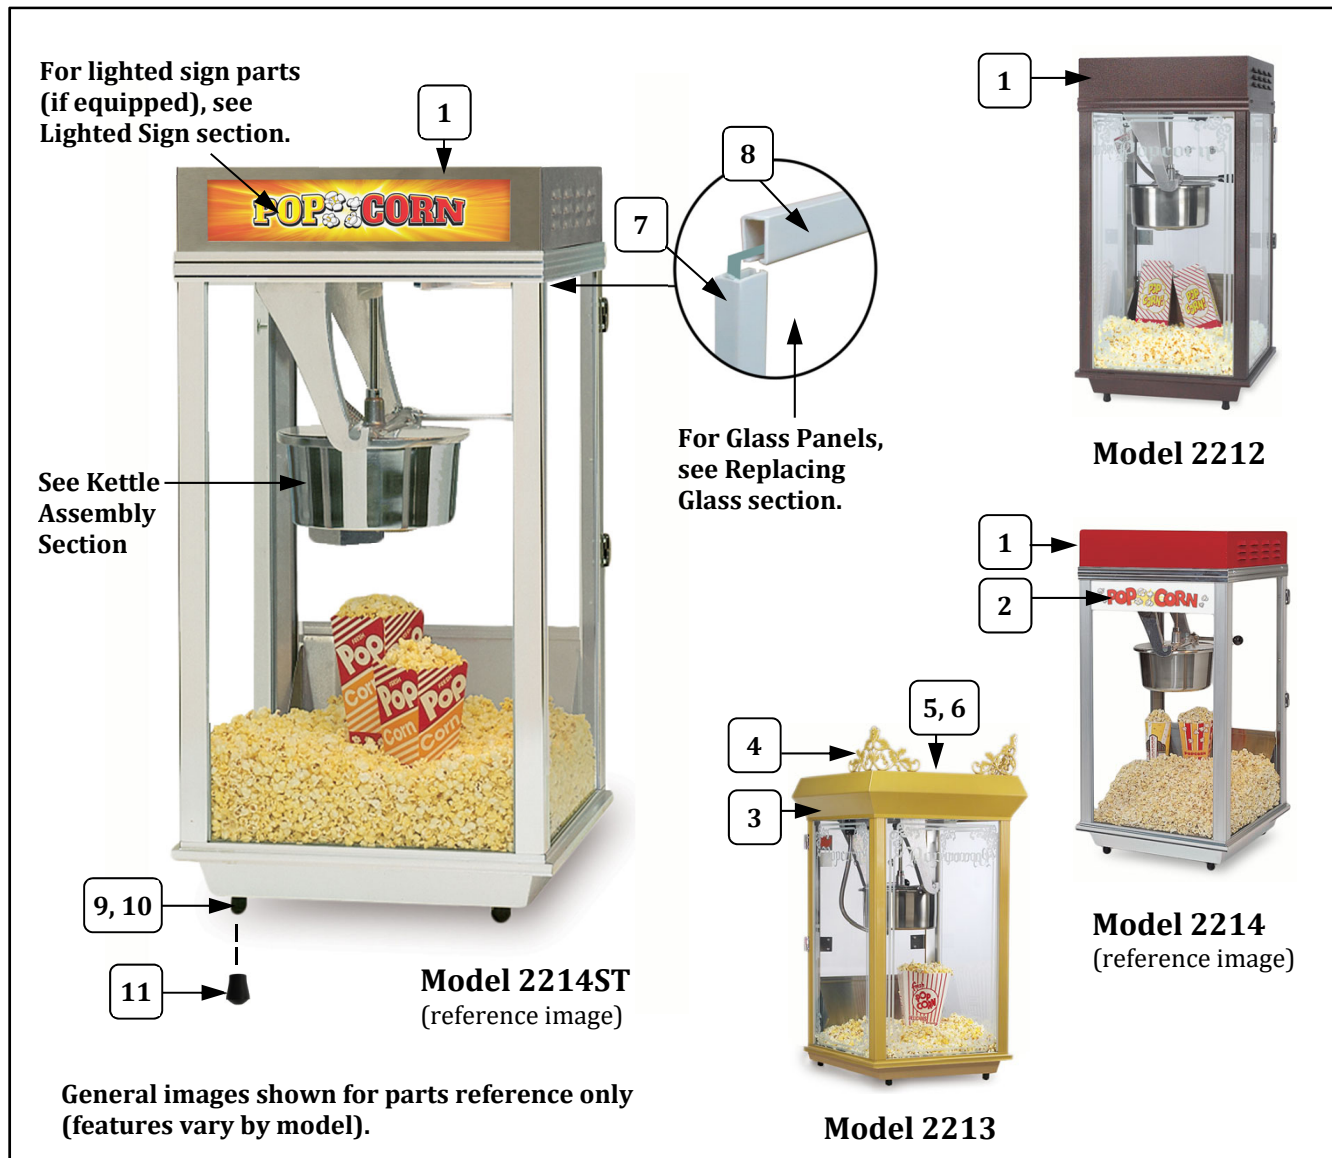


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

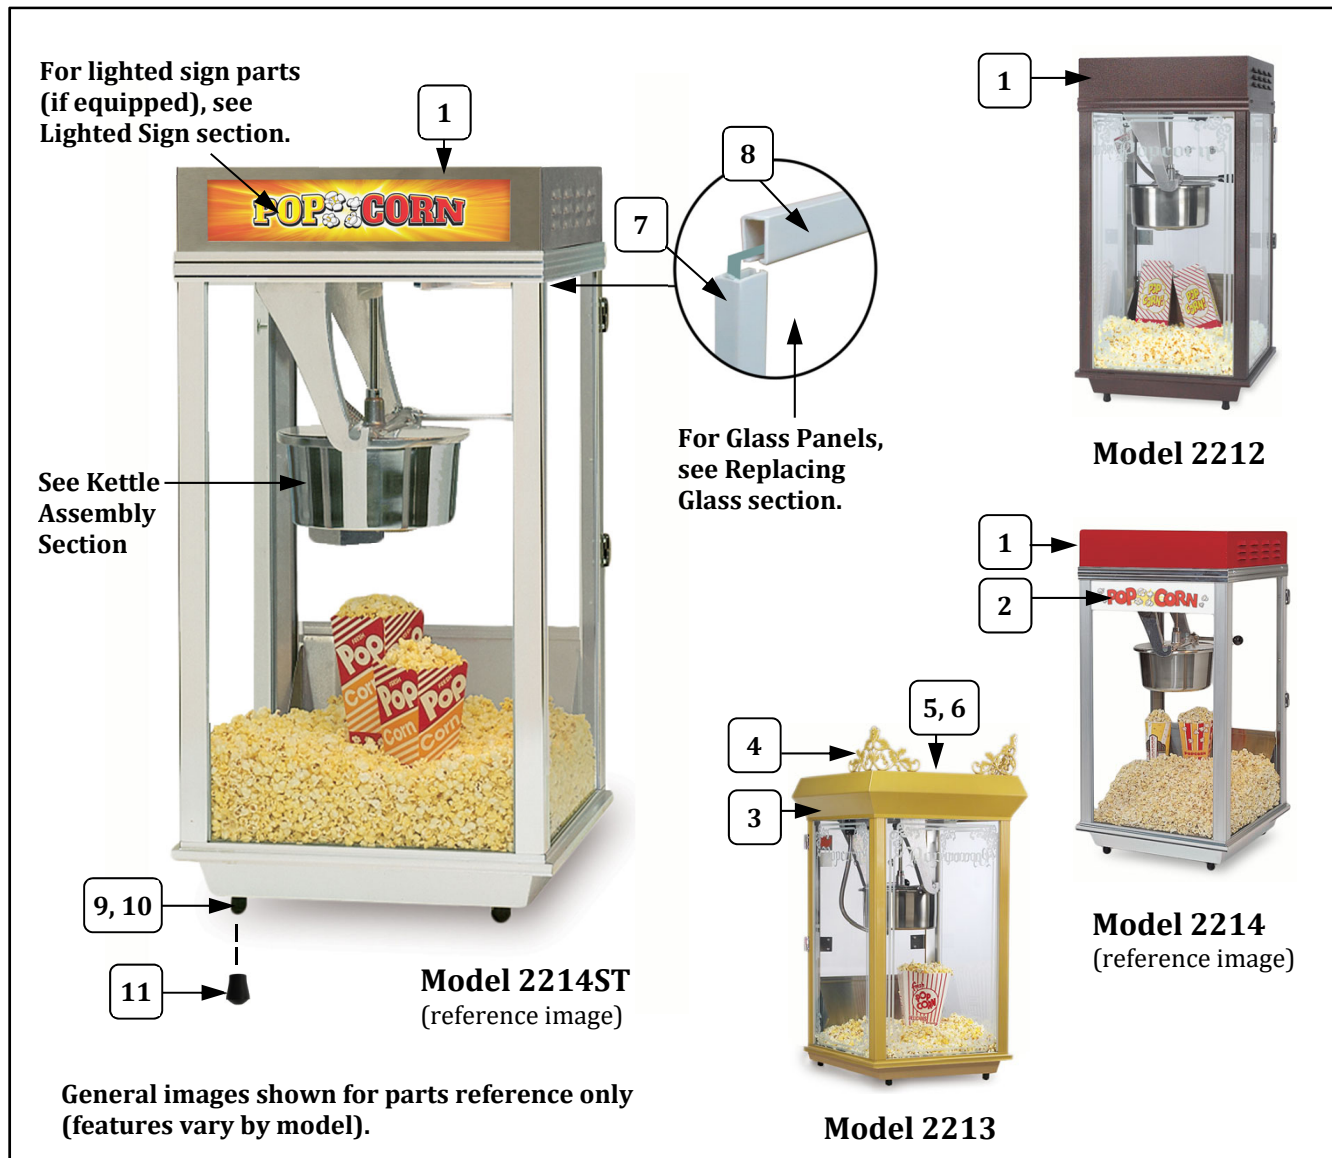


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

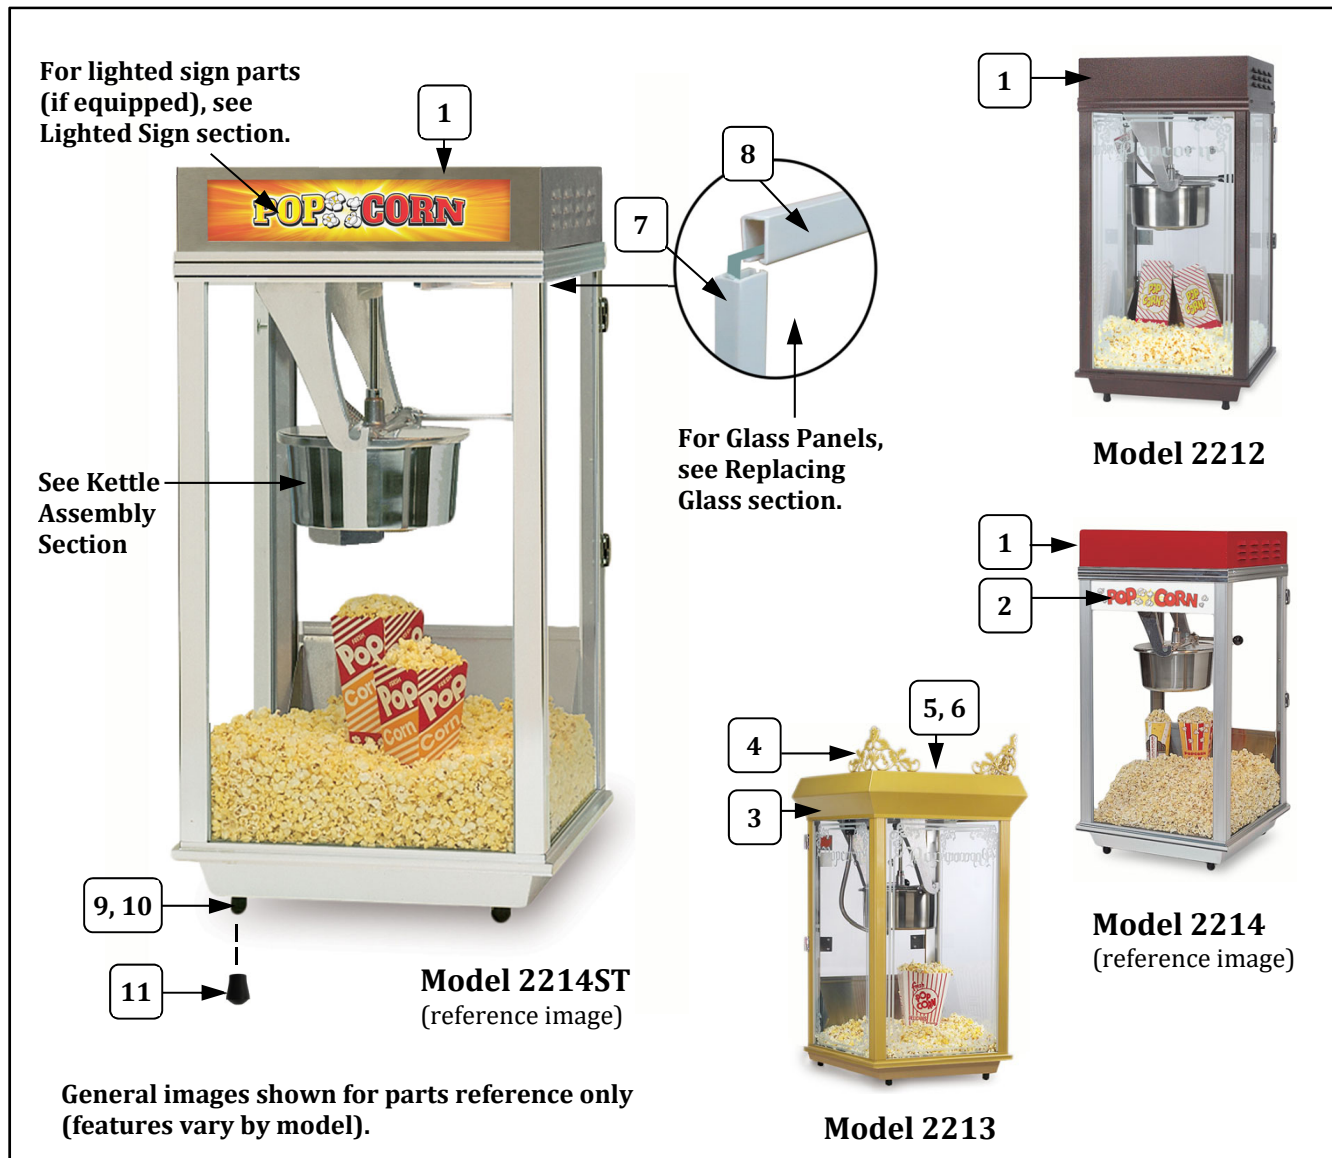


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

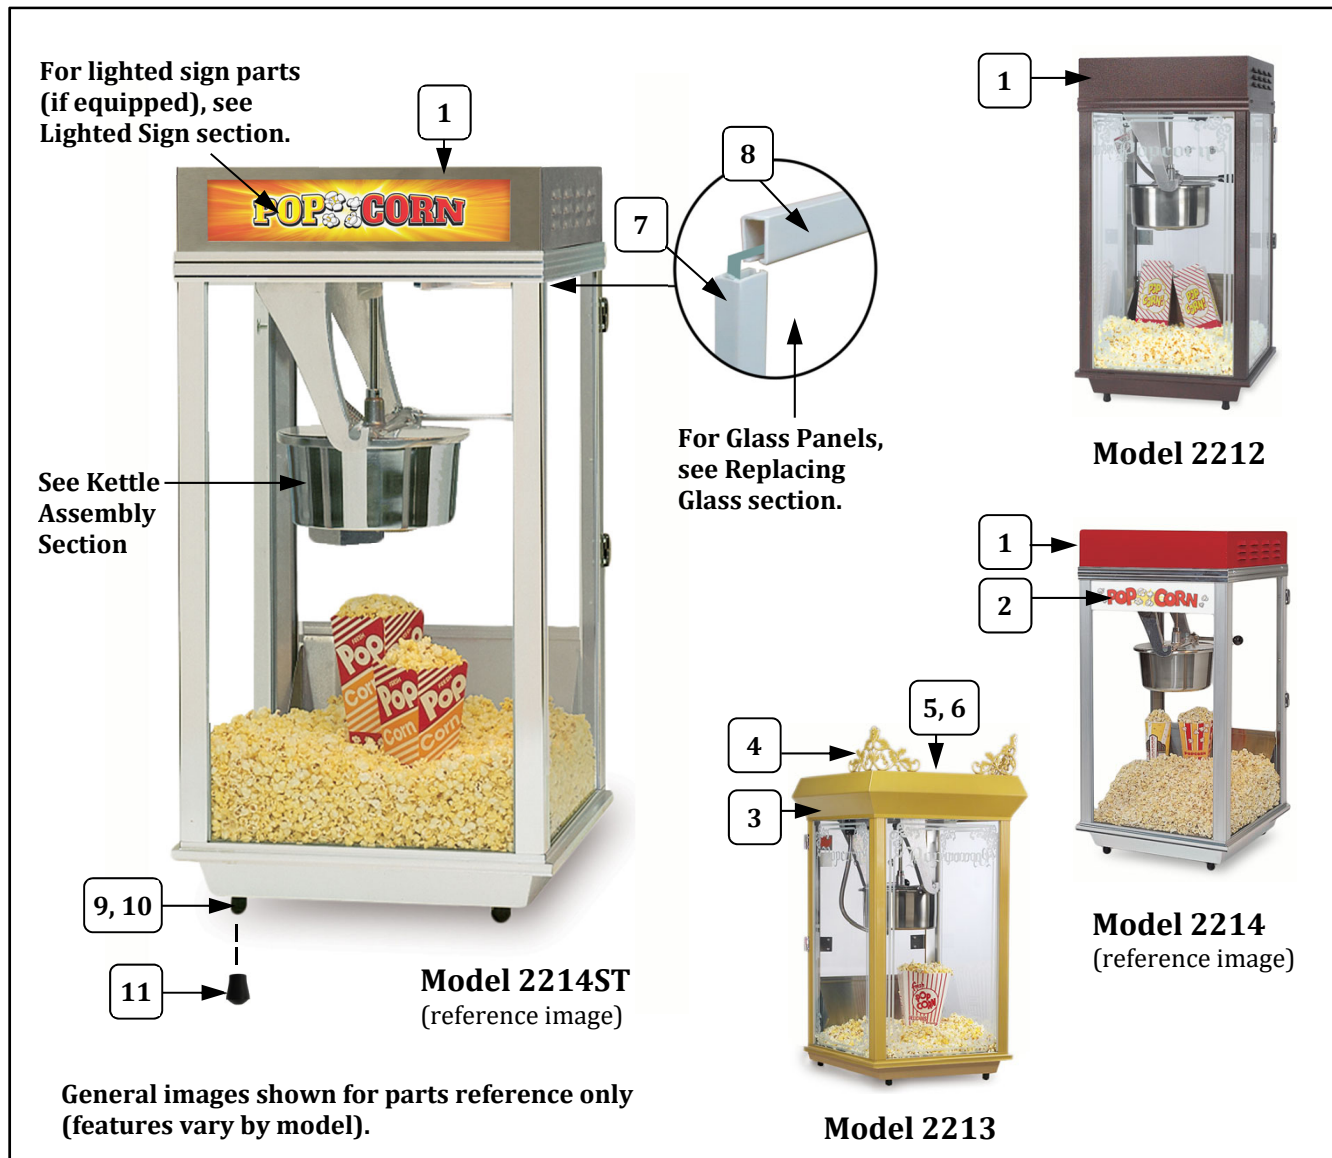


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

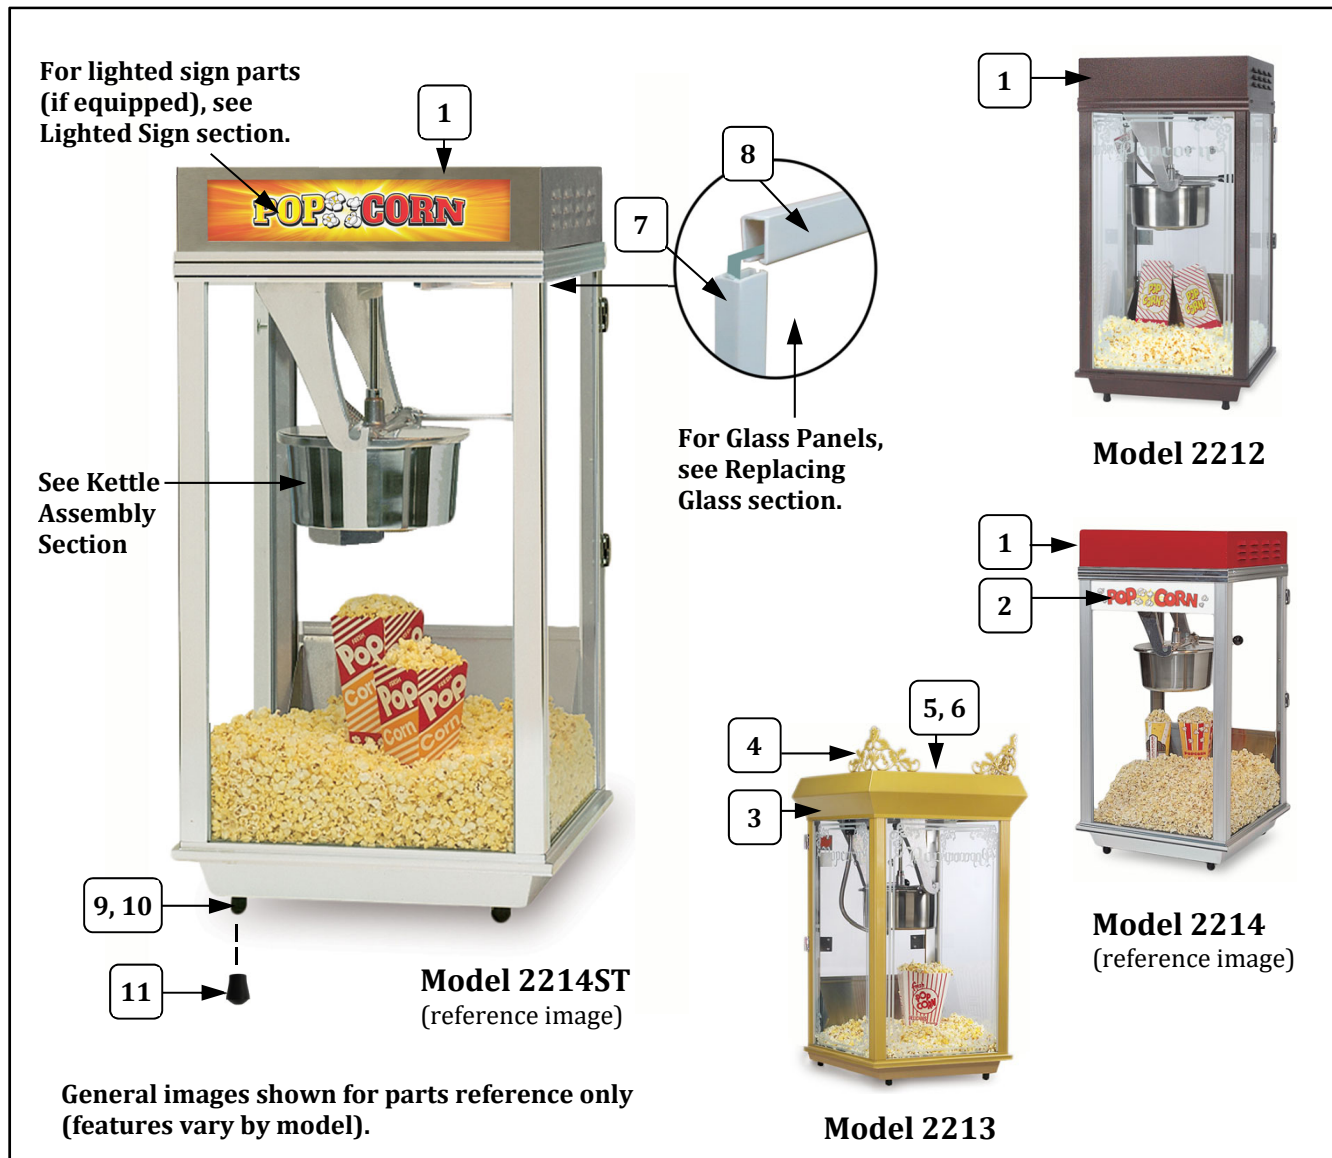


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

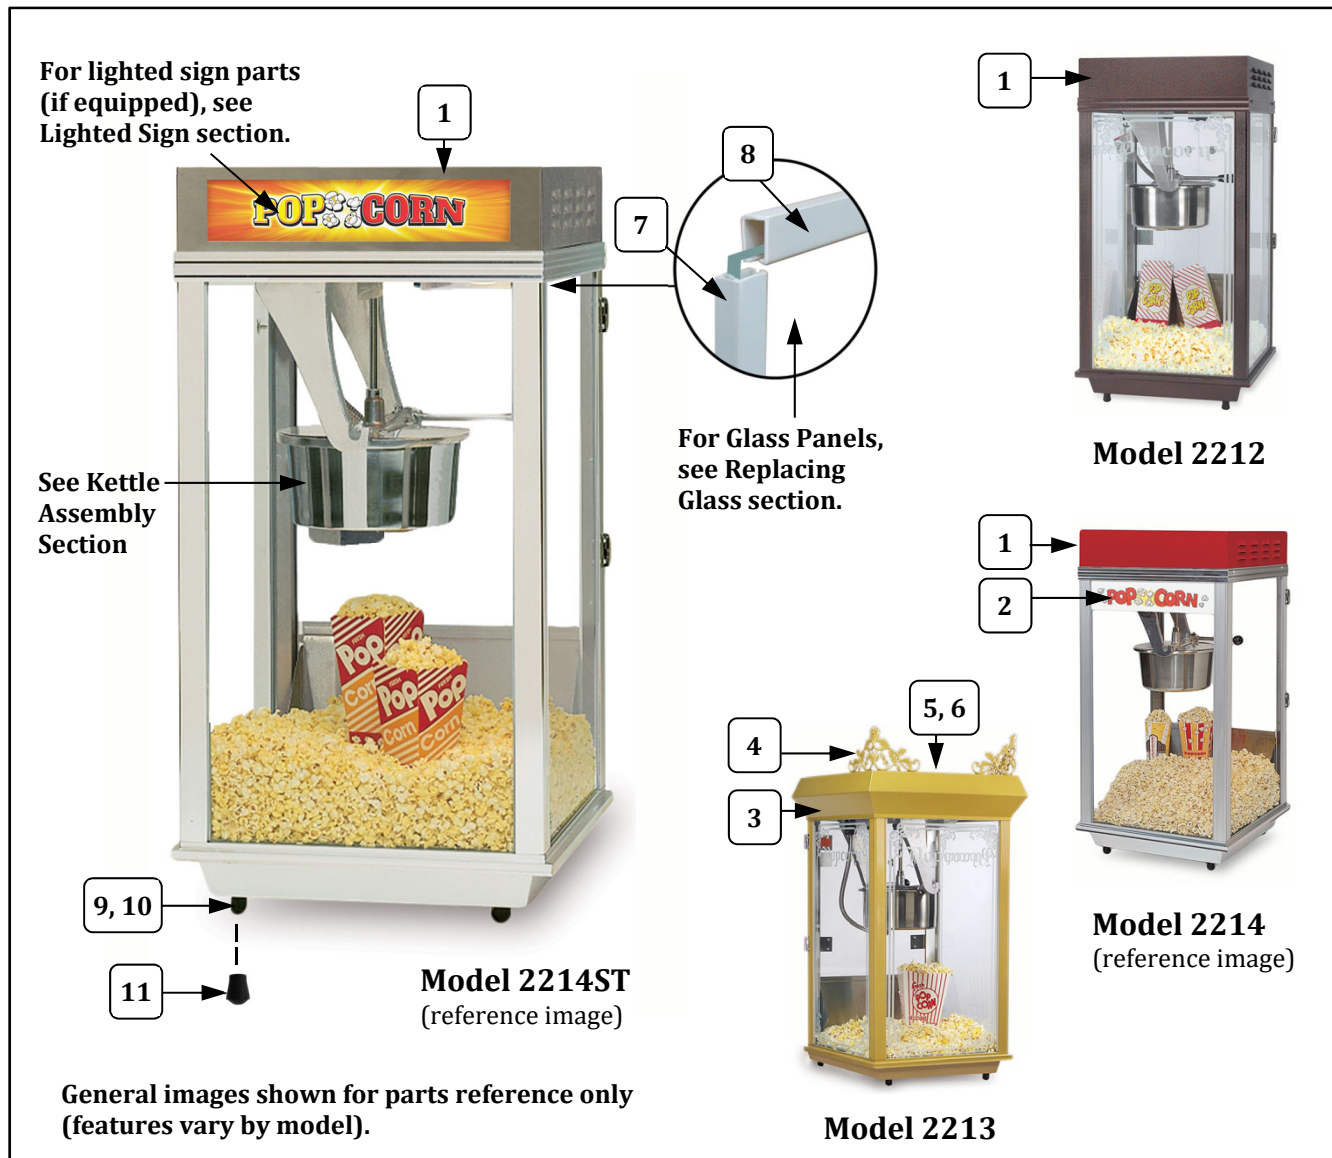


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

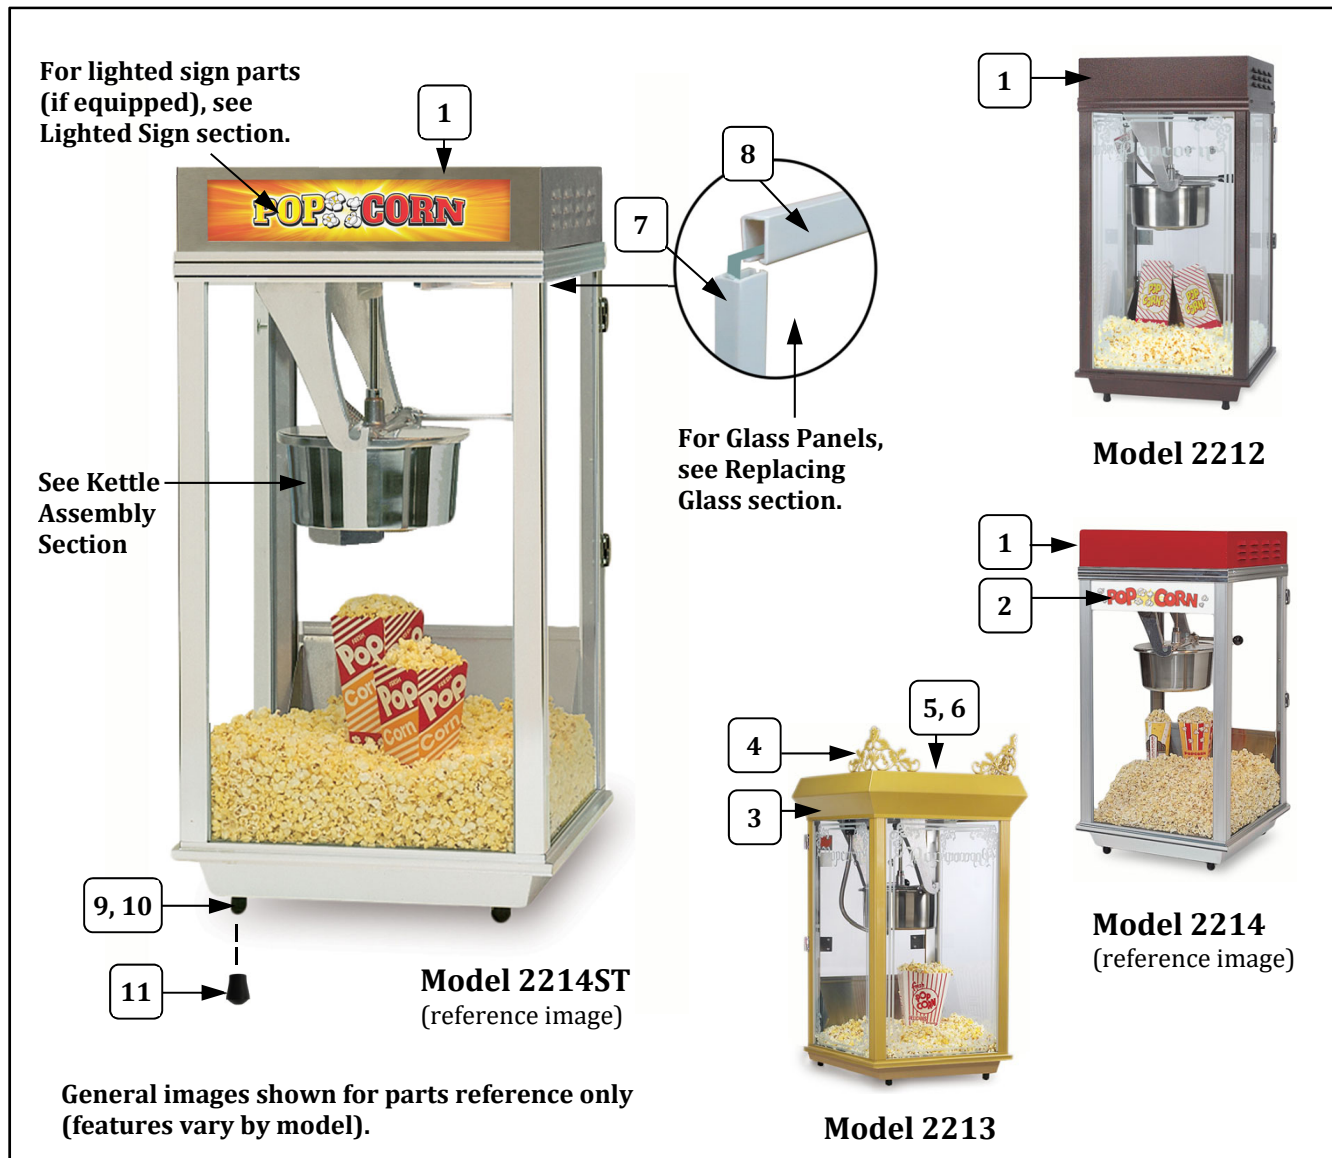


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

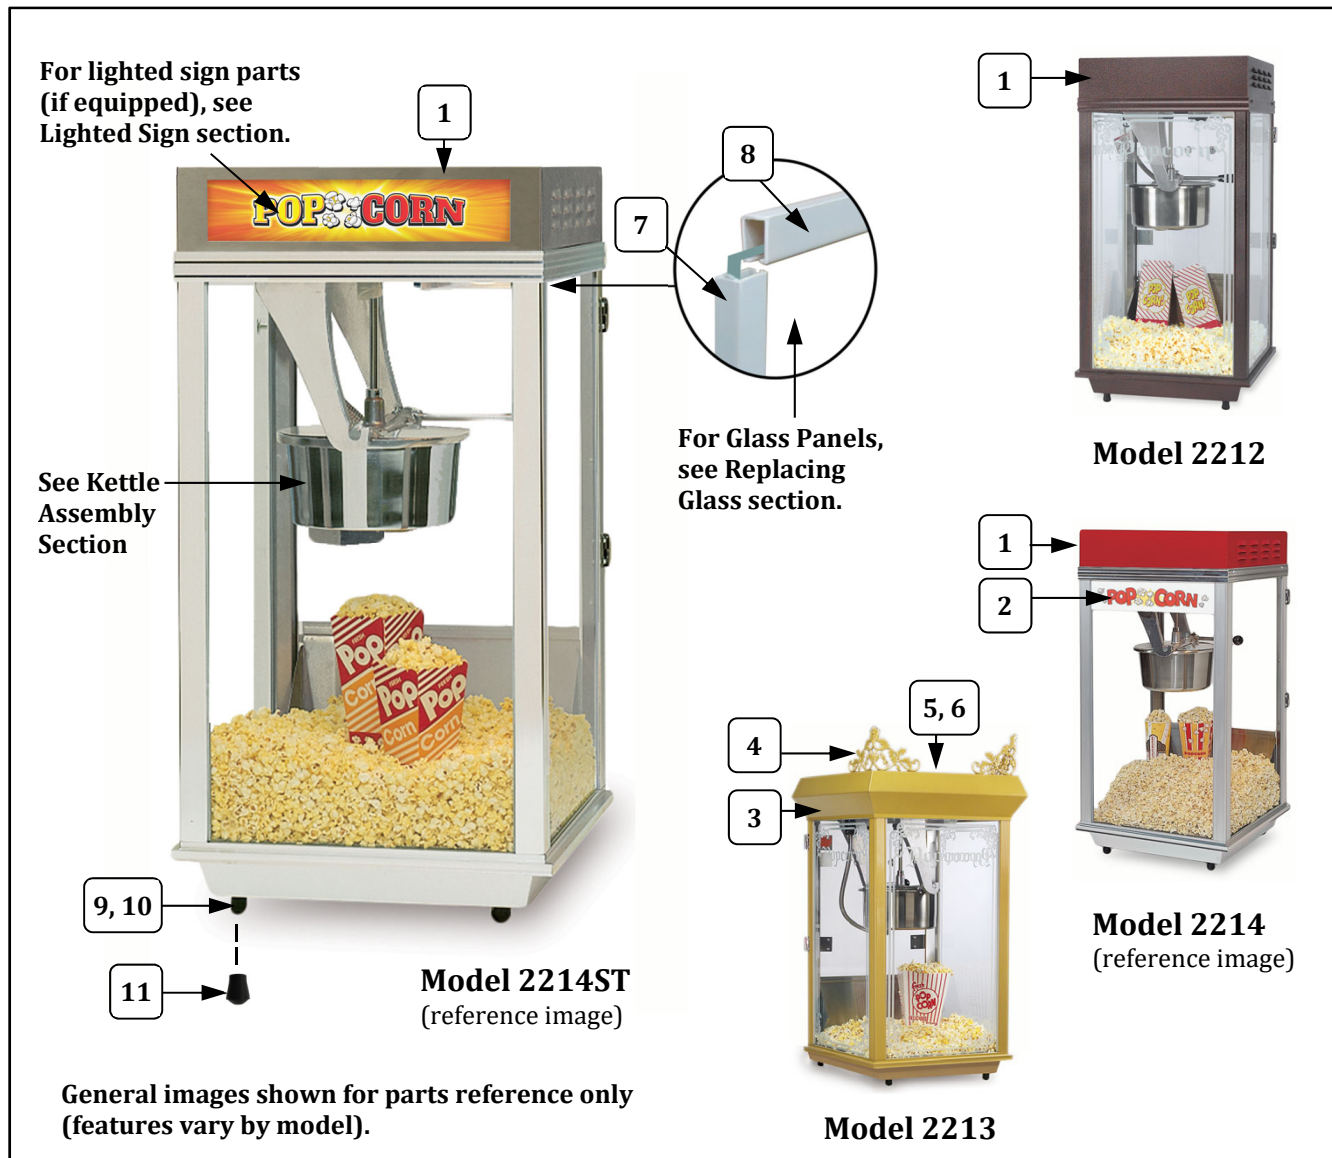


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

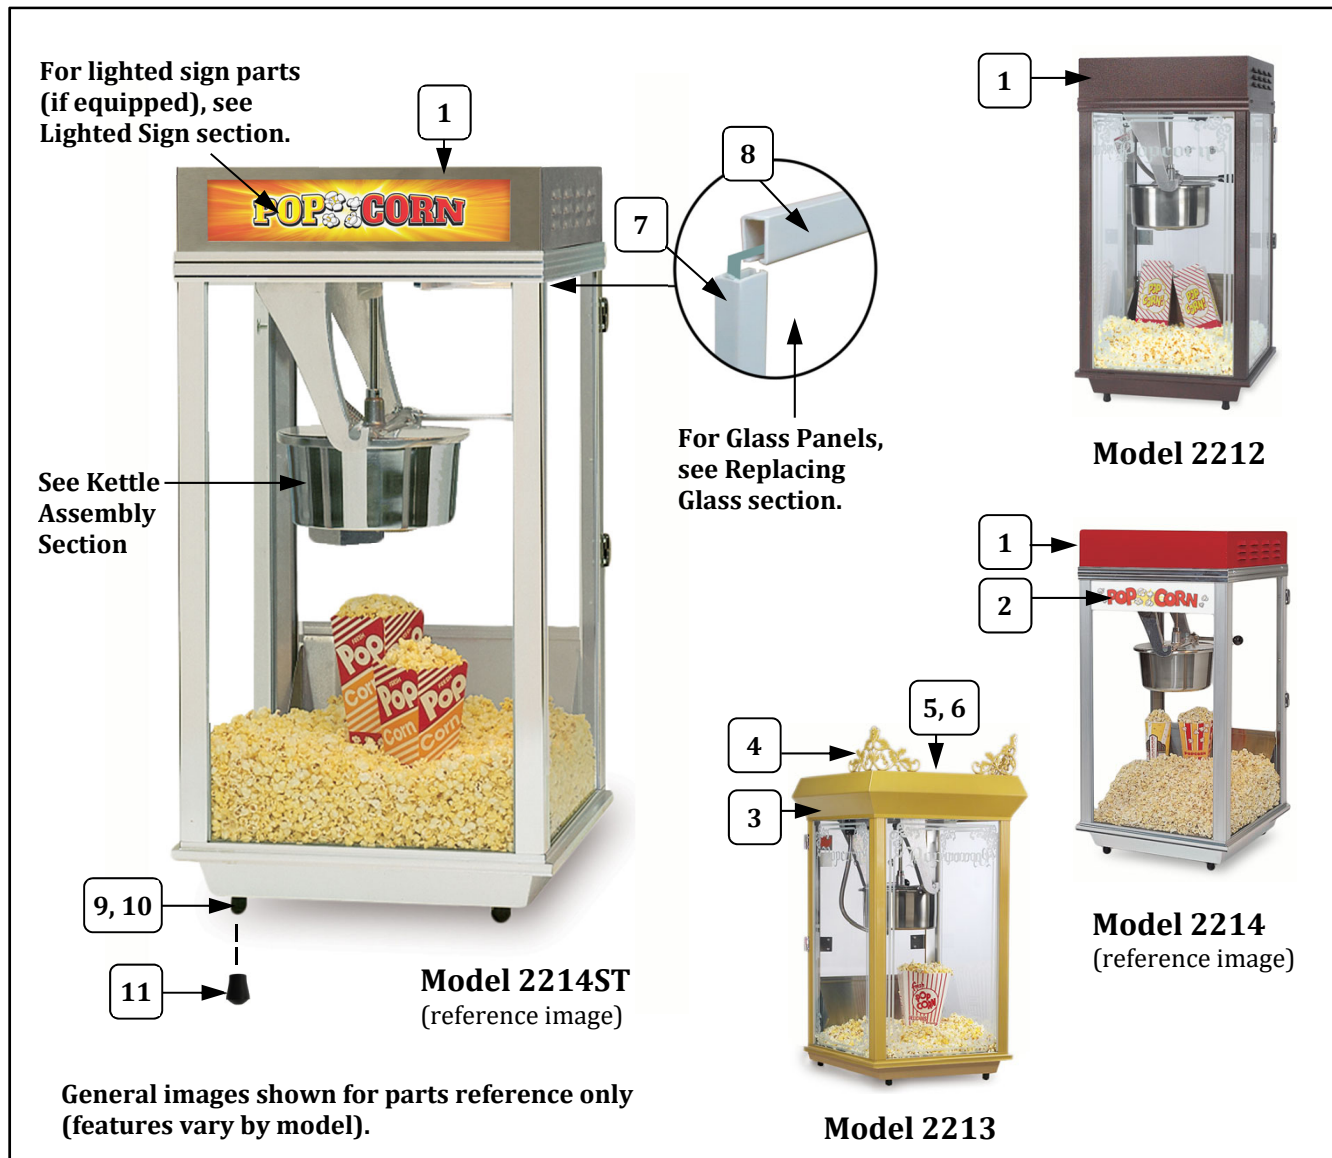


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

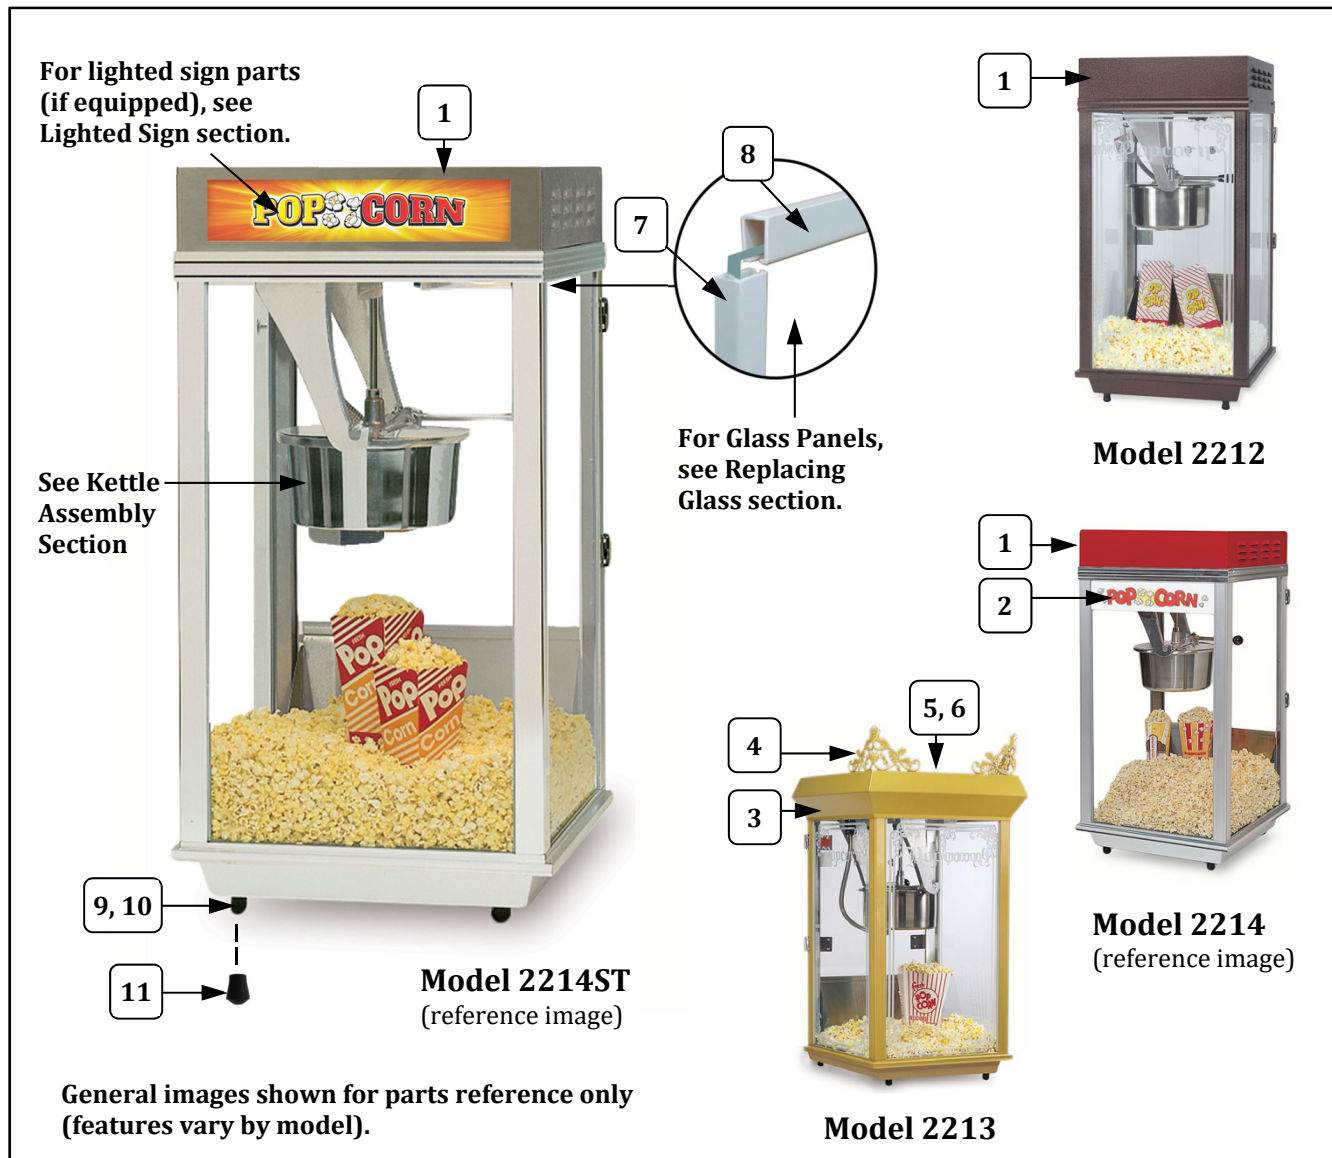


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

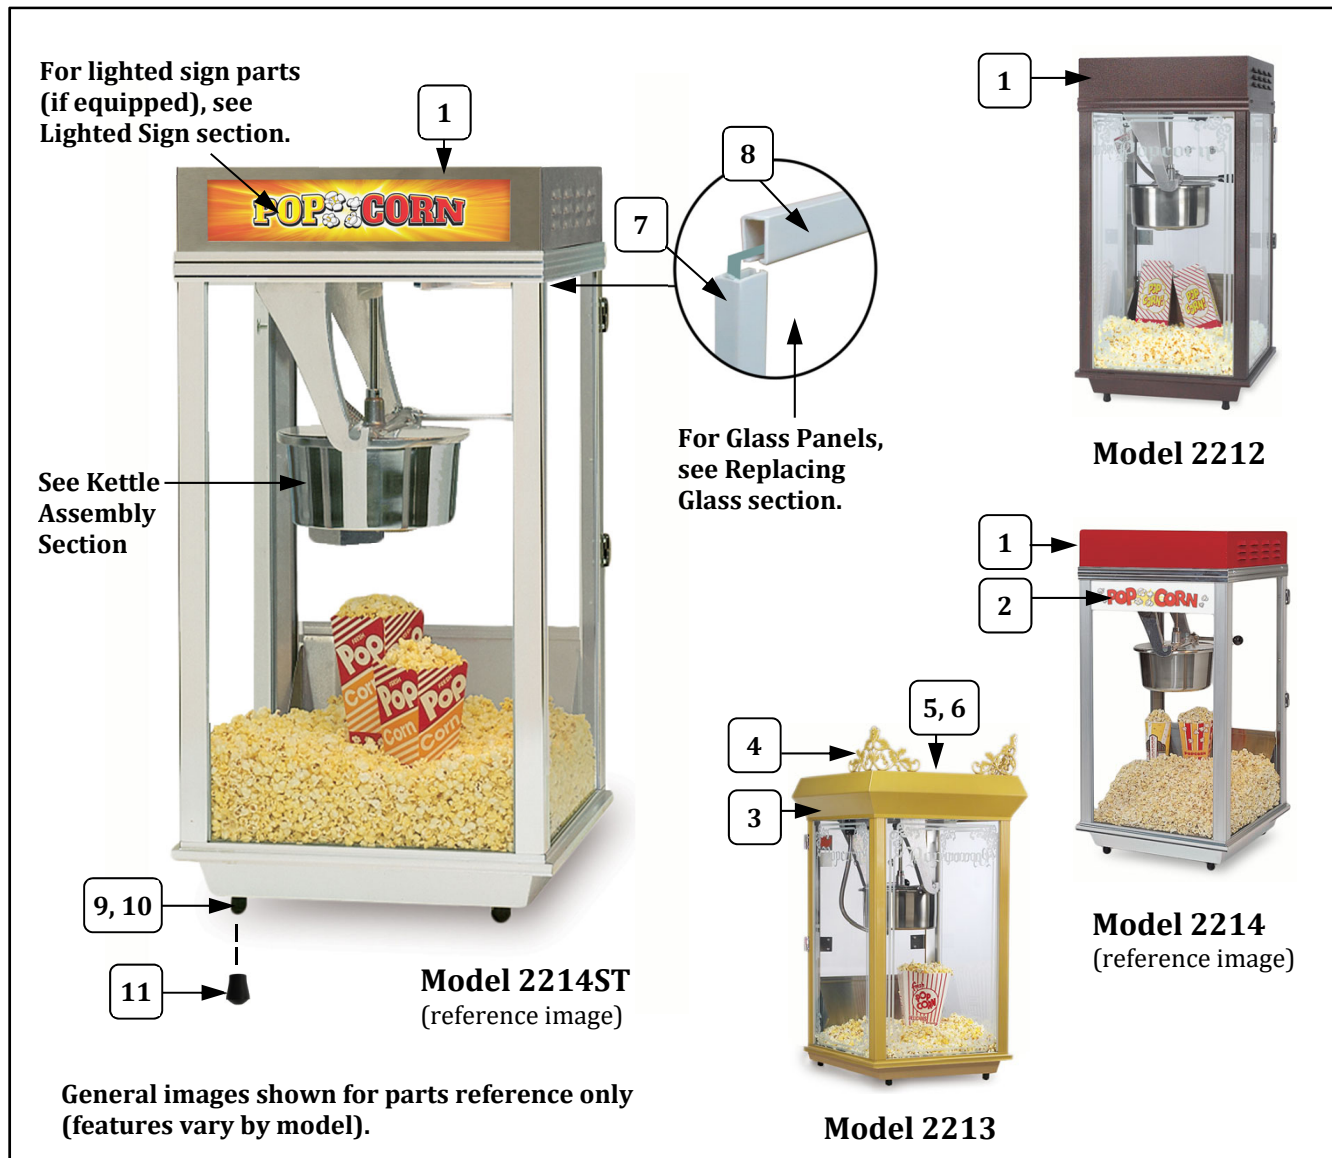


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

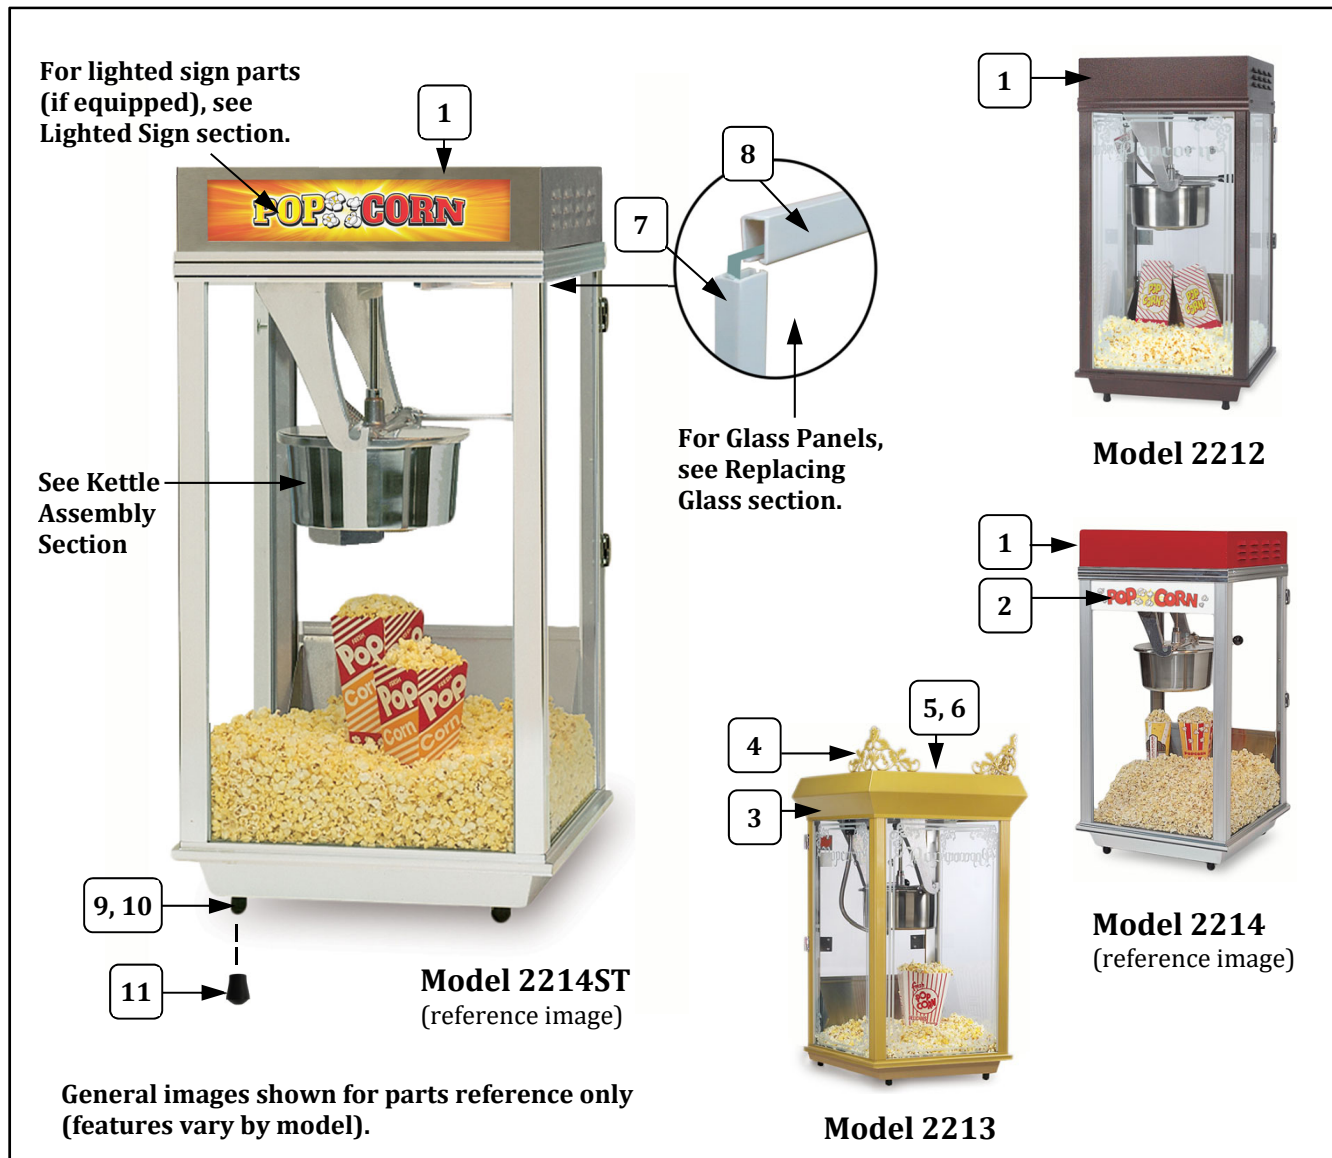


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

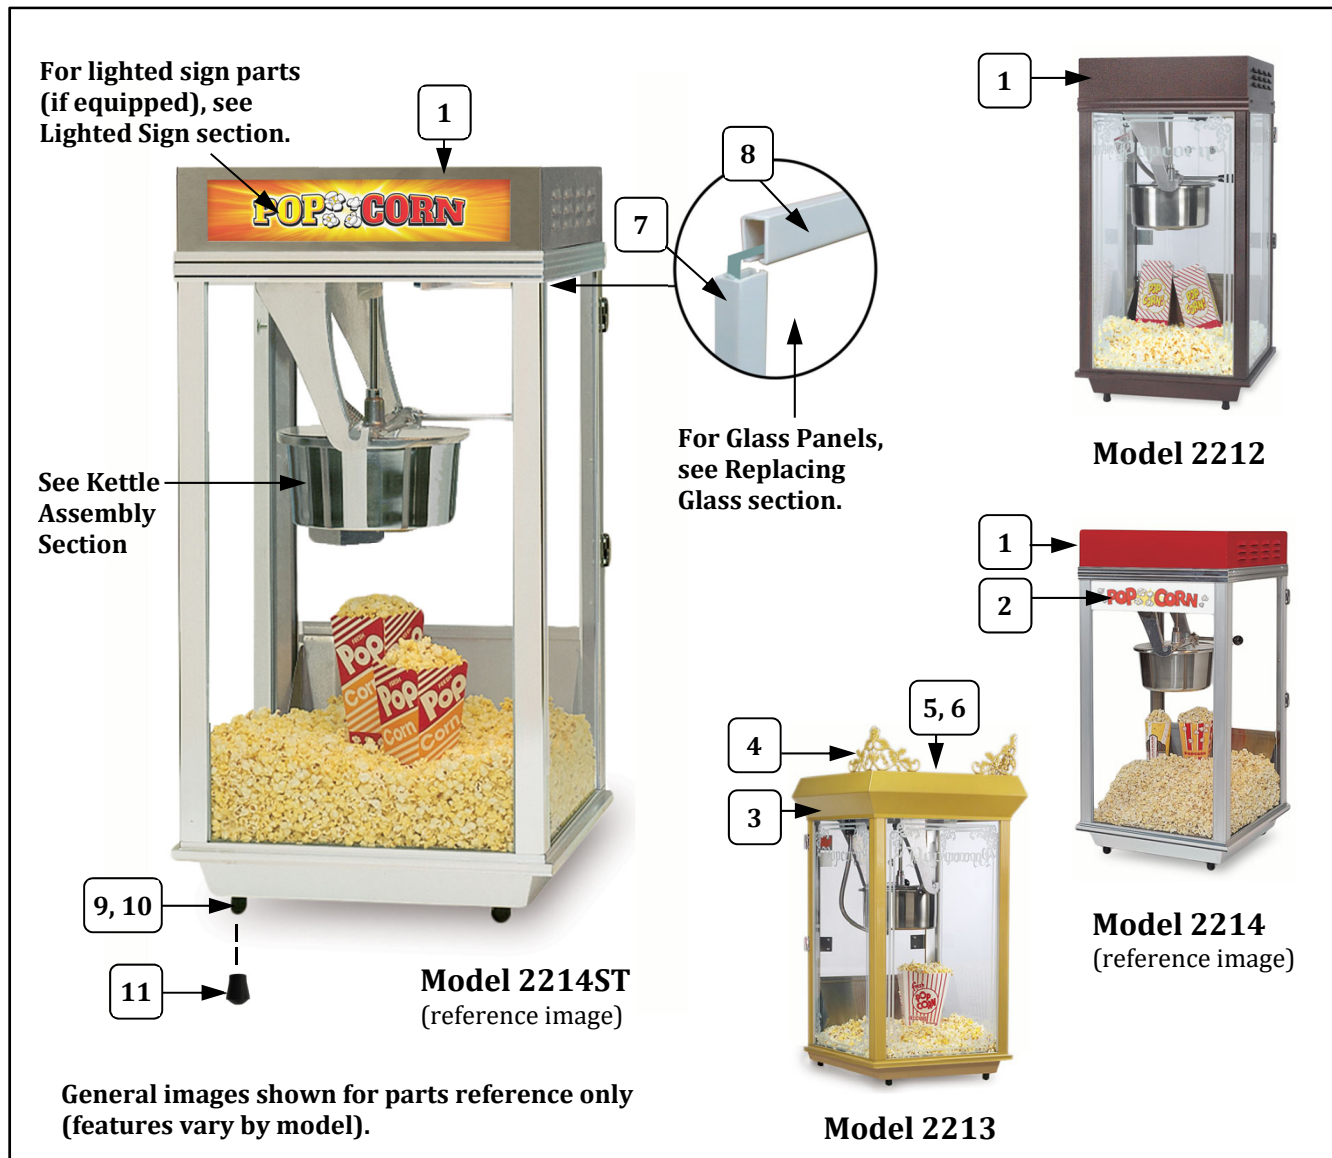


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

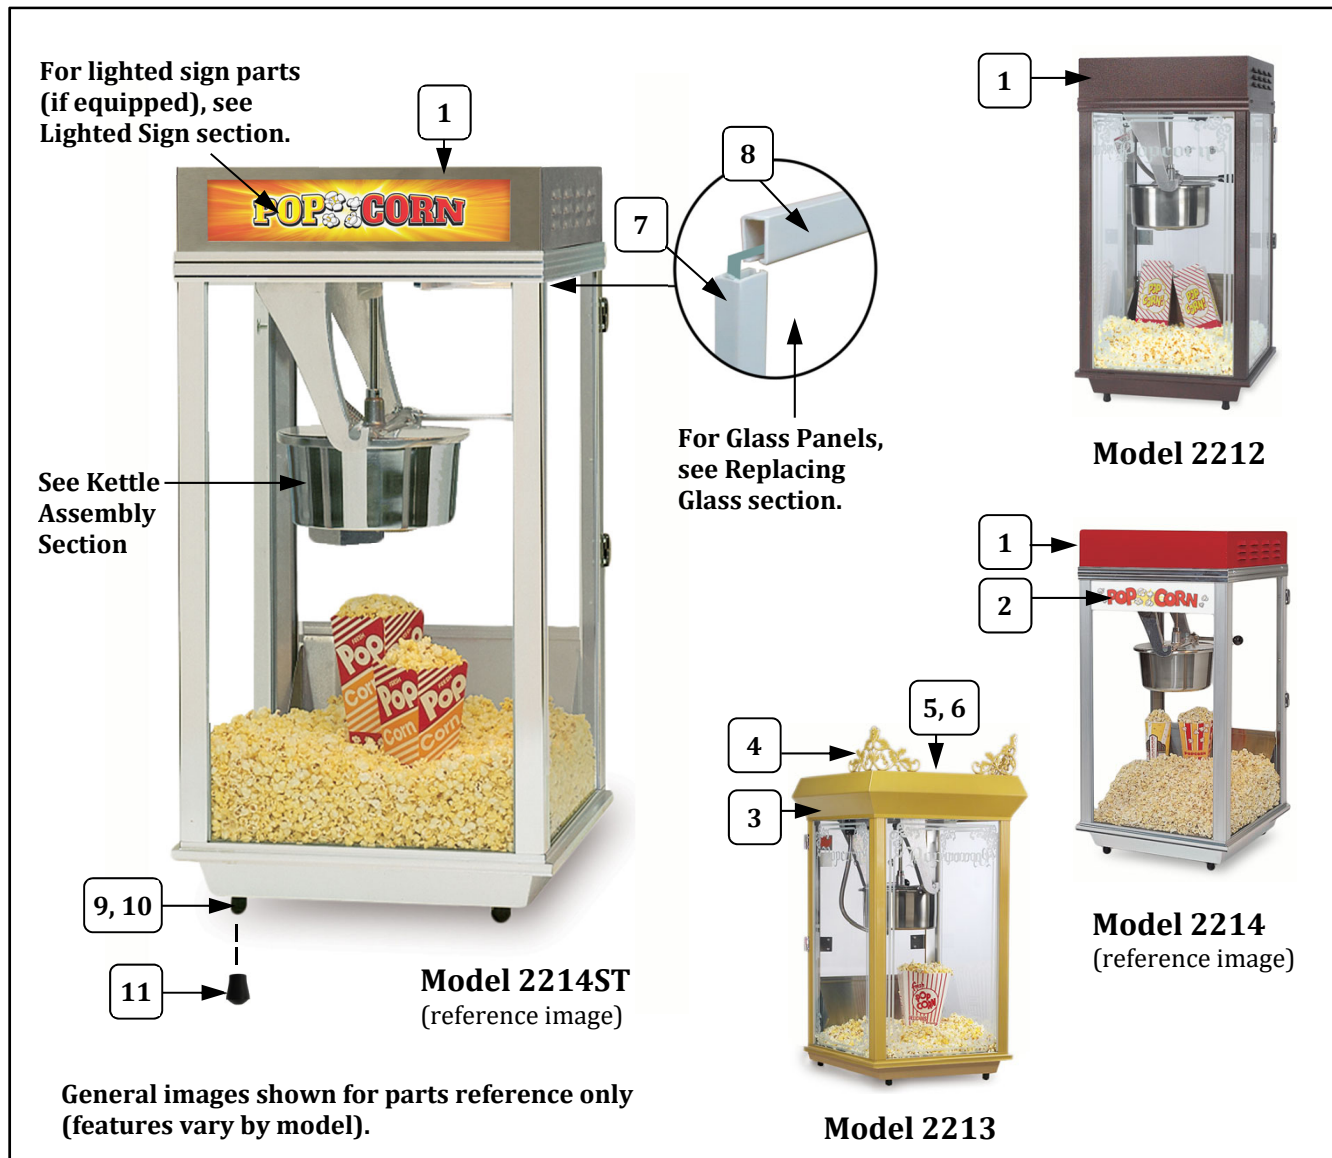


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

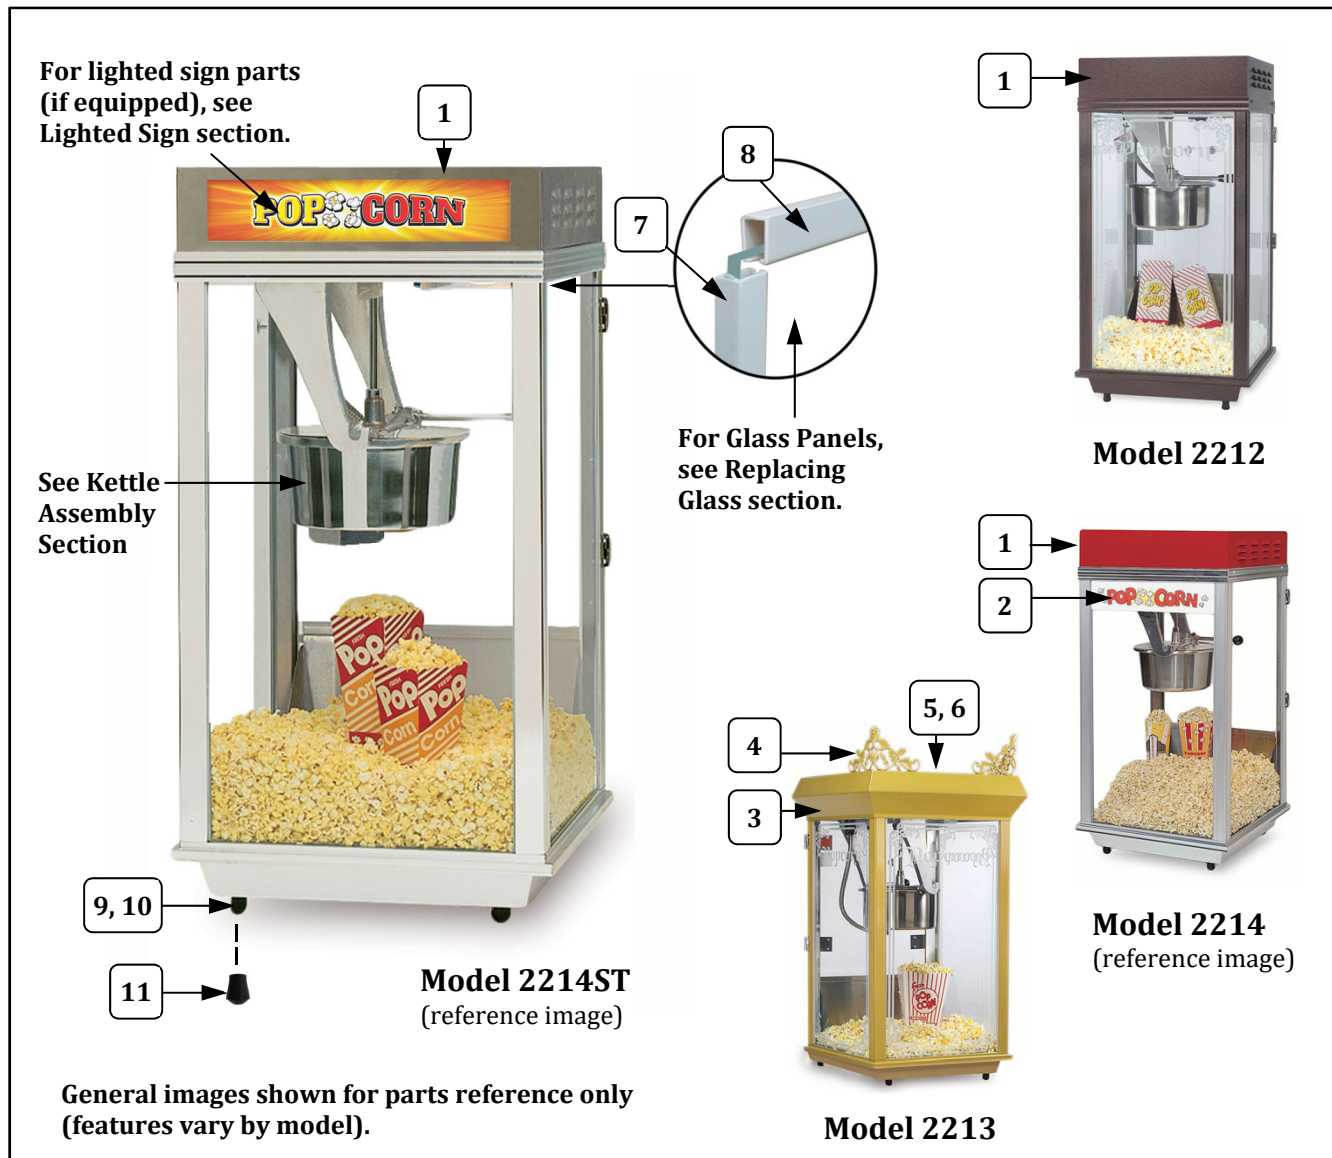


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

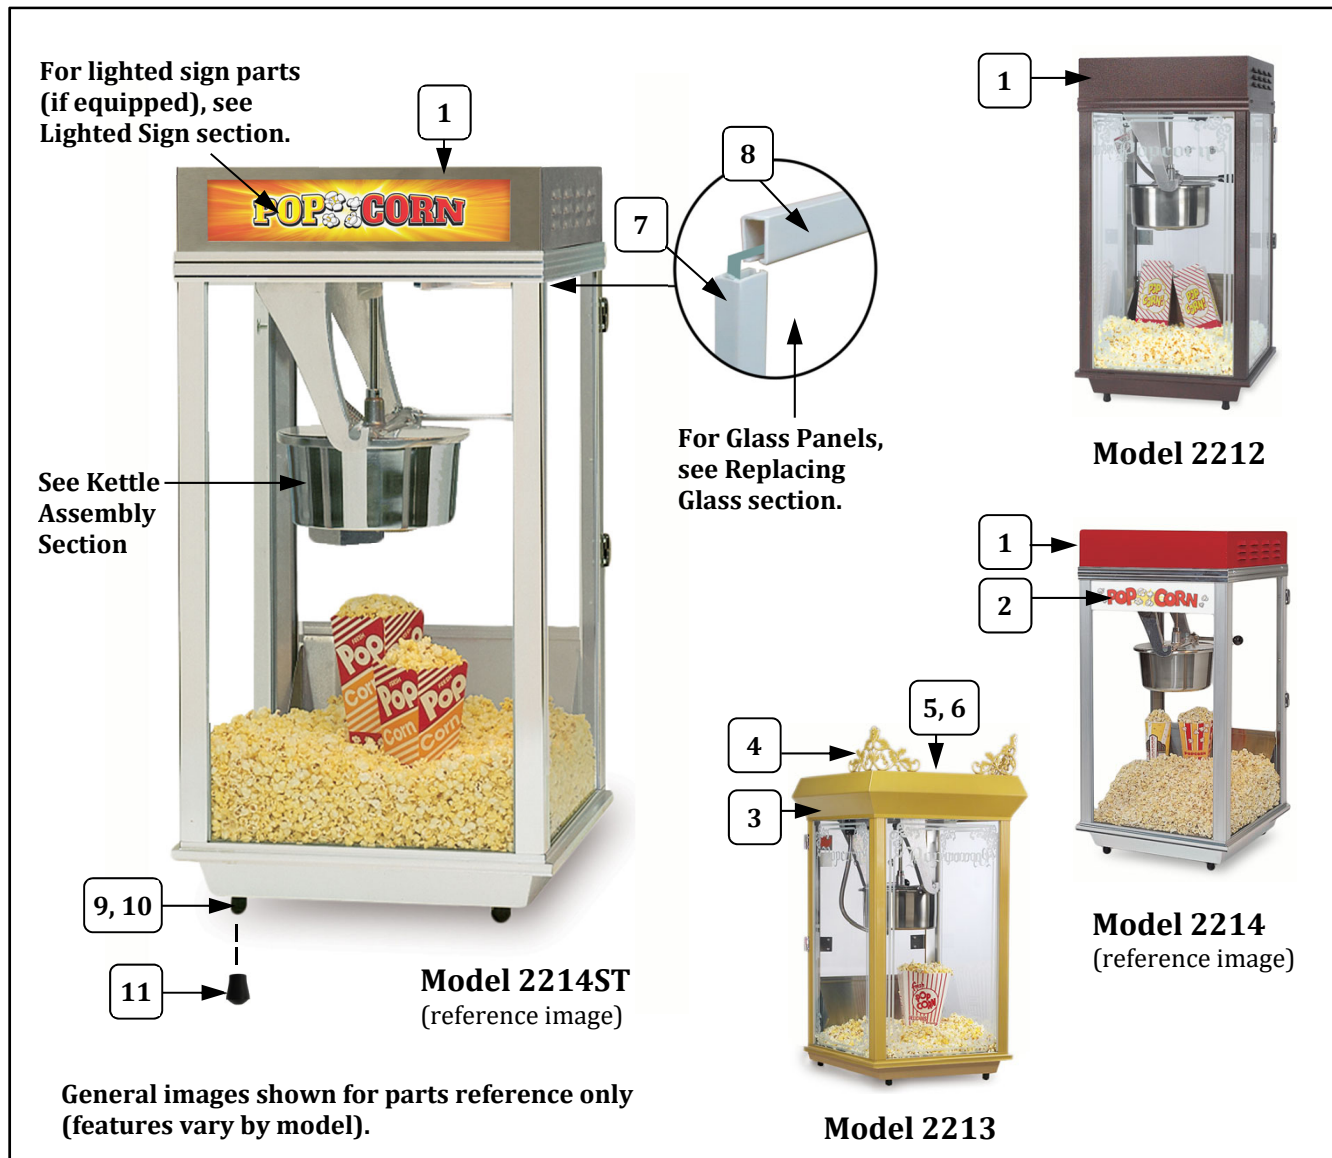


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

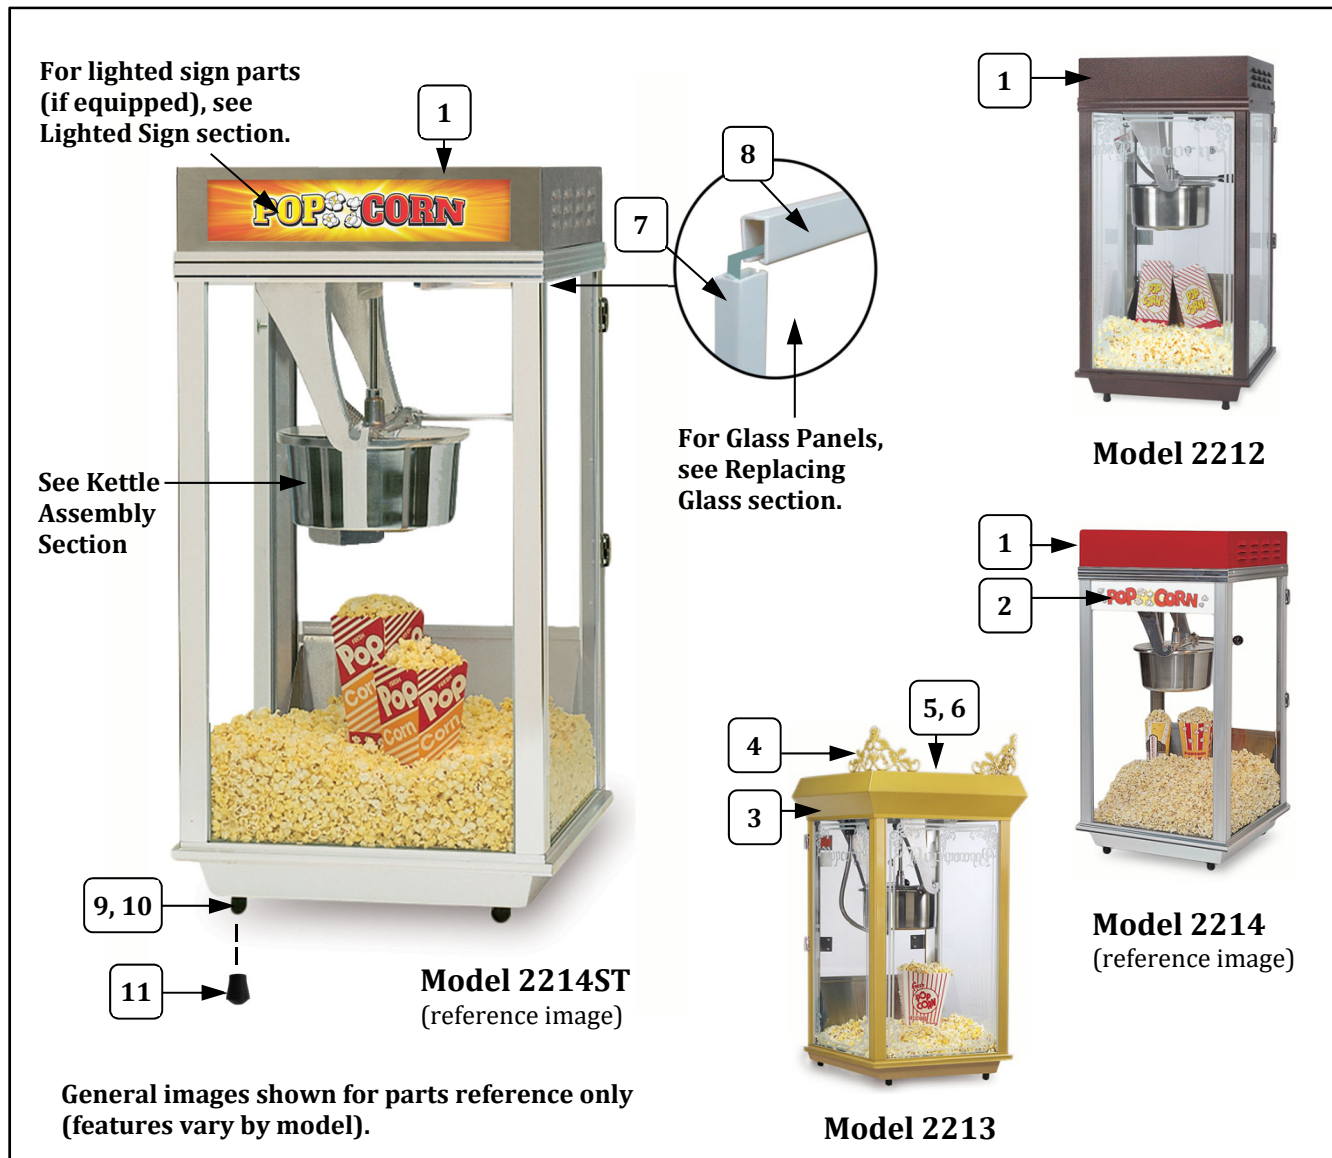


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

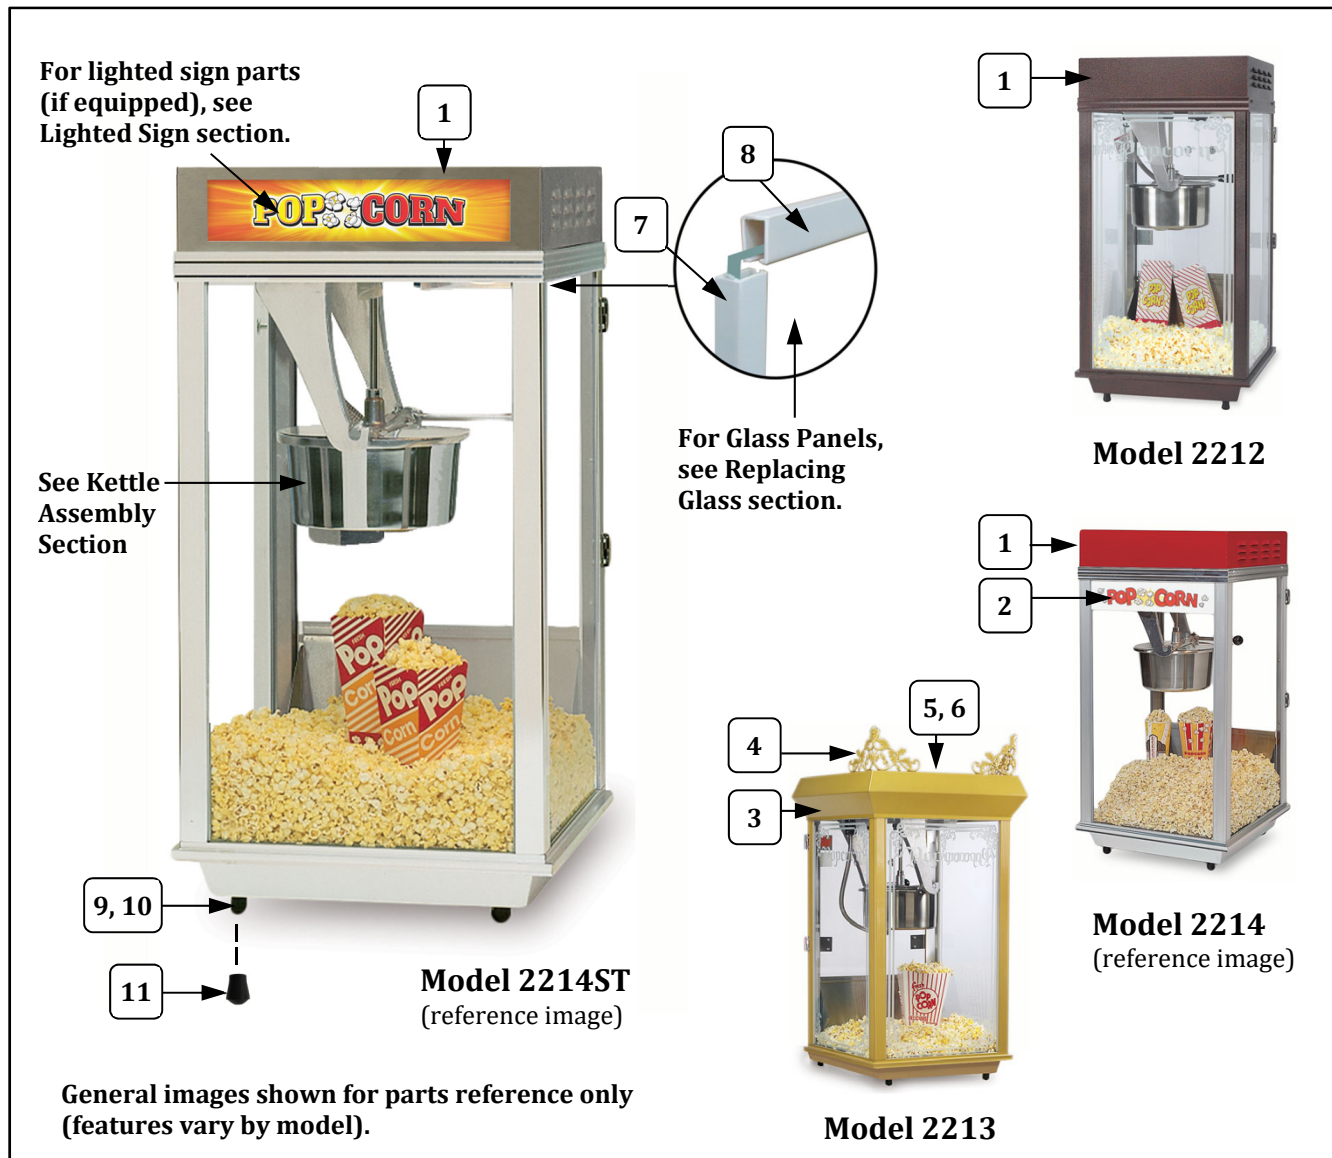


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

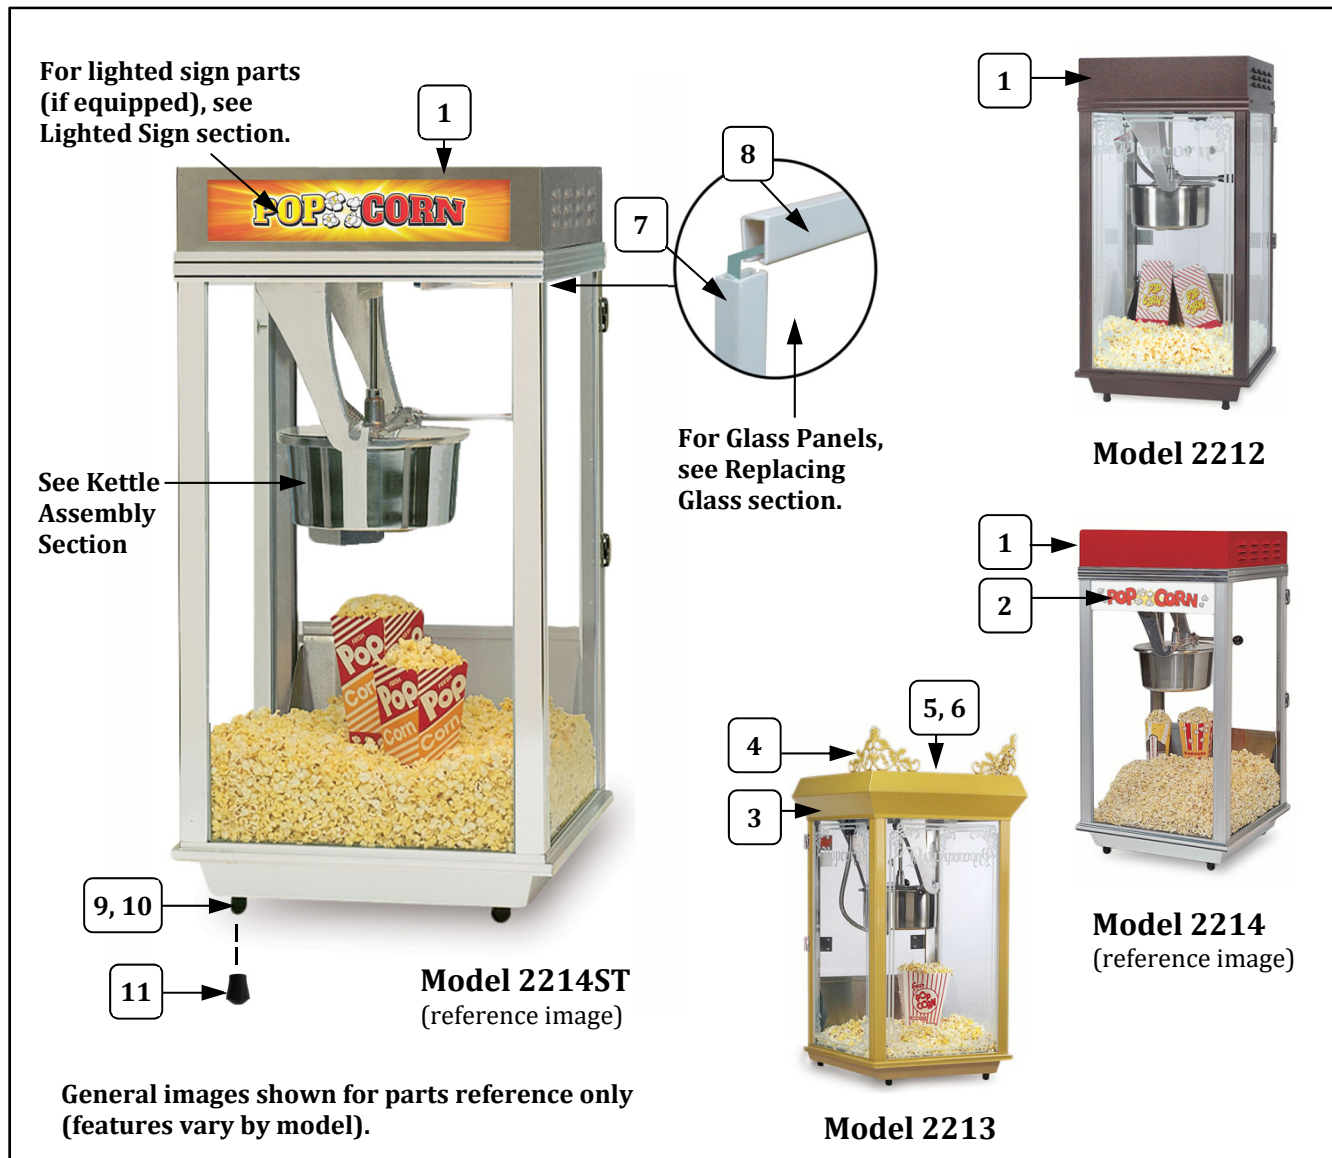


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

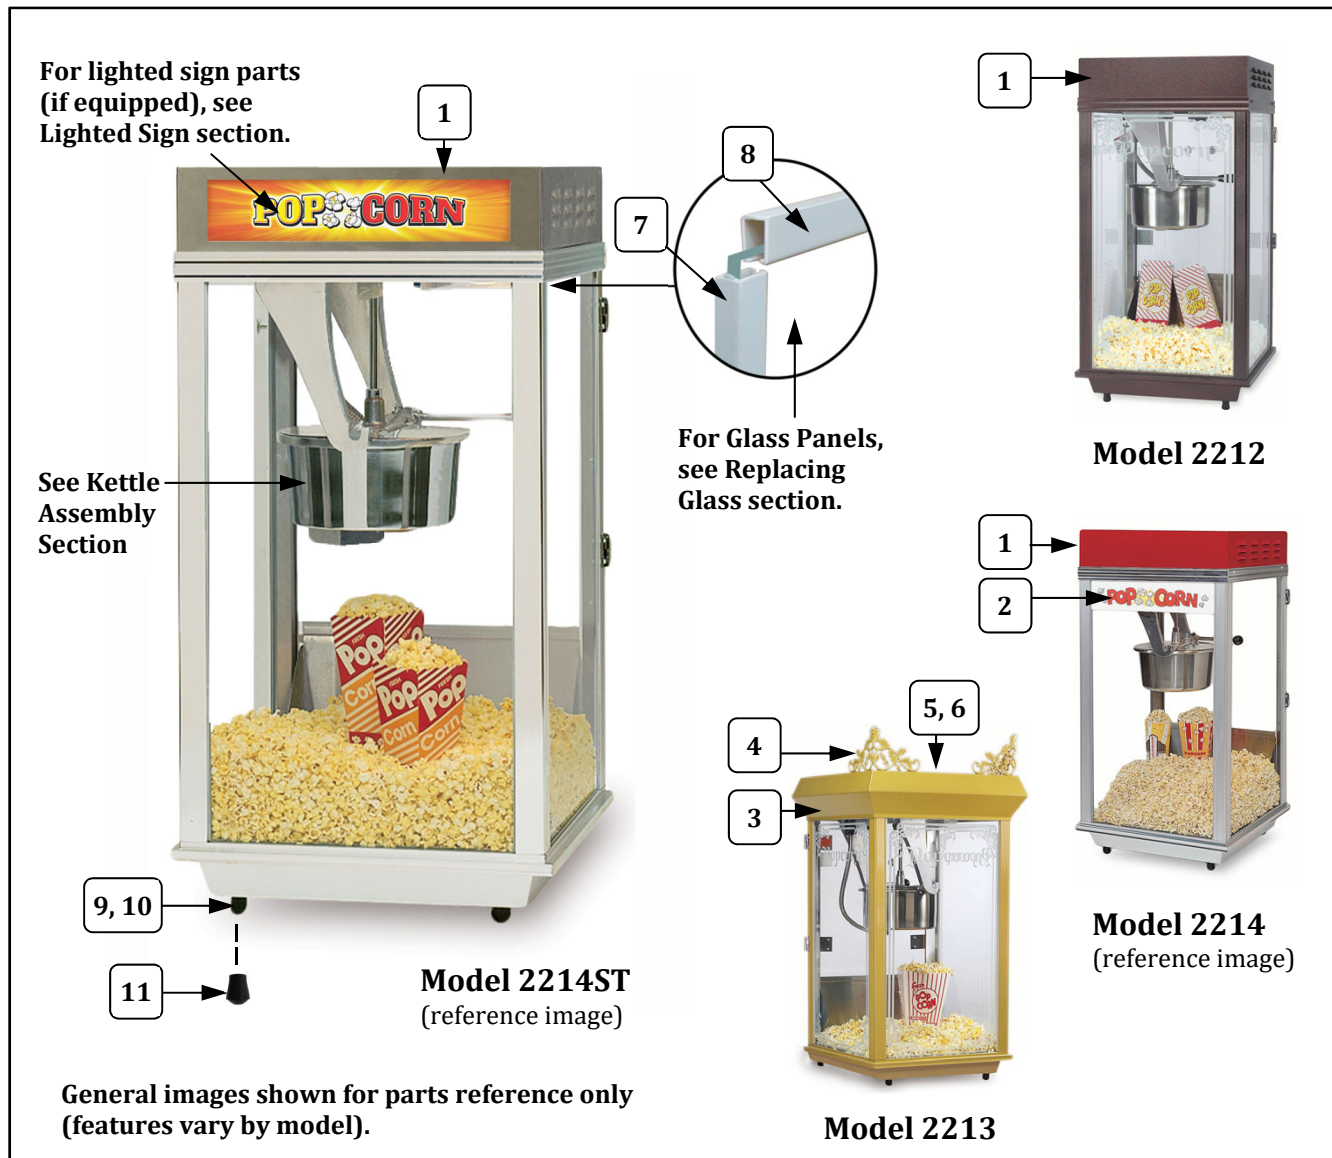


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

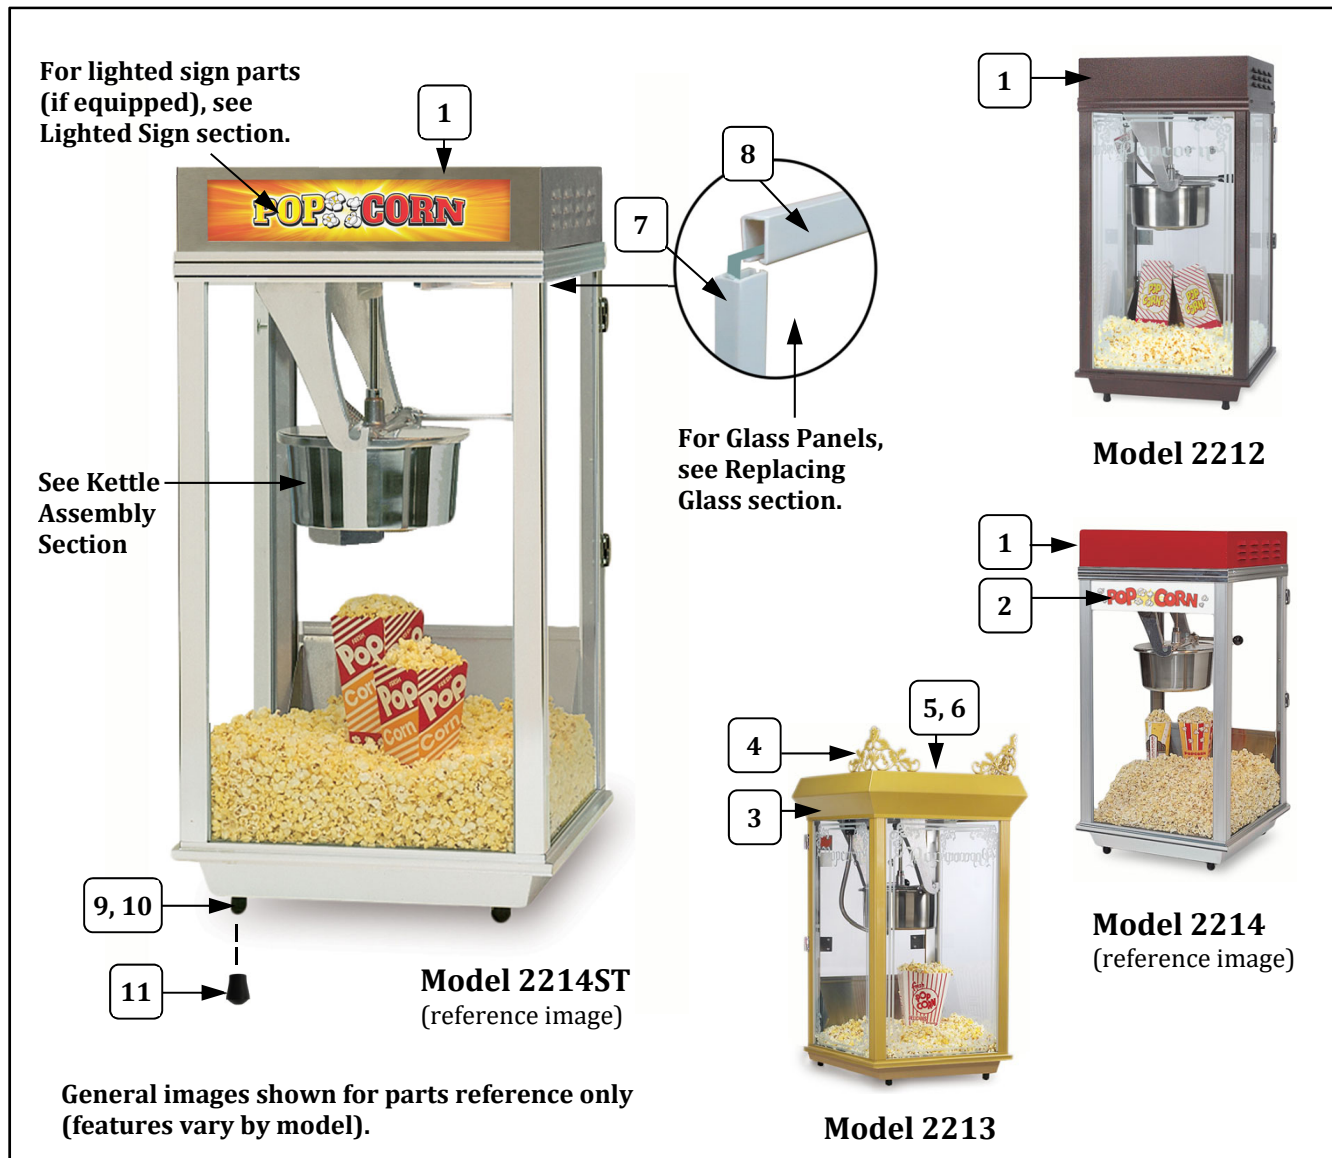


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

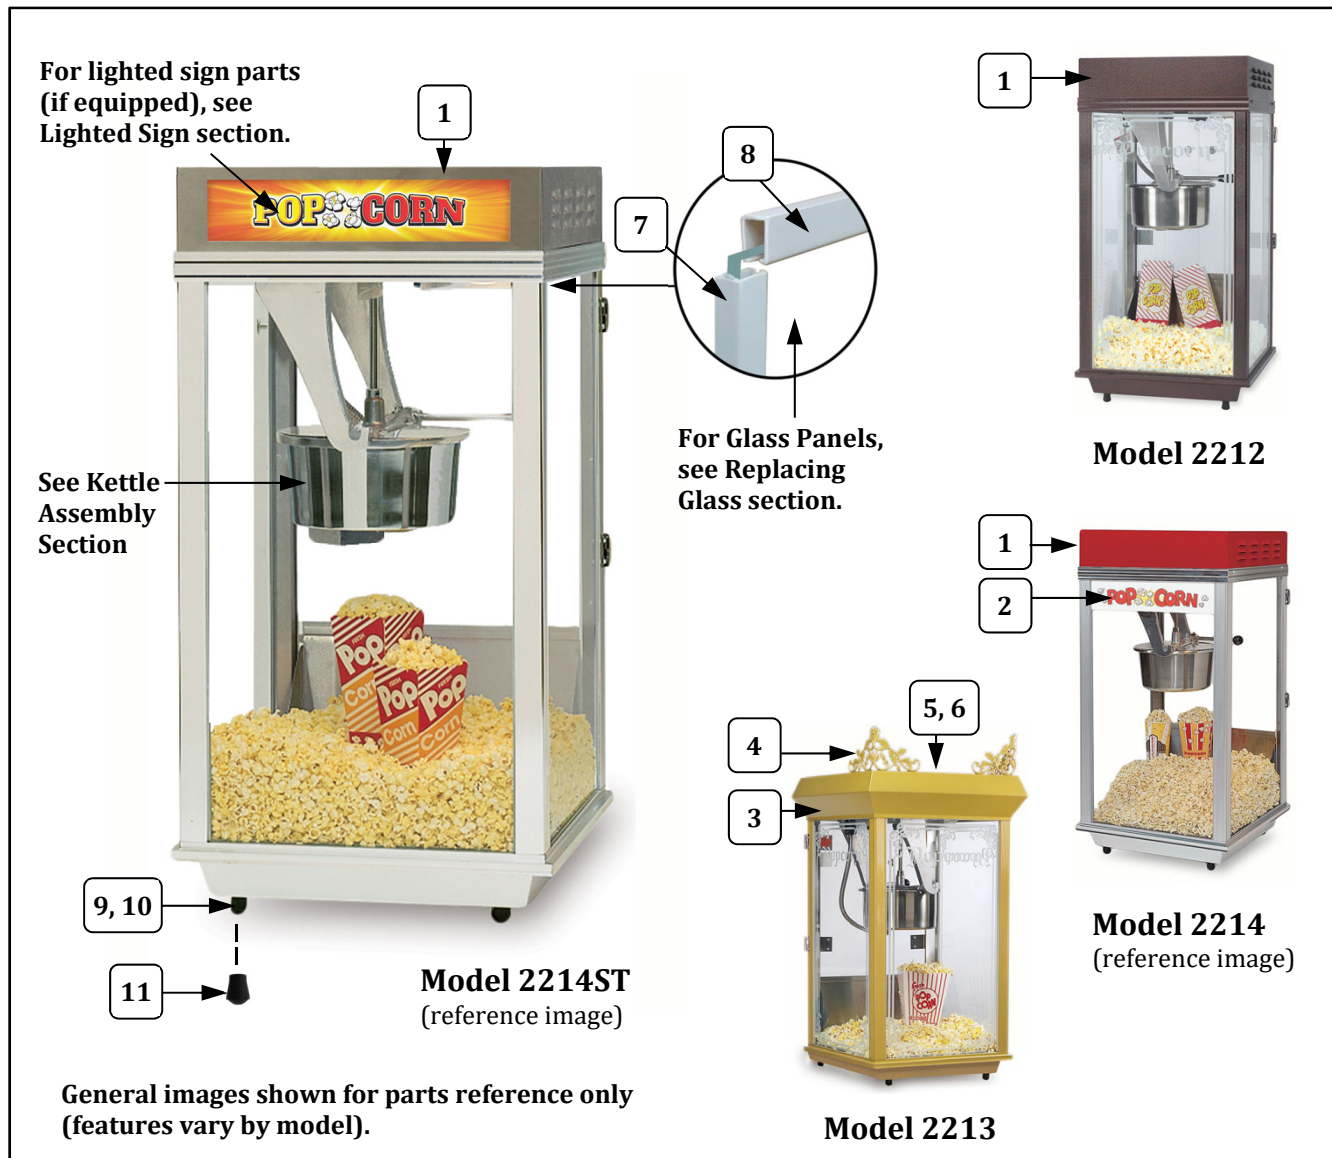


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

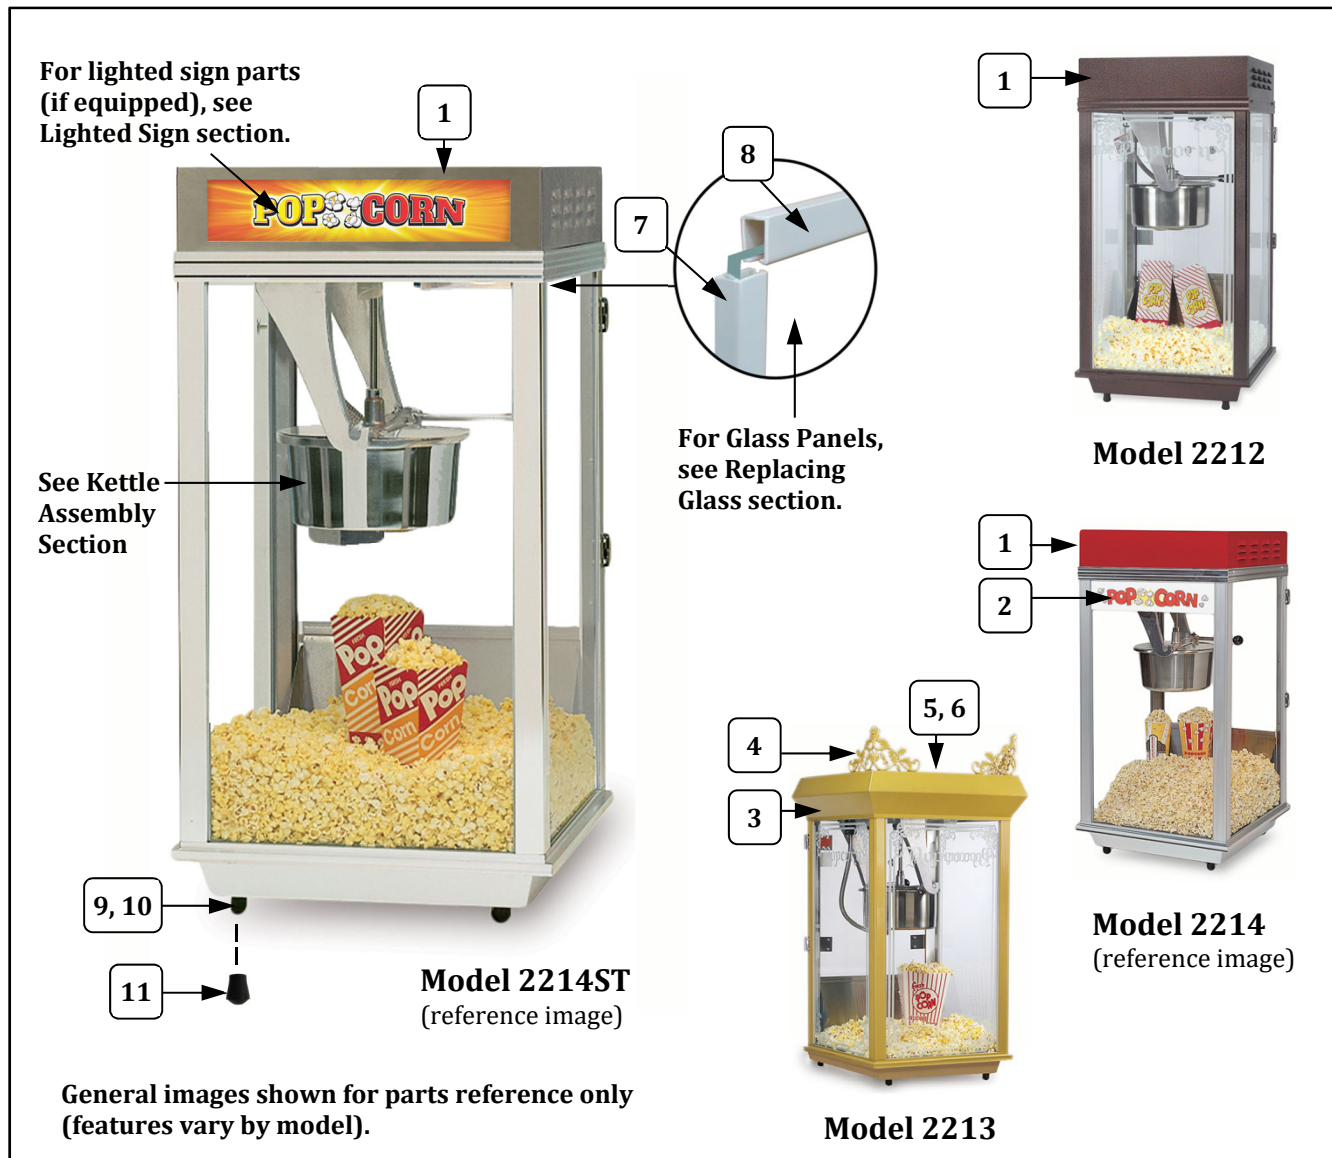


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

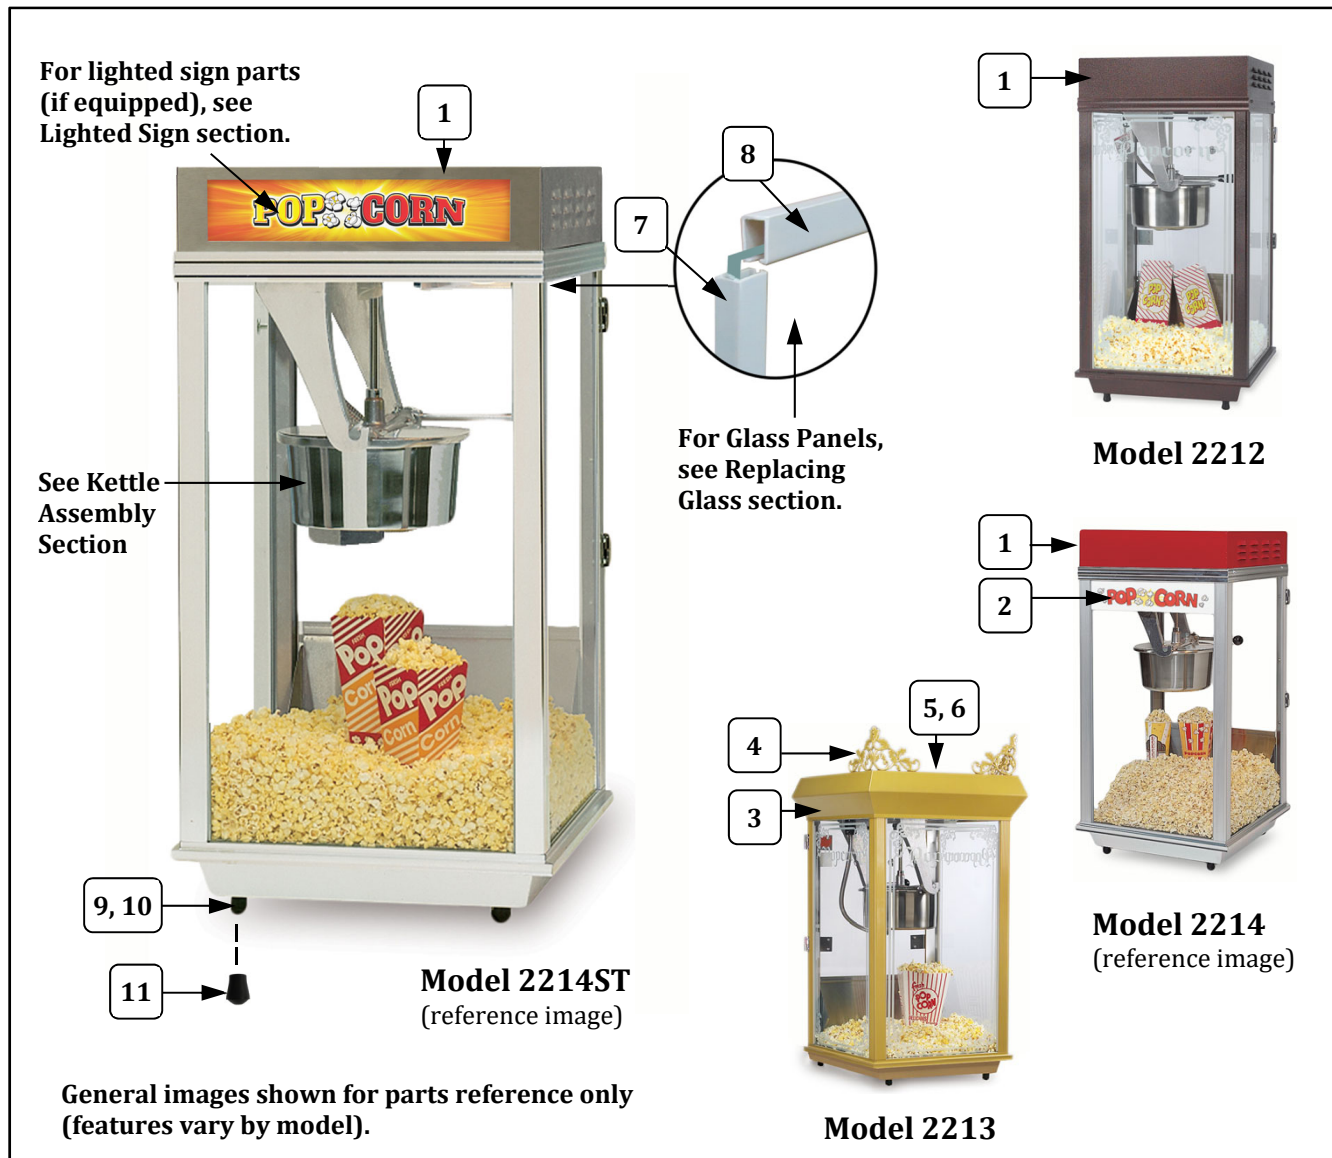


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

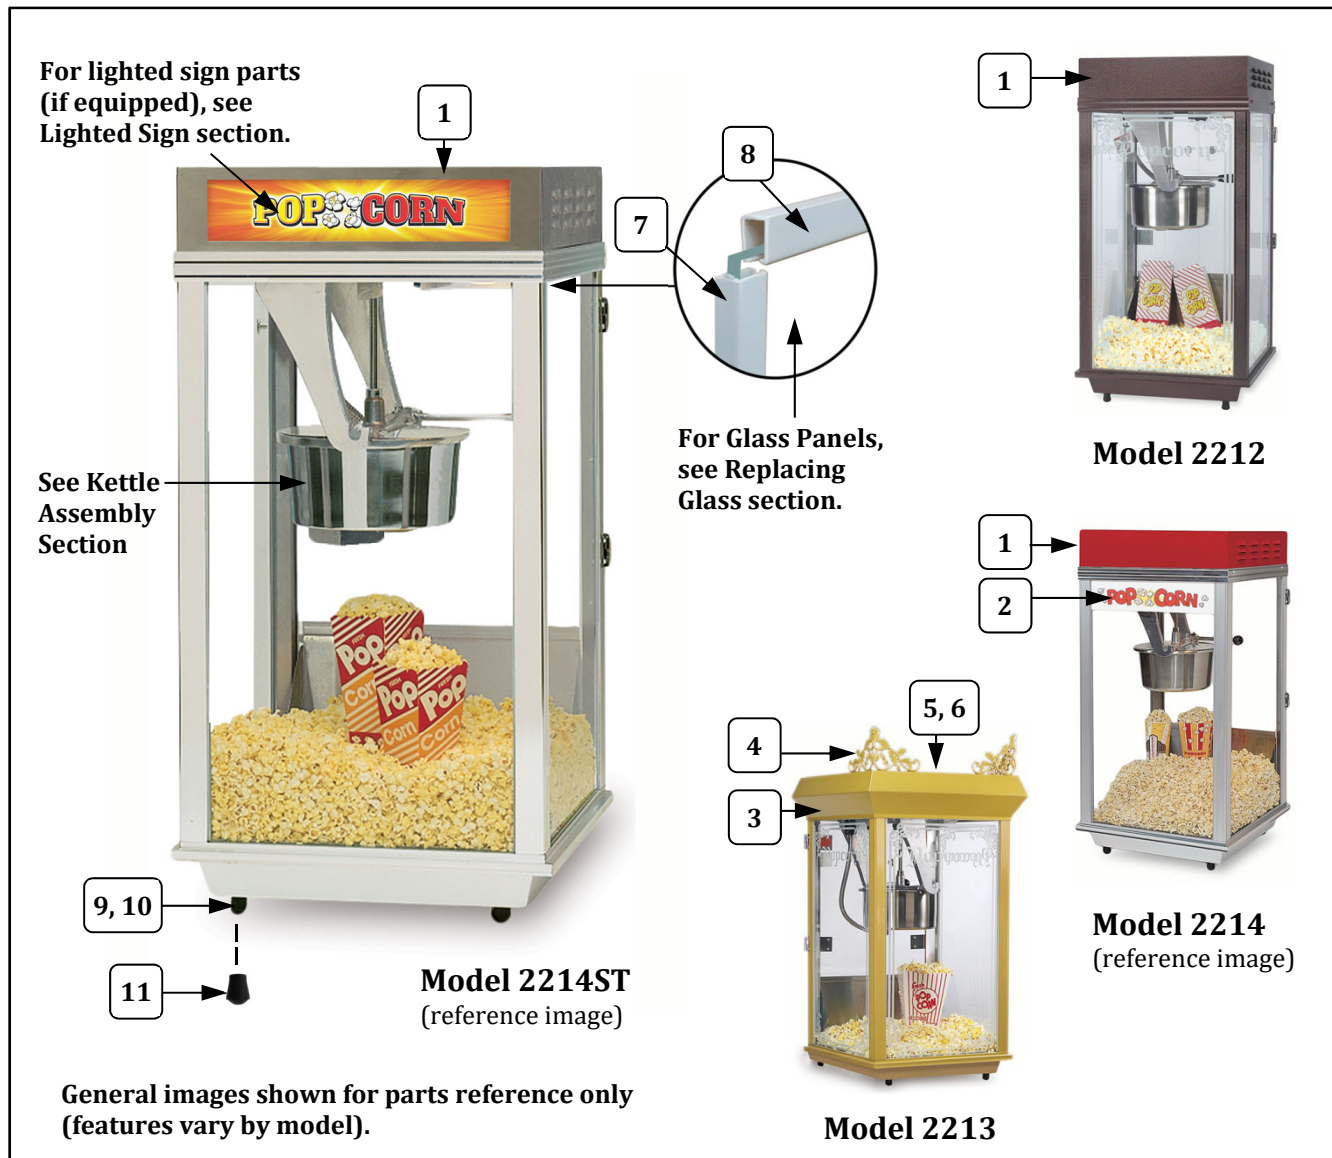


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

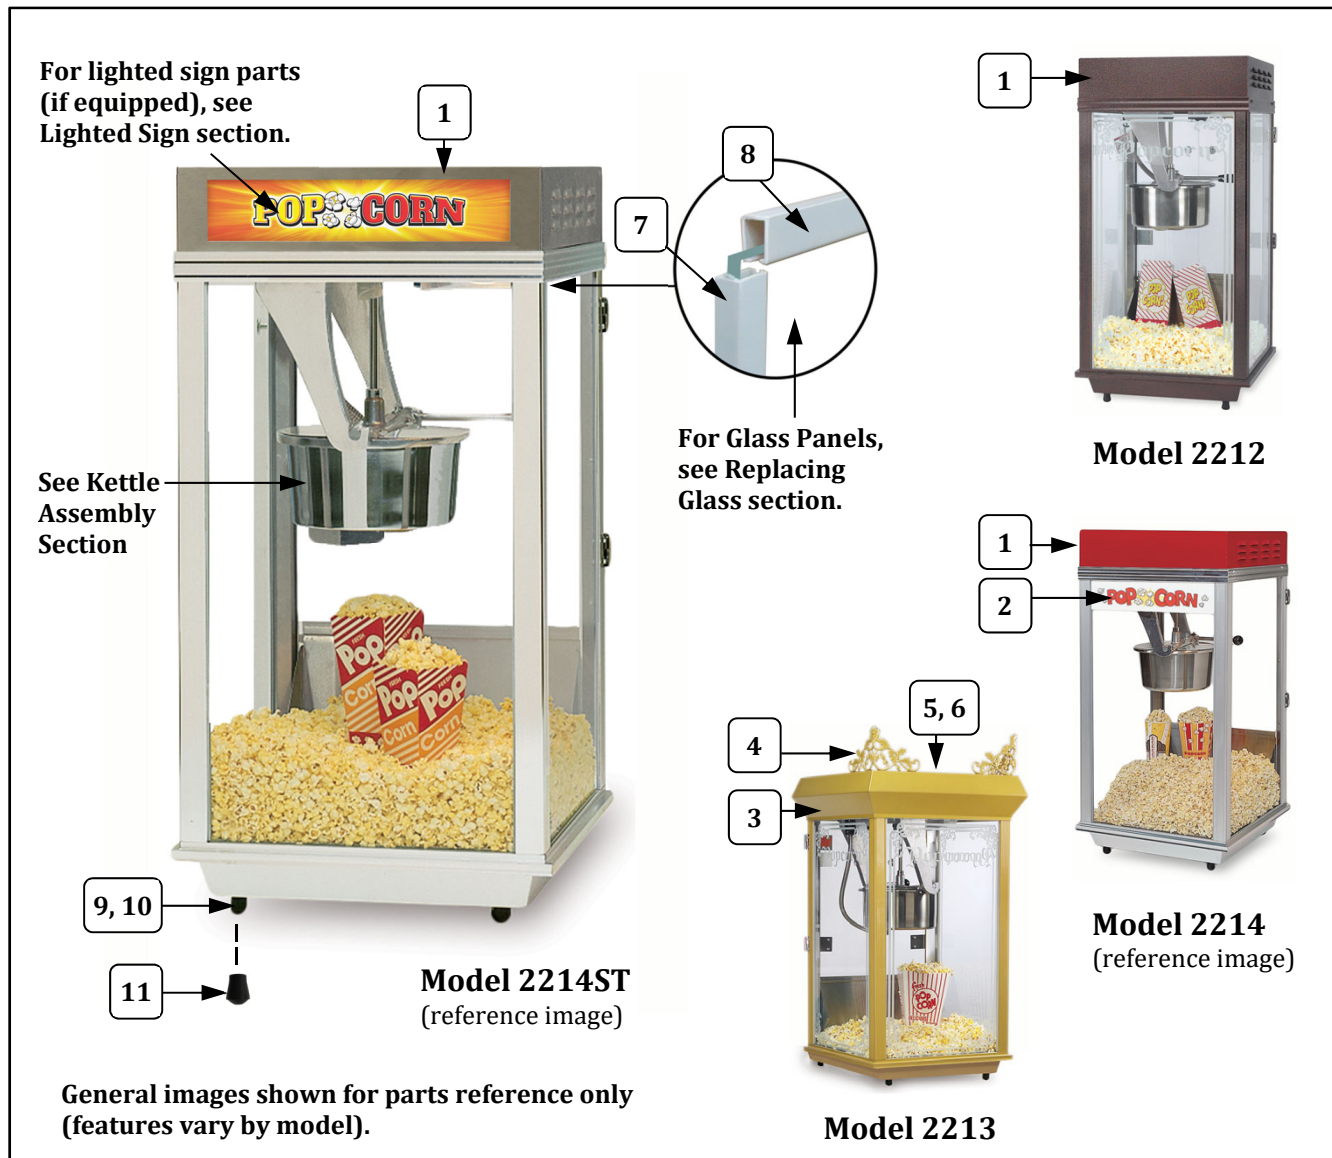


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

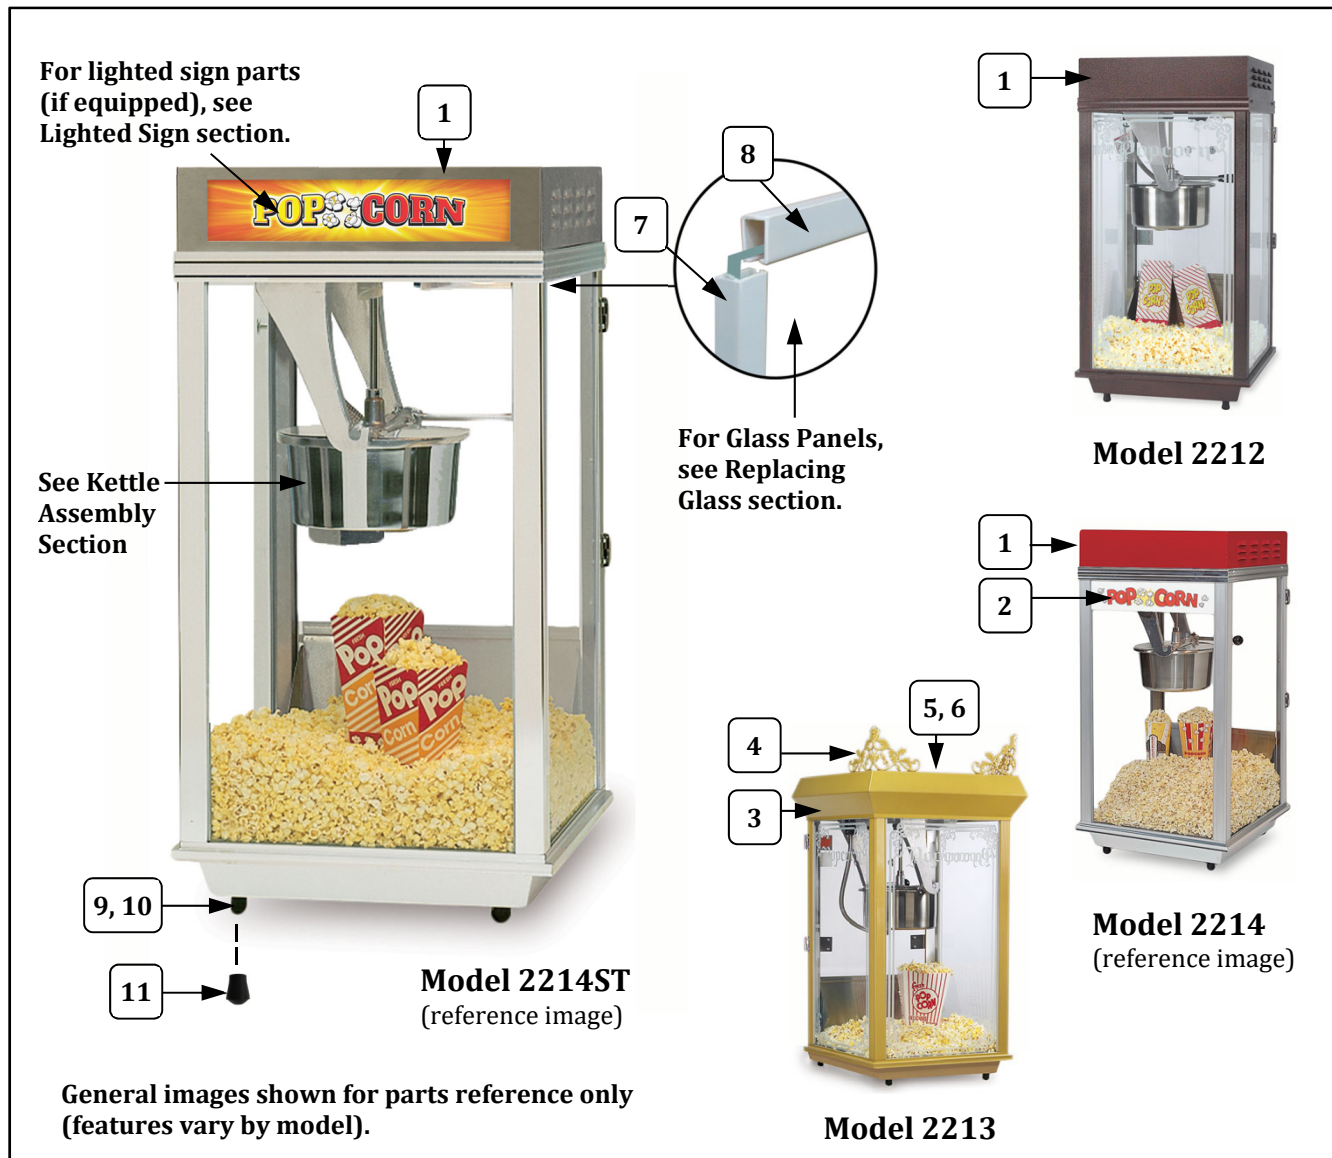


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

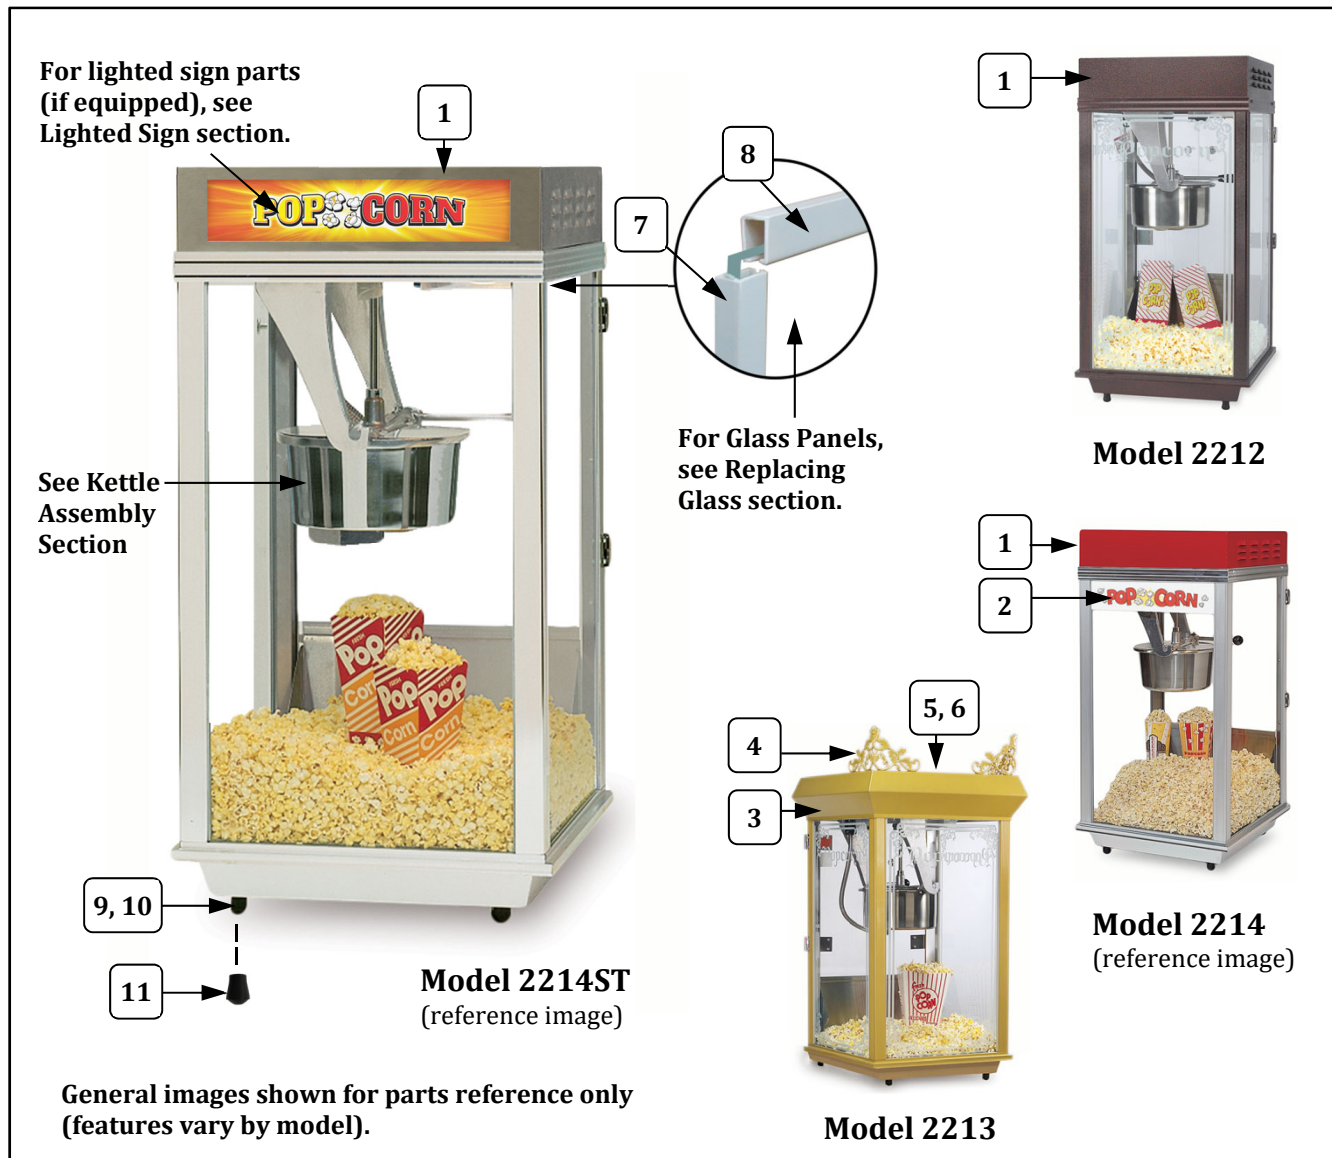


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

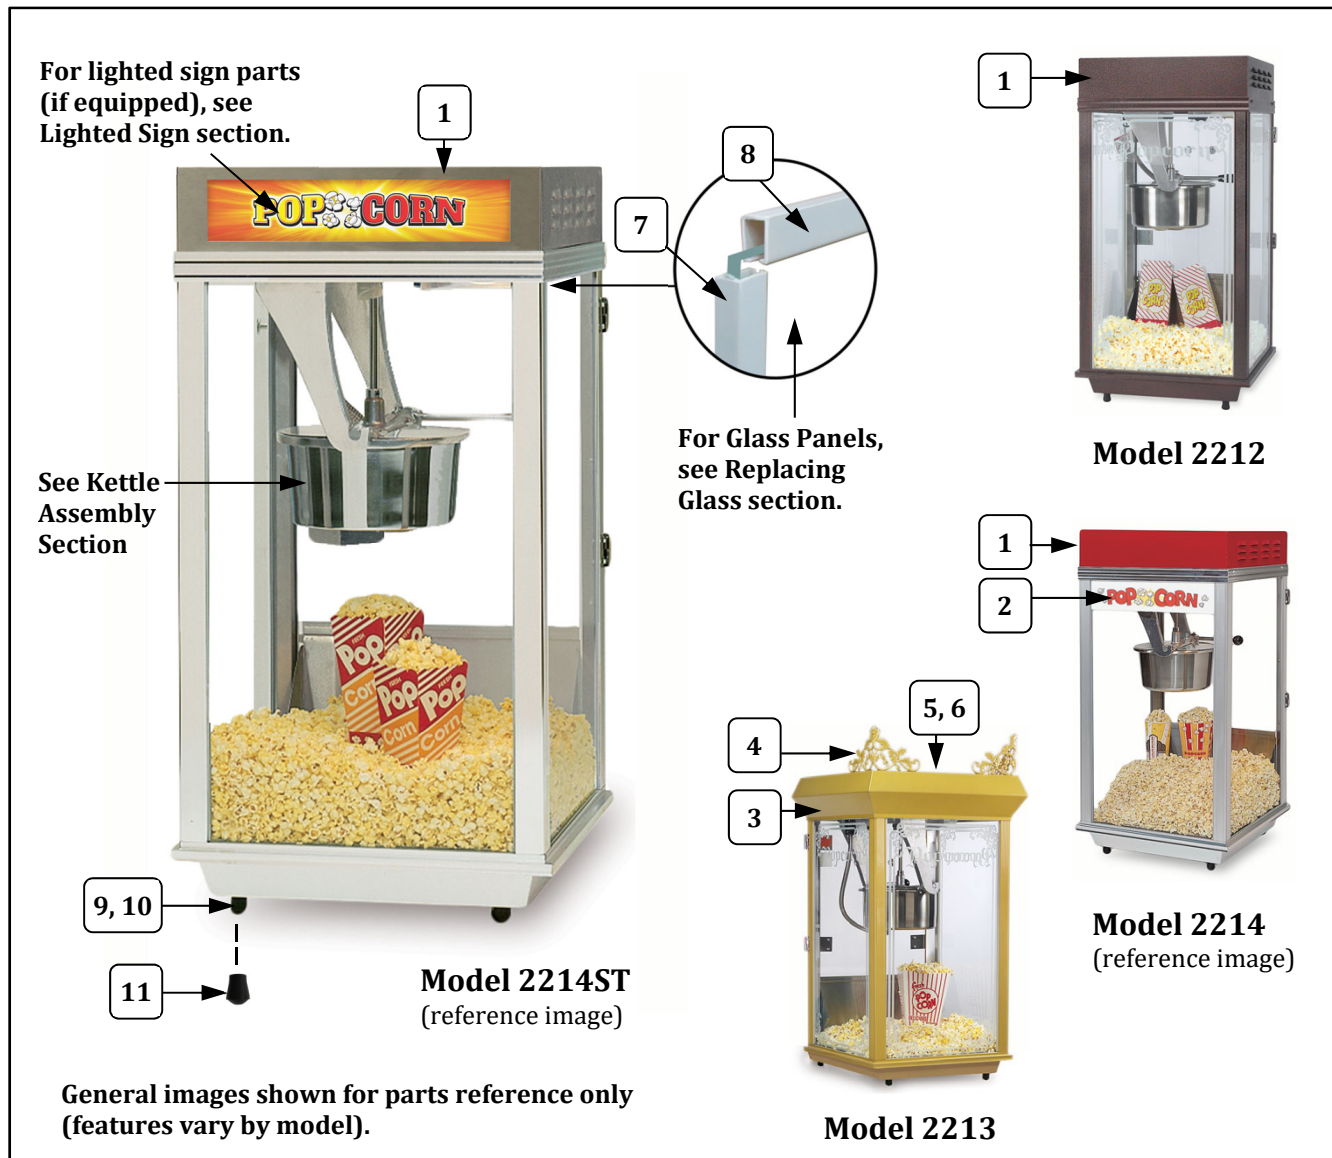


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

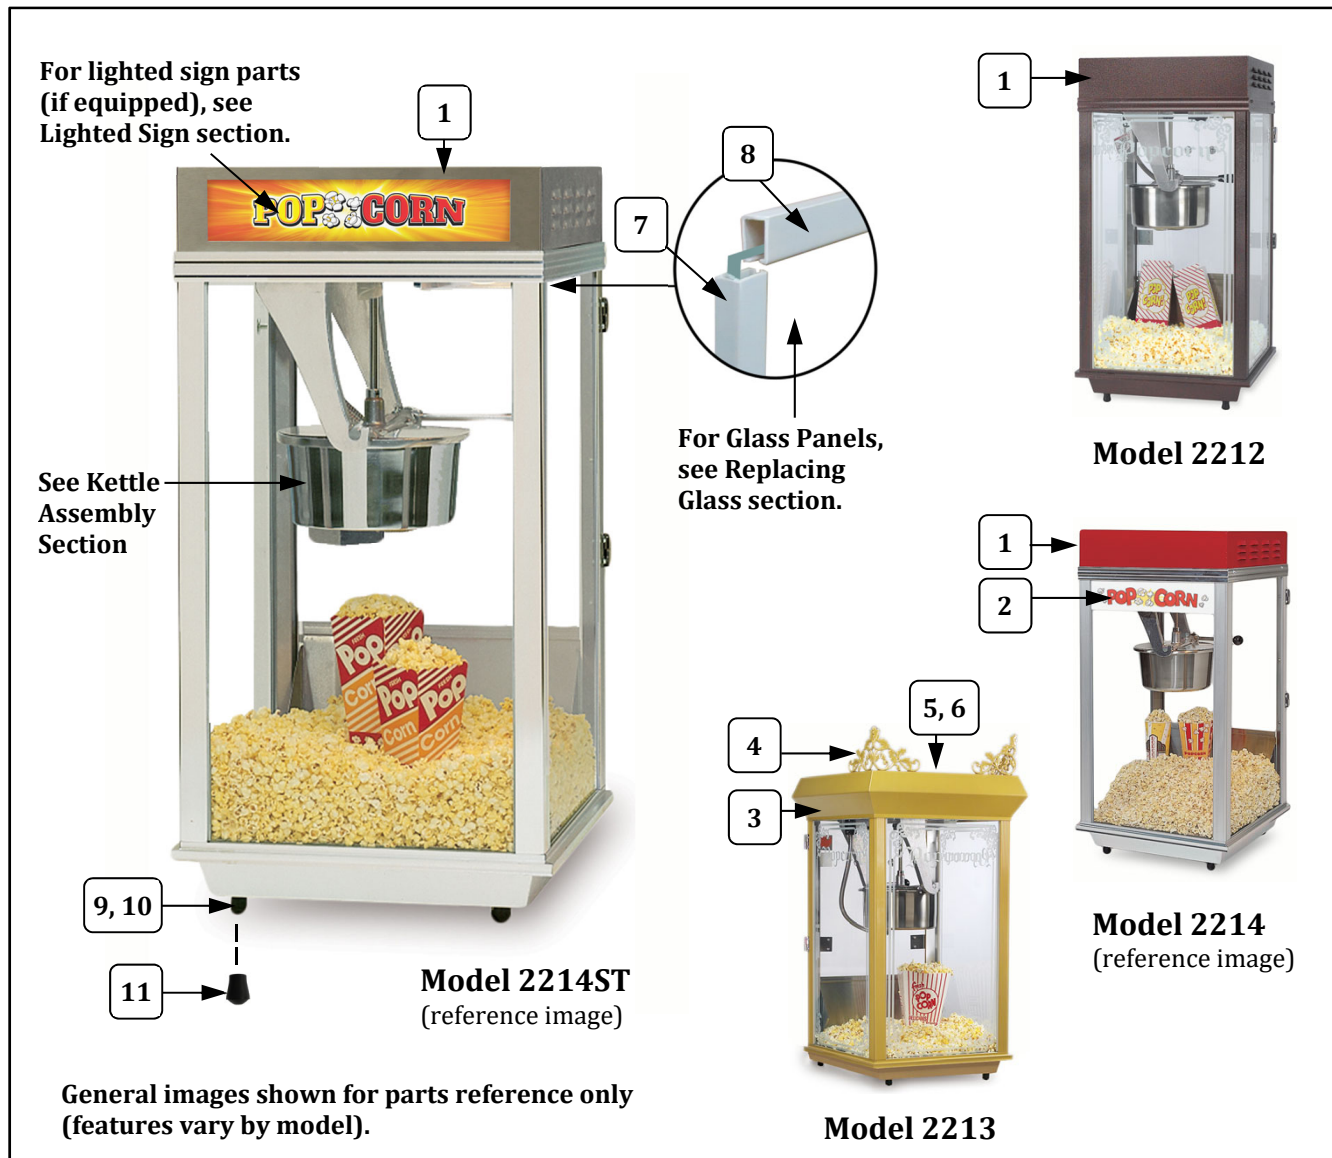


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOME		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

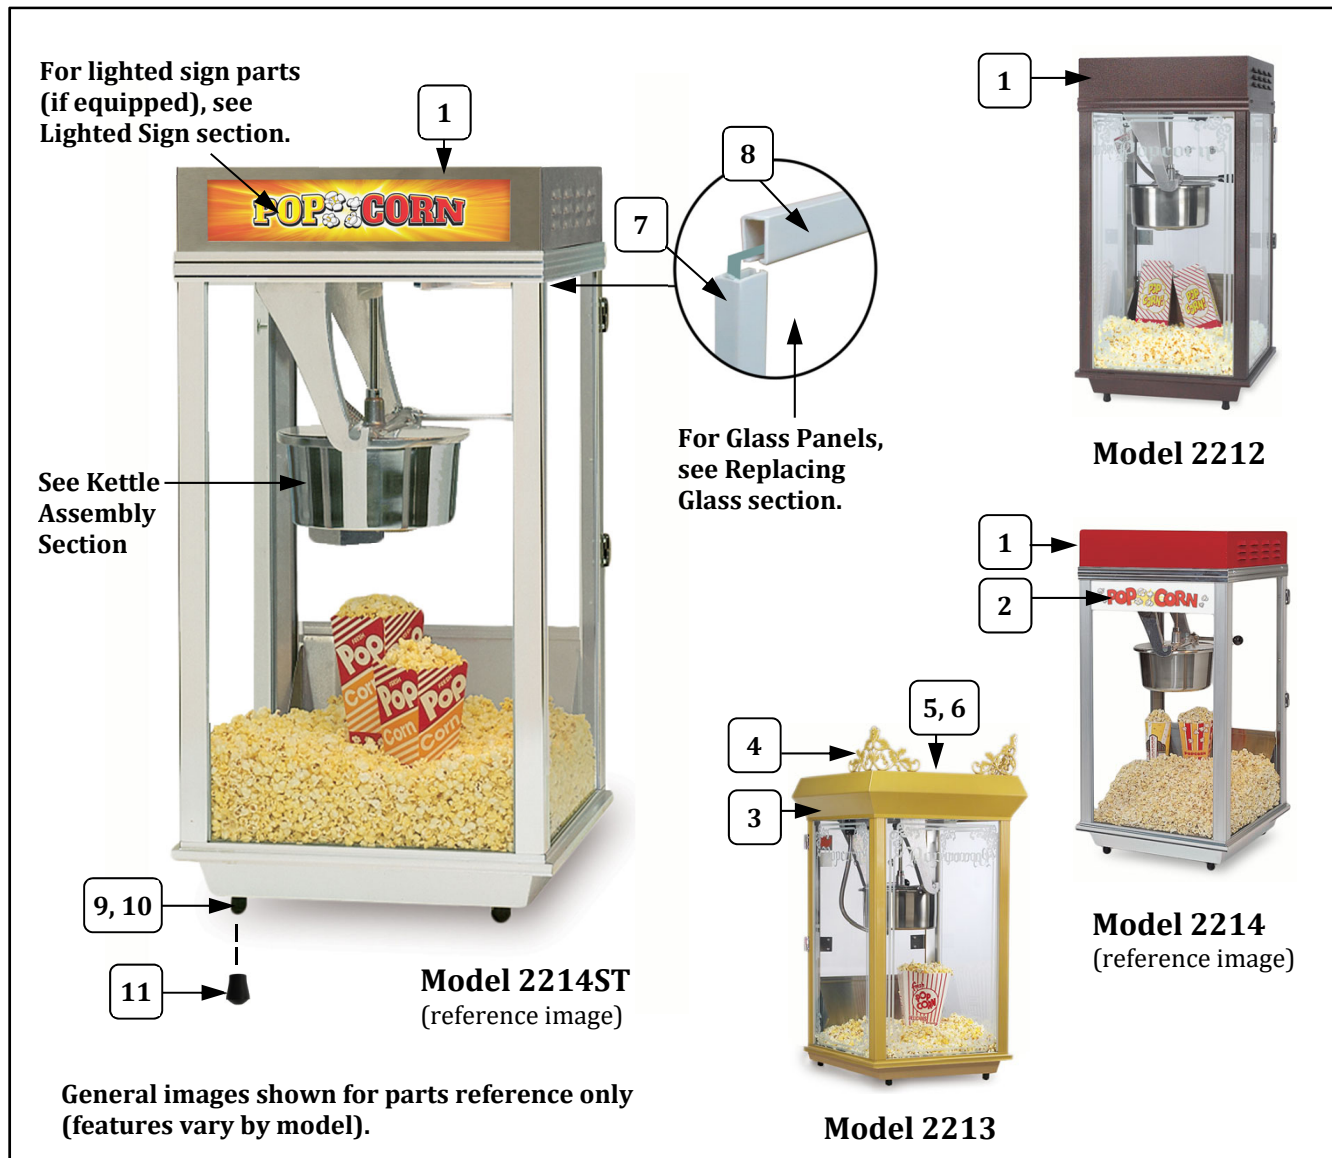


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

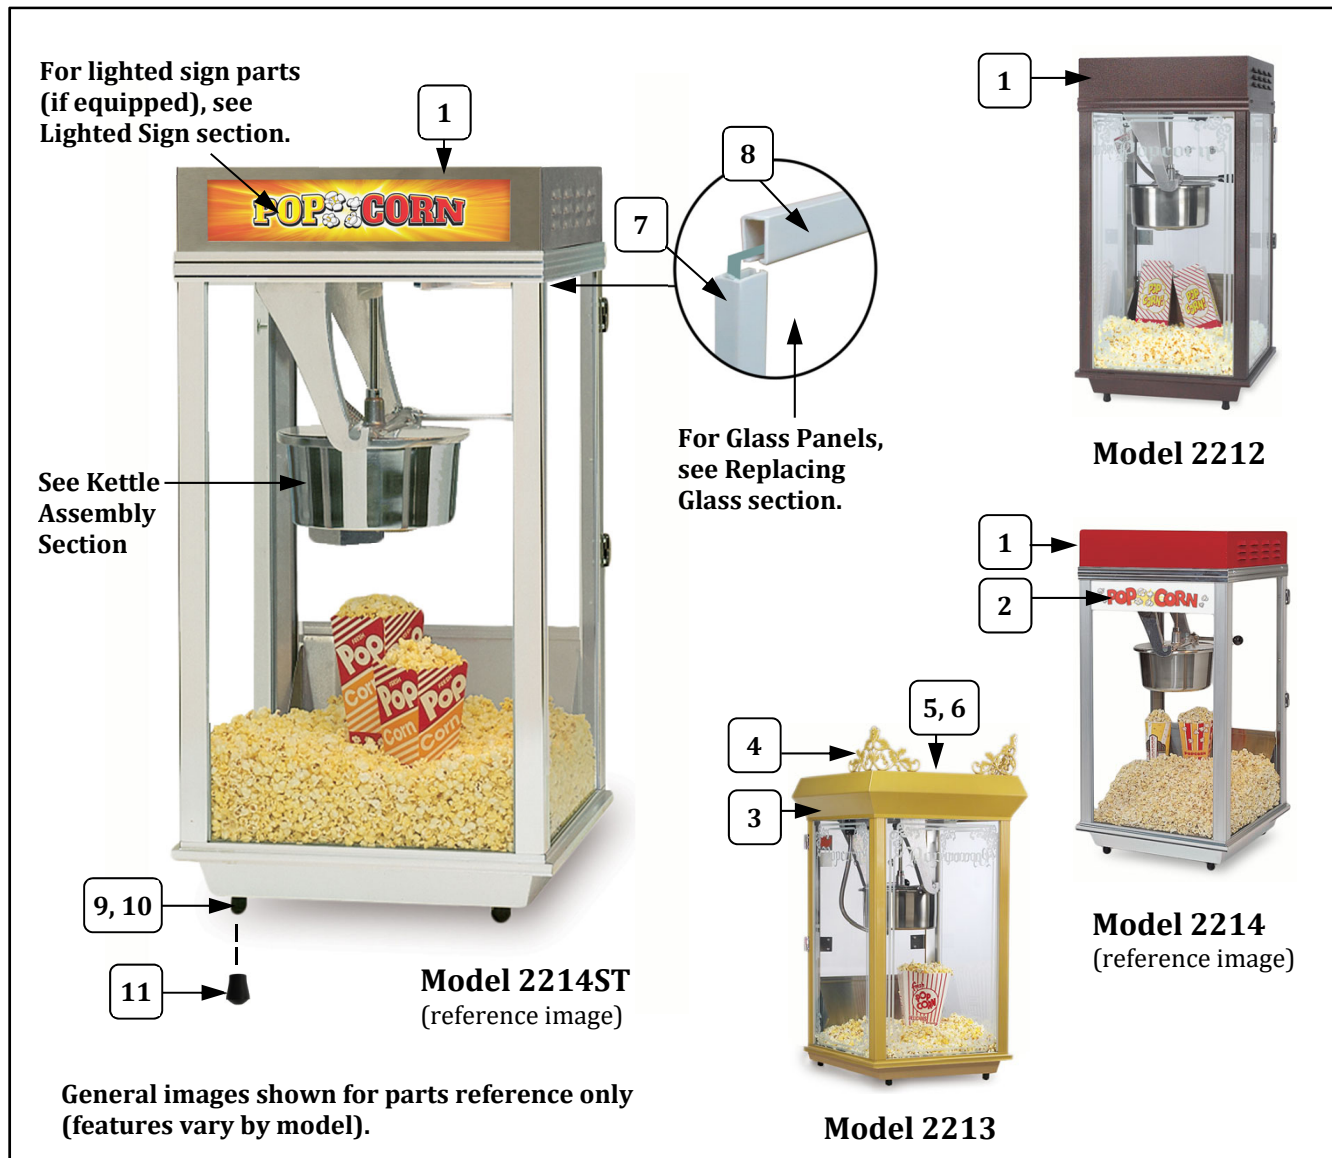


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

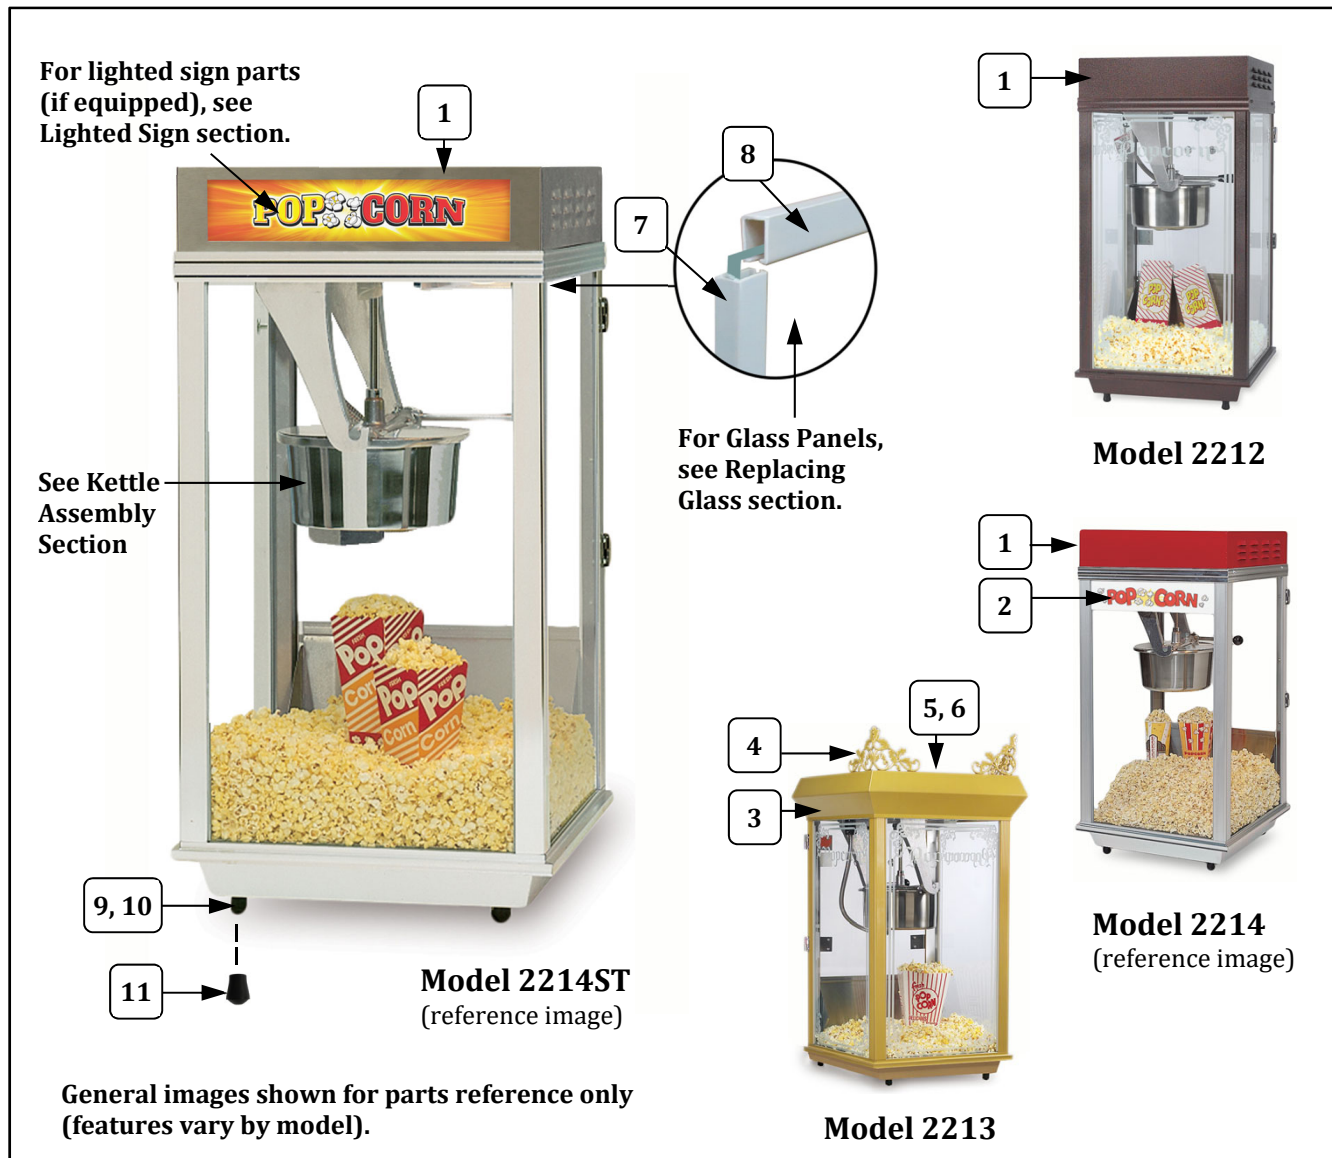


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Front View

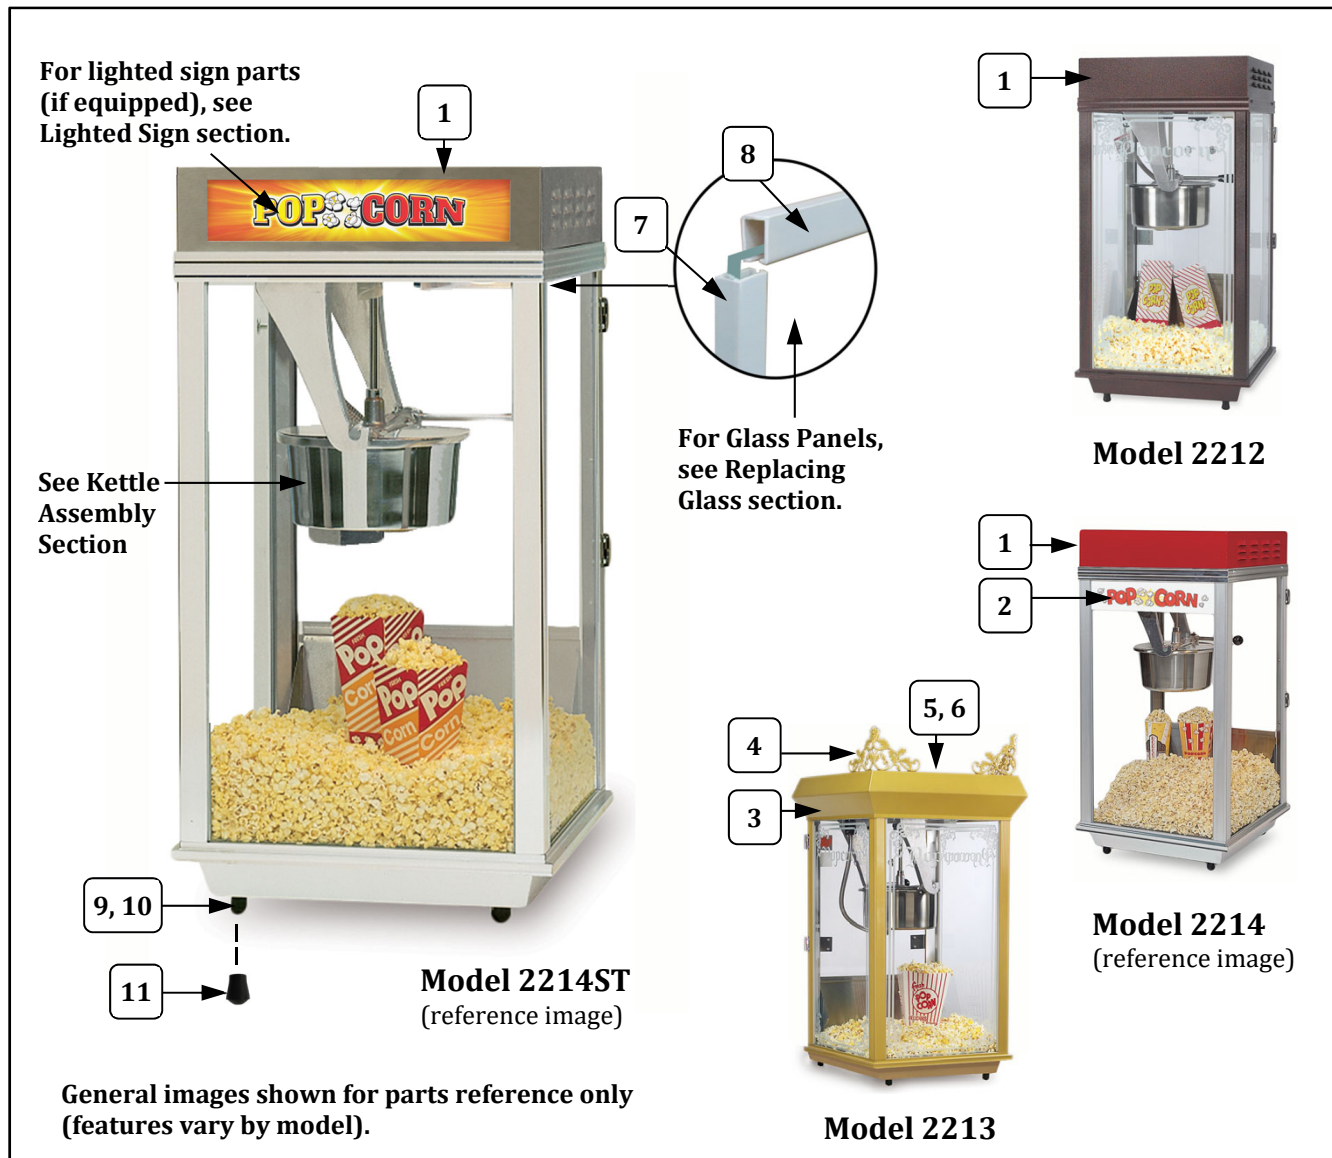

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	DOMES		77718	77638	14912	77638
2	DECAL FRONT GLASS			49158		49158
3	UPPER FRAME ASSY, GOLD	77572				
4	CORNER ORNAMENT (left side of ornament)	47402L				
	CORNER ORNAMENT (right side of ornament)	47402R				
5	INSPECTION COVER	77752				
6	3IN FAN GRATE	74746				
7	GLASS CHAN 29 5/8	47698	47698	47698	47698	47698
8	GLASS CHAN 16 11/16	47693	47693	47693	47693	47693
9	GLIDE	47328	47328	47328	47328	47328
10	SCREW, 10-24 X 3/4 HXHD	41314	41314	41314	41314	41314
11	CRUTCH TIP BLACK 70 DURO	49123	49123	49123	49123	49123

Cabinet Exterior – Operator Side View

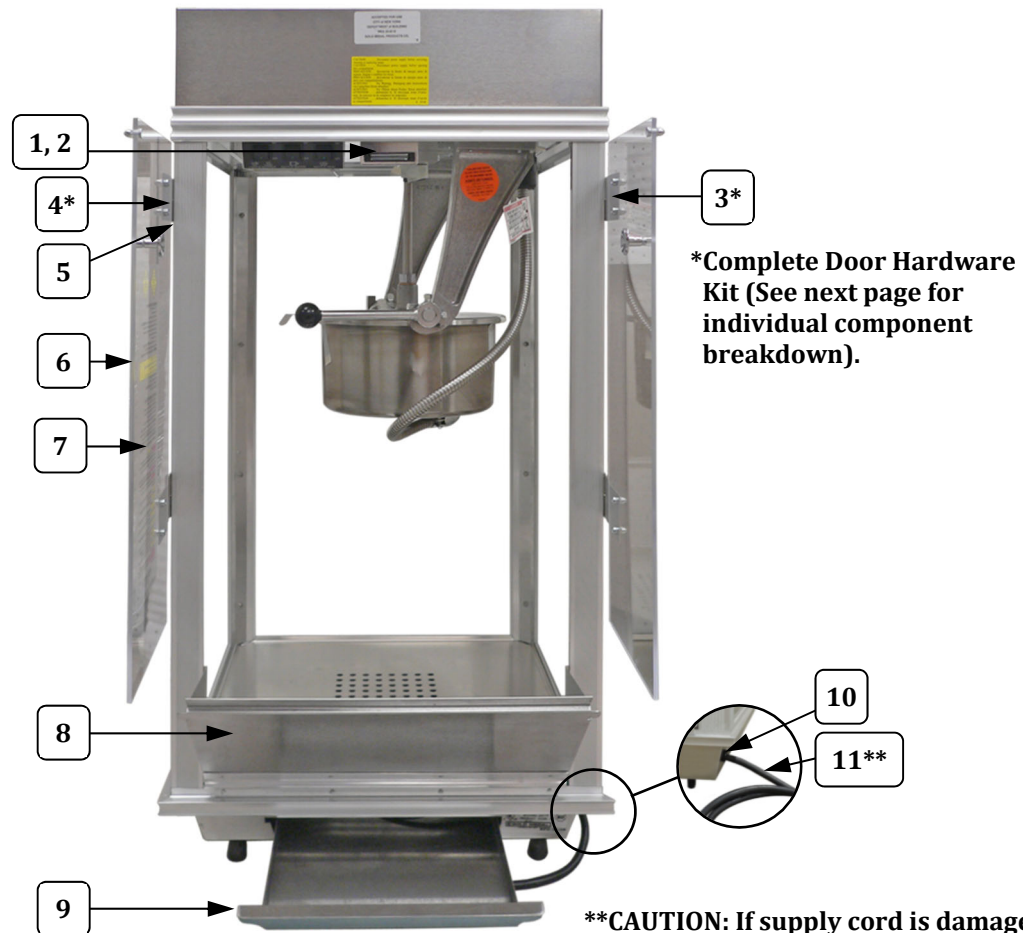


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

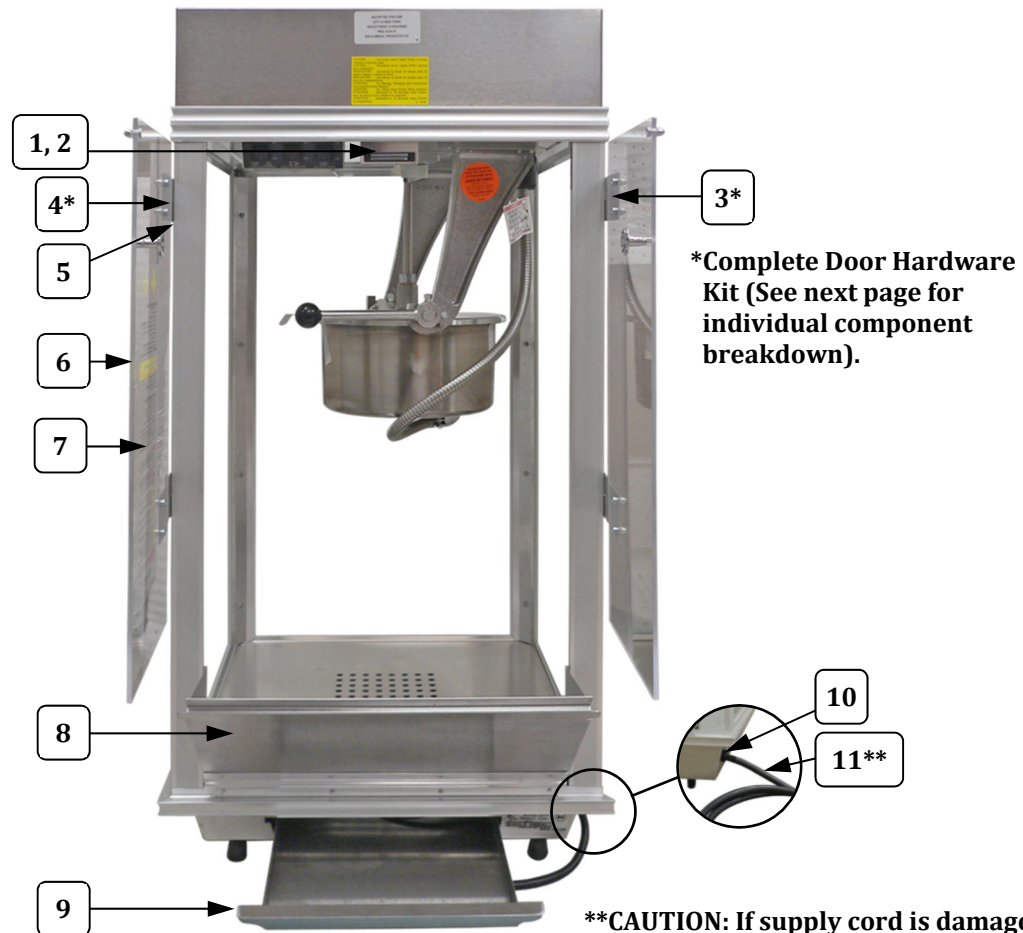

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

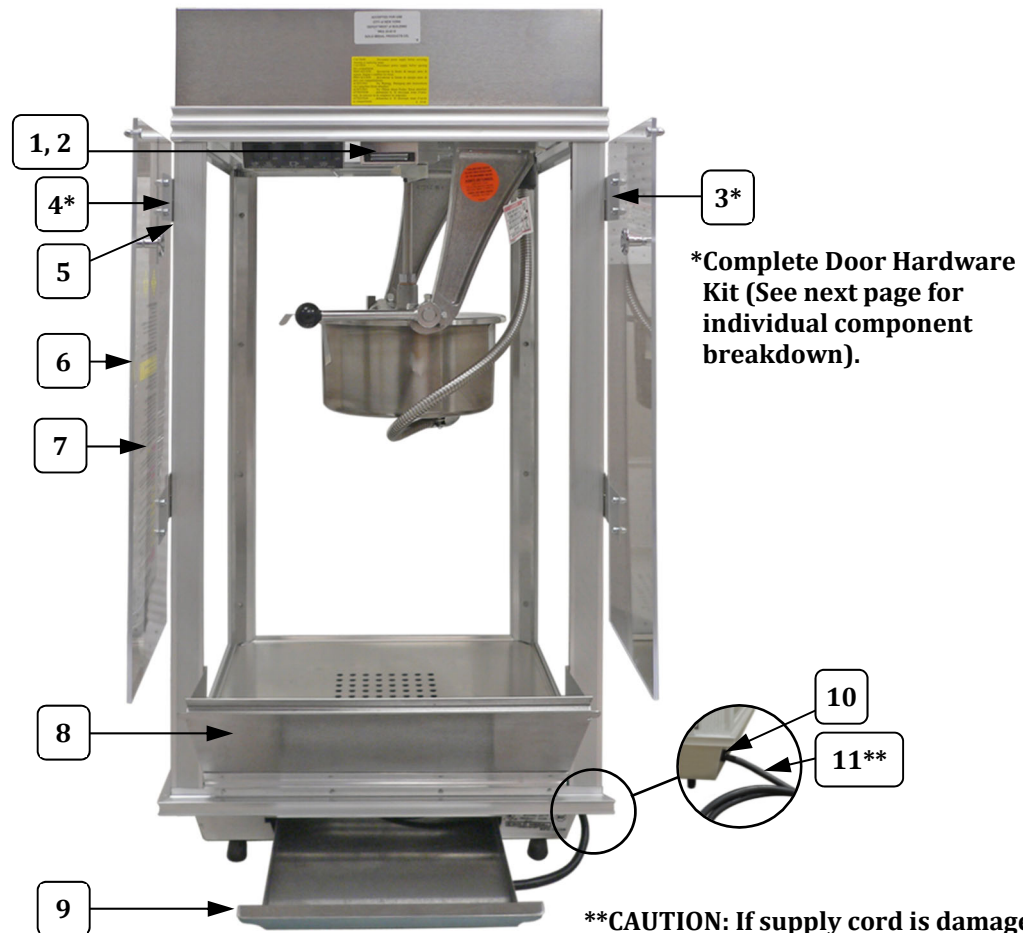


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

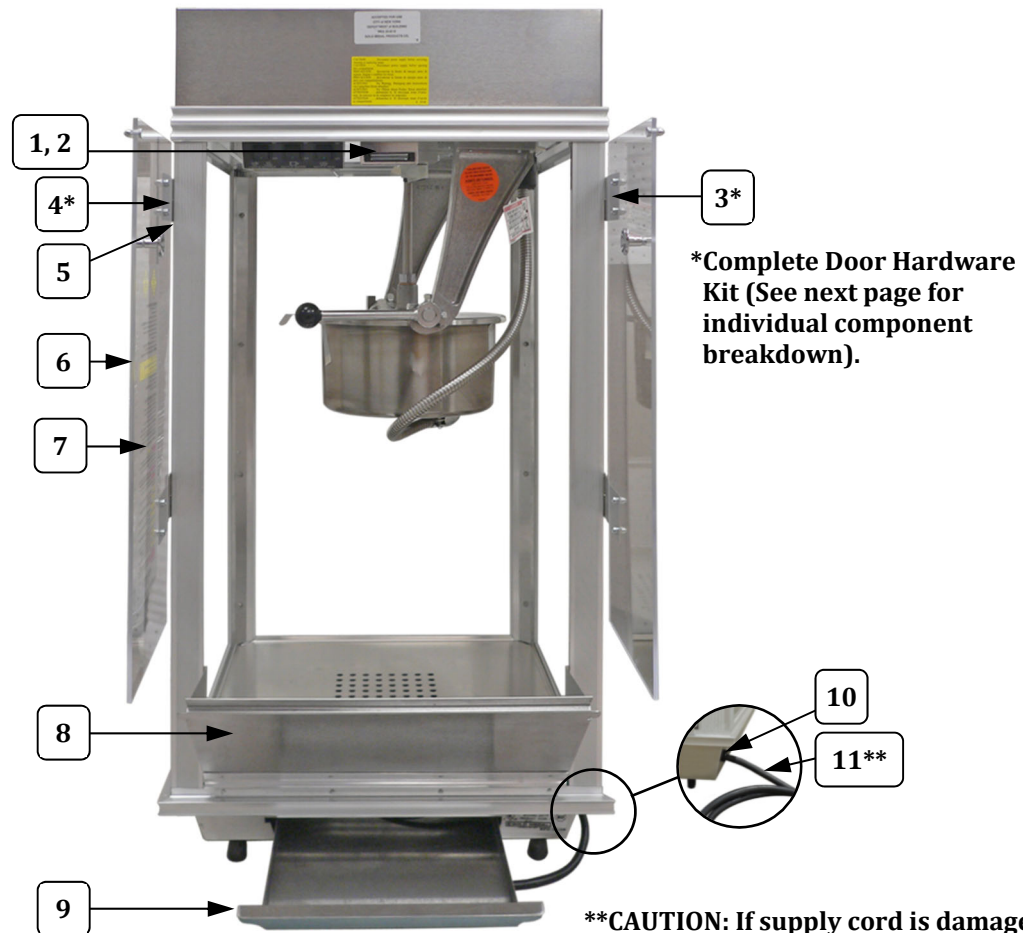


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

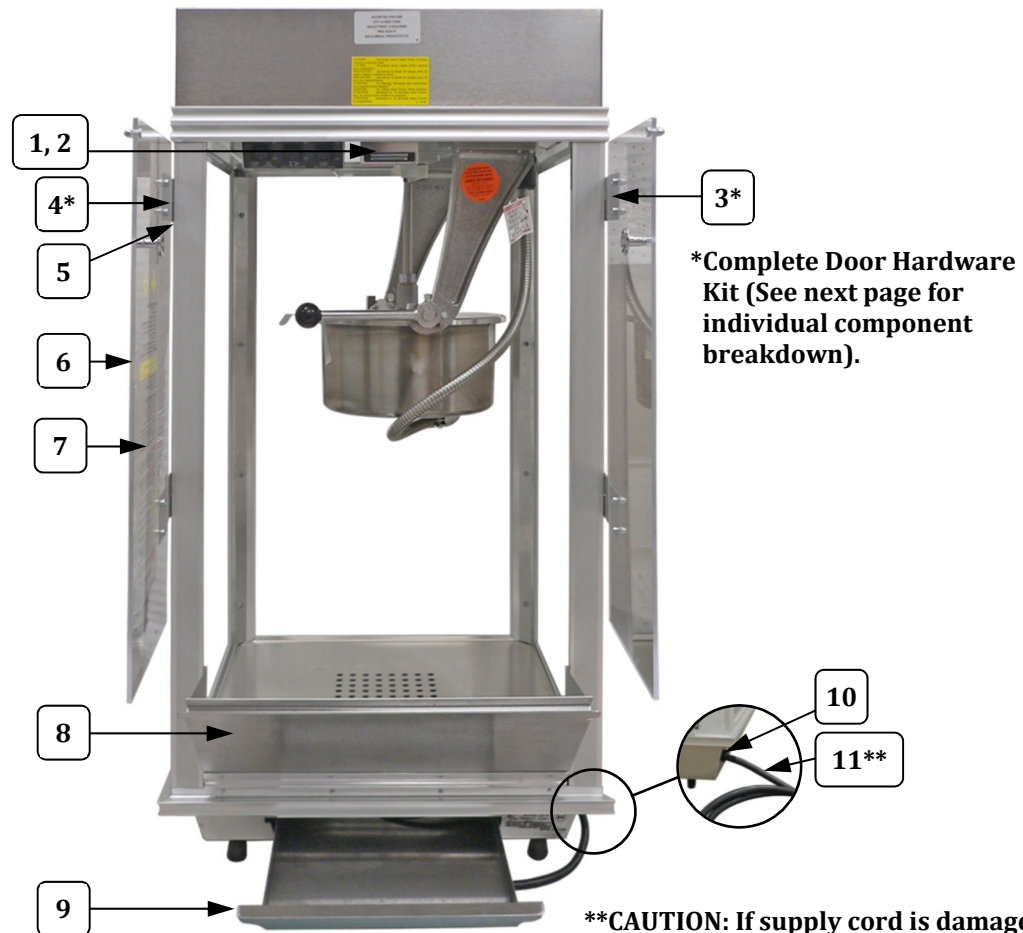


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

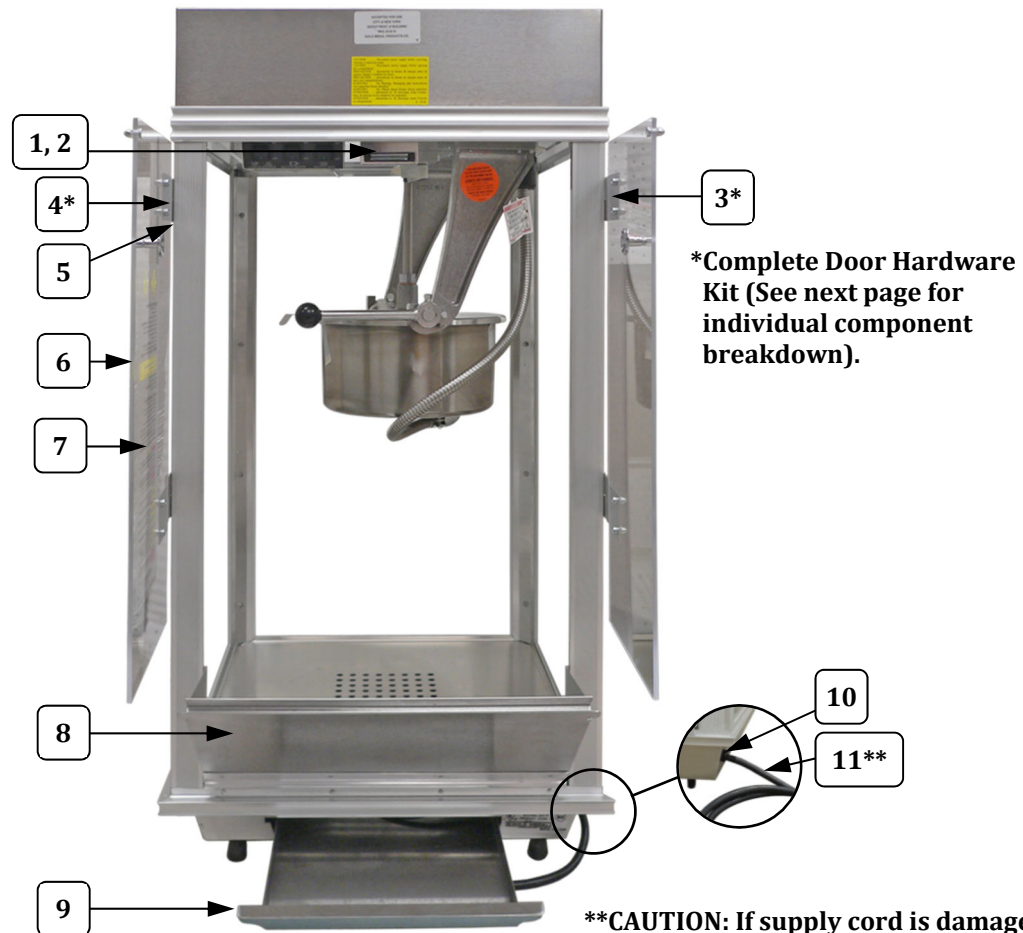


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

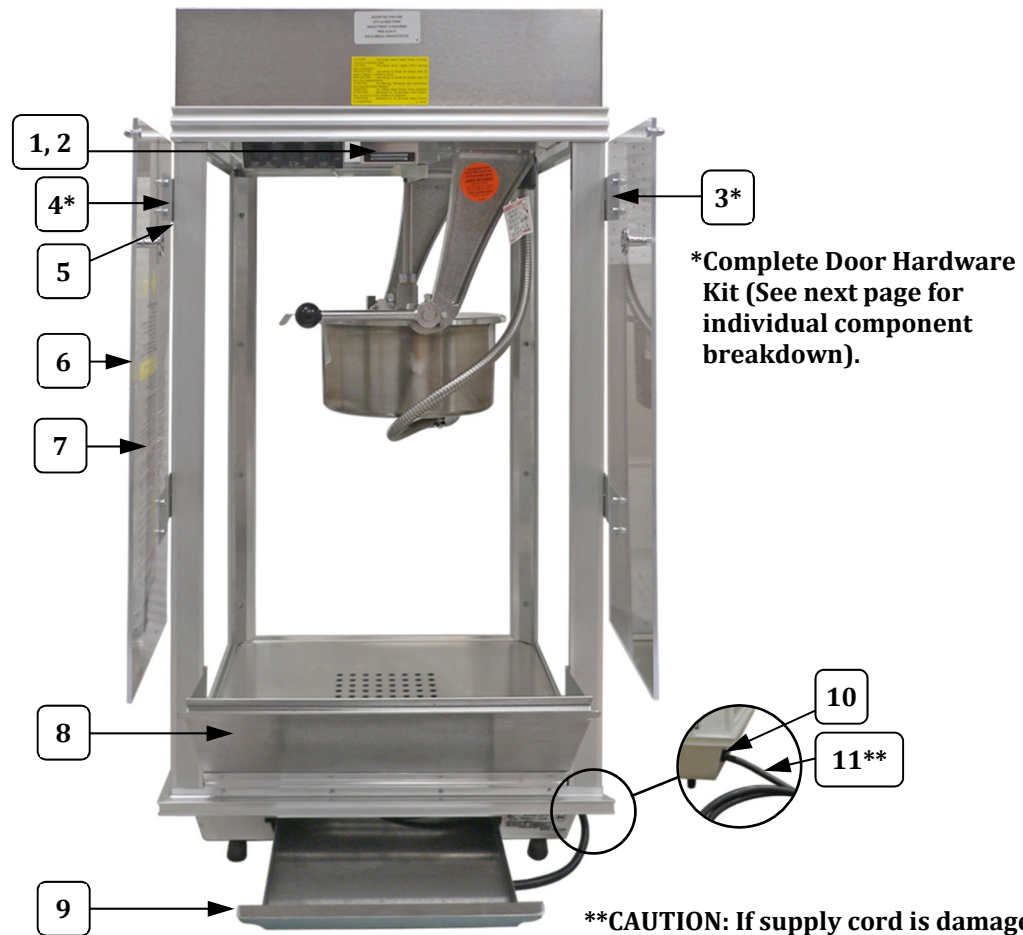


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

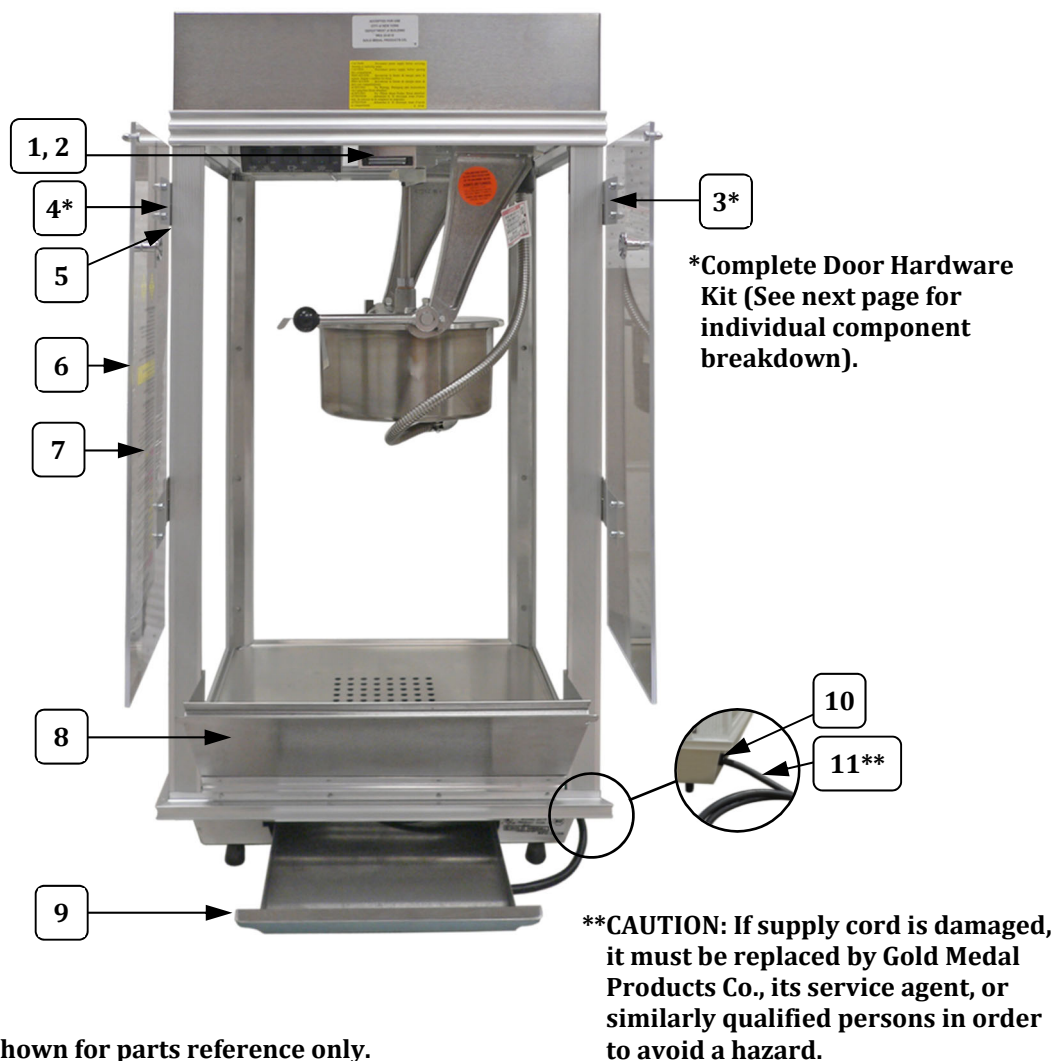

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

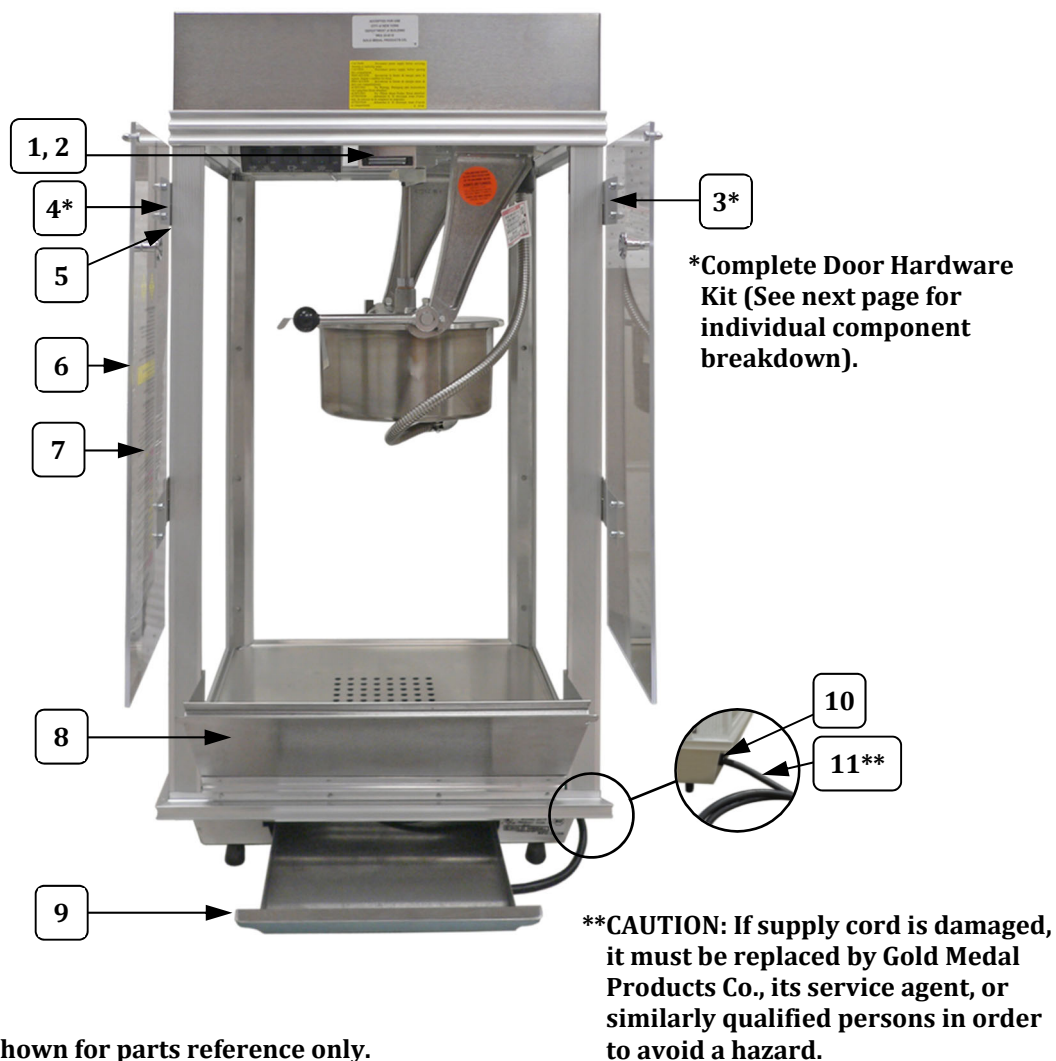

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

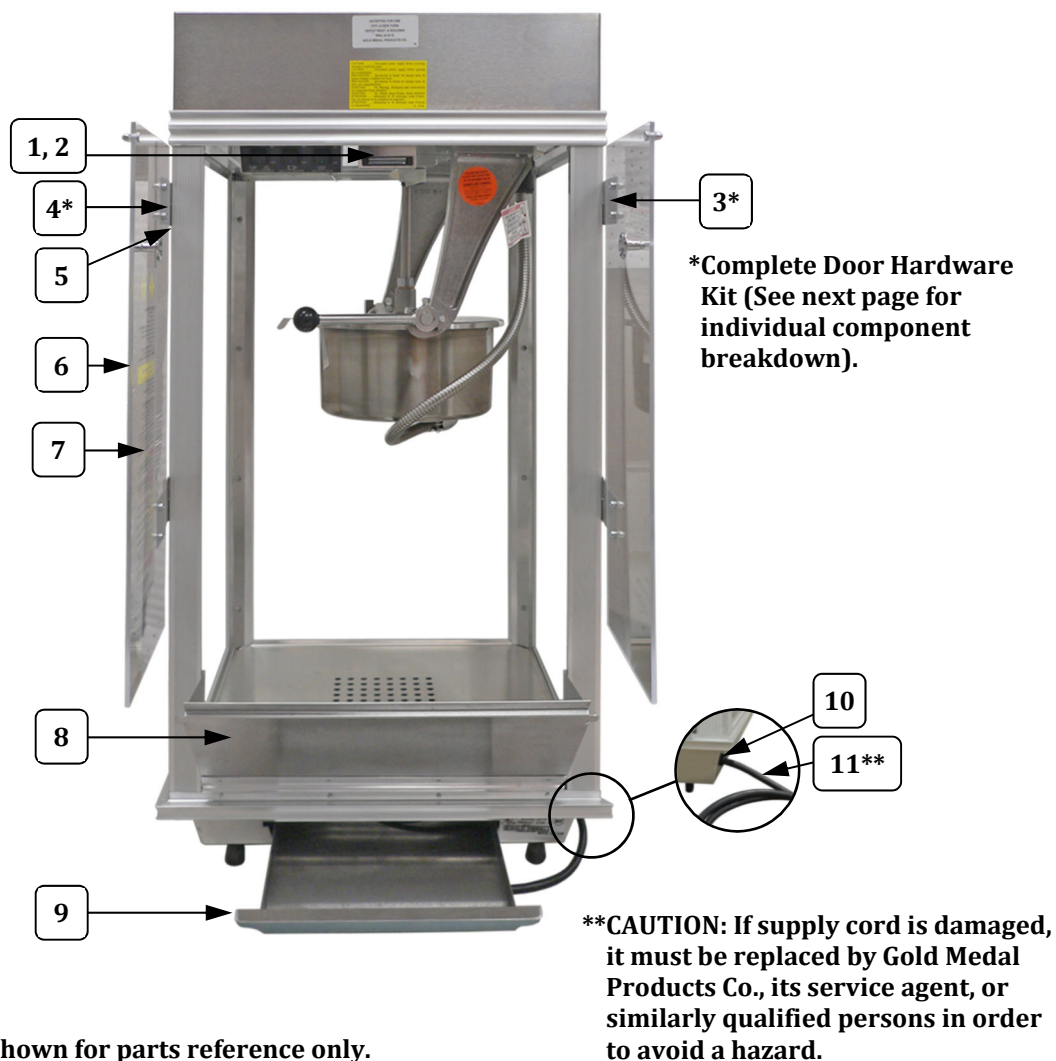

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

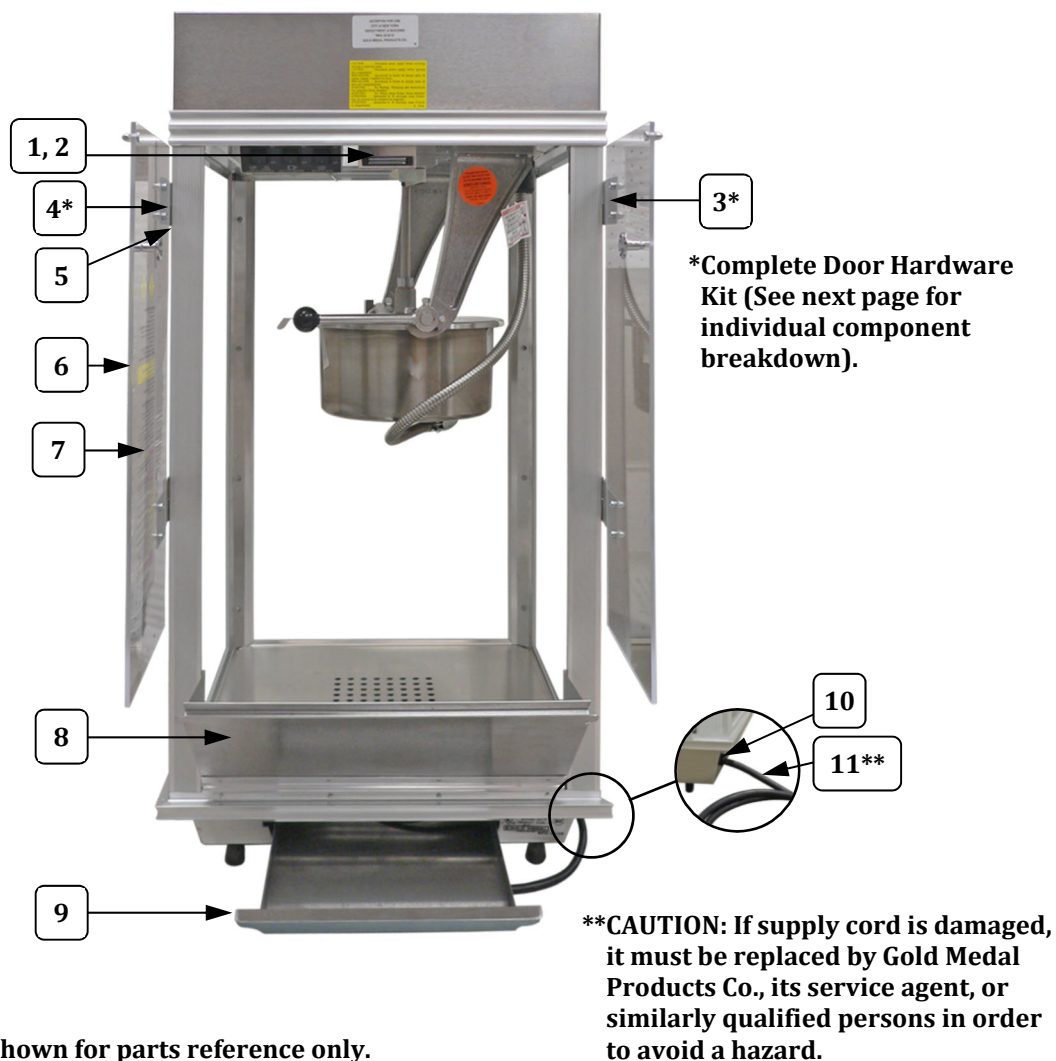

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

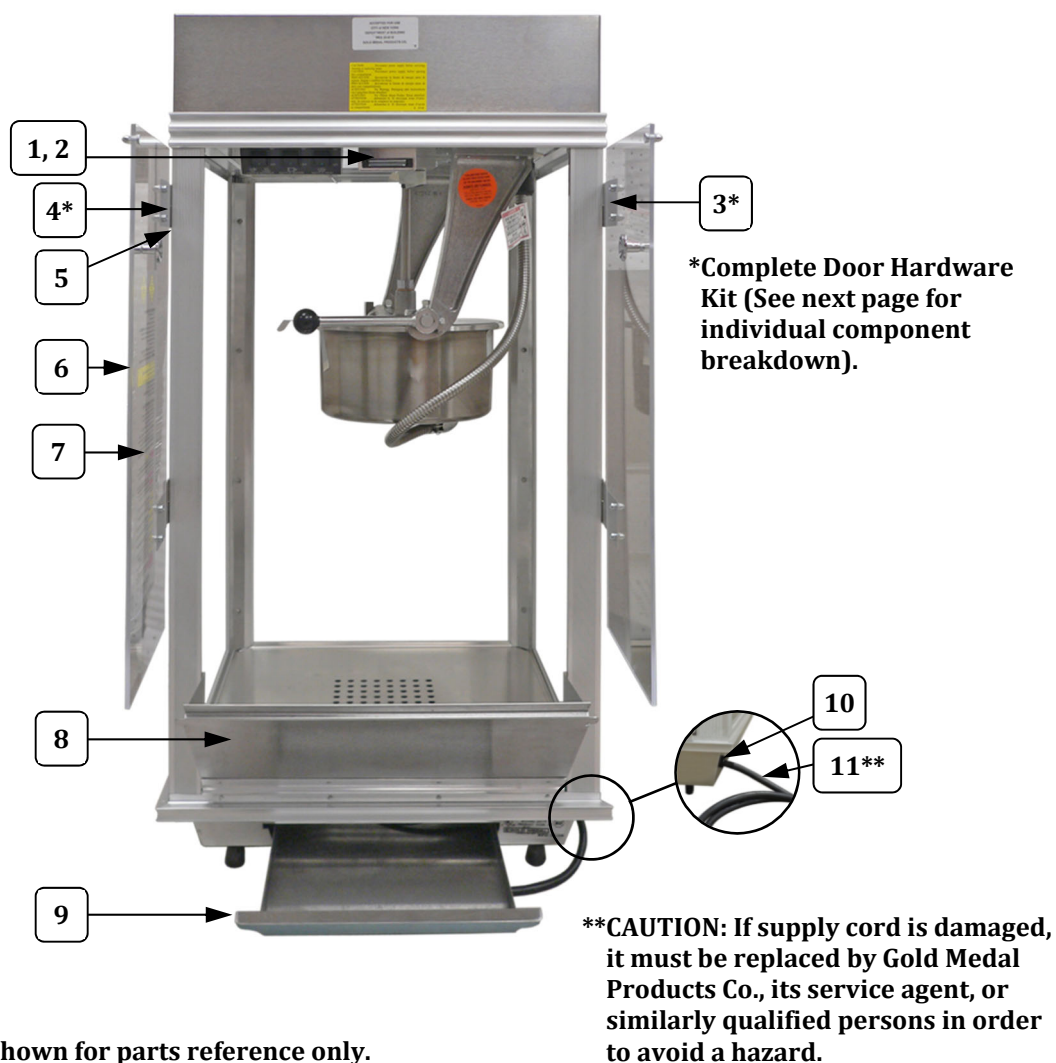

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

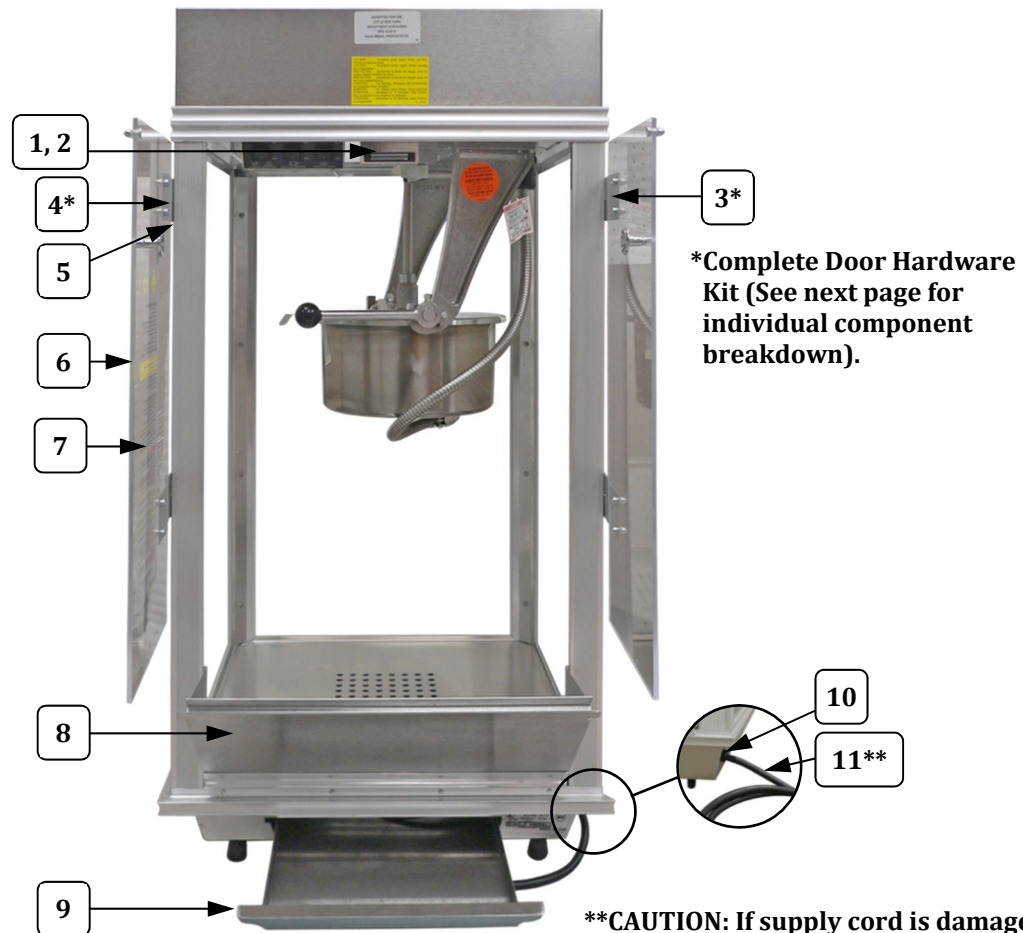


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

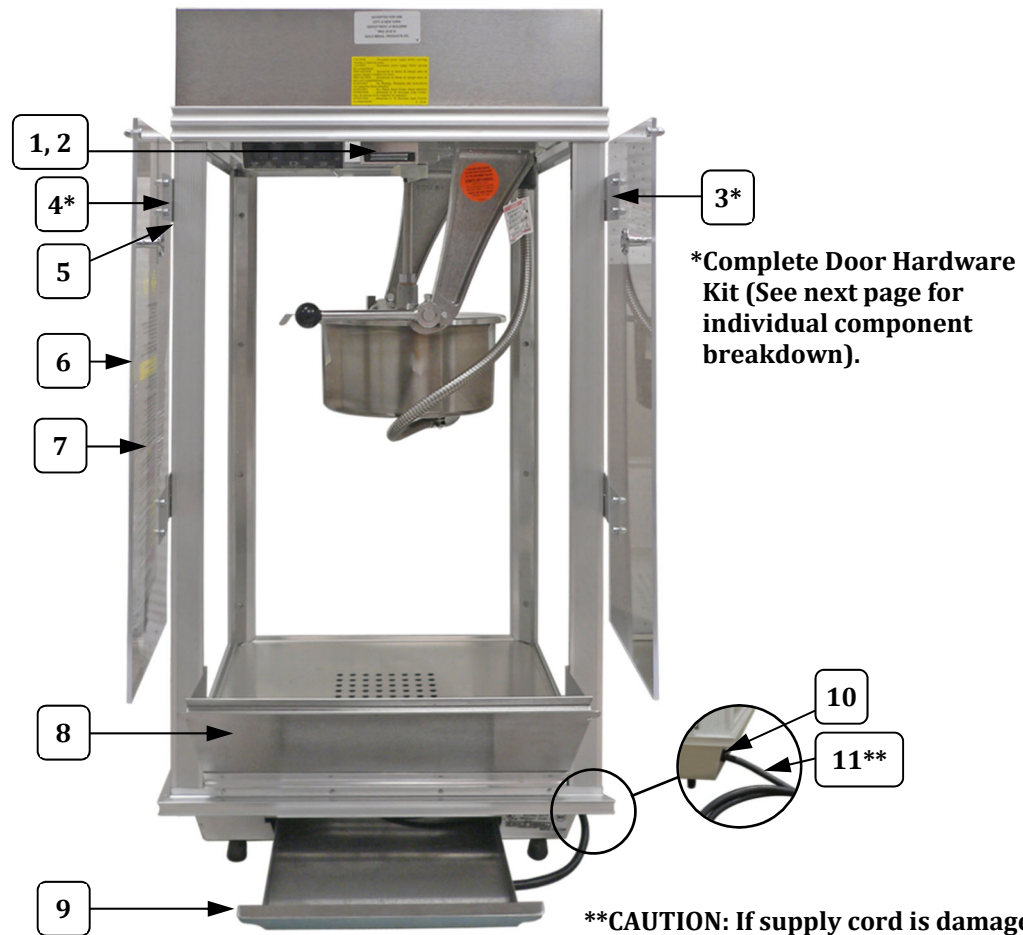


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

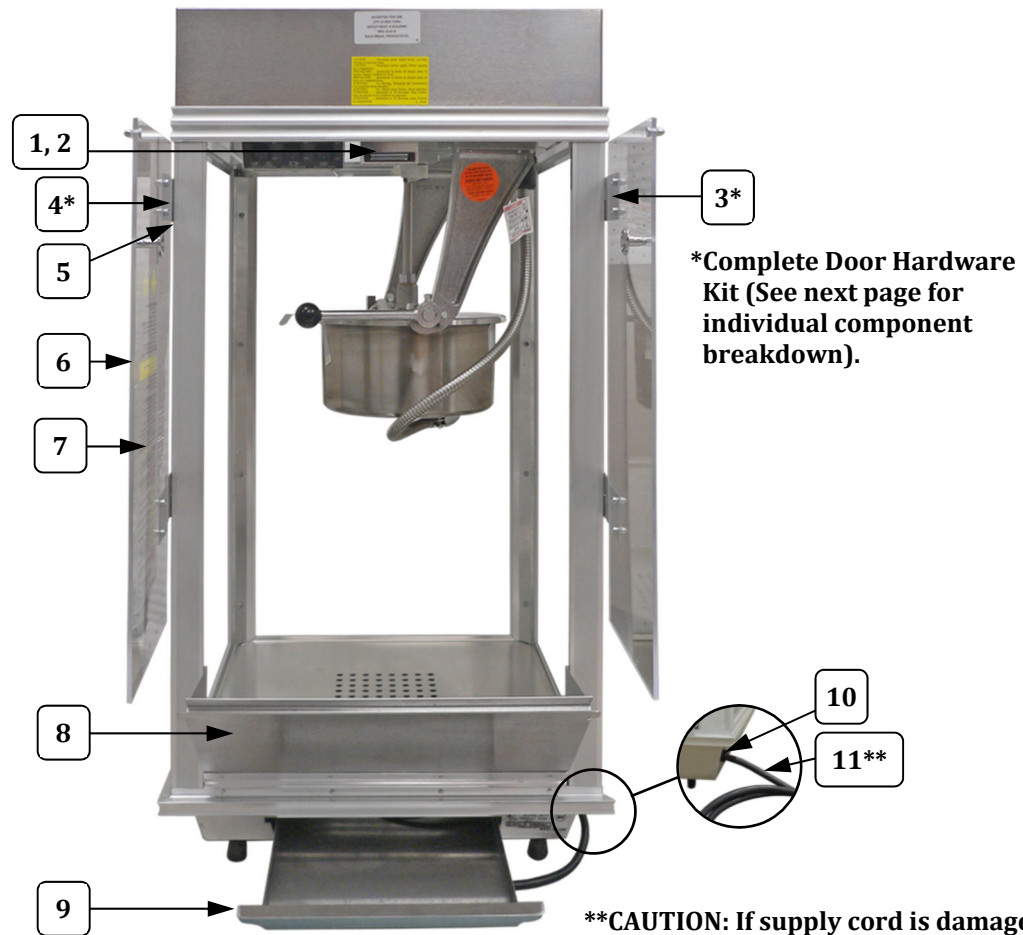

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

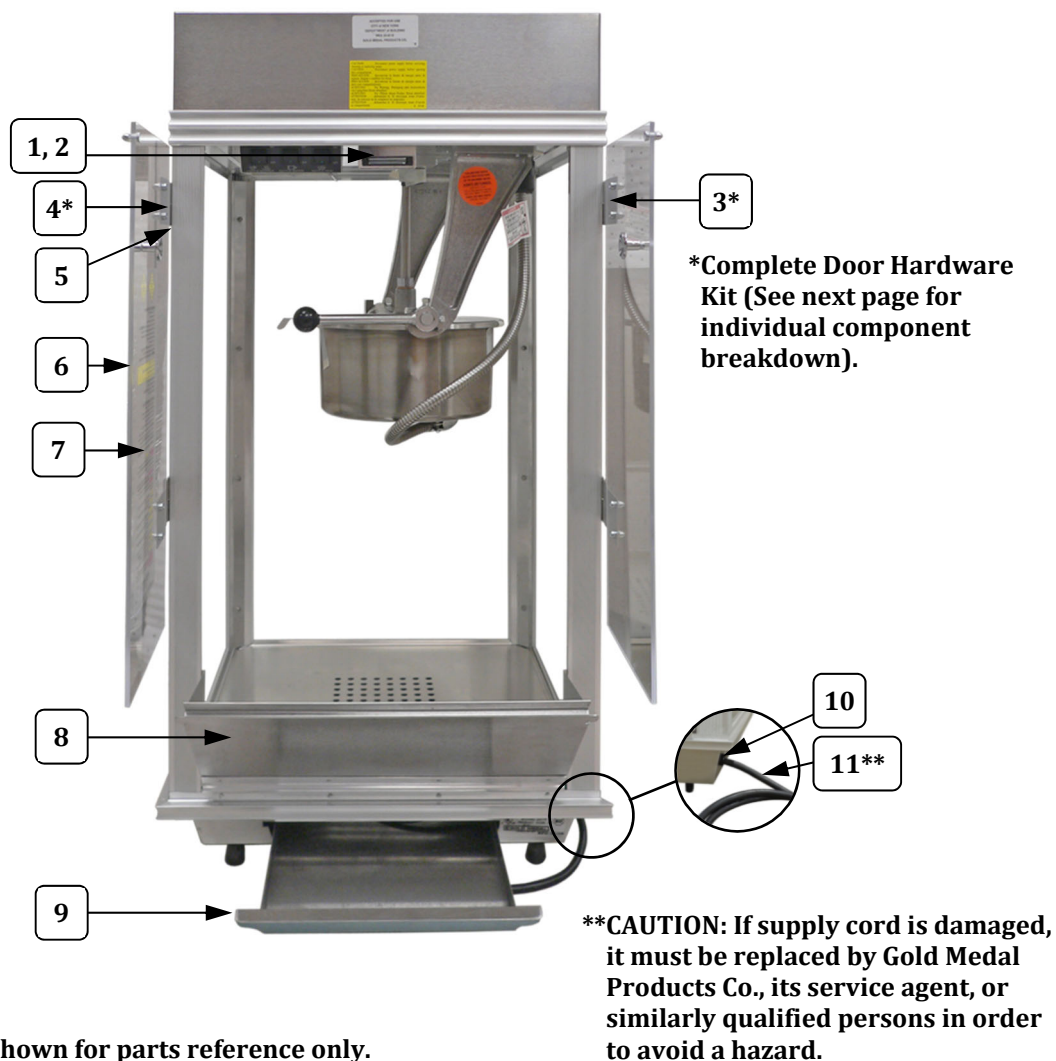

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

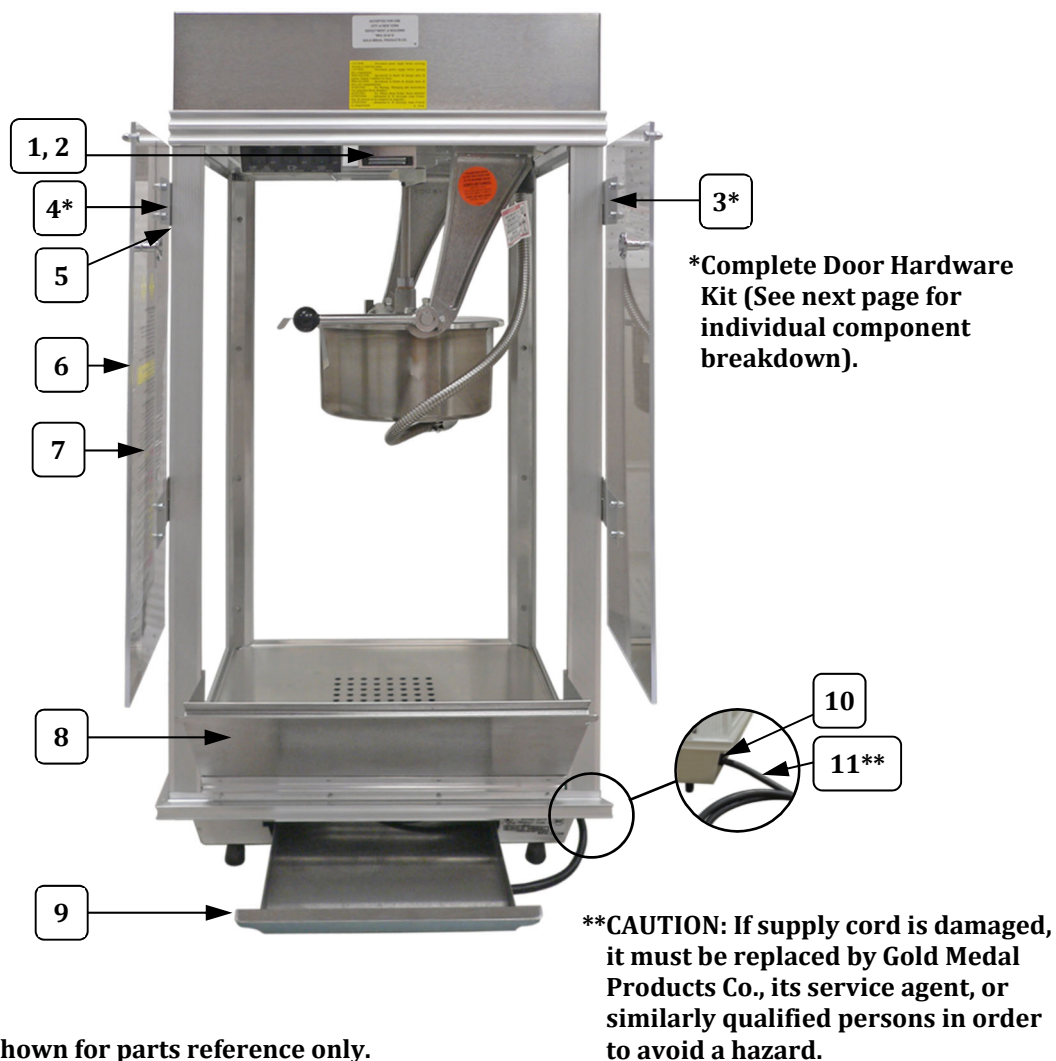

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

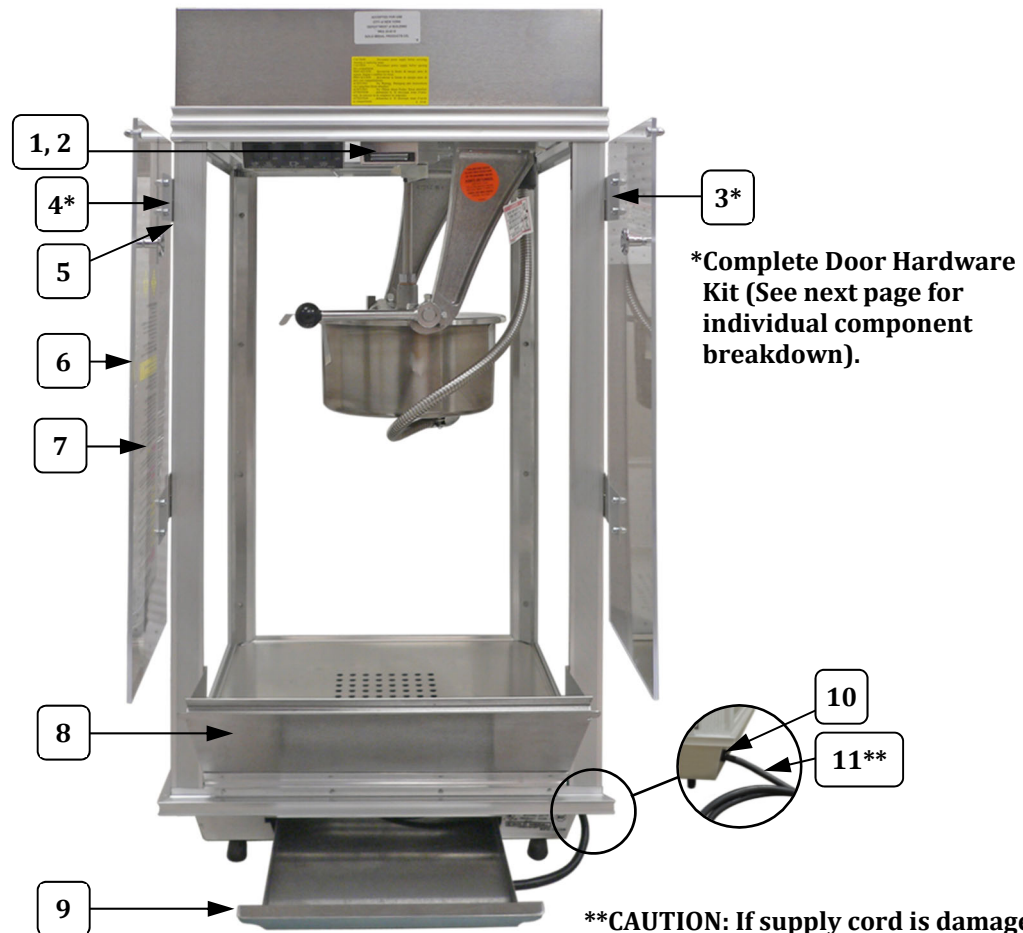


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

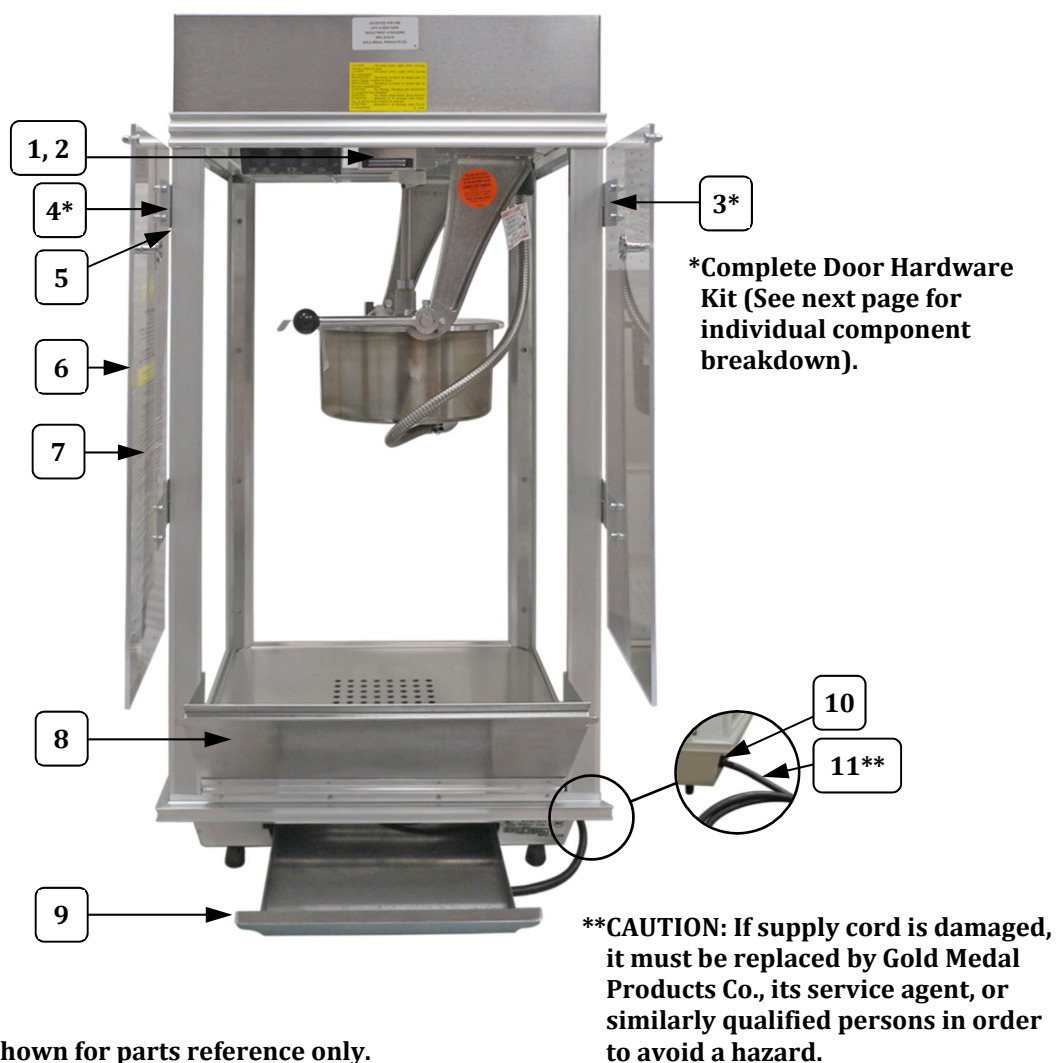

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

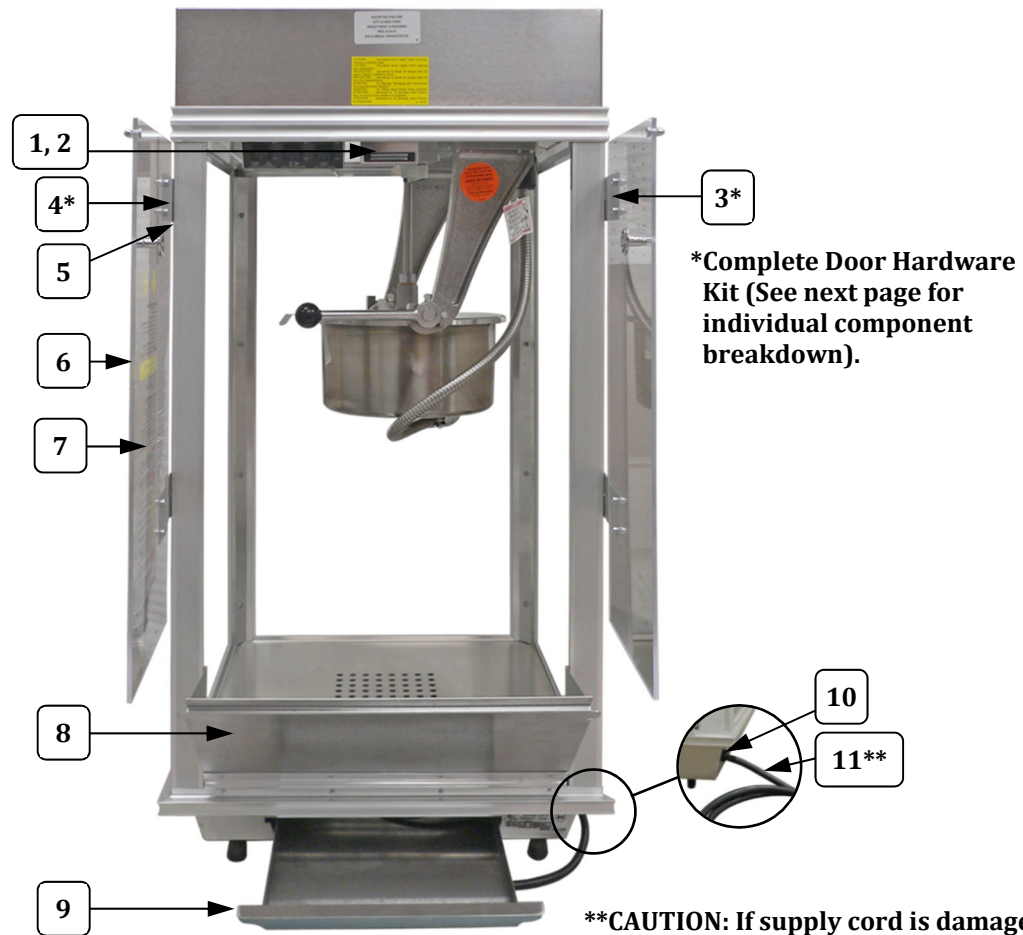

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

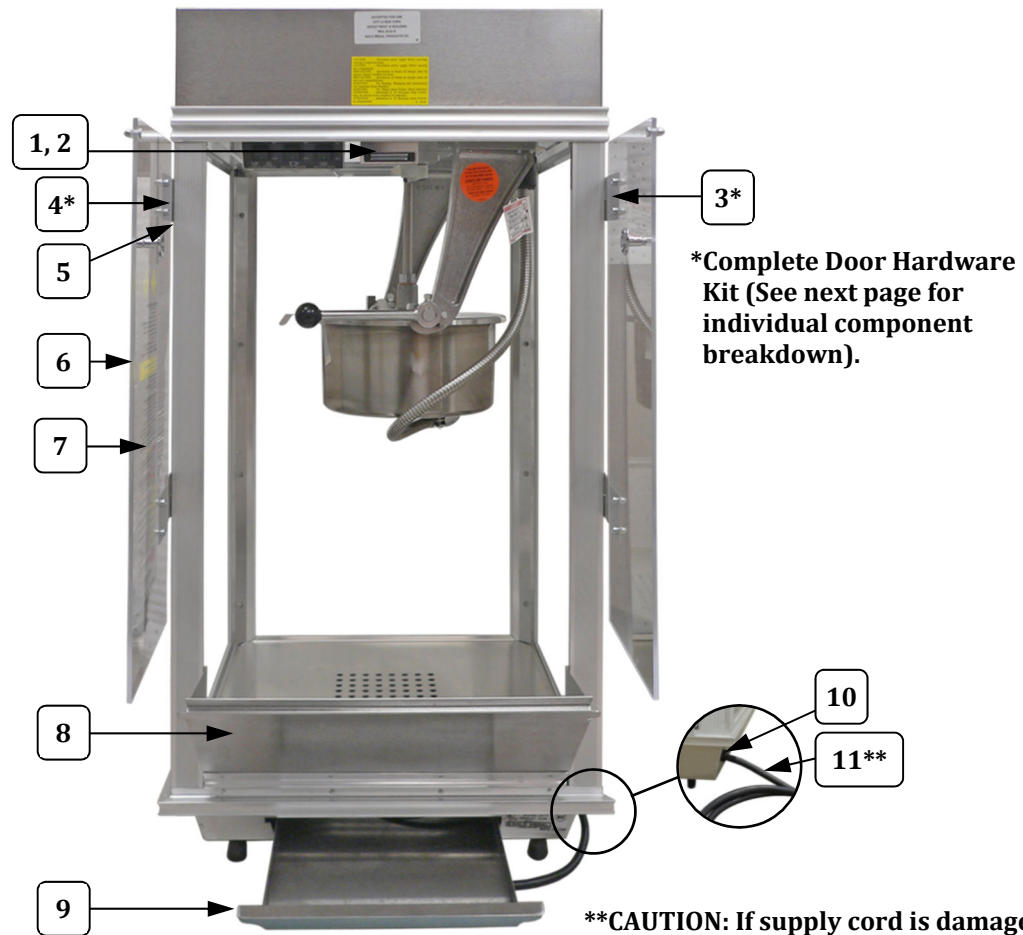

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

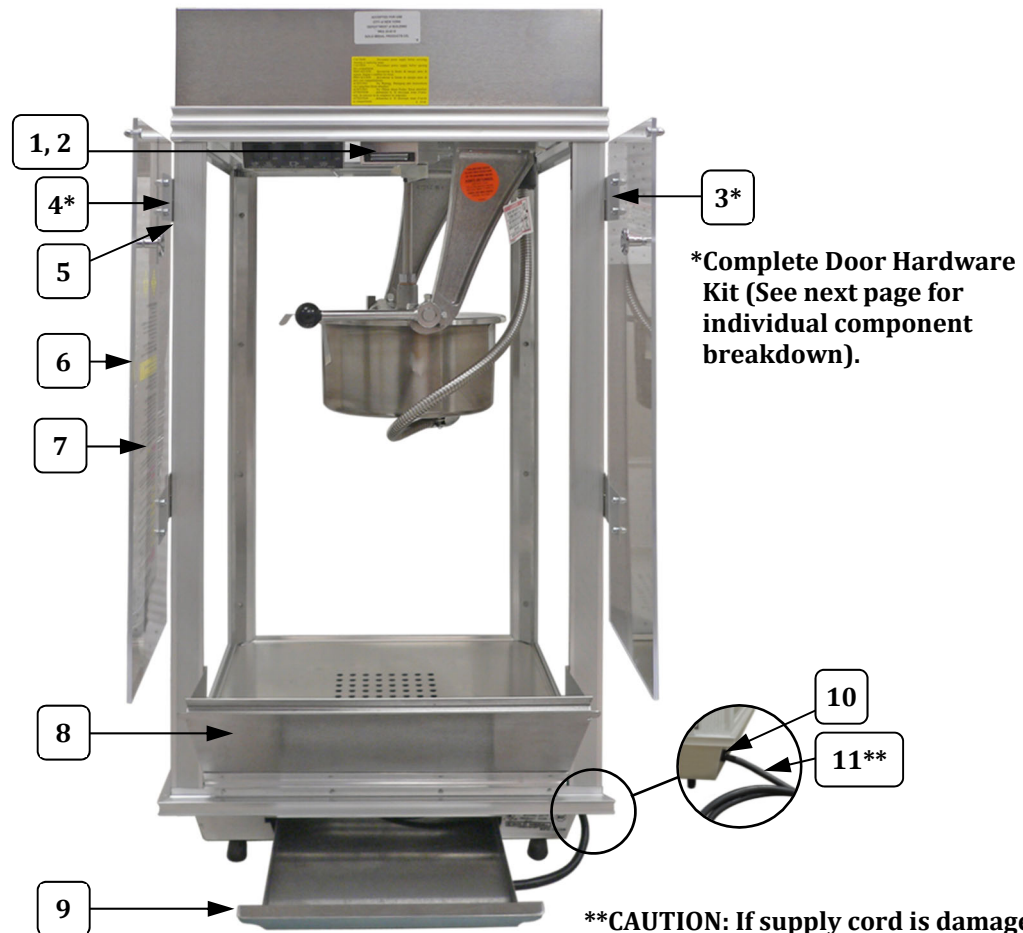


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

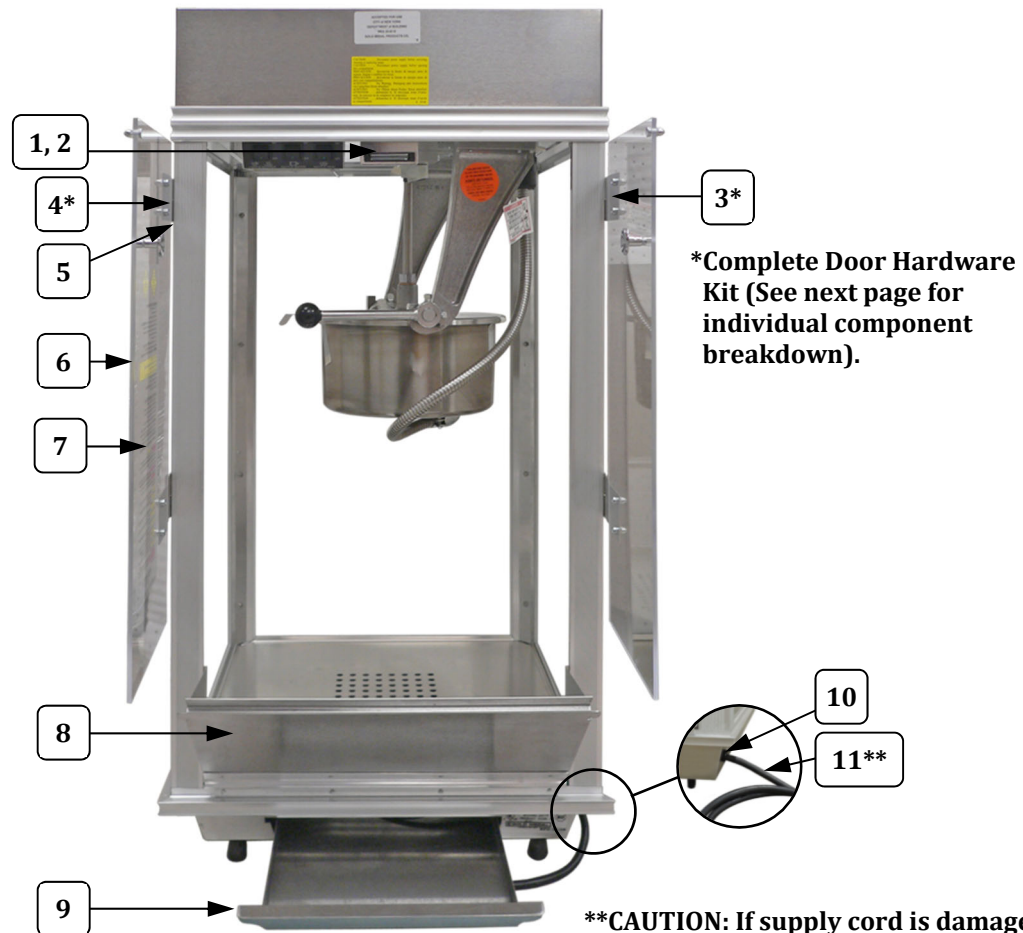


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

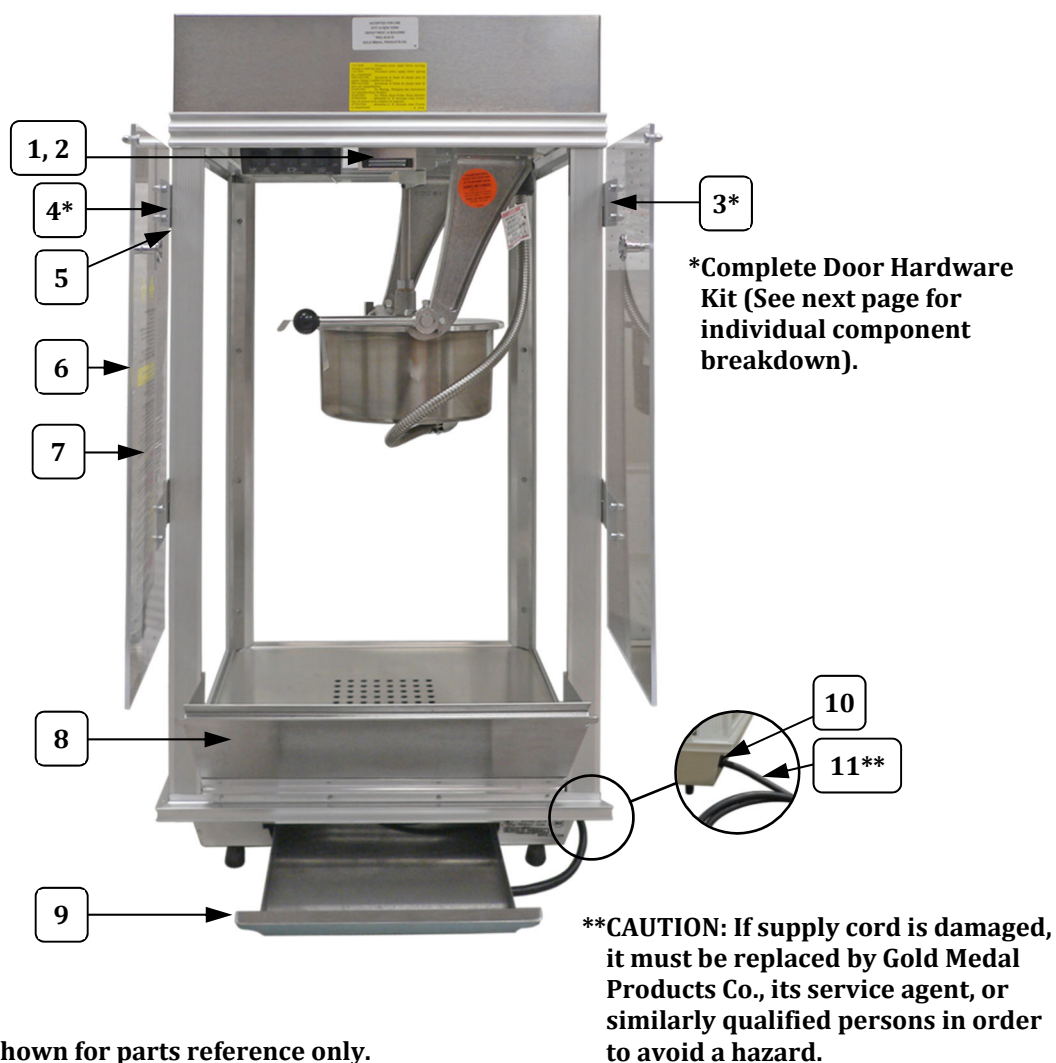

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

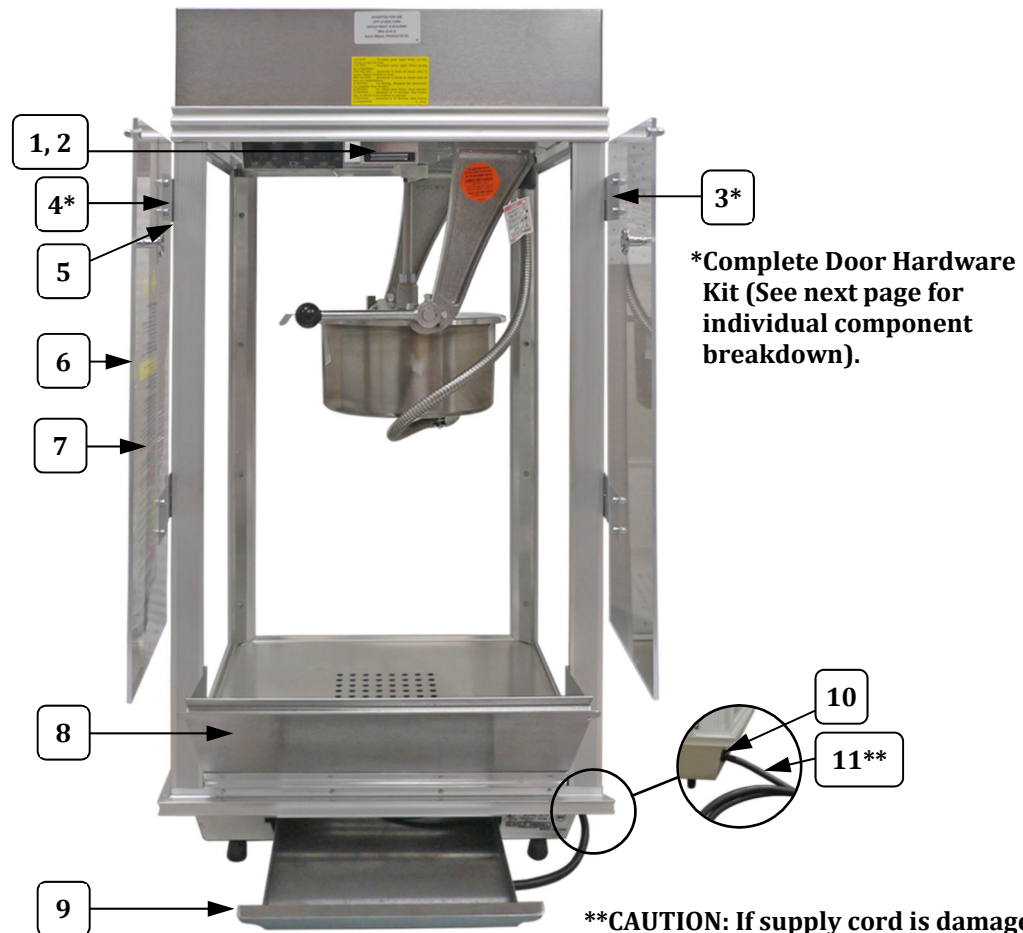


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

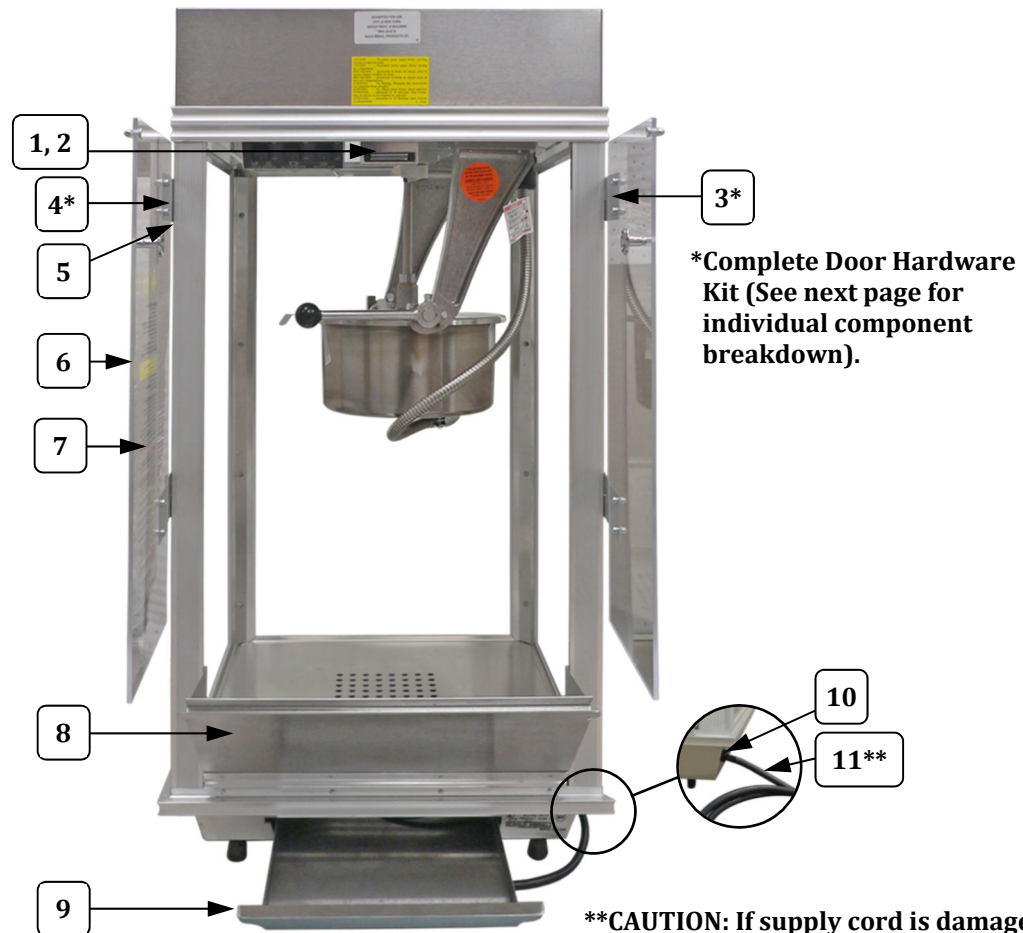


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

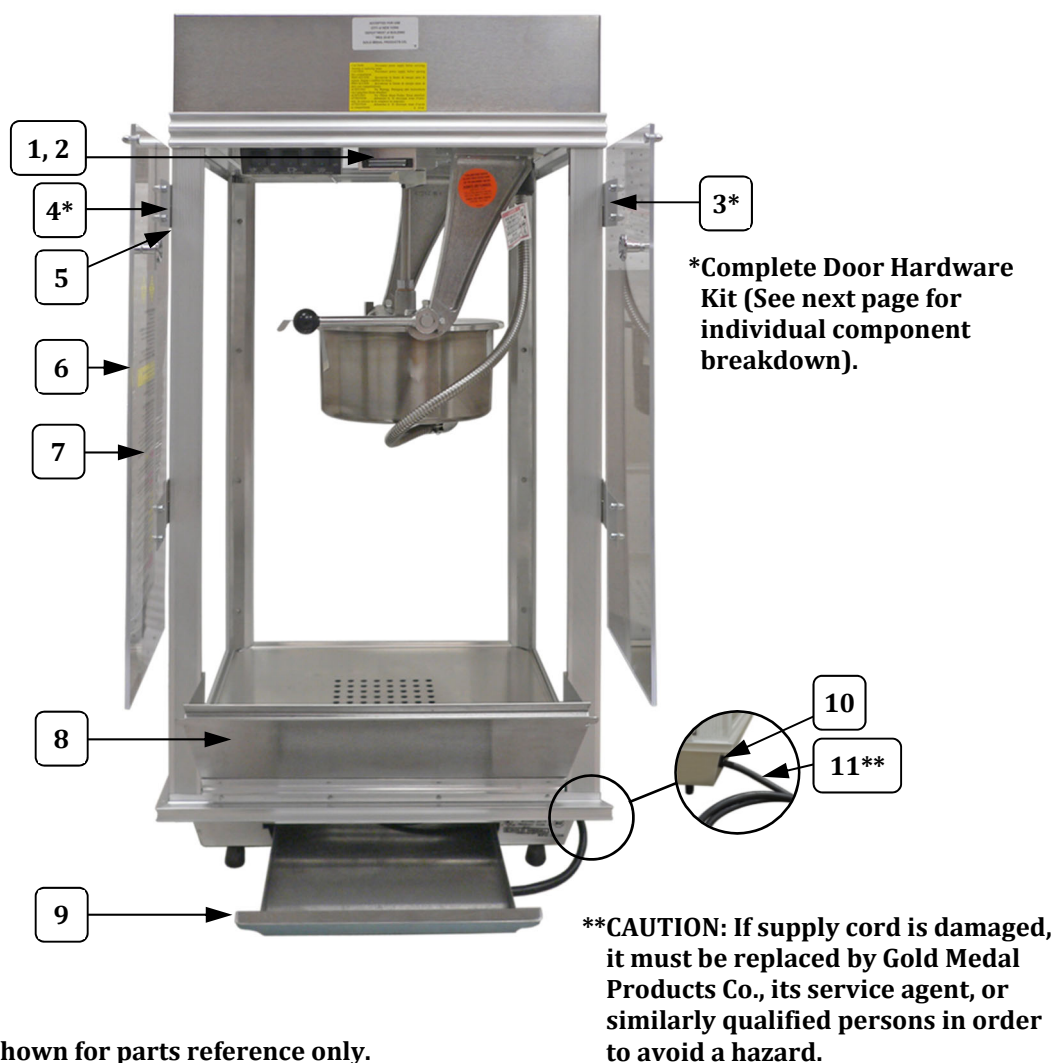

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

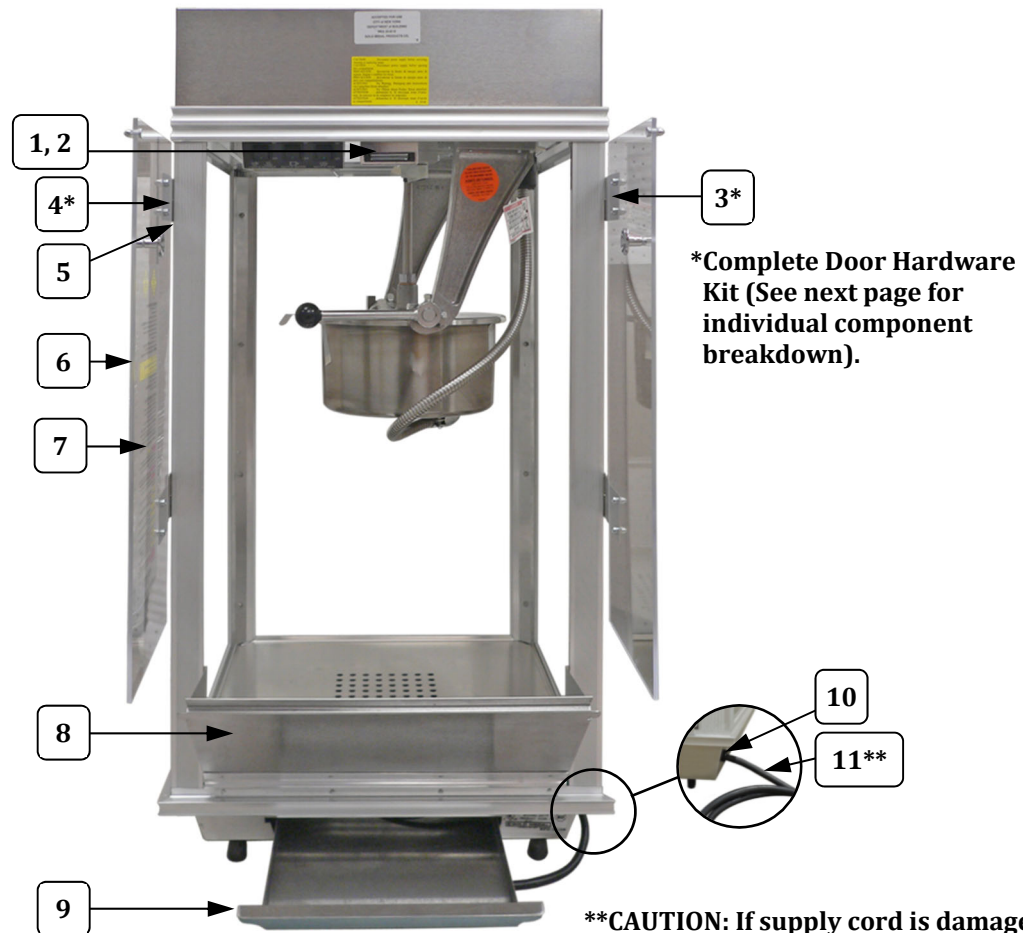

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

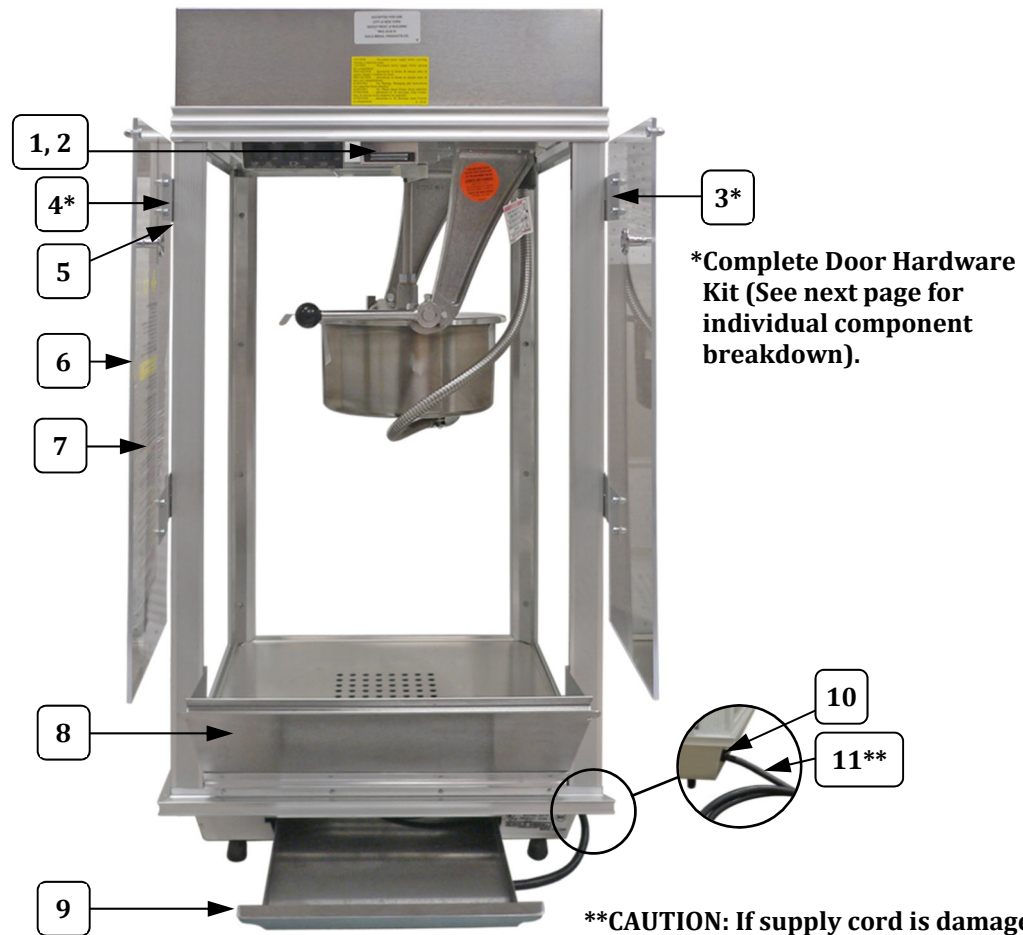

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

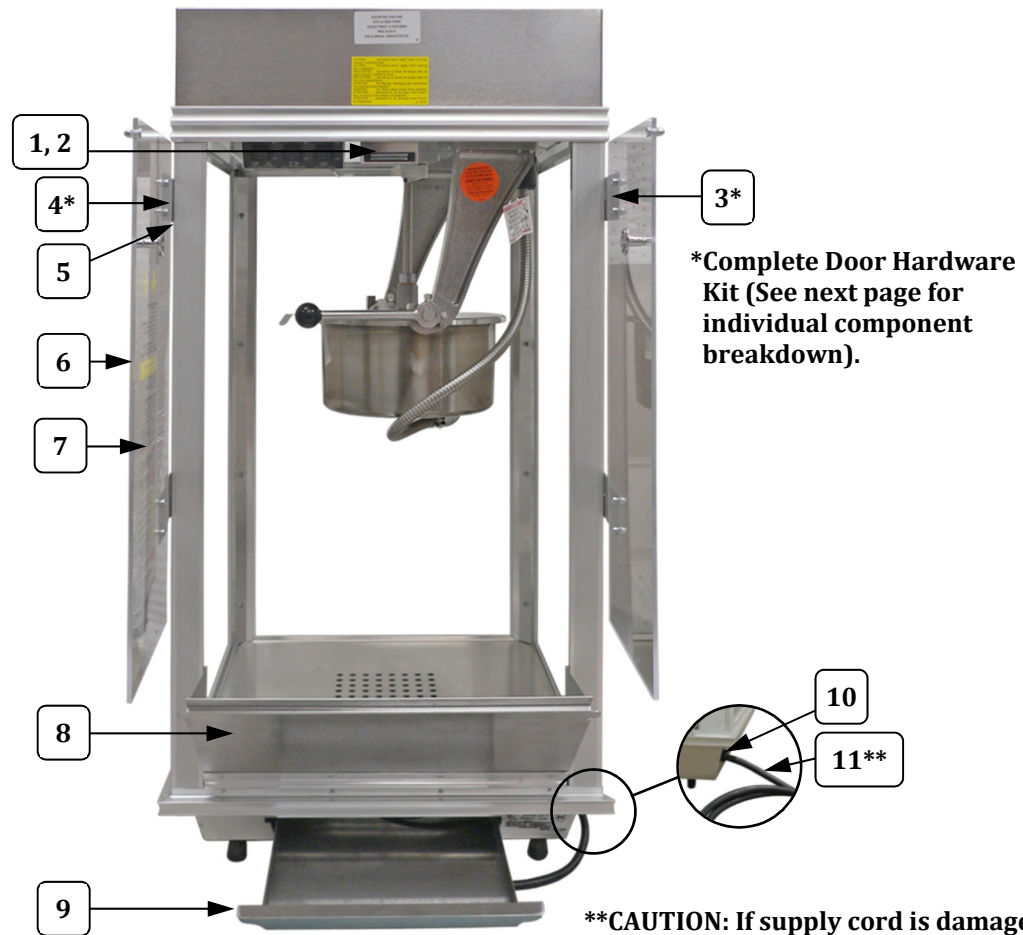


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

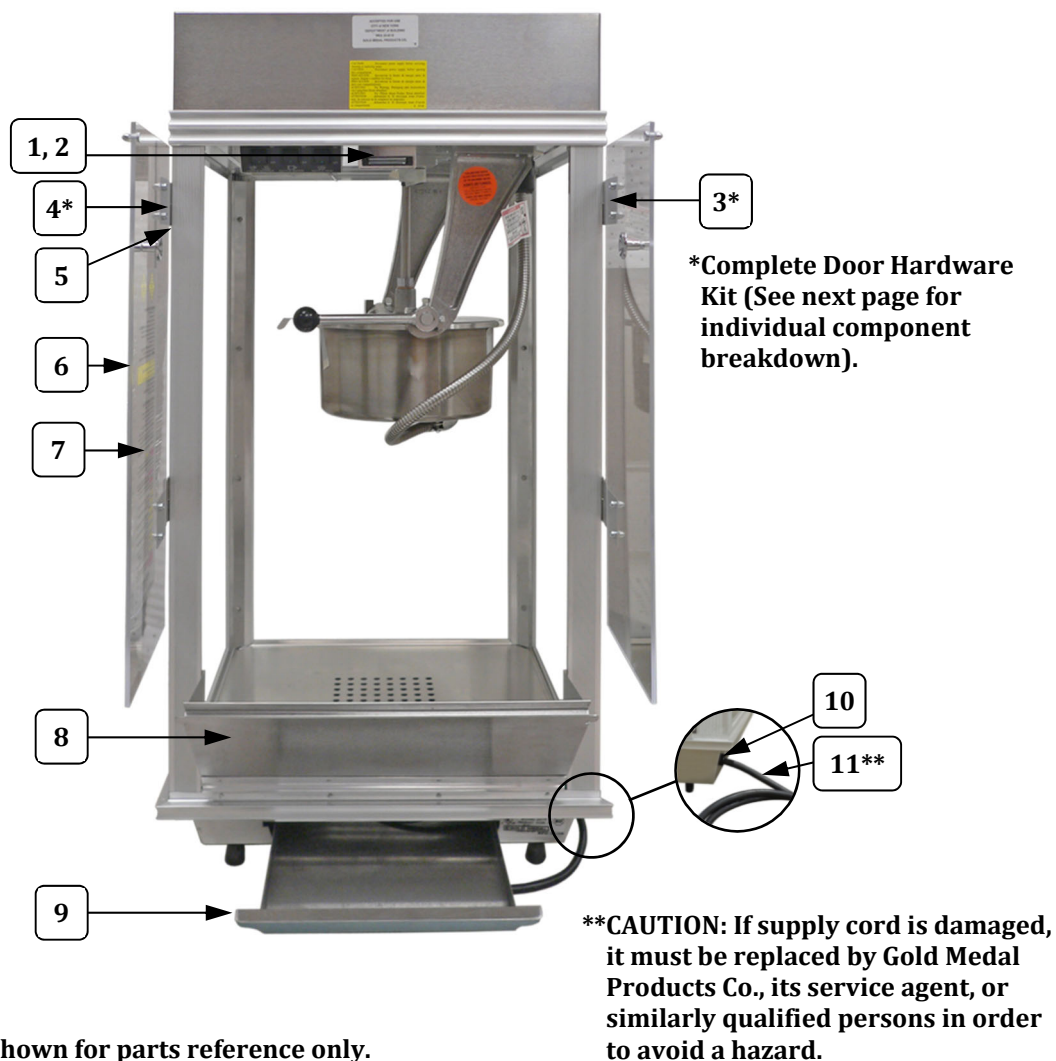

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

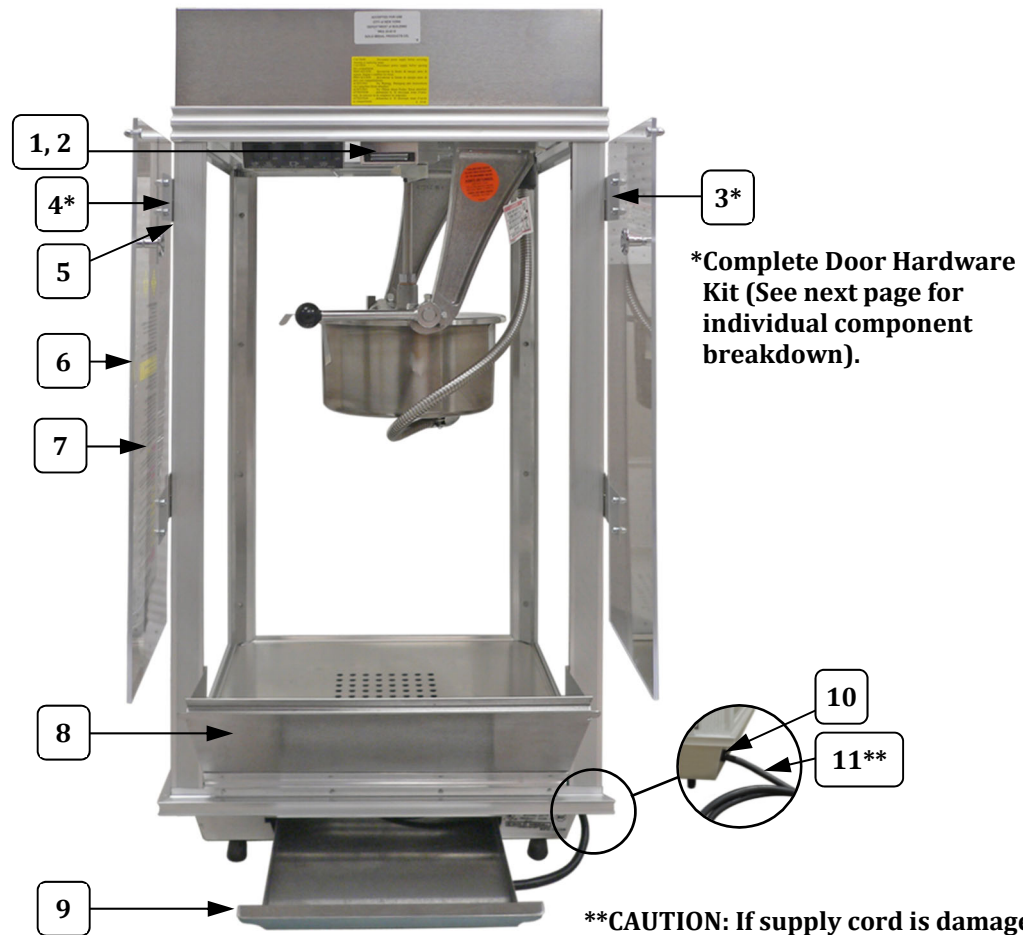

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

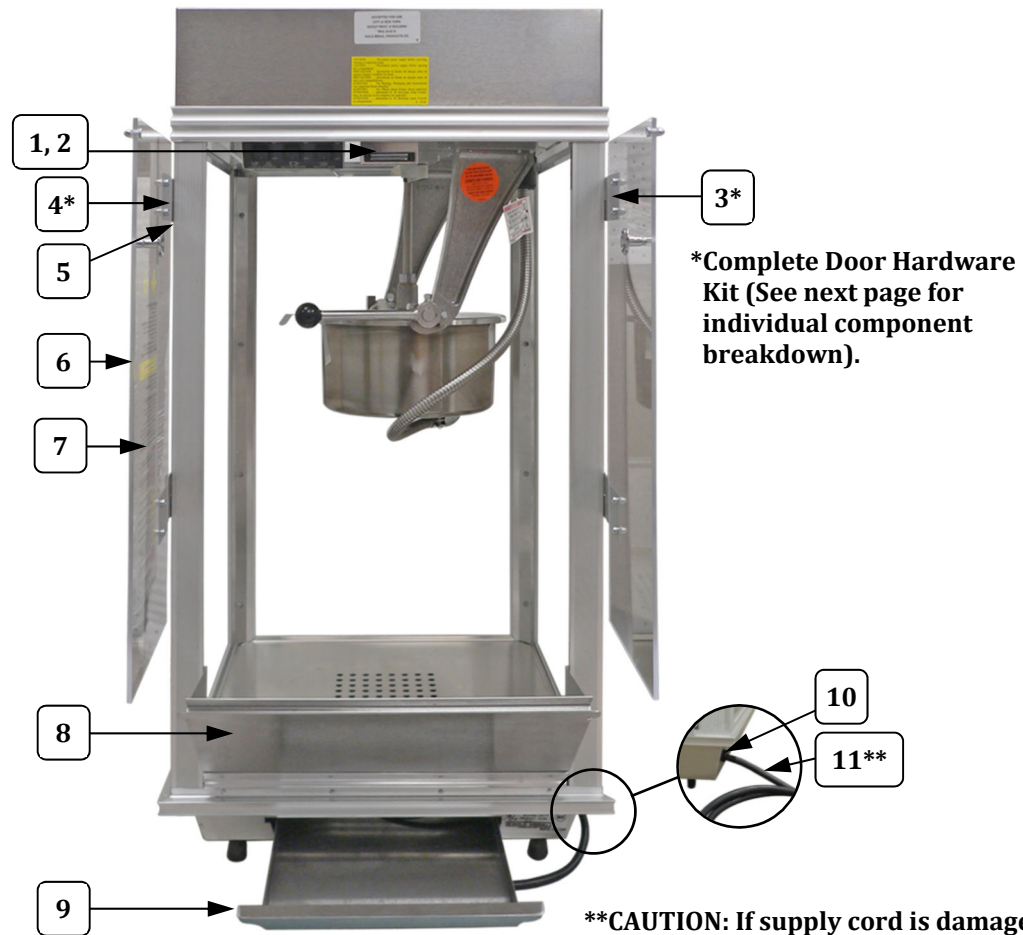

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

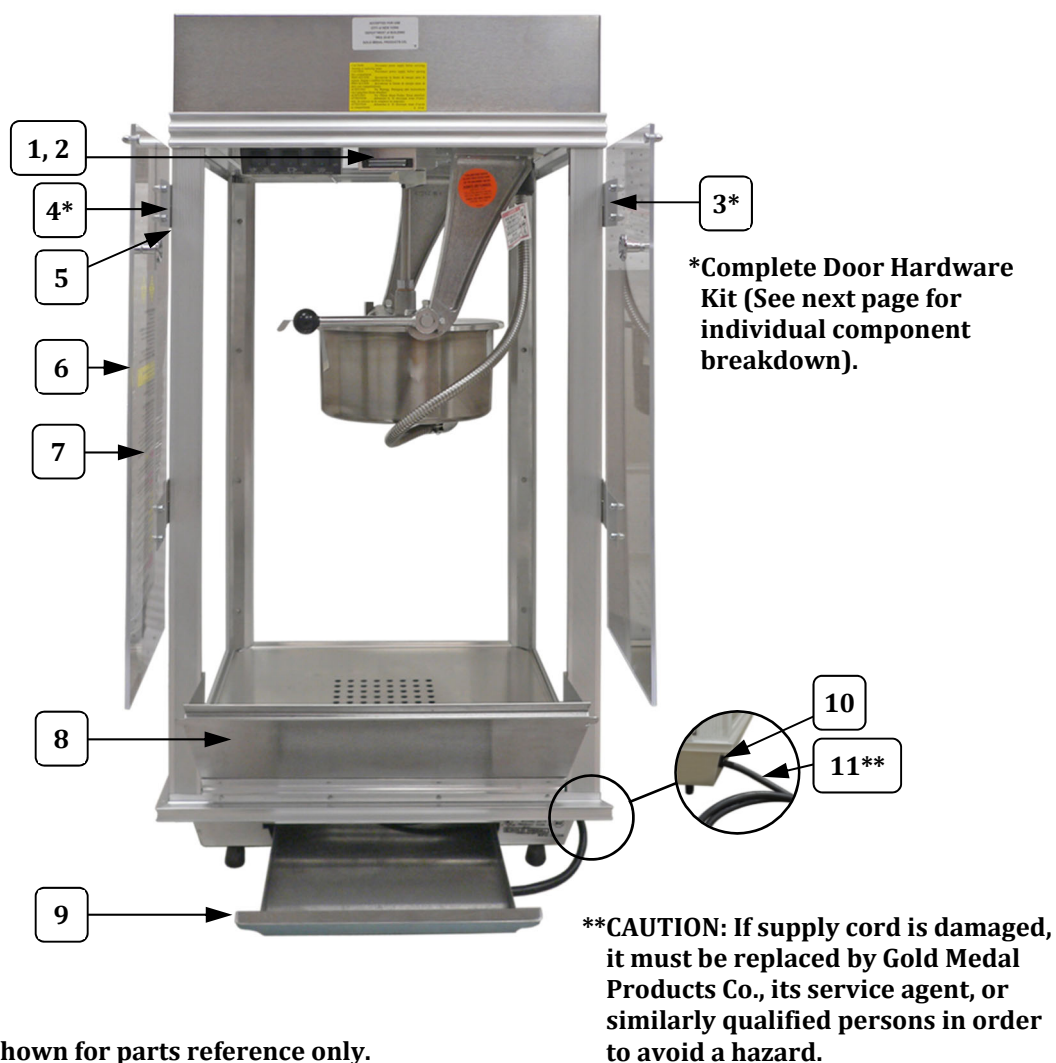

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

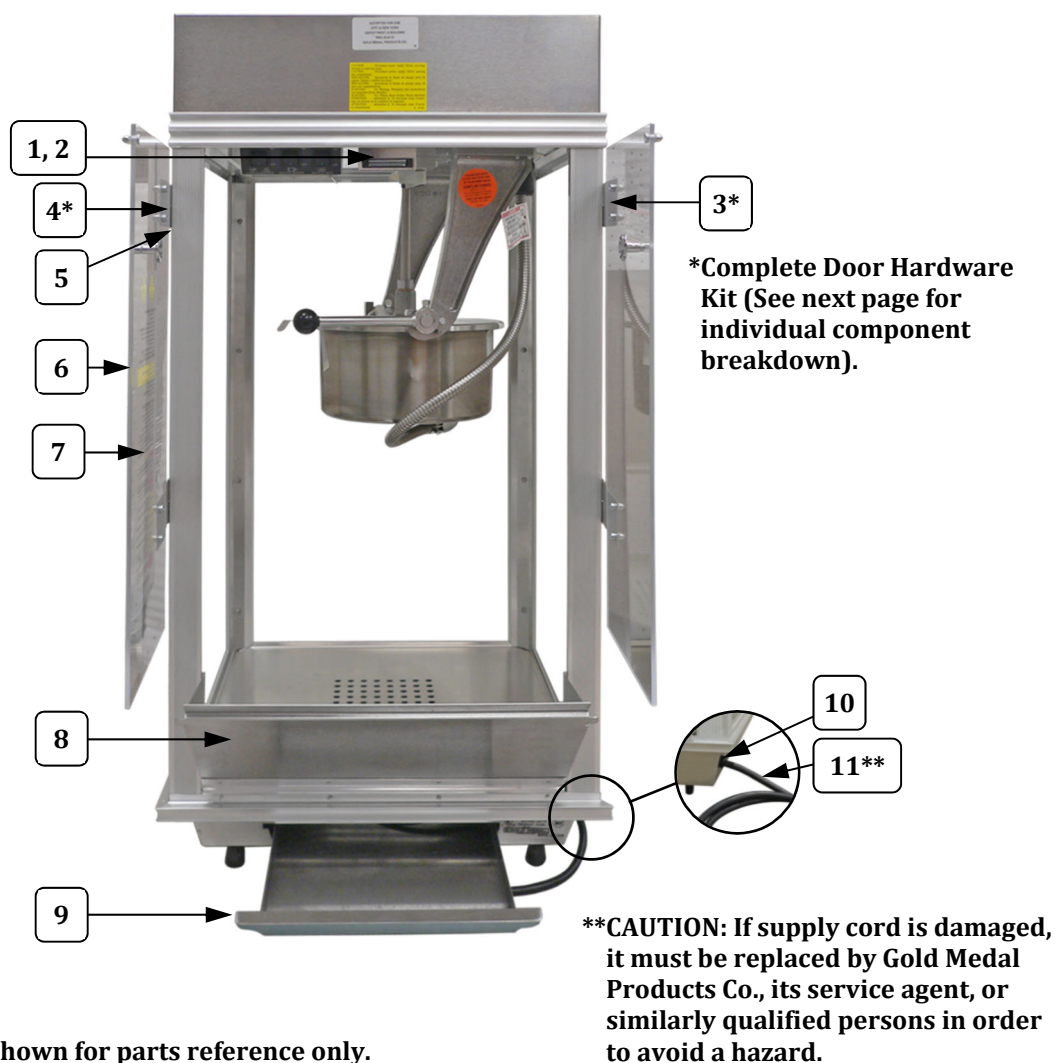

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

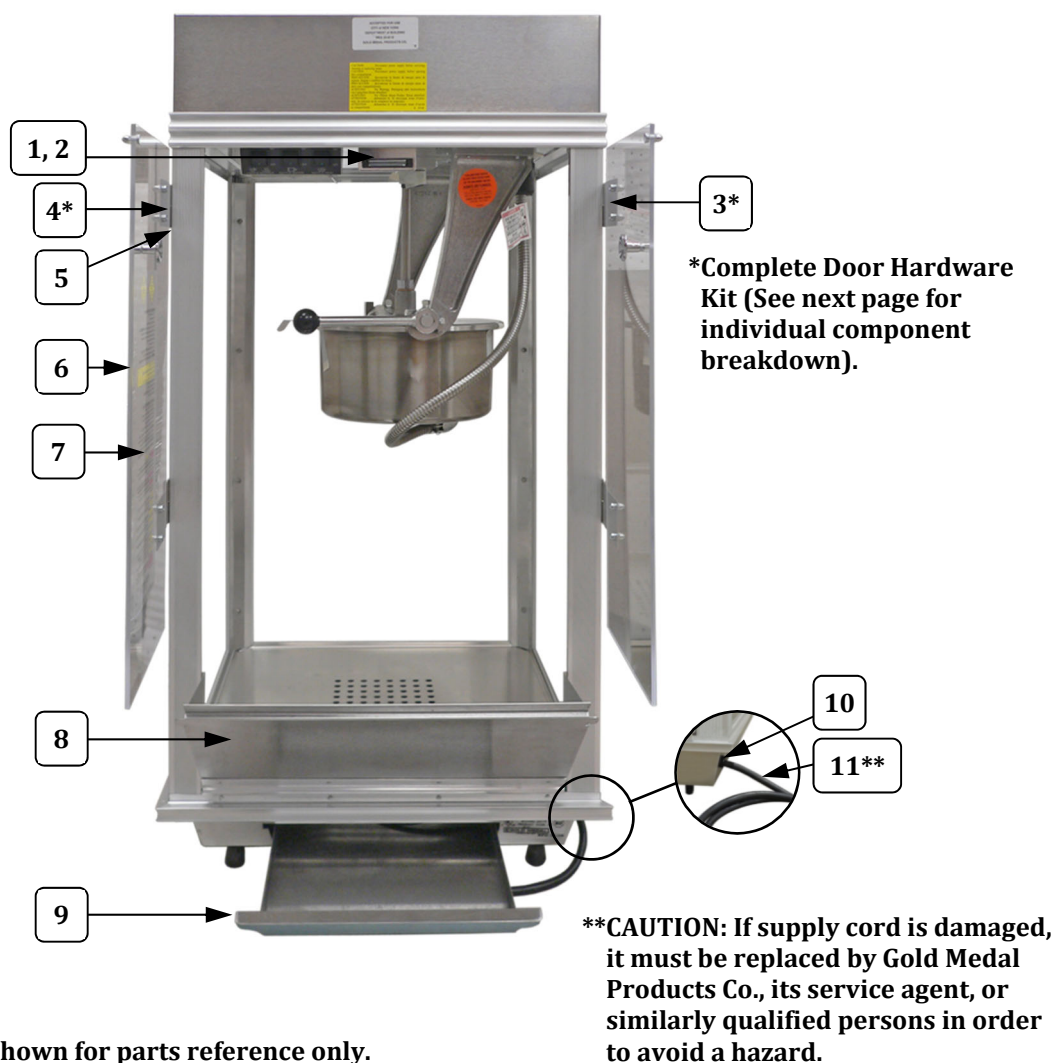

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

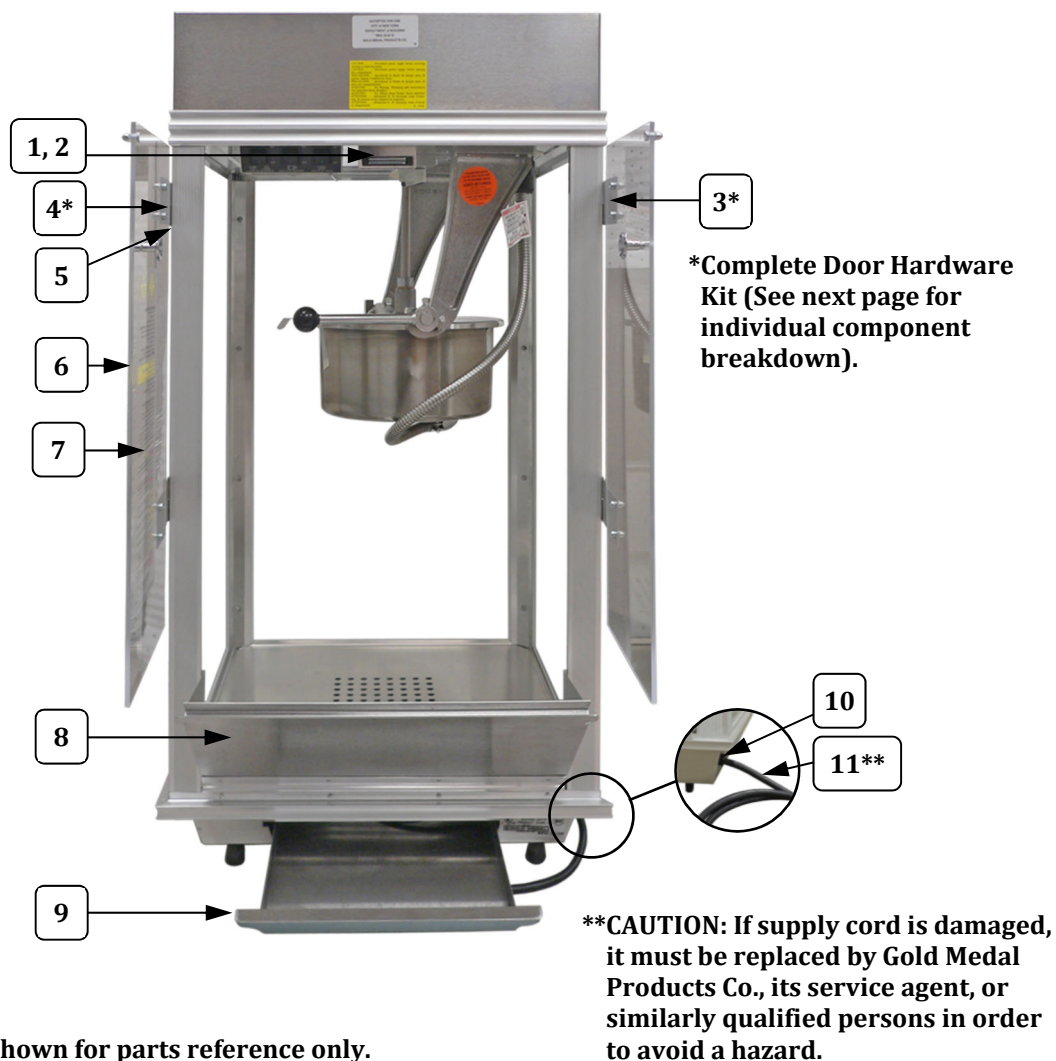

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

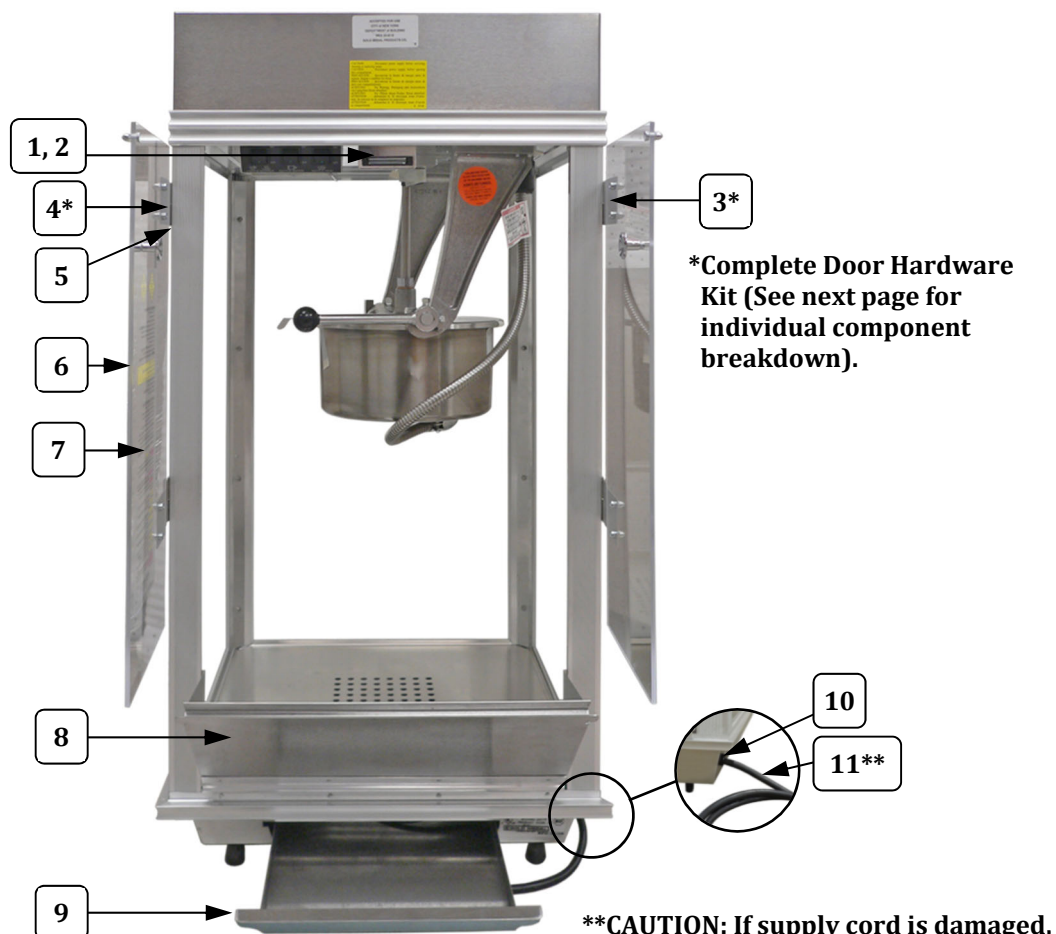

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

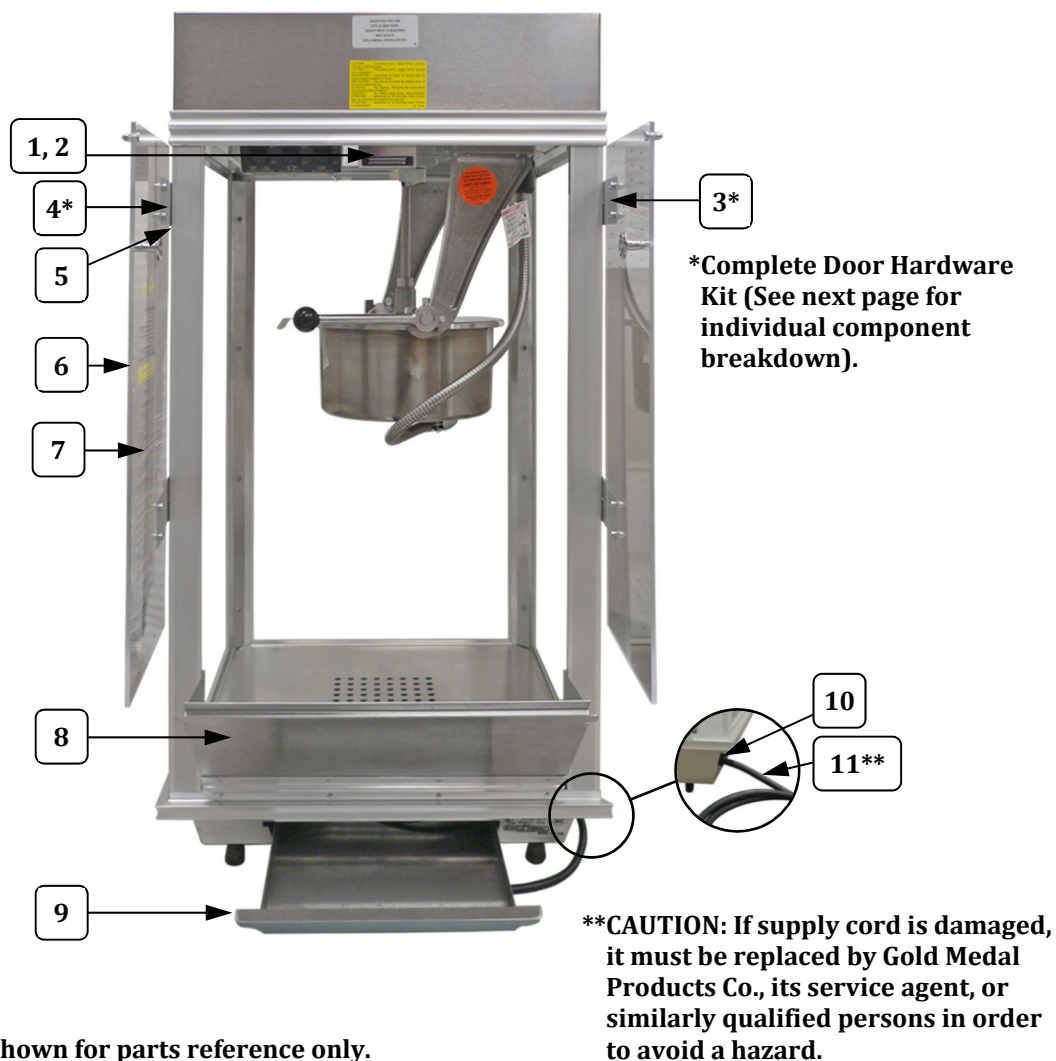

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

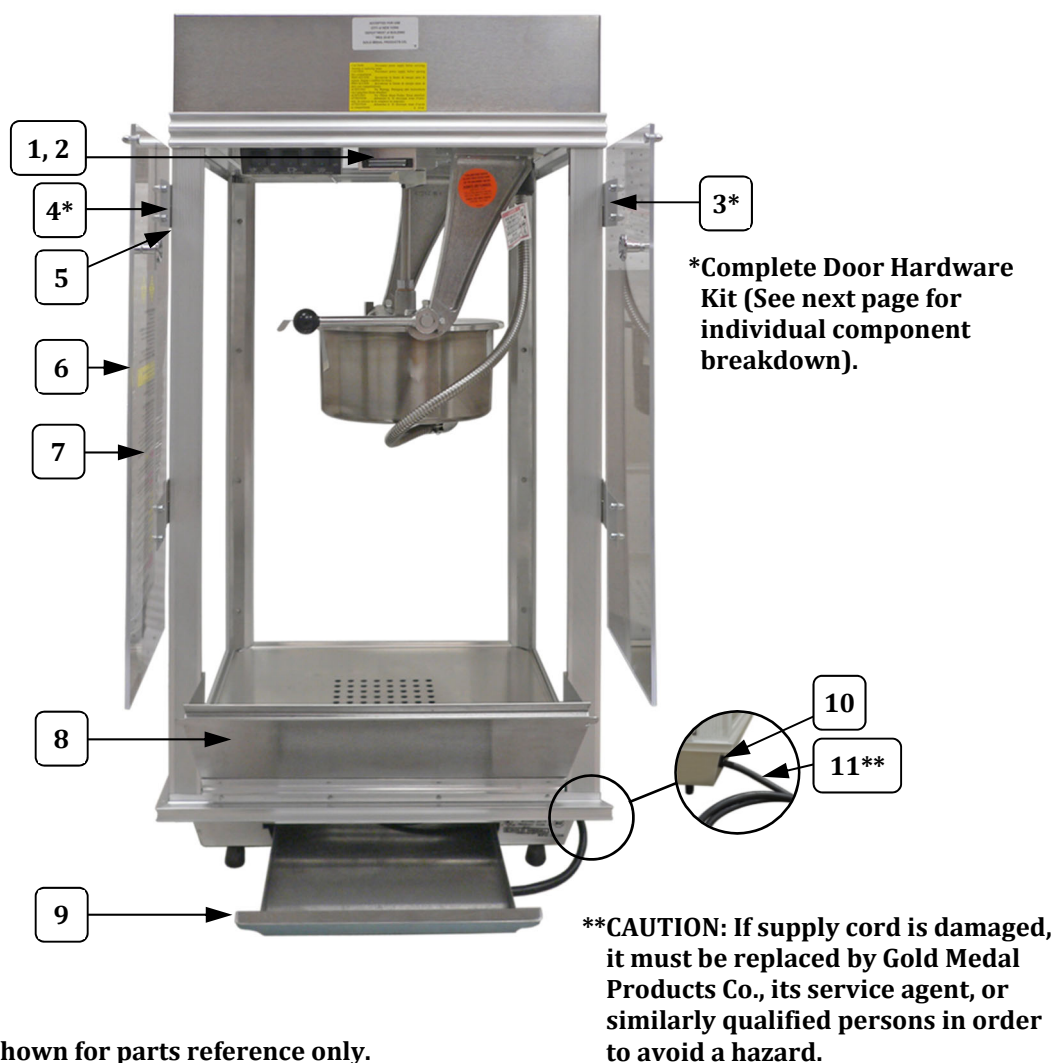

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

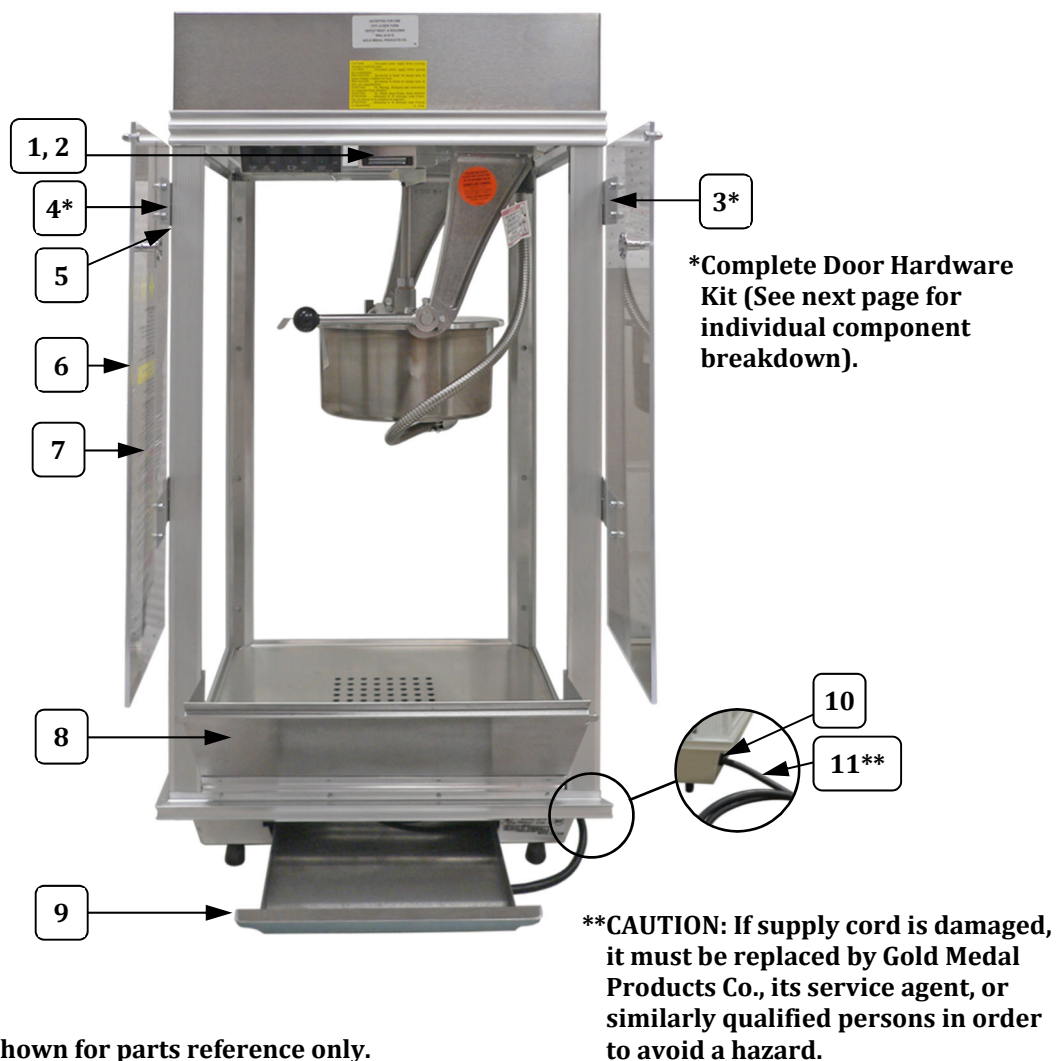

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

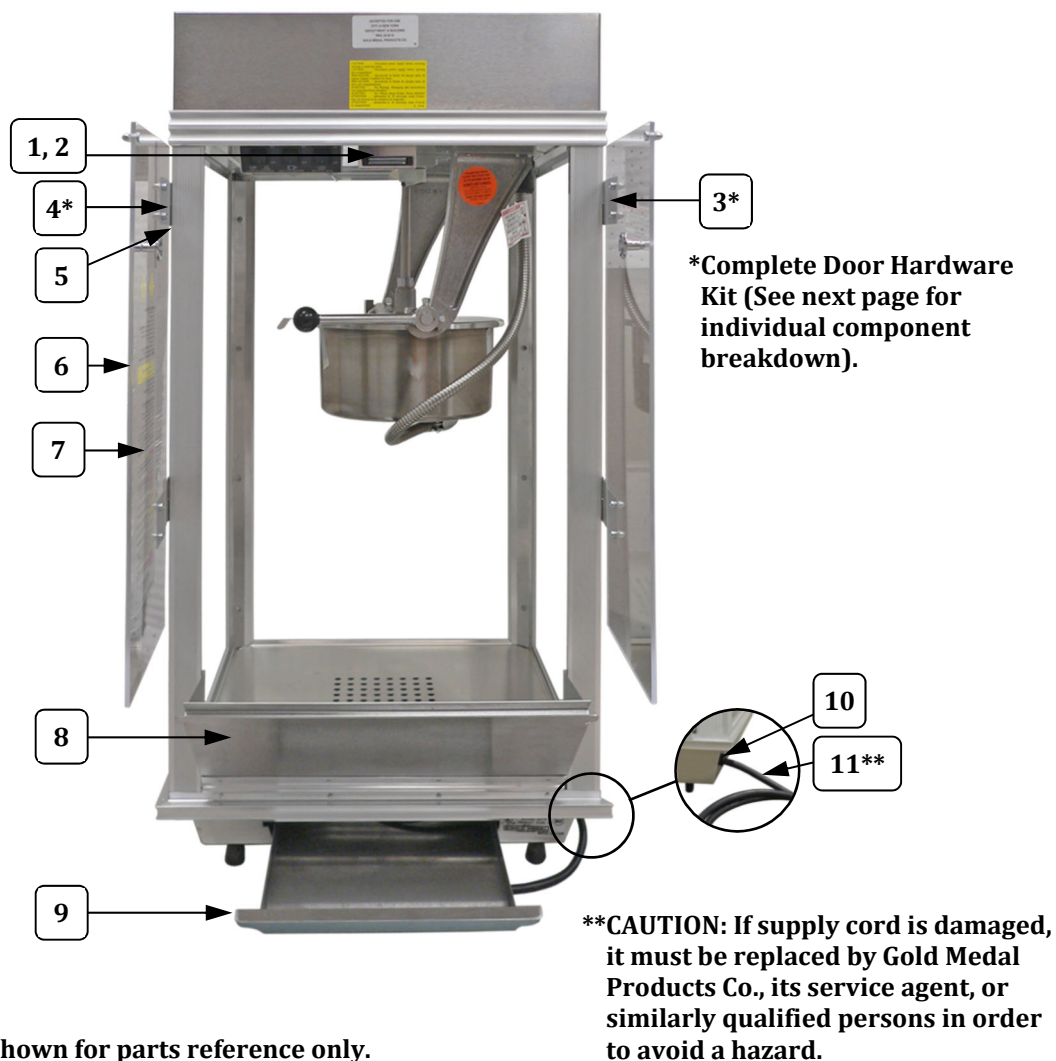

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

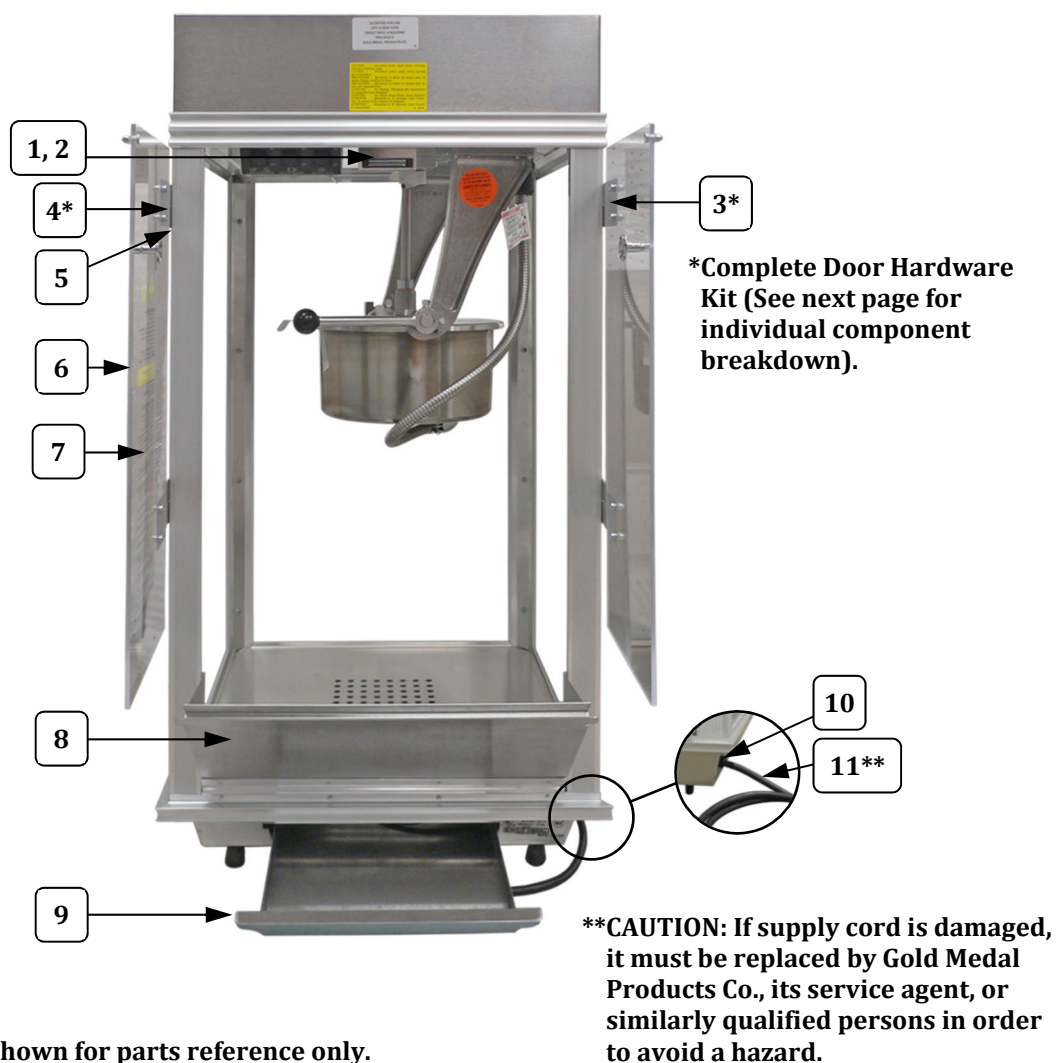

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

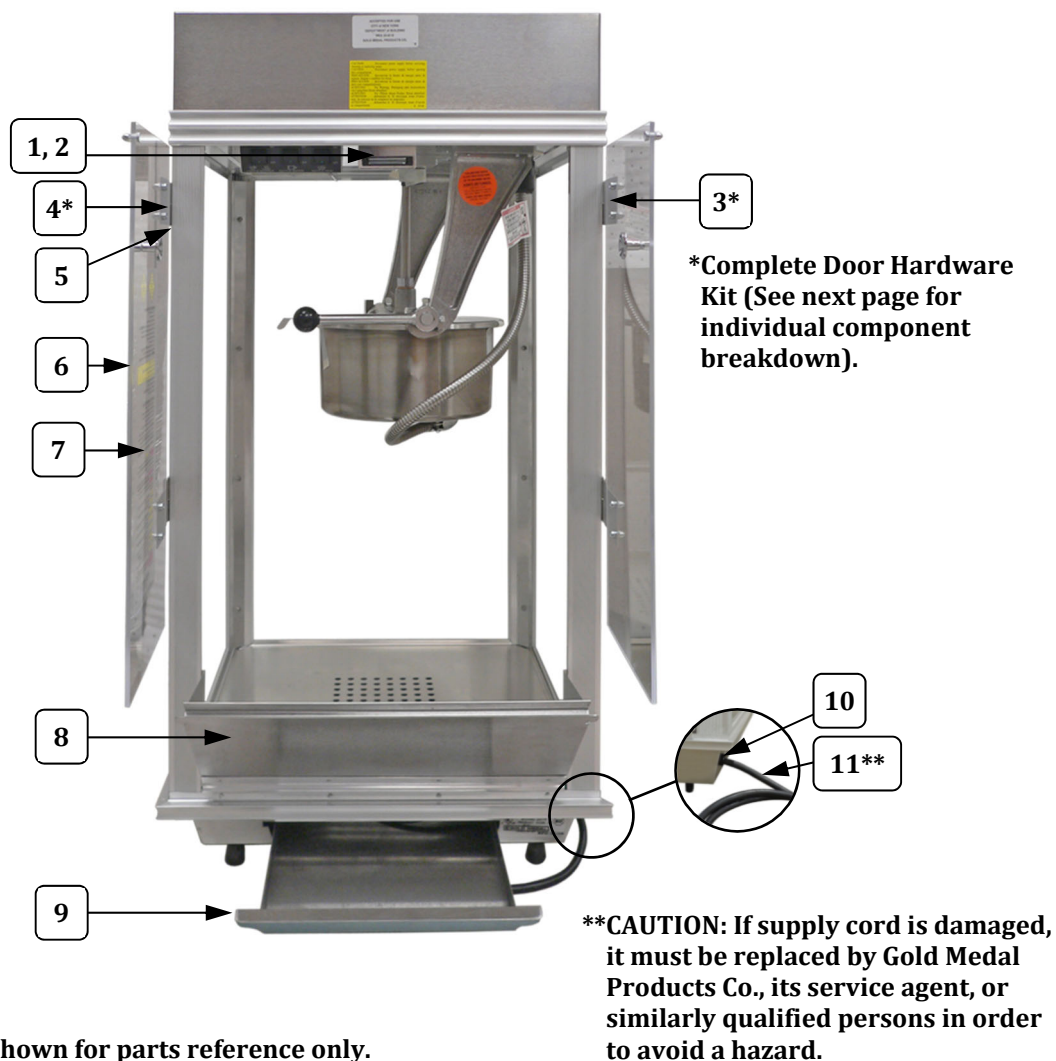

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

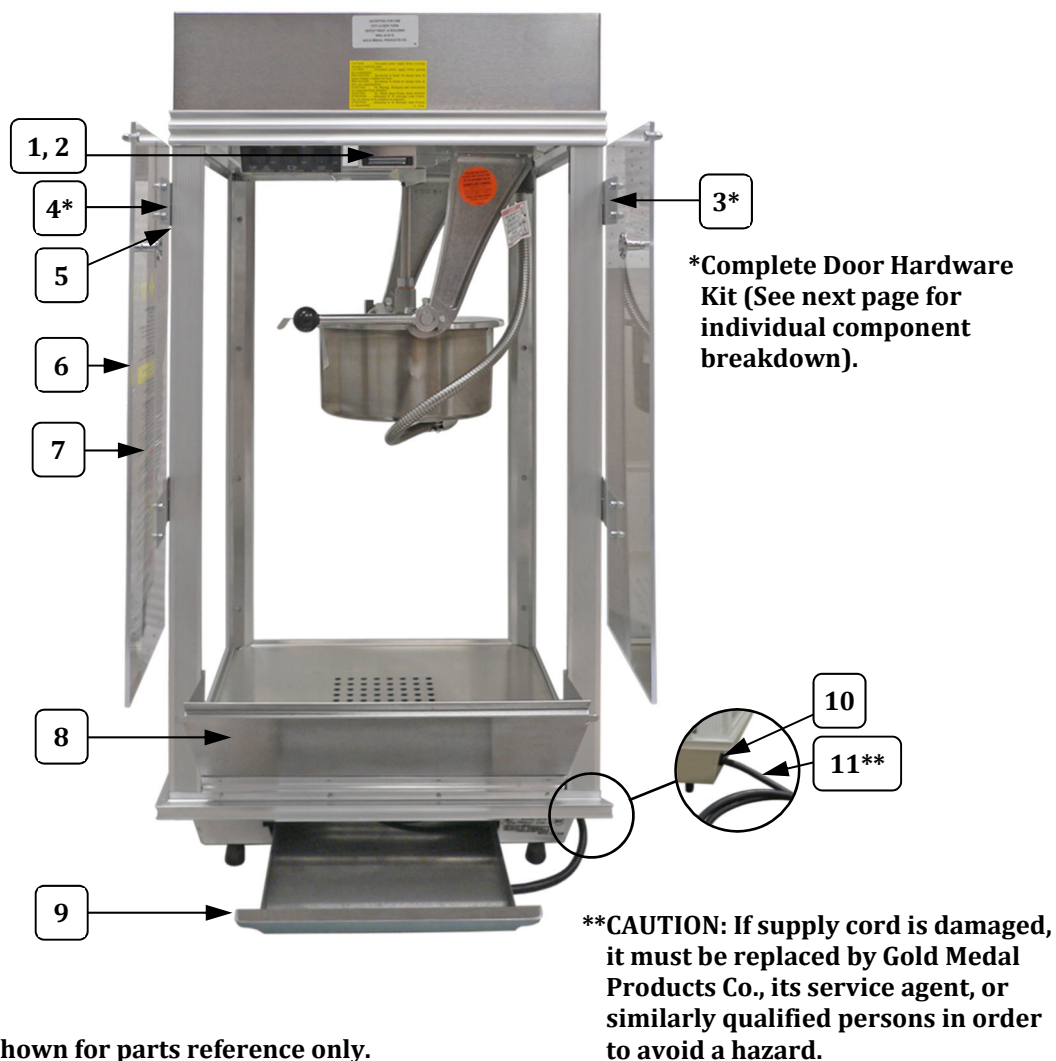

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

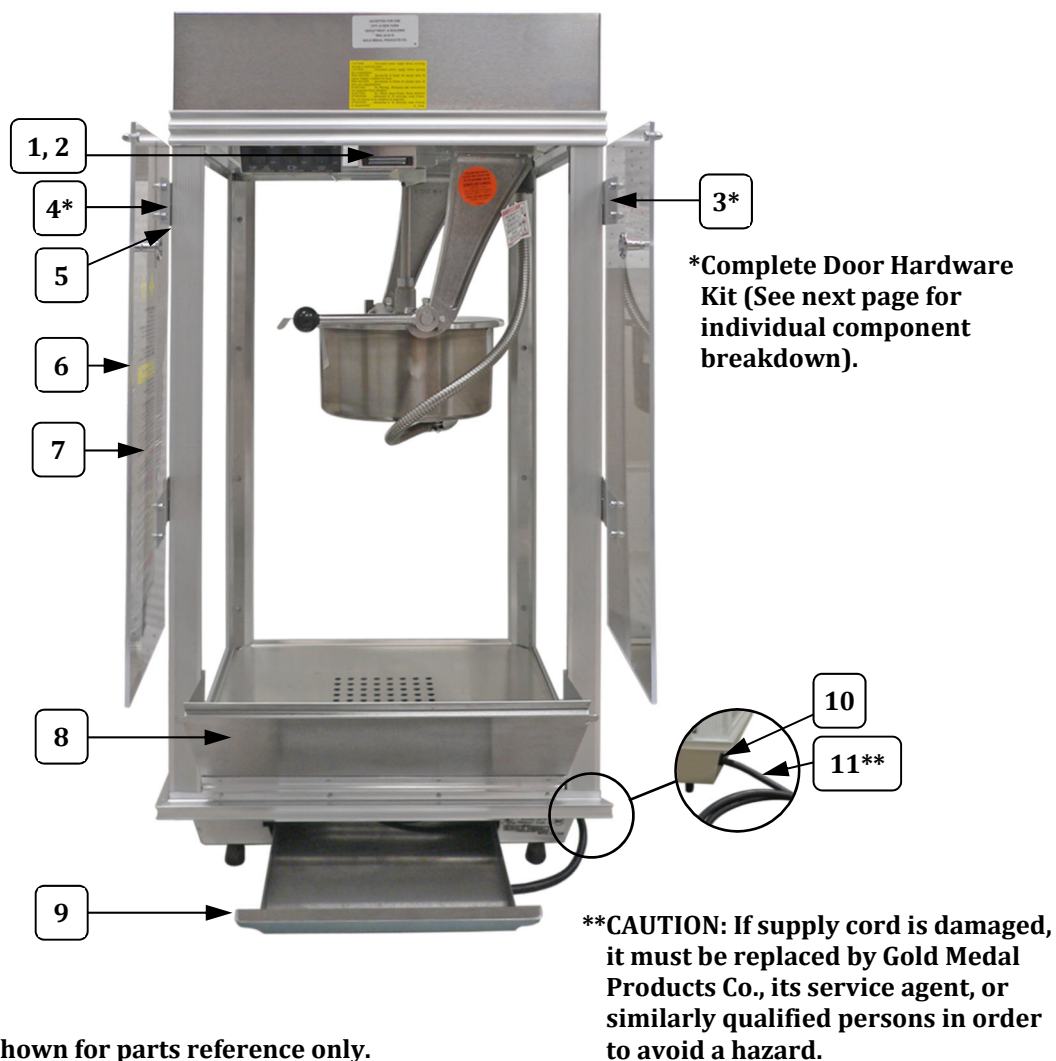

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

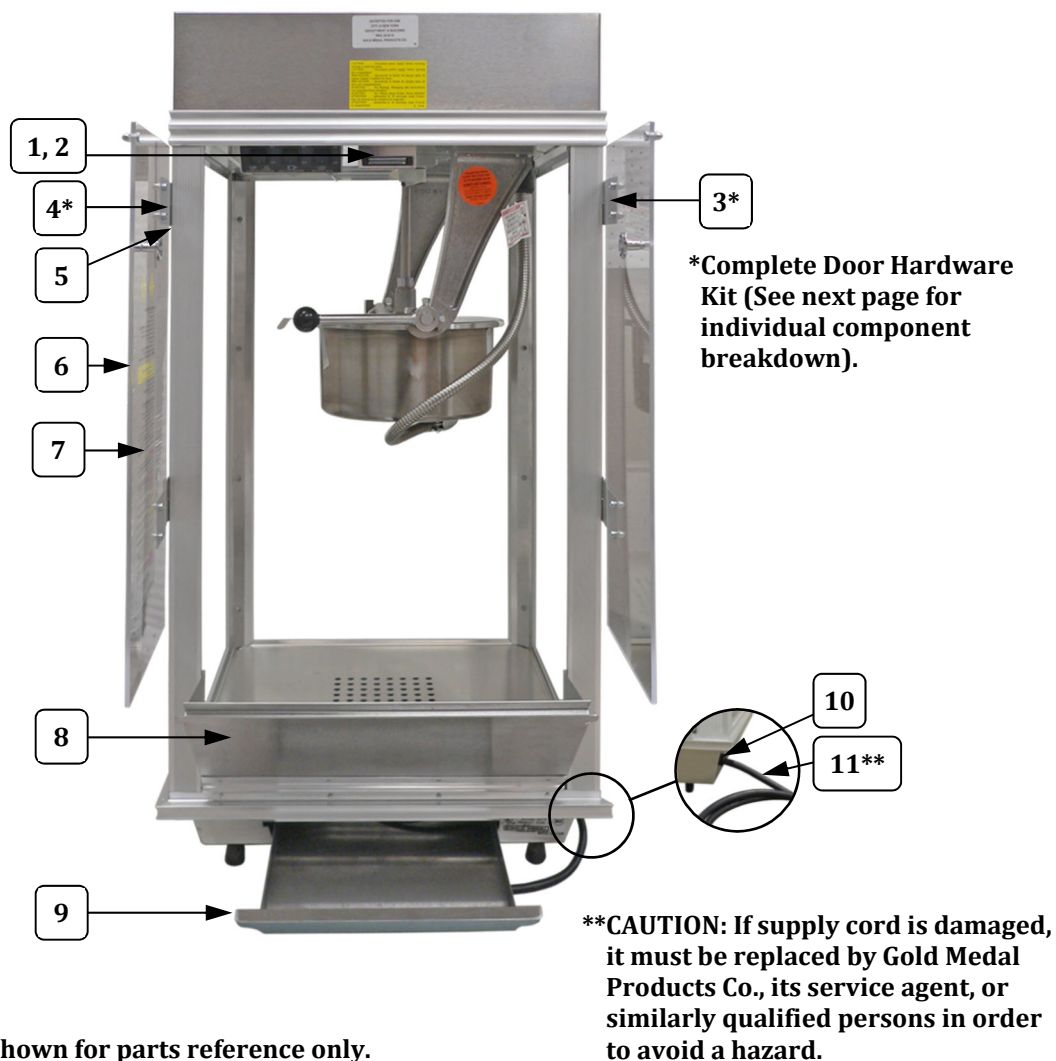

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

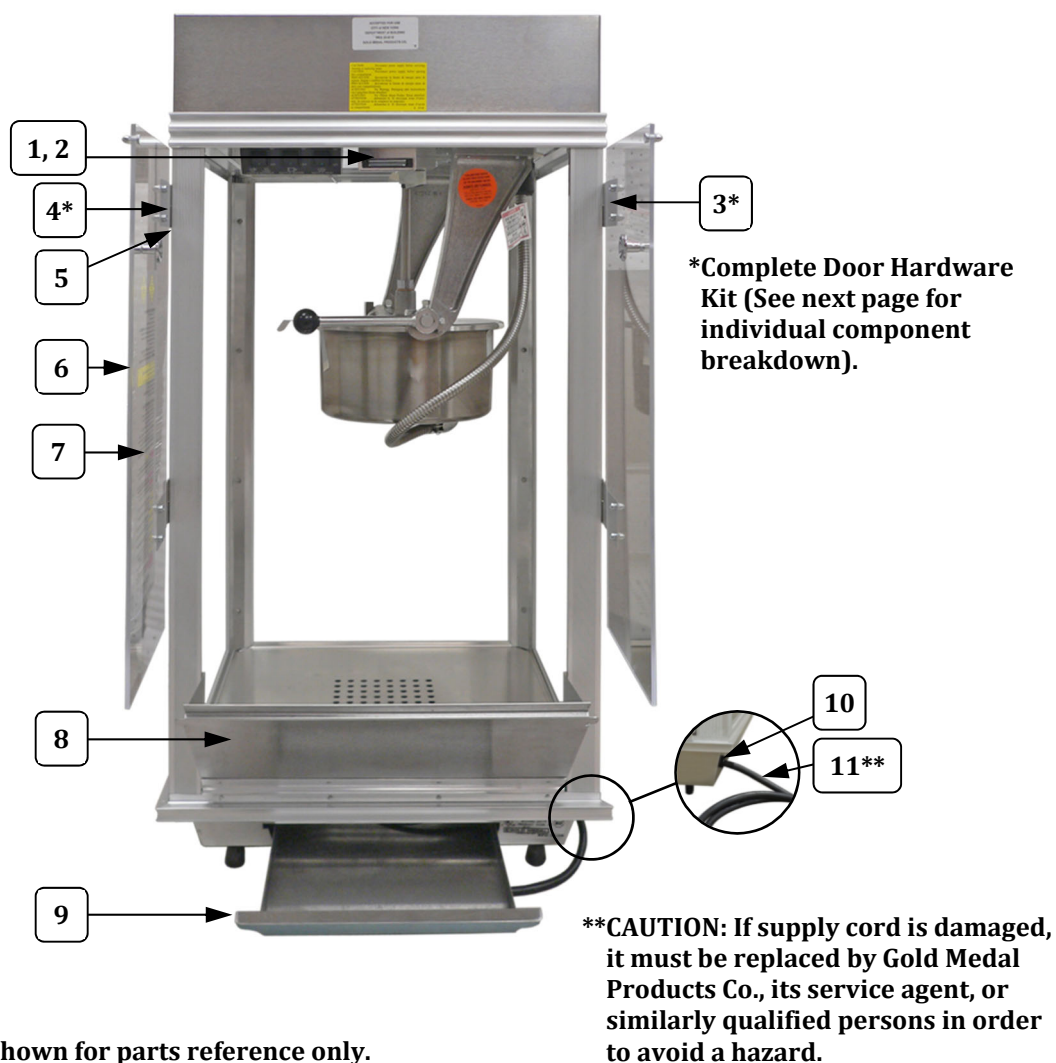

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

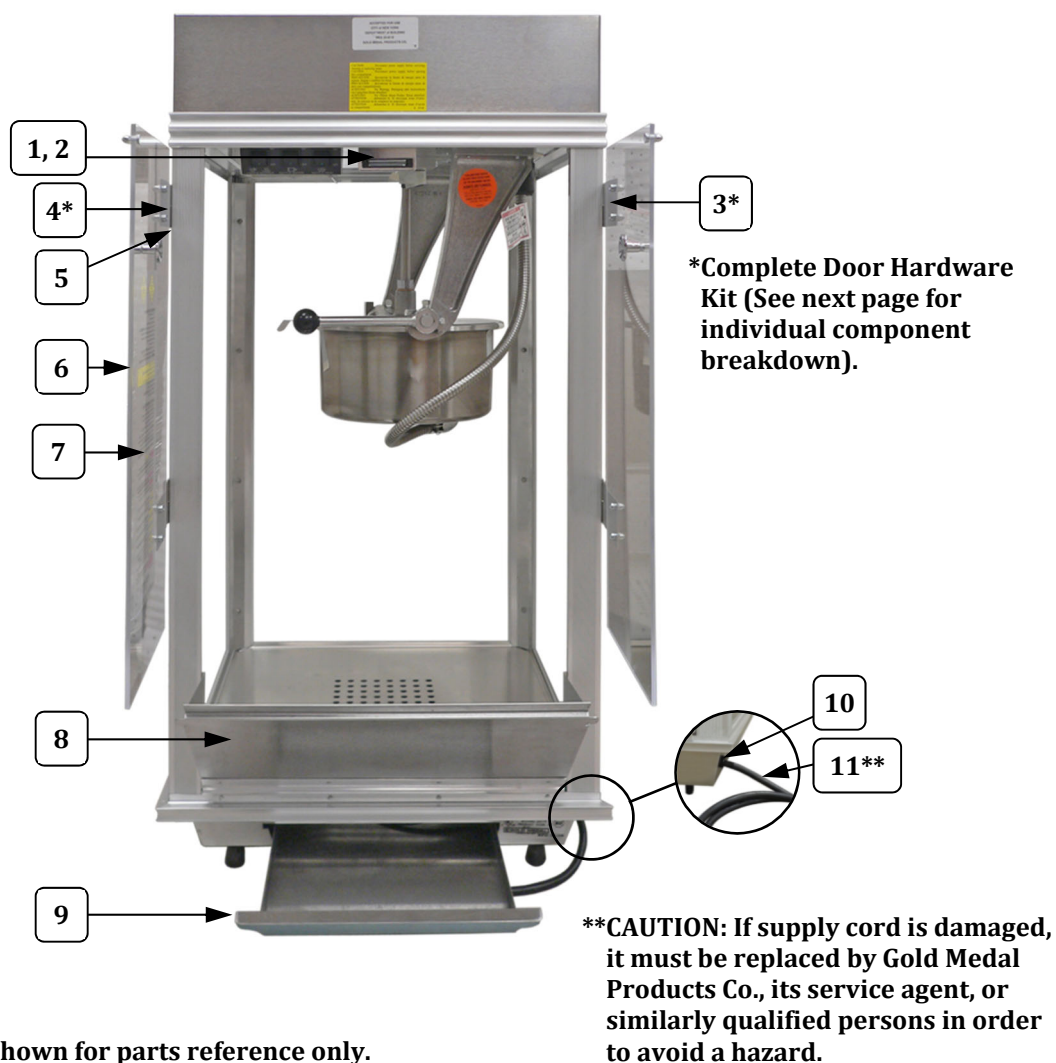

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038


Cabinet Exterior – Operator Side View

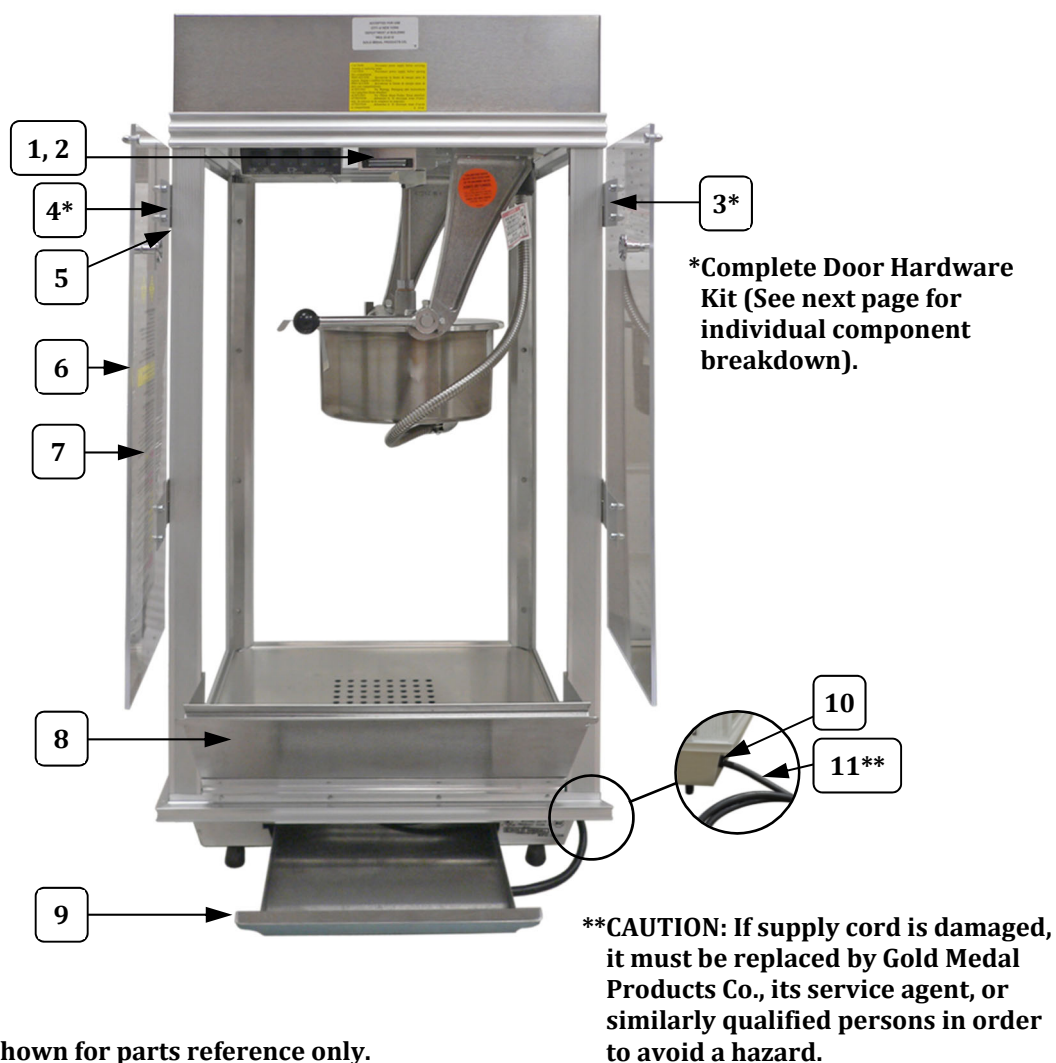

General image shown for parts reference only.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

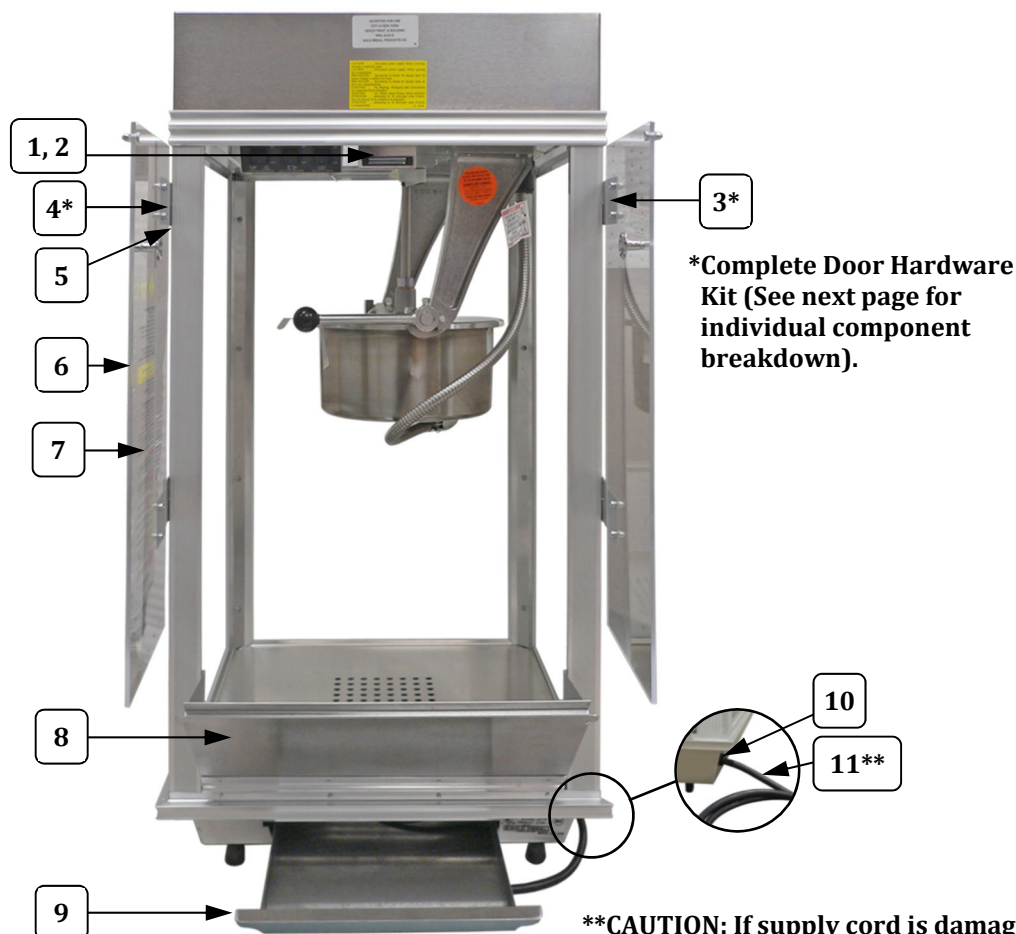


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

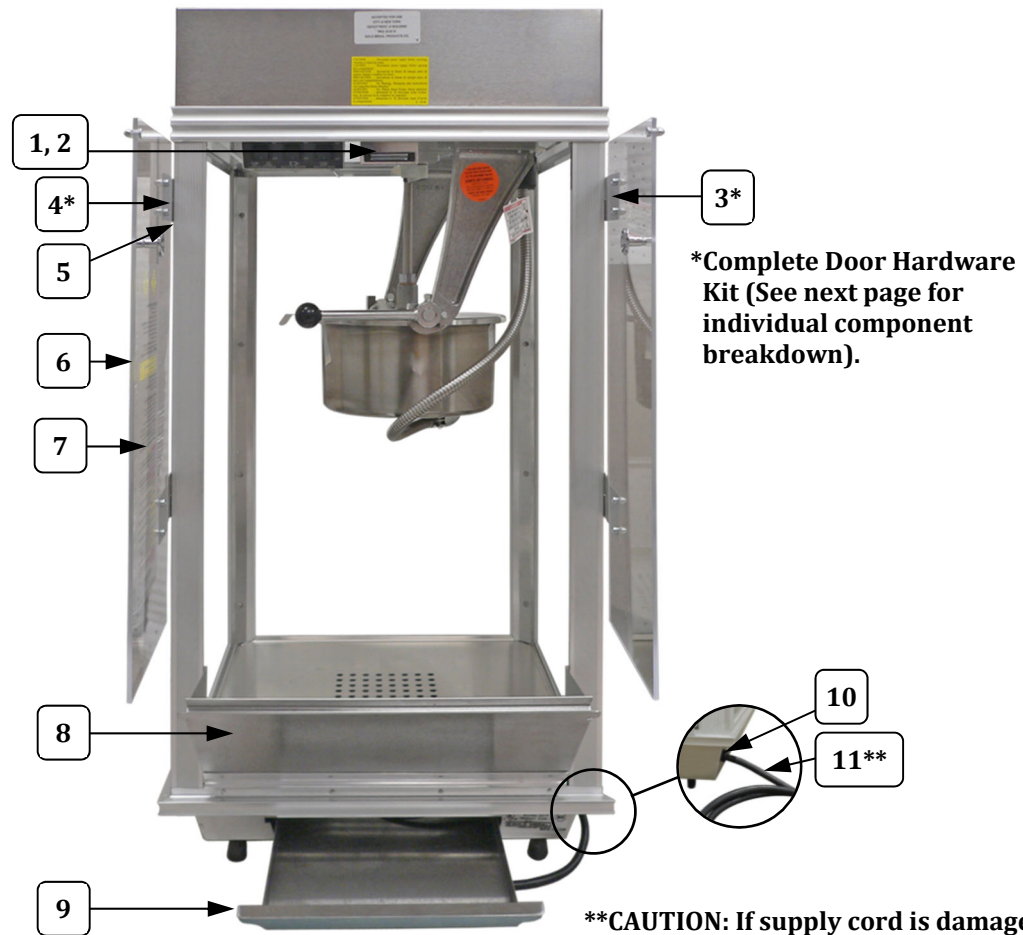


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

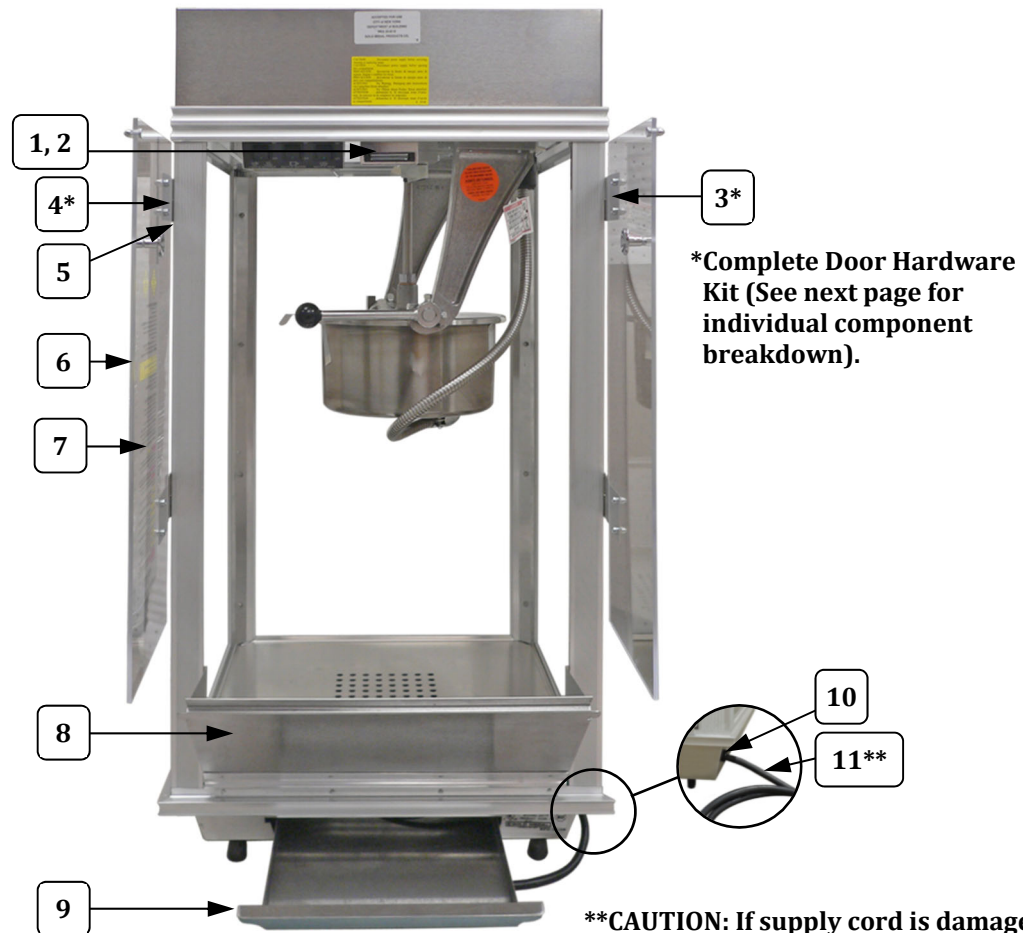


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

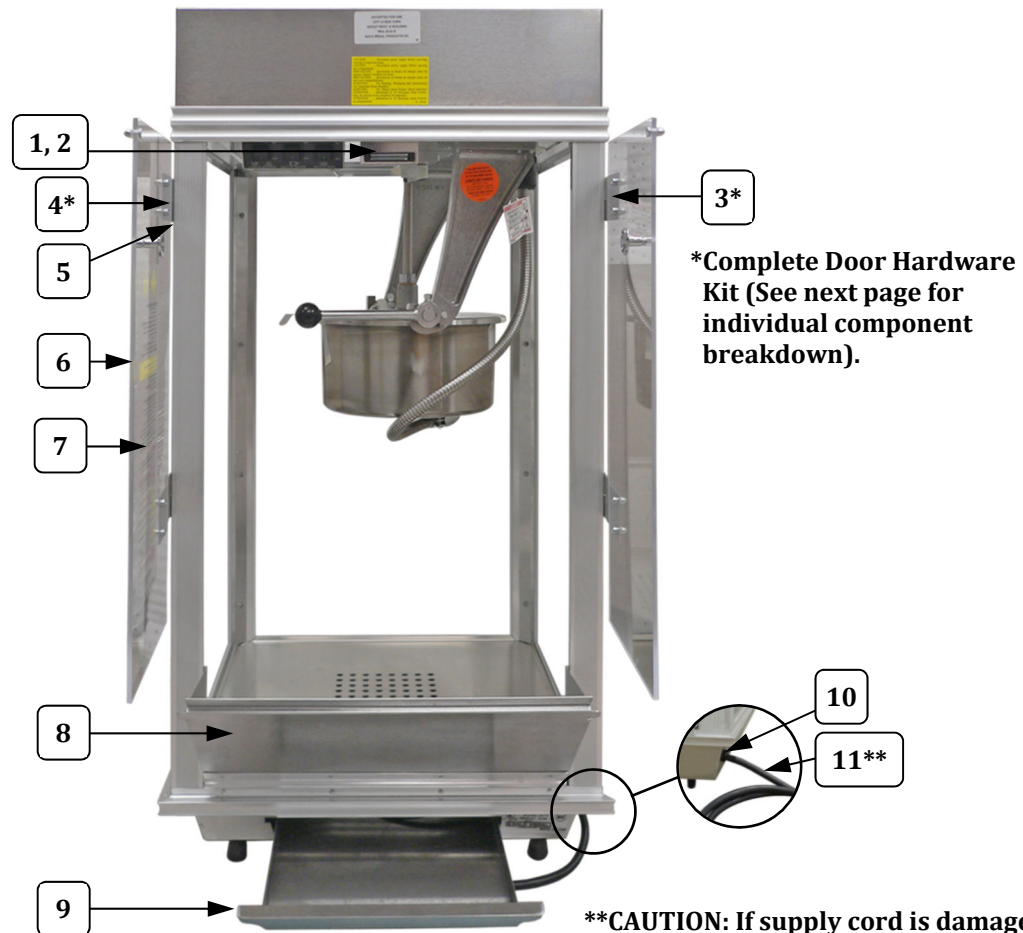


General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038

Cabinet Exterior – Operator Side View

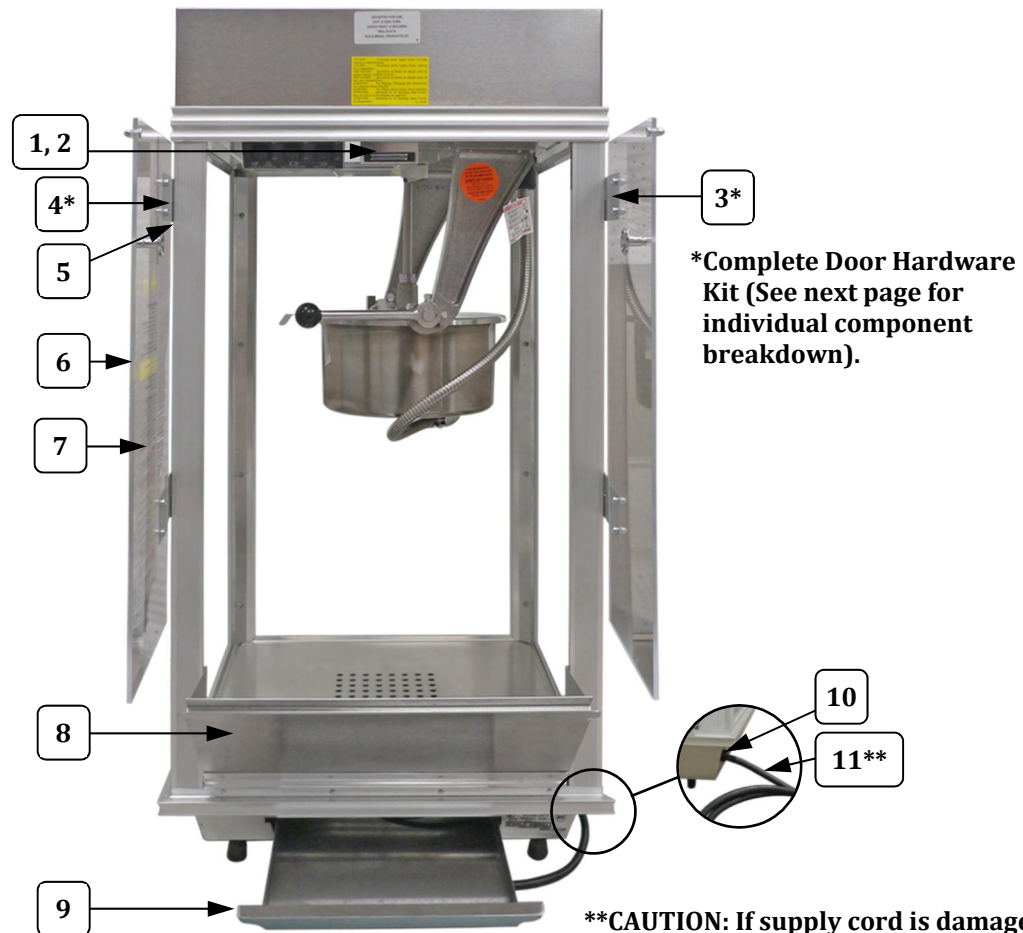

General image shown for parts reference only.

****CAUTION:** If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	MAGNETIC CATCH MT BRKT	47559	41340	41340	41340	41340
2	MAGNETIC CATCH	47561	47561	47561	47561	47561
3*	COMPLETE LH DOOR HARDWARE KIT	47054	47054	47054	47054	47054
4*	COMPLETE RH DOOR HARDWARE KIT	47055	47055	47055	47055	47055
5	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit)	42044	42044	42044	42044	42044
6	DOOR	77524	77524	77524	77524	77524
7	UNIVERSAL POPPER DECAL	41019	41019	41019	41019	41019
8	DROP PANEL	77509	77509	77509	77509	77509
9	OLD MAID PAN	47003	47003	47003	47003	47003
10	STRAIN RELIEF	76026	76026	76026	76026	76026
11	LEAD-IN CORD 15 AMP PLUG	22038	22038	22038	22038	22038



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350



Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350




Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)


Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350

Cabinet Interior View – Controls – Parts Breakdown

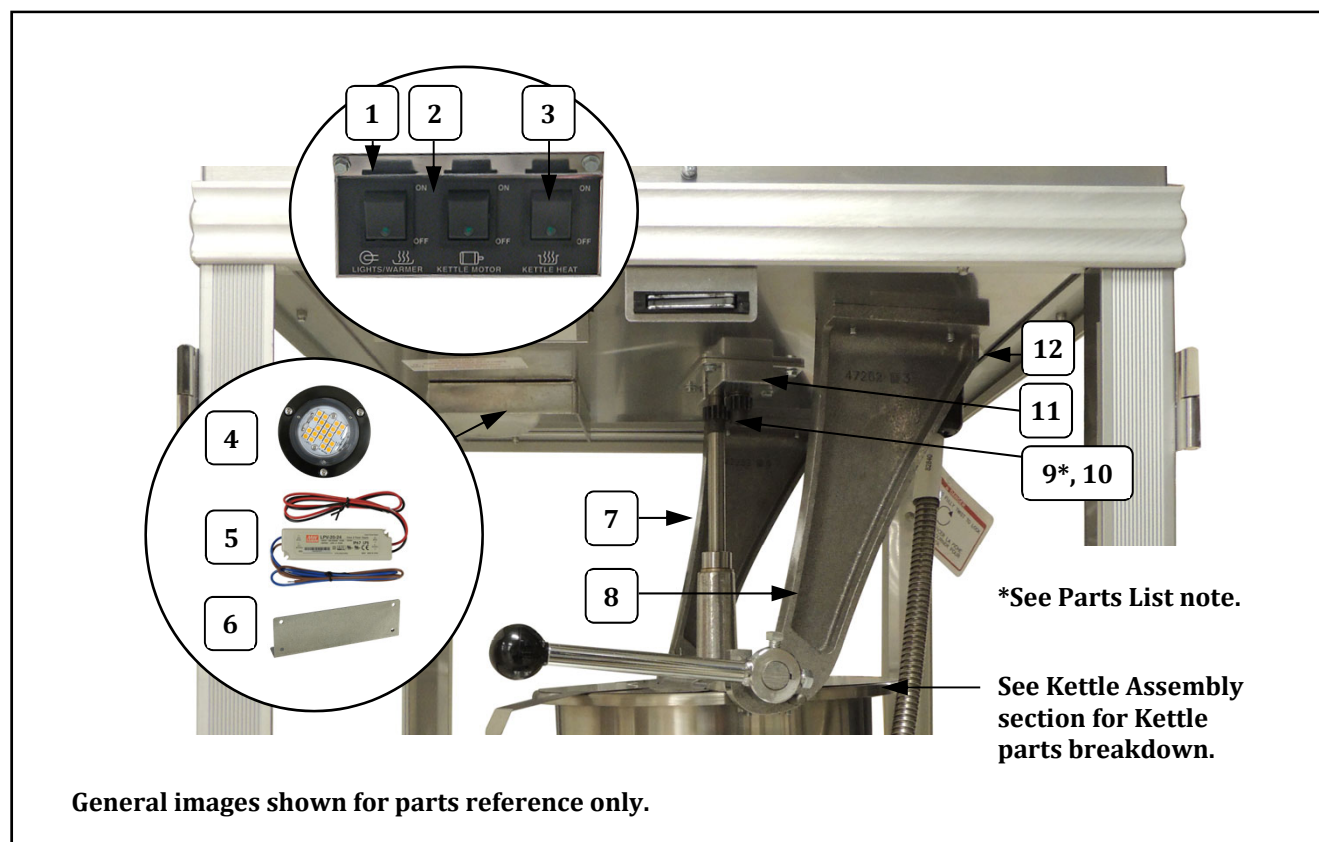


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

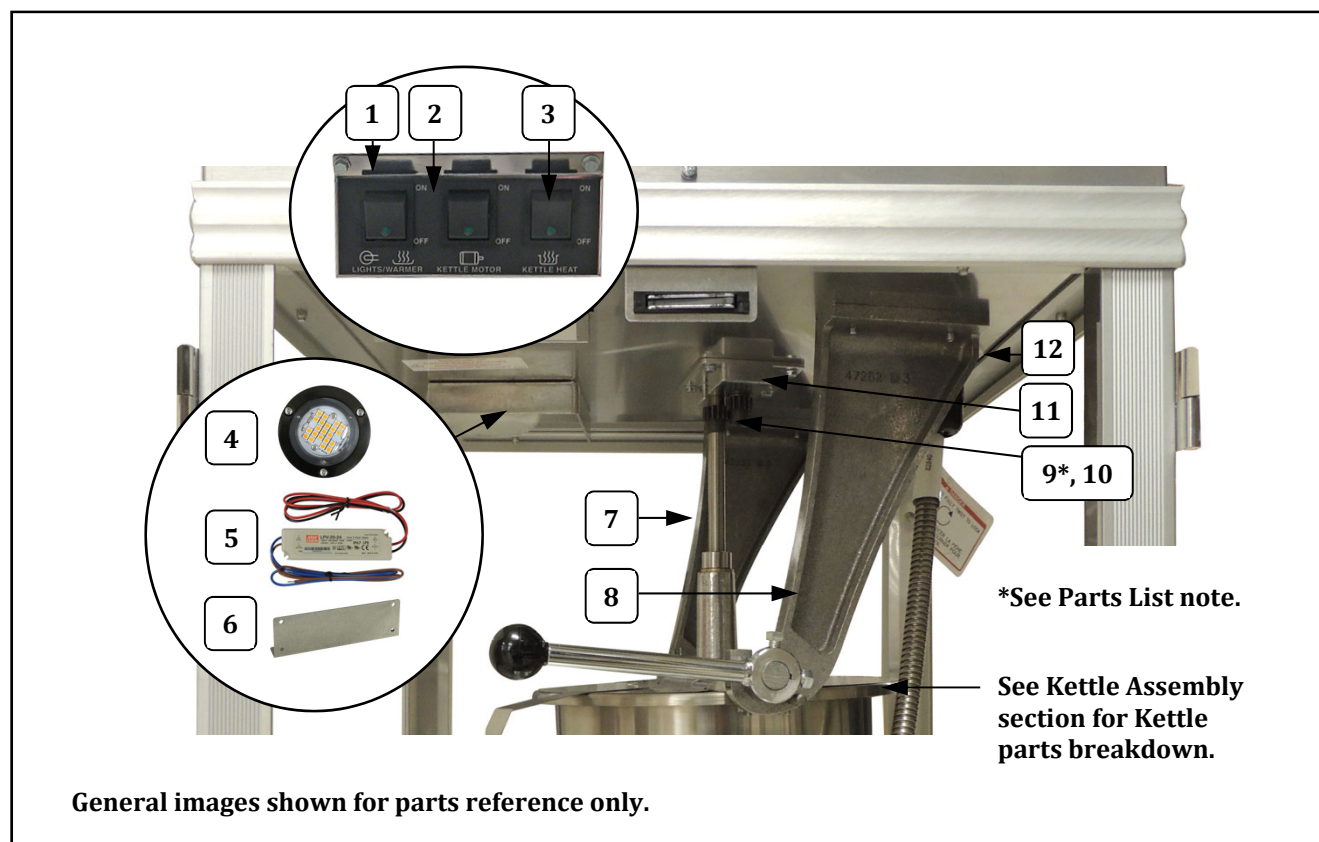


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

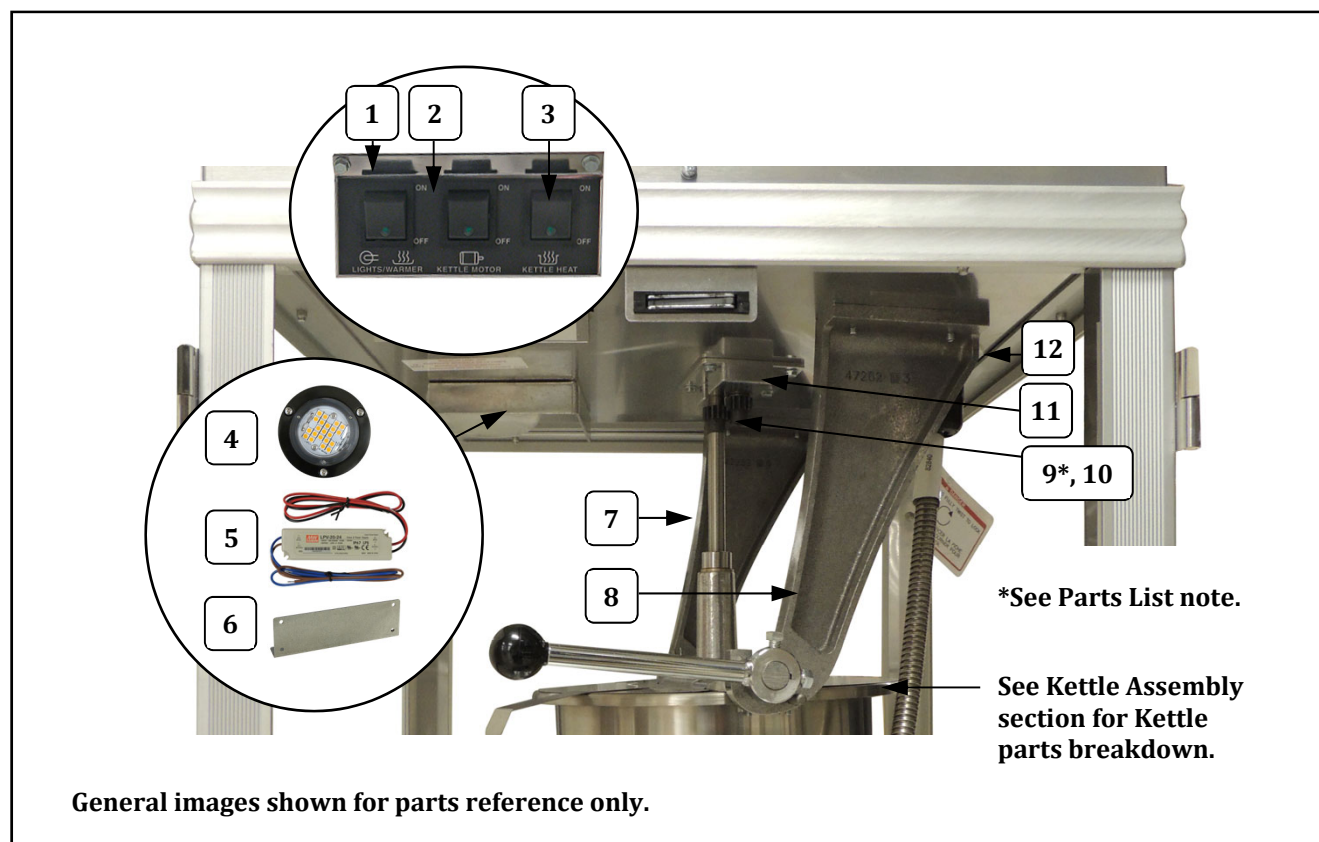


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

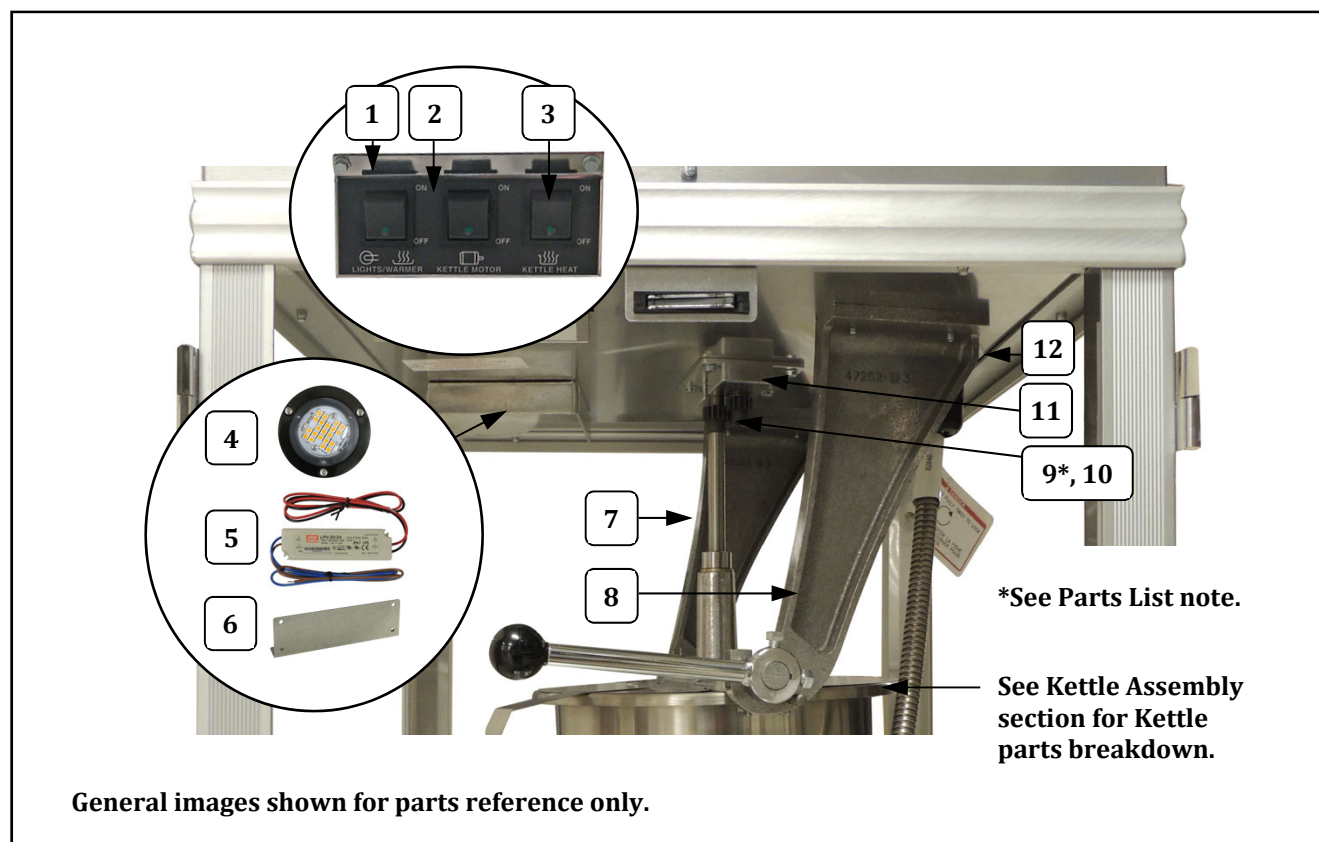


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

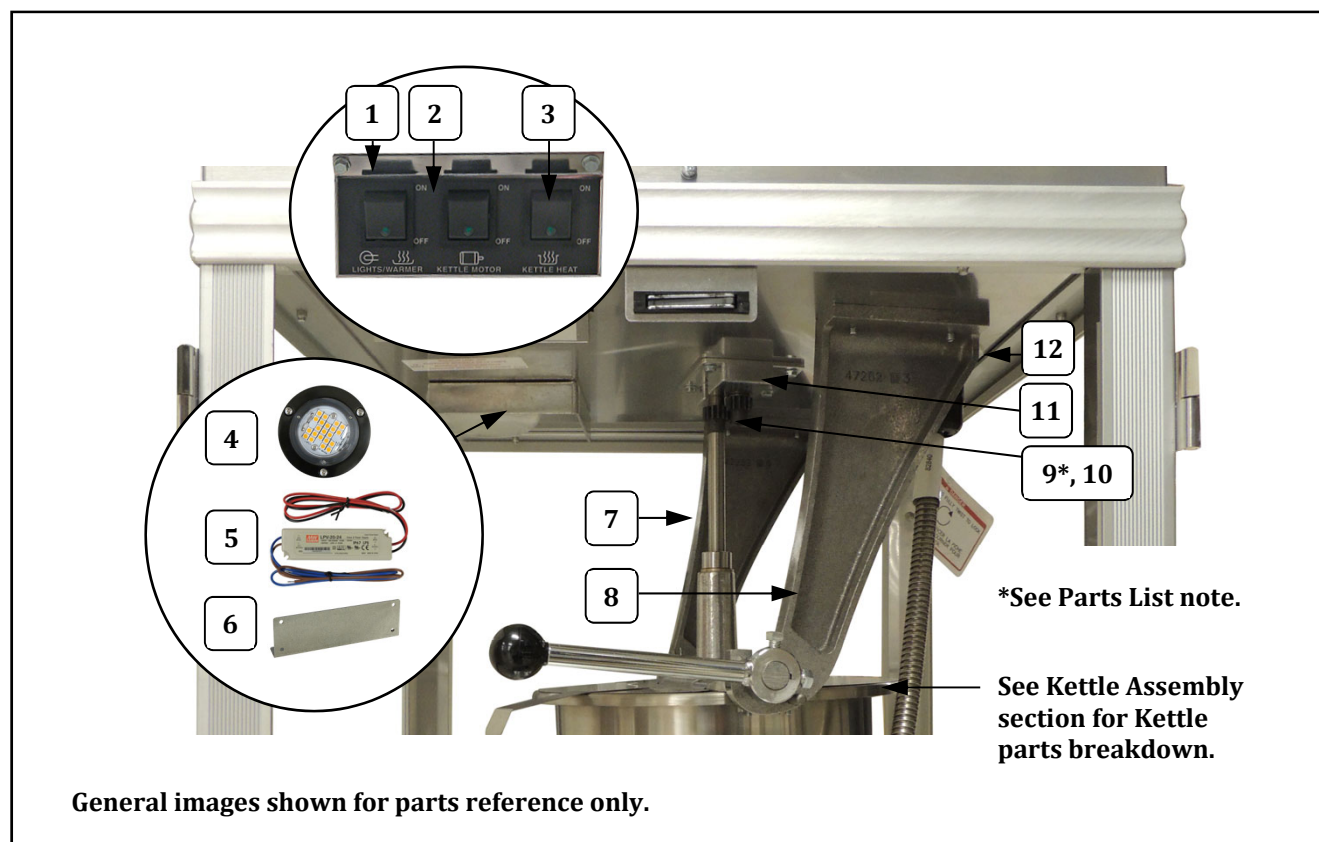


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

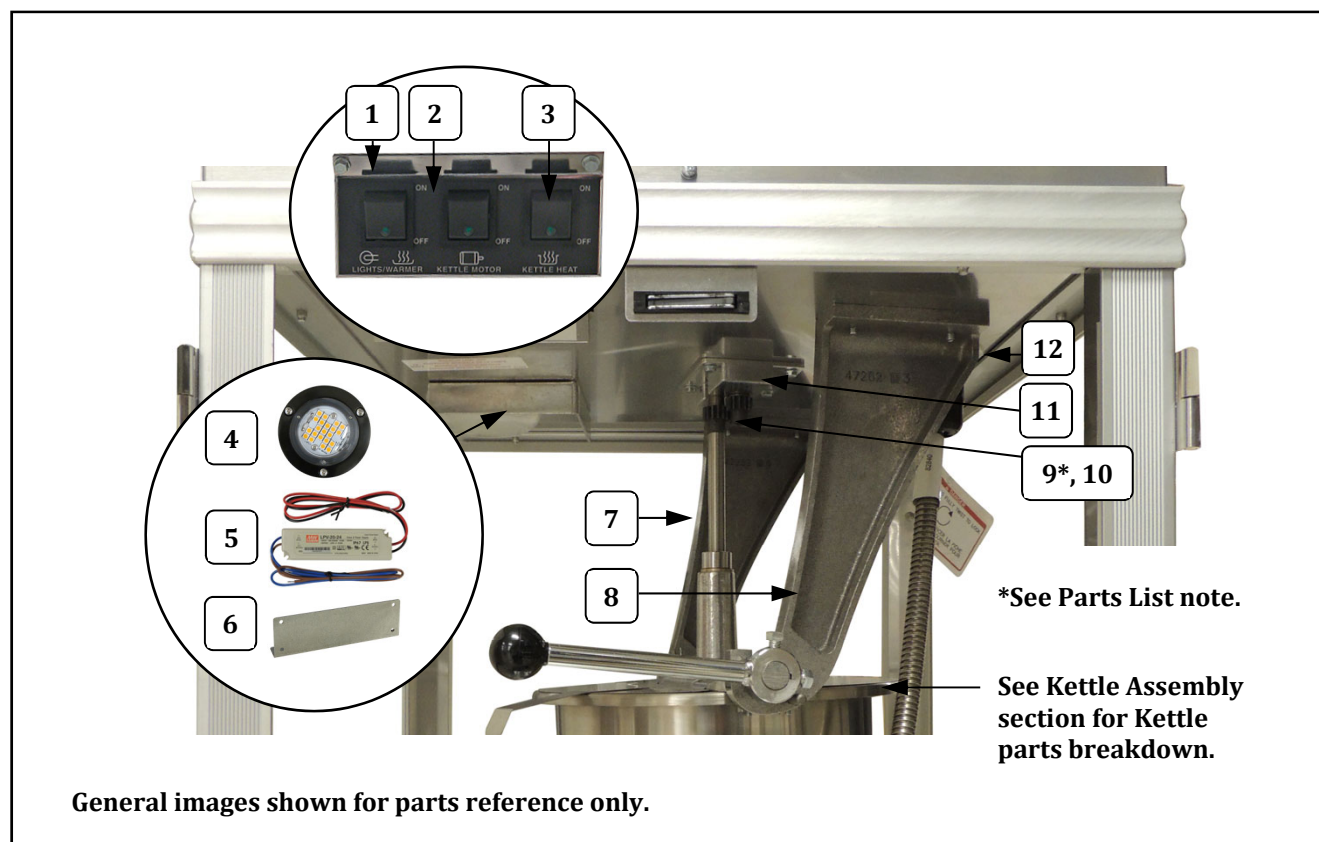


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

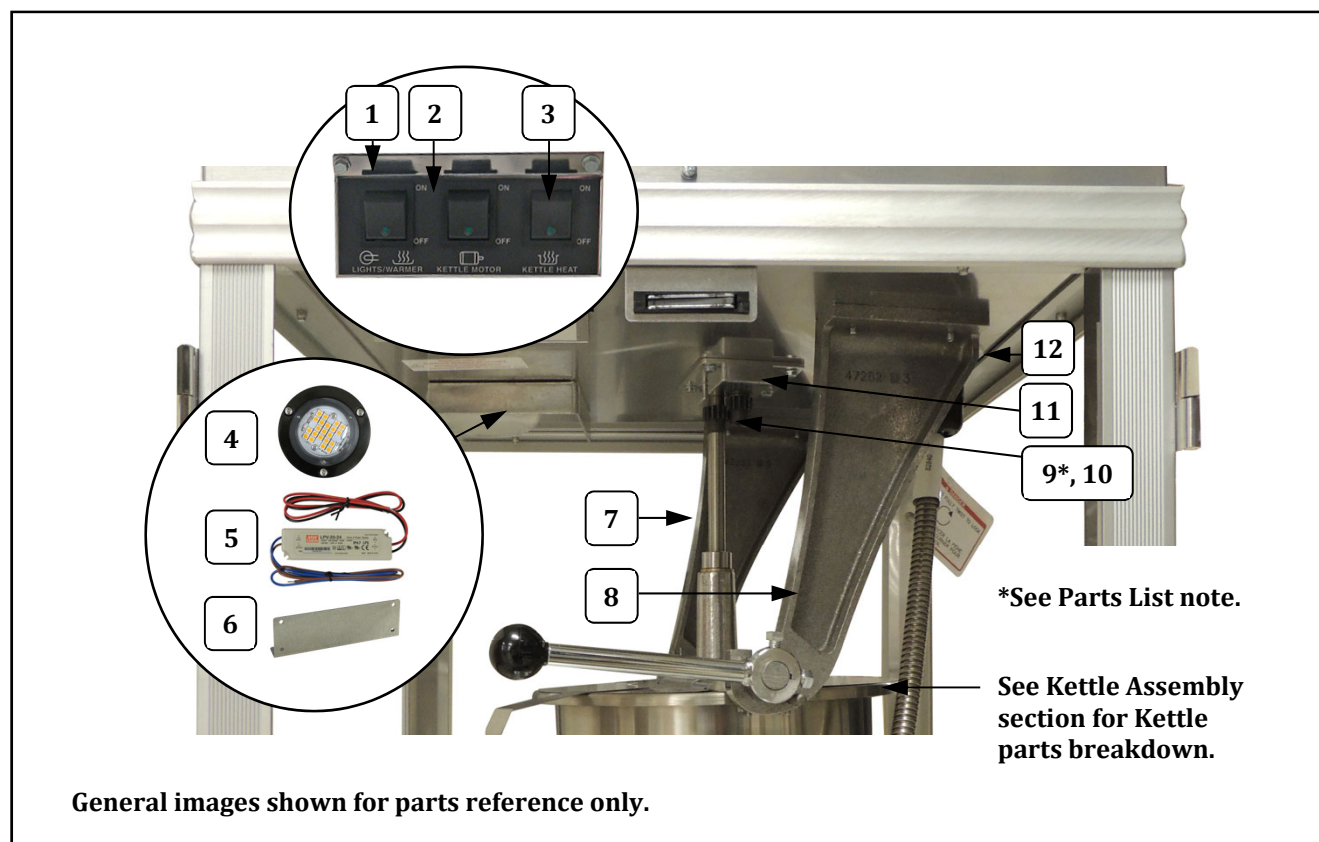


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

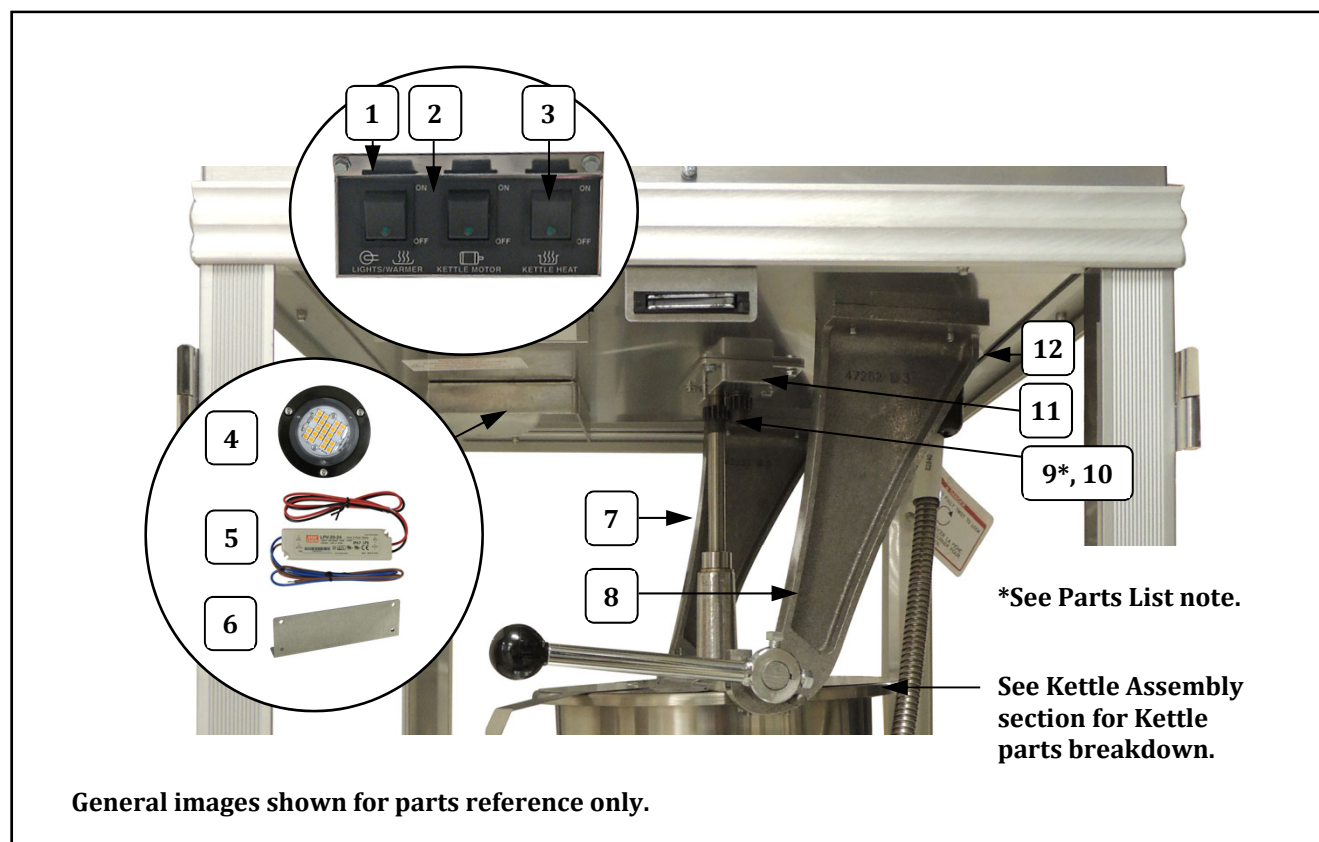


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

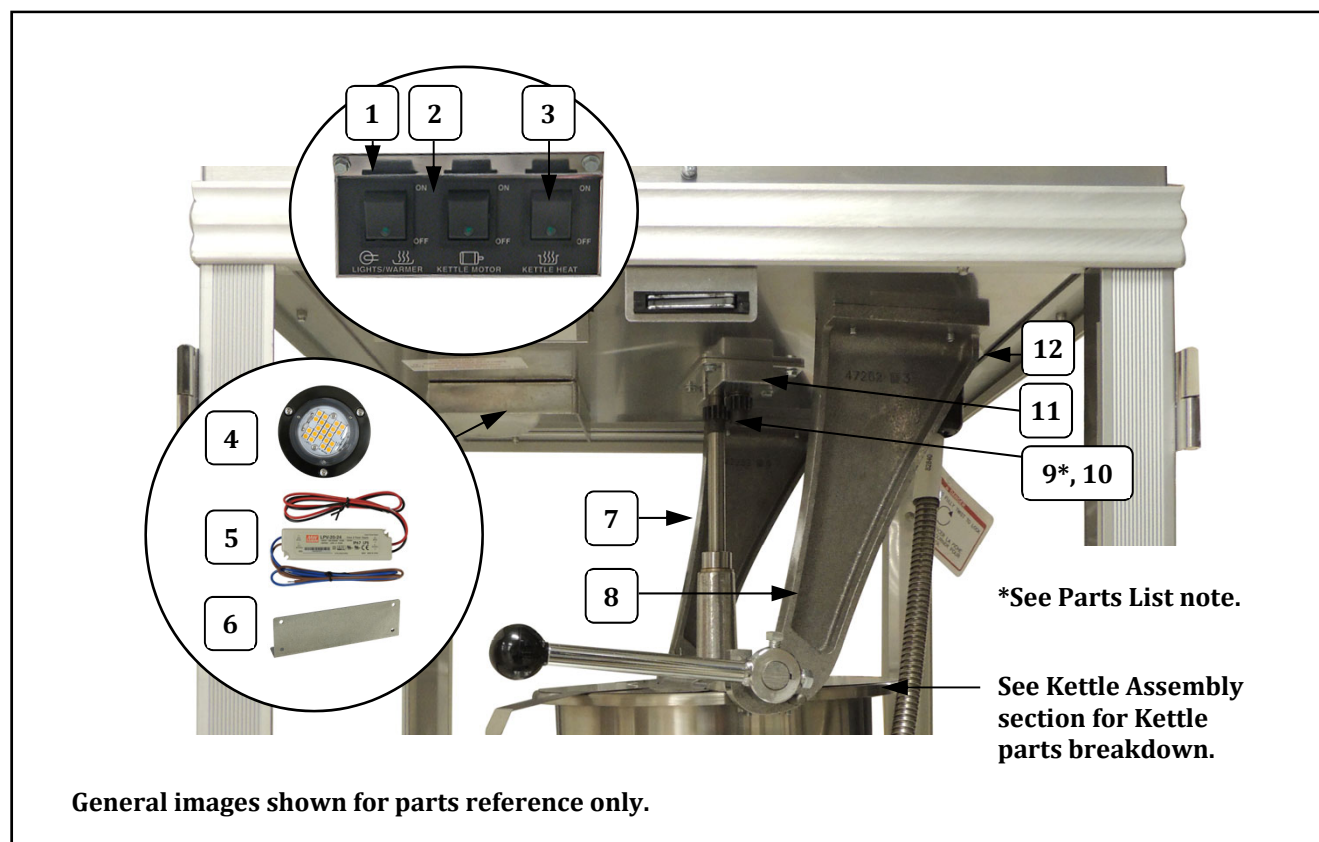


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

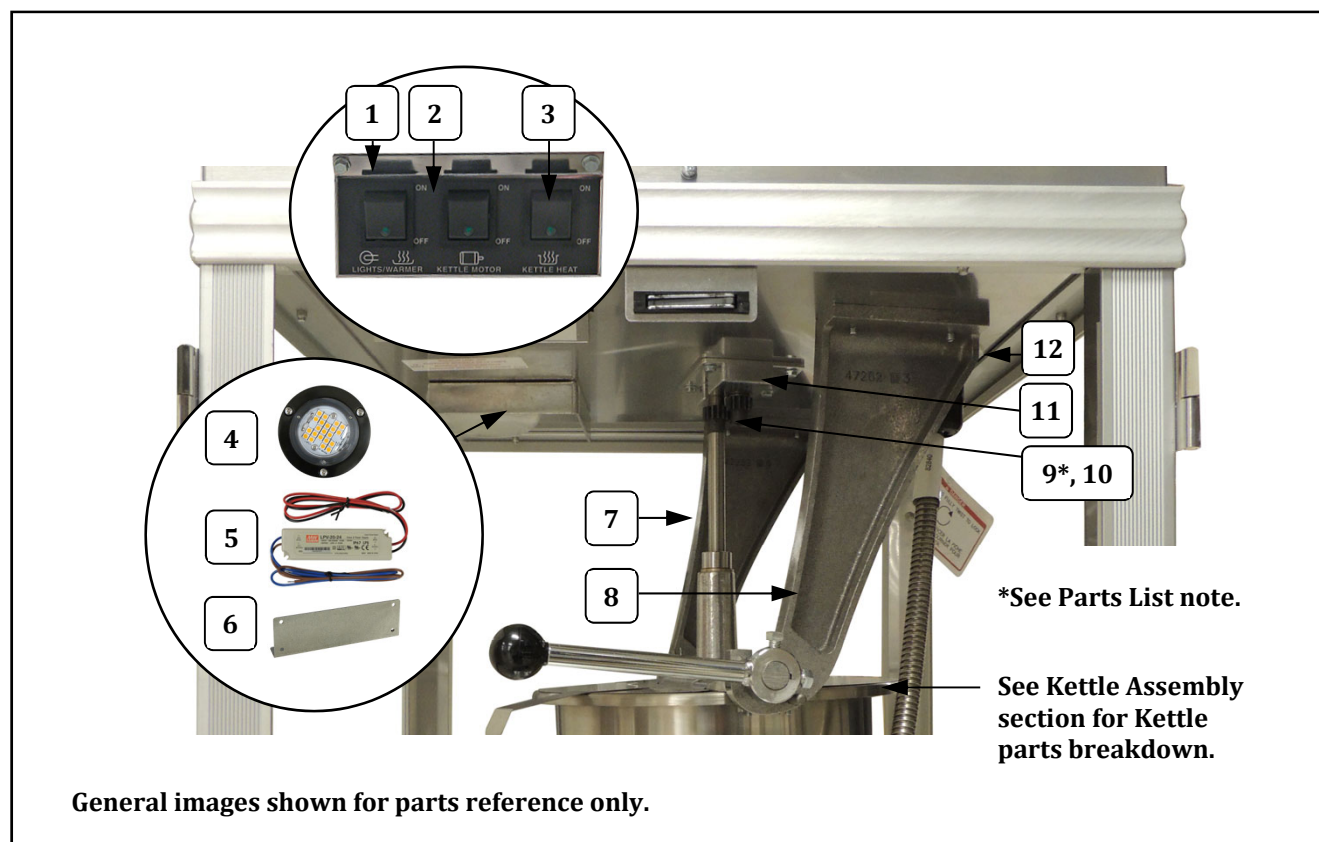


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

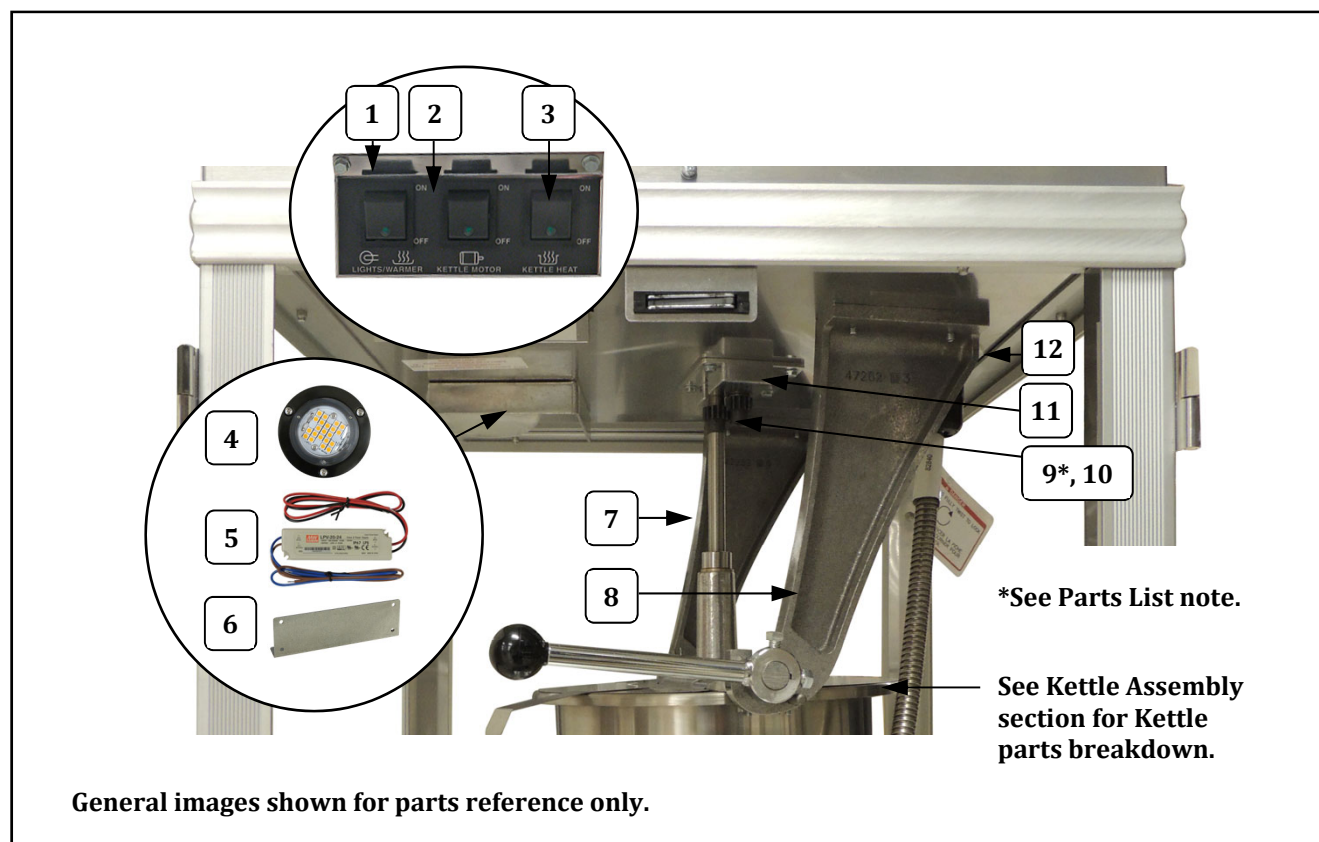


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

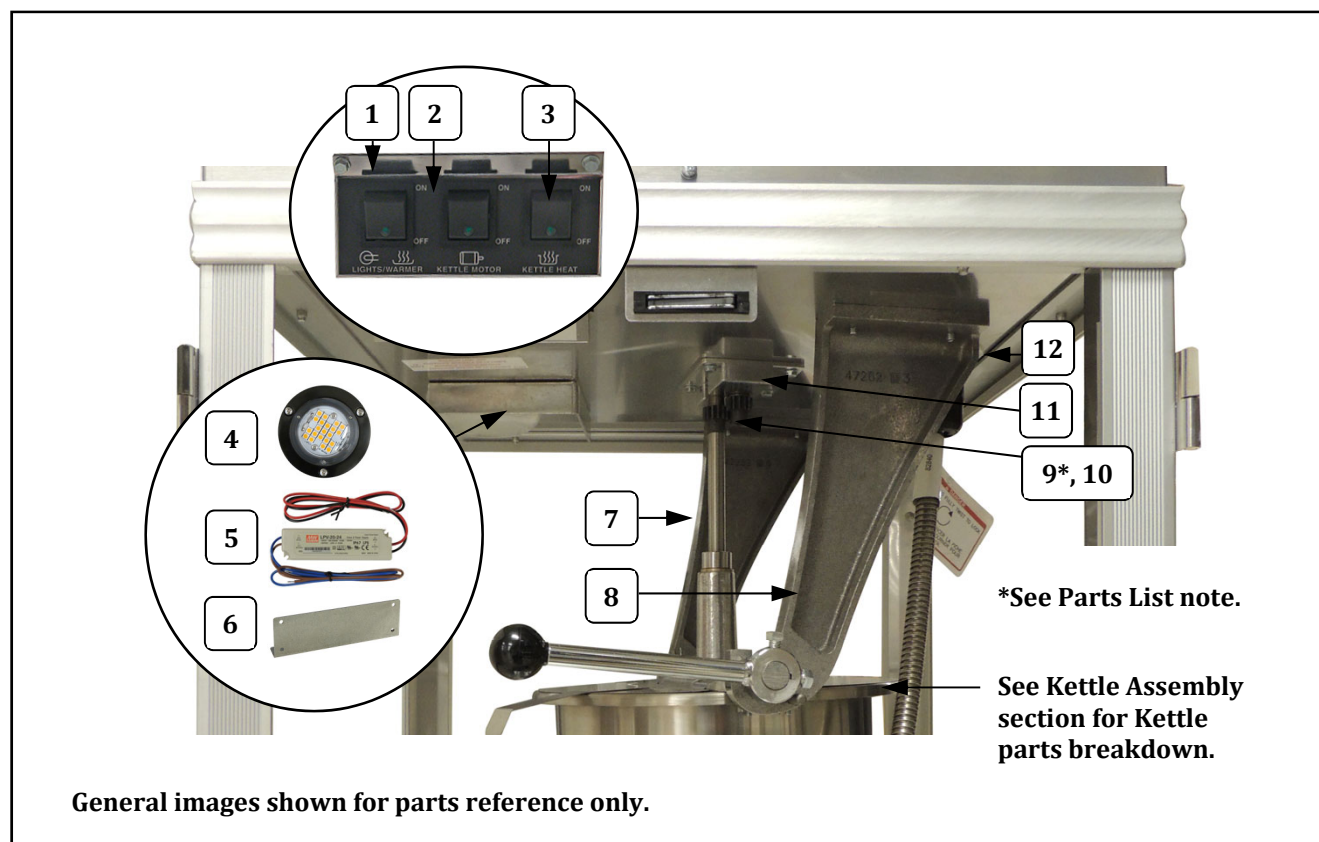


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

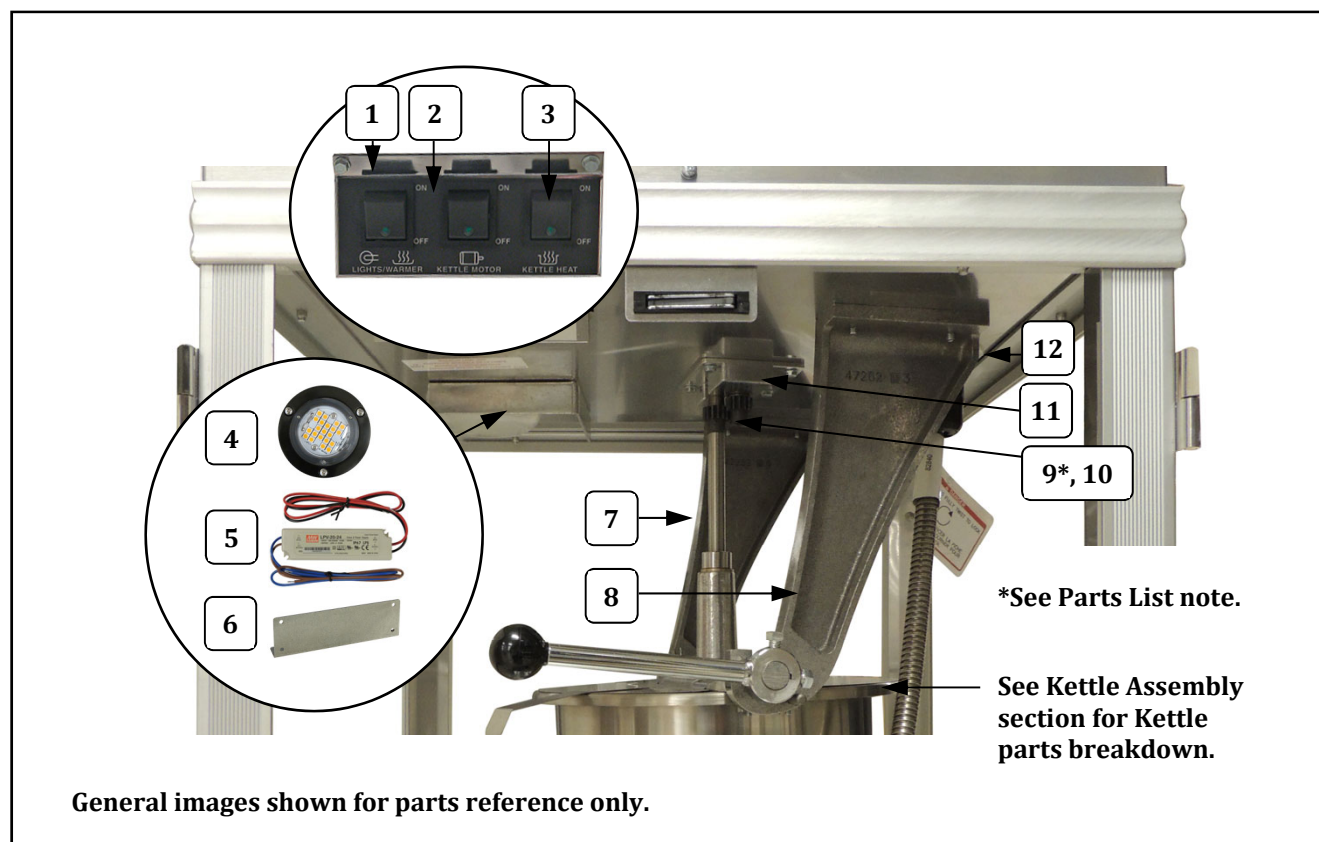


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

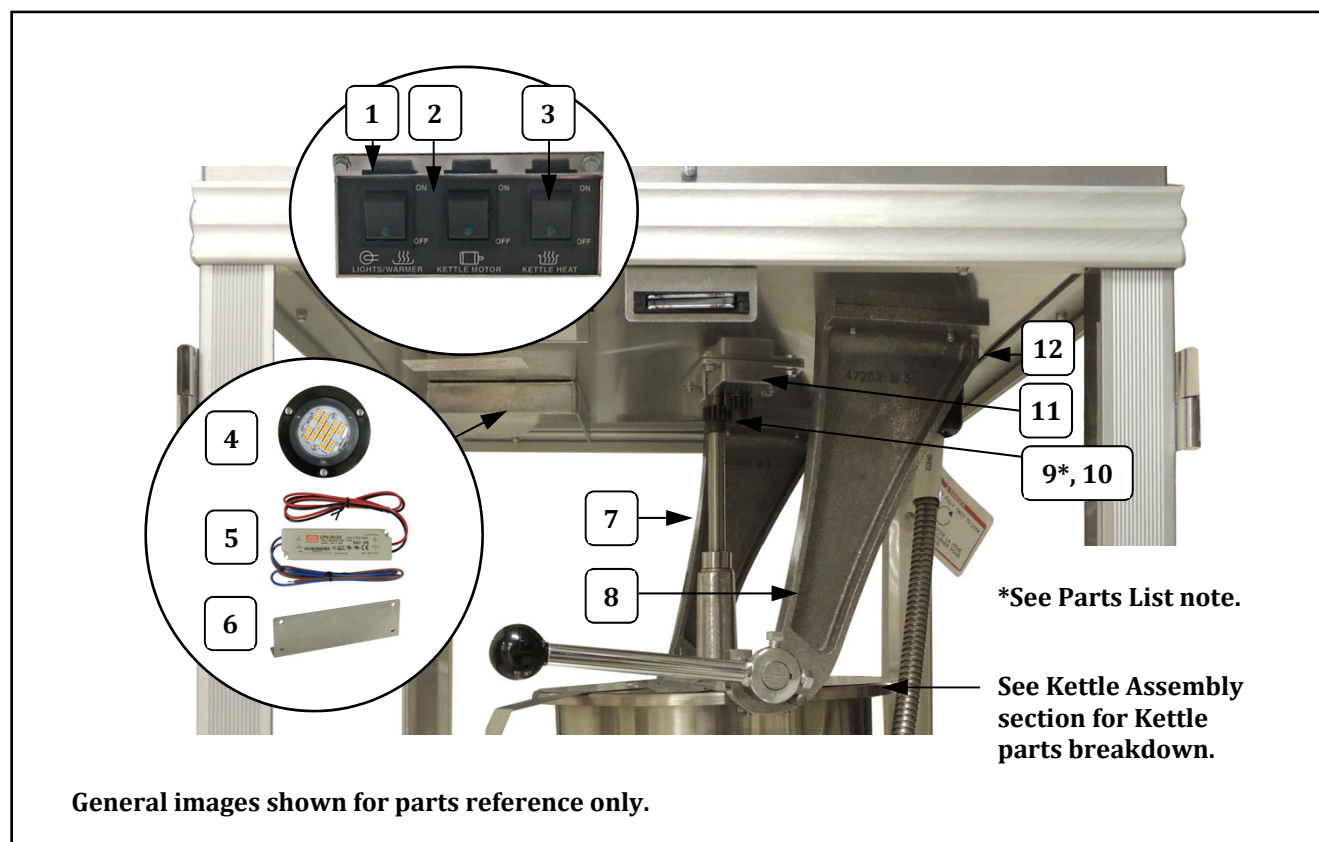


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

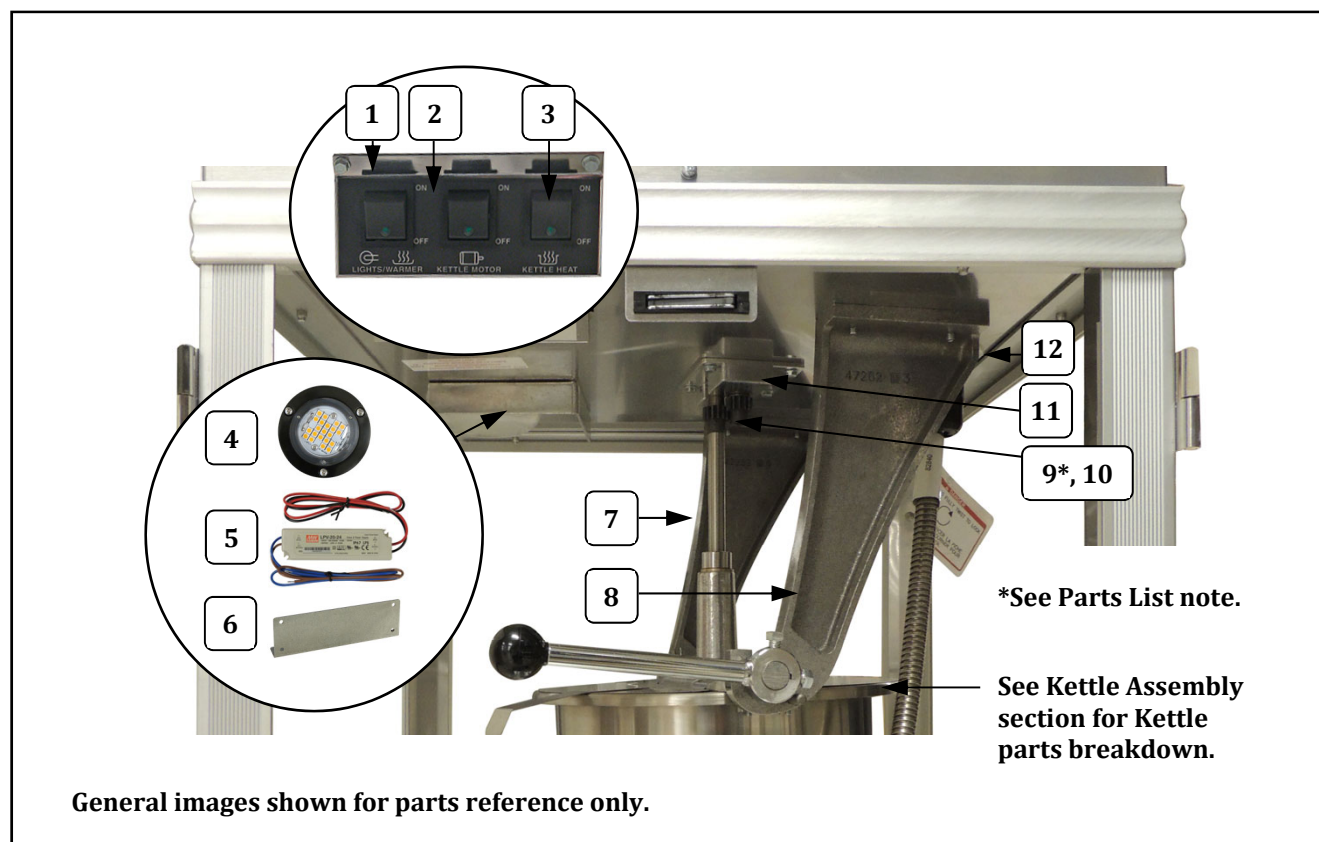


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

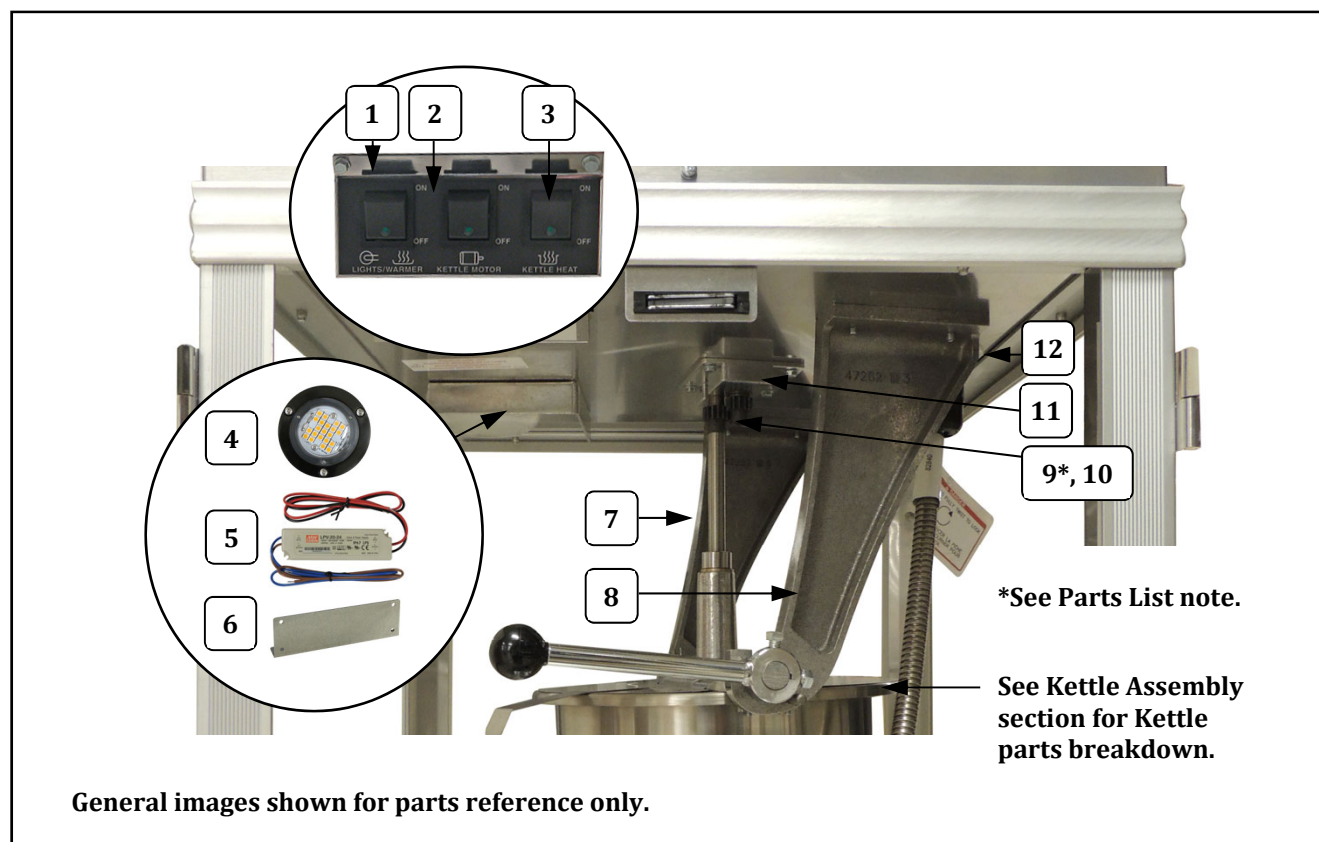


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

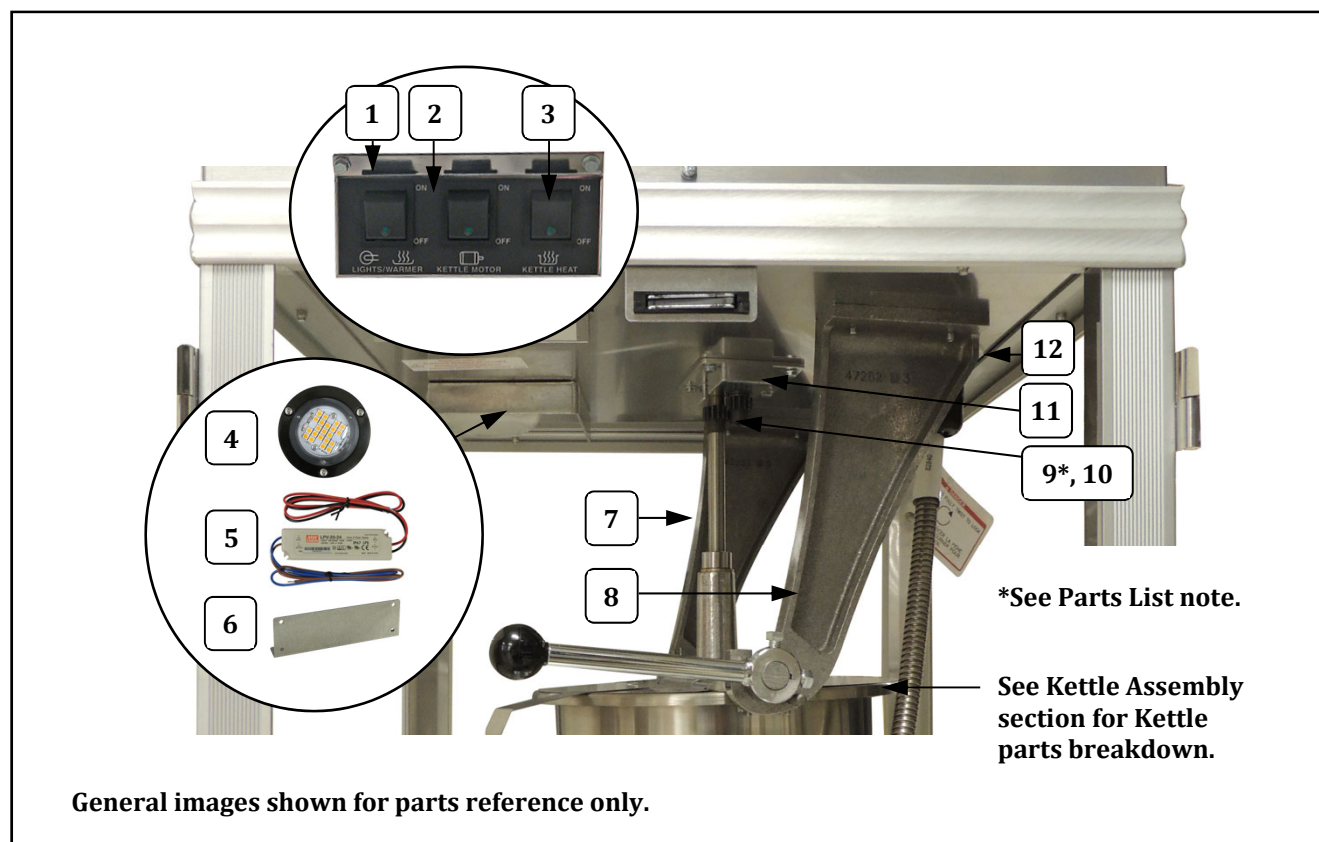


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

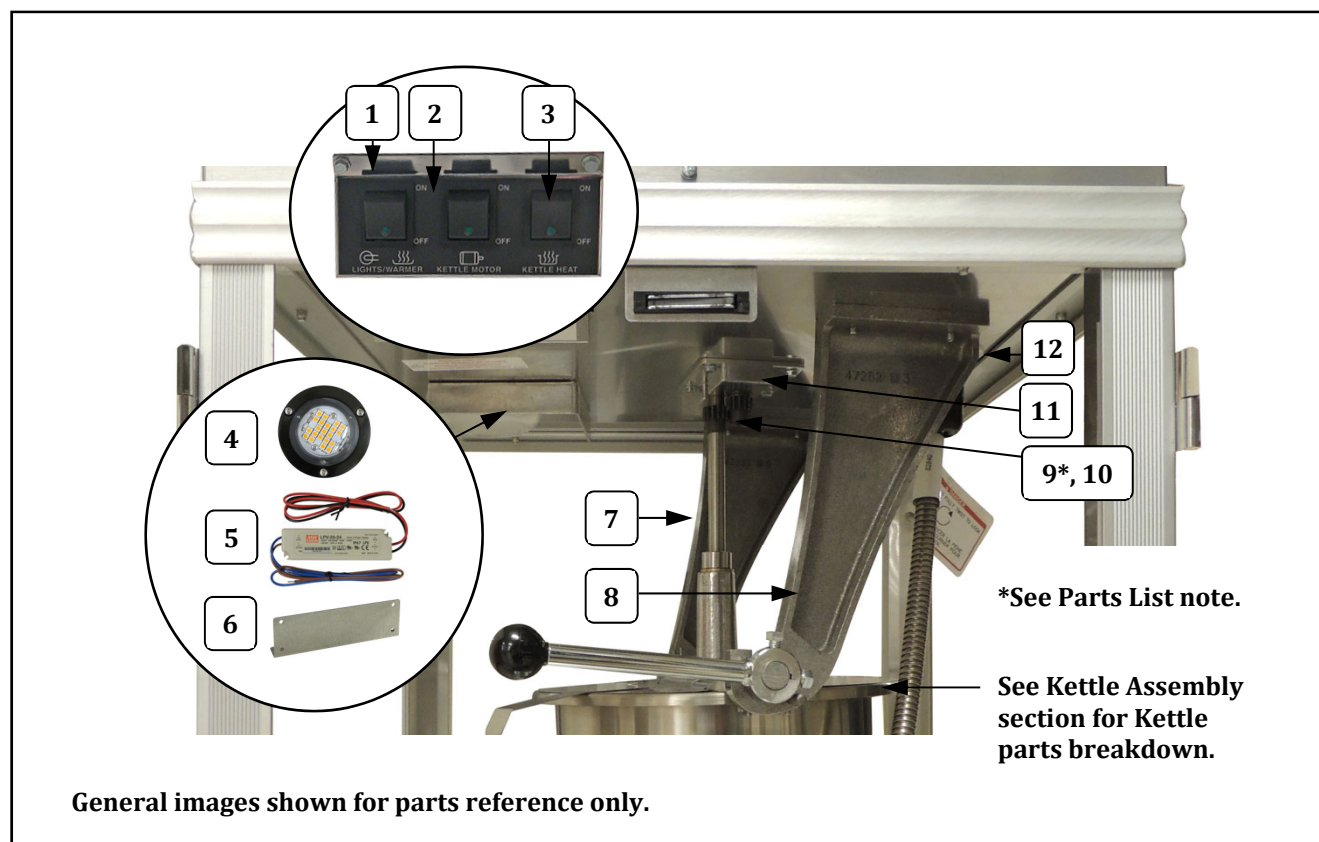


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

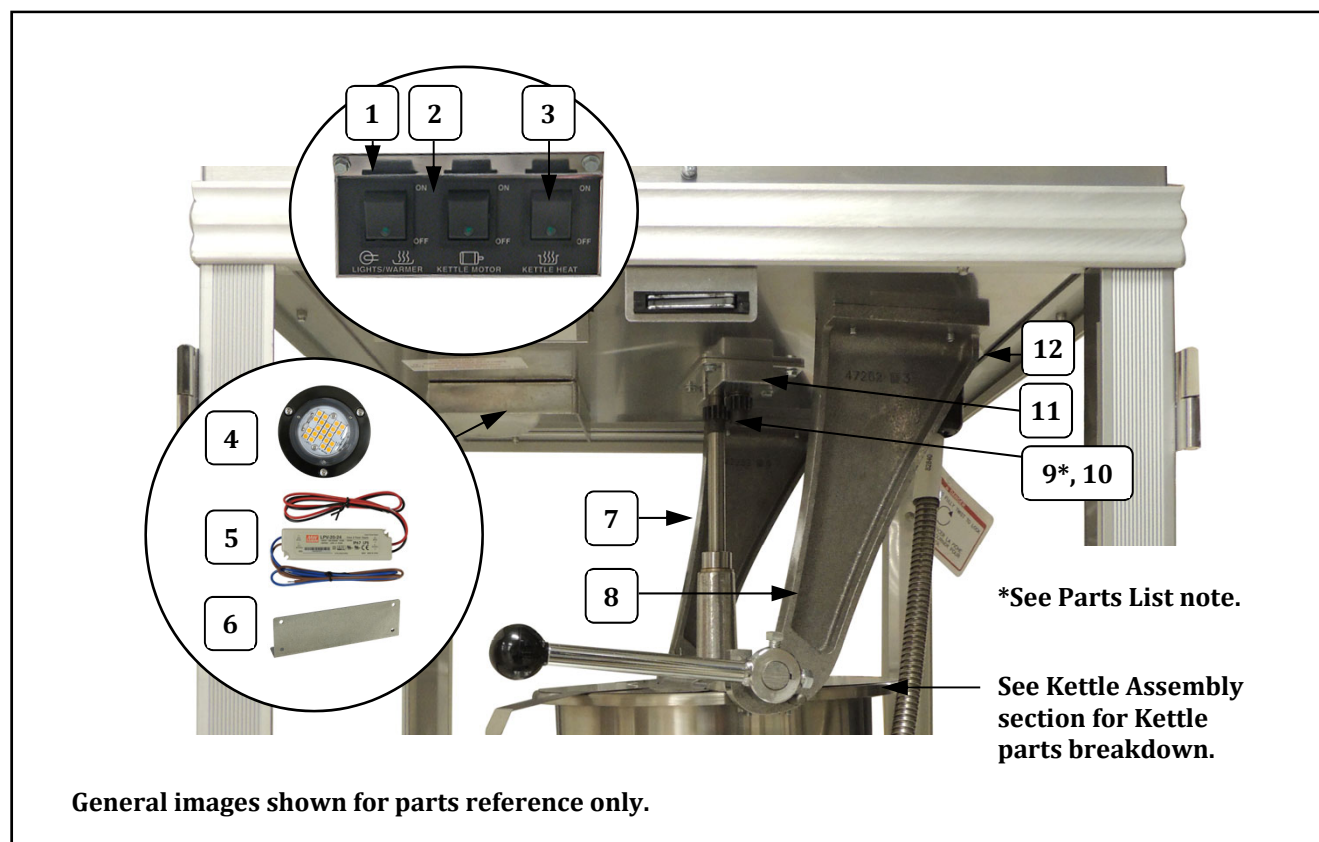


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

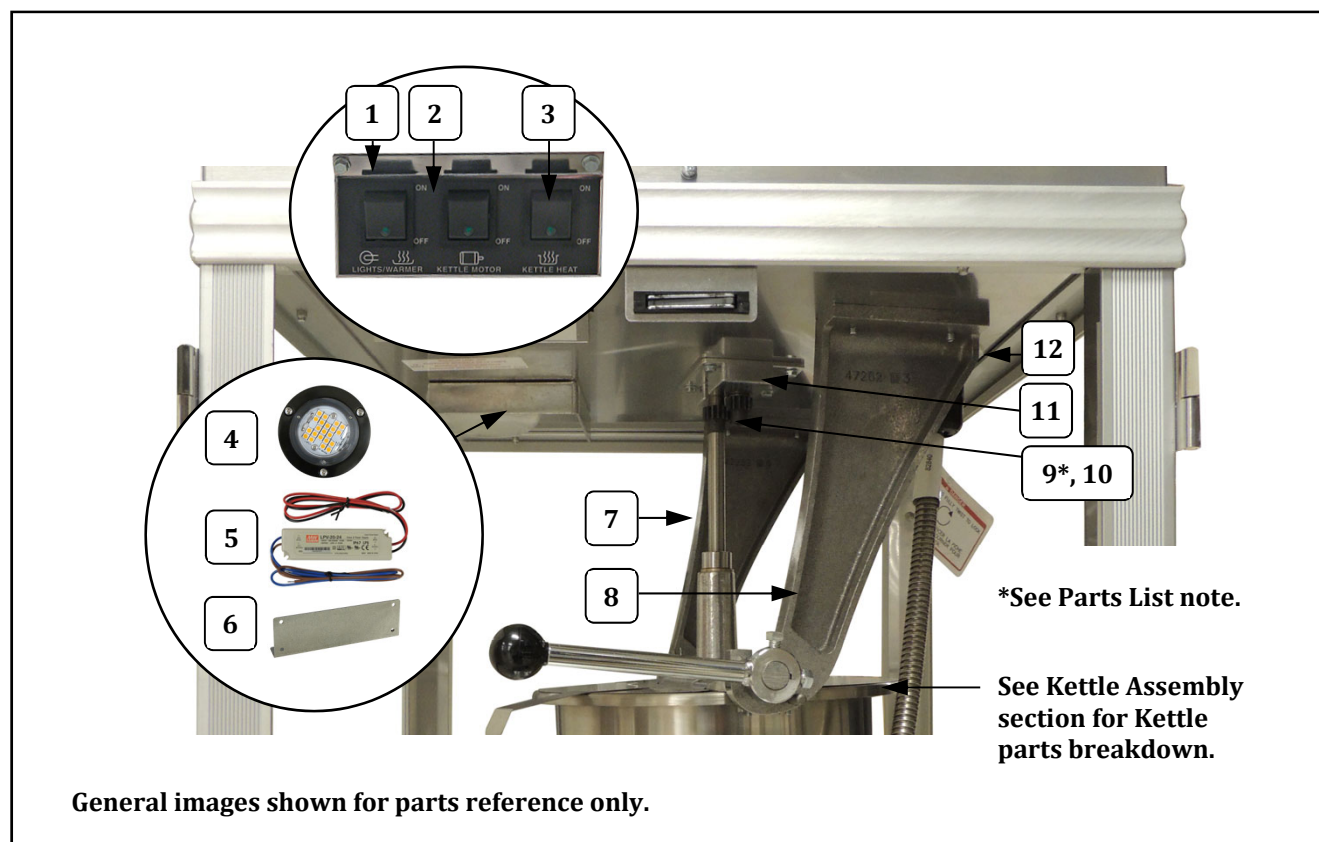


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

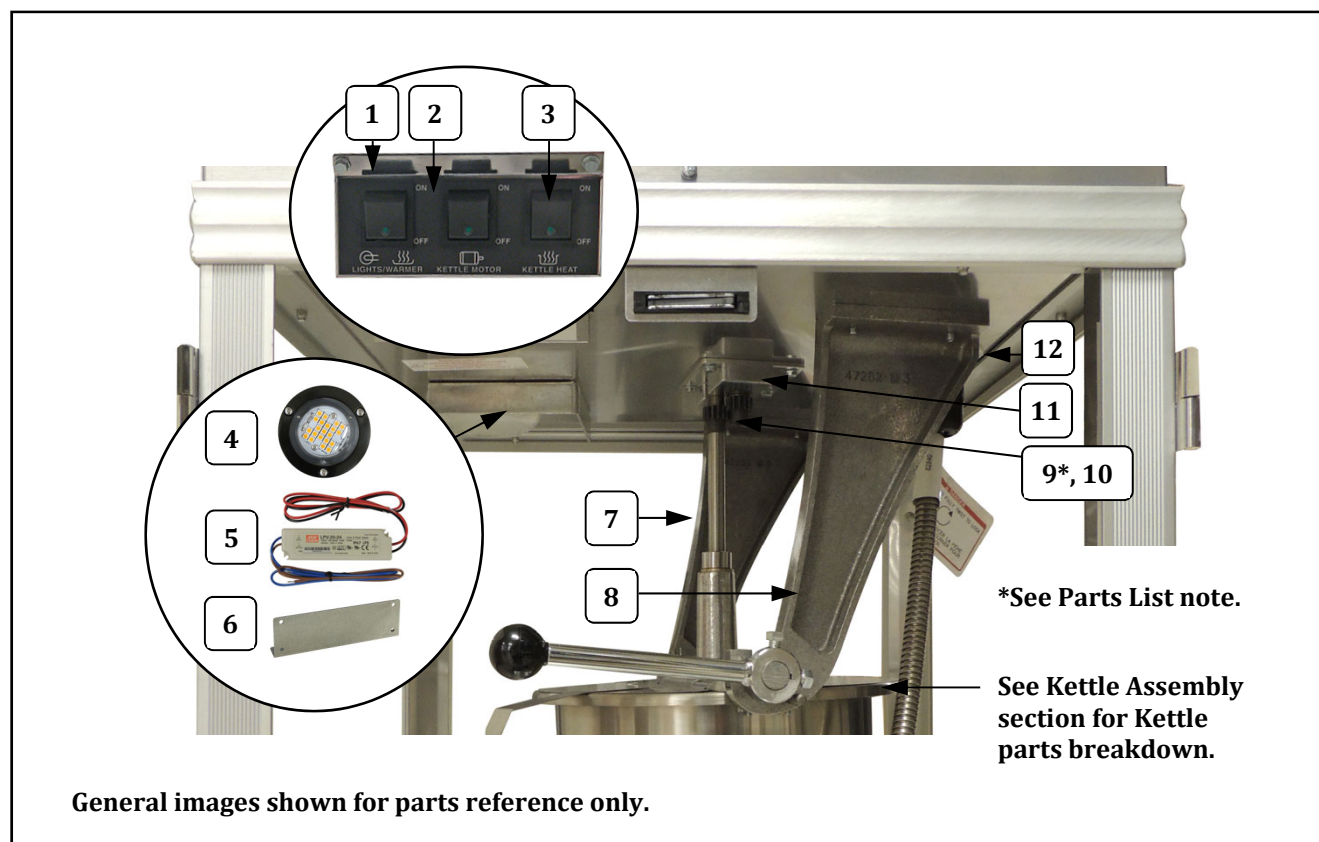


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

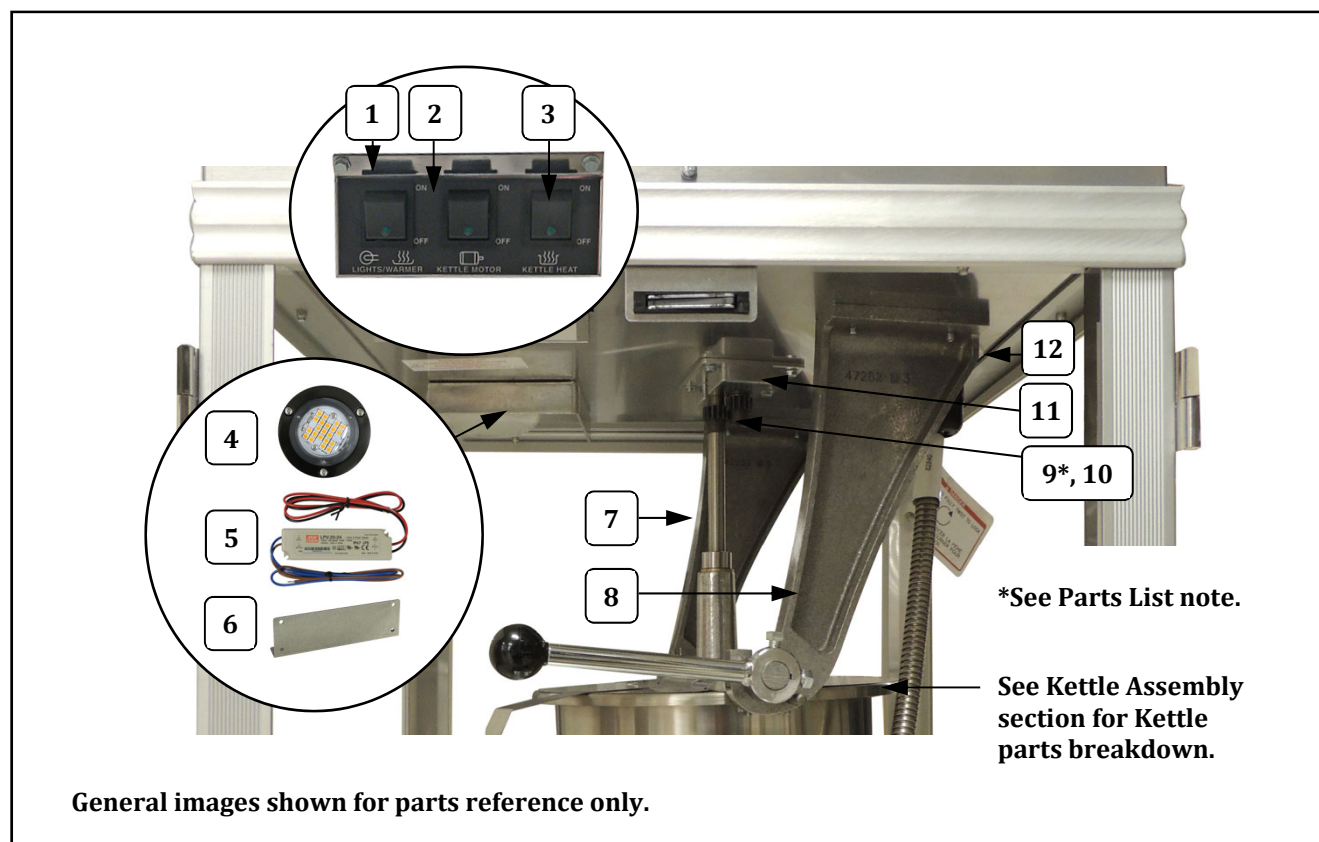


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

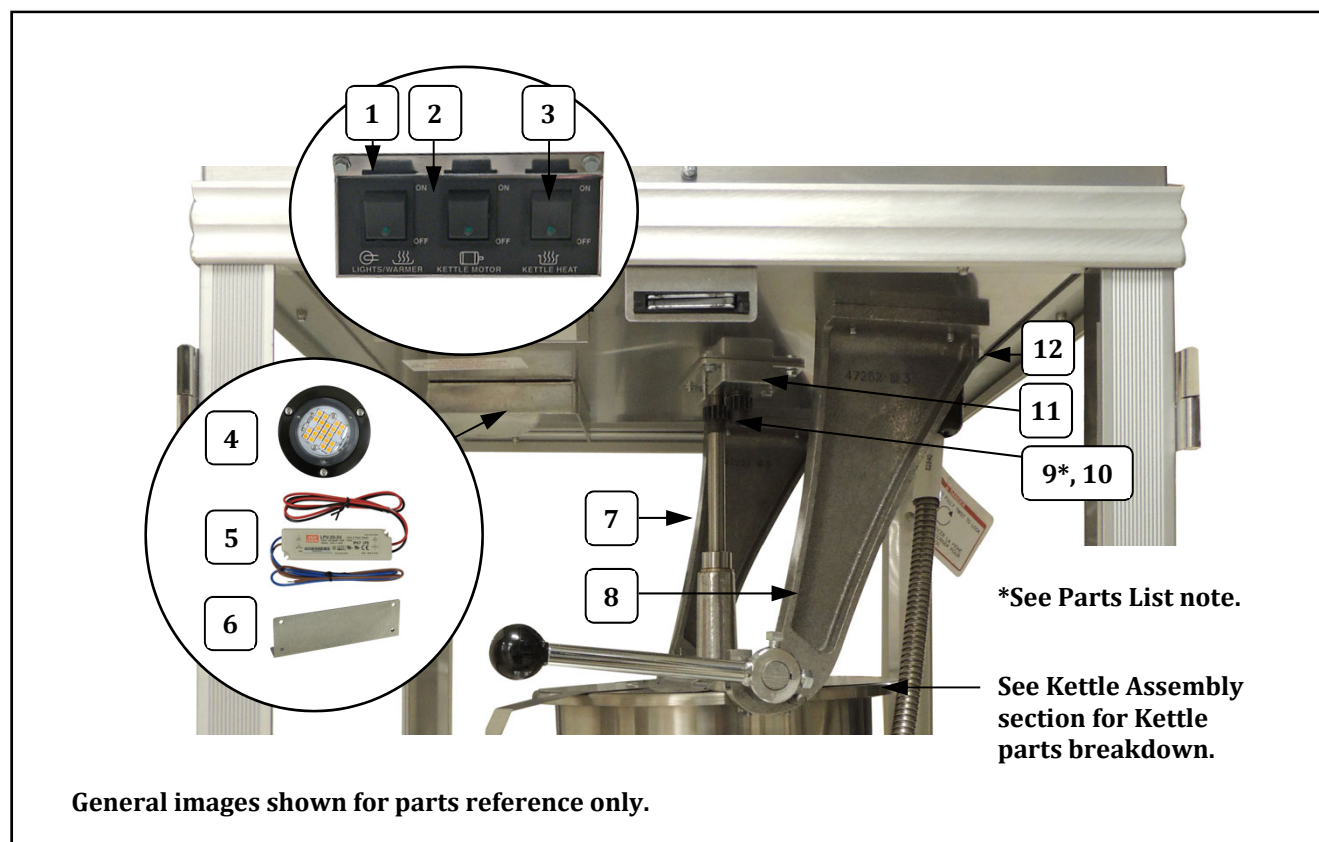


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

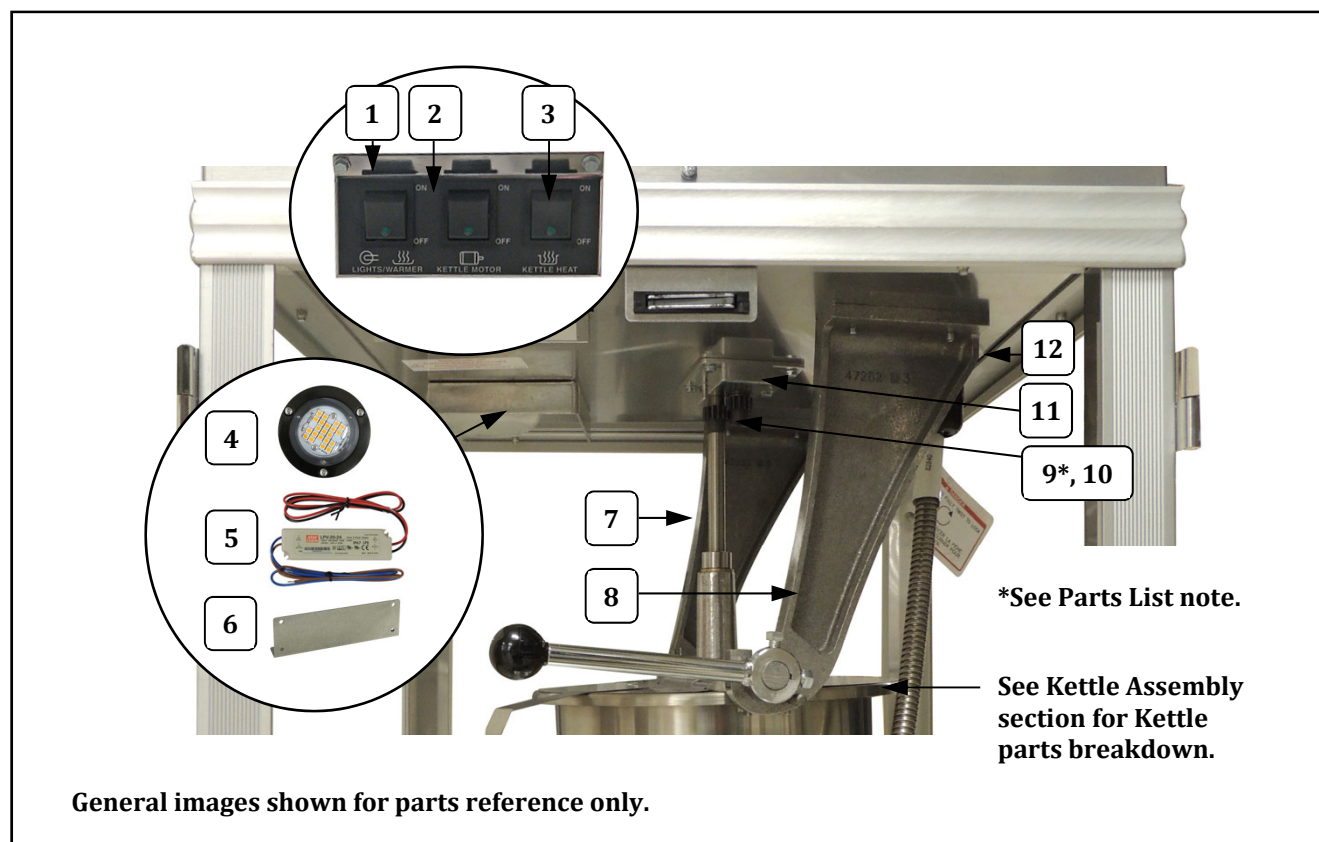


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

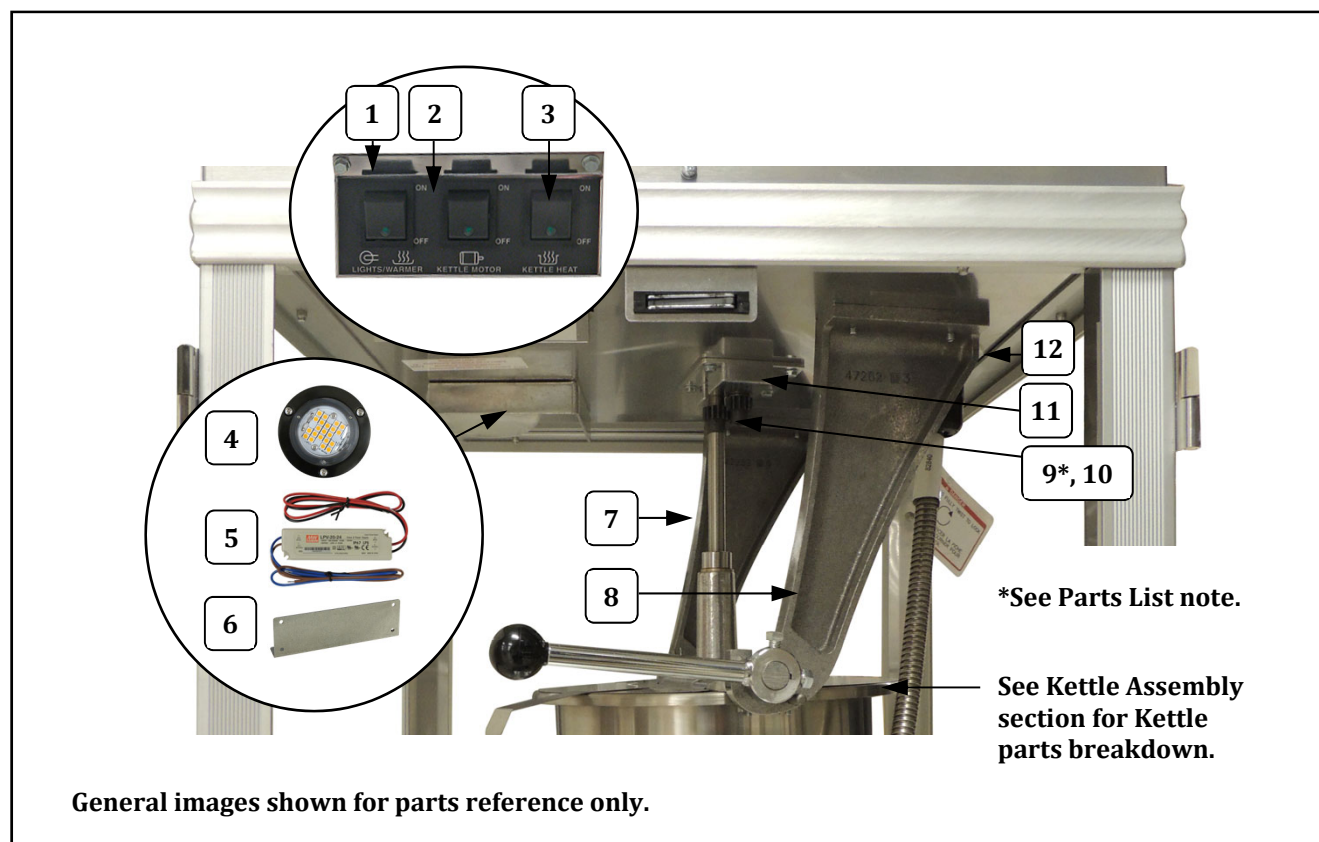


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

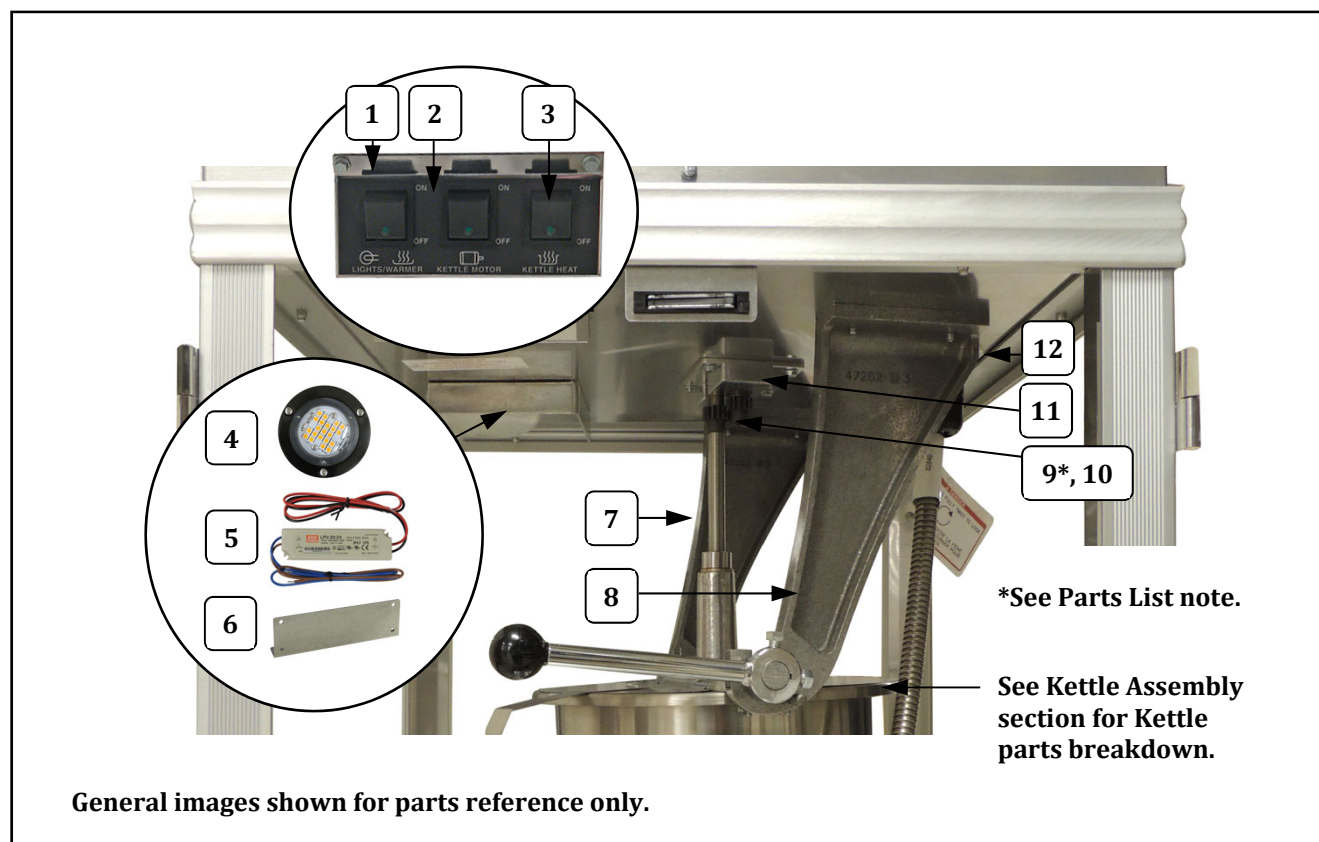


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

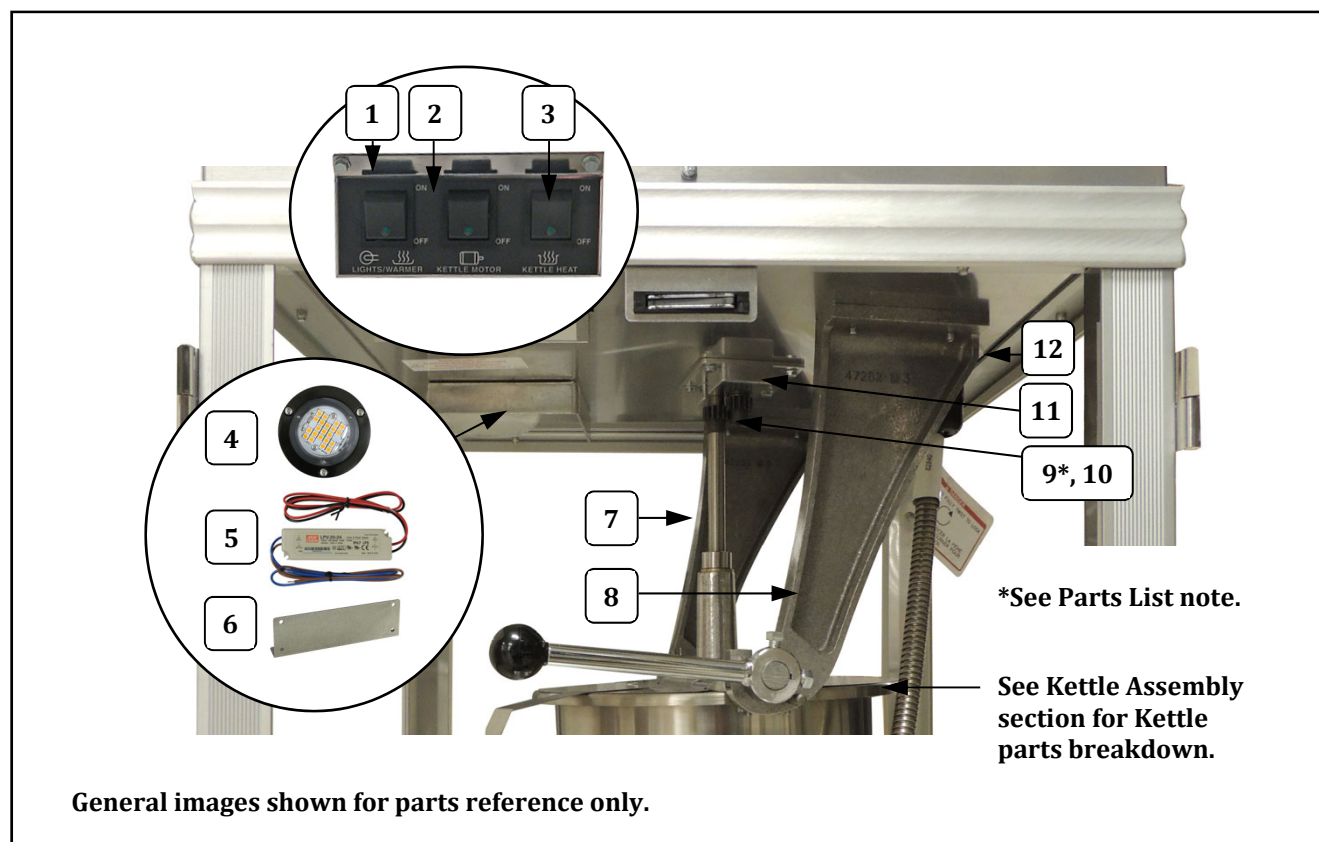


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

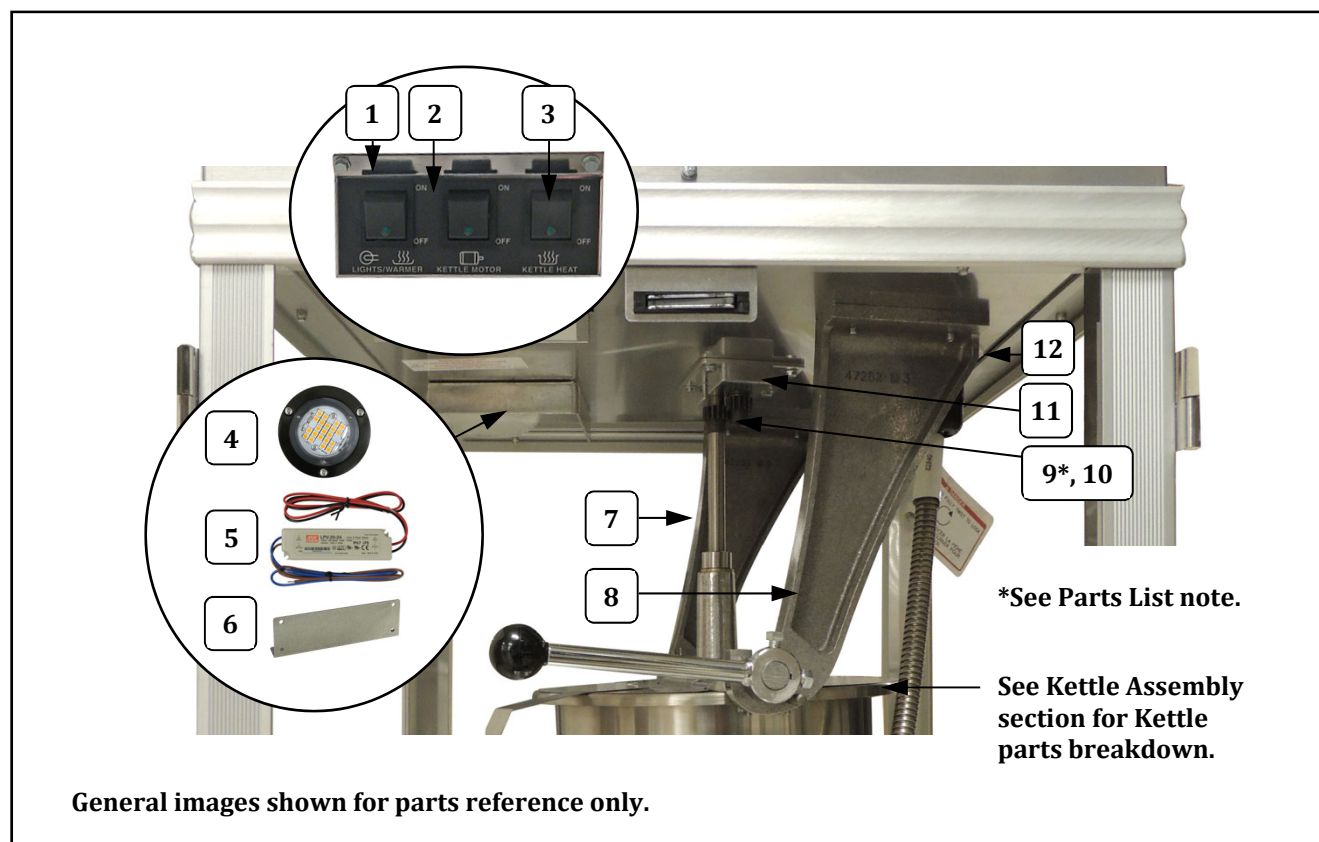


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

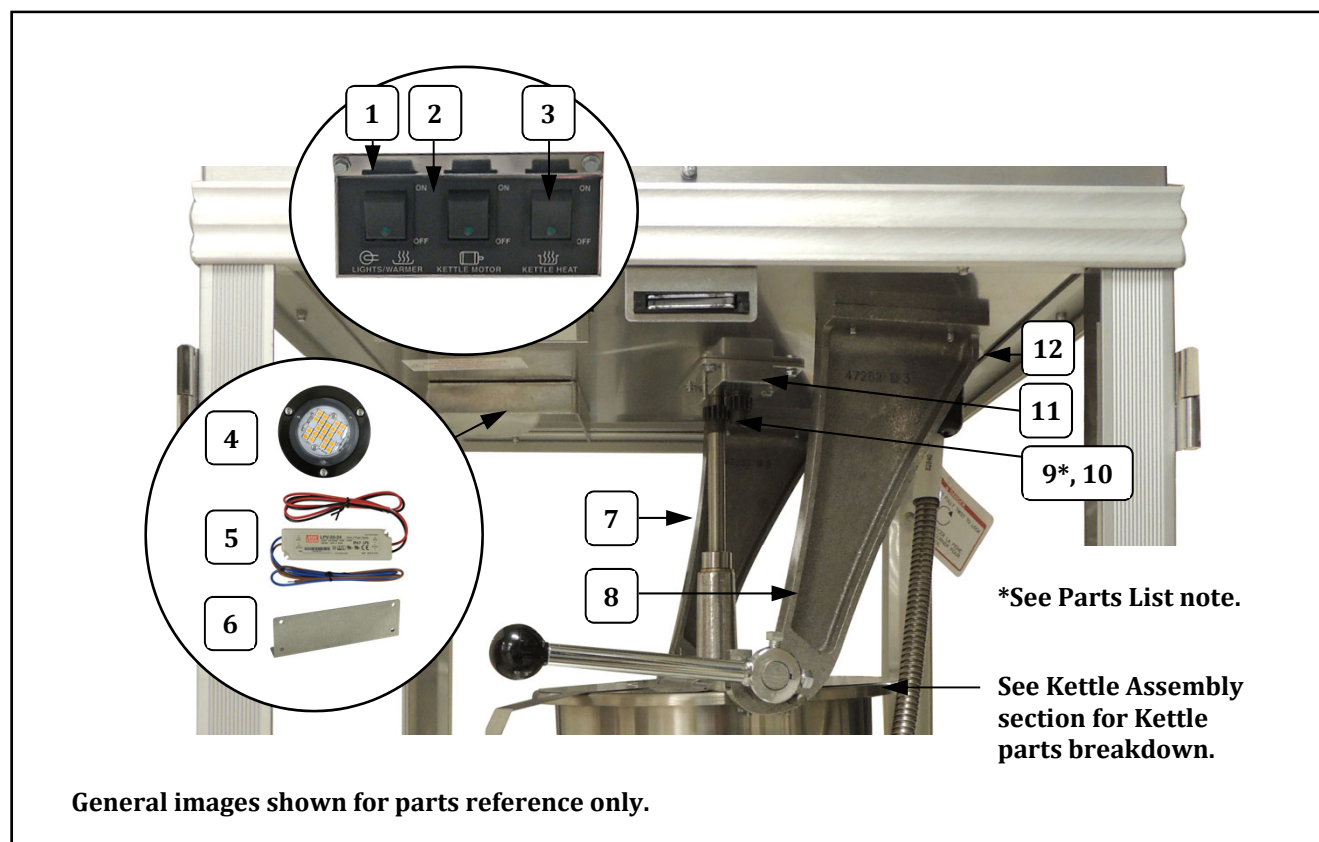


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

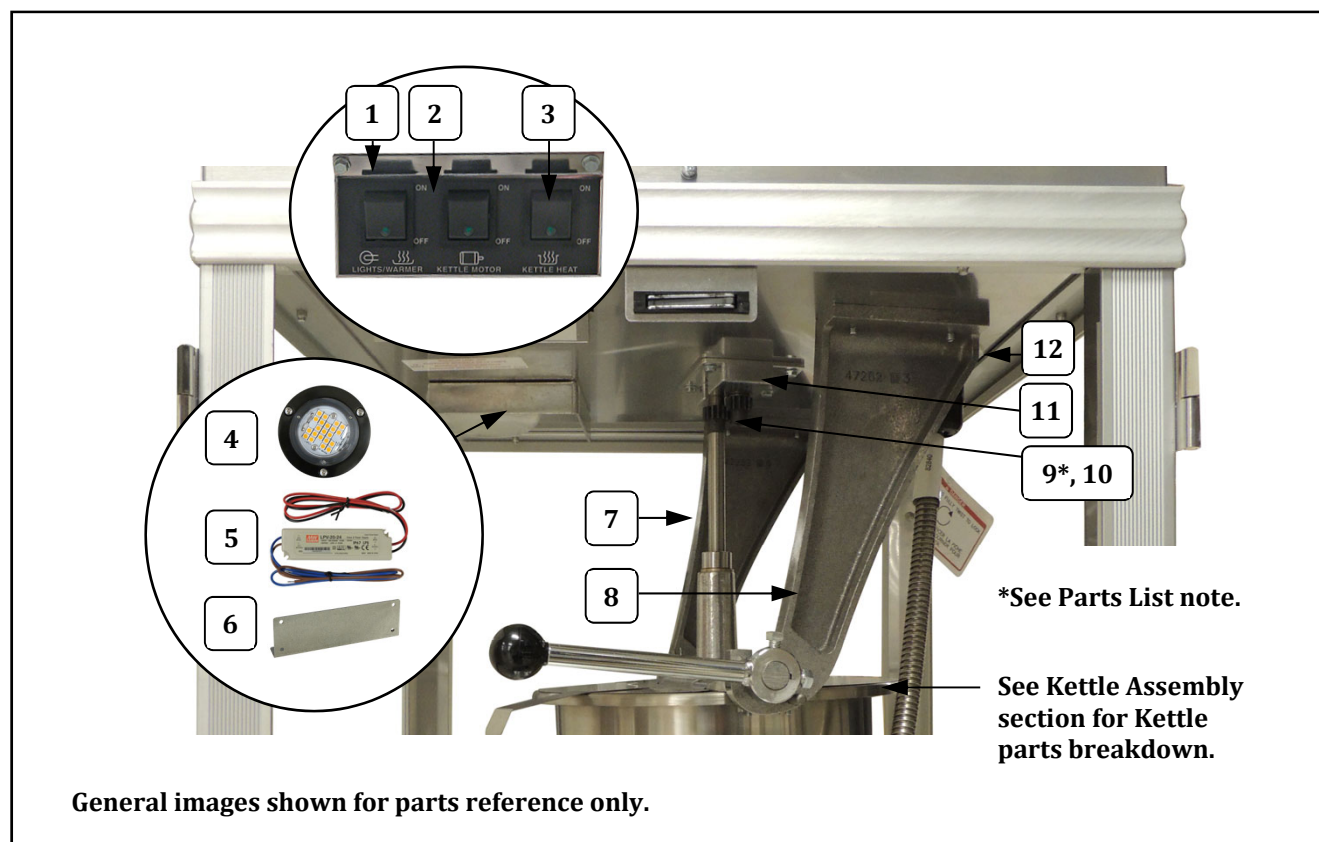


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

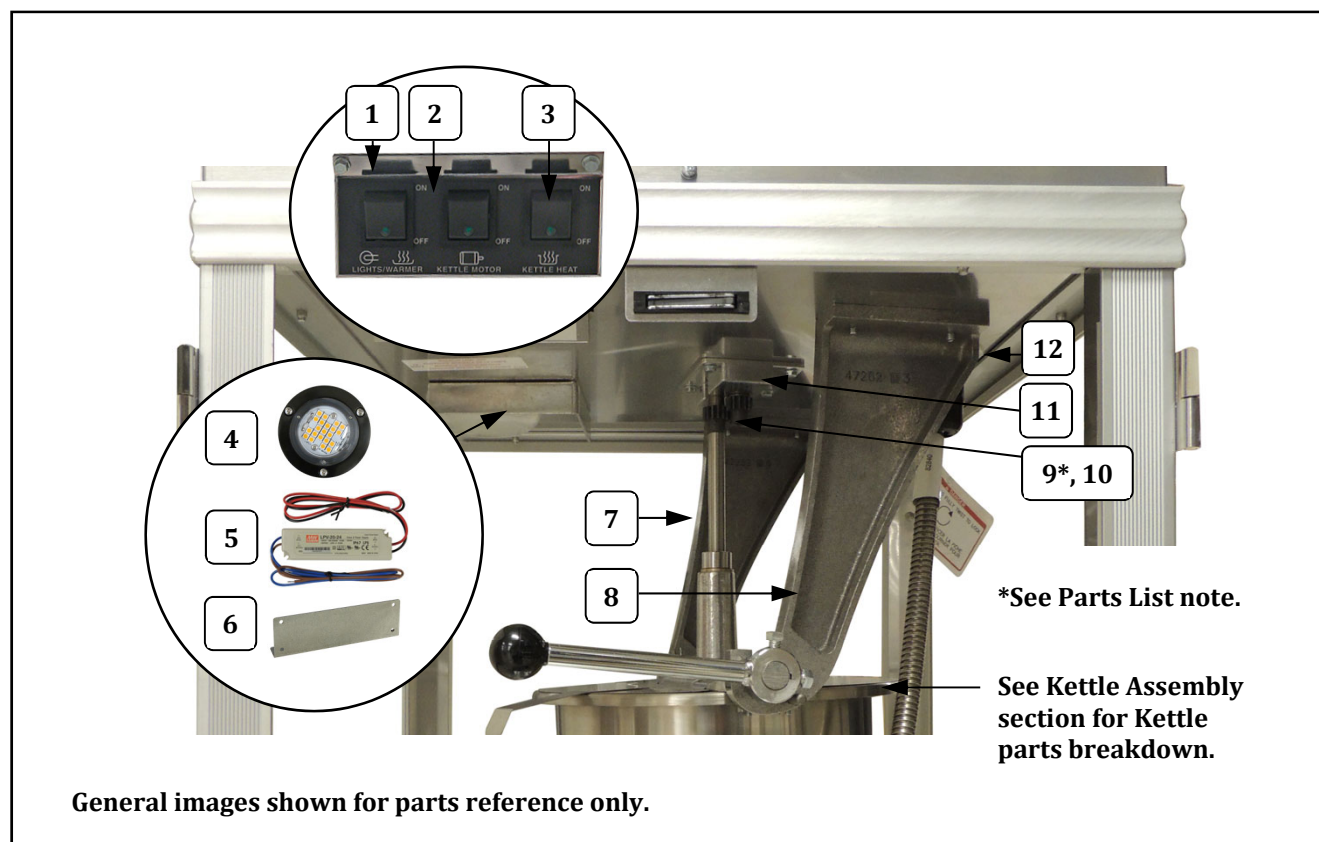


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

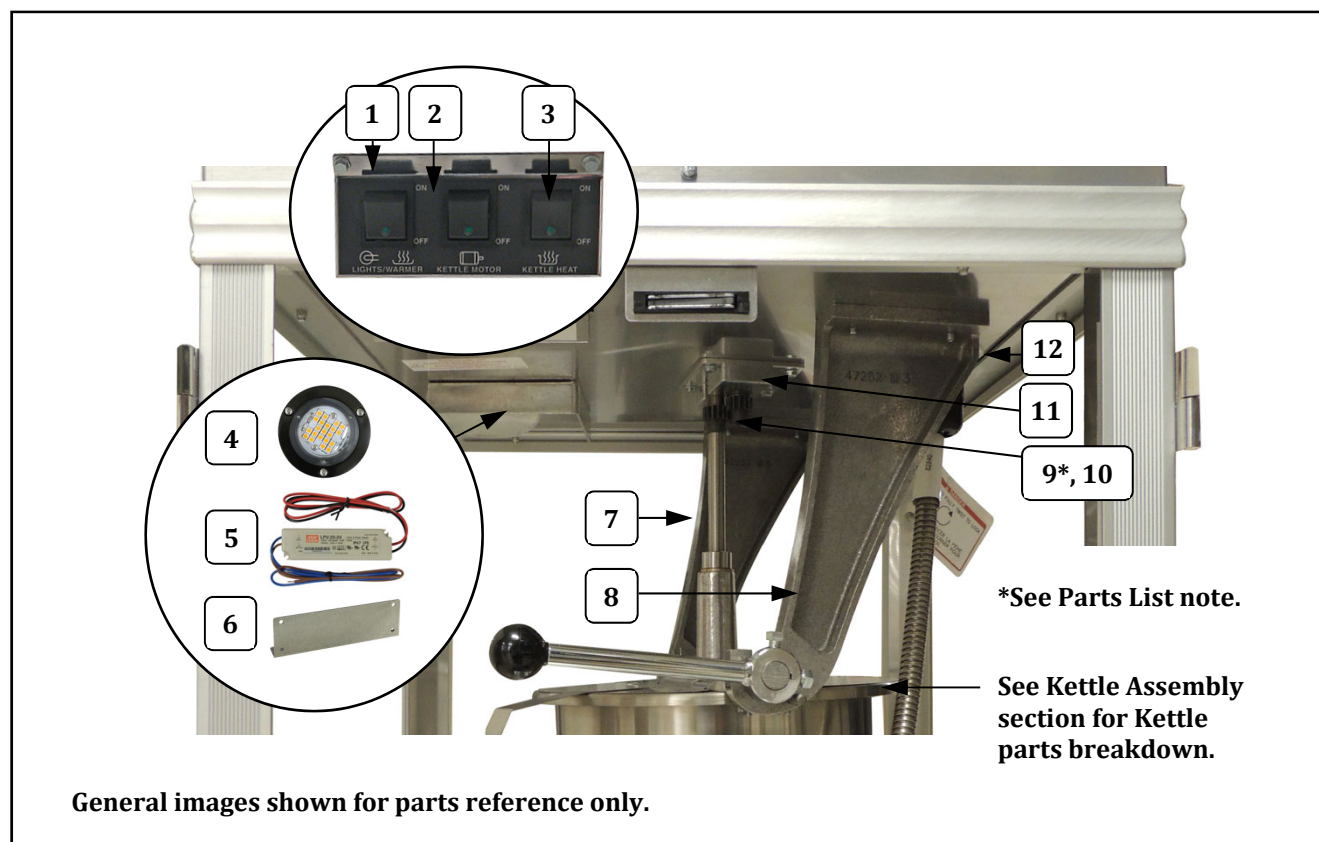


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

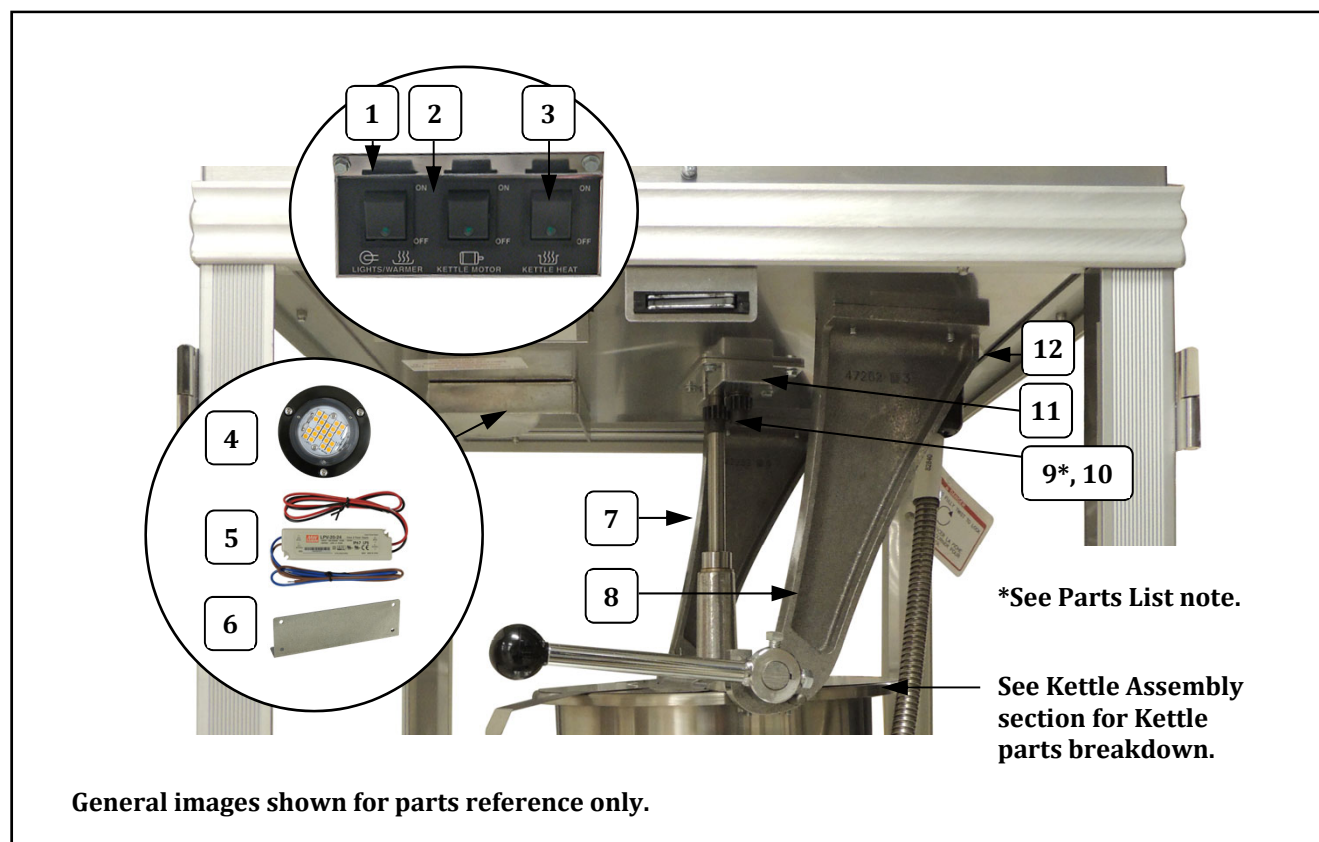


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

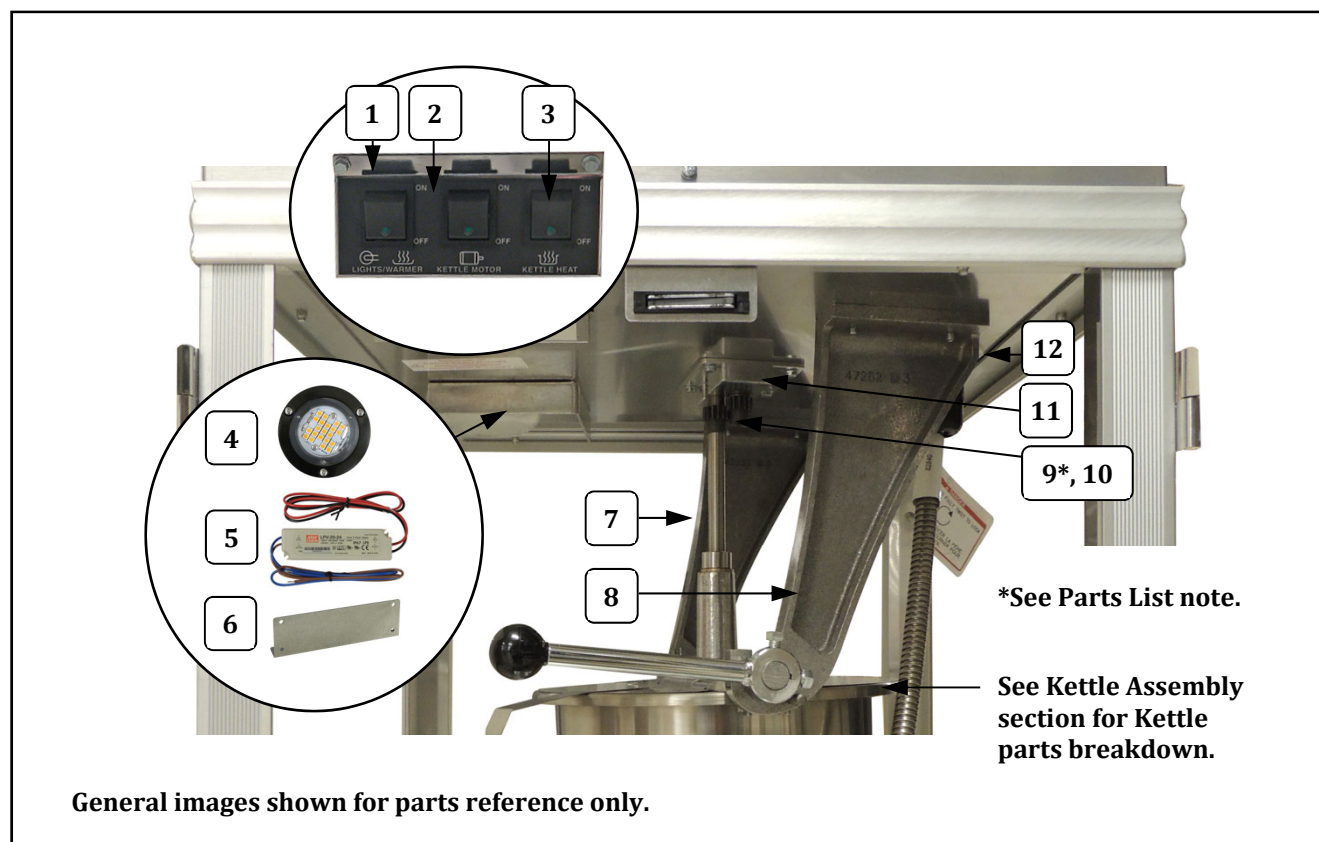


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

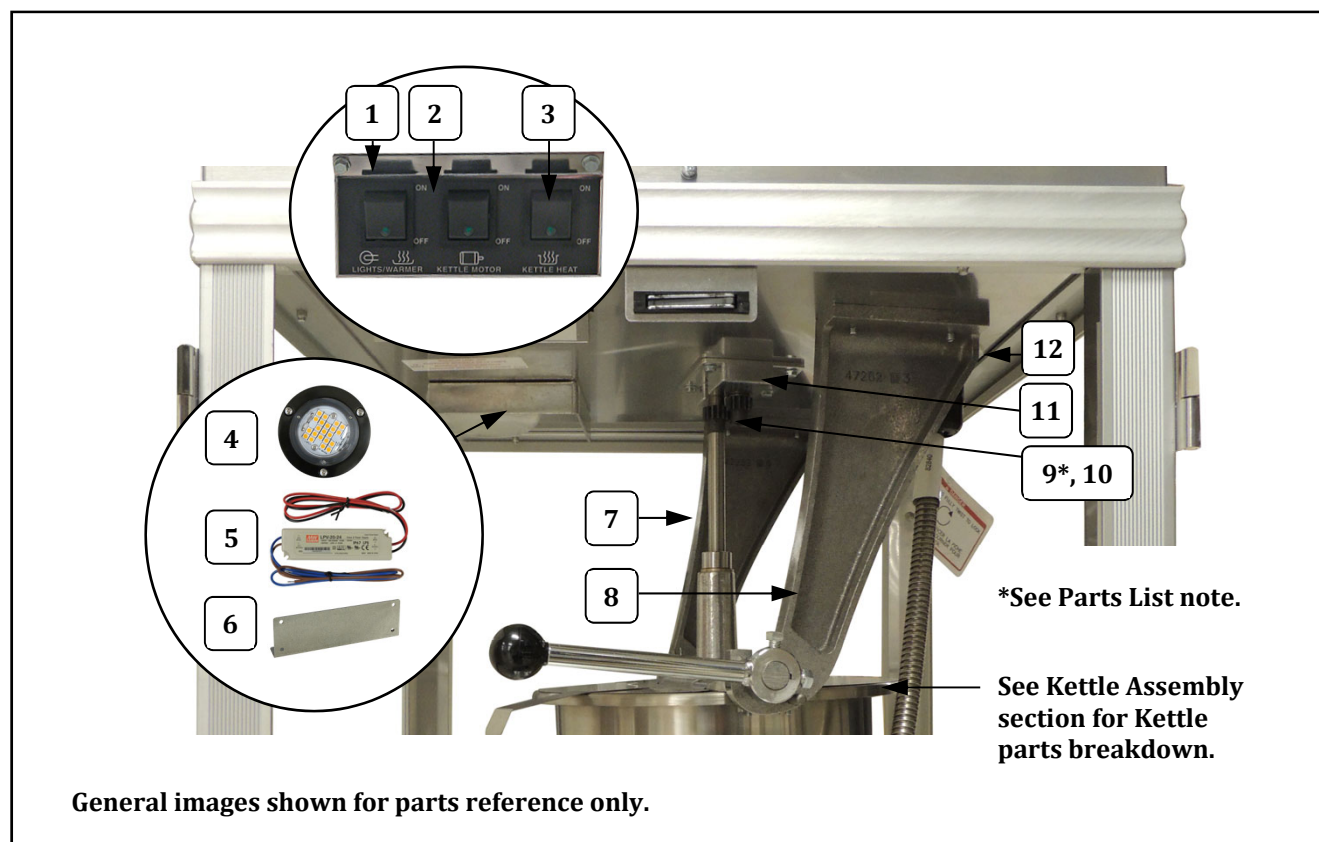


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

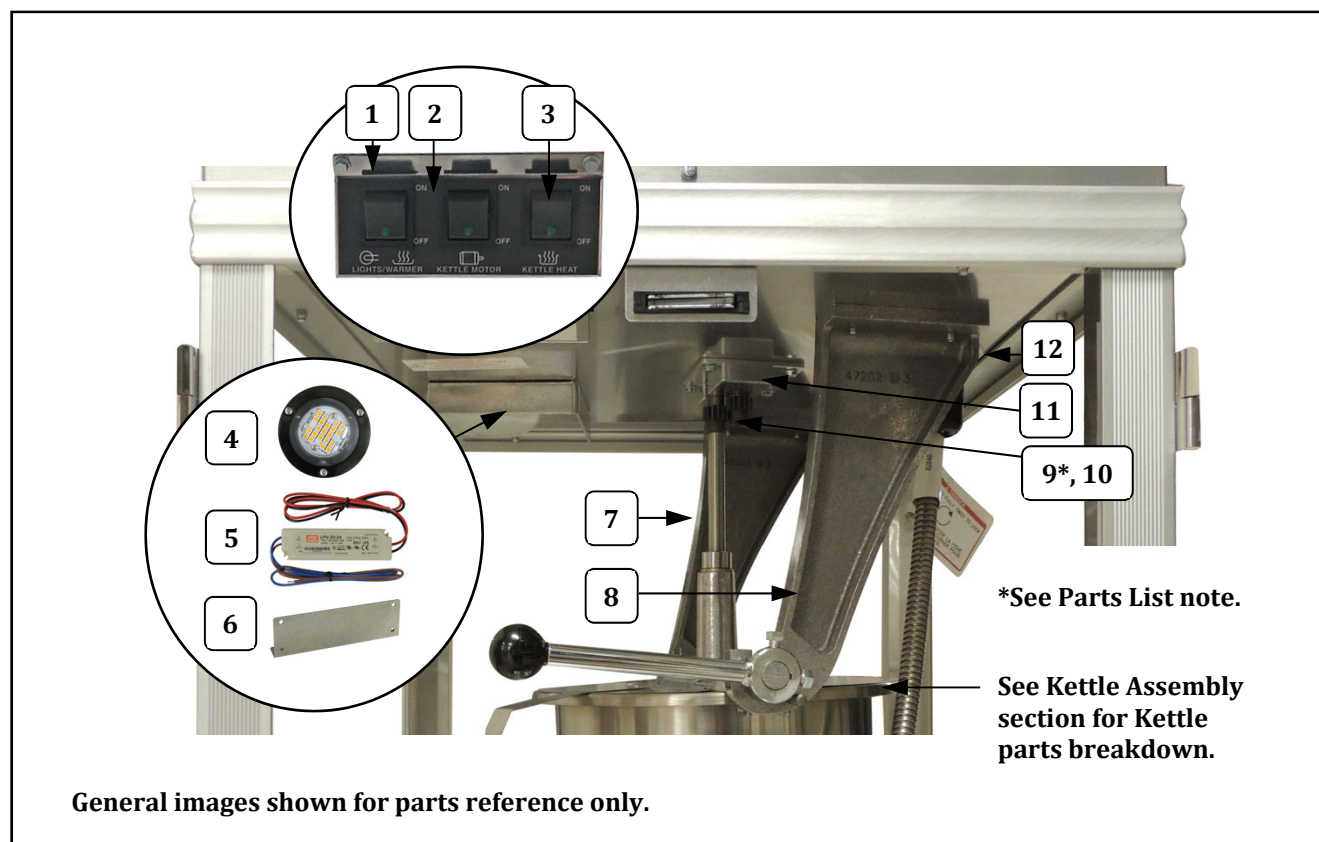


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

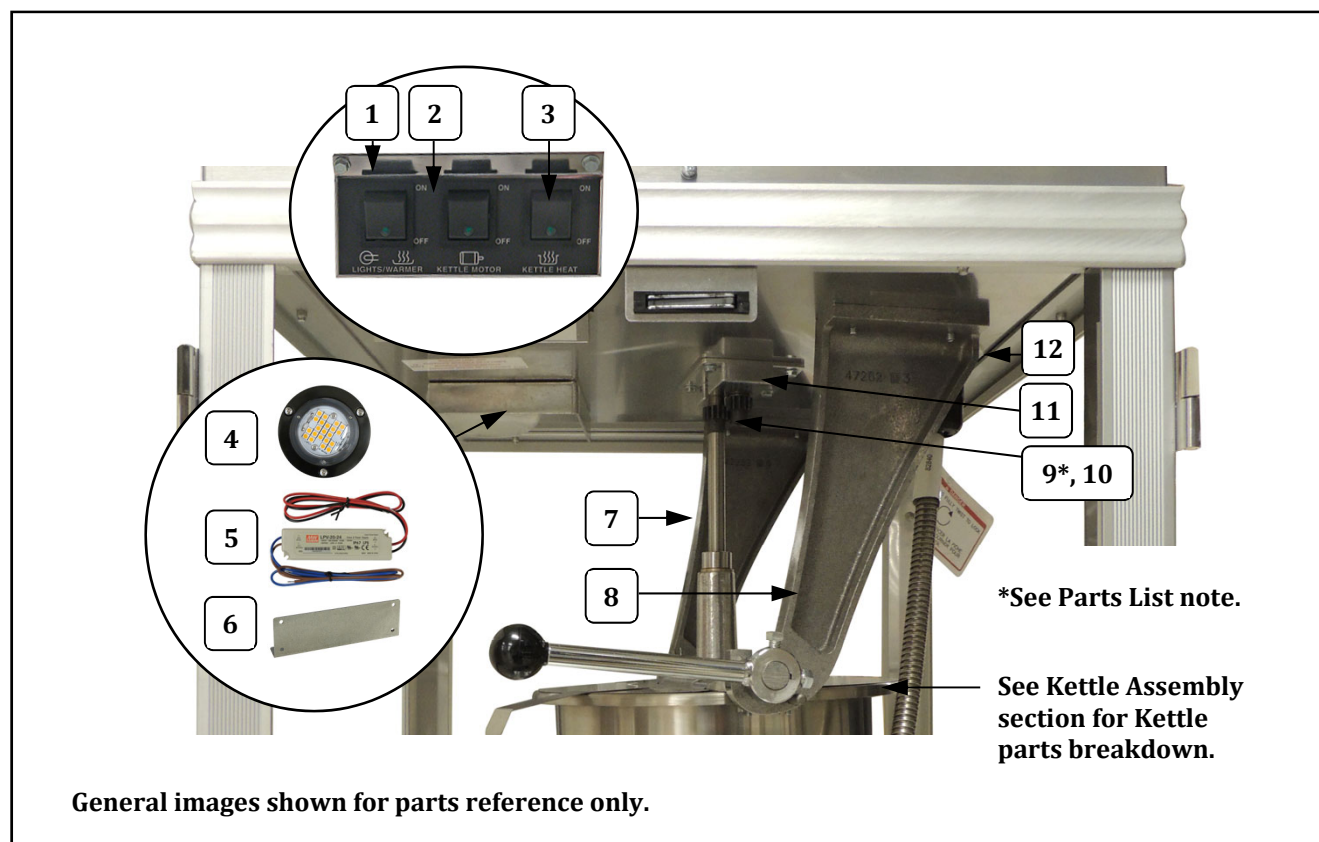


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

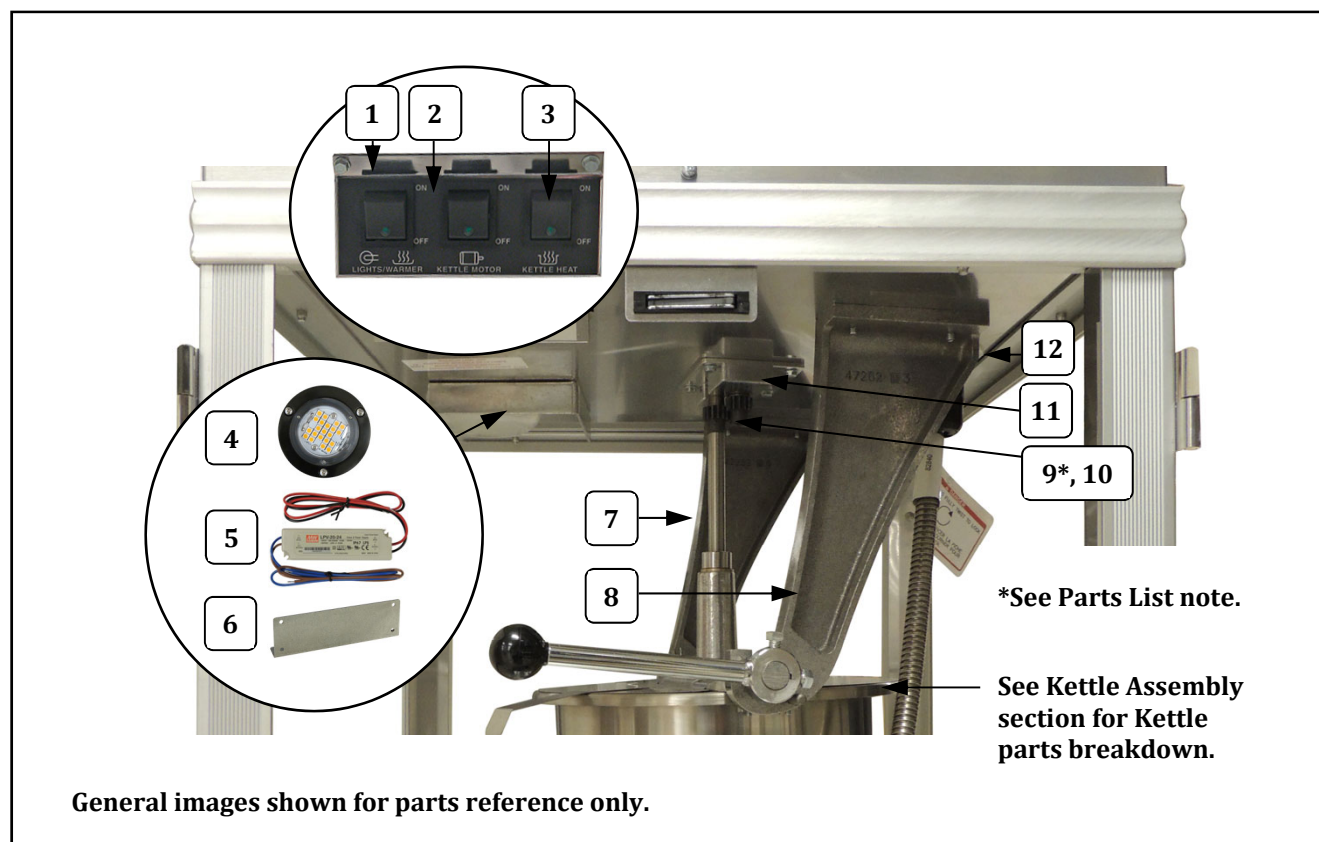


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

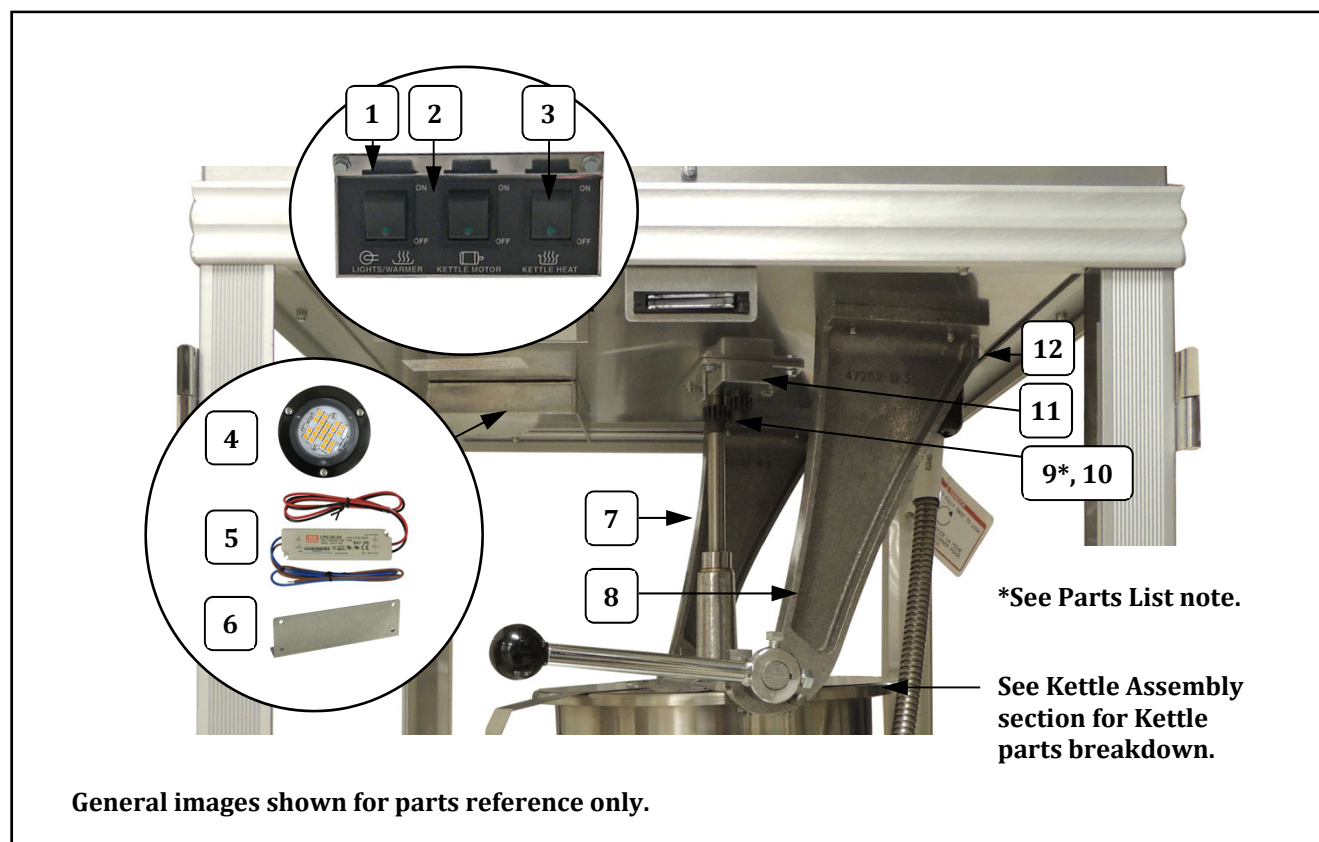


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

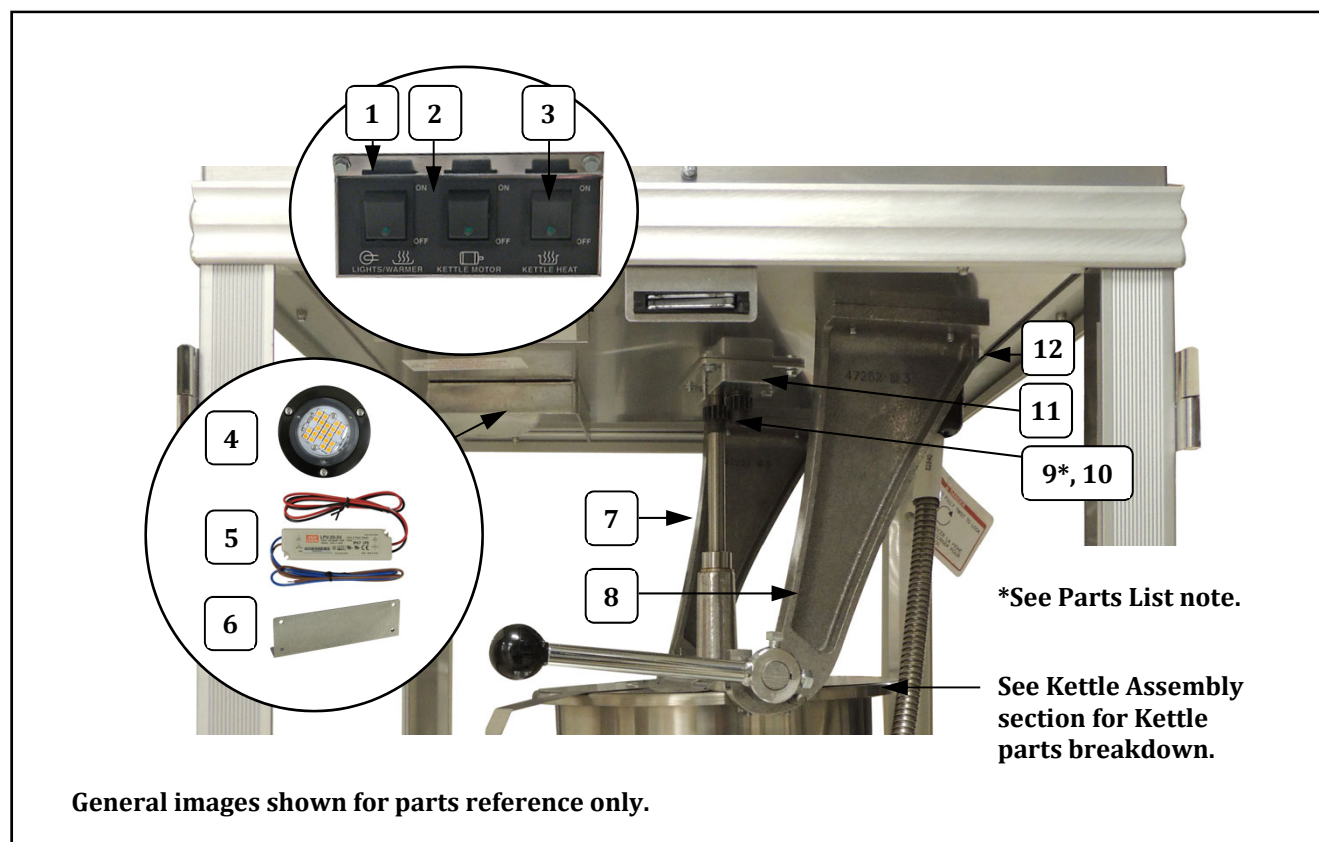


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

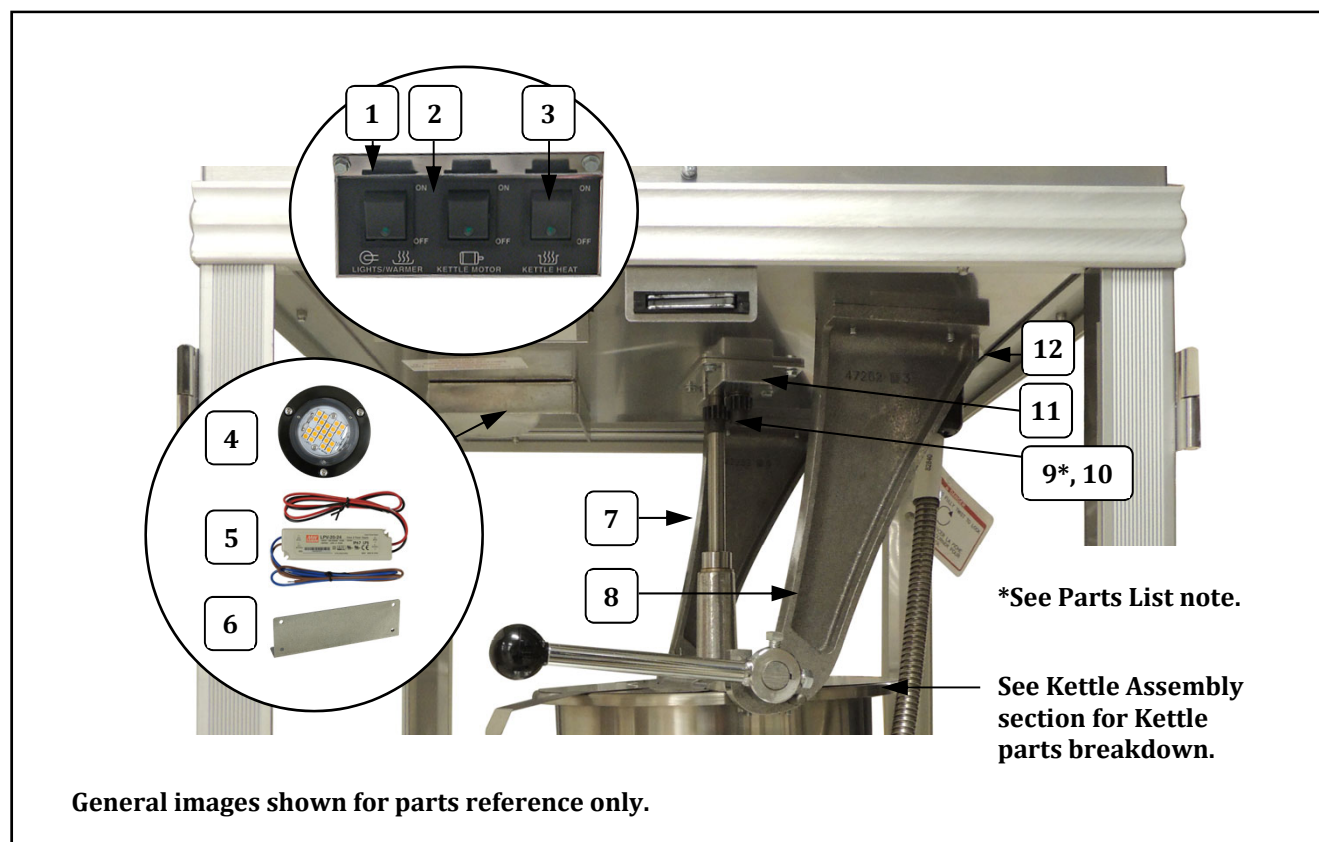


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

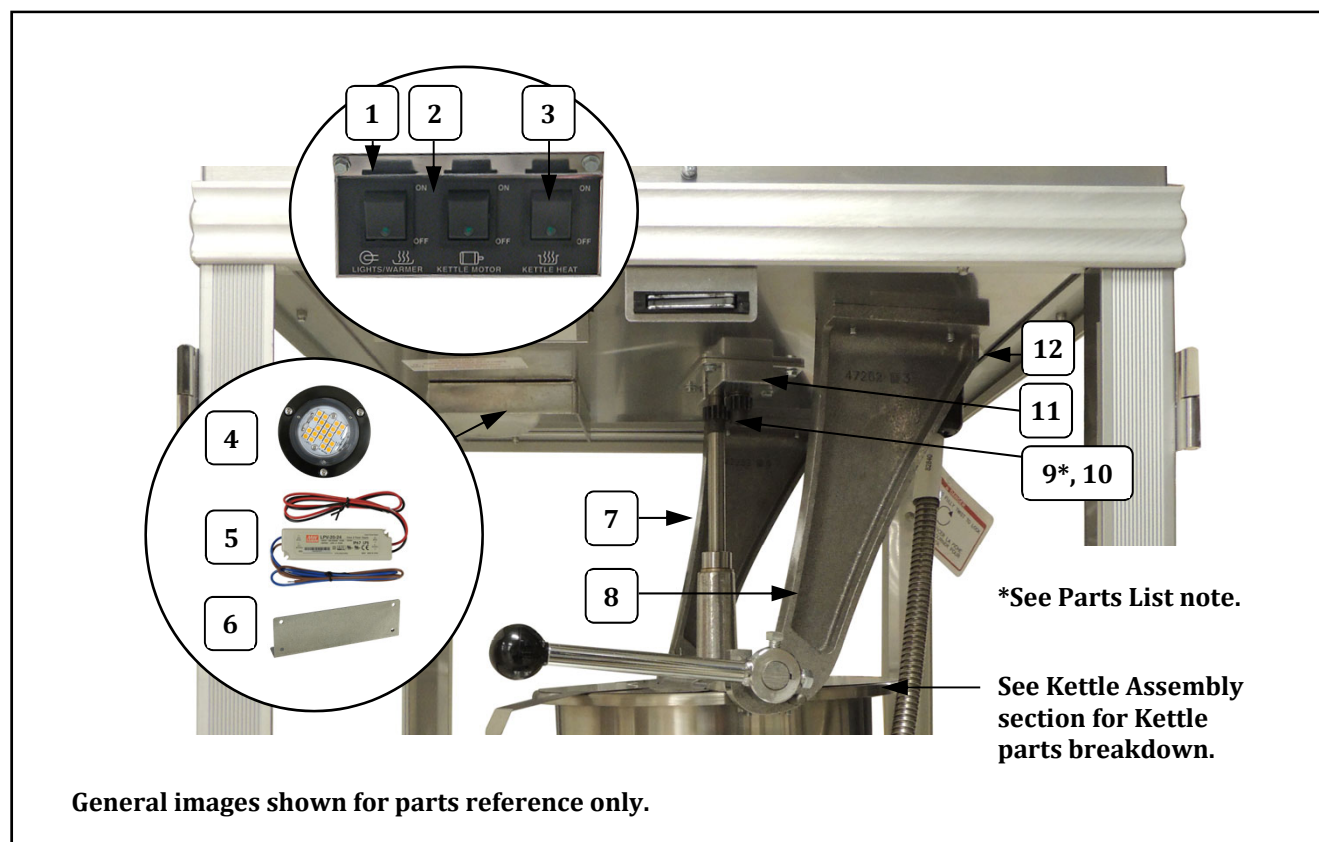


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

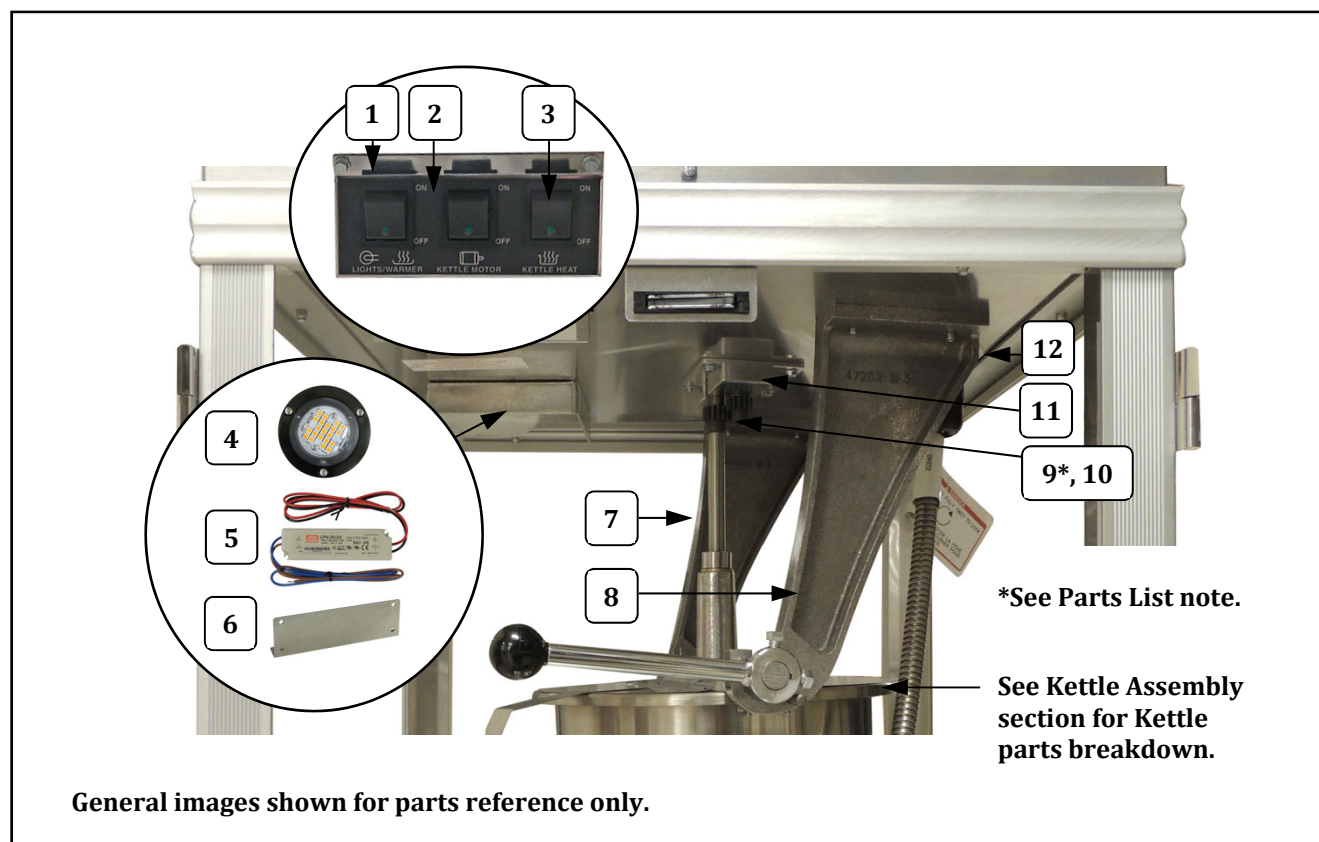


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

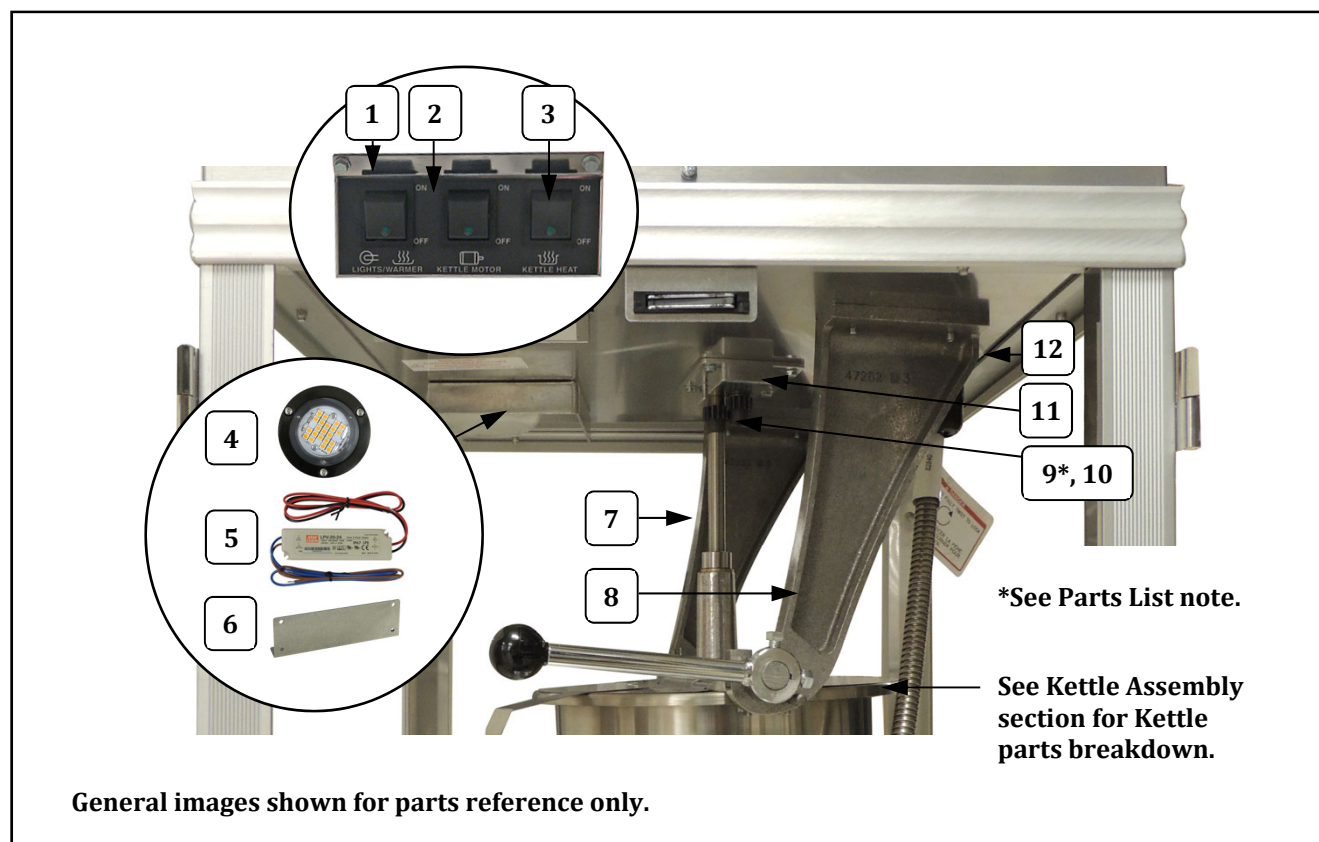


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

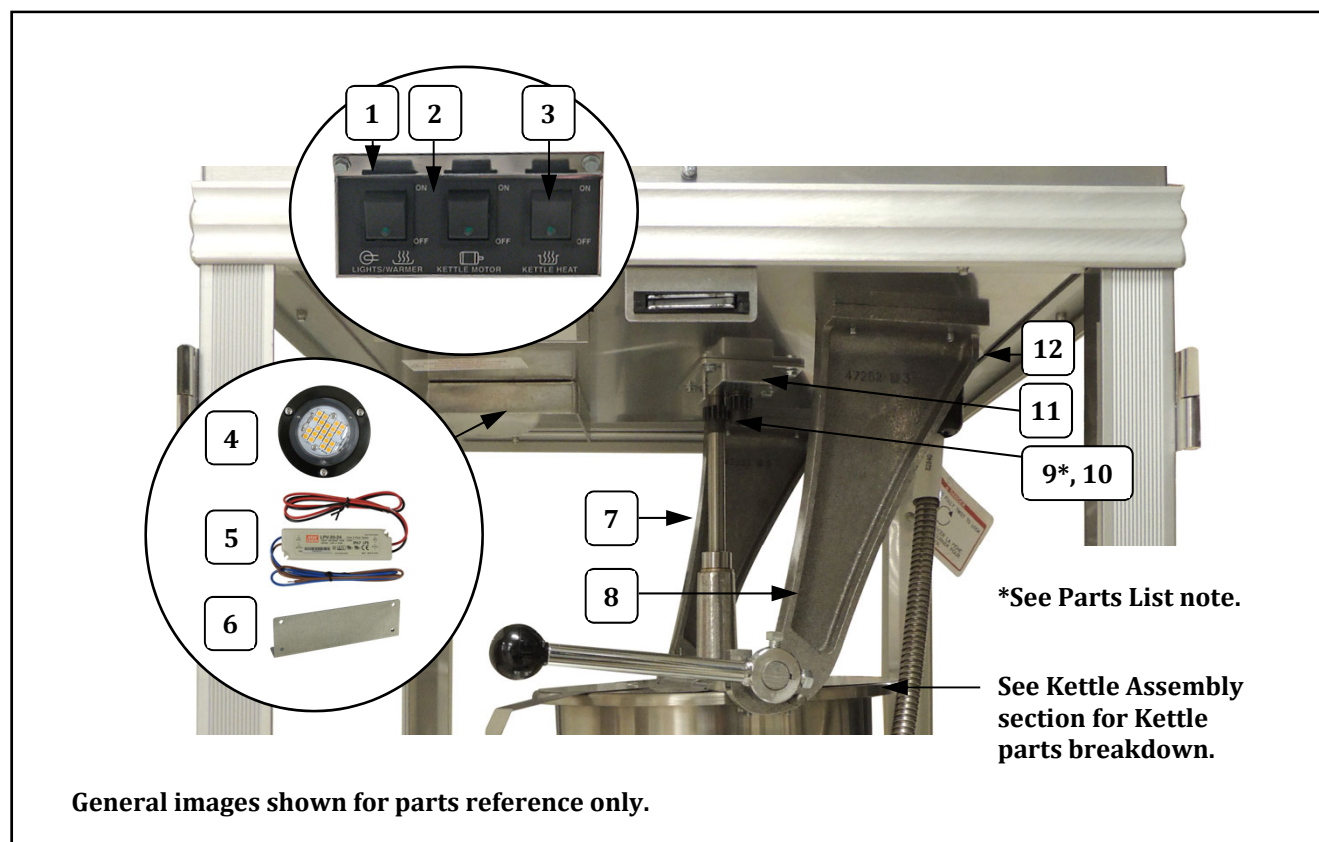


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

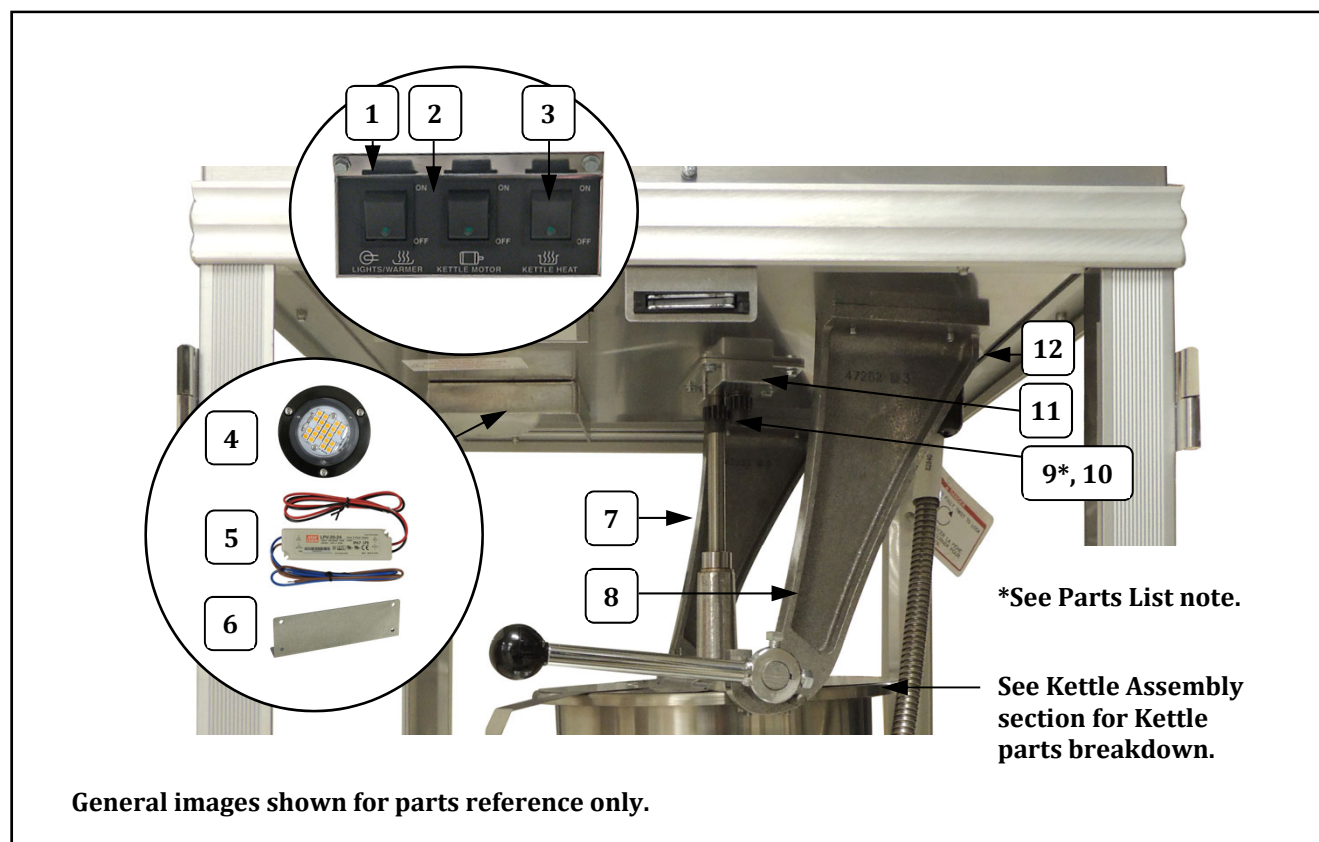


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

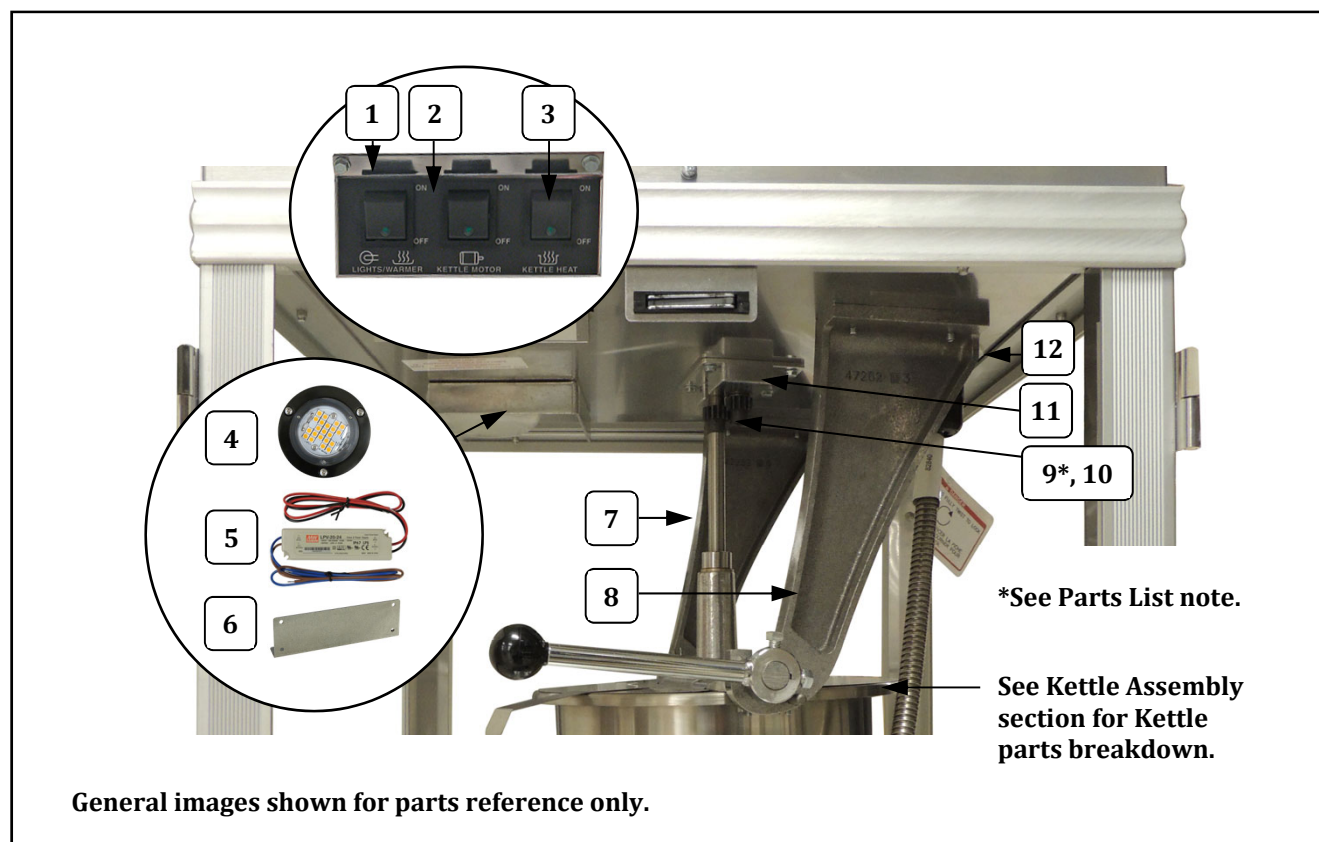


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

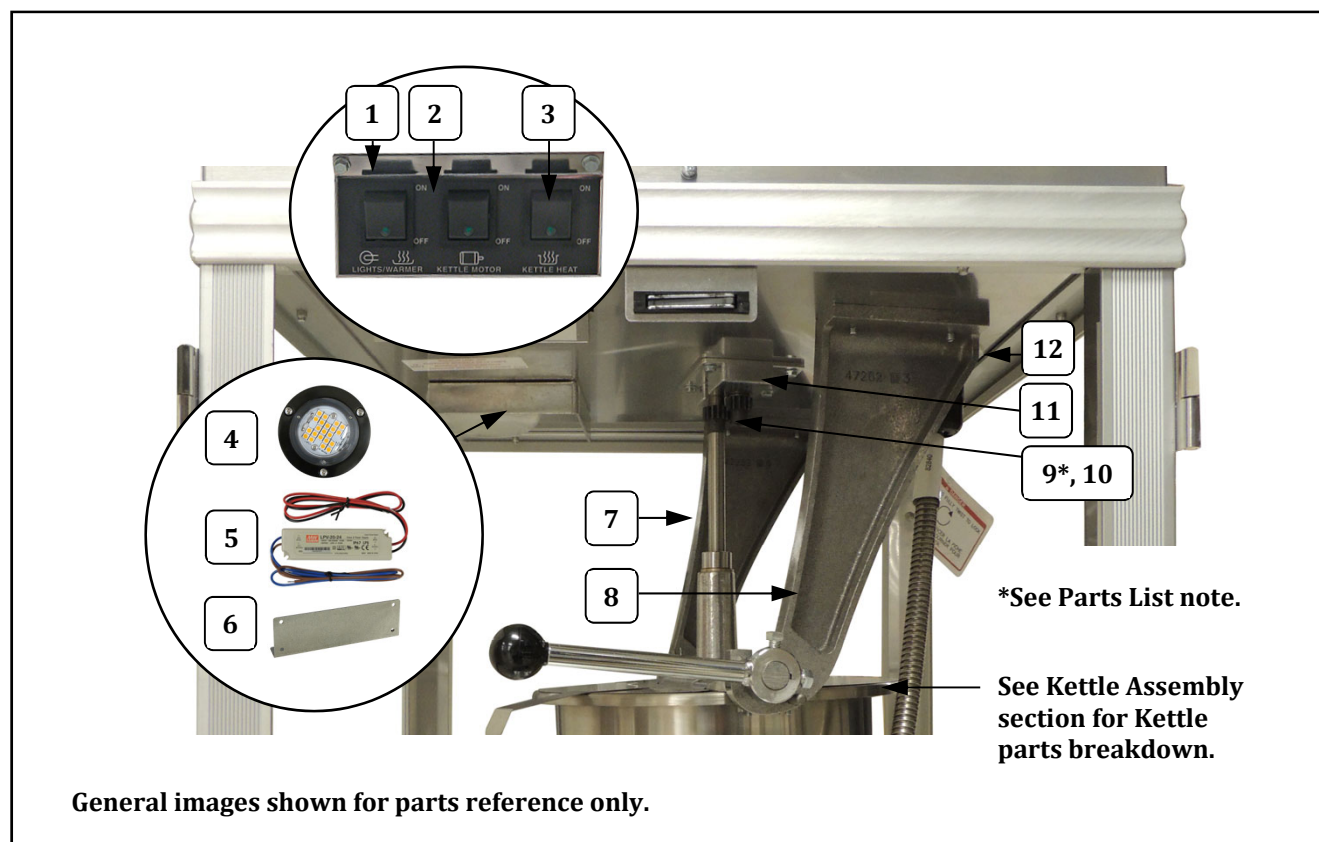


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

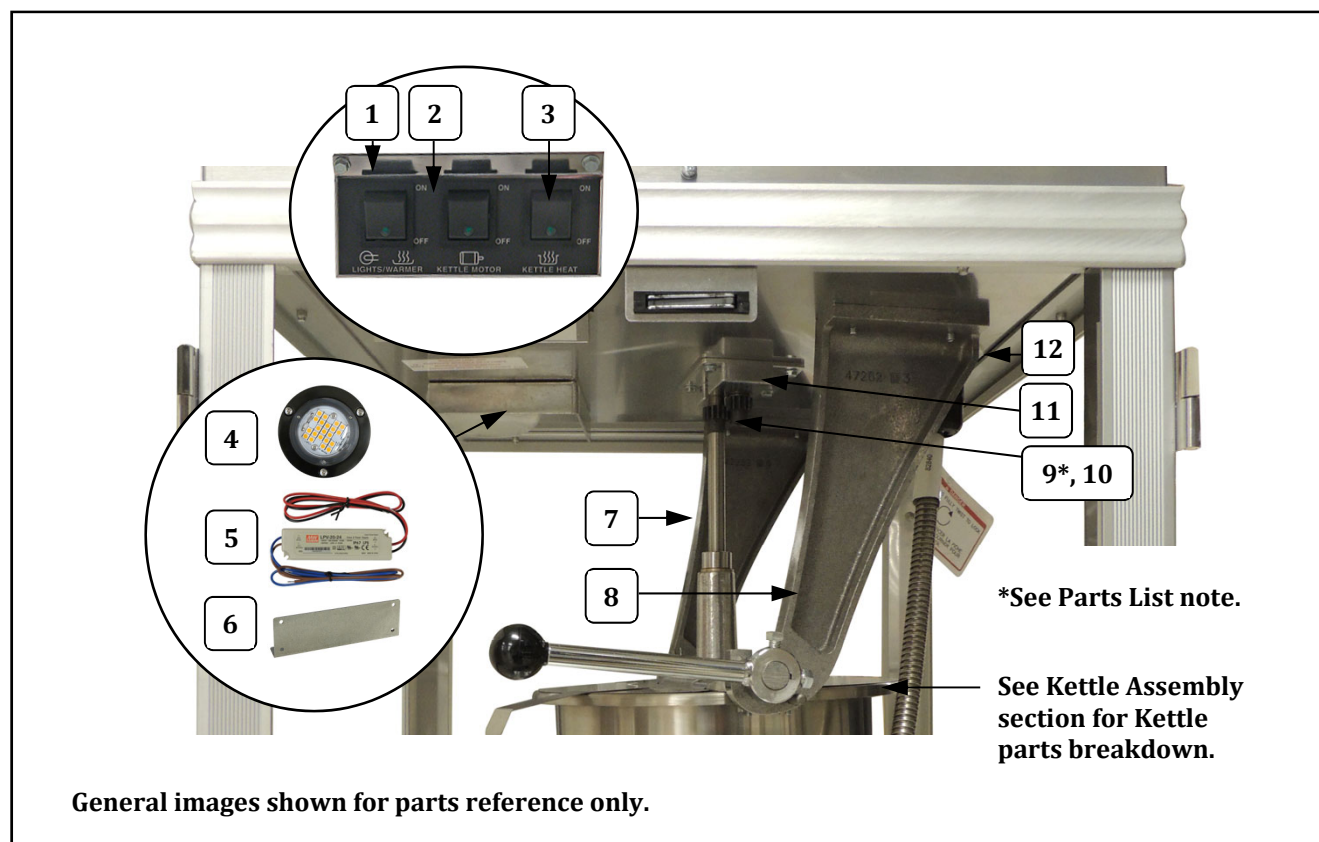


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

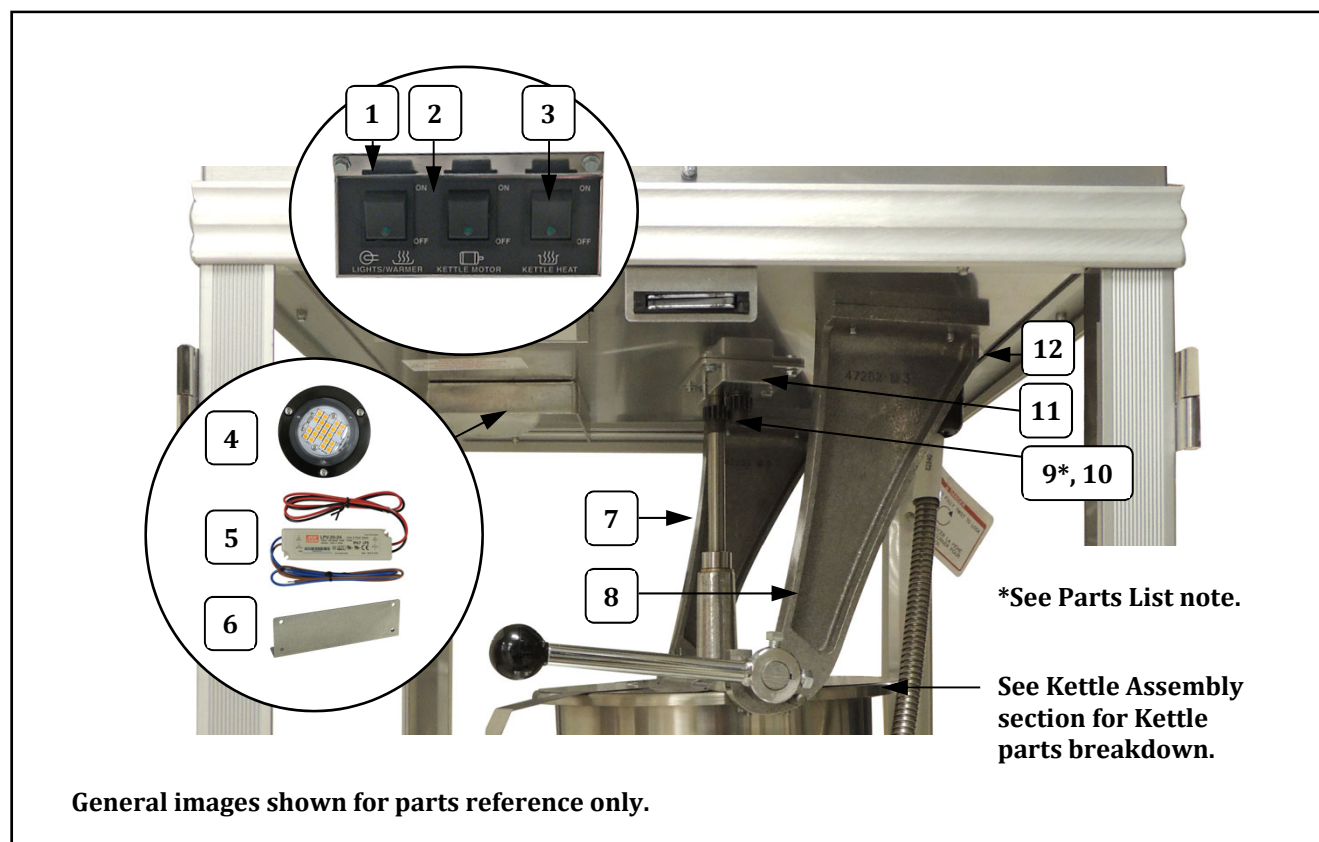


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

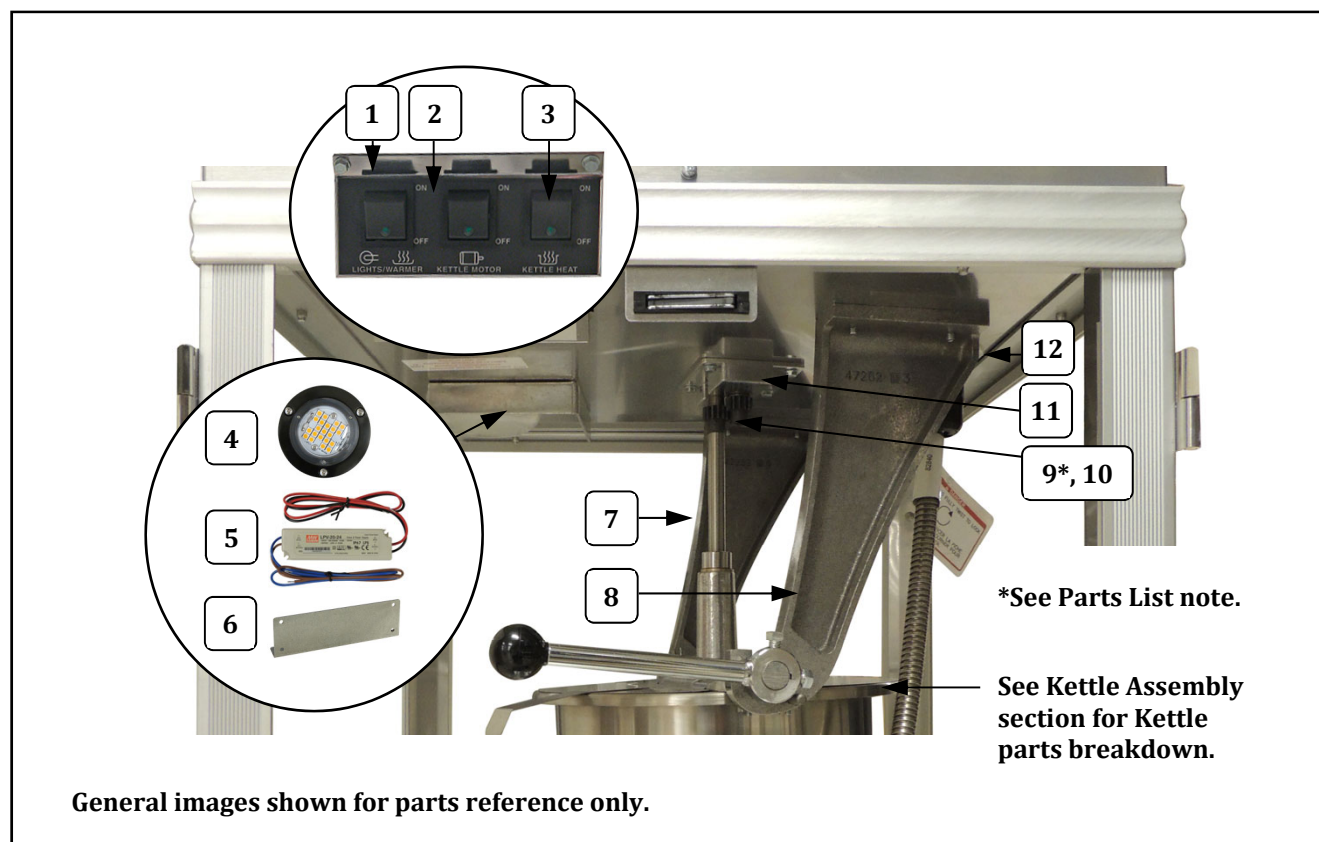


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

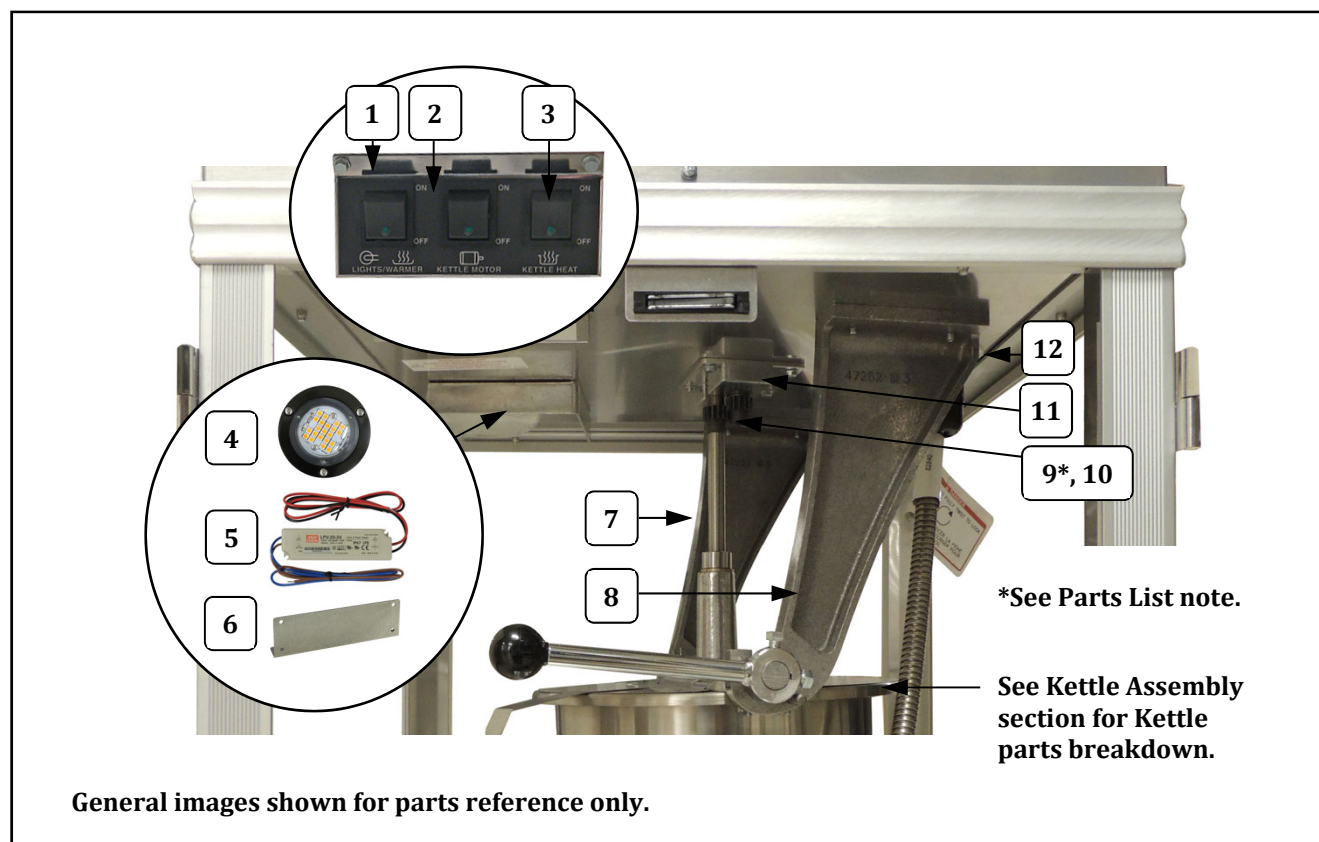


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

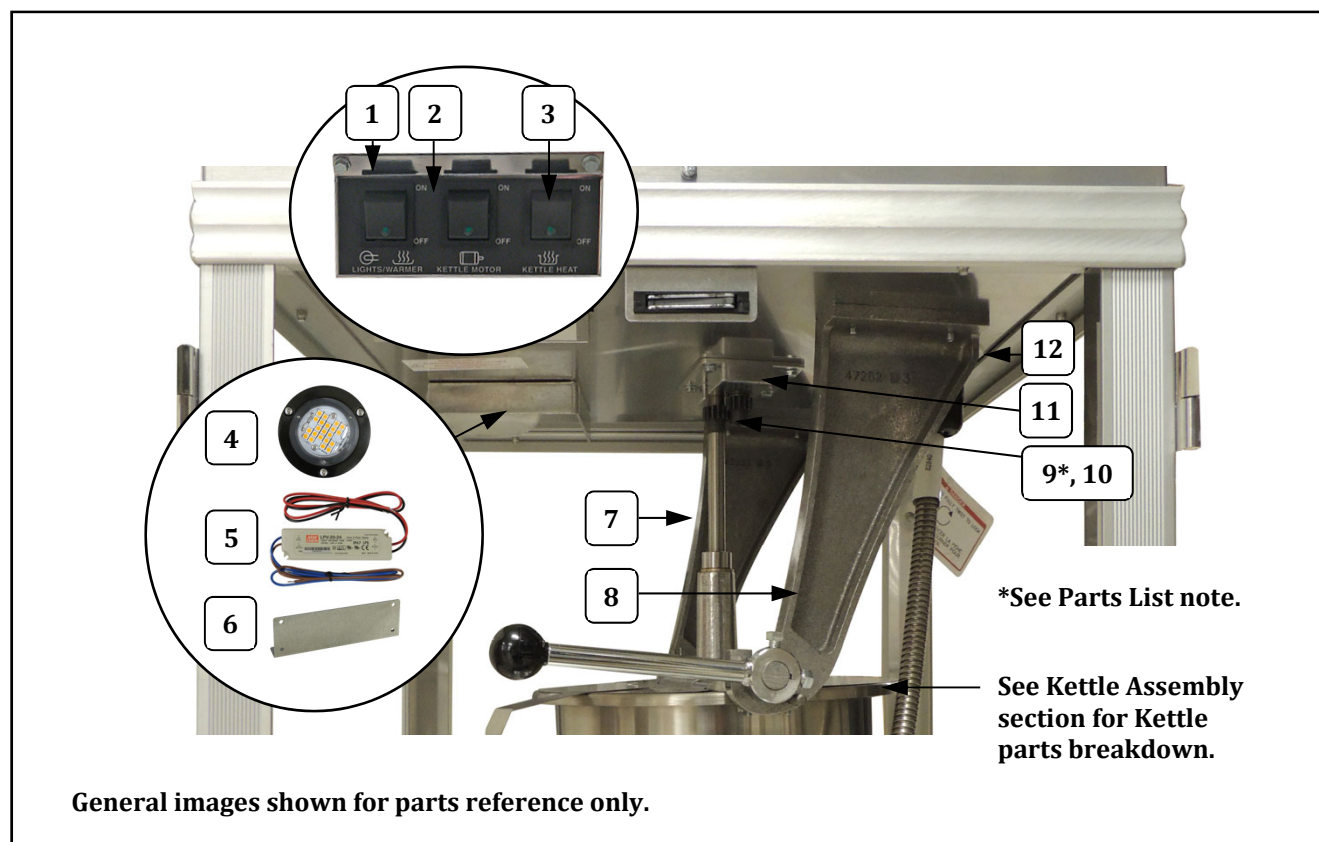


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

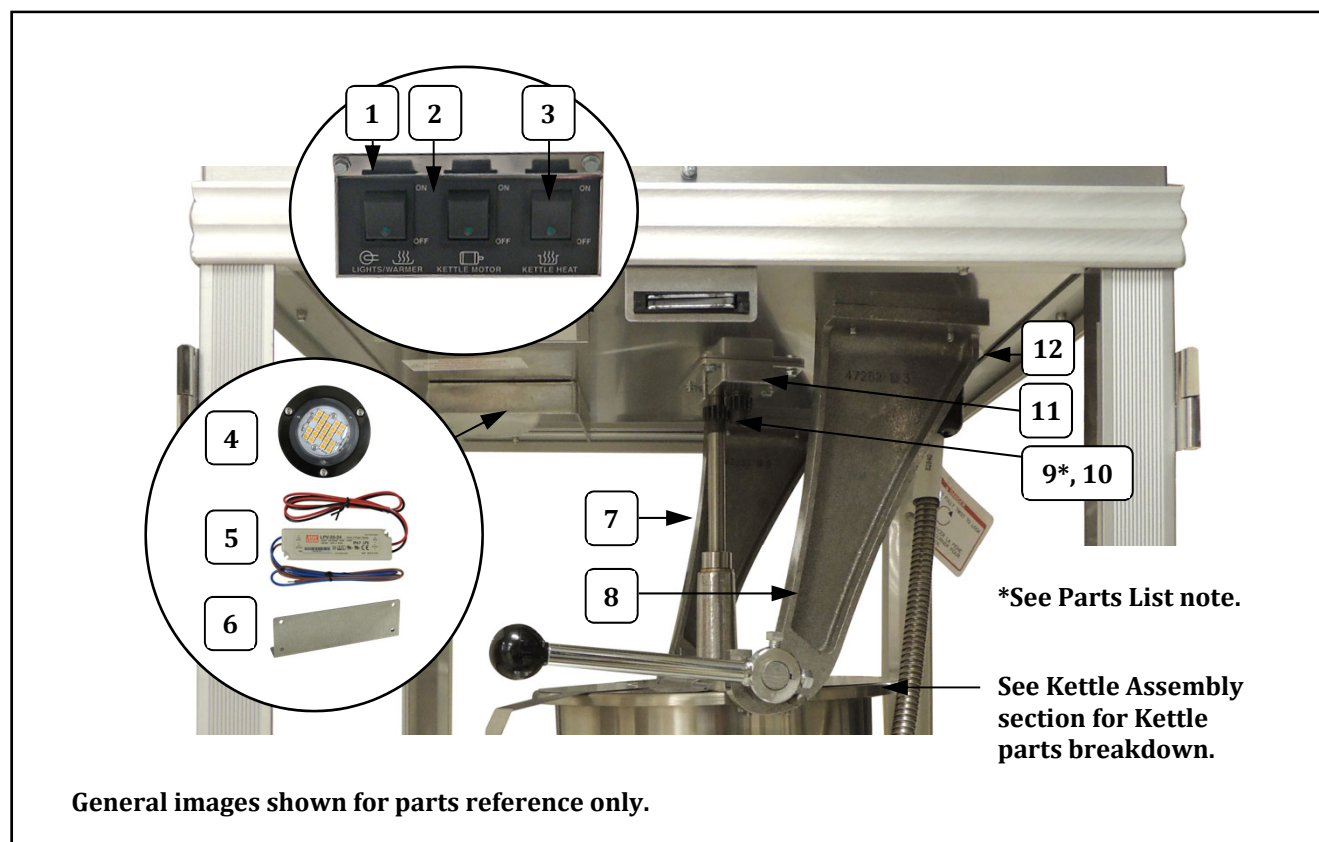


Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330

Cabinet Interior View – Controls – Parts Breakdown

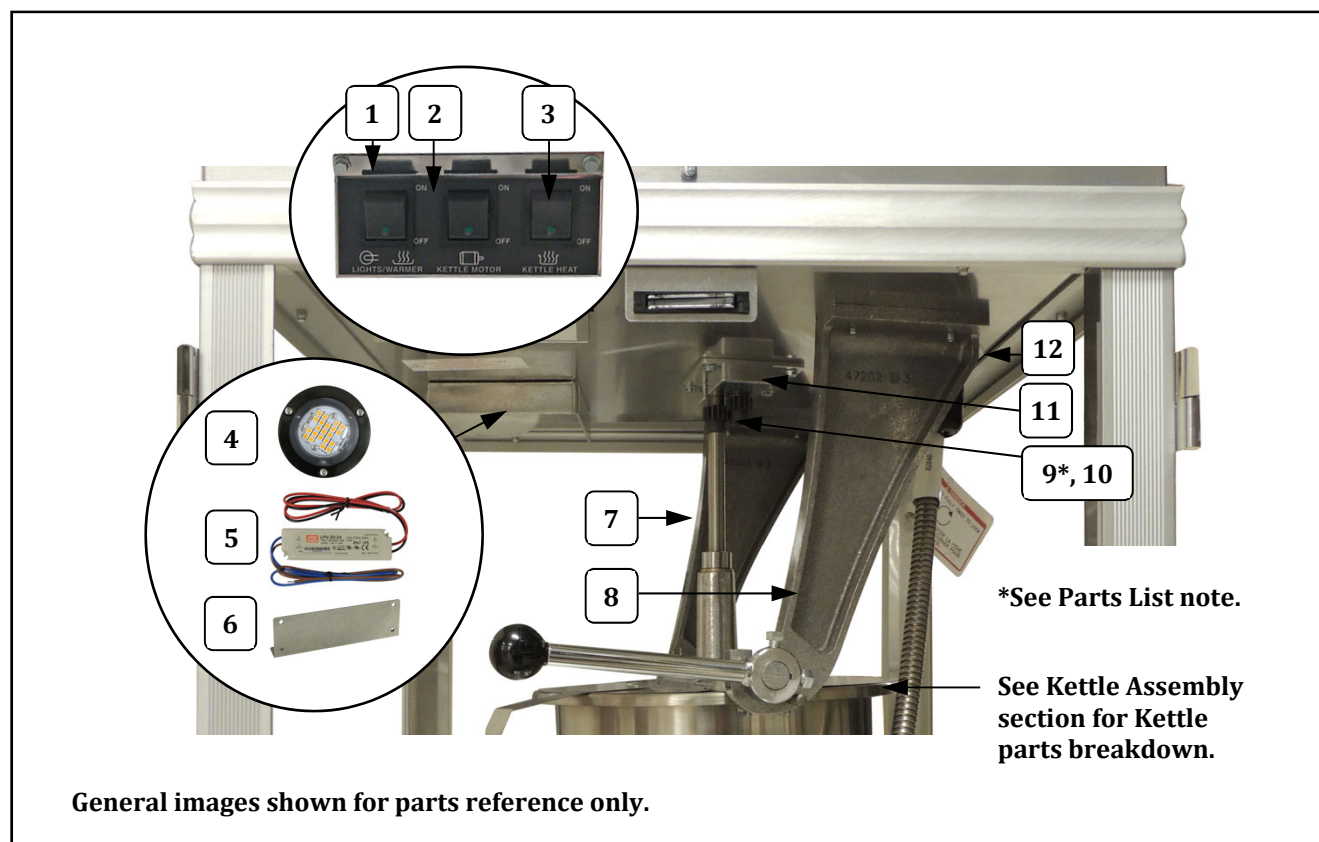

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	SWITCH BOX	17473	17473	17473	17473	17473
2	SWITCH BOX LABEL	48508	48508	48508	48508	48508
3	SWITCH, LIGHTED ROCKER GR	42798	42798	42798	42798	42798
4	LED REPLACEMENT NO PLATE (includes LED Light and wire assembly)	100544	100544	100544	100544	55625
5	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
6	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
7	HANGER ARM FRONT	47262	47262	47262	47262	47262
8	HANGER ARM REAR, ASSY (w/dowel pin)	47263	47263	47263	47263	47263
9*	SPUR GEAR Kit (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K	47059K	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742	41742	41742	41742
11	GEAR BLOCK ASSY	67194	67194	67194	67194	67194
12	15 AMP TWIST LOCK KETTLE RECPT	49330	49330	49330	49330	49330


Cabinet Interior – Corn Pan View

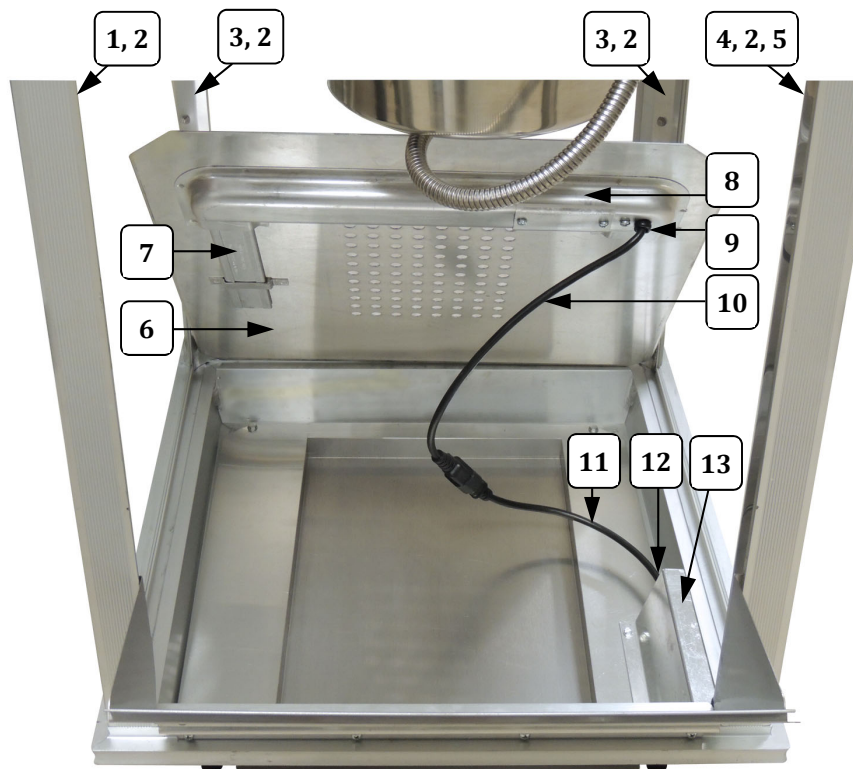

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

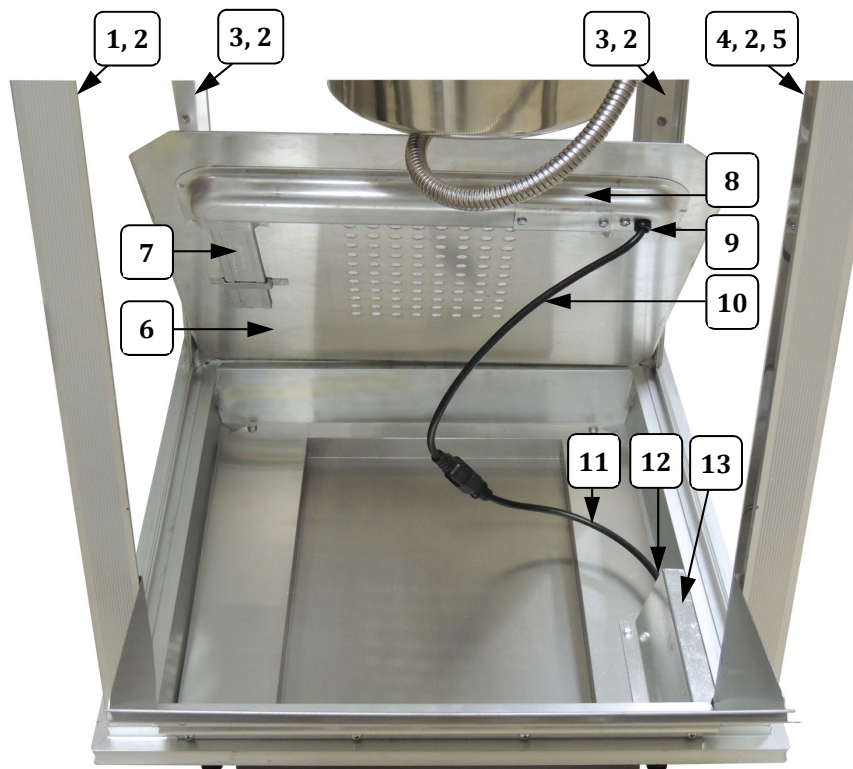

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

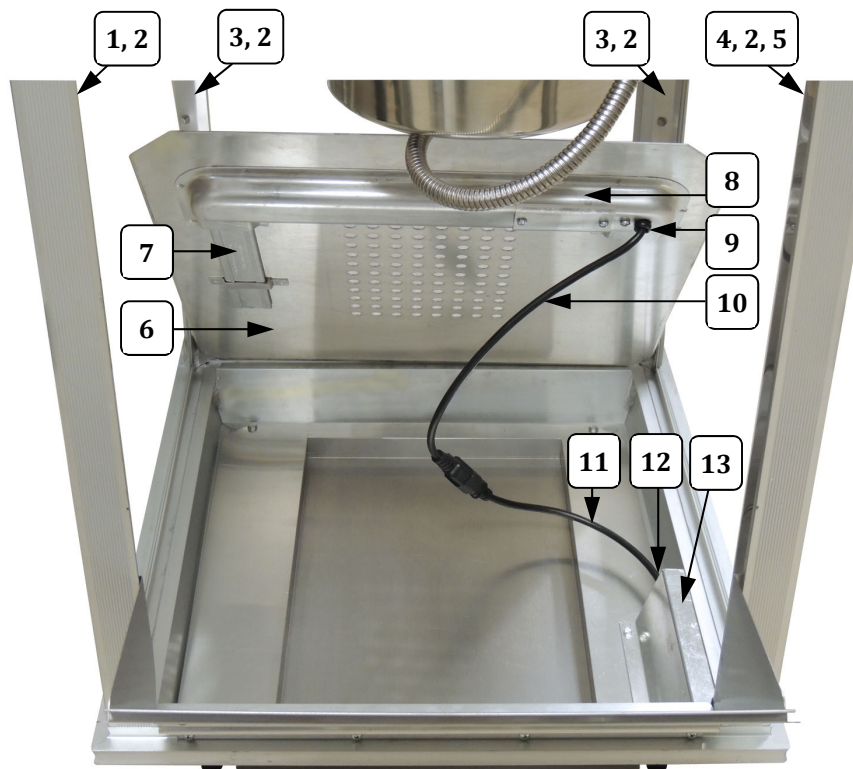

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

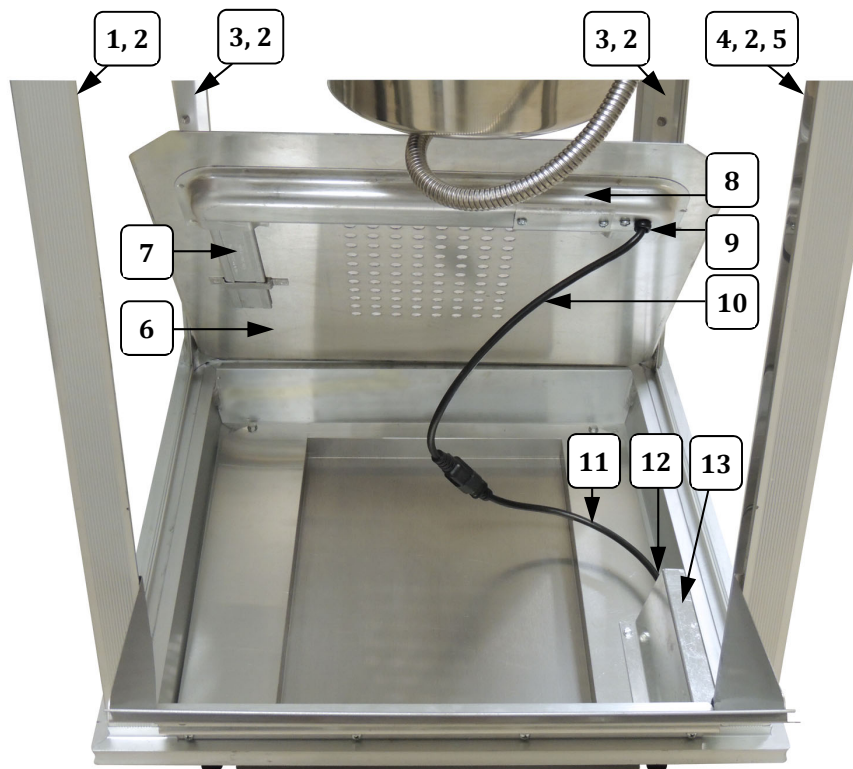

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

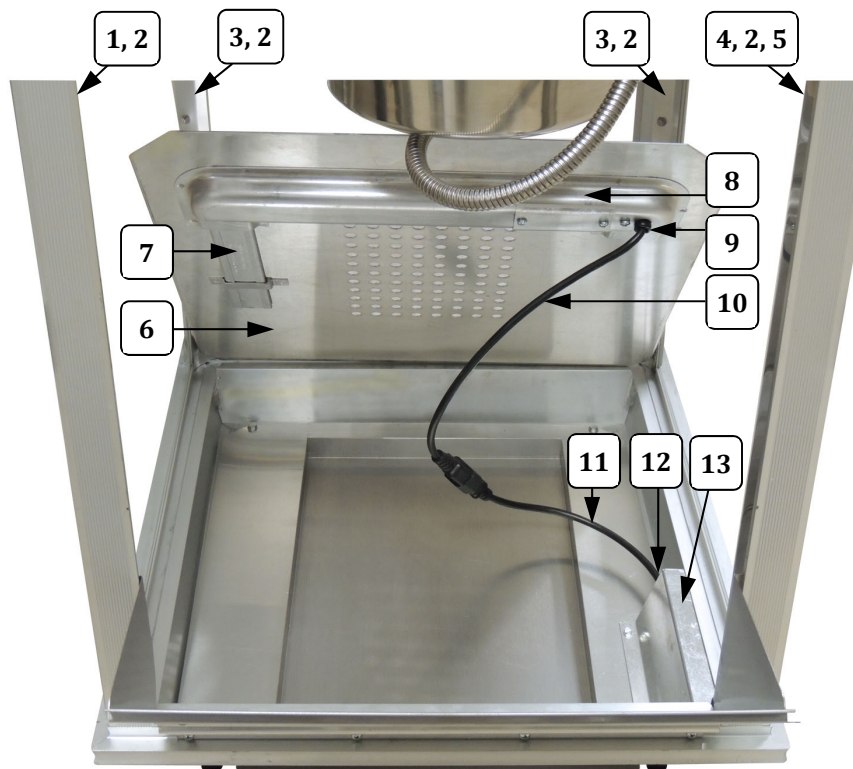

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

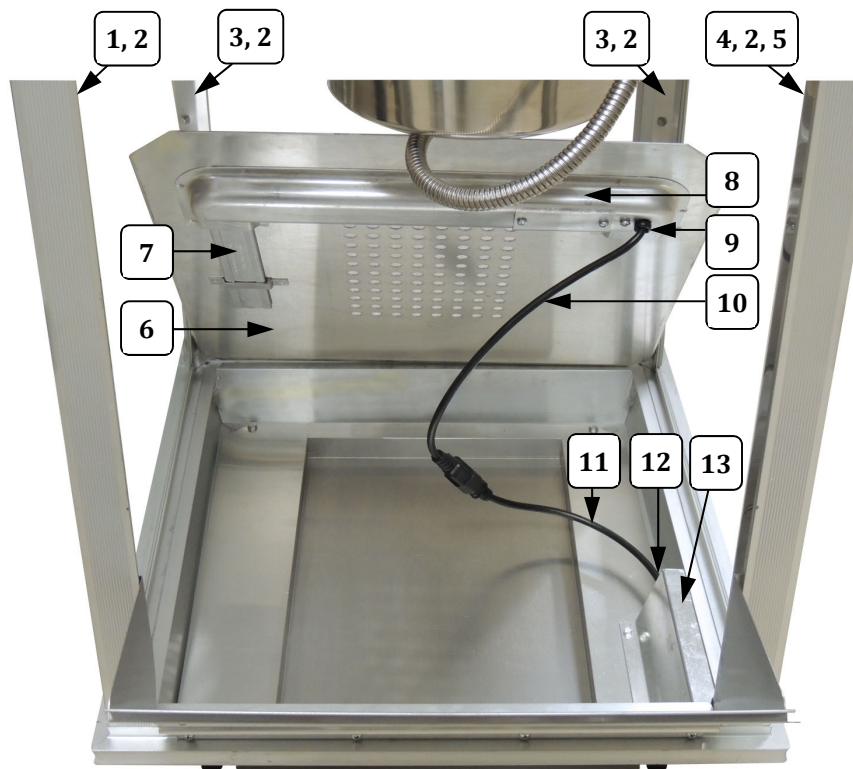

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

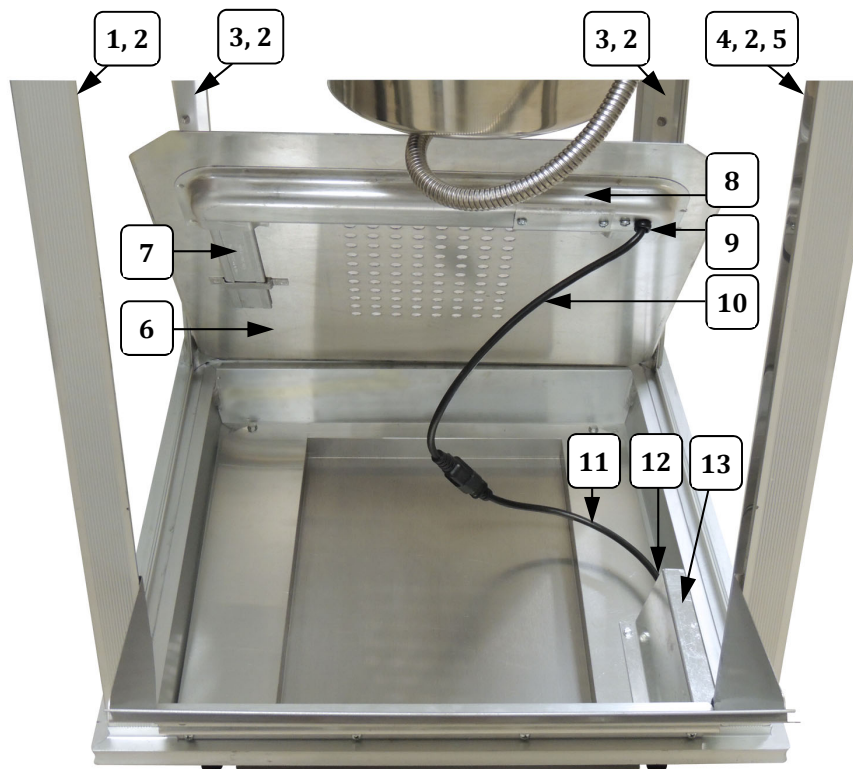

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

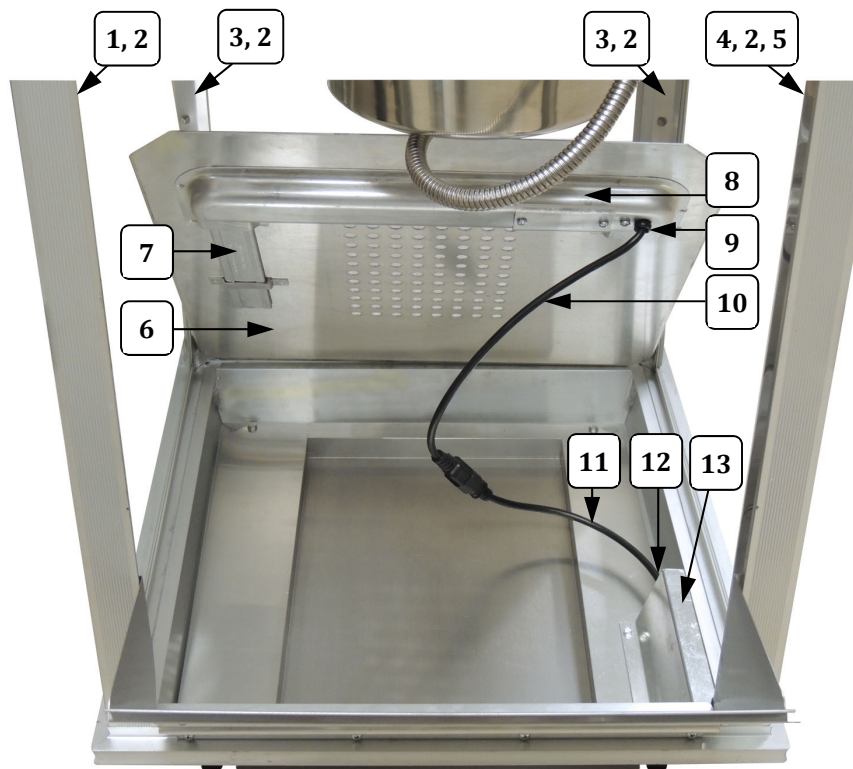

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

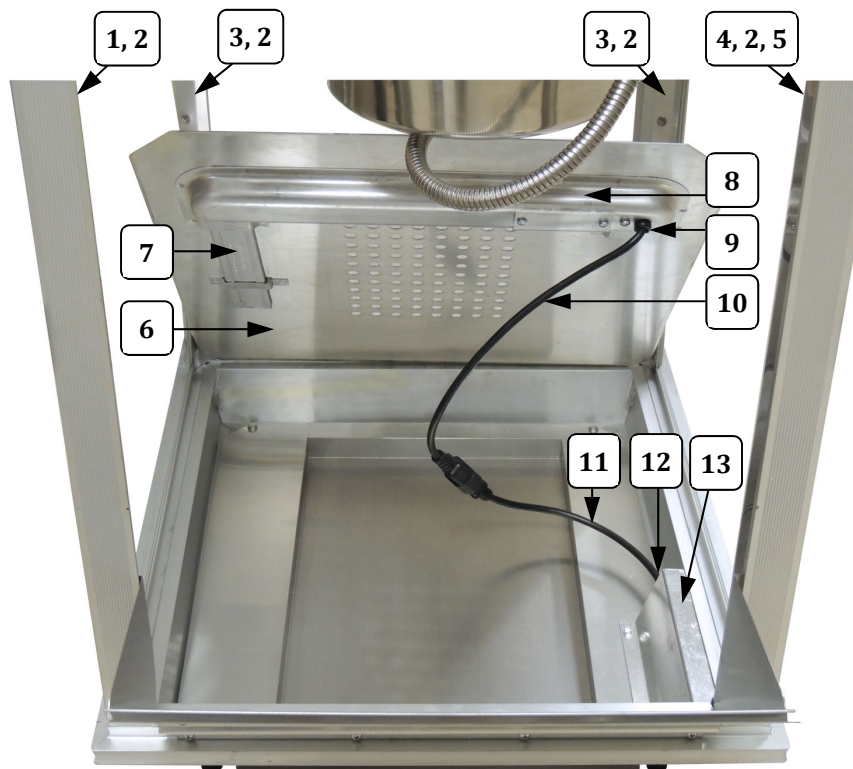

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

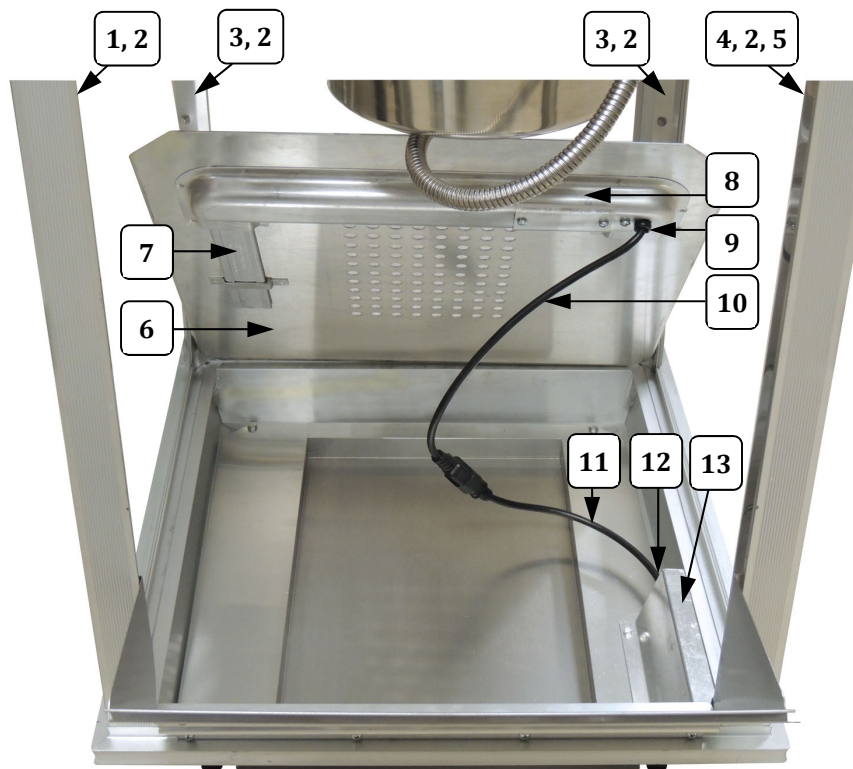

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

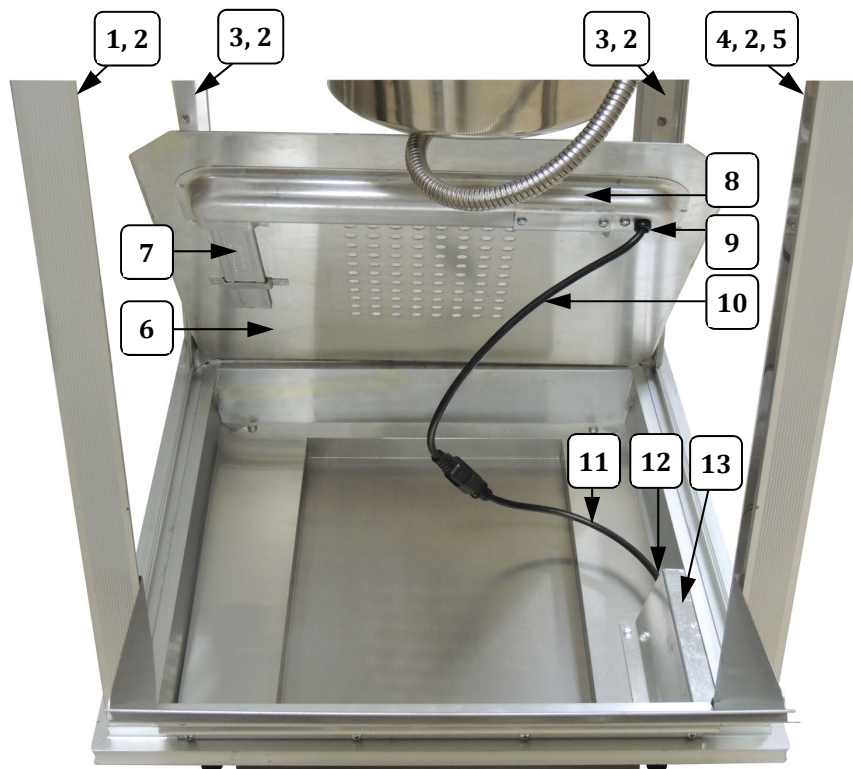

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

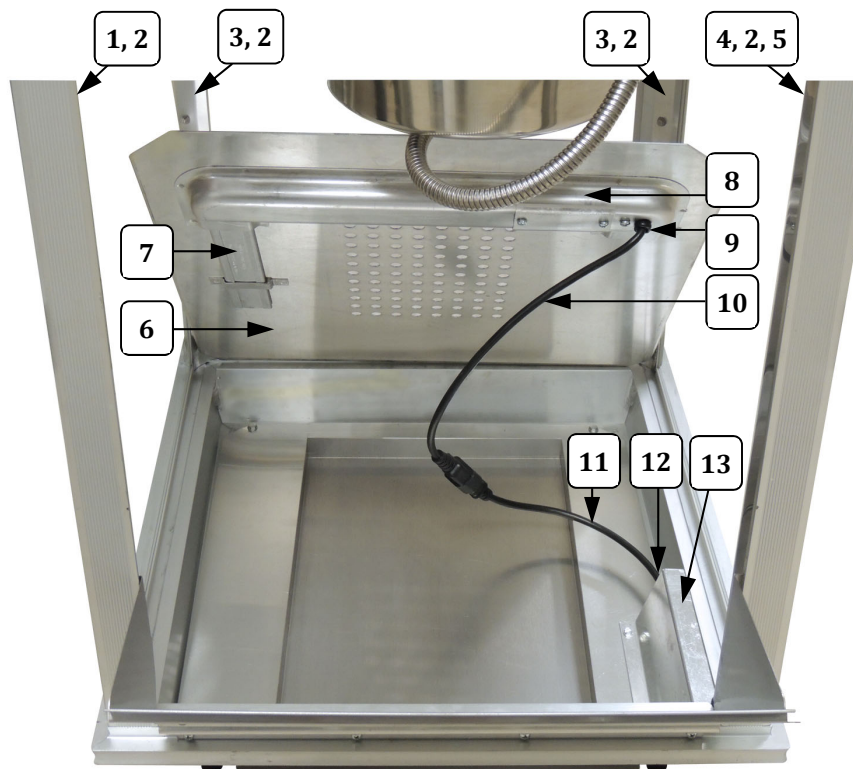

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591


Cabinet Interior – Corn Pan View

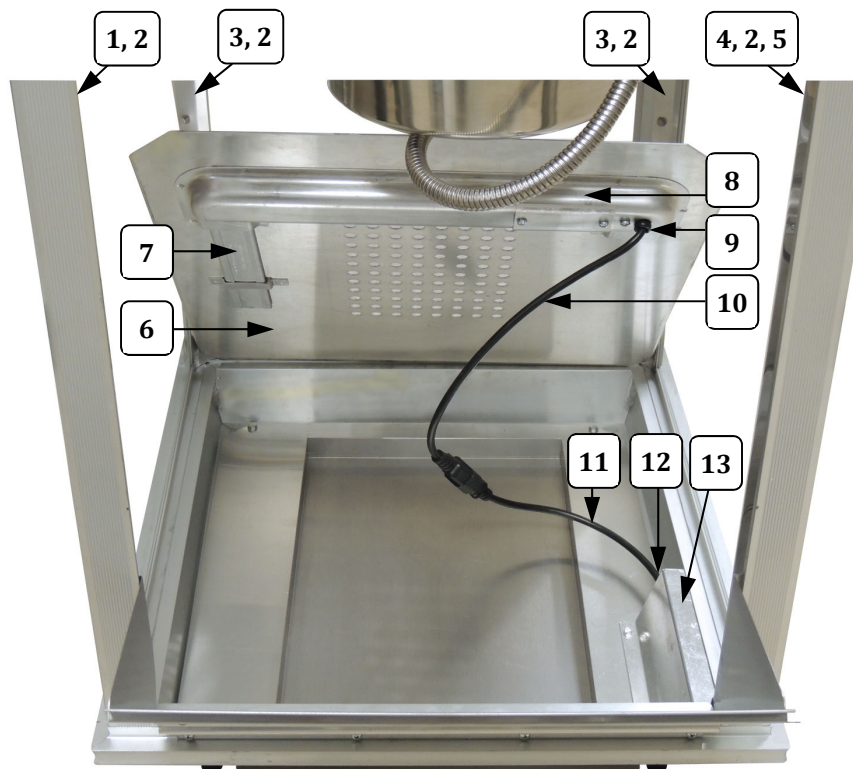

General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591

Cabinet Interior – Corn Pan View

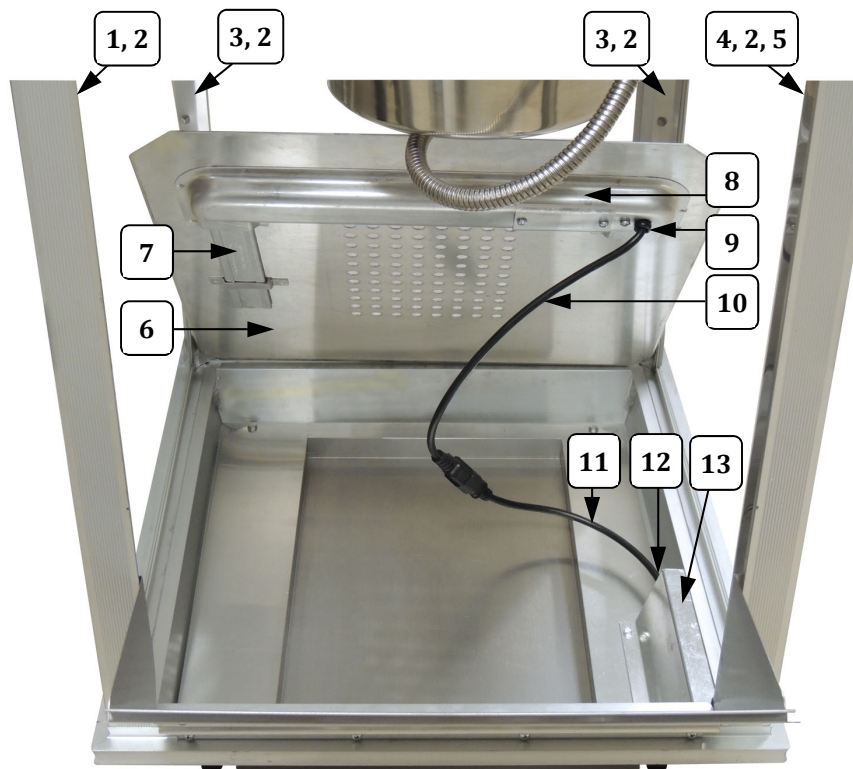


General image shown for parts reference only.

Item	Part Description	Part Number
		All Models
1	GLASS STRIP (glass retainer strip)	77526
2	8-32 X 3/4 UNSL NON-IND (fastens retainer strips)	39008
3	GLASS STRIP (glass retainer strip)	77525
4	GLASS STRIP (glass retainer strip behind corner post wire cover)	77529
5	GLASS STRIP COVER (corner post wire cover)	77838
	BOTTOM CORN PAN ASSY 120V (Complete Assembly, includes Bottom Corn Pan, Conduit Cover, Female and Male Cordsets)	77522
6	BOTTOM CORN PAN 120V (includes heat element)	77619
7	HEAT ELEMENT 115V, 75W	44026
8	COVER, CORN PAN CONDUIT	47653
9	STRAIN RELIEF SR-6W-1	82220
10	MALE CORDSET	61020
11	FEMALE CORDSET	61021
12	STRAIN RELIEF SR-6P-4	44073
13	CORNER COVER	77591




Dome Interior View

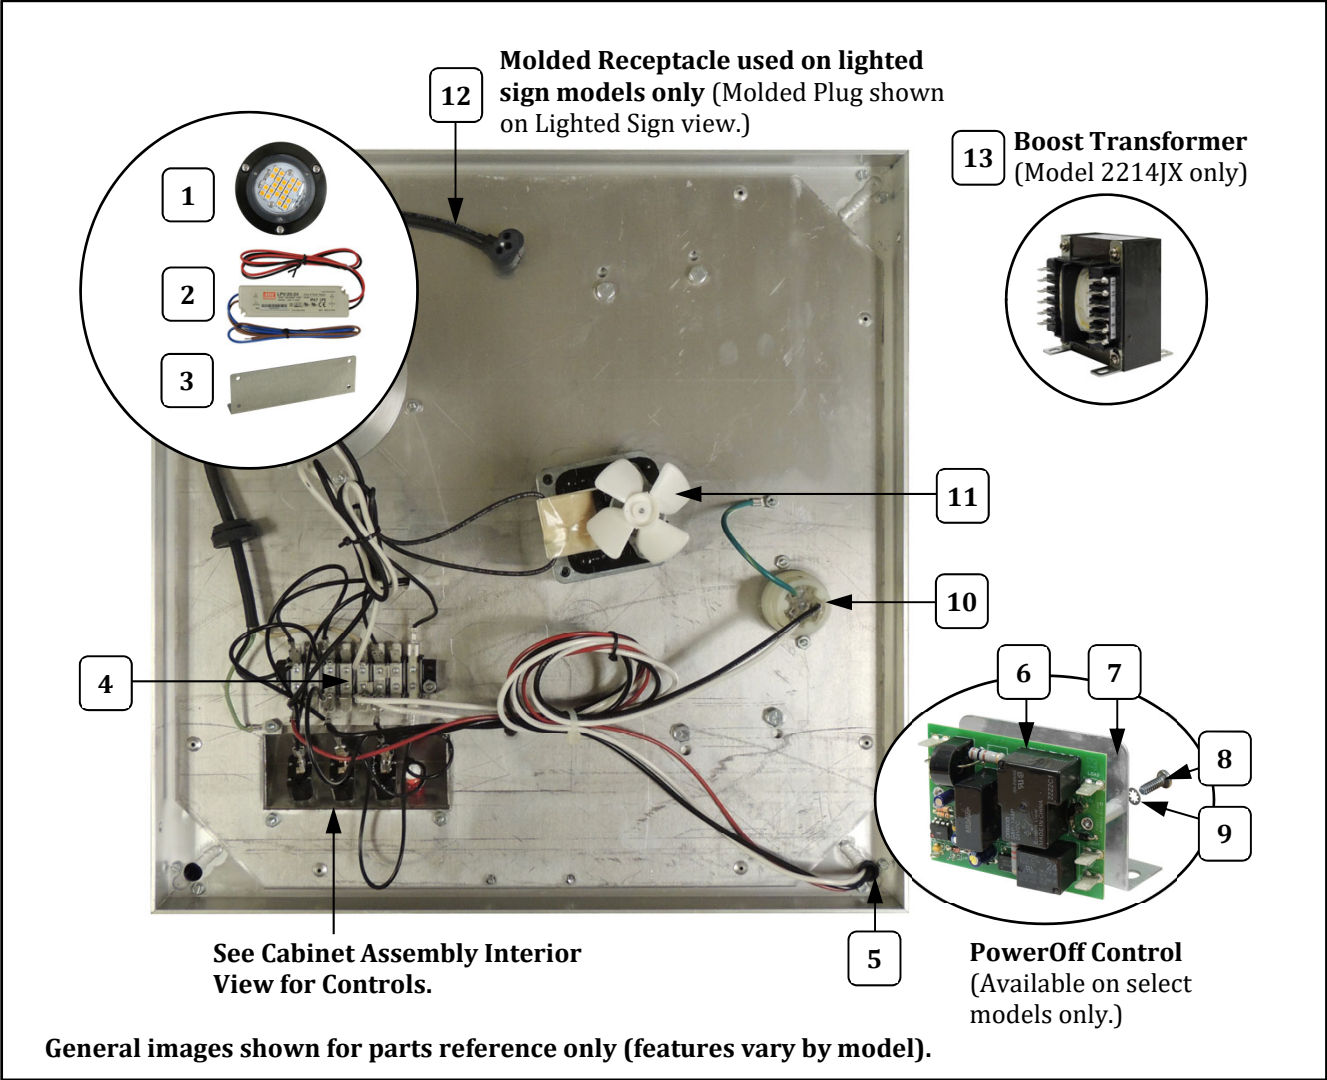

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

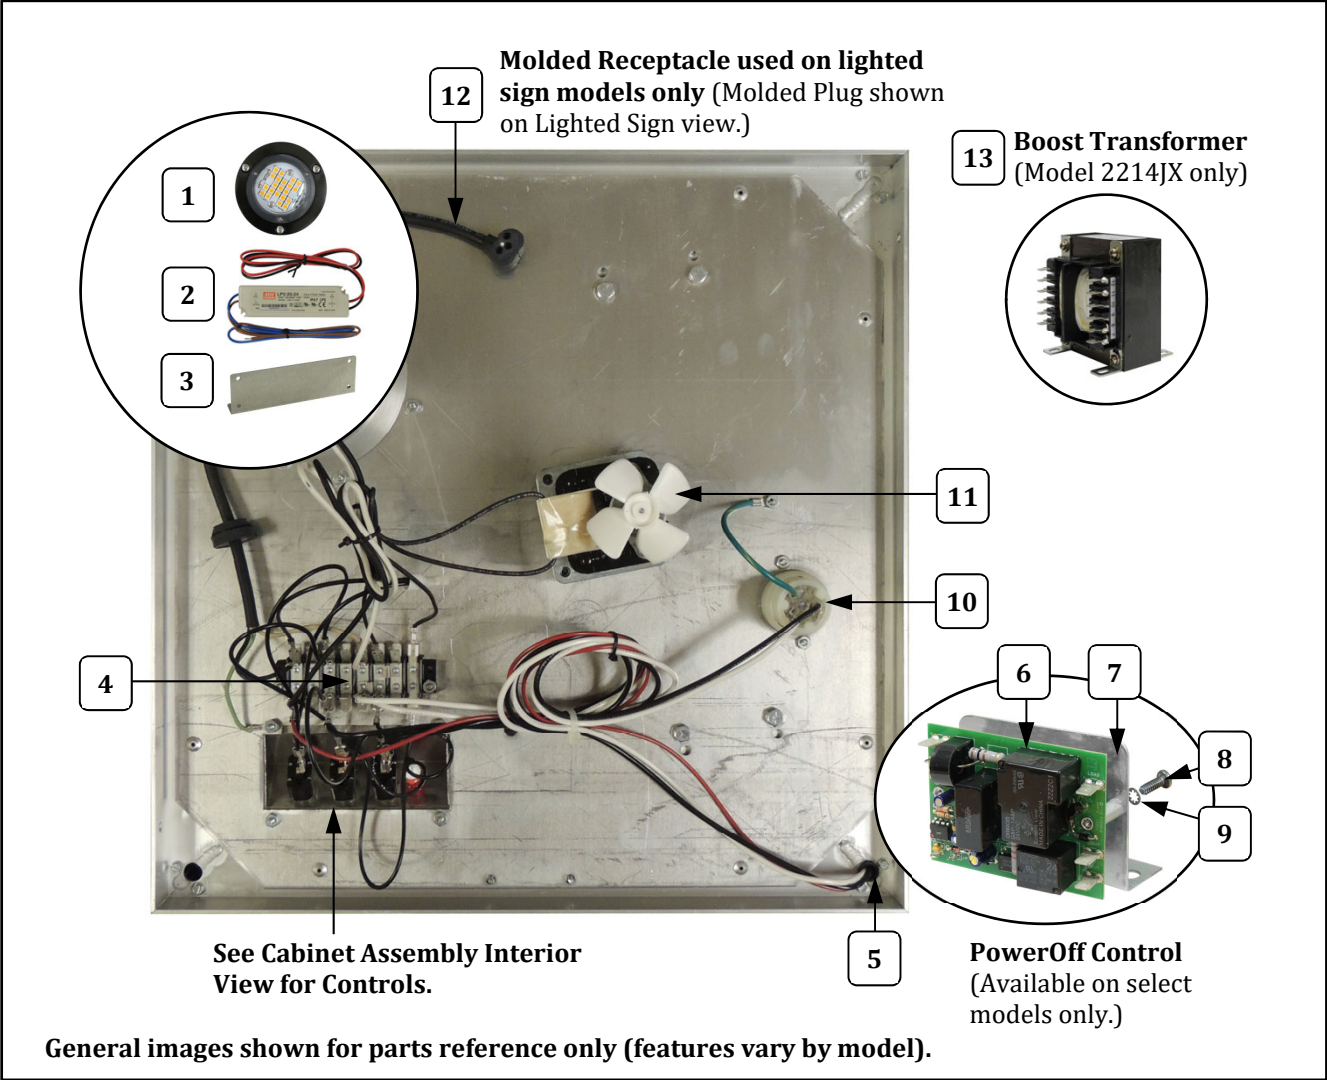

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

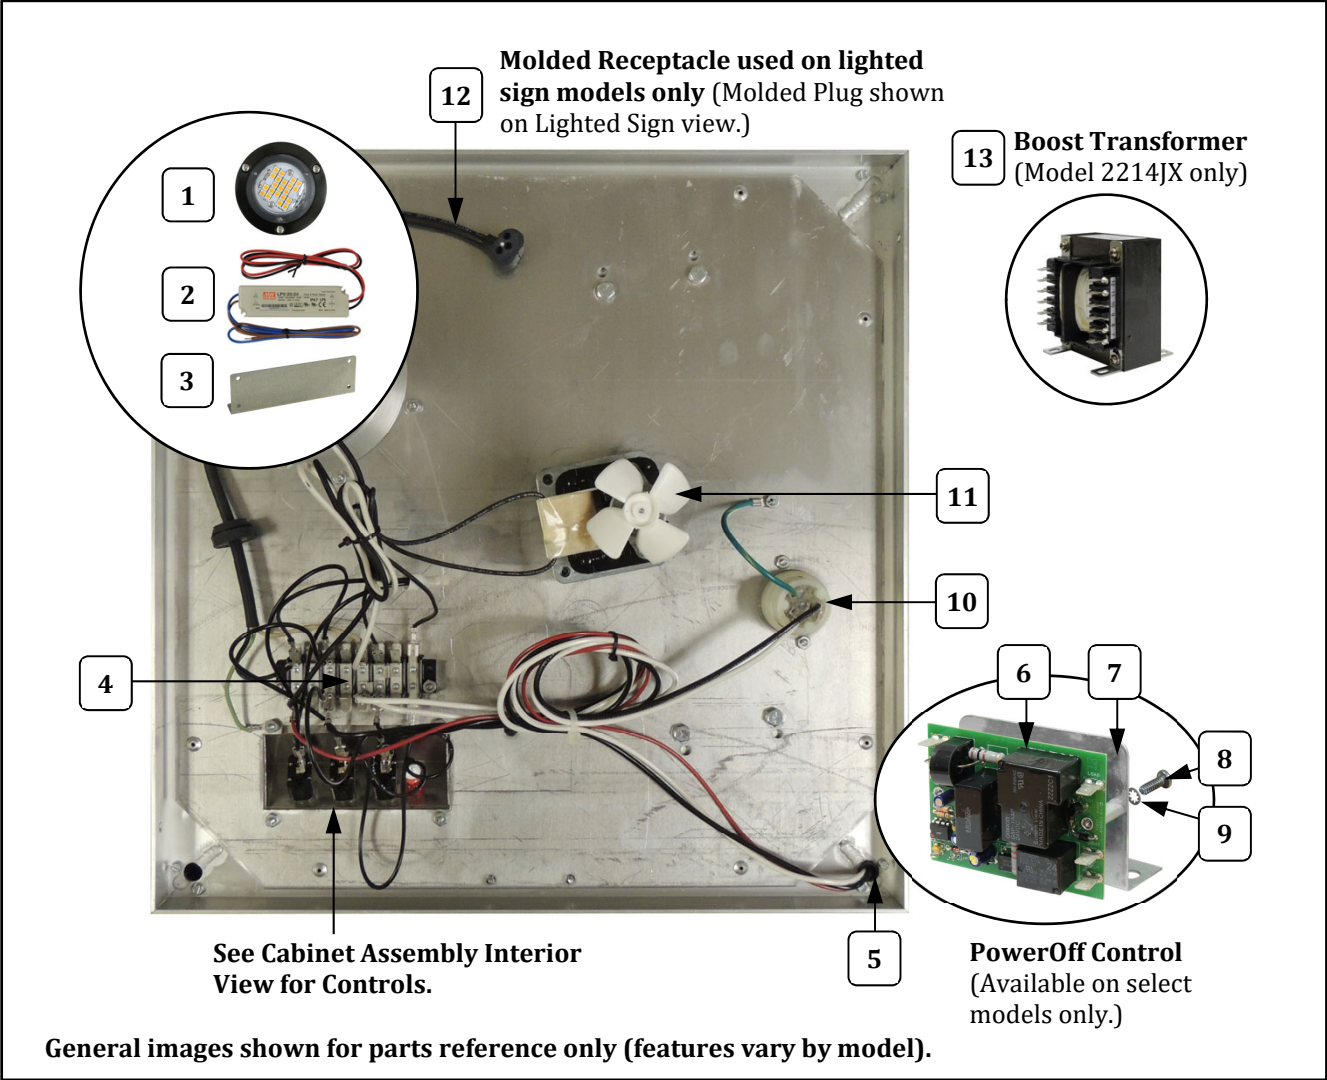

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

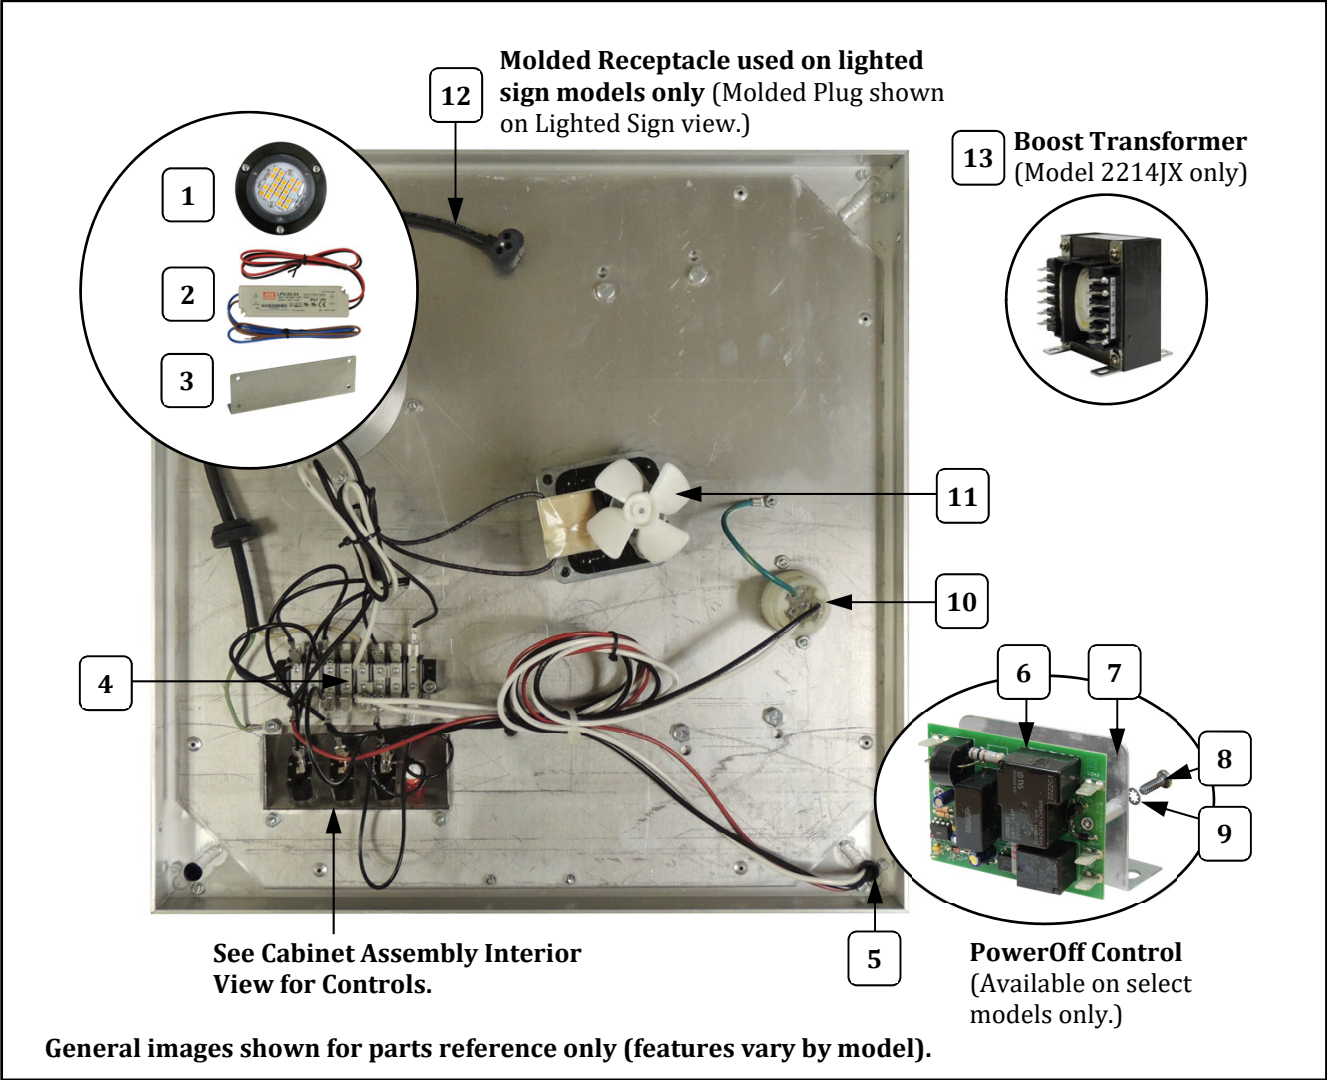

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

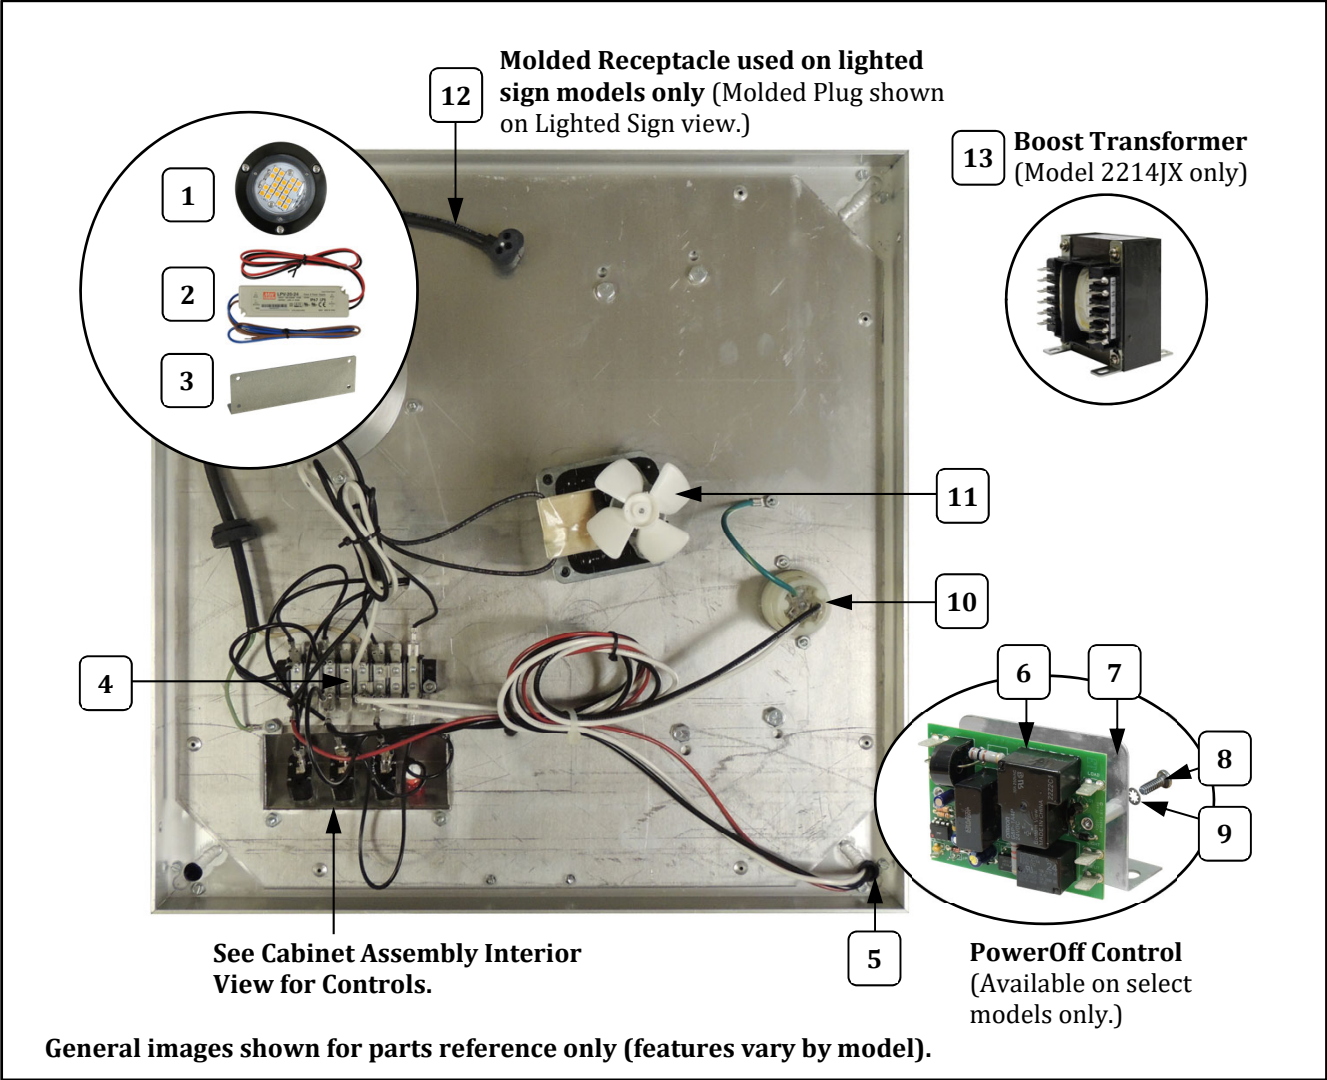

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

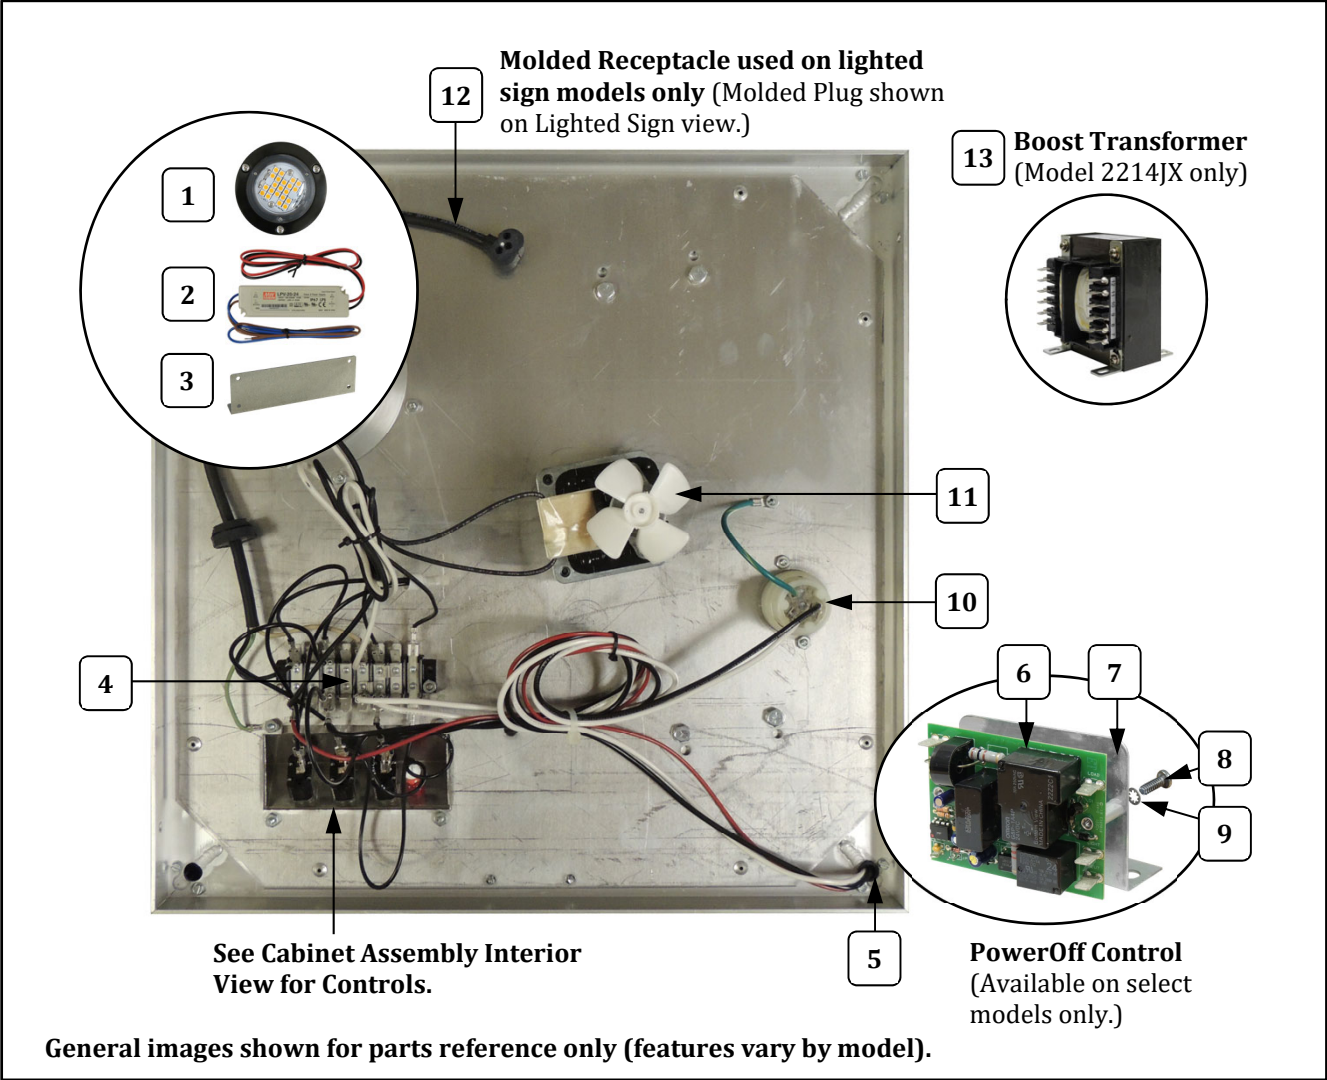

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

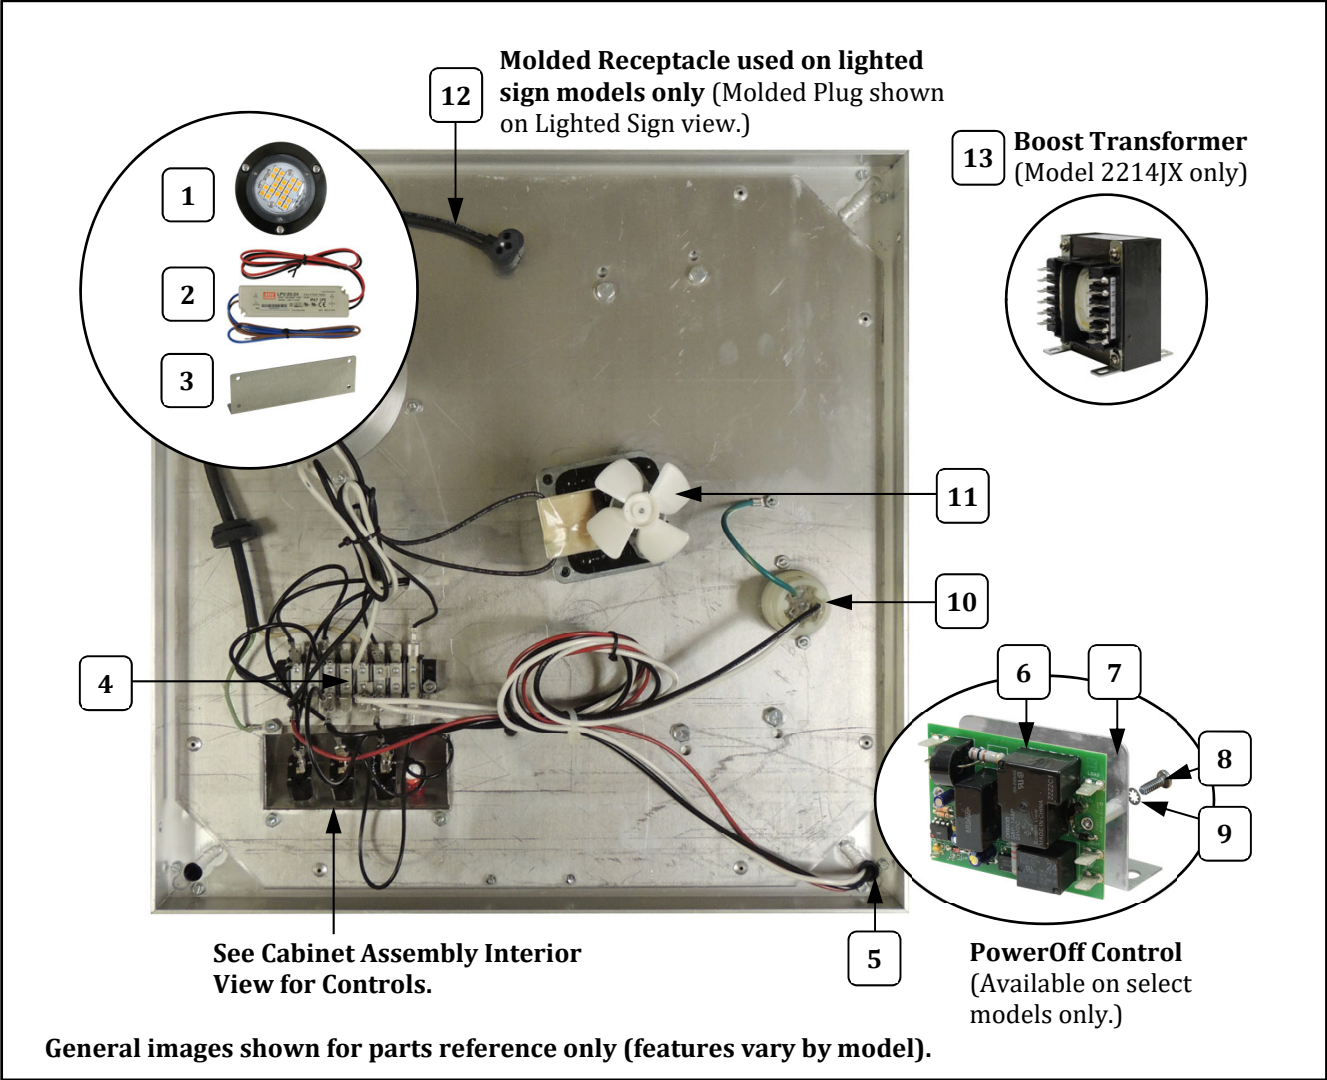

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

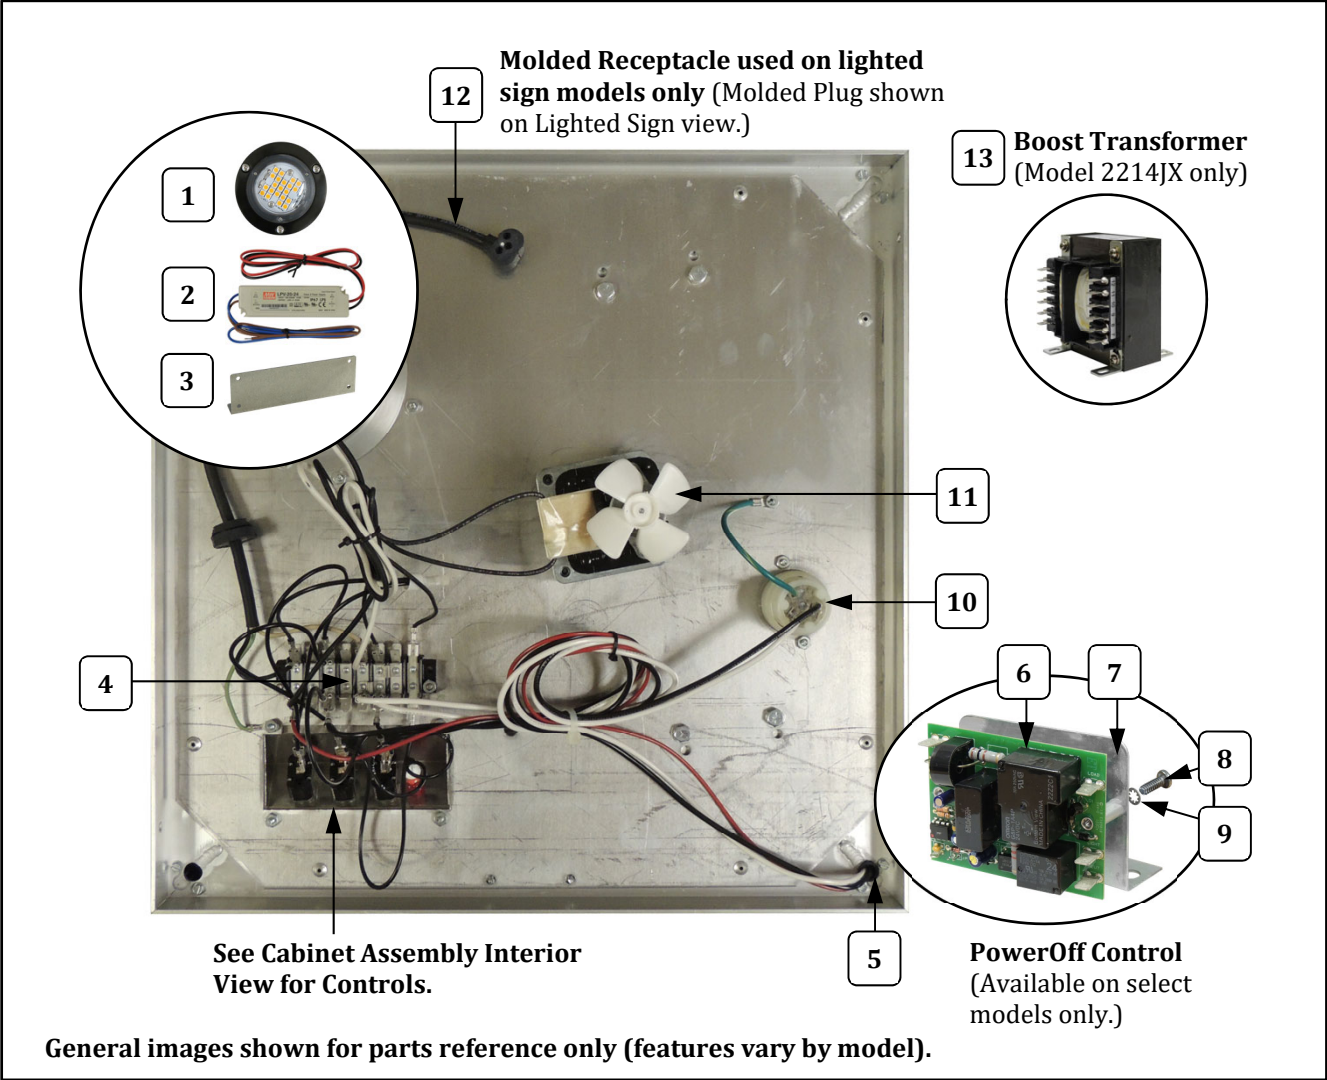

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

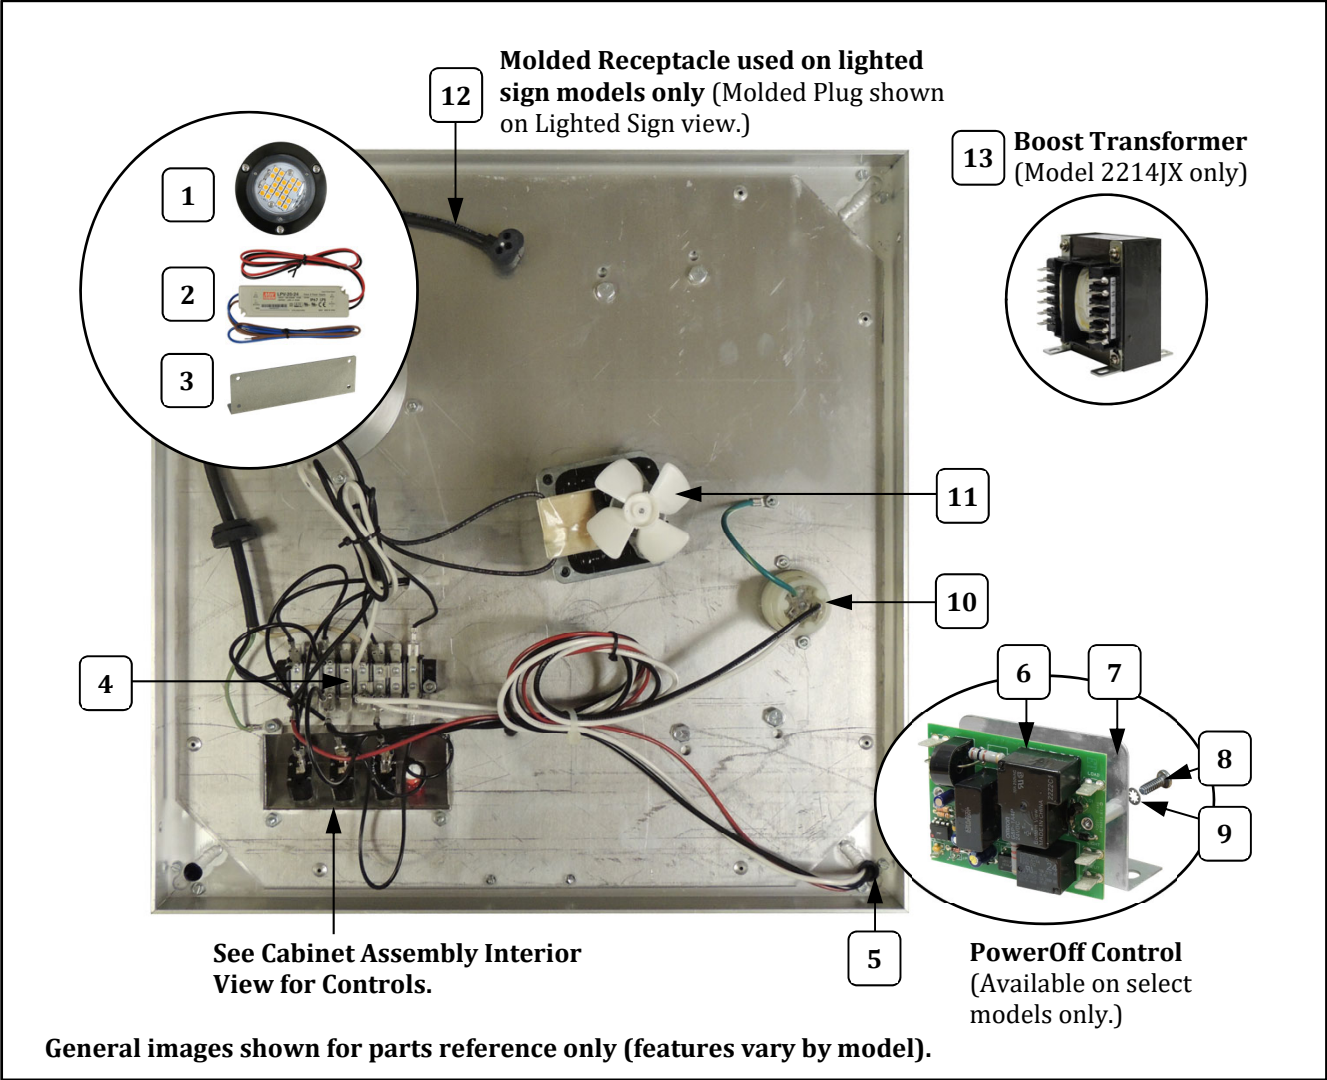

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

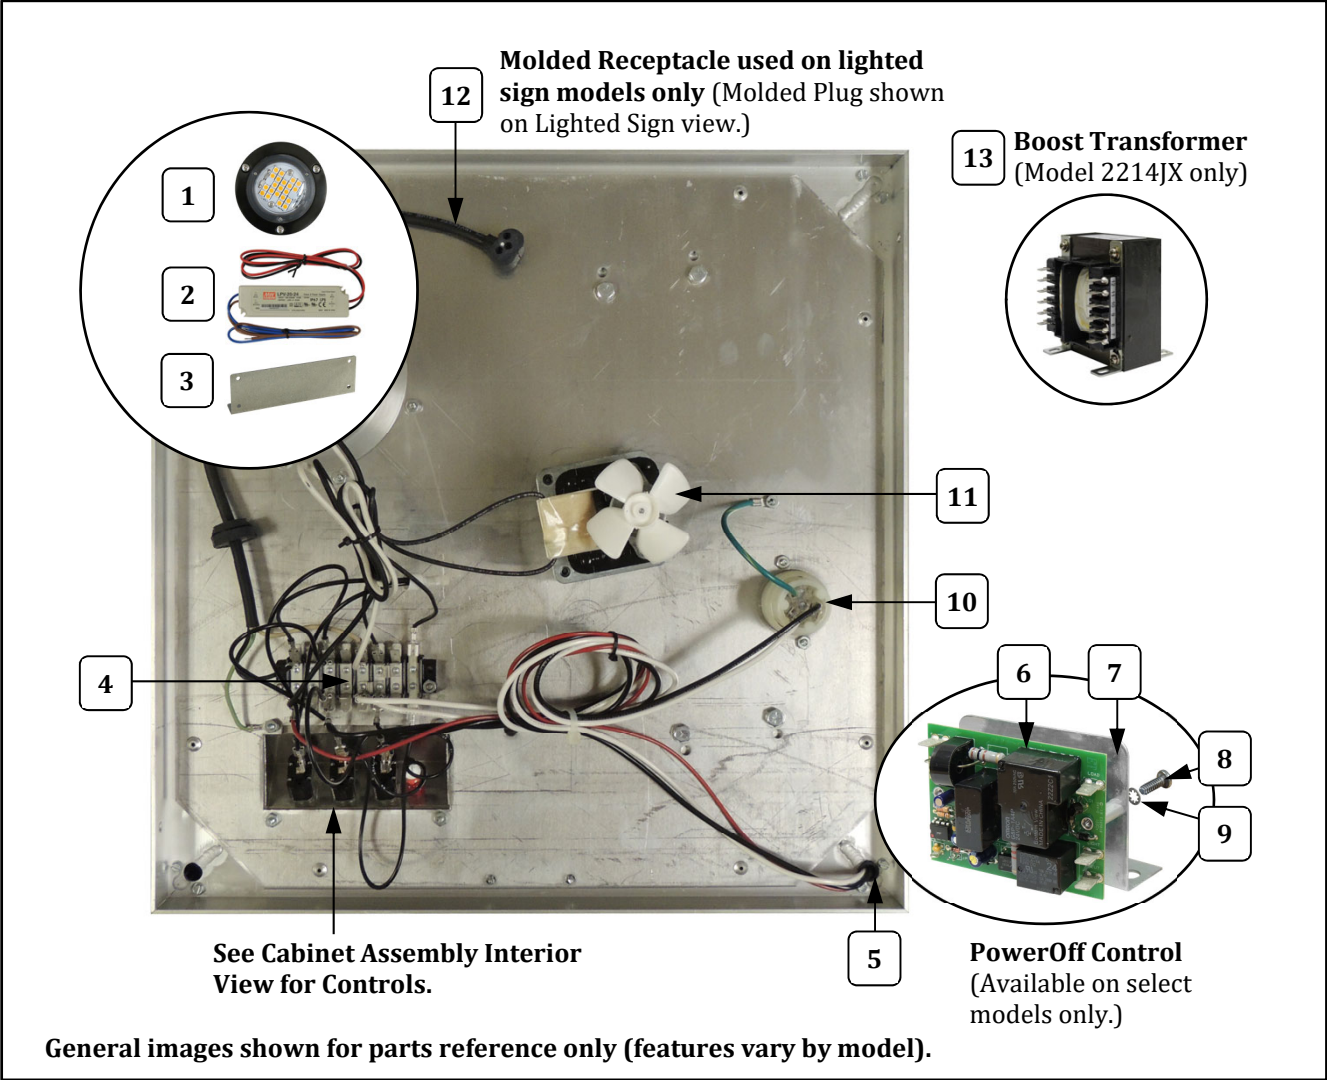

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

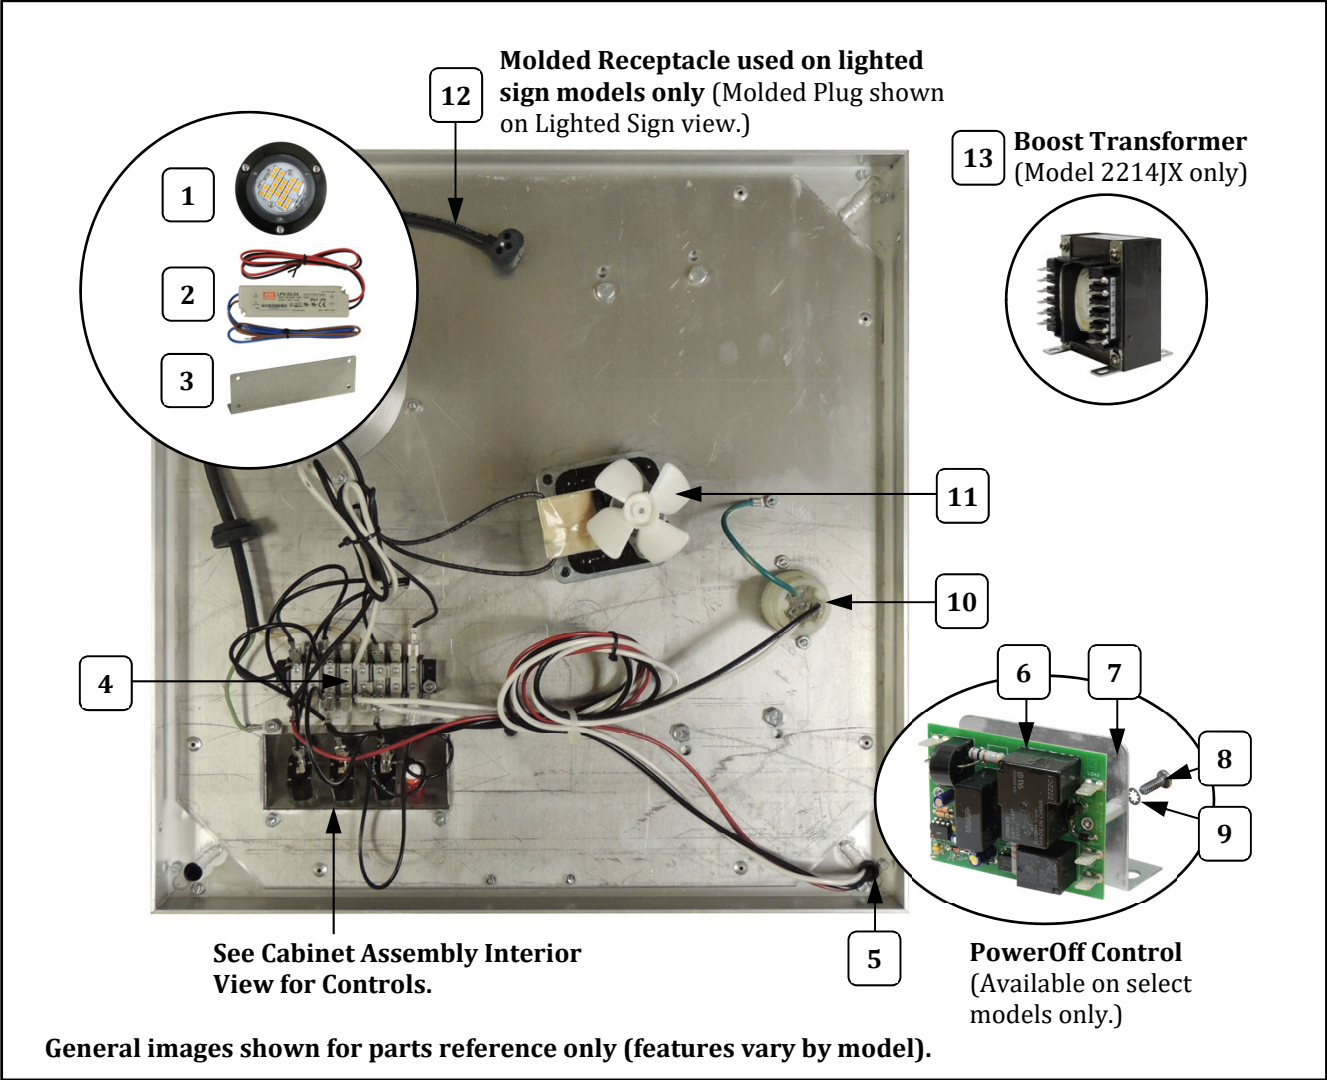

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

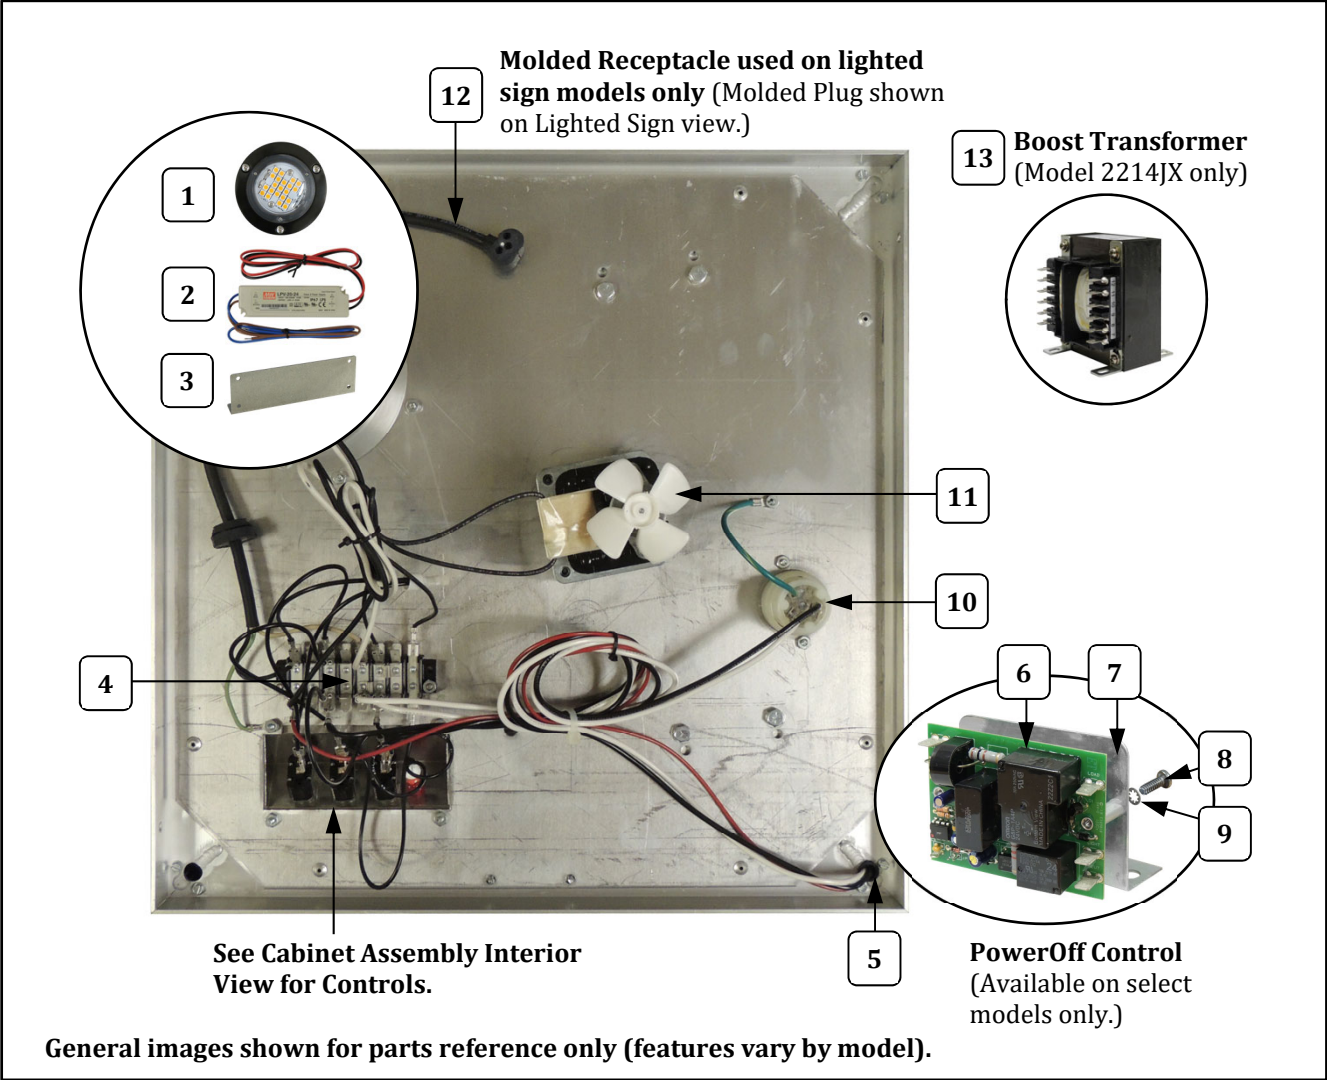

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

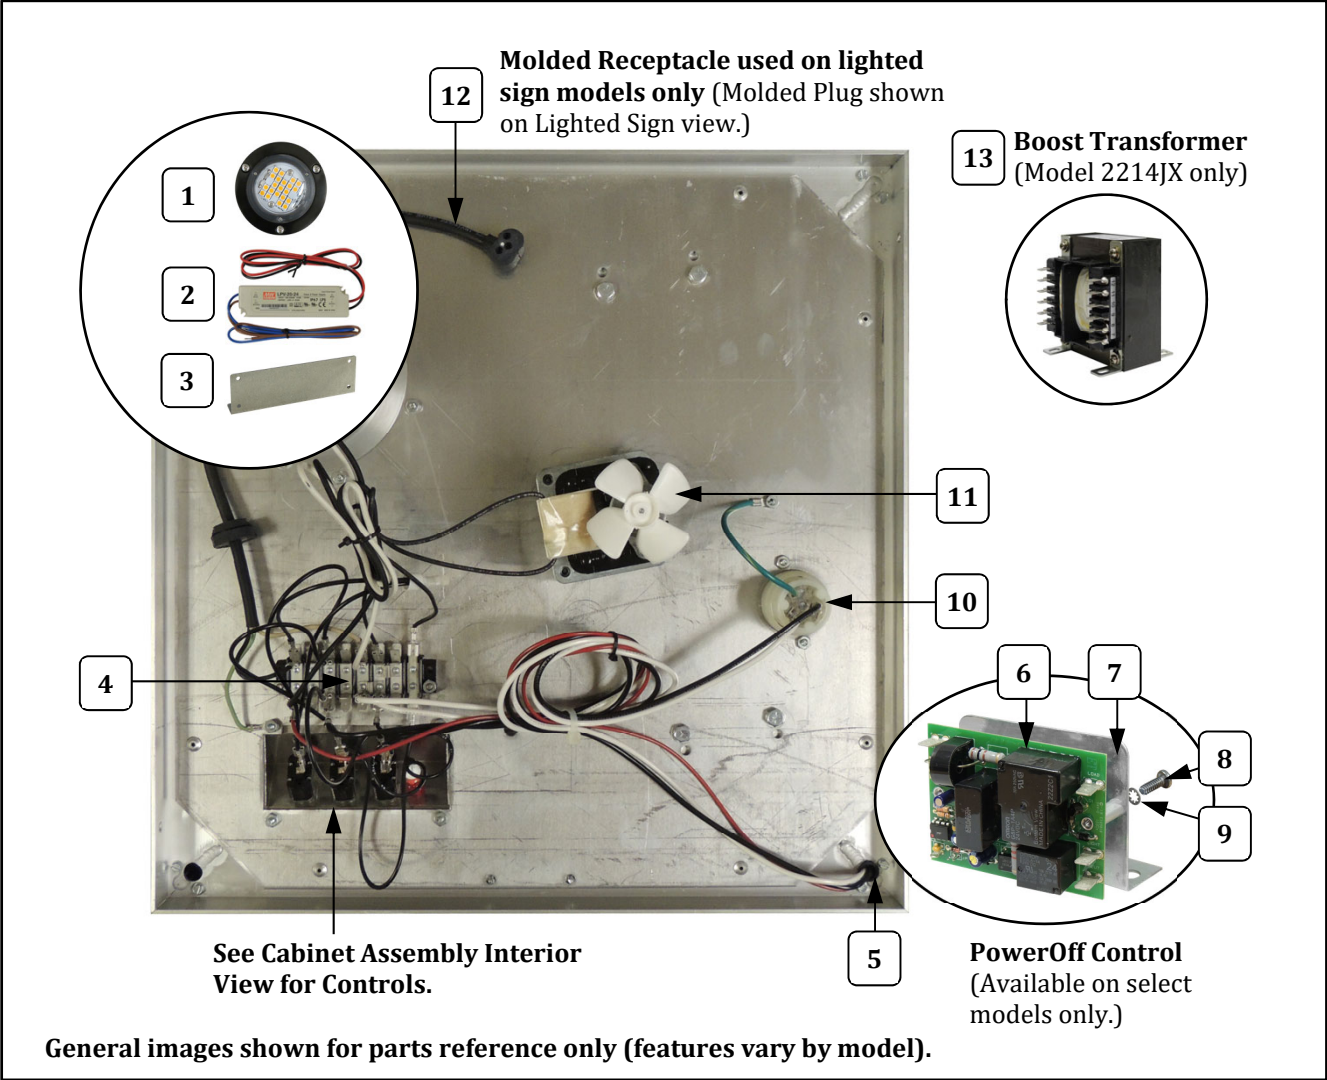

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

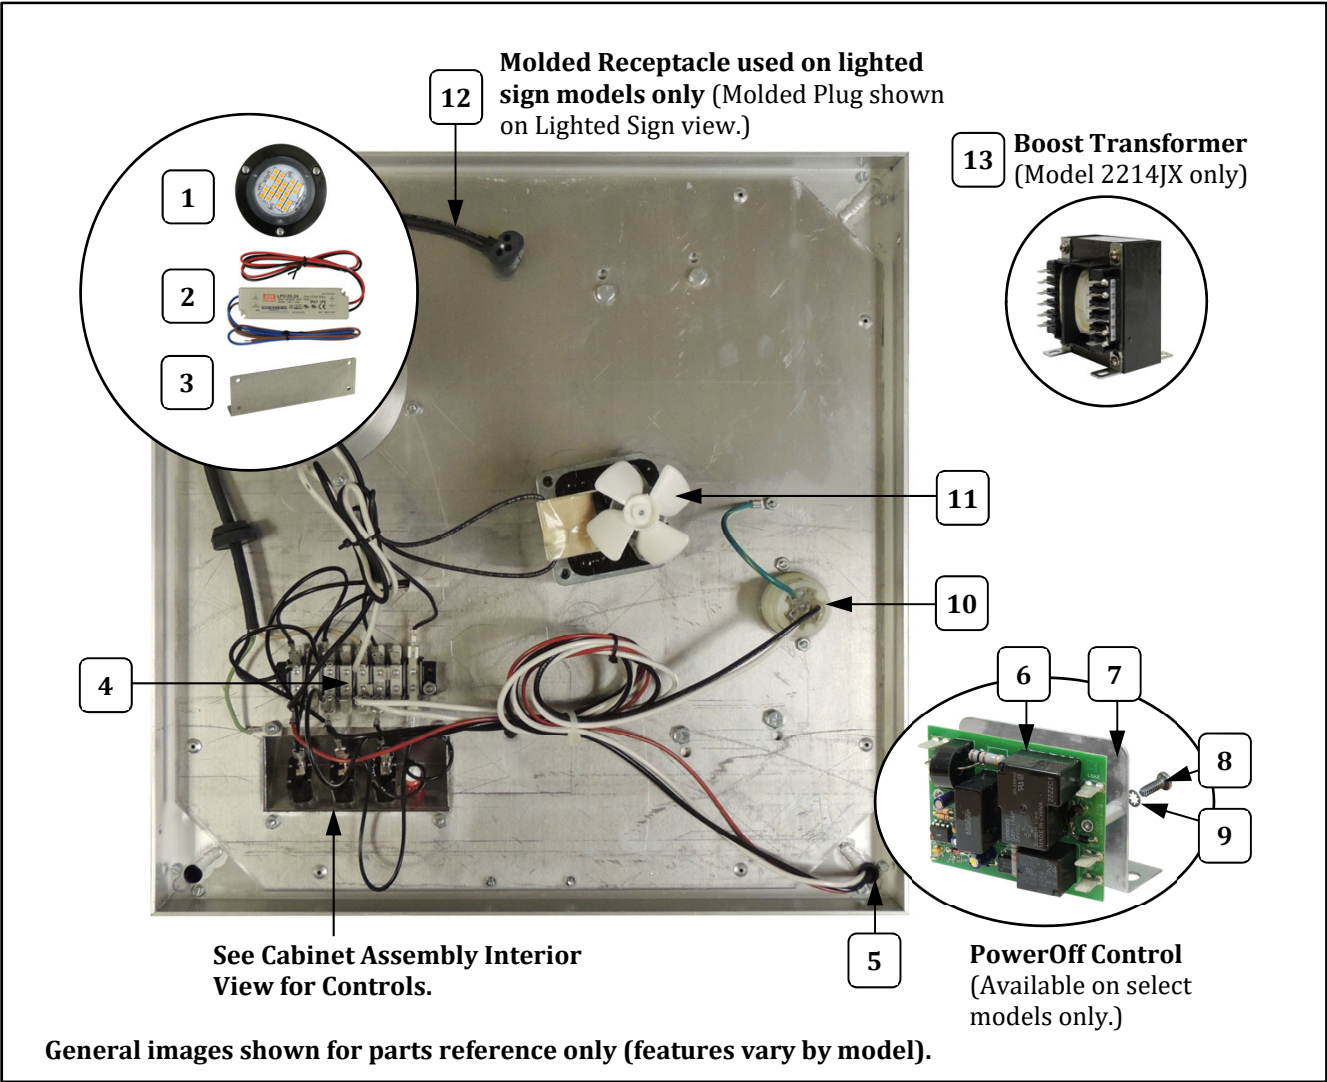

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

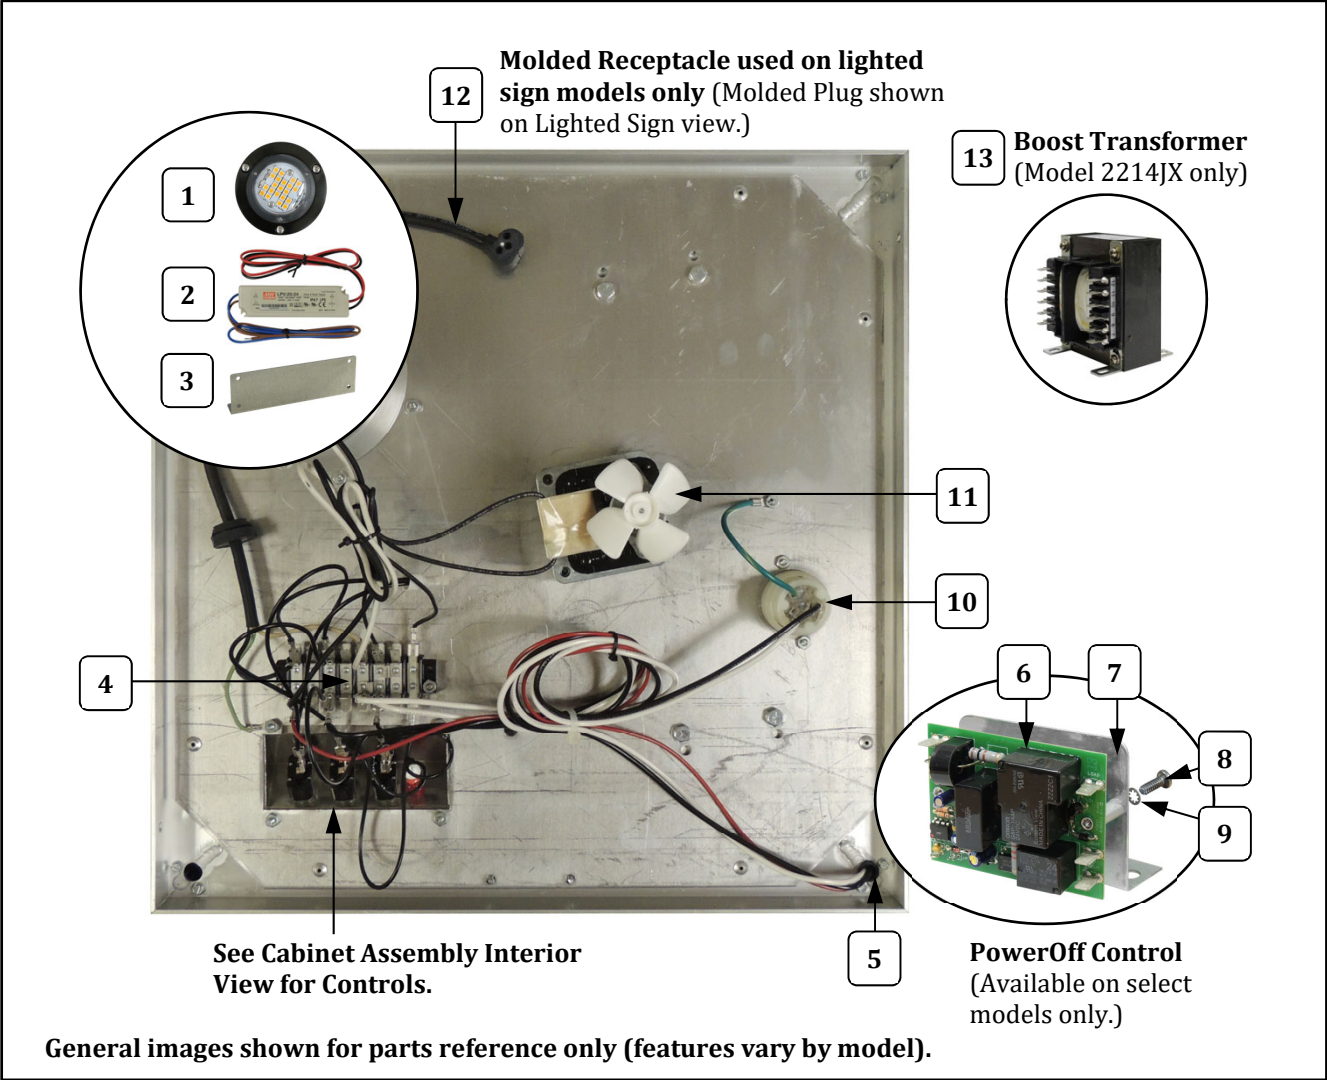

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

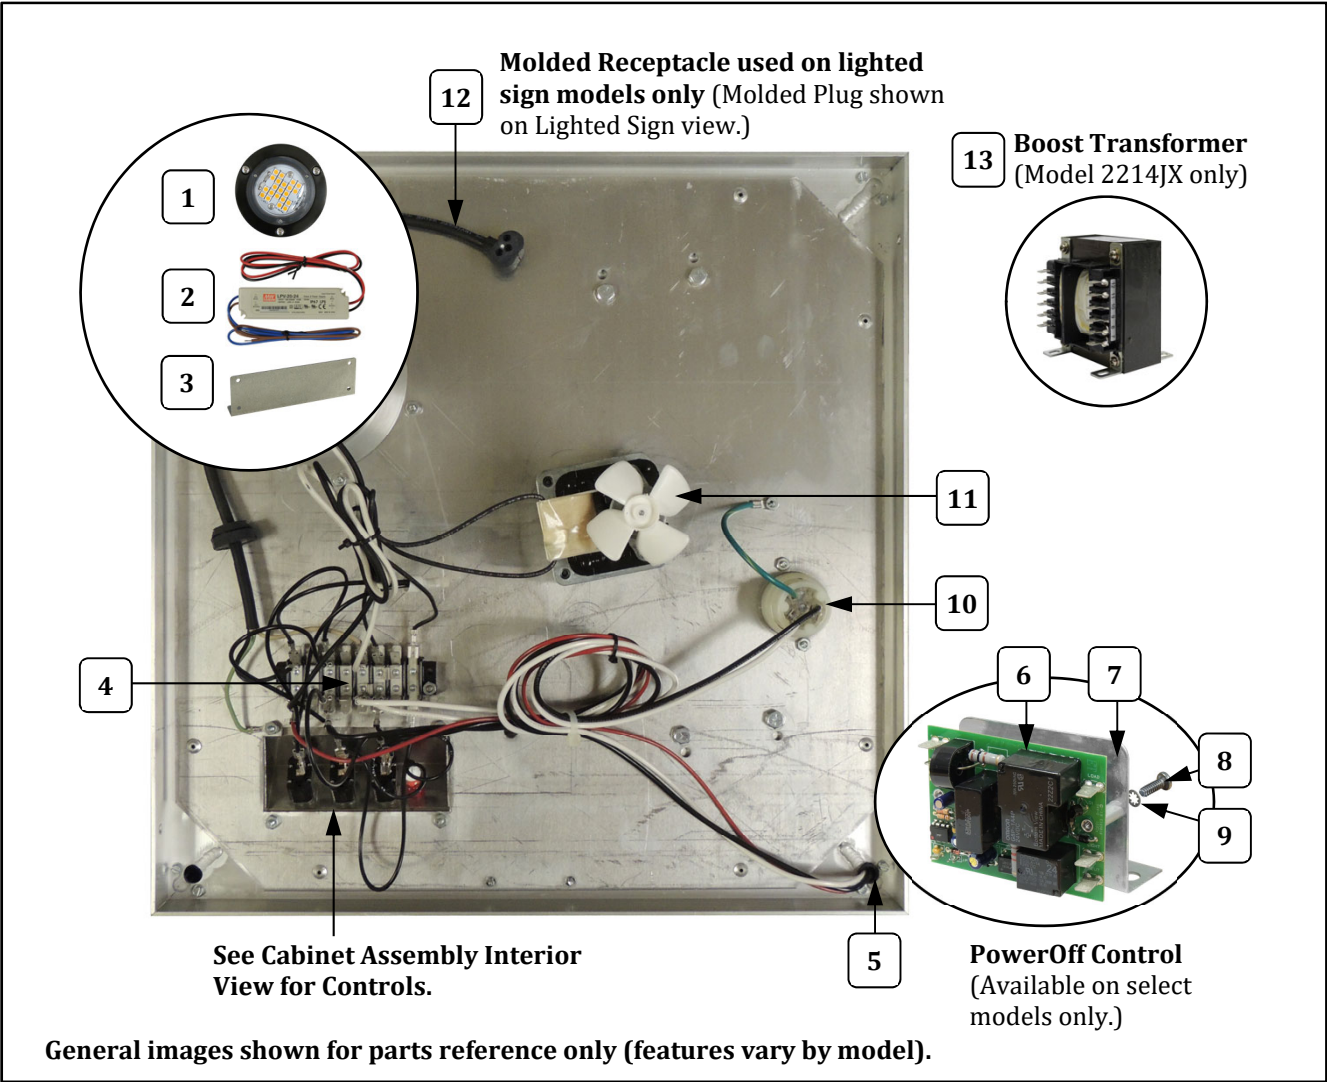

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

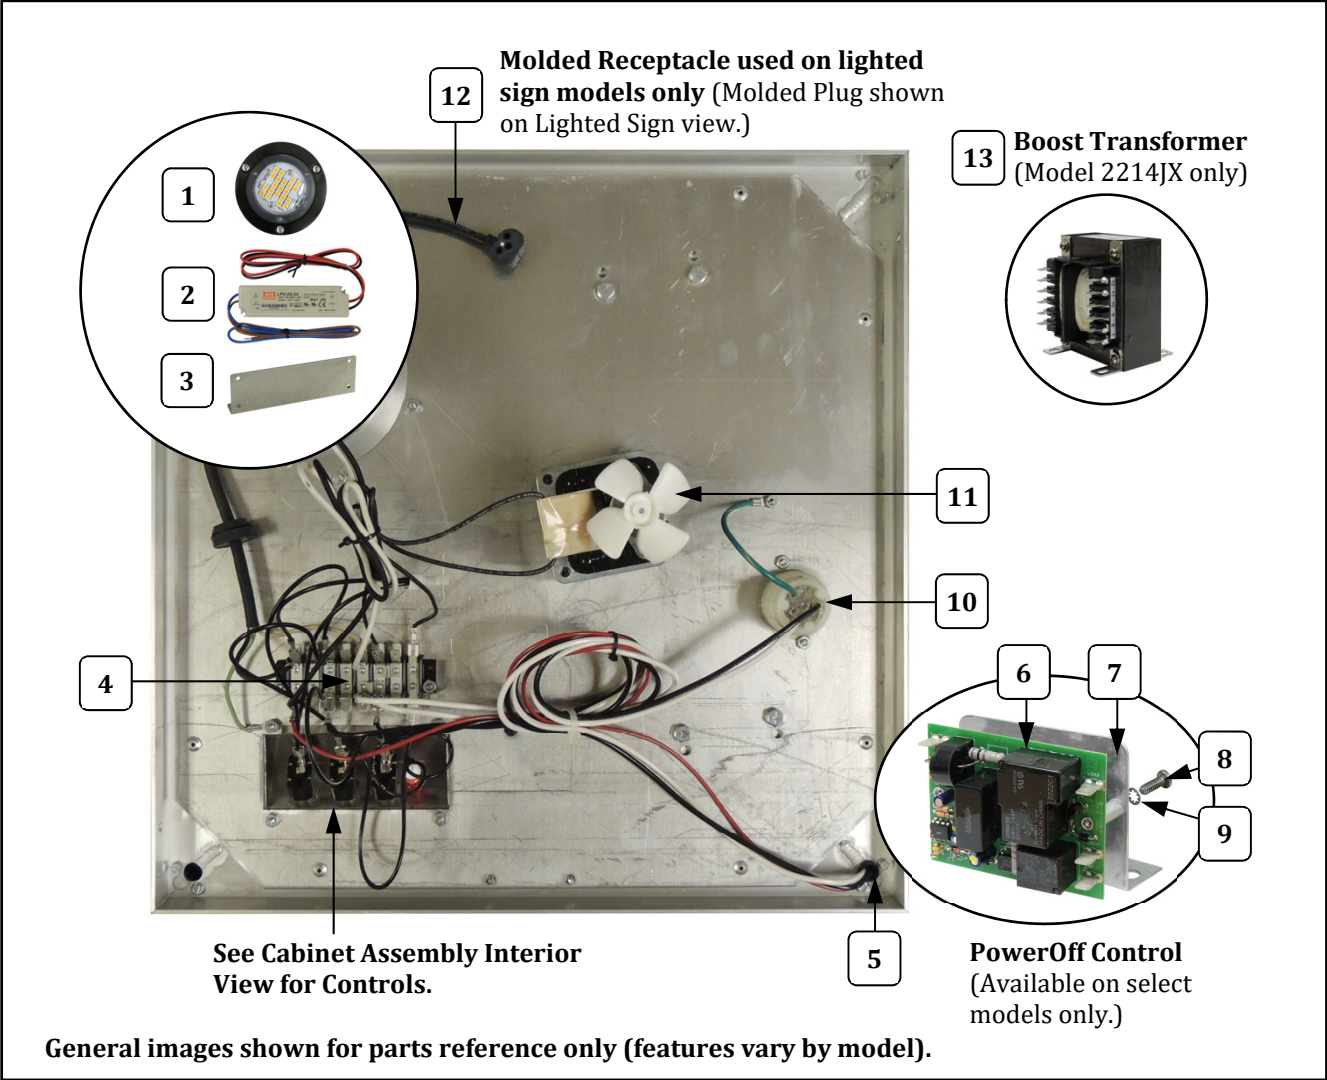

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

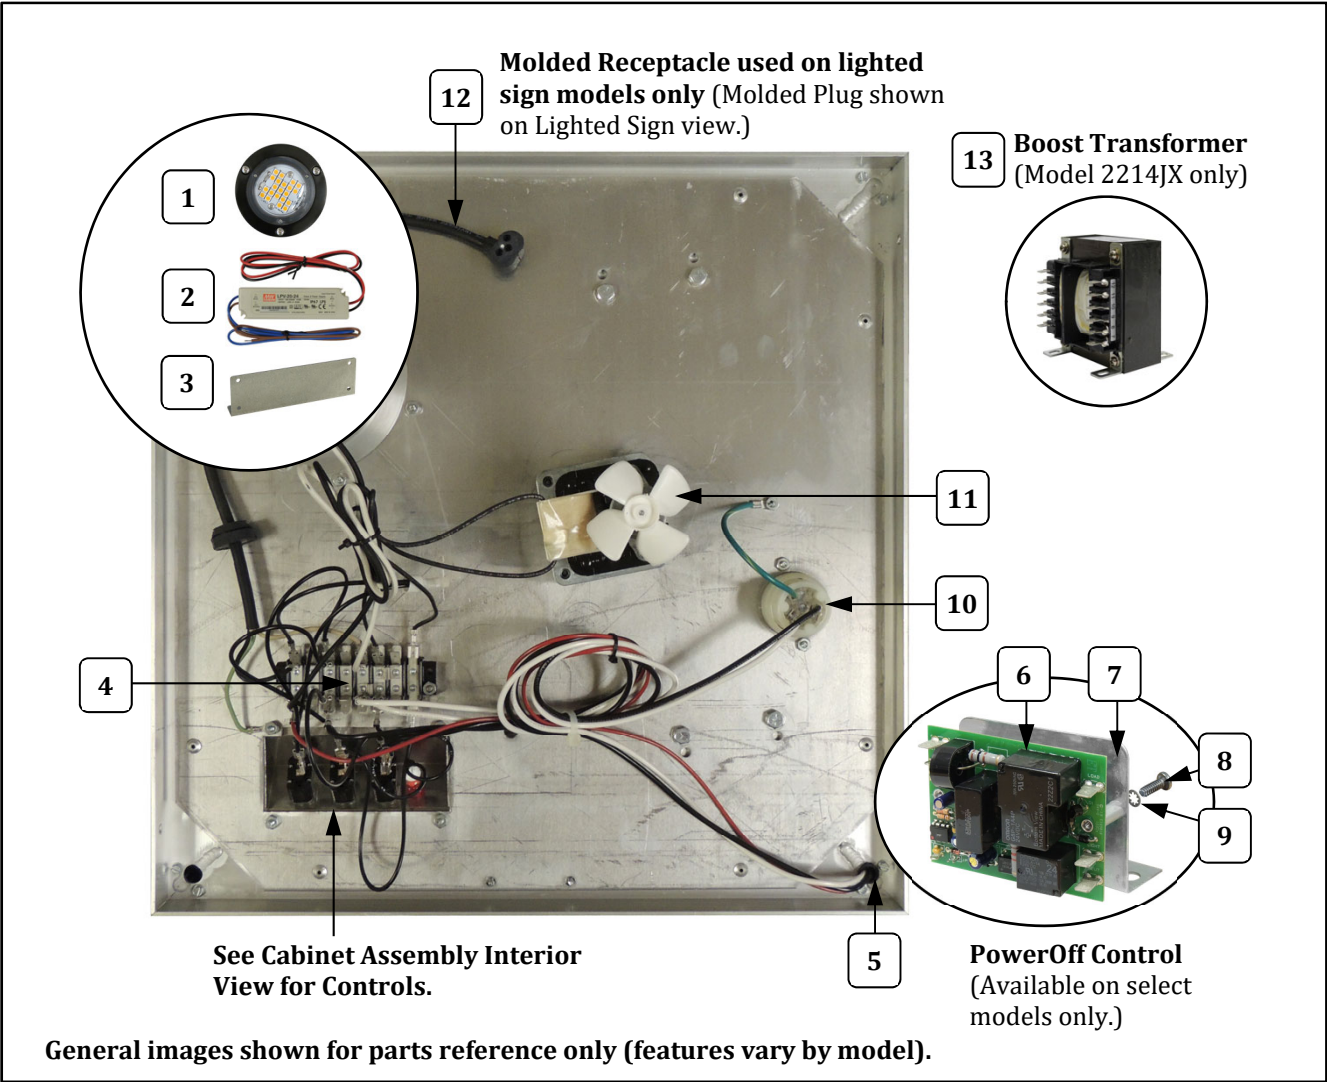

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

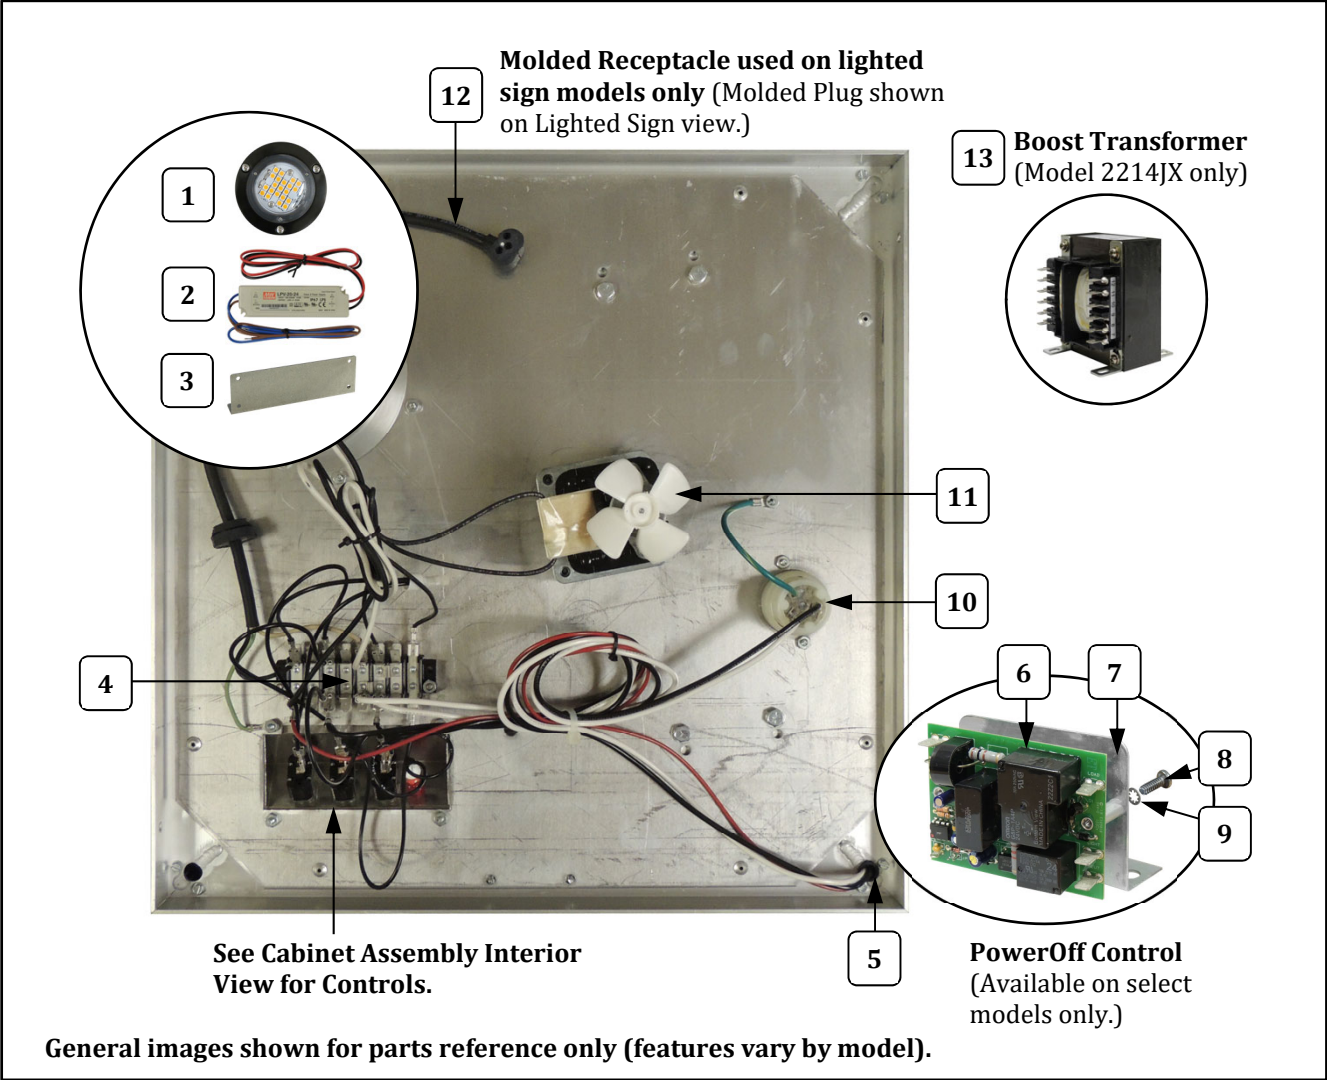

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

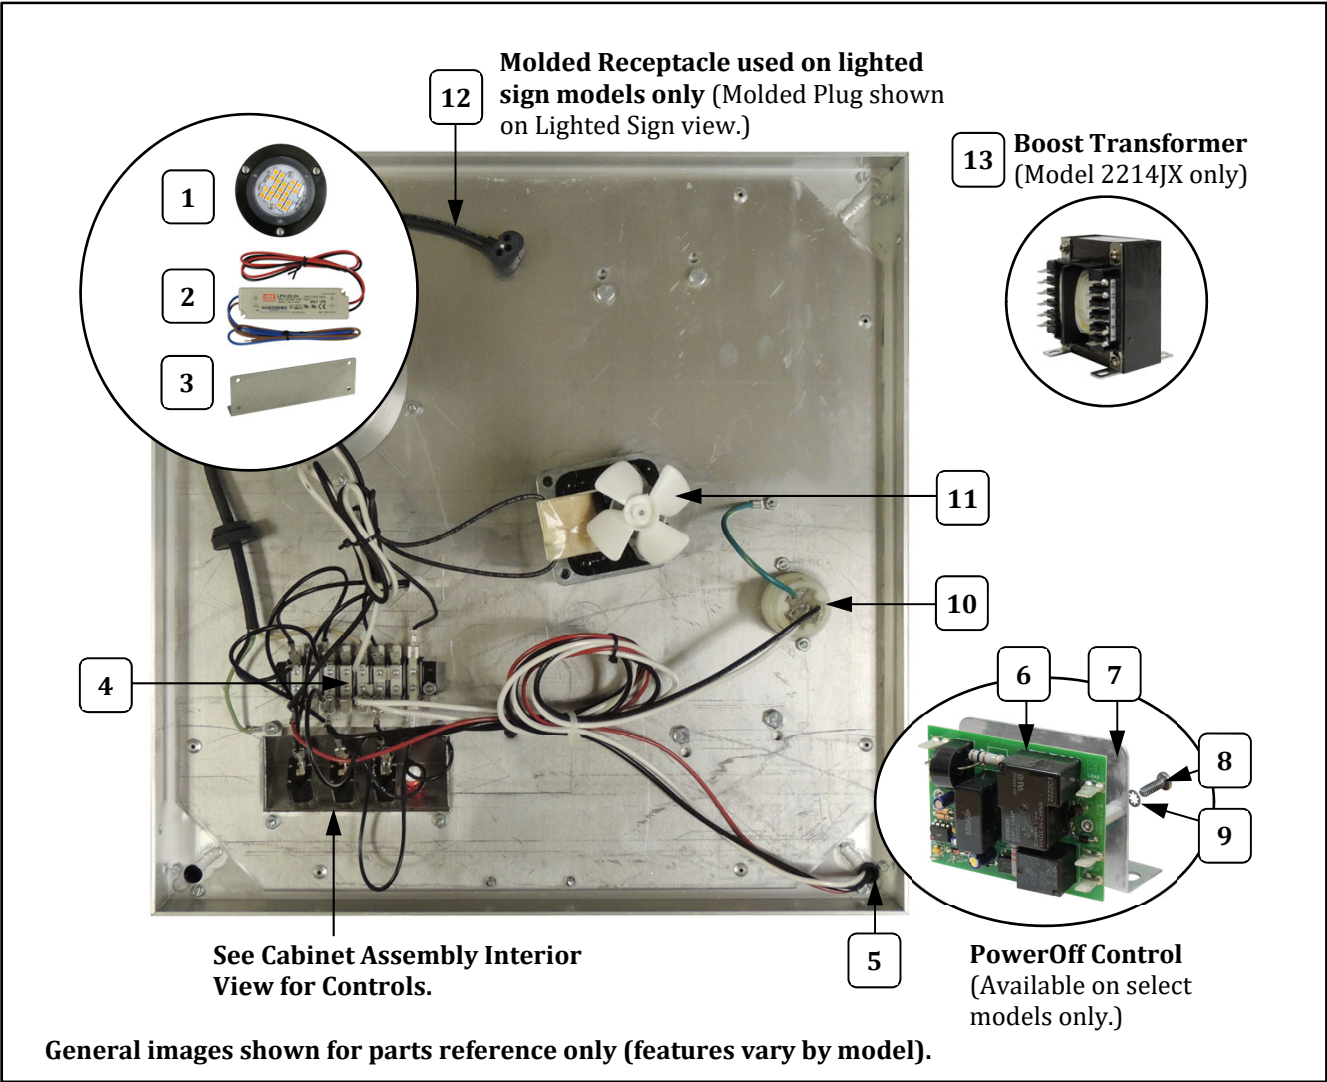

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

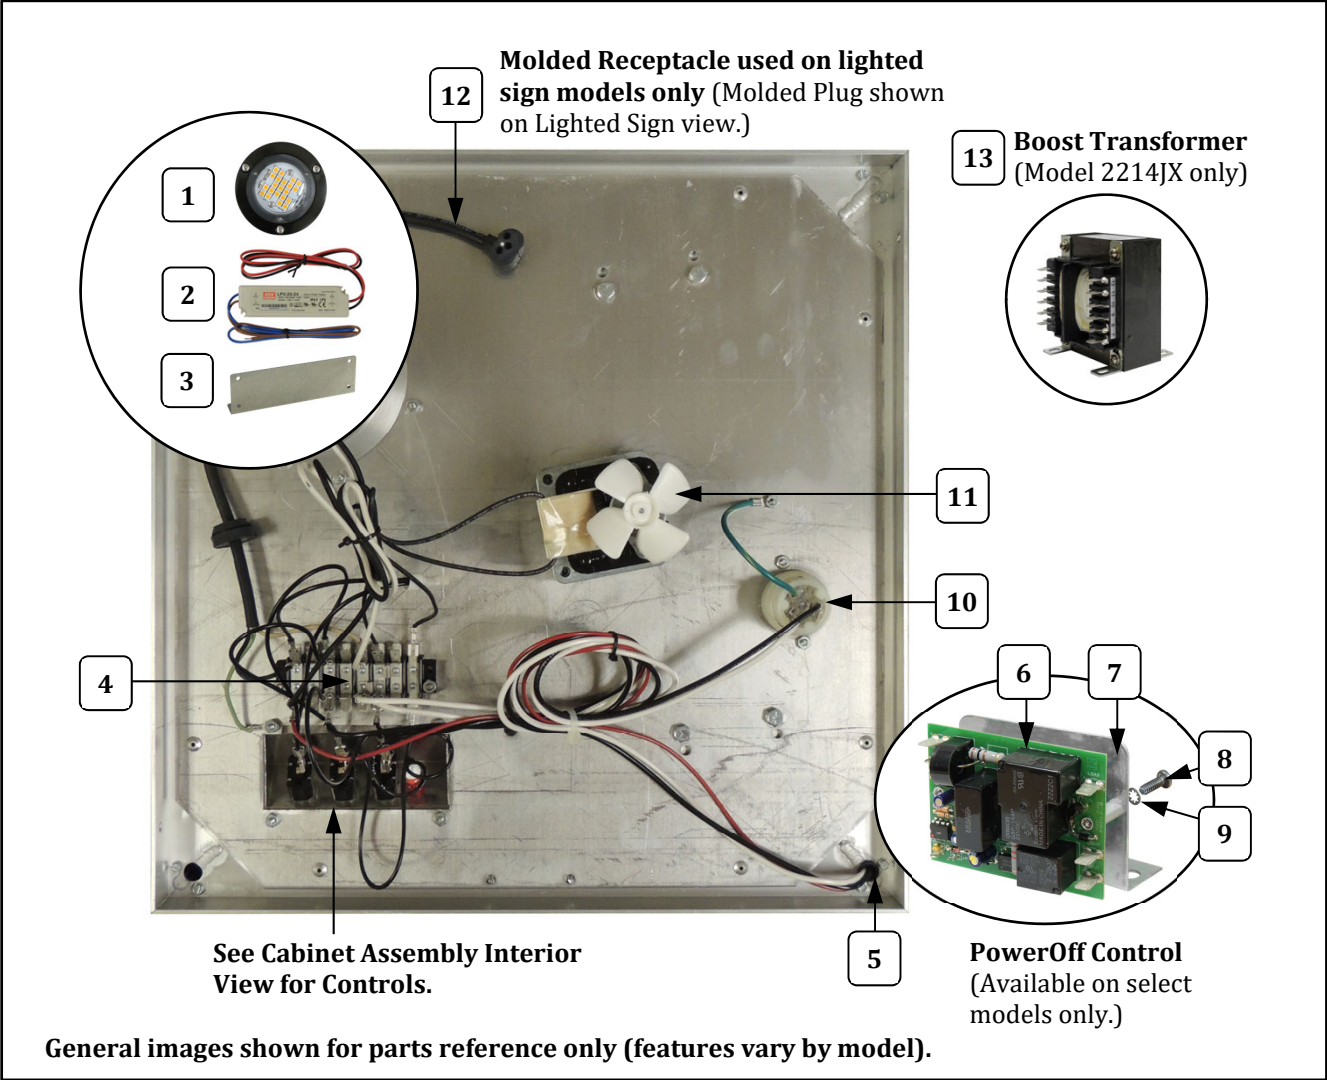

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

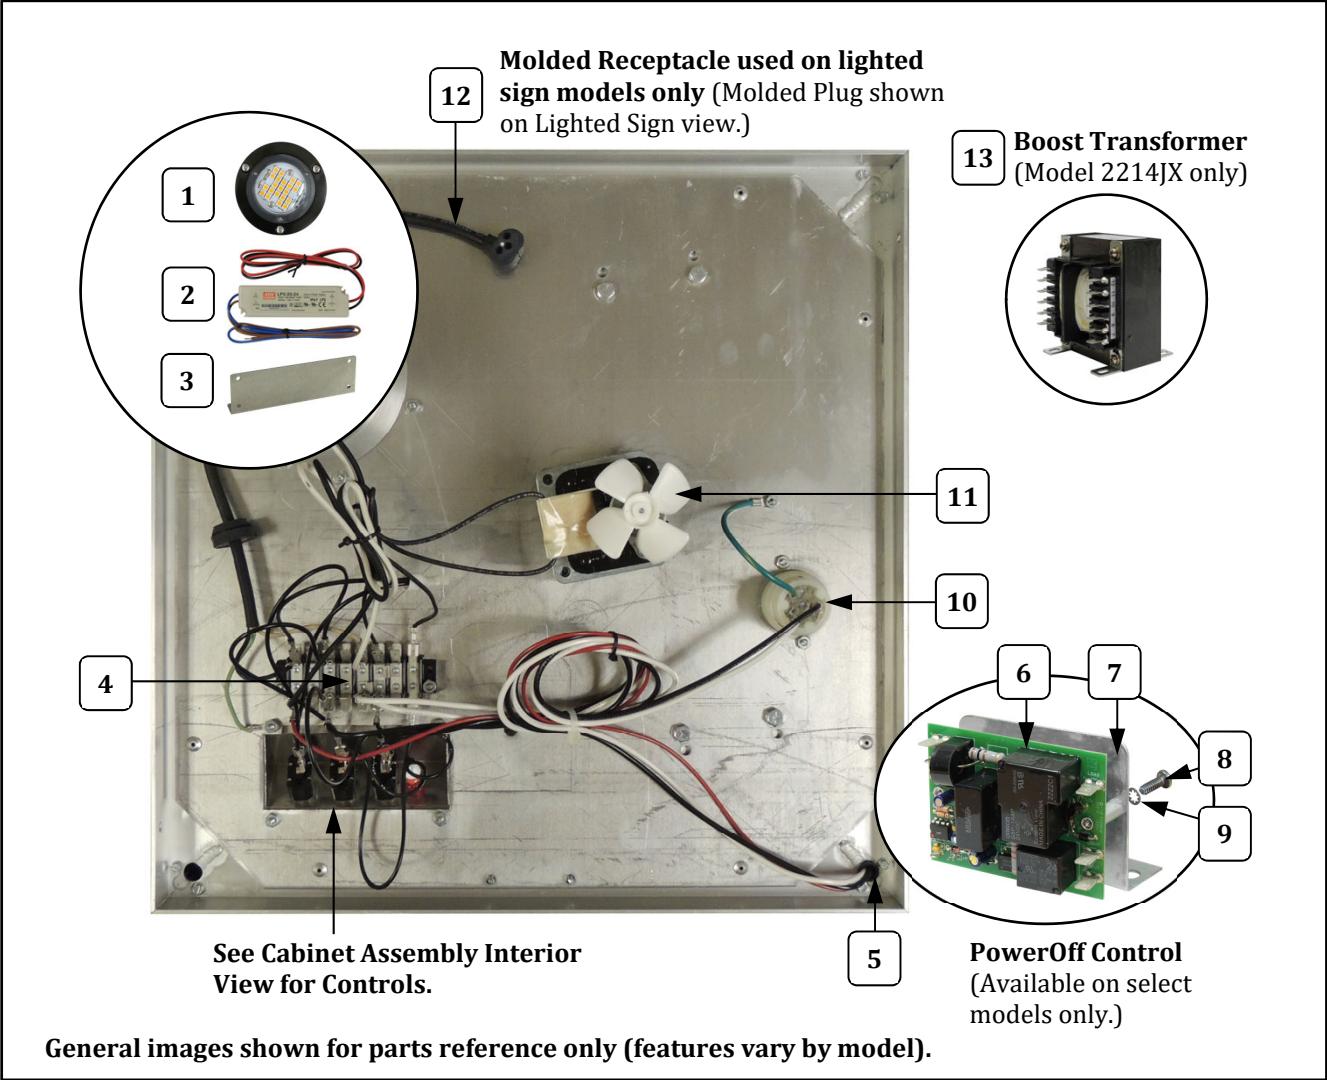

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

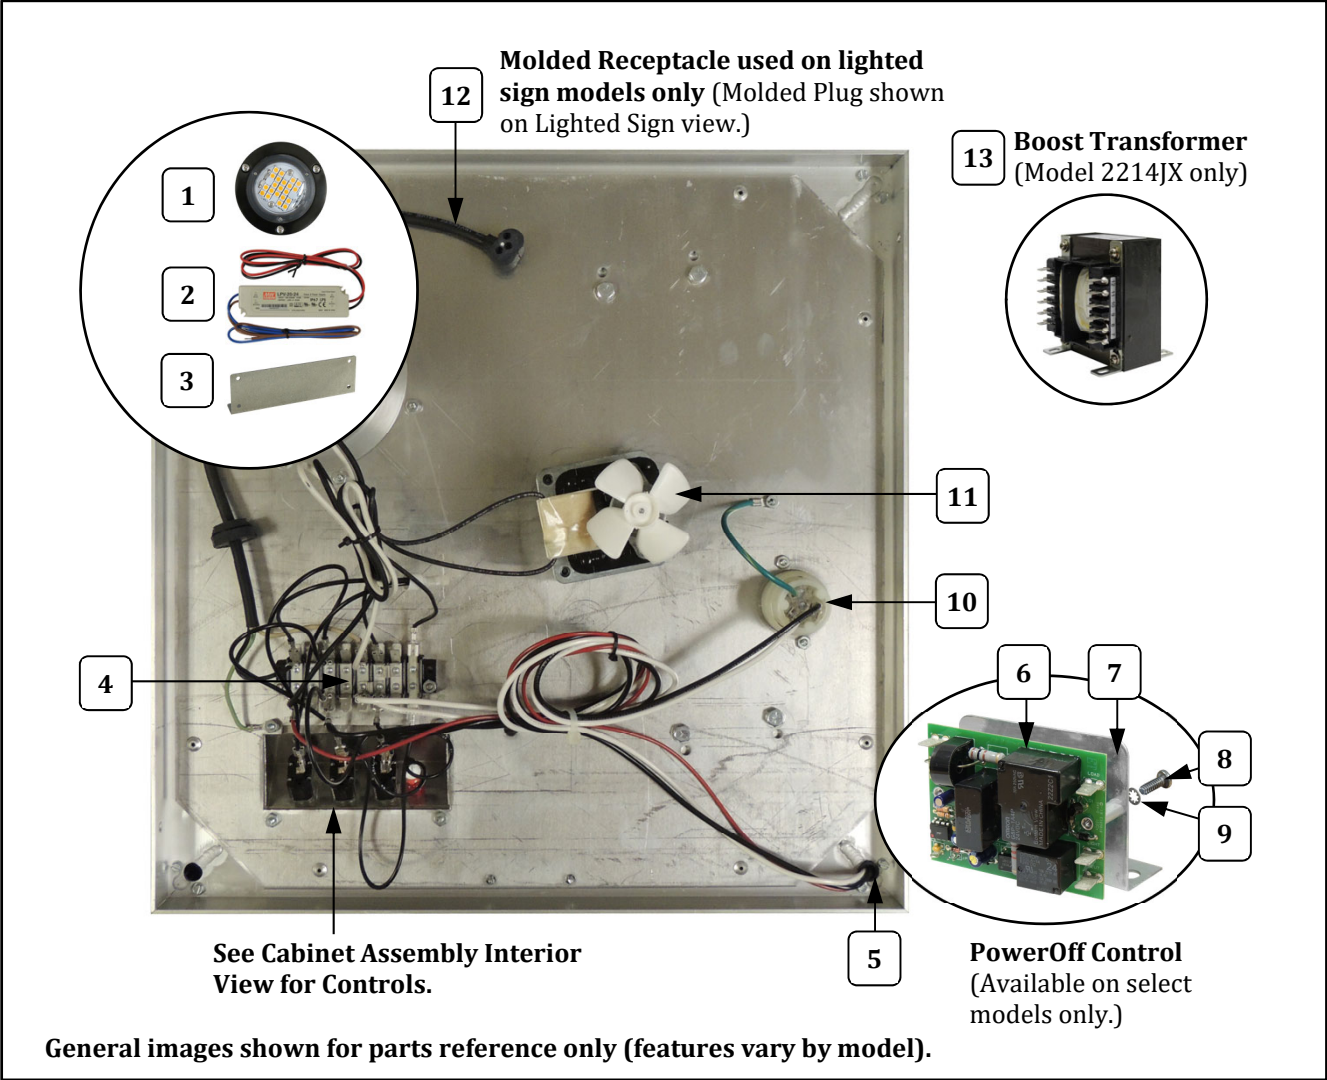

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

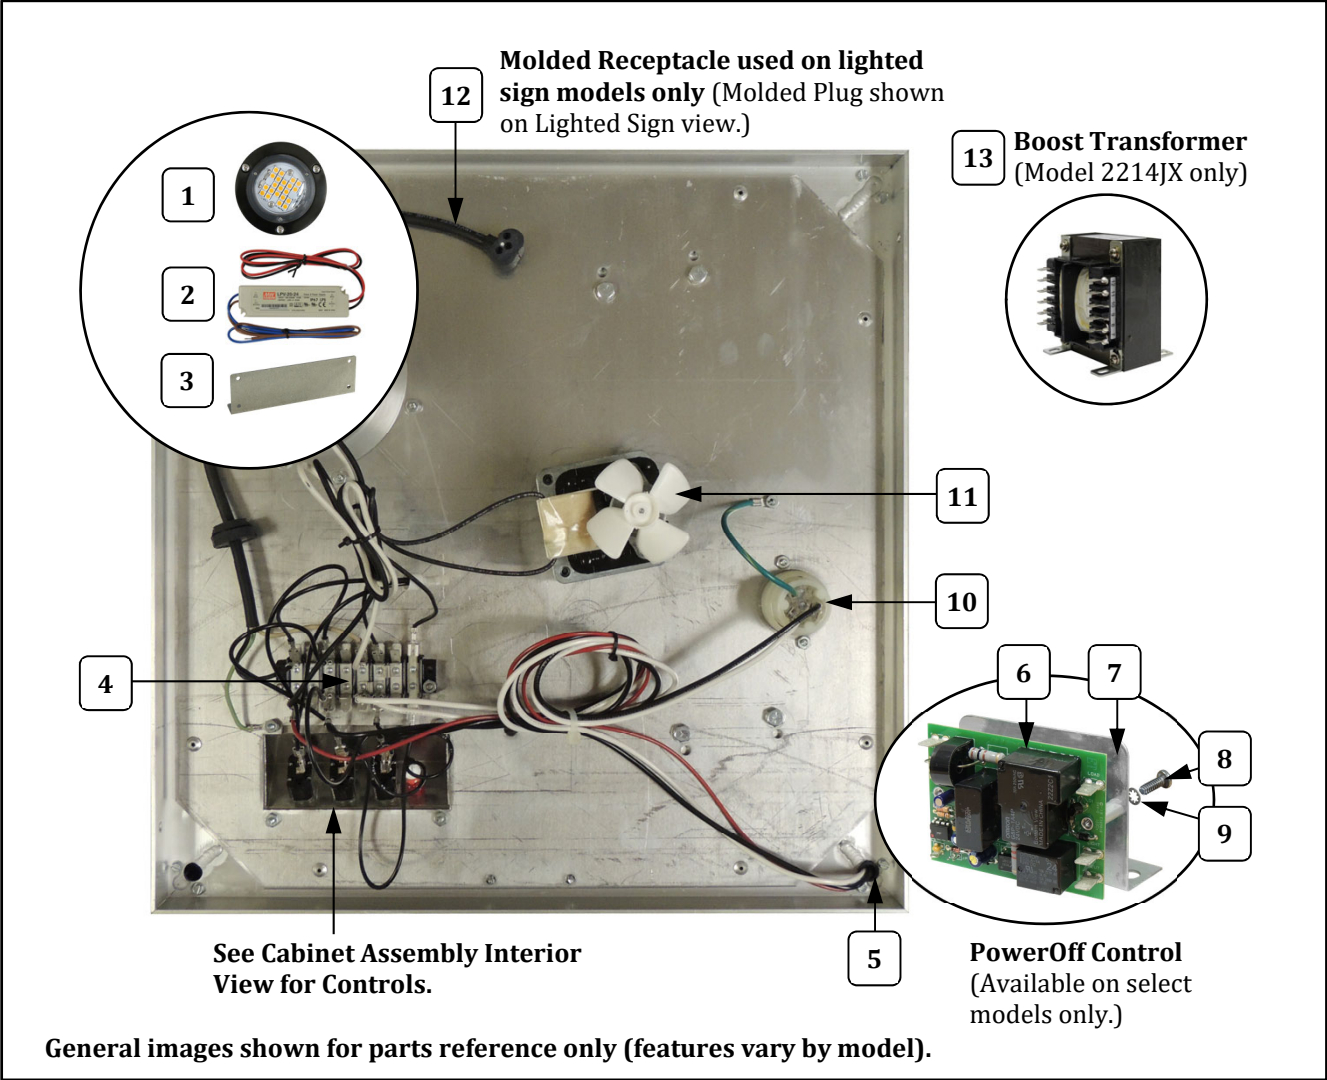

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

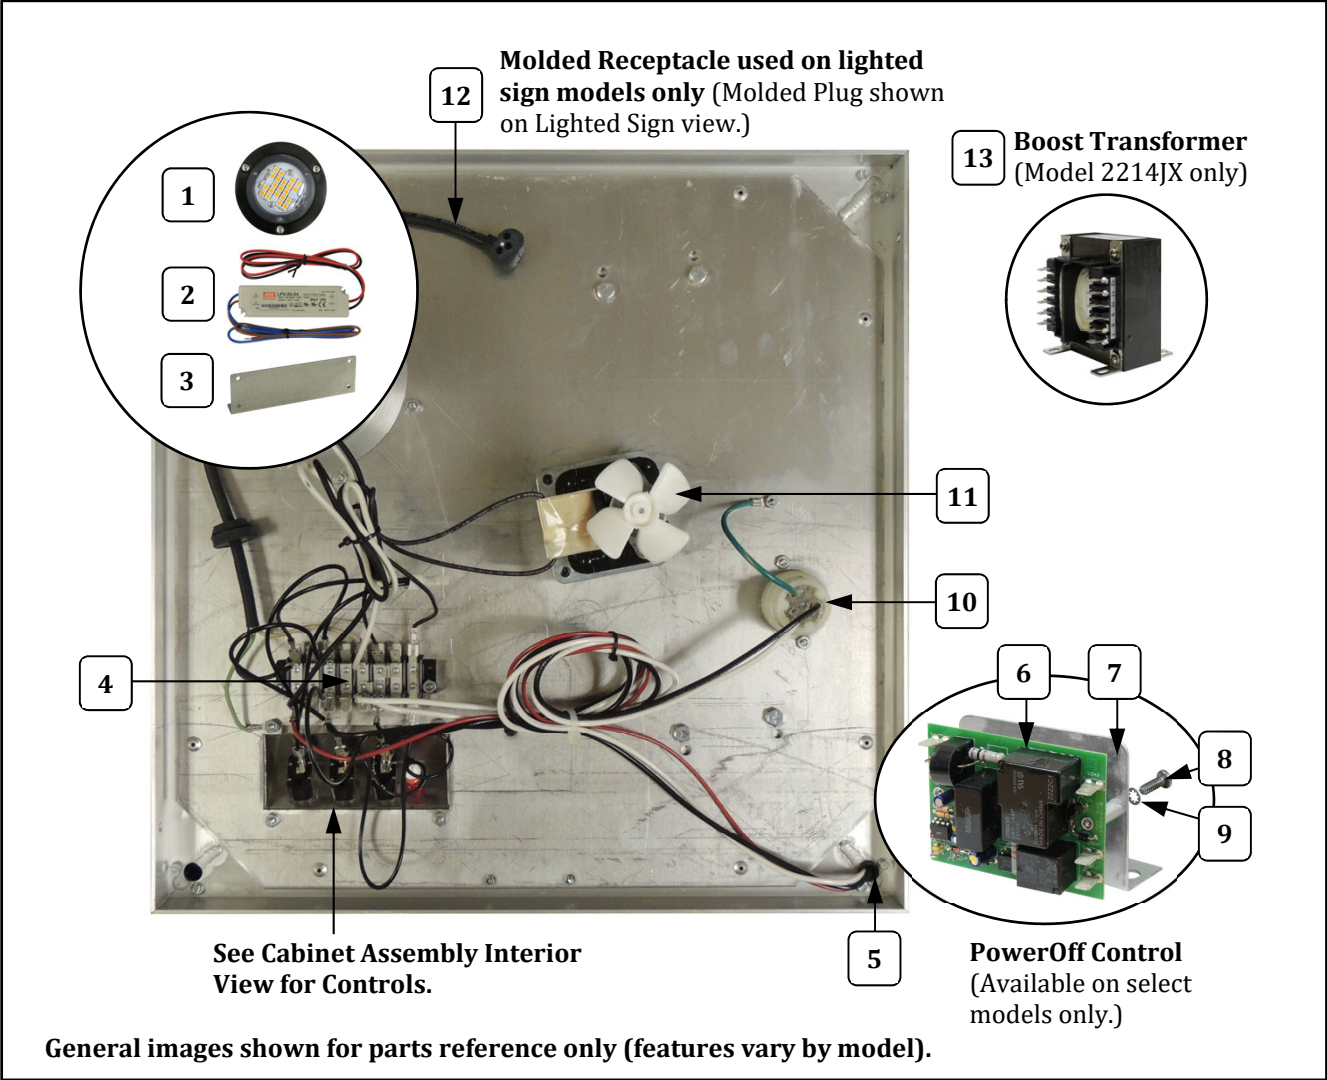

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

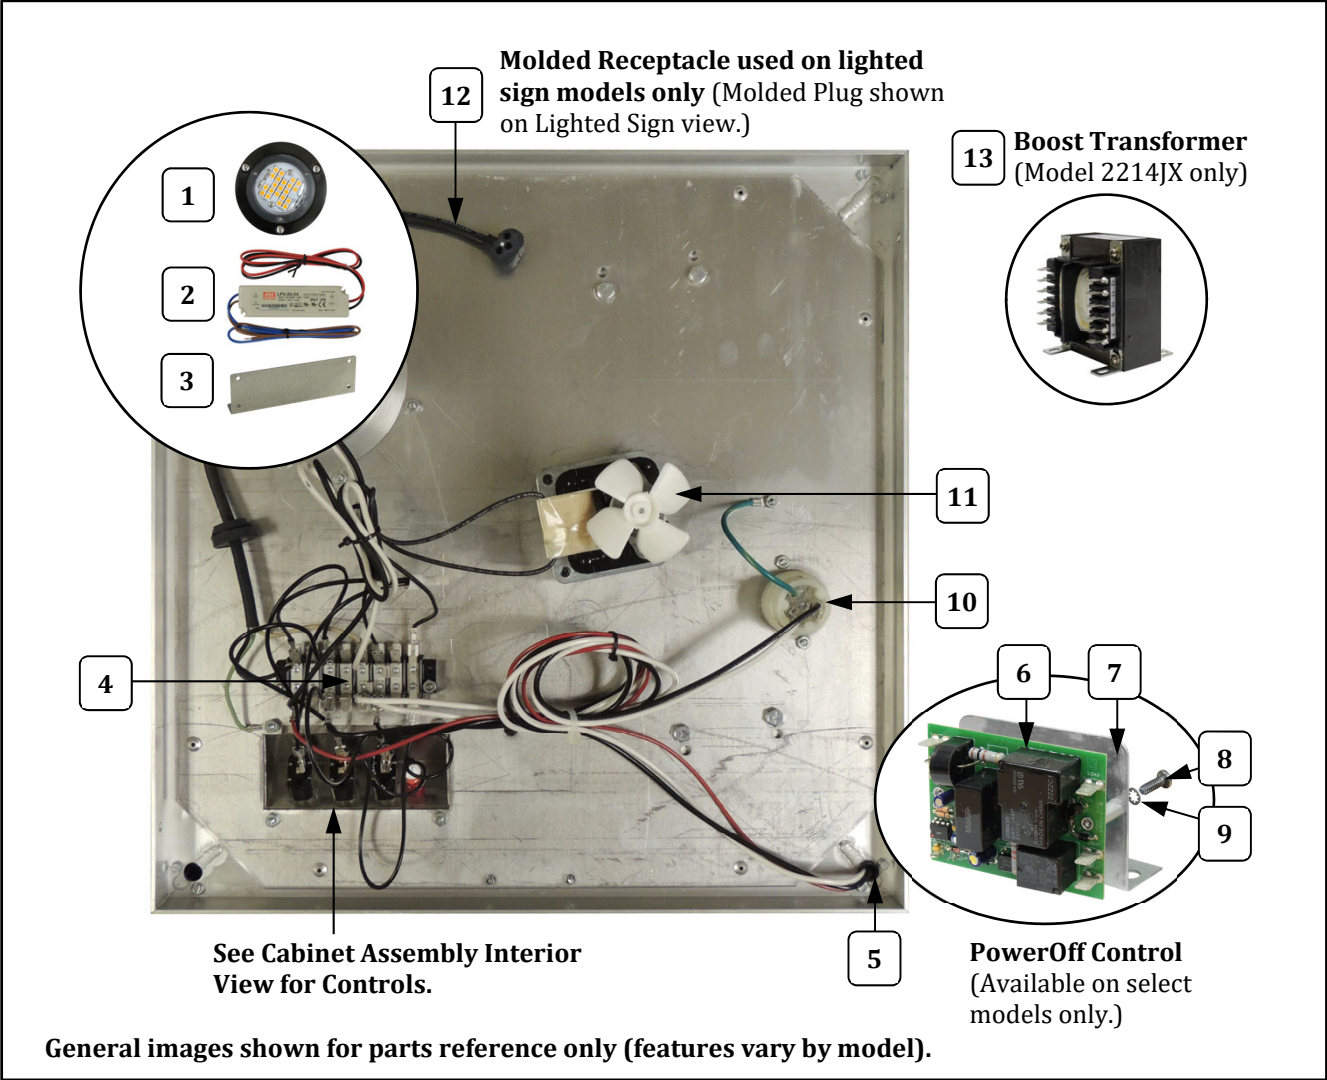

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

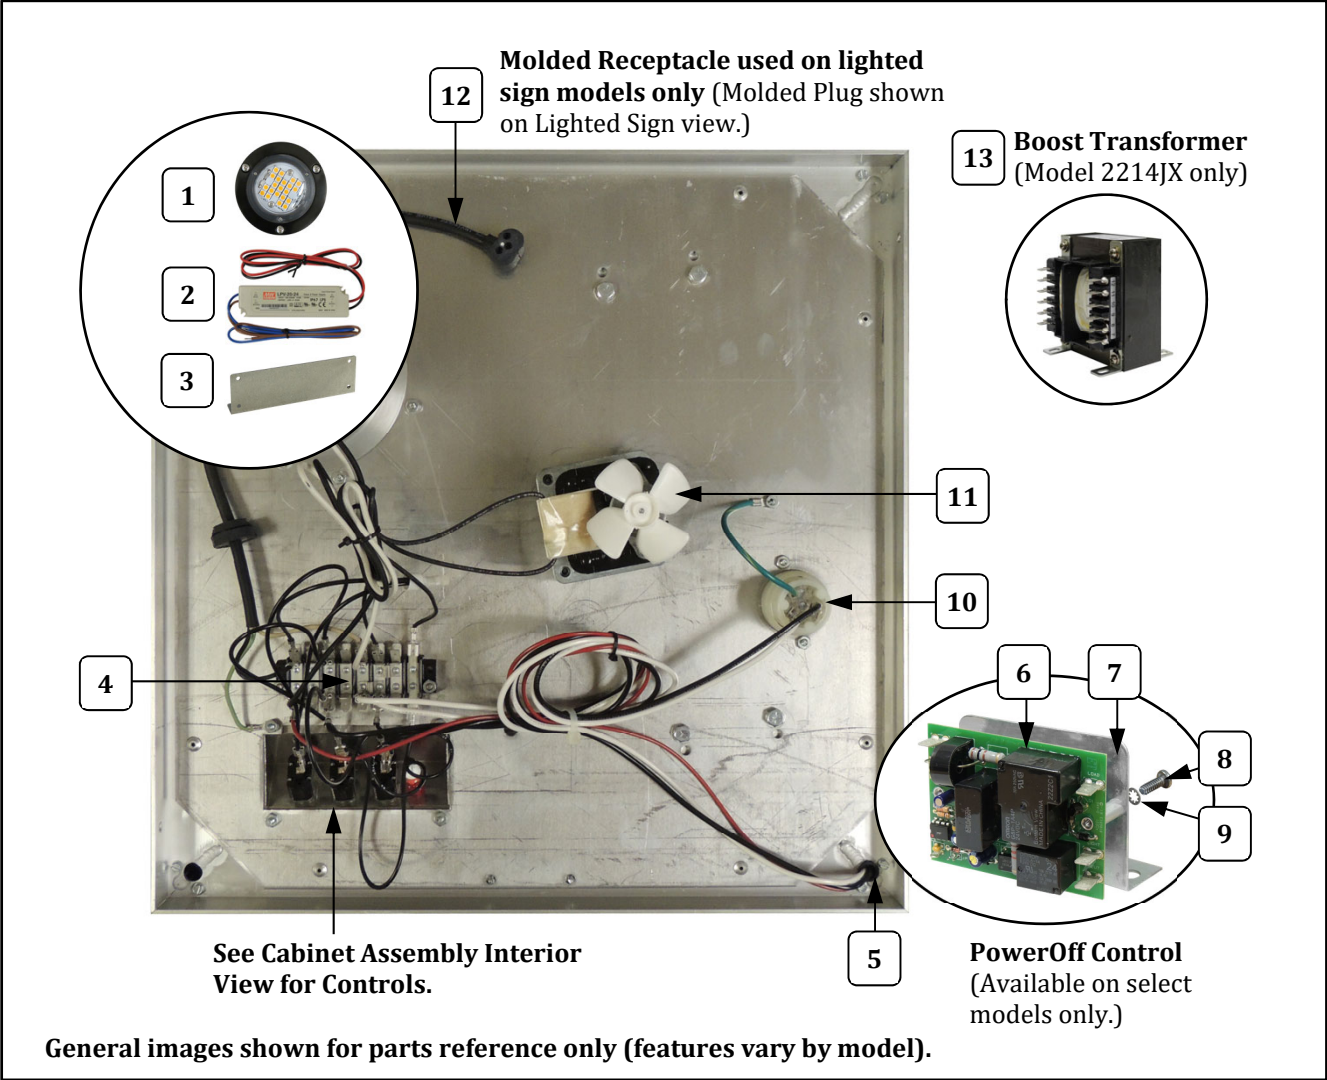

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

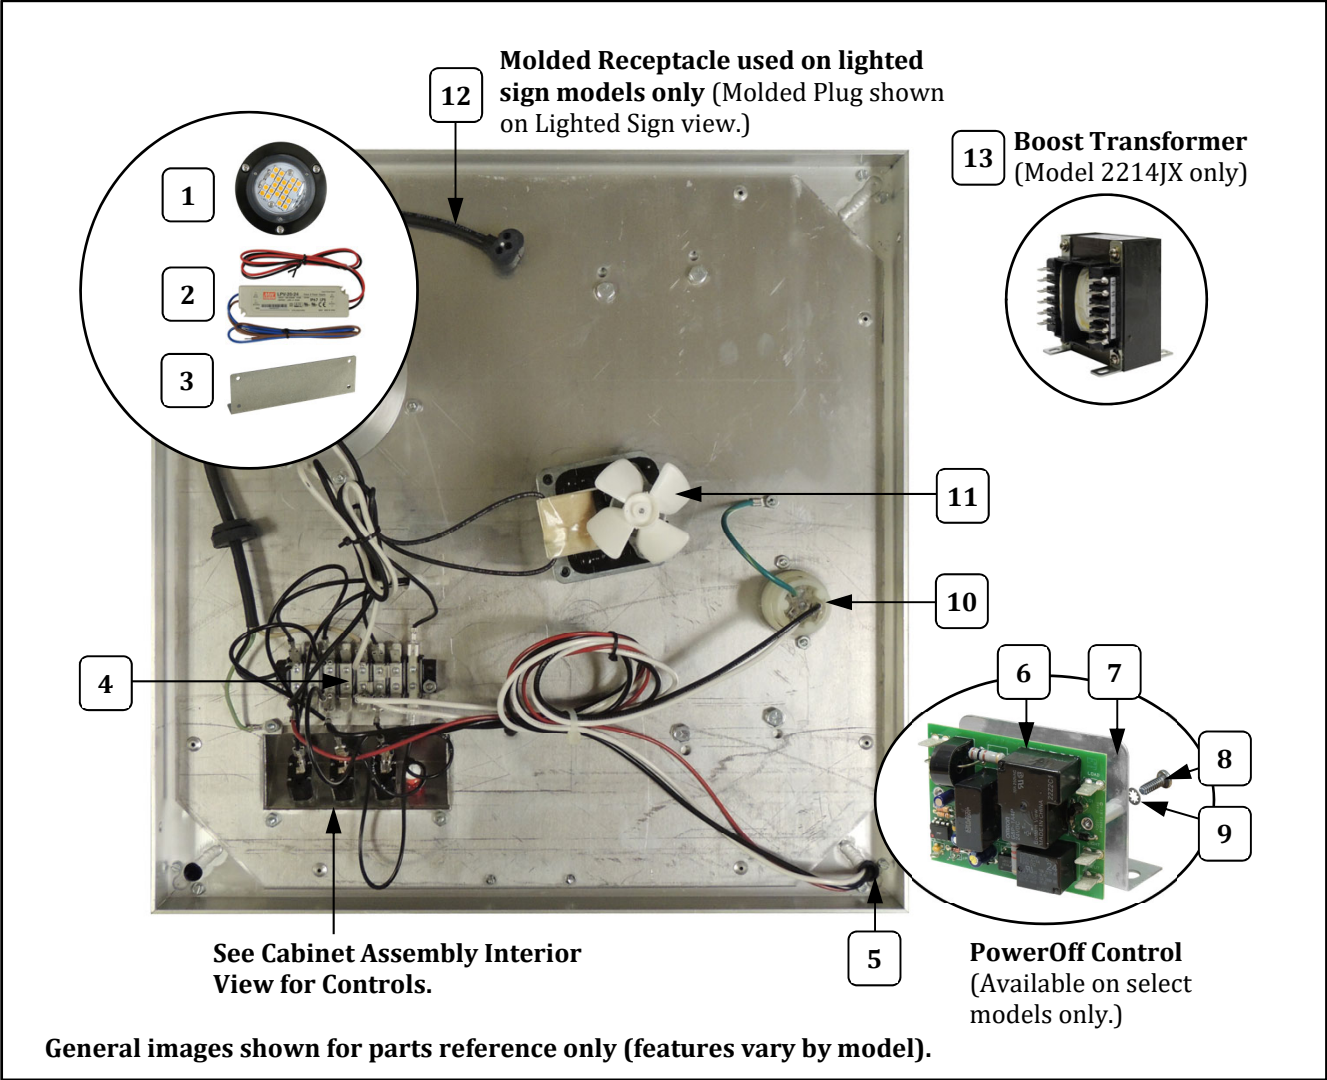

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

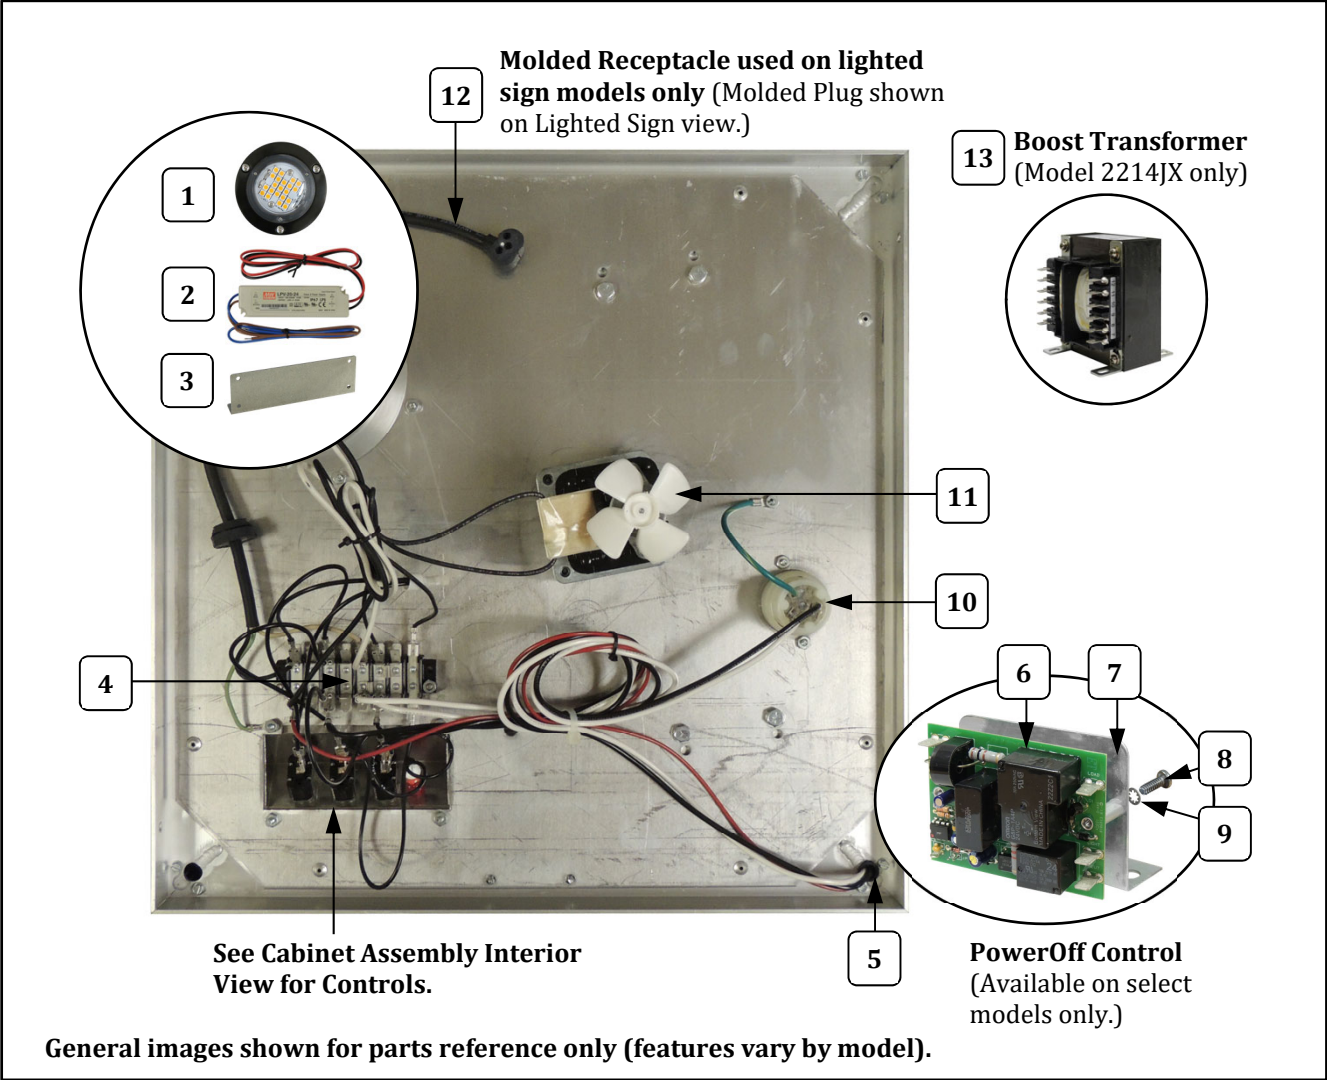

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

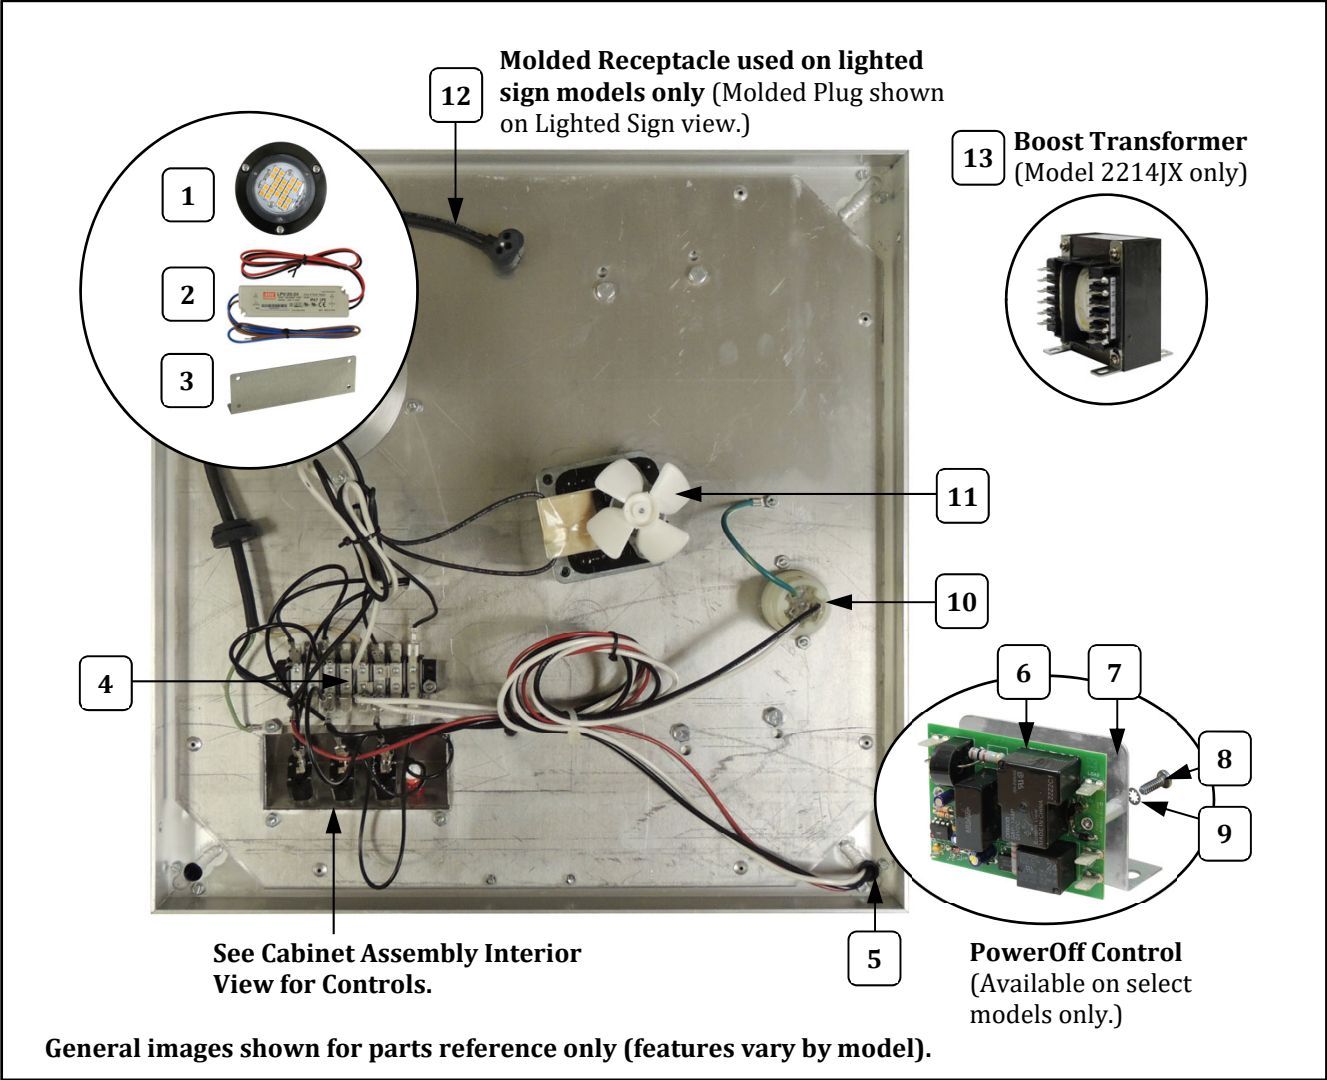

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

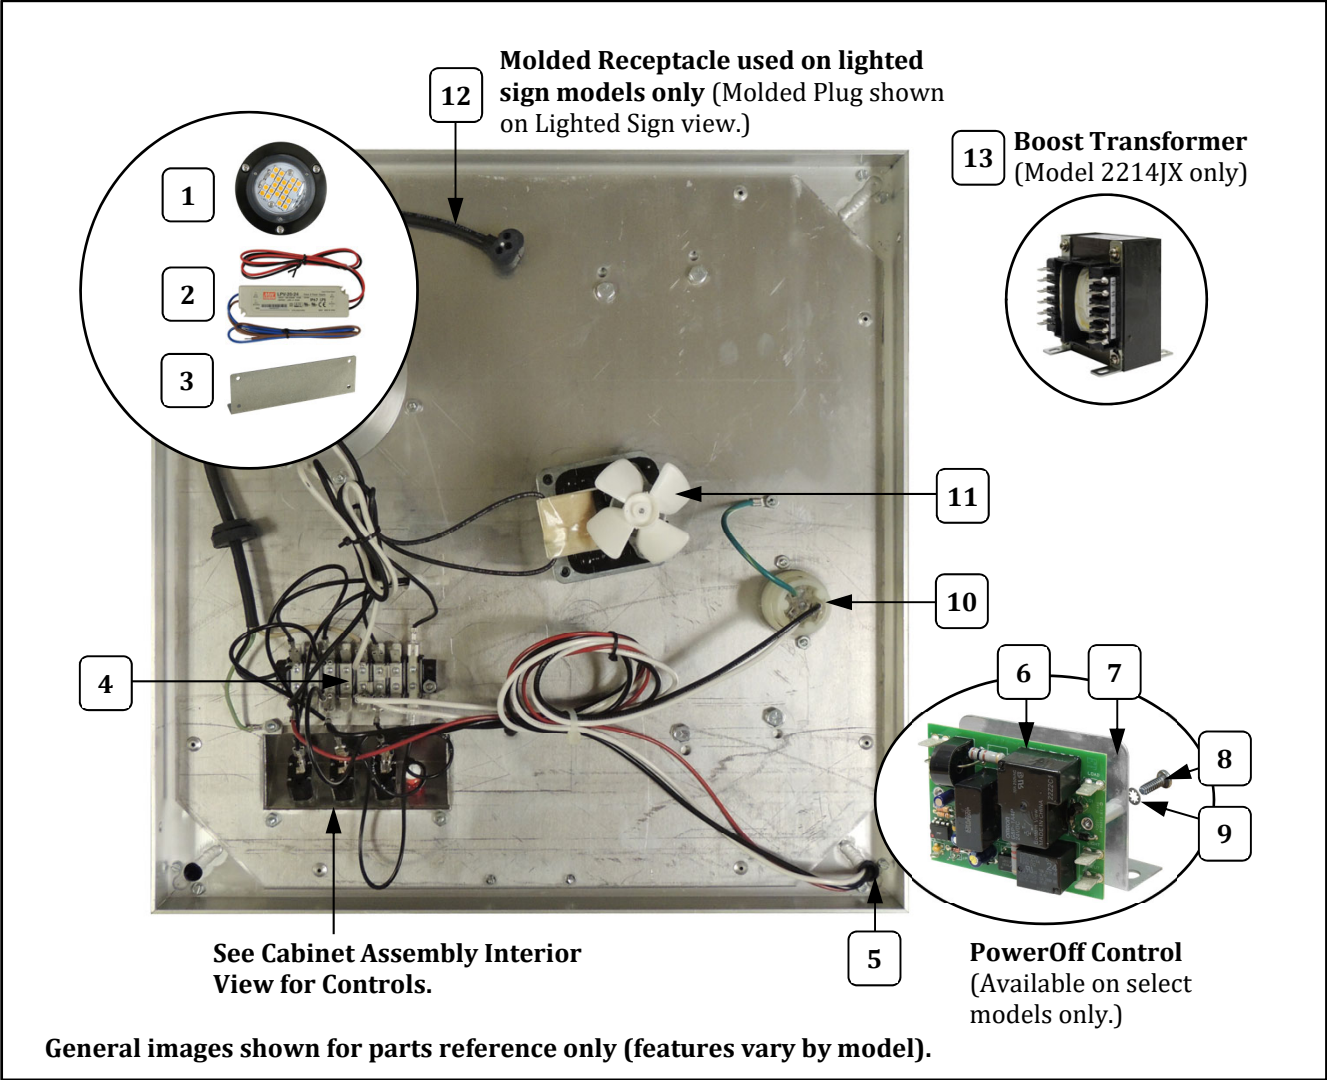

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

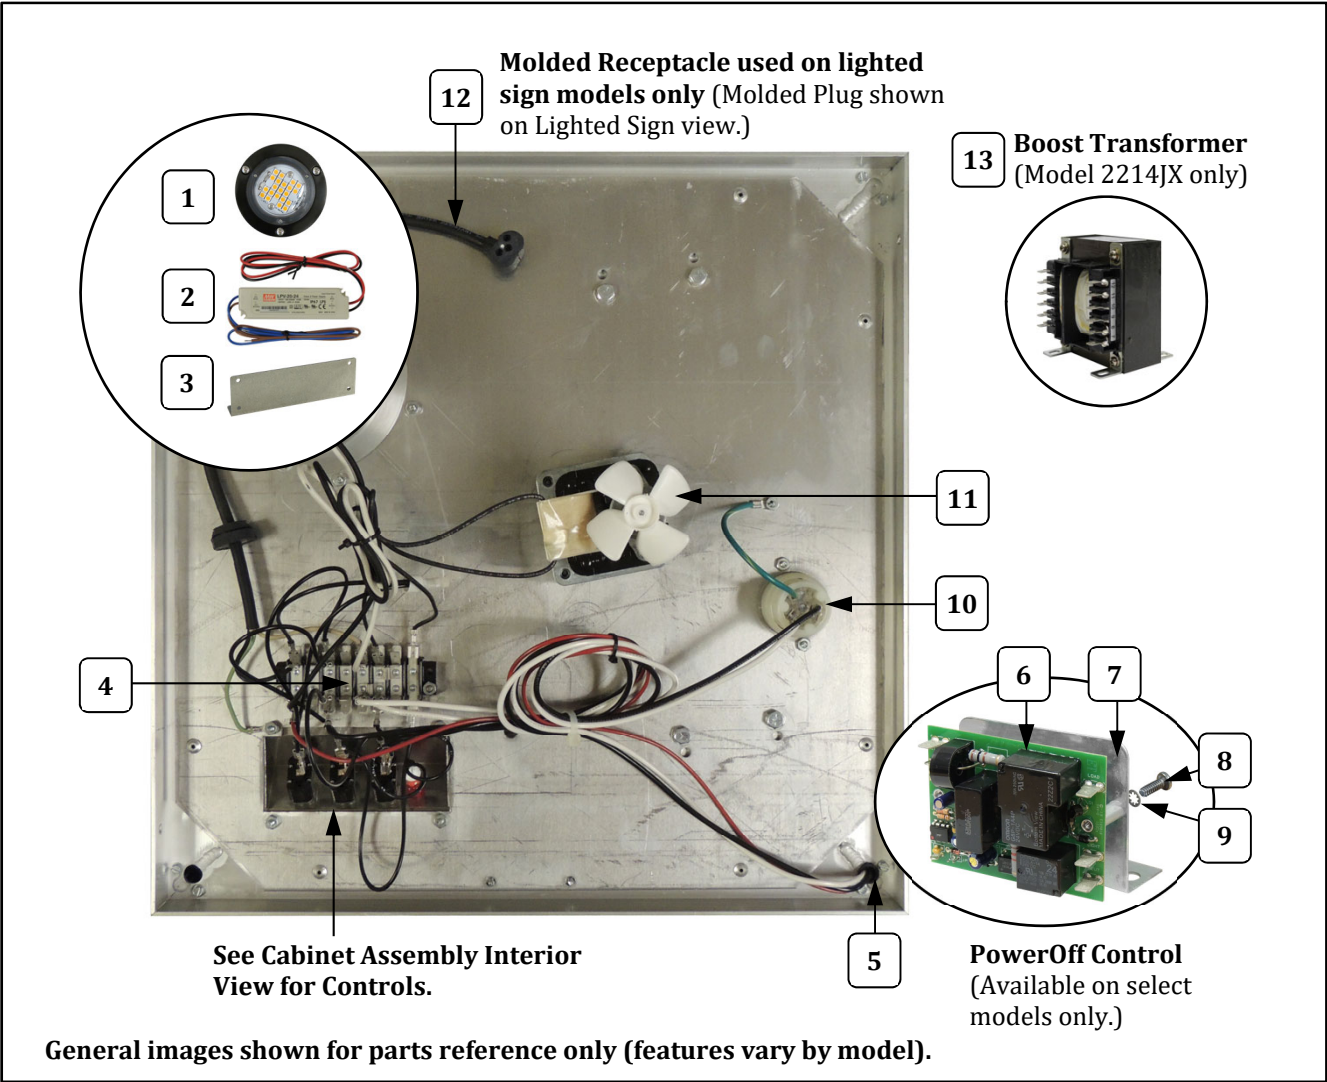

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

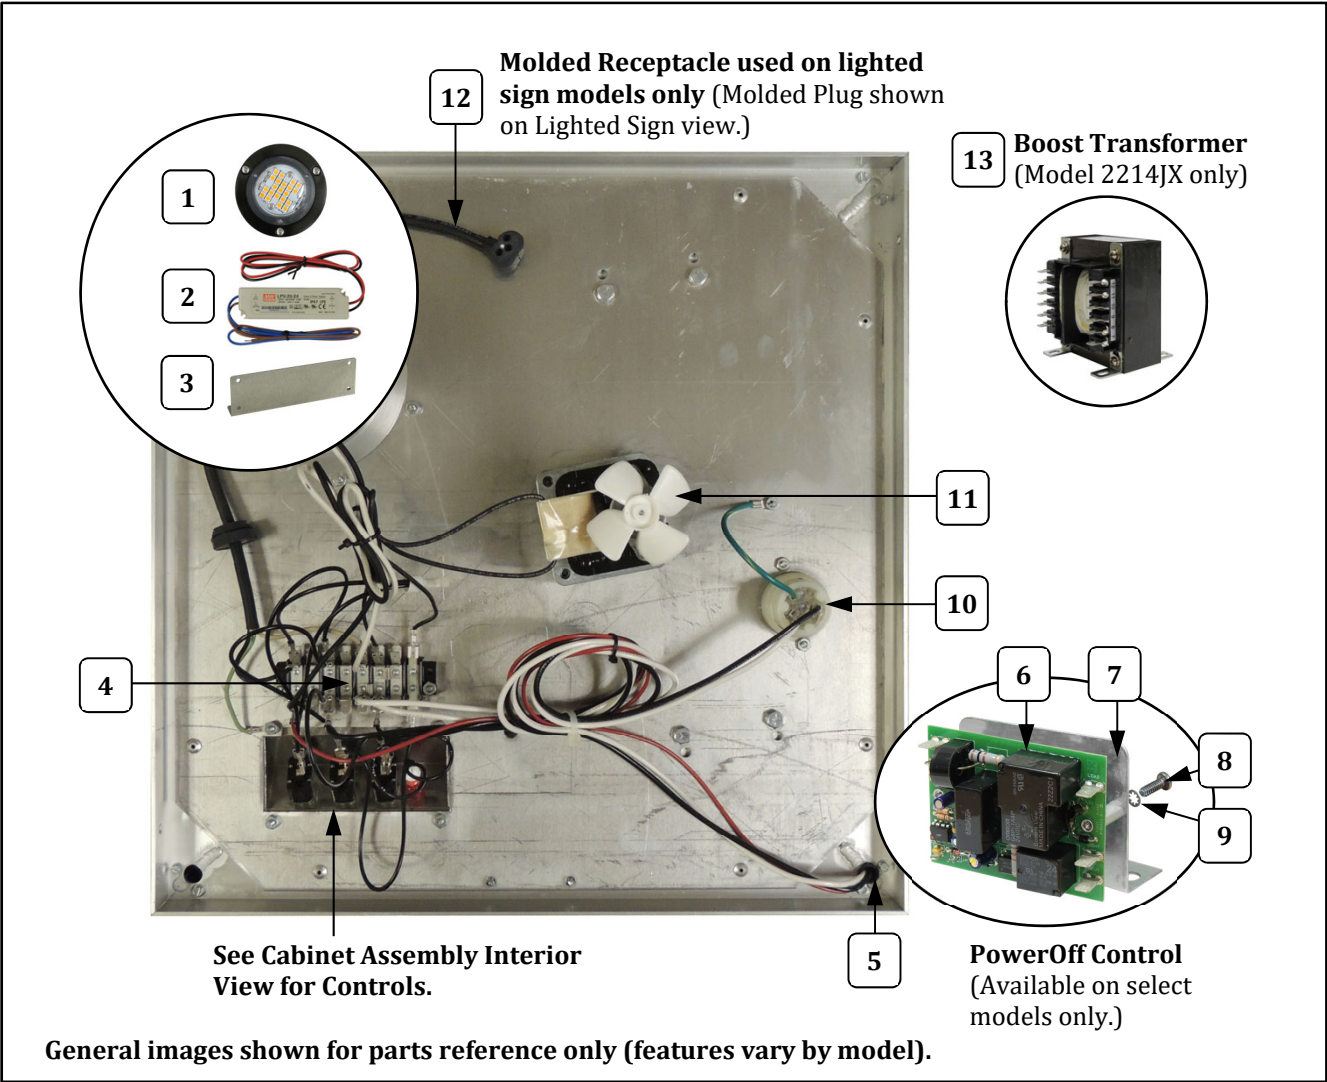

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

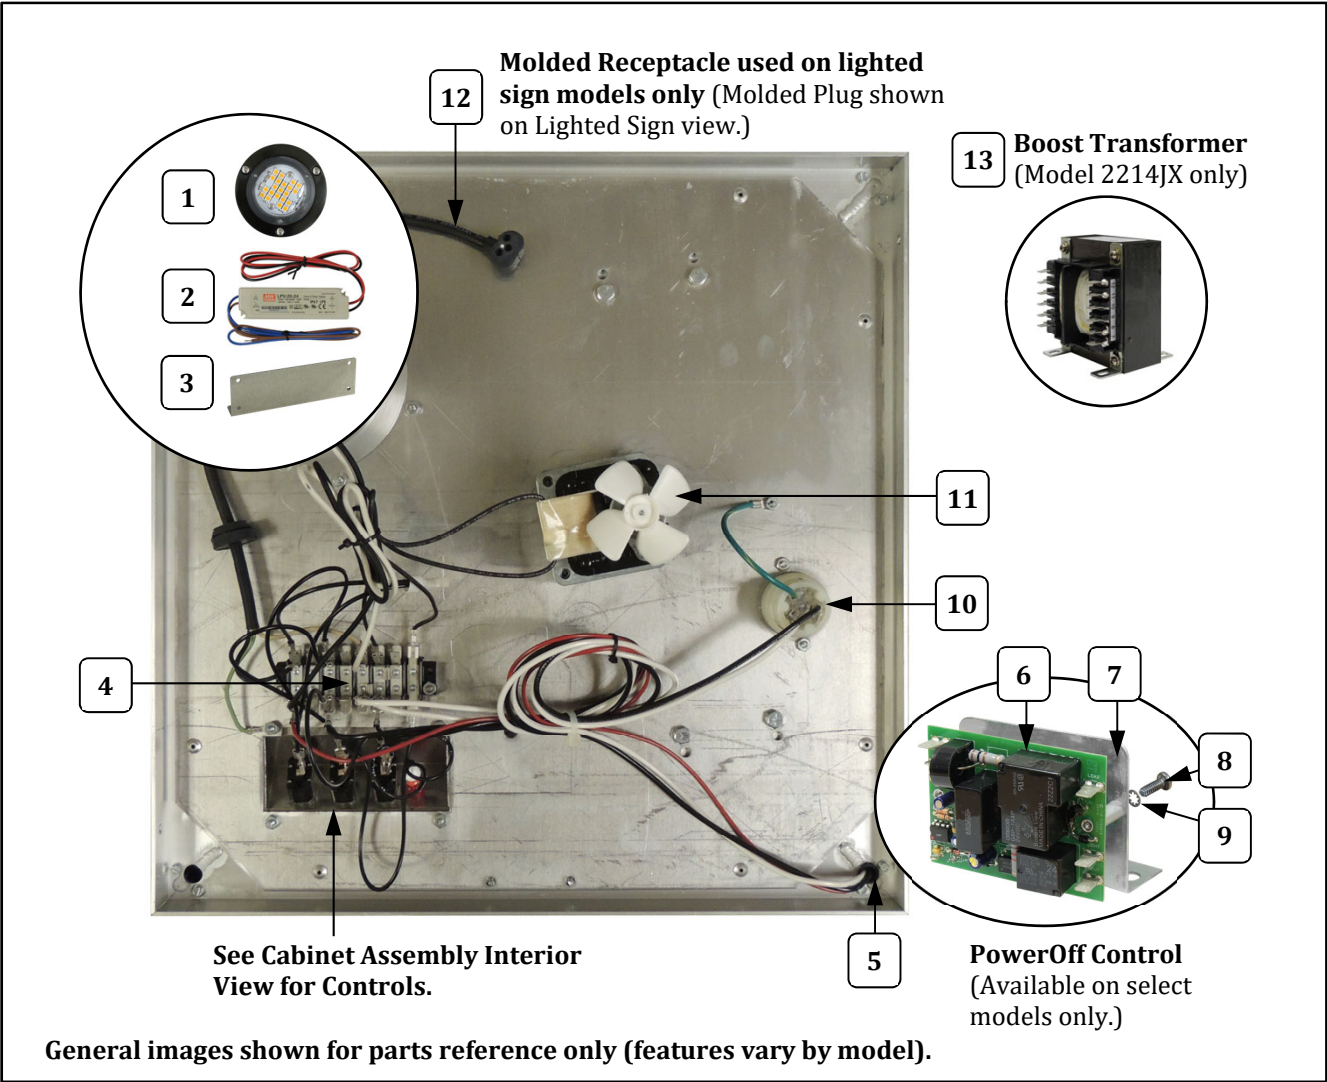

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

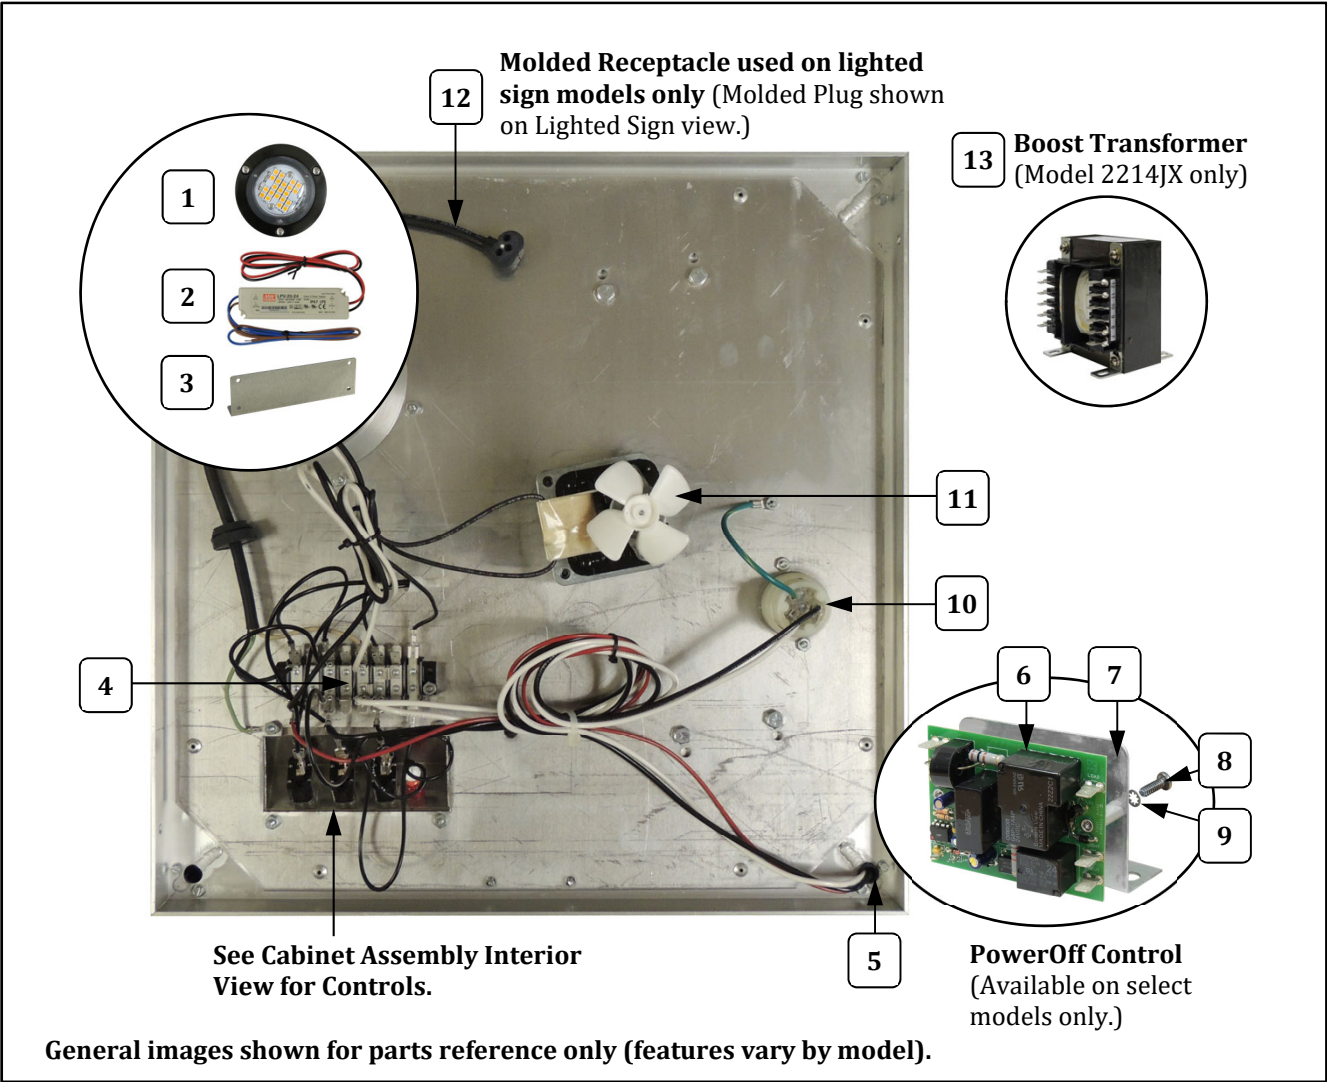

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

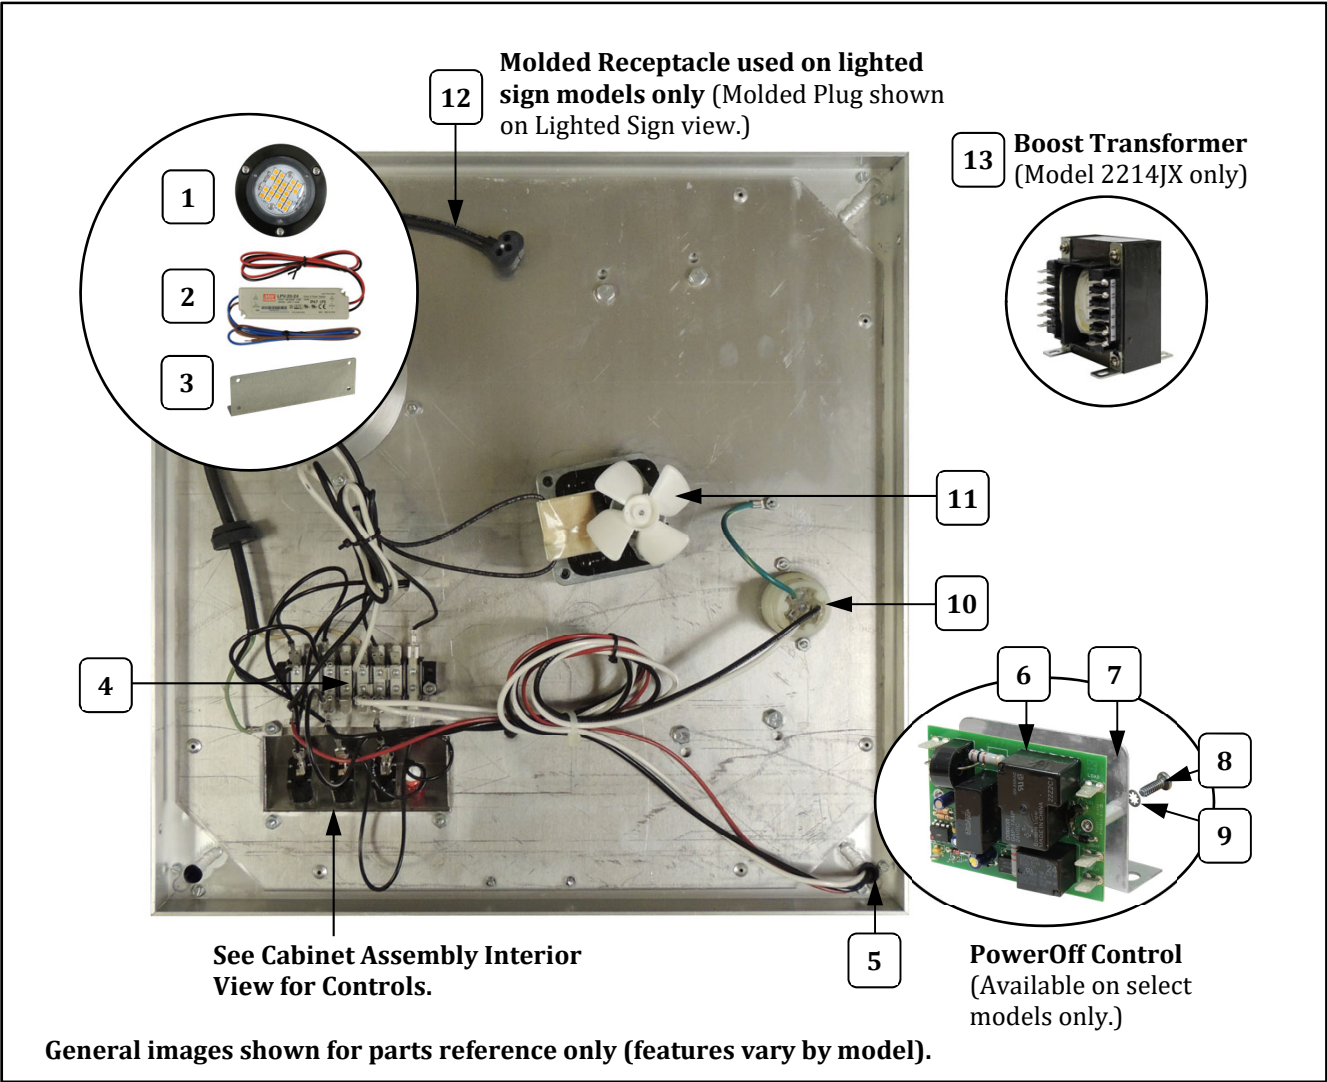

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

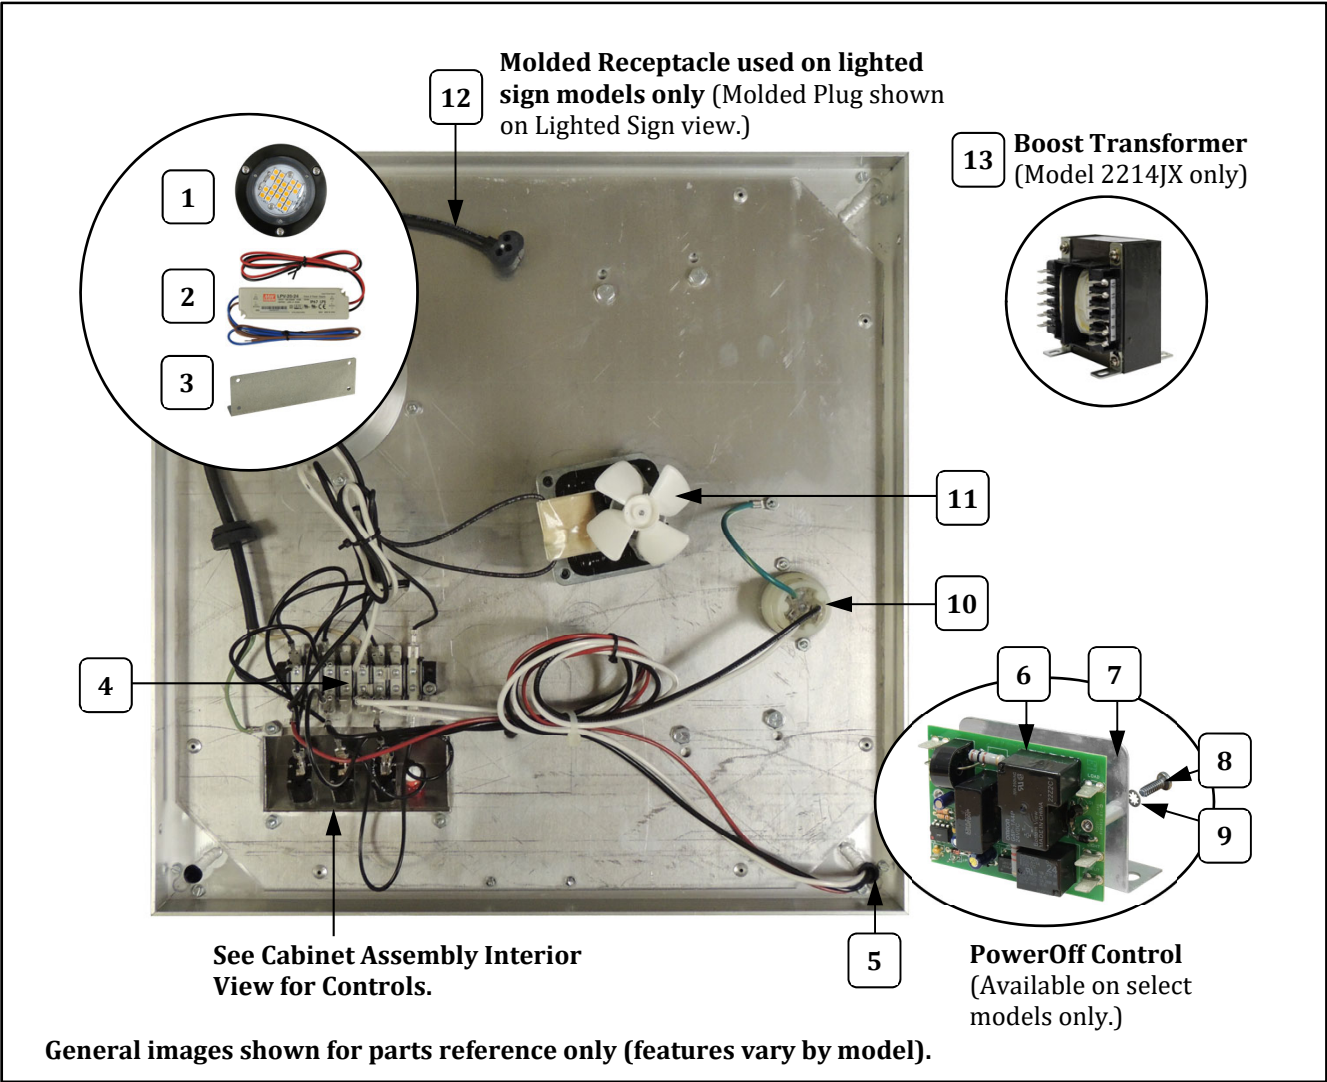

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

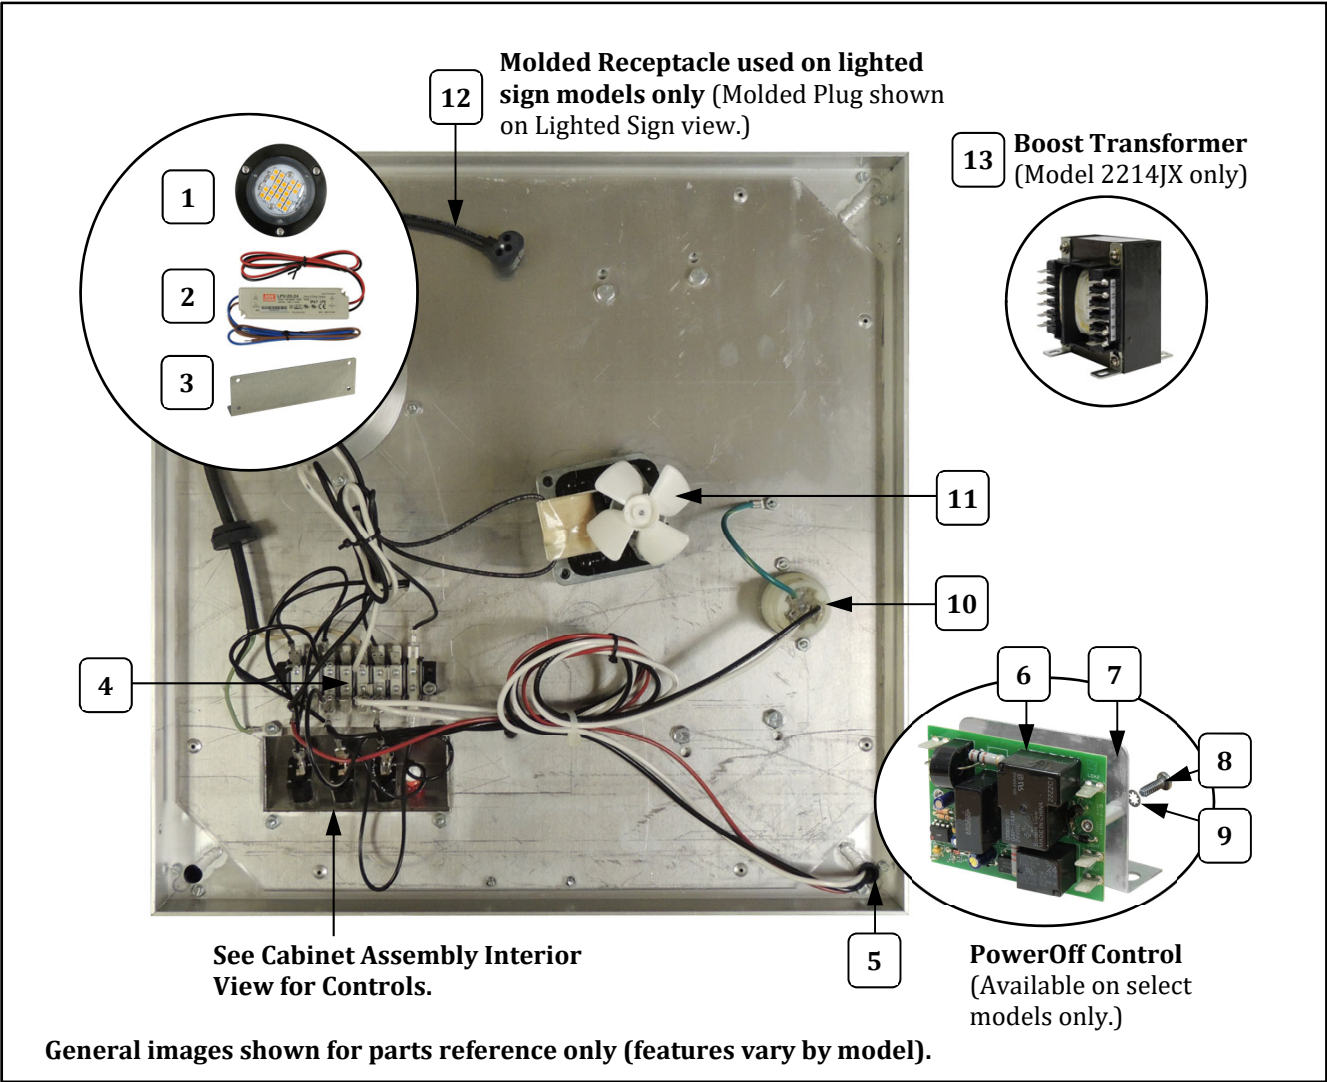

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

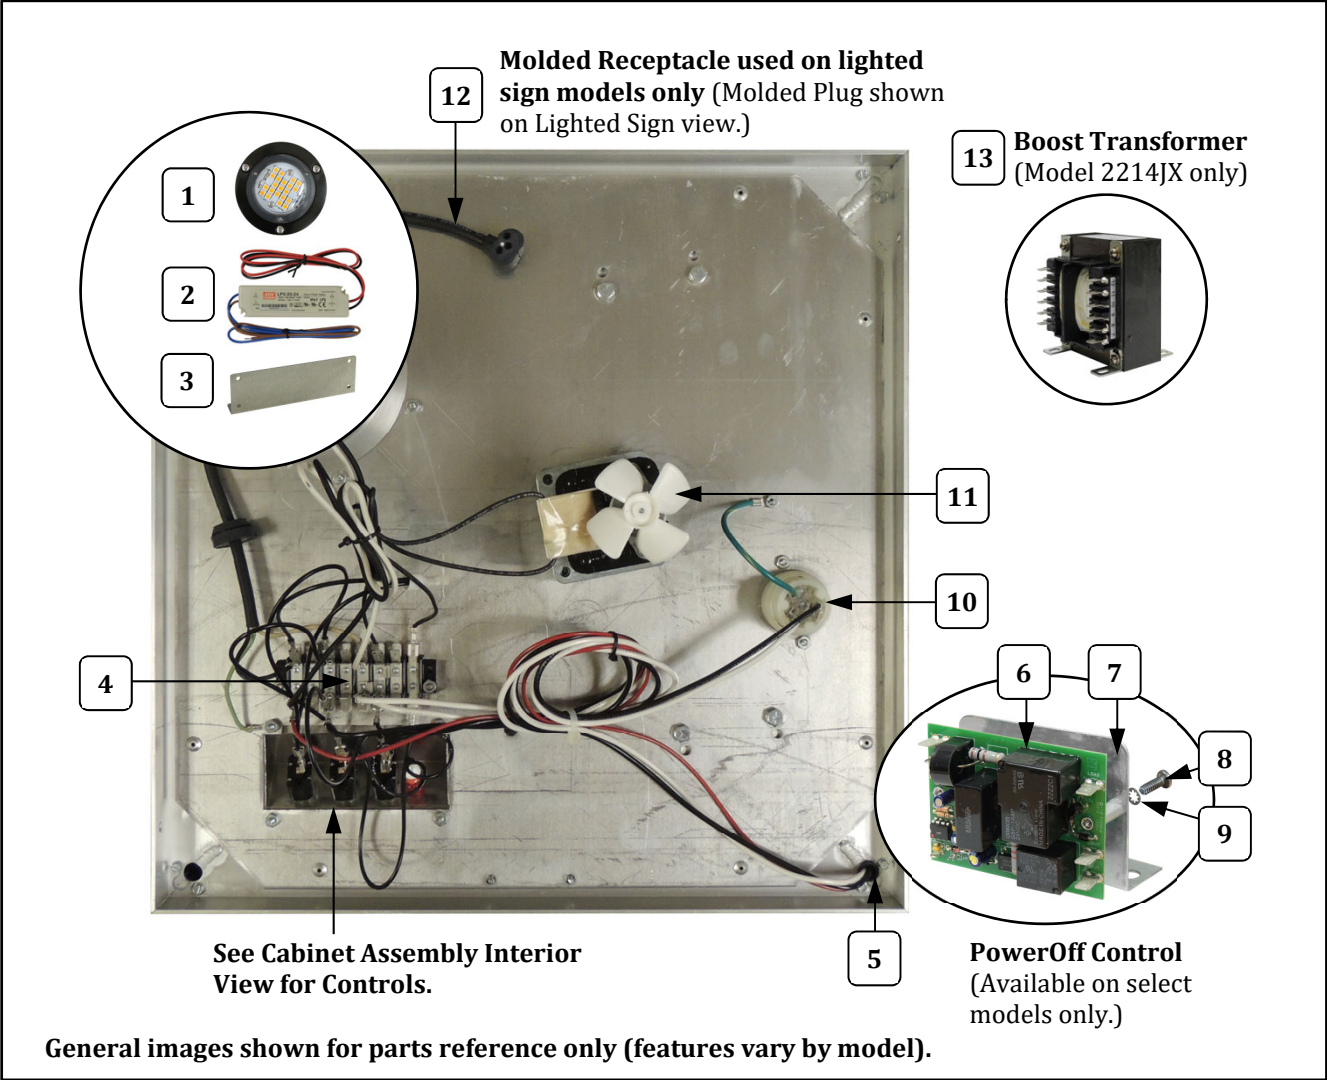

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

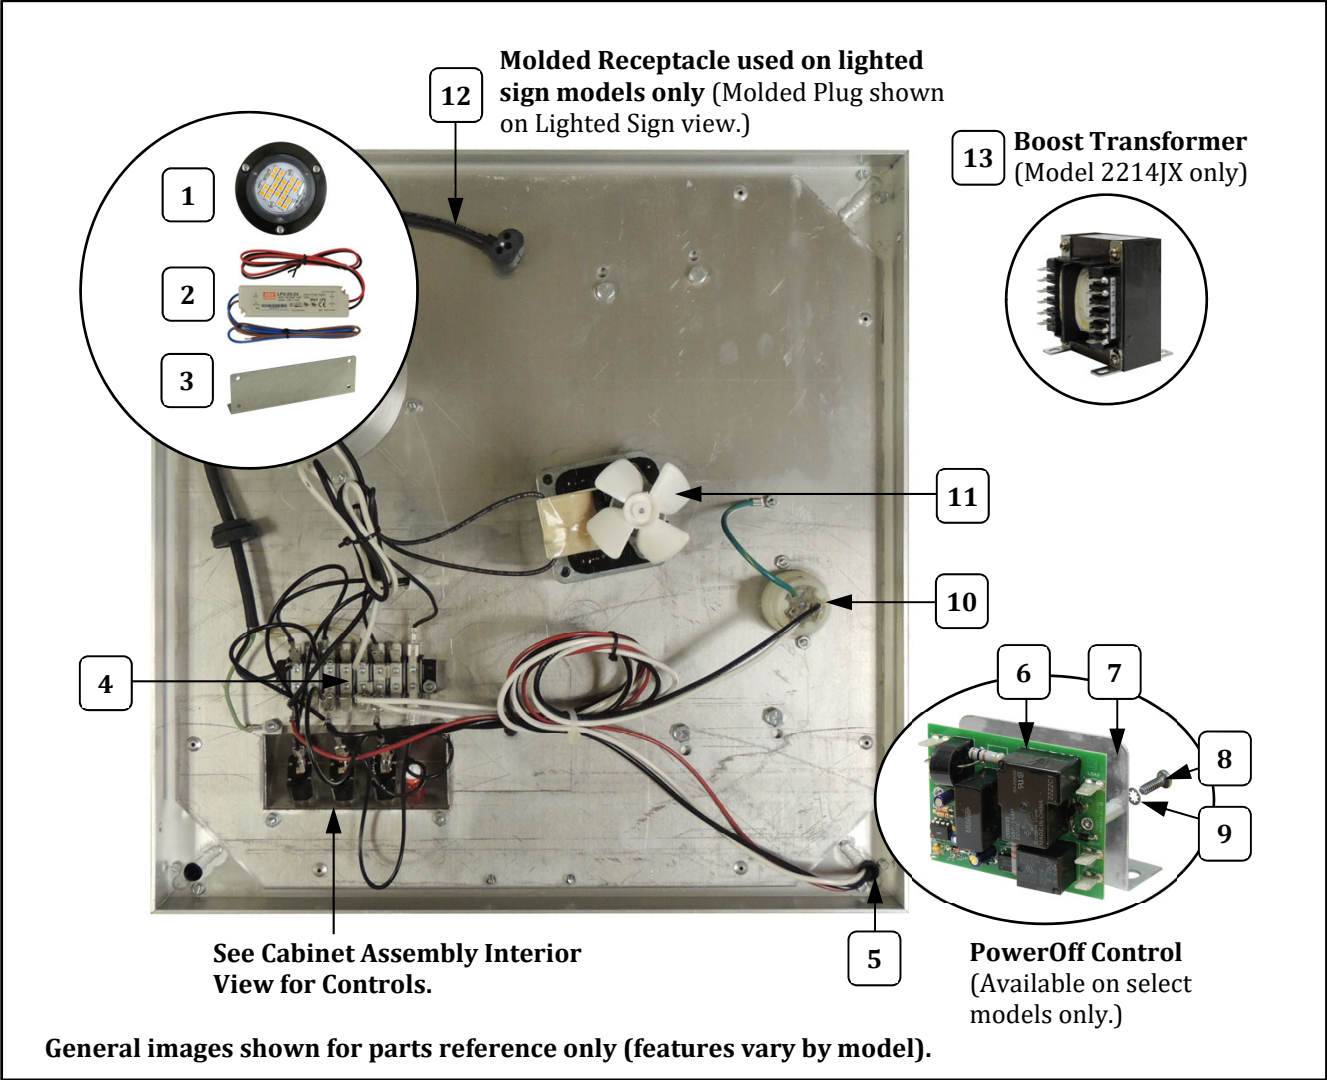

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

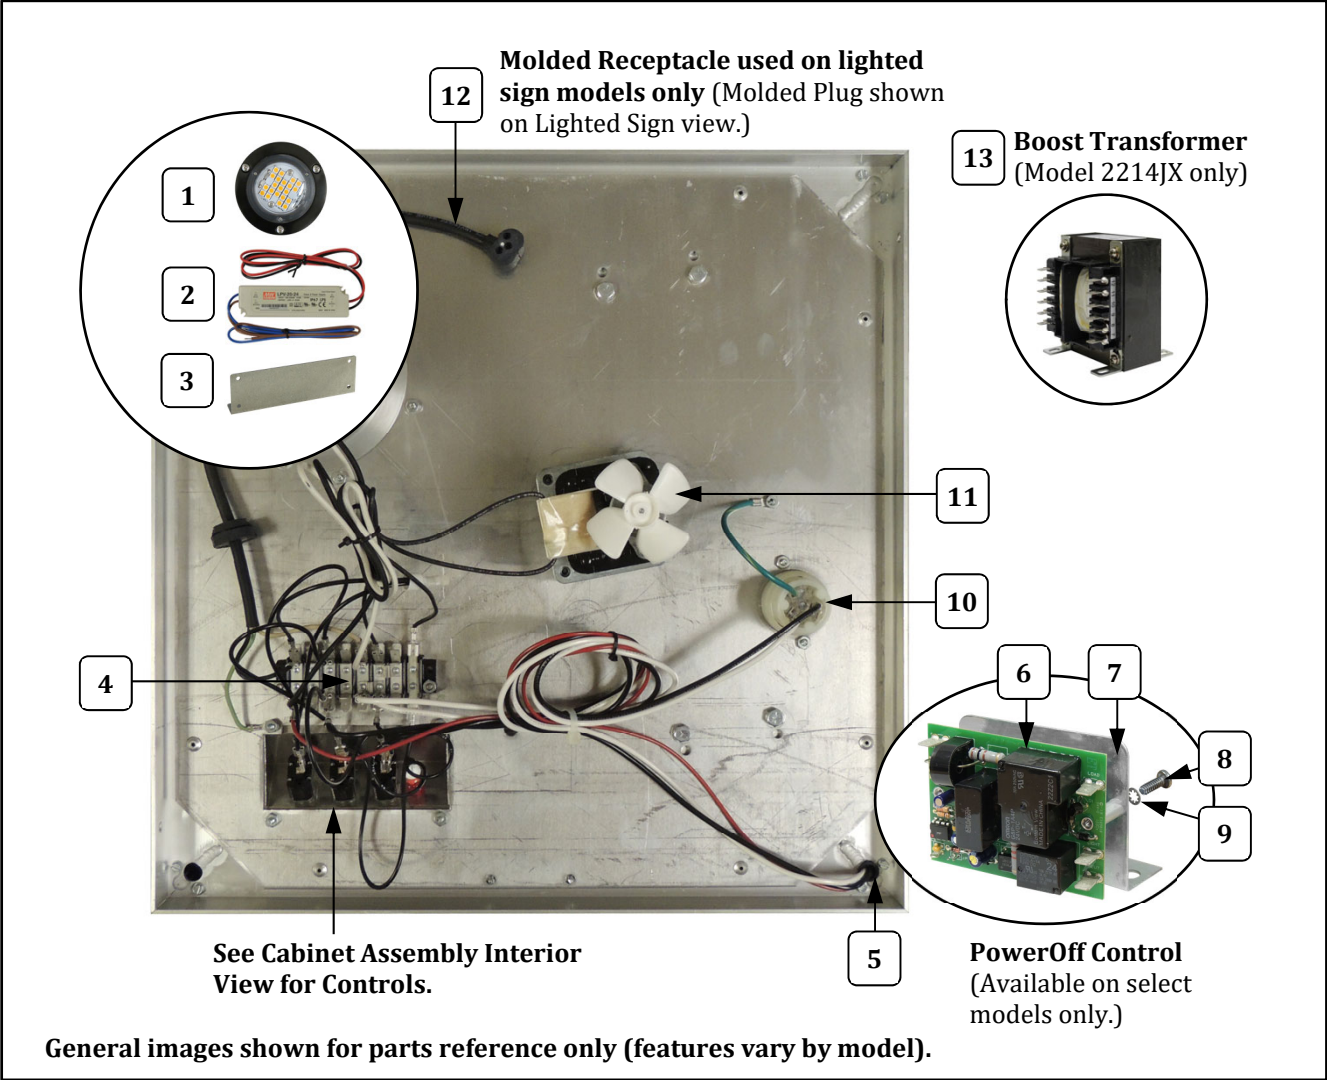

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457




Dome Interior View

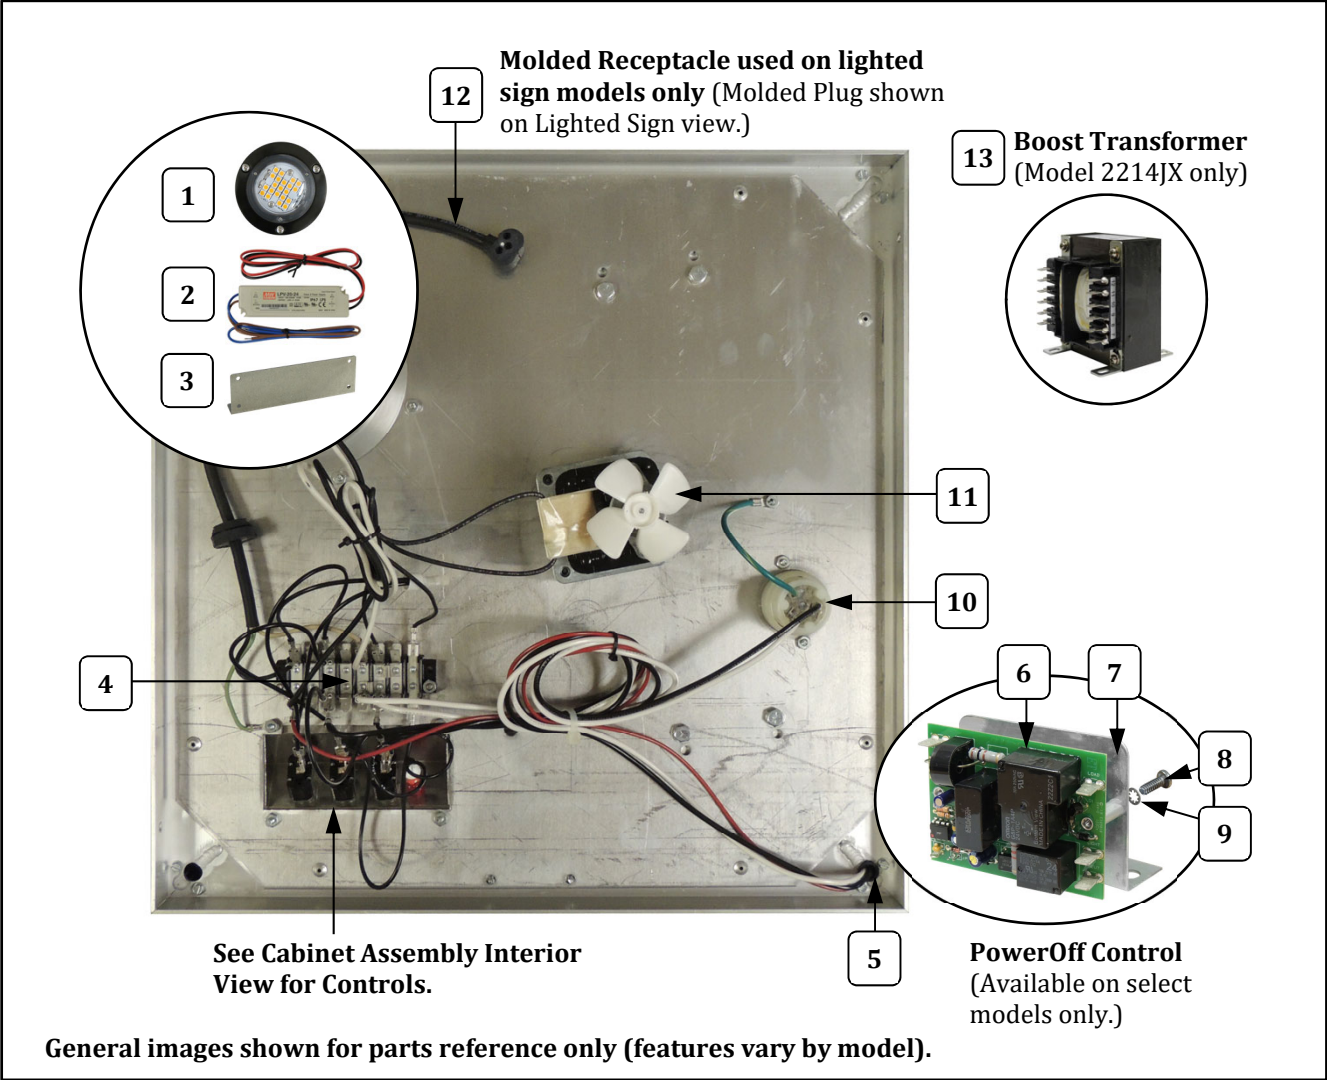

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457



Dome Interior View

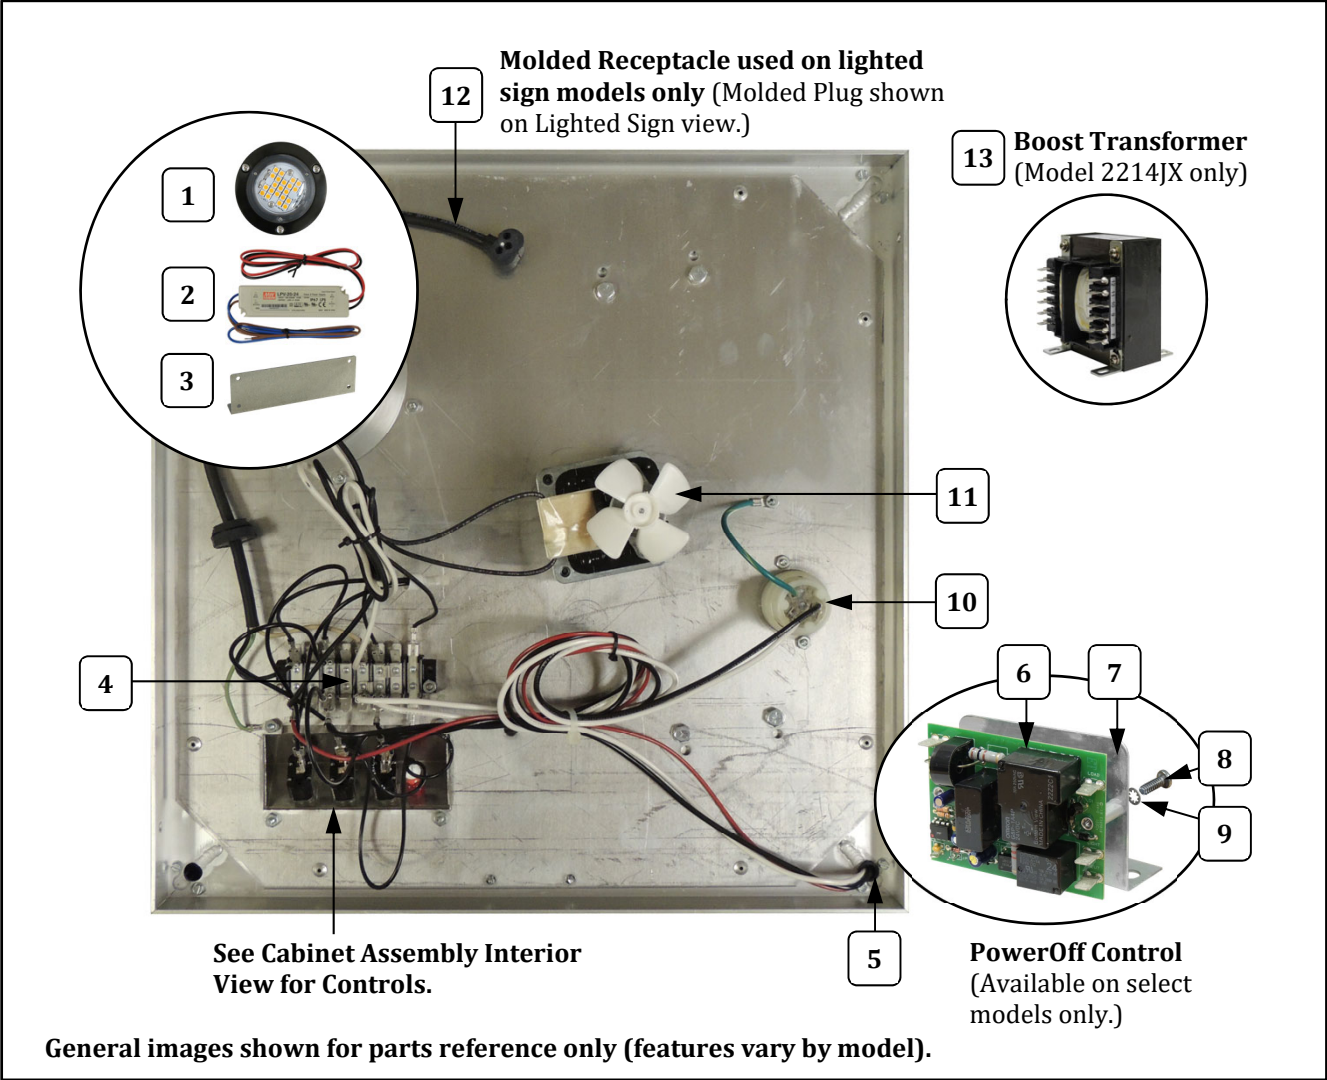

Item	Part Description	Part Number				
		2213	2212	2214	2214ST	2214JX
1	LED REPLACEMENT NO PLATE	100544	100544	100544	100544	100544
2	POWER SUPPLY 24VDC 20W	55394	55394	55394	55394	55394
3	20W POWER SUPPLY BRACKET	55414	55414	55414	55414	55414
4	TERMINAL BLOCK, 8 TERMINAL	47208	47208	47208	47208	47208
5	SNAP BUSCHING, .005 IN	47236	47236	47236	47236	47236
6	KETTLE POWEROFF CNTRL PCB		55402	55402		55402J
7	BRACKET, POWEROFF CNTRL		55427	55427		55427
8	6-32 X 3/8 PHIL PAN M/S		39000	39000		39000
9	#6 INTERNAL TOOTH L/W 410SS		39001	39001		39001
10	KETTLE RECPT	49330	49330	49330	49330	49330
11	KETTLE DRIVE MOTOR	47038	47038	47038	47038	47038
12	MOLDED RECEPTACLE				47727	
13	TRANSFORMER, BOOST 175VA					55457


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)



Front Sign View

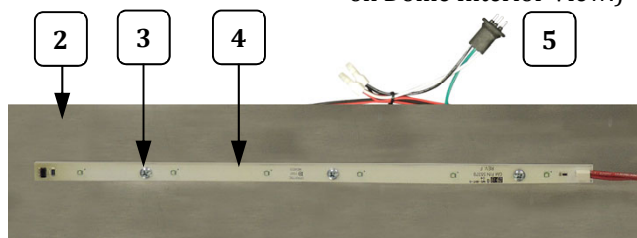

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	12OZ VOL CORN MEA. BRIGHT	47148


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)



Front Sign View

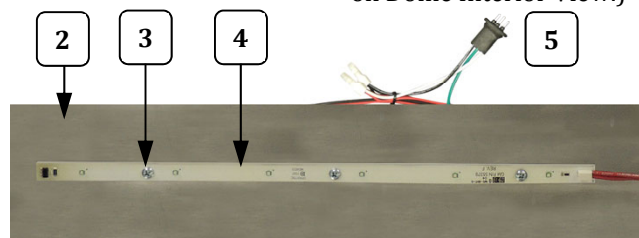

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	12OZ VOL CORN MEA. BRIGHT	47148


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)



Front Sign View

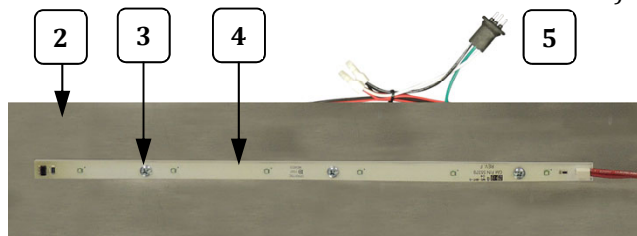

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	12OZ VOL CORN MEA. BRIGHT	47148


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)



Front Sign View

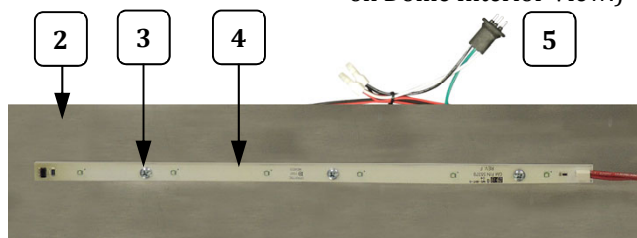

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	12OZ VOL CORN MEA. BRIGHT	47148


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)



Front Sign View

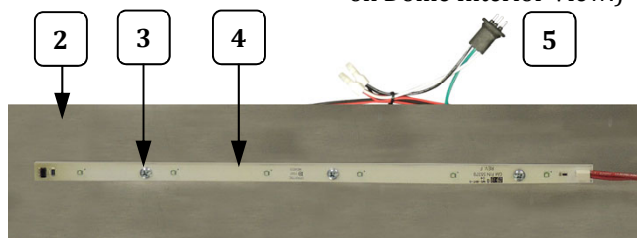

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	12OZ VOL CORN MEA. BRIGHT	47148


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)



Front Sign View

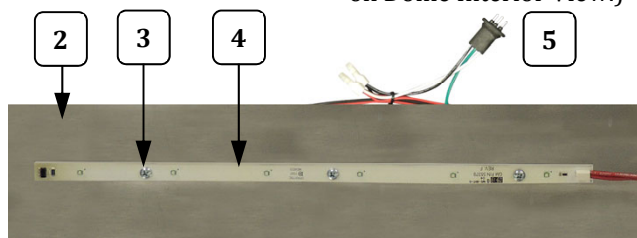

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	12OZ VOL CORN MEA. BRIGHT	47148


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)



Front Sign View

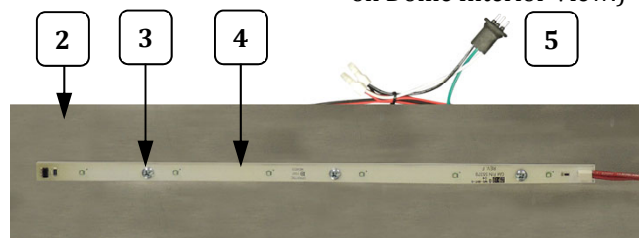

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	12OZ VOL CORN MEA. BRIGHT	47148


Lighted Sign Assembly (if equipped)

For Power Supply, see
Dome Interior View.



Front Sign View

Molded Plug seen here
(Molded Receptacle shown
on Dome Interior View.)

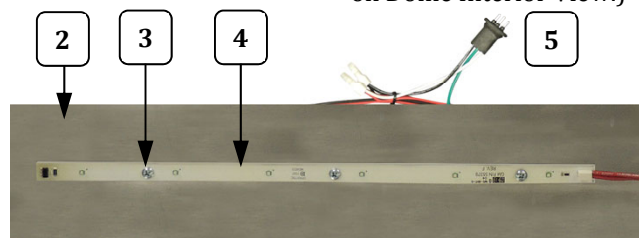

Interior View - LED Strip

General lighting images shown as reference for units with lighted sign option.

Item	Part Description	Part Number
		2214ST
1	POPCORN SIGN	111876
	DOME REFLECTOR ASSY (assembly includes parts listed below)	41112N
2	MOUNT, FLOURESCENT OR LED	49428
3	8-32 PAN HD (Mounts the LED Strip)	74141
4	LED STRIP COOL WHITE	55379
5	MOLDED PLUG	47726

Accessories



1



2



3



4

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	MEASURE 14.7CC	47679
3	OIL MEASURE (1/2 CUP)	47149
4	120Z VOL CORN MEA. BRIGHT	47148