



Serial #: _____

GHP24G



Conforms to ANSI
STD Z83.11b -2009
Certified to CSA
STD 1.8b -2009

Intertek

CONVERSION KIT INSTRUCTIONS
for the
Globe Gas Countertop Hot Plate
with Manual Control
Models: **GHP12G, GHP24G & GHP36G**

For Service on Your Gas Hot Plate:

1. Visit our website at www.globefoodequip.com
2. Or call the Globe Service Department at 937-299-8625 and ask for contact information for your local service company.

Visit our website for information on additional products available from Globe.

www.globefoodequip.com

Slicers, Mixers, Countertop Cooking Equipment, Meat Choppers & Scales

- IMPORTANT NOTICE -

Conversion instructions are for conversion of the HOT PLATE. The instructions provided in this kit are for the conversion of Natural Gas to L.P. Gas and refer to the conversion of the unit and kit provided. An authorized licensed technician must be called to perform the complete conversion of the unit. Failure to properly convert this unit can result in serious injury, property damage or death, and will void the warranty.



Hot Plate Conversion Kit Instructions



Conforms to ANSI
STD Z83.11b -2009
Certified to CSA
STD 1.8b -2009

Intertek

WARNING


Do not attempt gas conversion by yourself. Gas conversion of your unit is to be made by a certified/licensed technician. Locate an authorized Globe servicer at www.globefoodequip.com or call 800-347-5423.

CONVERSION

Instructions are for conversion from Natural Gas to Propane (L.P.) on all models. The conversion should be done before connecting the unit to the gas supply. Units are shipped from the factory equipped for use on natural gas. Parts necessary for L.P. (liquid propane) are provided with the unit. **Turn off the main gas supply before doing any maintenance. (Use only factory supplied regulator!)**




1. Remove the trivets from the top of the appliance.

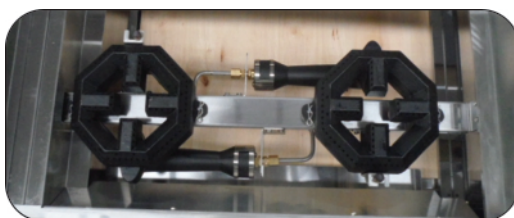


2. Remove burner pins on both sides of burner.
3. Pull burner away from gas pipe to gain access to orifices.
4. Turn appliance over to gain access to orifice fittings.

NOTE: Unit Number is shown on side of orifice fittings.

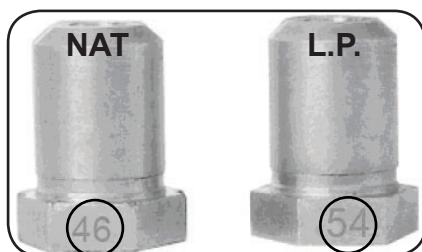


5. Remove Natural Gas orifice #46 from valve.
 6. Install Propane (L.P.) orifice #54 on valve.
 7. Turn appliance back over to install burners and trivets.
 8. Install burners on top of gas pipe.
 9. Install burner pins on both sides of burner.
 10. Install trivets on top of appliance.
- NOTE: Plastic insert on convertible regulator must be set from "NAT" to "LP" before install.

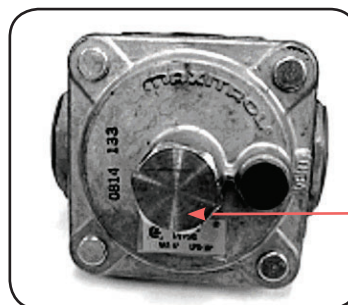


Convertible regulator with octagon cap. Unscrew from regulator.

11. Remove octagon cap from convertible regulator.
12. Remove plastic insert from octagon cap.
13. Install plastic insert on octagon cap, with "LP" near octagon cap head.
14. Install octagon cap on convertible regulator.

Pull off insert from octagon cap and reverse the plastic insert position so that the L.P. position is attached to the octagon cap head.

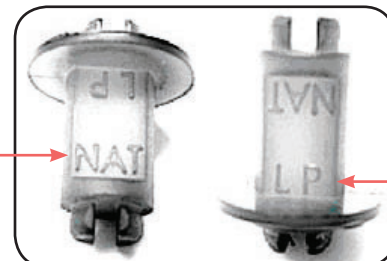

L.P. Position of insert.

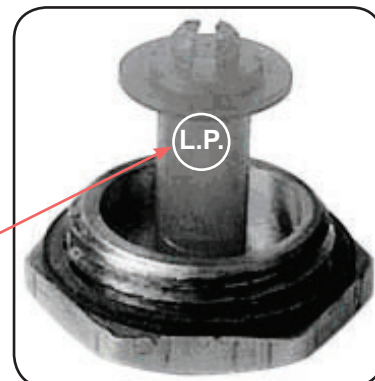

L.P. Position

Regulator is now converted from Natural Gas to Propane (L.P.).



Gas Specifications Table

Model	Rated Input Per Burner (BTU/HR)	Elevation		Elevation		Elevation					
		Nat	LP	Nat	LP	Nat	LP				
		0-2000 ft		2000 - 4000 ft		4000-6000 ft		6000-8000 ft		8000-10000 ft	
		U01201060695 (# 46)	U01201060693 (# 54)	U06051470851 (# 47)	U06051470836 (# 55)	U06051470881 (# 48)	U06051470836 (# 55)	U06051470911 (# 49)	U06051470896 (# 56)	U01201068651 (# 51)	U06051470896 (# 56)
Hot Plate	22500										

Specifications are subject to change without notice.

