




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 103 Covers, Doors, and Shelves

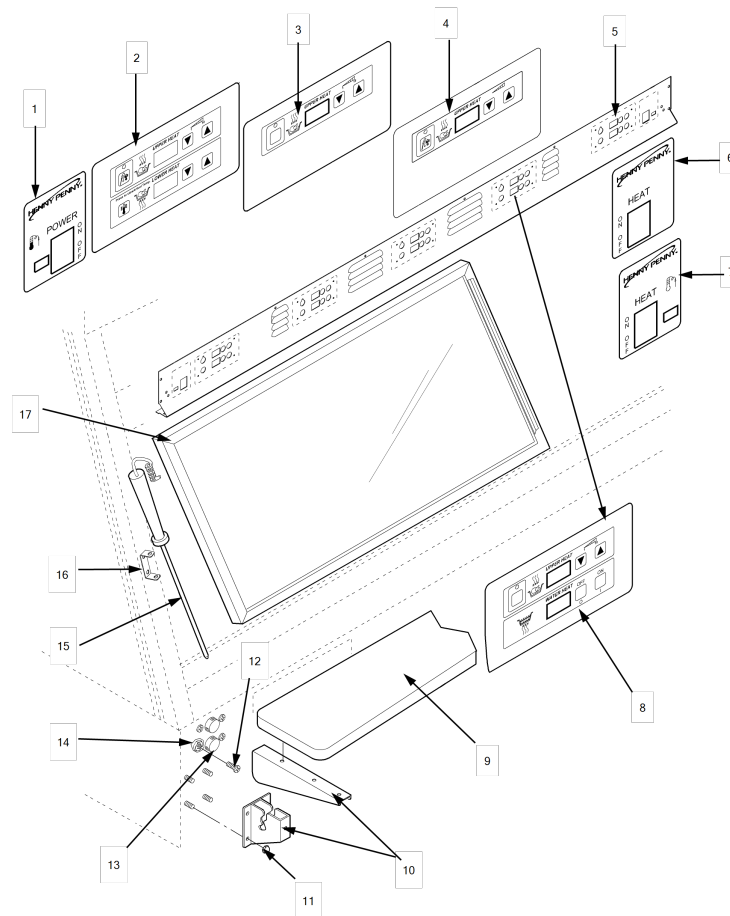

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
1	61753	Power with probe decal (SN: CY094JA & below)	1	
2	56349	Control decal, upper air	1	
3	59302	Control decal, radio w/o probe	1	
4	56347	Control decal, upper heat	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
5	<a href="#">64261</a>	Rear cover, 3 vat	1	
6	<a href="#">59306</a>	Heat supply w/o probe decal	1	
7	<a href="#">61513</a>	Heat supply with probe decal	1	
8	<a href="#">59304</a>	Control radio w/o probe decal	1	
10	<a href="#">37230</a>	Cutting board bracket	2	
11	<a href="#">NS03-044</a>	Nut	8	
12	<a href="#">SC01-113</a>	Screw	4	
13	<a href="#">EF02-006</a>	Fuse holder, 15 amp (HA0703010 & below)	2	A
13	<a href="#">EF02-104</a>	Fuse holder, 20 amp, CE	2	A
14	<a href="#">NS02-005</a>	Nut	4	
15	<a href="#">59363</a>	Food probe	1	A
16	<a href="#">42895</a>	Food probe clip	2	
17	<a href="#">68045</a>	Sliding glass doors, 3 & 6 vat	2	
17	<a href="#">22225</a>	-Door glide	4/door	
17	<a href="#">SC01-066</a>	-Screw, #6-32 X 3/8, CT, SS	4/door	
17		- Door tracks and hardware (See Door Tracks table below)		
18*	<a href="#">EF02-007</a>	Fuse, 15 Amp (HA0703010 & below)	2	
18*	<a href="#">EF02-125</a>	Push button reset breaker (HA0703011 & above)	2	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
18*	<a href="#">EF02-105</a>	Fuse, 15 Amp, CE	2	
19*	<a href="#">42479</a>	Vat cover, 3/8 in, 3 vat	A/R	
19*	<a href="#">42477</a>	Vat cover, 2 in, 3 vat	A/R	
19*	<a href="#">58504</a>	Vat cover, flat, 3 vat	A/R	
20*	<a href="#">54003</a>	Adjustable legs, optional	4	
21*	<a href="#">64175</a>	Splatter guard	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				


## Door Tracks

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
*	<a href="#">56595-001</a>	Door track, lower	1	
*	<a href="#">56238</a>	Door track, upper	1	
*	<a href="#">SC01-003</a>	Screw, #6-32 X 3/8, CT, flat head	8	
*	<a href="#">NS02-005</a>	Hex keps nuts, #6-32	4	
*	<a href="#">NS03-063</a>	Hi-crown acorn nut, 6-32, SS	4	
* = Not Shown				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 103 Lower Heat

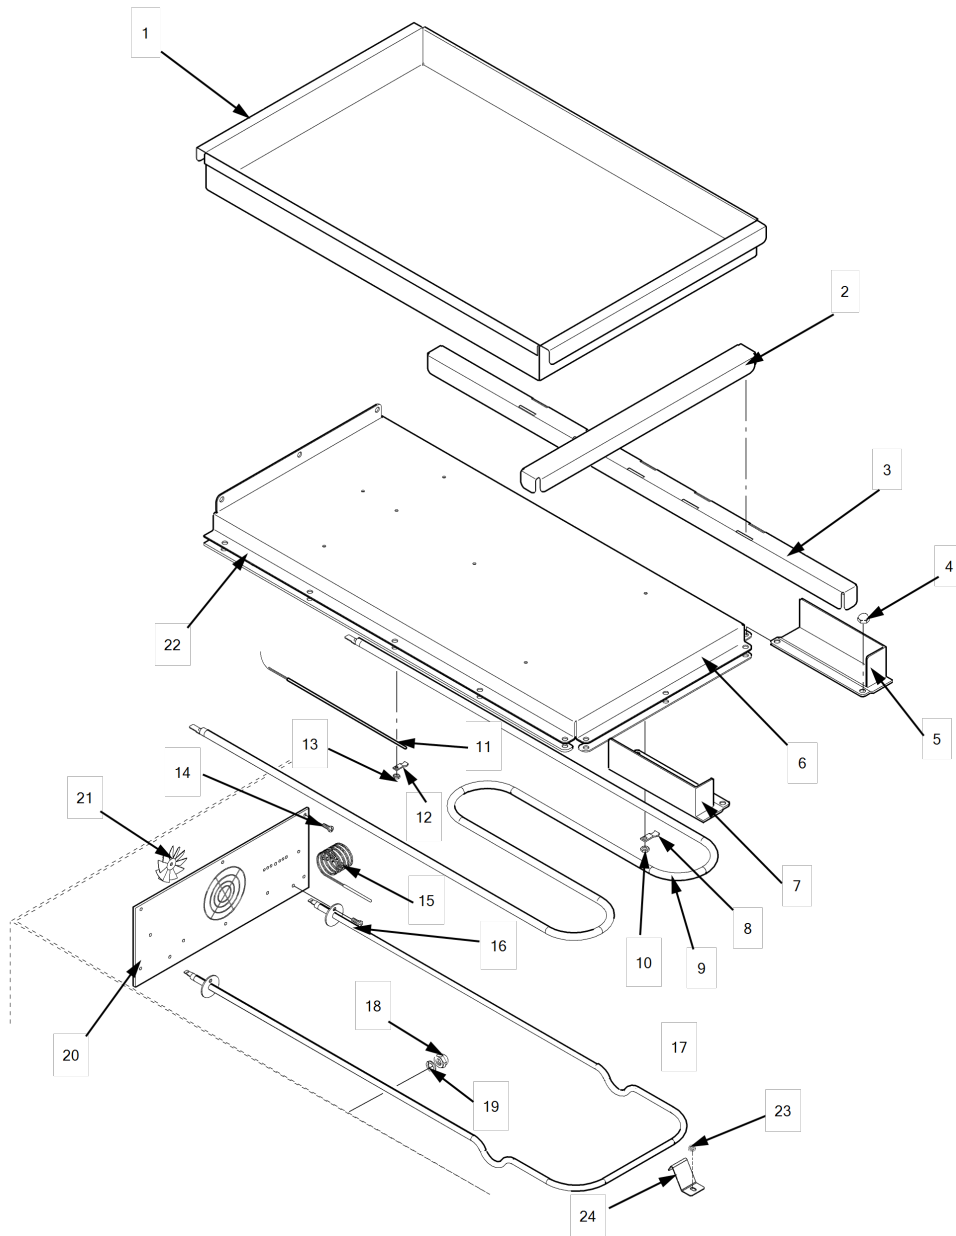



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
1	<a href="#">59315</a>	Water pan, small service only	1	
1	<a href="#">91963</a>	Water pan, standard	1	
2	<a href="#">37371</a>	Cross support pan, short	6	
3	<a href="#">37159</a>	Support pan, long	6	
3	<a href="#">14462</a>	Support pan and shelf kit (Use with <a href="#">14463</a> & <a href="#">14464</a> )	1	
4	<a href="#">NS03-002</a>	Acorn nut, #10-24	13	
5	<a href="#">63440</a>	Water pan locator, right (service only)	1	
5	<a href="#">91977</a>	Water pan locator, standard	2	
5	<a href="#">91978</a>	Water pan locator, cambo	A/R	
6	<a href="#">56862</a>	Water pan gasket	1	
7	<a href="#">63441</a>	Water pan locator, left (service only)	1	
8	<a href="#">56354</a>	Water heater clip	5	
9	<a href="#">56310-01</a>	Water pan heater, 230VAC, 400W (Under <a href="#">56414</a> )	1	B
9	<a href="#">56310-02</a>	Water pan heater, 208VAC, 400W (Under <a href="#">56414</a> )	1	B
10	<a href="#">NS02-005</a>	Nut	5	
11	<a href="#">26252</a>	Water pan probe, 6 in	1	
12	<a href="#">MS01-462</a>	Tube clamp	2	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
13	<a href="#">NS02-005</a>	Nut	2	
14	<a href="#">SC02-041</a>	Screw	12	
15	<a href="#">56166</a>	Probe, 3 in	1	A
15*	<a href="#">39693</a>	Probe clip	1	
15*	<a href="#">58566</a>	Probe plate	1	
16	<a href="#">SC02-041</a>	Screw	4	
17	<a href="#">56240-01</a>	Lower heater, 208 VAC, 650W	2	B
17	<a href="#">56240-02</a>	Lower heater, 240 VAC, 650W	2	B
18	<a href="#">NS03-023</a>	Acorn nut	6	
19	<a href="#">LW01-013</a>	Lockwasher	6	
20	<a href="#">16685</a>	Fan guard	2	
21	<a href="#">39974</a>	Fan blade	2	
22	<a href="#">56414</a>	Water pan heater support	1	
23	<a href="#">NS03-044</a>	Acorn nut, #10-24, SS	2	
24	<a href="#">66800</a>	Air heater base brace	2	
25*	<a href="#">14463</a>	Wire shelf and glides kit, 2 vat (use with <a href="#">14462</a> )	1	
25*	<a href="#">14464</a>	Wire shelf and glides kit, 3 vat (use with <a href="#">14462</a> )	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 103 Upper Control Panel

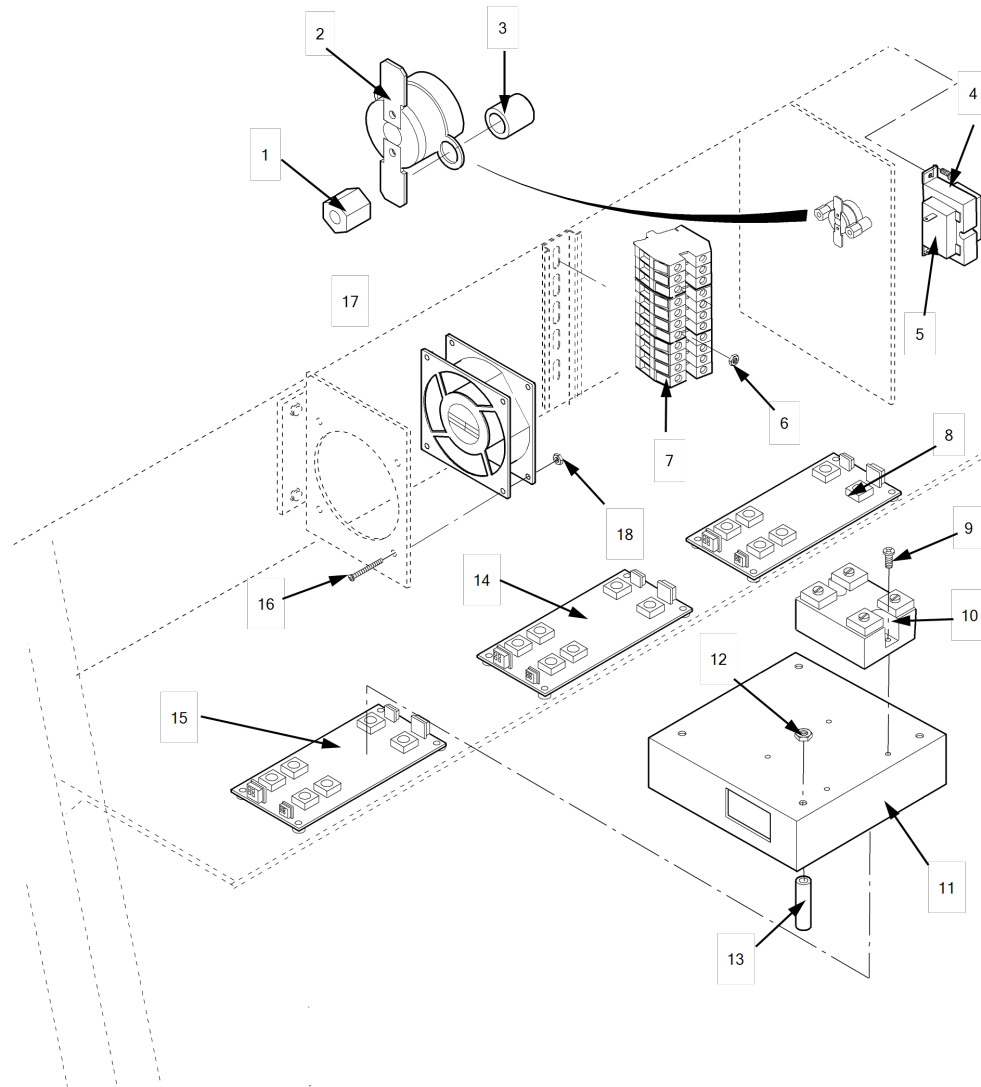

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
1	<a href="#">ME50-023</a>	Standoff	2	
2	<a href="#">58670</a>	High limit, 165° F	1	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
2	14257	High limit kit, manual reset to auto reset	A/R	A
3	ME50-011	Spacer	2	
4	SC02-041	Screw	2	
5	28979	Transformer, 208/240VAC	1	A
6	NS02-006	Nut	6	
7	56174	Terminal block assembly	3	
7	56175	Terminal block assembly, CE	3	
8	55101	Control PC board, radiant air/heat	1	B
8	63911	Control PC board, radiant air/heat, CE	1	B
9	SC04-001	Screw	10	
10	40645	Relay	5	A
11	64256	PC board cover	1	
12	NS02-005	Nut	4	
13	ME50-014	Spacer	4	
14	55102	Control PC board, radiant water- /heat	1	B
14	63912	Control PC board, radiant water- /heat, CE	1	B
15	55100	Control PC board, radiant heat	1	B
15	63910	Control PC board, radiant heat, CE	1	B




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
16	<a href="#">SC01-003</a>	Screw	4	
17	<a href="#">16688</a>	Cooling fan, 220 VAC	2	A
18	<a href="#">NS02-005</a>	Nut	4	
<p><b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b>  <b>* = Not Shown</b>  <b>A/R = As Required</b></p>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 103 Under Canopy and Glass

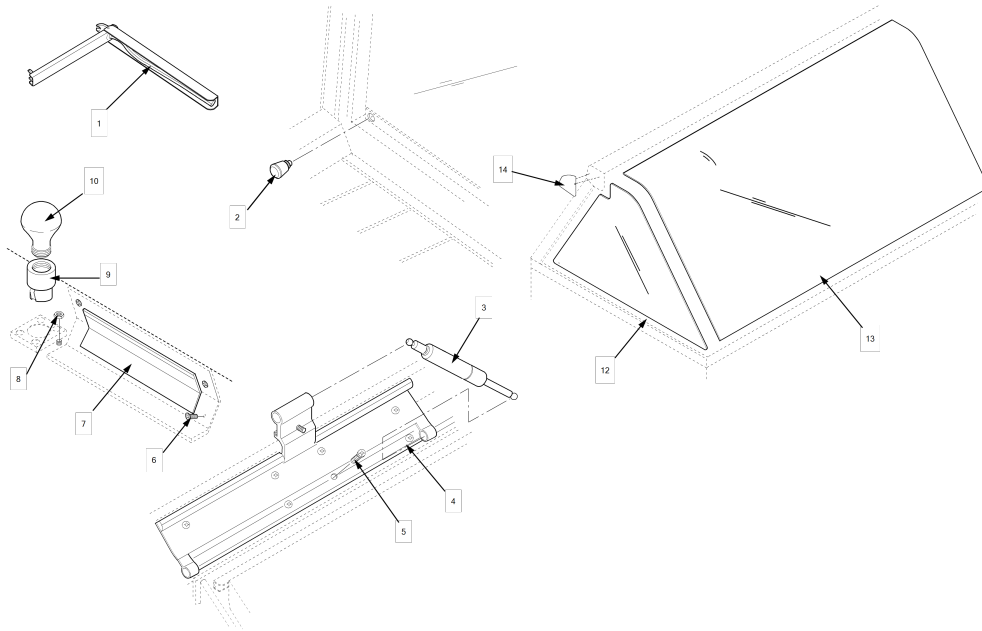

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
1	<a href="#">56878</a>	Gas ram installation tool	A/R	A
2	<a href="#">56883</a>	Side glass retainer, spring loaded	2	
3	<a href="#">56343-001</a>	Gas ram, 100N	Refer to Gas Ram selection chart	B
3	<a href="#">56343-002</a>	Gas ram, 200N		B
3	<a href="#">56343-003</a>	Gas ram, 300N		B
3	<a href="#">56343-004</a>	Gas ram, 400N		B
3	<a href="#">56343-005</a>	Gas ram, 500N		B
4	<a href="#">56345</a>	Lift element	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
5	<a href="#">SC03-004</a>	Screw	16	
6	<a href="#">SC02-041</a>	Screw	12	
7	<a href="#">14339</a>	Radiant heater kit, 208 VAC, 510W	3	A
7	<a href="#">14340</a>	Radiant heater kit, 230 VAC, 510W	3	A
7	<a href="#">14341</a>	Radiant heater kit, 240 VAC, 260W, CE	3	A
7	<a href="#">14342</a>	Radiant heater kit, 208 VAC, 260W, CE	3	A
8	<a href="#">NS02-006</a>	Nut	4	
9	<a href="#">39795</a>	Light socket, non-CE (August 2000 & after)	4	B
9	<a href="#">14295</a>	Light socket, non-CE (Before August 2000)	4	B
9	<a href="#">54041</a>	Light socket, CE	4	B
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	4	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	4	A
11*	<a href="#">56800</a>	Side glass insulator, CE	2	
12	N/A	Side glass, flat, clear	2	
12	N/A	Side glass, flat, mirrored, left	1	
12	N/A	Side glass, flat, mirrored, right	1	
12	N/A	Side glass, flat, low e, left	1	
12	N/A	Side glass, flat, low e, right	1	
12	N/A	Side glass, flat, mirrored, left	1	
12	<a href="#">56050-001</a>	Side glass, Henny Penny, profile, clear	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
12	<a href="#">56050-002</a>	Side glass, Henny Penny, profile, mirrored, left	1	
12	<a href="#">56050-003</a>	Side glass, Henny Penny, profile, mirrored, right	1	
12	<a href="#">56050-004</a>	Side glass, Henny Penny, profile, low e, left	1	
12	<a href="#">56050-005</a>	Side glass, Henny Penny, profile, low e, right	1	
12	<a href="#">56050-006</a>	Side glass, Henny Penny, profile, mirrored, antique white, left	1	
12	<a href="#">56050-007</a>	Side glass, Henny Penny, profile, mirrored, antique white, right	1	
12	<a href="#">56050-008</a>	Side glass, Henny Penny, profile, mirrored, shadow black, left	1	
12	<a href="#">56050-009</a>	Side glass, Henny Penny, profile, mirrored, shadow black, right	1	
12	<a href="#">56239-001</a>	Side glass, Tyler, advantage profile, clear	2	
12	<a href="#">56239-002</a>	Side glass, Tyler, advantage profile, mirrored, left	1	
12	<a href="#">56239-003</a>	Side glass, Tyler, advantage profile, mirrored, right	1	
12	<a href="#">56239-004</a>	Side glass, Tyler, advantage profile, low e, left	1	
12	<a href="#">56239-005</a>	Side glass, Tyler, advantage profile, low e, right	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
13	<a href="#">58607-002</a>	Henny Penny, curved profile, 3 vat, full serve	1	
13	<a href="#">58607-003</a>	Henny Penny, curved profile, 4 vat, full serve	1	
13	<a href="#">58607-004</a>	Henny Penny, curved profile, 5 vat, full serve	1	
13	<a href="#">58607-005</a>	Henny Penny, curved profile, 6 vat, full serve	1	
13	<a href="#">58607-006</a>	Henny Penny, curved profile, 7 vat, full serve (2 per unit)	2	
13	<a href="#">58607-011</a>	Henny Penny, curved profile, 3 vat, self serve	1	
13	<a href="#">58607-012</a>	Henny Penny, curved profile, 4 vat, self serve	1	
13	<a href="#">58607-013</a>	Henny Penny, curved profile, 5 vat, self serve	1	
13	<a href="#">58607-014</a>	Henny Penny, curved profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-015</a>	Henny Penny, curved profile, 7 vat, self serve (2 per unit)	2	
13	<a href="#">58607-047</a>	Tyler, advantage profile, 3 vat, full serve	1	
13	<a href="#">58607-048</a>	Tyler, advantage profile, 4 vat, full serve	1	
13	<a href="#">58607-049</a>	Tyler, advantage profile, 5 vat, full serve	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
13	<a href="#">58607-050</a>	Tyler, advantage profile, 6 vat, full serve (2 per unit)	2	
13	<a href="#">58607-051</a>	Tyler, advantage profile, 7 vat, full serve (2 per unit)	2	
13	N/A	Tyler, advantage profile, 2 vat, self serve, end, combo unit only	1	
13	<a href="#">58607-056</a>	Tyler, advantage profile, 3 vat, self serve	1	
13	<a href="#">58607-057</a>	Tyler, advantage profile, 4 vat, self serve	1	
13	<a href="#">58607-058</a>	Tyler, advantage profile, 5 vat, self serve	1	
13	<a href="#">58607-059</a>	Tyler, advantage profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-060</a>	Tyler, advantage profile, 7 vat, self serve (2 per unit)	2	
14	<a href="#">56231</a>	End cap	2	
15*	N/A	Divider glass, Henny Penny profile, combo units	1	
15*	N/A	Divider glass, Tyler, advantage profile, combo units	1	
15*	N/A	Divider glass, flat profile, combo units	1	
15*	N/A	Divider glass bracket	1	
16*	<a href="#">154413</a>	Sneeze guard kit	1	
16*	<a href="#">63191</a>	-Sneeze guard assembly	1	
17*	14872	Grease shield kit	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.


Item No.	Part No.	Description	Qty.	Stocking Level
			103	
18*	<a href="#">MS01-366</a>	Glass seal	A/R	

Recommended Parts: A = Truck Stock; B = Dist. Stock

\* = Not Shown

A/R = As Required

## Front Panel Support Matrix

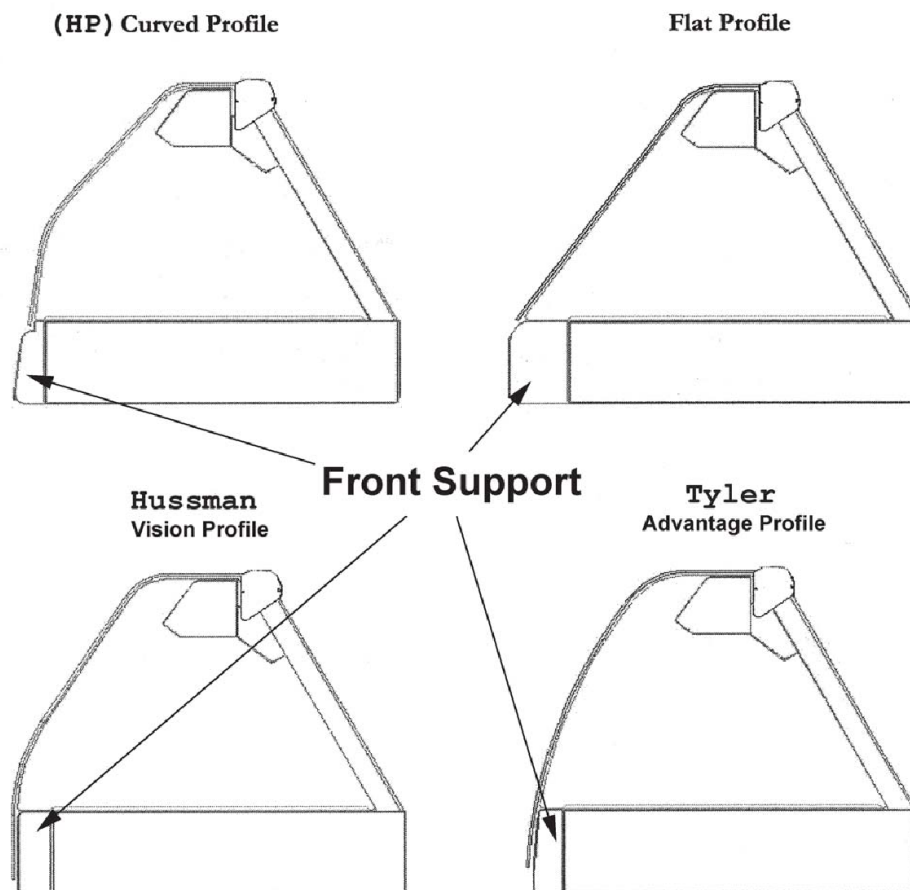



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Number of Vats	Henny Penny Profile	Hussman Profile	Flat Profile	Tyler Profile
3	<a href="#">58528</a>	N/A	N/A	<a href="#">58537</a>
4	<a href="#">58527</a>	N/A	N/A	<a href="#">58536</a>
5	<a href="#">58384</a>	N/A	N/A	58535
6	<a href="#">58526</a>	N/A	N/A	58534
7	<a href="#">58387</a>	N/A	N/A	<a href="#">58533</a>

### Gas Ram Identification Chart

Refer to Columns 1 and 2 in the chart below to identify the correct canopy glass assembly (s) on your unit. Then move to the right to Column 3 to identify the correct gas ram configuration -- the quantity and strength of the gas ram(s) needed -- for your unit. Gas ram configuration is as viewed from the customer side.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-001</a>	HP	Curved	2	Full			4/200N
<a href="#">58607-002</a>	HP	Curved	3	Full			4/200N
<a href="#">58607-003</a>	HP	Curved	4	Full			4/400N
<a href="#">58607-004</a>	HP	Curved	5	Full			6/300N
<a href="#">58607-005</a>	HP	Curved	6	Full			4/300N
<a href="#">58607-006</a>	HP	Curved	7	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-007</a>	HP	Curved	2	Self	END	YES	1/100N
<a href="#">58607-008</a>	HP	Curved	3	Self	END	YES	2/100N
<a href="#">58607-009</a>	HP	Curved	2	Self	CTR	YES	1/100N
<a href="#">58607-010</a>	HP	Curved	3	Self	CTR	YES	1/100N
<a href="#">58607-011</a>	HP	Curved	3	Self			1/200N
<a href="#">58607-012</a>	HP	Curved	4	Self			2/100N
<a href="#">58607-013</a>	HP	Curved	5	Self			3/100N
<a href="#">58607-014</a>	HP	Curved	6	Self			8/100N
<a href="#">58607-015</a>	HP	Curved	7	Self			4/200N
<a href="#">58607-016</a>	Hussman	Vision	2	Full			4/300N
<a href="#">58607-017</a>	Hussman	Vision	3	Full			4/400N
<a href="#">58607-018</a>	Hussman	Vision	4	Full			6/400N
<a href="#">58607-019</a>	Hussman	Vision	5	Full			1/500N, 1/400N 2/500N, 1/400N 1/500N
<a href="#">58607-020</a>	Hussman	Vision	6	Full			8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-021</a>	Hussman	Vision	7	Full			12/300N
<a href="#">58607-022</a>	Hussman	Vision	2	Self	END	YES	1/100N
<a href="#">58607-023</a>	Hussman	Vision	3	Self	END	YES	2/100N
<a href="#">58607-024</a>	Hussman	Vision	2	Self	CTR	YES	1/100N
<a href="#">58607-025</a>	Hussman	Vision	3	Self	CTR	YES	2/100N
<a href="#">58607-026</a>	Hussman	Vision	3	Self			2/100N
<a href="#">58607-027</a>	Hussman	Vision	4	Self			2/100N
<a href="#">58607-028</a>	Hussman	Vision	5	Self			2/300N
<a href="#">58607-029</a>	Hussman	Vision	6	Self			8/100N
<a href="#">58607-030</a>	Hussman	Vision	7	Self			4/100N
<a href="#">58607-031</a>		Flat	2	Full			4/200N
<a href="#">58607-032</a>		Flat	3	Full			4/300N
<a href="#">58607-033</a>		Flat	4	Full			4/300N, 2/200N
<a href="#">58607-034</a>		Flat	5	Full			2/400N, 4/300N
<a href="#">58607-035</a>		Flat	6	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-036</a>		Flat	7	Full			8/400N
<a href="#">58607-037</a>		Flat	2	Self	END	YES	1/100N
<a href="#">58607-038</a>		Flat	3	Self	END	YES	2/100N
<a href="#">58607-039</a>		Flat	2	Self	CTR	YES	1/100N
<a href="#">58607-040</a>		Flat	3	Self	CTR	YES	2/100N
<a href="#">58607-041</a>		Flat	3	Self			2/100N
<a href="#">58607-042</a>		Flat	4	Self			2/100N
<a href="#">58607-043</a>		Flat	5	Self			2/200N
<a href="#">58607-044</a>		Flat	6	Self			8/100N
<a href="#">58607-045</a>		Flat	7	Self			4/100N
<a href="#">58607-046</a>	Tyler	Advantage	2	Full			1/300N, 2/200N, 1/300N
<a href="#">58607-047</a>	Tyler	Advantage	3	Full			2/500N, 1/400N, 1/500N
<a href="#">58607-048</a>	Tyler	Advantage	4	Full			2/400N, 1/400N, 1/300N, 2/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-049</a>	Tyler	Advantage	5	Full			2/500N, 2/400N, 2/500N
<a href="#">58607-050</a>	Tyler	Advantage	6	Full			8/400N
<a href="#">58607-051</a>	Tyler	Advantage	7	Full			8/300N, 4/200N
<a href="#">58607-052</a>	Tyler	Advantage	2	Self	END	YES	1/200N
<a href="#">58607-053</a>	Tyler	Advantage	3	Self	END	YES	2/100N
<a href="#">58607-054</a>	Tyler	Advantage	2	Self	CTR	YES	1/200N
<a href="#">58607-055</a>	Tyler	Advantage	3	Self	CTR	YES	2/100N
<a href="#">58607-056</a>	Tyler	Advantage	3	Self			2/100N
<a href="#">58607-057</a>	Tyler	Advantage	4	Self			2/200N
<a href="#">58607-058</a>	Tyler	Advantage	5	Self			2/200N
<a href="#">58607-059</a>	Tyler	Advantage	6	Self			4/200N
<a href="#">58607-060</a>	Tyler	Advantage	7	Self			4/200N
<a href="#">58607-061</a>	Hussman	Vision	3	Full	Non-glare		4/400N
<a href="#">58607-062</a>	Hussman	Vision	5	Full	Non-glare		1/500N, 1/400N, 2/500N,




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
							1/400N, 1/500N
58607-063	Hussman	Vision	7	Full	Non-glare		12/300N
58607-064		Flat	3		Non-glare		4/400N
58607-065		Flat	5		Non-glare		4/400N, 2/300N
58607-066		Flat	7		Non-glare		8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 103 Lower Control Panel

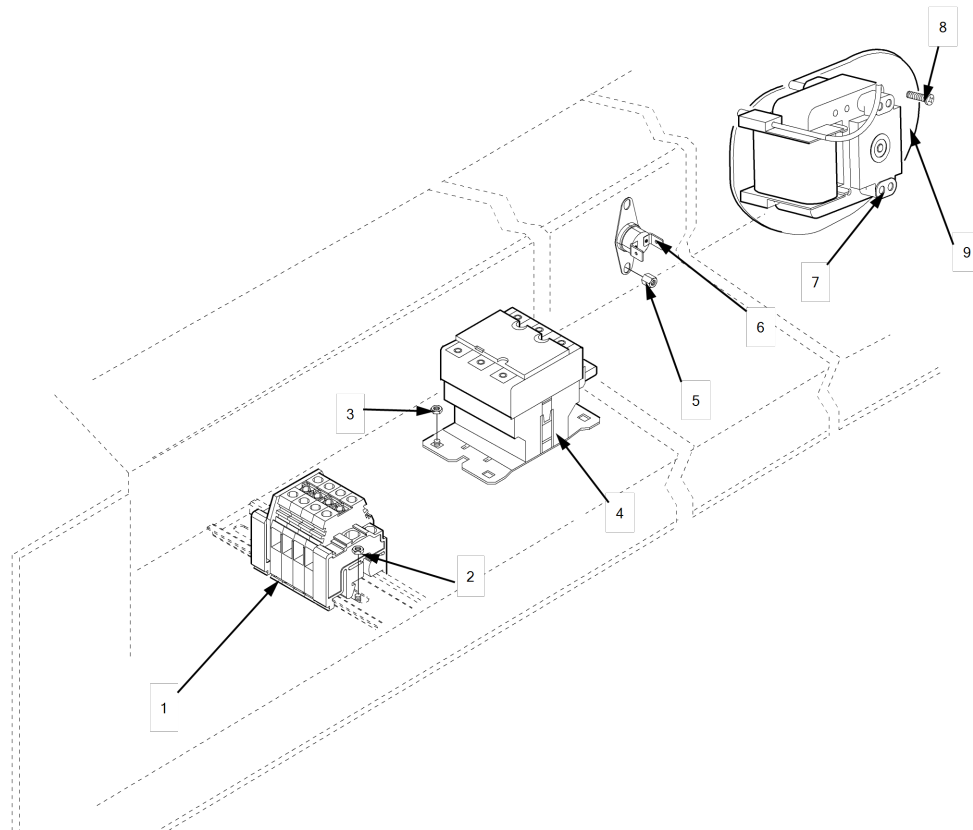

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
1	<a href="#">49367</a>	Terminal block assembly	1	
1	<a href="#">49641</a>	Terminal block assembly, CE	1	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">NS02-006</a>	Nut	2	
3*	<a href="#">51062</a>	EMC filter board, CE	1	A
4	<a href="#">19405</a>	Contactora, 208/240 VAC	1	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
5	<a href="#">ME50-023</a>	Standoff	2	
6	<a href="#">56854</a>	High limit with spacer, 225° F, manual reset	1	A
7	<a href="#">80821</a>	Blower motor, 50/60 HZ	2	A
8	<a href="#">SC02-041</a>	Screw	6	
9	<a href="#">37157</a>	Blower plate	A/R	
<p><b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b>  <b>* = Not Shown</b>  <b>A/R = As Required</b></p>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 103 Upper Controls and Decals

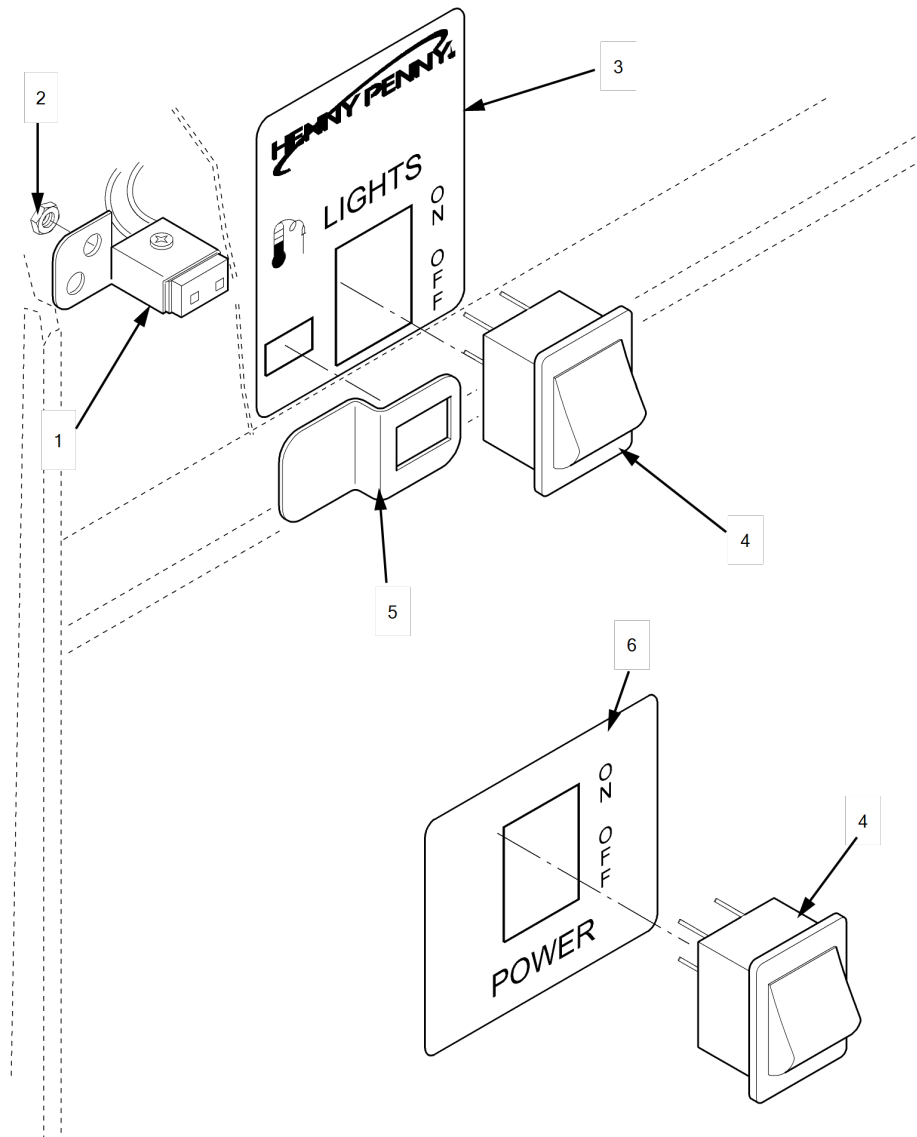

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
1	<a href="#">56380</a>	Probe receptacle assembly	2	A
2	<a href="#">NS02-006</a>	Nut	2	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			103	
3	<a href="#">61512</a>	Lights with probe decal	1	
3	<a href="#">59305</a>	Lights without probe decal	1	
4	<a href="#">72277</a>	Power switch	3	A
5	<a href="#">56585</a>	Probe guard	2	
6	<a href="#">61739</a>	Power decal	1	
6	<a href="#">61753</a>	Power with probe decal (SN: CY094JA & below)	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 104 Covers, Doors, and Shelves

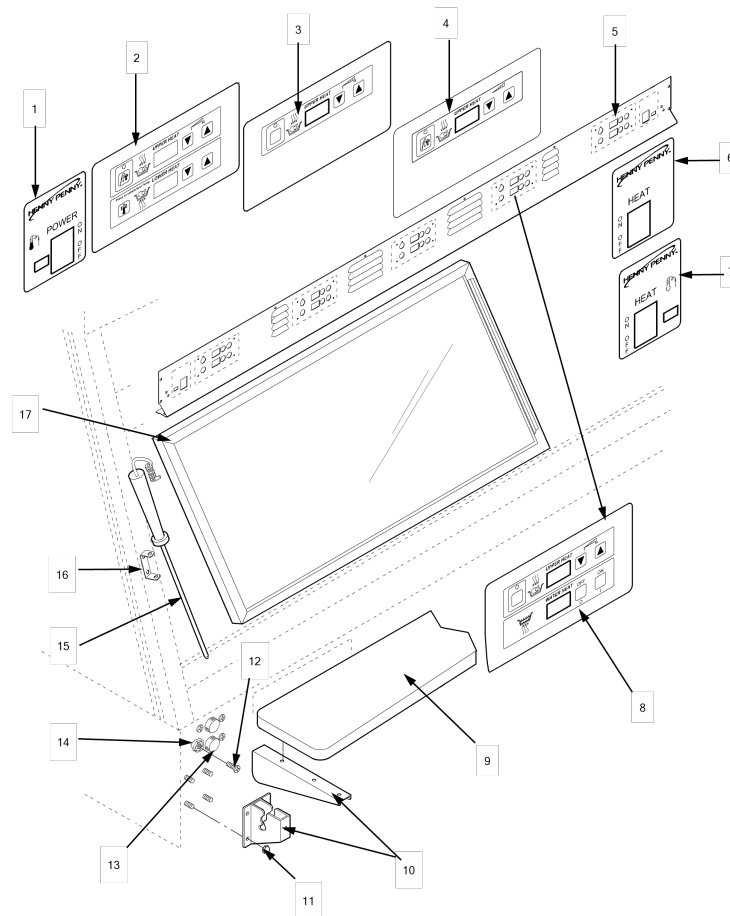

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
1	61753	Power with probe decal (SN: CY074JA & below)	1	
2	56349	Control decal, upper air	1	
3	59302	Control decal, radio w/o probe	1	
4	56347	Control decal, upper heat	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
5	64262	Rear cover, 4 vat	1	
6	<a href="#">59306</a>	Heat supply w/o probe decal	1	
7	<a href="#">61513</a>	Heat supply with probe decal	1	
8	<a href="#">59304</a>	Control radio w/o probe decal	1	
9	N/A	Cutting board, wood, 4 vat	1	
9	<a href="#">56129</a>	Cutting board assembly, poly, 4 vat	1	
10	<a href="#">37230</a>	Cutting board bracket	2	
11	<a href="#">NS03-044</a>	Nut	8	
12	<a href="#">SC01-113</a>	Screw	4	
13	<a href="#">EF02-006</a>	Fuse holder, 15 amp (HA0704031 & below)	2	A
13	<a href="#">EF02-104</a>	Fuse holder, 20 amp, CE	2	A
14	<a href="#">NS02-005</a>	Nut	4	
15	<a href="#">59363</a>	Food probe	1	A
16	<a href="#">42895</a>	Food probe clip	2	
17	<a href="#">68047</a>	Sliding glass doors, 4 vat	2	
17	<a href="#">22225</a>	-Door glide	4/door	
17	<a href="#">SC01-066</a>	-Screw, #6-32 X 3/8, CT, SS	4/door	
17		- Door tracks and hardware (See Door Tracks table below)		
18*	<a href="#">EF02-007</a>	Fuse, 15 Amp (HA0704031 & below)	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
18*	<a href="#">EF02-125</a>	Push button reset breaker (HA0704032 & above)	2	A
18*	<a href="#">EF02-105</a>	Fuse, 15 Amp, CE	2	
19*	<a href="#">58497</a>	Vat cover, 2 in, 2 vat	A/R	
19*	<a href="#">58498</a>	Vat cover, 3/8 in, 2 vat	A/R	
19*	<a href="#">58503</a>	Vat cover, flat, 2 vat	A/R	
20*	<a href="#">54003</a>	Adjustable legs, optional	4	
21*	<a href="#">64176</a>	Splatter guard	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				


## Door Tracks

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
*	<a href="#">56595-002</a>	Door track, lower	1	
*	<a href="#">56237</a>	Door track, upper	1	
*	<a href="#">SC01-003</a>	Screw, #6-32 X 3/8, CT, flat head	10	
*	<a href="#">NS02-005</a>	Hex keps nuts, #6-32	5	
*	<a href="#">NS03-063</a>	Hi-crown acorn nut, 6-32, SS	5	
* = Not Shown				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 104 Lower Heat

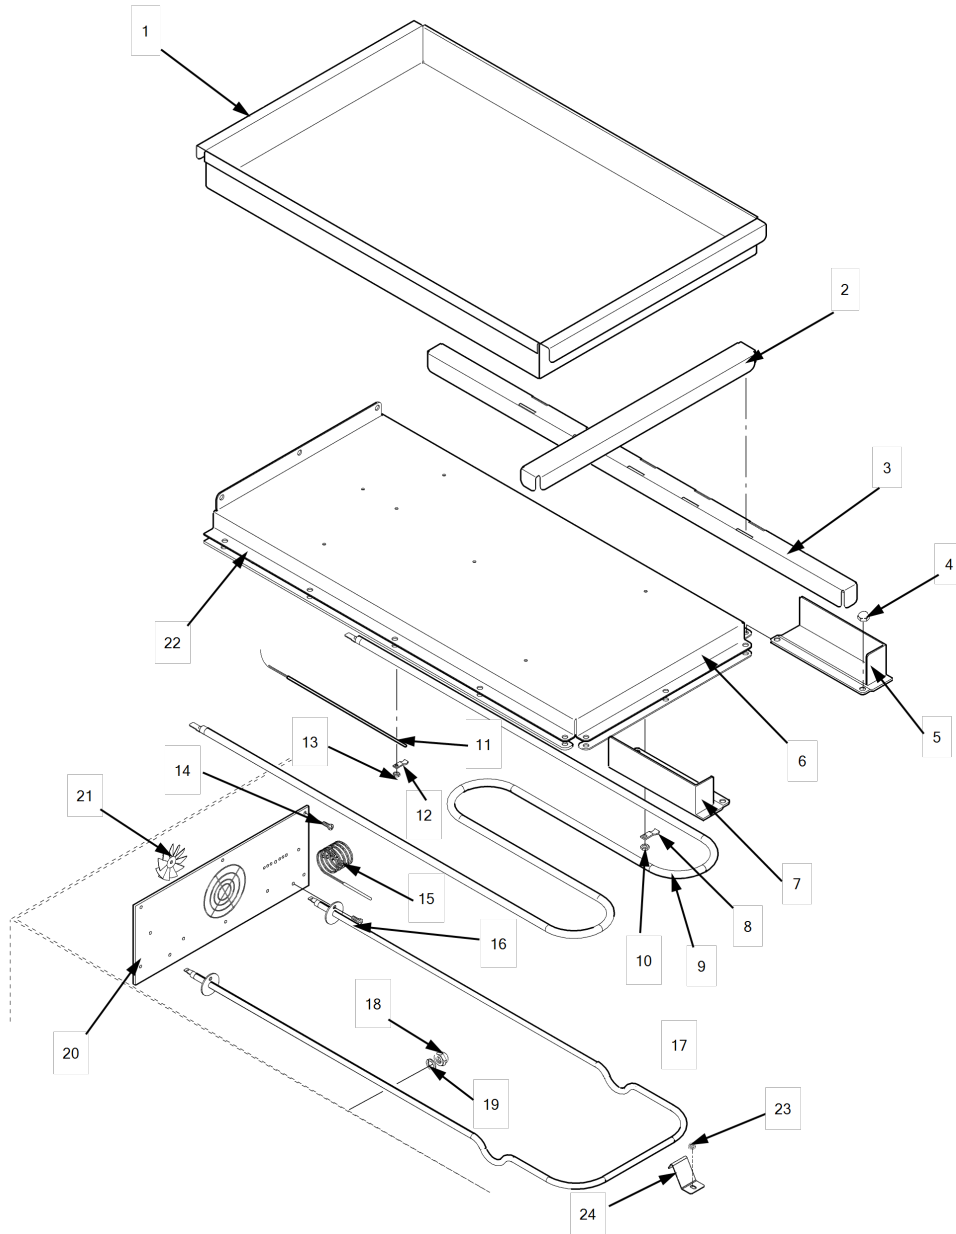



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
1	<a href="#">59315</a>	Water pan, small service only	1	
1	<a href="#">91963</a>	Water pan, standard	1	
2	<a href="#">37371</a>	Cross support pan, short	8	
3	<a href="#">37159</a>	Support pan, long	8	
3	<a href="#">14462</a>	Support pan and shelf kit (Use with <a href="#">14463</a> & <a href="#">14464</a> )	1	
4	<a href="#">NS03-002</a>	Acorn nut, #10-24	13	
5	<a href="#">63440</a>	Water pan locator, right (service only)	1	
5	<a href="#">91977</a>	Water pan locator, standard	2	
5	<a href="#">91978</a>	Water pan locator, cambo	A/R	
6	<a href="#">56862</a>	Water pan gasket	1	
7	<a href="#">63441</a>	Water pan locator, left (service only)	1	
8	<a href="#">56354</a>	Water heater clip	5	
9	<a href="#">56310-01</a>	Water pan heater, 230VAC, 400W (Under <a href="#">56414</a> )	1	B
9	<a href="#">56310-02</a>	Water pan heater, 208VAC, 400W (Under <a href="#">56414</a> )	1	B
10	<a href="#">NS02-005</a>	Nut	5	
11	<a href="#">26252</a>	Water pan probe, 6 in	1	
12	<a href="#">MS01-462</a>	Tube clamp	2	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
13	<a href="#">NS02-005</a>	Nut	2	
14	<a href="#">SC02-041</a>	Screw	12	
15	<a href="#">56166</a>	Probe, 3 in	1	A
15*	<a href="#">39693</a>	Probe clip	1	
15*	<a href="#">58566</a>	Probe plate	1	
16	<a href="#">SC02-041</a>	Screw	4	
17	<a href="#">56240-01</a>	Lower heater, 208 VAC, 650W	2	B
17	<a href="#">56240-02</a>	Lower heater, 240 VAC, 650W	2	B
18	<a href="#">NS03-023</a>	Acorn nut	6	
19	<a href="#">LW01-013</a>	Lockwasher	6	
20	<a href="#">16685</a>	Fan guard	2	
21	<a href="#">39974</a>	Fan blade	2	
22	<a href="#">56414</a>	Water pan heater support	1	
23	<a href="#">NS03-044</a>	Acorn nut, #10-24, SS	2	
24	<a href="#">66800</a>	Air heater base brace	2	
25*	<a href="#">14463</a>	Wire shelf and glides kit, 2 vat (use with <a href="#">14462</a> )	1	
25*	<a href="#">14464</a>	Wire shelf and glides kit, 3 vat (use with <a href="#">14462</a> )	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 104 Upper Control Panel

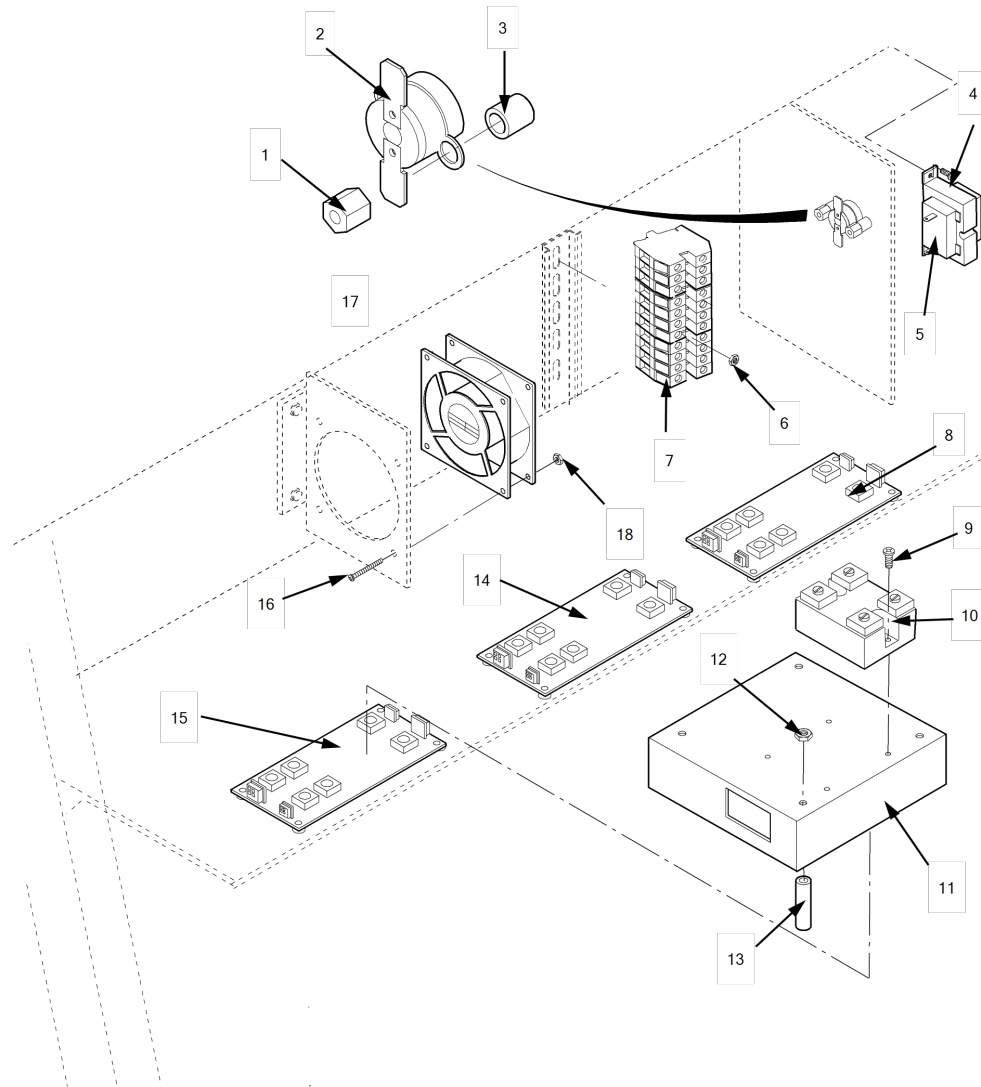

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
1	<a href="#">ME50-023</a>	Standoff	2	
2	<a href="#">58670</a>	High limit, 165° F	1	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
2	14257	High limit kit, manual reset to auto reset	A/R	A
3	ME50-011	Spacer	2	
4	SC02-041	Screw	2	
5	28979	Transformer, 208/240VAC	1	A
6	NS02-006	Nut	8	
7	56174	Terminal block assembly	4	
7	56175	Terminal block assembly, CE	4	
8	55101	Control PC board, radiant air/heat	1	B
8	63911	Control PC board, radiant air/heat, CE	1	B
9	SC04-001	Screw	12	
10	40645	Relay	6	A
11	64256	PC board cover	2	
12	NS02-005	Nut	8	
13	ME50-014	Spacer	8	
14	55102	Control PC board, radiant water-/heat	1	B
14	63912	Control PC board, radiant water-/heat, CE	1	B
15	55100	Control PC board, radiant heat	2	B
15	63910	Control PC board, radiant heat, CE	2	B




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
16	<a href="#">SC01-003</a>	Screw	8	
17	<a href="#">16688</a>	Cooling fan, 220 VAC	3	A
18	<a href="#">NS02-005</a>	Nut	4	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 104 Under Canopy and Glass

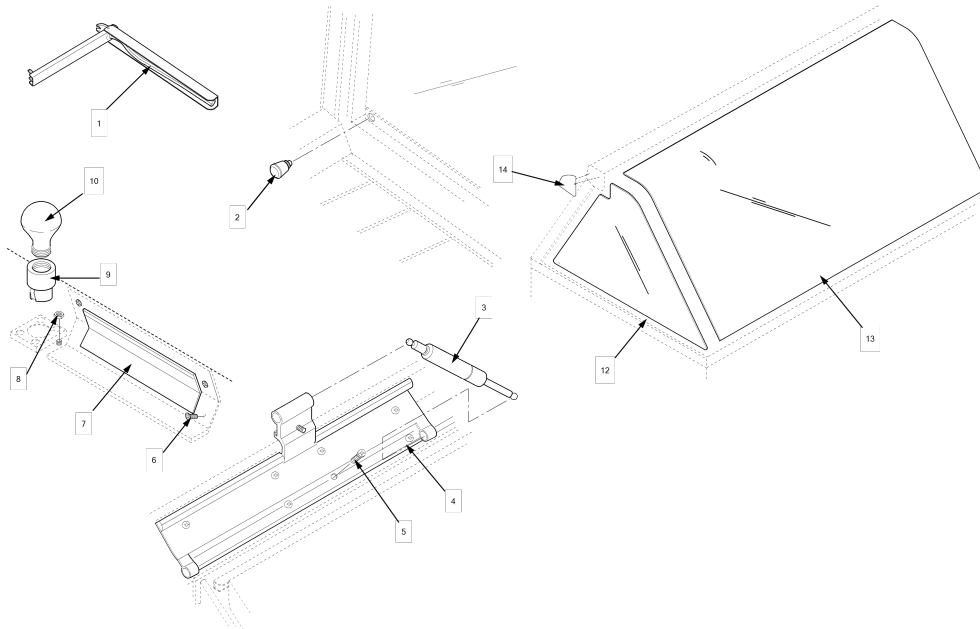

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
1	<a href="#">56878</a>	Gas ram installation tool	A/R	A
2	<a href="#">56883</a>	Side glass retainer, spring loaded	2	
3	<a href="#">56343-001</a>	Gas ram, 100N	Refer to Gas Ram selection chart	B
3	<a href="#">56343-002</a>	Gas ram, 200N		B
3	<a href="#">56343-003</a>	Gas ram, 300N		B
3	<a href="#">56343-004</a>	Gas ram, 400N		B
3	<a href="#">56343-005</a>	Gas ram, 500N		B
4	<a href="#">56345</a>	Lift element	3	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
5	<a href="#">SC03-004</a>	Screw	24	
6	<a href="#">SC02-041</a>	Screw	16	
7	<a href="#">14339</a>	Radiant heater kit, 208 VAC, 510W	4	A
7	<a href="#">14340</a>	Radiant heater kit, 230 VAC, 510W	4	A
7	<a href="#">14341</a>	Radiant heater kit, 240 VAC, 260W, CE	4	A
7	<a href="#">14342</a>	Radiant heater kit, 208 VAC, 260W, CE	4	A
8	<a href="#">NS02-006</a>	Nut	6	
9	<a href="#">39795</a>	Light socket, non-CE (August 2000 & after)	5	B
9	<a href="#">14295</a>	Light socket, non-CE (Before August 2000)	5	B
9	<a href="#">54041</a>	Light socket, CE	5	B
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	5	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	5	A
11*	<a href="#">56800</a>	Side glass insulator, CE	2	
12	N/A	Side glass, flat, clear	2	
12	N/A	Side glass, flat, mirrored, left	1	
12	N/A	Side glass, flat, mirrored, right	1	
12	N/A	Side glass, flat, low e, left	1	
12	N/A	Side glass, flat, low e, right	1	
12	N/A	Side glass, flat, mirrored, left	1	
12	<a href="#">56050-001</a>	Side glass, Henny Penny, profile, clear	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
12	<a href="#">56050-002</a>	Side glass, Henny Penny, profile, mirrored, left	1	
12	<a href="#">56050-003</a>	Side glass, Henny Penny, profile, mirrored, right	1	
12	<a href="#">56050-004</a>	Side glass, Henny Penny, profile, low e, left	1	
12	<a href="#">56050-005</a>	Side glass, Henny Penny, profile, low e, right	1	
12	<a href="#">56050-006</a>	Side glass, Henny Penny, profile, mirrored, antique white, left	1	
12	<a href="#">56050-007</a>	Side glass, Henny Penny, profile, mirrored, antique white, right	1	
12	<a href="#">56050-008</a>	Side glass, Henny Penny, profile, mirrored, shadow black, left	1	
12	<a href="#">56050-009</a>	Side glass, Henny Penny, profile, mirrored, shadow black, right	1	
12	<a href="#">56239-001</a>	Side glass, Tyler, advantage profile, clear	2	
12	<a href="#">56239-002</a>	Side glass, Tyler, advantage profile, mirrored, left	1	
12	<a href="#">56239-003</a>	Side glass, Tyler, advantage profile, mirrored, right	1	
12	<a href="#">56239-004</a>	Side glass, Tyler, advantage profile, low e, left	1	
12	<a href="#">56239-005</a>	Side glass, Tyler, advantage profile, low e, right	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
13	<a href="#">58607-002</a>	Henny Penny, curved profile, 3 vat, full serve	1	
13	<a href="#">58607-003</a>	Henny Penny, curved profile, 4 vat, full serve	1	
13	<a href="#">58607-004</a>	Henny Penny, curved profile, 5 vat, full serve	1	
13	<a href="#">58607-005</a>	Henny Penny, curved profile, 6 vat, full serve	1	
13	<a href="#">58607-006</a>	Henny Penny, curved profile, 7 vat, full serve (2 per unit)	2	
13	<a href="#">58607-011</a>	Henny Penny, curved profile, 3 vat, self serve	1	
13	<a href="#">58607-012</a>	Henny Penny, curved profile, 4 vat, self serve	1	
13	<a href="#">58607-013</a>	Henny Penny, curved profile, 5 vat, self serve	1	
13	<a href="#">58607-014</a>	Henny Penny, curved profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-015</a>	Henny Penny, curved profile, 7 vat, self serve (2 per unit)	2	
13	<a href="#">58607-047</a>	Tyler, advantage profile, 3 vat, full serve	1	
13	<a href="#">58607-048</a>	Tyler, advantage profile, 4 vat, full serve	1	
13	<a href="#">58607-049</a>	Tyler, advantage profile, 5 vat, full serve	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
13	<a href="#">58607-050</a>	Tyler, advantage profile, 6 vat, full serve (2 per unit)	2	
13	<a href="#">58607-051</a>	Tyler, advantage profile, 7 vat, full serve (2 per unit)	2	
13	N/A	Tyler, advantage profile, 2 vat, self serve, end, combo unit only	1	
13	<a href="#">58607-056</a>	Tyler, advantage profile, 3 vat, self serve	1	
13	<a href="#">58607-057</a>	Tyler, advantage profile, 4 vat, self serve	1	
13	<a href="#">58607-058</a>	Tyler, advantage profile, 5 vat, self serve	1	
13	<a href="#">58607-059</a>	Tyler, advantage profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-060</a>	Tyler, advantage profile, 7 vat, self serve (2 per unit)	2	
14	<a href="#">56231</a>	End cap	2	
15*	N/A	Divider glass, Henny Penny profile, combo units	1	
15*	N/A	Divider glass, Tyler, advantage profile, combo units	1	
15*	N/A	Divider glass, flat profile, combo units	1	
15*	N/A	Divider glass bracket	1	
16*	154489	Sneeze guard kit	1	
16*	21092	-Sneeze guard assembly	1	
17*	14873	Grease shield kit	1	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
18*	<a href="#">MS01-366</a>	Glass seal	A/R	

Recommended Parts: A = Truck Stock; B = Dist. Stock  
 \* = Not Shown  
 A/R = As Required

### Front Panel Support Matrix

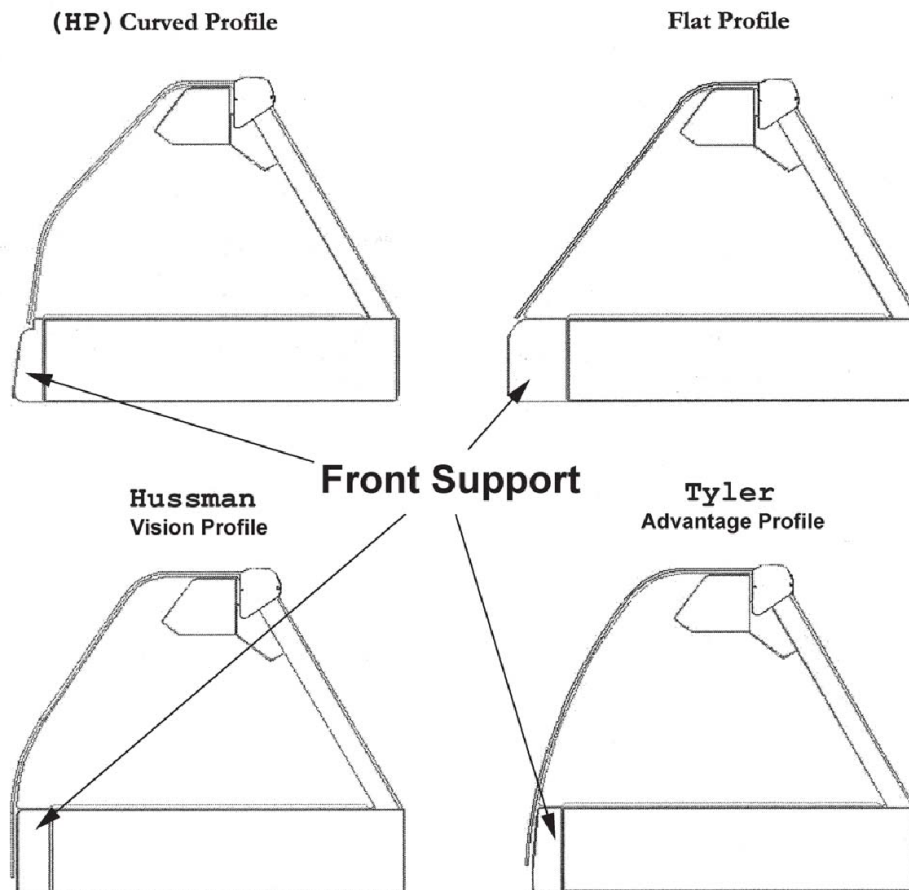



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Number of Vats	Henny Penny Profile	Hussman Profile	Flat Profile	Tyler Profile
3	<a href="#">58528</a>	N/A	N/A	<a href="#">58537</a>
4	<a href="#">58527</a>	N/A	N/A	<a href="#">58536</a>
5	<a href="#">58384</a>	N/A	N/A	58535
6	<a href="#">58526</a>	N/A	N/A	58534
7	<a href="#">58387</a>	N/A	N/A	<a href="#">58533</a>

### Gas Ram Identification Chart

Refer to Columns 1 and 2 in the chart below to identify the correct canopy glass assembly (s) on your unit. Then move to the right to Column 3 to identify the correct gas ram configuration -- the quantity and strength of the gas ram(s) needed -- for your unit. Gas ram configuration is as viewed from the customer side.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-001</a>	HP	Curved	2	Full			4/200N
<a href="#">58607-002</a>	HP	Curved	3	Full			4/200N
<a href="#">58607-003</a>	HP	Curved	4	Full			4/400N
<a href="#">58607-004</a>	HP	Curved	5	Full			6/300N
<a href="#">58607-005</a>	HP	Curved	6	Full			4/300N
<a href="#">58607-006</a>	HP	Curved	7	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-007</a>	HP	Curved	2	Self	END	YES	1/100N
<a href="#">58607-008</a>	HP	Curved	3	Self	END	YES	2/100N
<a href="#">58607-009</a>	HP	Curved	2	Self	CTR	YES	1/100N
<a href="#">58607-010</a>	HP	Curved	3	Self	CTR	YES	1/100N
<a href="#">58607-011</a>	HP	Curved	3	Self			1/200N
<a href="#">58607-012</a>	HP	Curved	4	Self			2/100N
<a href="#">58607-013</a>	HP	Curved	5	Self			3/100N
<a href="#">58607-014</a>	HP	Curved	6	Self			8/100N
<a href="#">58607-015</a>	HP	Curved	7	Self			4/200N
<a href="#">58607-016</a>	Hussman	Vision	2	Full			4/300N
<a href="#">58607-017</a>	Hussman	Vision	3	Full			4/400N
<a href="#">58607-018</a>	Hussman	Vision	4	Full			6/400N
<a href="#">58607-019</a>	Hussman	Vision	5	Full			1/500N, 1/400N 2/500N, 1/400N 1/500N
<a href="#">58607-020</a>	Hussman	Vision	6	Full			8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-021</a>	Hussman	Vision	7	Full			12/300N
<a href="#">58607-022</a>	Hussman	Vision	2	Self	END	YES	1/100N
<a href="#">58607-023</a>	Hussman	Vision	3	Self	END	YES	2/100N
<a href="#">58607-024</a>	Hussman	Vision	2	Self	CTR	YES	1/100N
<a href="#">58607-025</a>	Hussman	Vision	3	Self	CTR	YES	2/100N
<a href="#">58607-026</a>	Hussman	Vision	3	Self			2/100N
<a href="#">58607-027</a>	Hussman	Vision	4	Self			2/100N
<a href="#">58607-028</a>	Hussman	Vision	5	Self			2/300N
<a href="#">58607-029</a>	Hussman	Vision	6	Self			8/100N
<a href="#">58607-030</a>	Hussman	Vision	7	Self			4/100N
<a href="#">58607-031</a>		Flat	2	Full			4/200N
<a href="#">58607-032</a>		Flat	3	Full			4/300N
<a href="#">58607-033</a>		Flat	4	Full			4/300N, 2/200N
<a href="#">58607-034</a>		Flat	5	Full			2/400N, 4/300N
<a href="#">58607-035</a>		Flat	6	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-036</a>		Flat	7	Full			8/400N
<a href="#">58607-037</a>		Flat	2	Self	END	YES	1/100N
<a href="#">58607-038</a>		Flat	3	Self	END	YES	2/100N
<a href="#">58607-039</a>		Flat	2	Self	CTR	YES	1/100N
<a href="#">58607-040</a>		Flat	3	Self	CTR	YES	2/100N
<a href="#">58607-041</a>		Flat	3	Self			2/100N
<a href="#">58607-042</a>		Flat	4	Self			2/100N
<a href="#">58607-043</a>		Flat	5	Self			2/200N
<a href="#">58607-044</a>		Flat	6	Self			8/100N
<a href="#">58607-045</a>		Flat	7	Self			4/100N
<a href="#">58607-046</a>	Tyler	Advantage	2	Full			1/300N, 2/200N, 1/300N
<a href="#">58607-047</a>	Tyler	Advantage	3	Full			2/500N, 1/400N, 1/500N
<a href="#">58607-048</a>	Tyler	Advantage	4	Full			2/400N, 1/400N, 1/300N, 2/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-049</a>	Tyler	Advantage	5	Full			2/500N, 2/400N, 2/500N
<a href="#">58607-050</a>	Tyler	Advantage	6	Full			8/400N
<a href="#">58607-051</a>	Tyler	Advantage	7	Full			8/300N, 4/200N
<a href="#">58607-052</a>	Tyler	Advantage	2	Self	END	YES	1/200N
<a href="#">58607-053</a>	Tyler	Advantage	3	Self	END	YES	2/100N
<a href="#">58607-054</a>	Tyler	Advantage	2	Self	CTR	YES	1/200N
<a href="#">58607-055</a>	Tyler	Advantage	3	Self	CTR	YES	2/100N
<a href="#">58607-056</a>	Tyler	Advantage	3	Self			2/100N
<a href="#">58607-057</a>	Tyler	Advantage	4	Self			2/200N
<a href="#">58607-058</a>	Tyler	Advantage	5	Self			2/200N
<a href="#">58607-059</a>	Tyler	Advantage	6	Self			4/200N
<a href="#">58607-060</a>	Tyler	Advantage	7	Self			4/200N
<a href="#">58607-061</a>	Hussman	Vision	3	Full	Non-glare		4/400N
<a href="#">58607-062</a>	Hussman	Vision	5	Full	Non-glare		1/500N, 1/400N, 2/500N,




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
							1/400N, 1/500N
58607-063	Hussman	Vision	7	Full	Non-glare		12/300N
58607-064		Flat	3		Non-glare		4/400N
58607-065		Flat	5		Non-glare		4/400N, 2/300N
58607-066		Flat	7		Non-glare		8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 104 Lower Control Panel

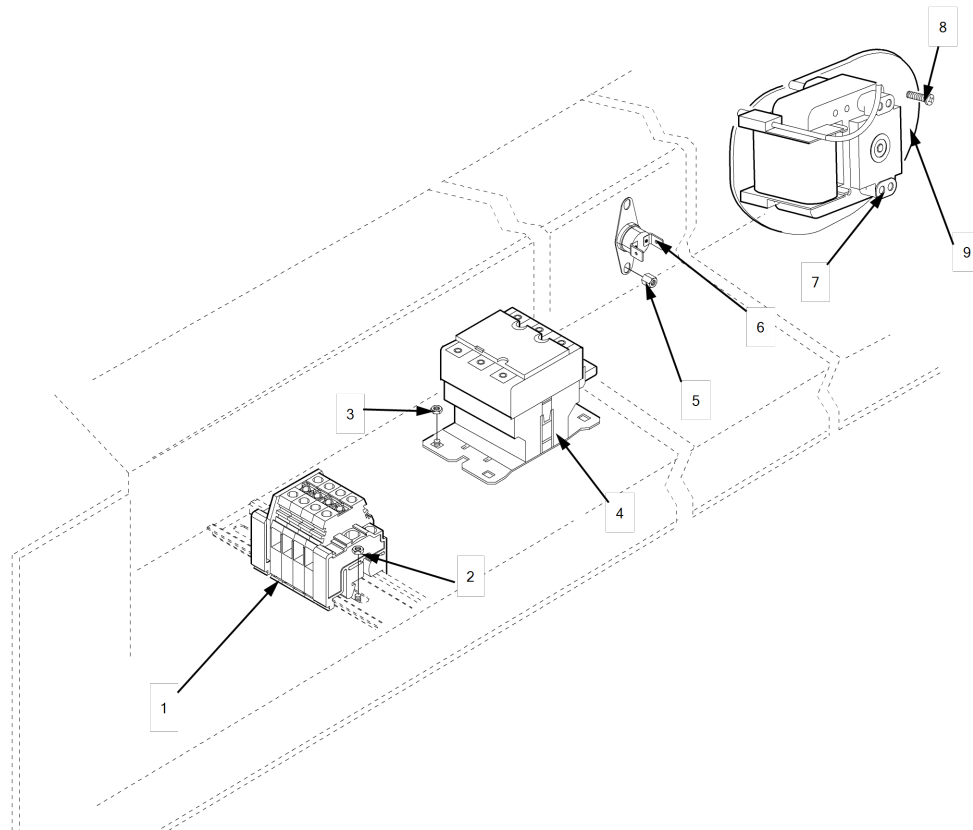

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
1	<a href="#">49367</a>	Terminal block assembly	1	
1	<a href="#">49641</a>	Terminal block assembly, CE	1	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">NS02-006</a>	Nut	2	
3*	<a href="#">51062</a>	EMC filter board, CE	1	A
4	<a href="#">19405</a>	Contactora, 208/240 VAC	1	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
5	<a href="#">ME50-023</a>	Standoff	2	
6	<a href="#">56854</a>	High limit with spacer, 225° F, manual reset	1	A
7	<a href="#">80821</a>	Blower motor, 50/60 HZ	2	A
8	<a href="#">SC02-041</a>	Screw	6	
9	<a href="#">37157</a>	Blower plate	A/R	
<p><b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b>  <b>* = Not Shown</b>  <b>A/R = As Required</b></p>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 104 Upper Controls and Decals

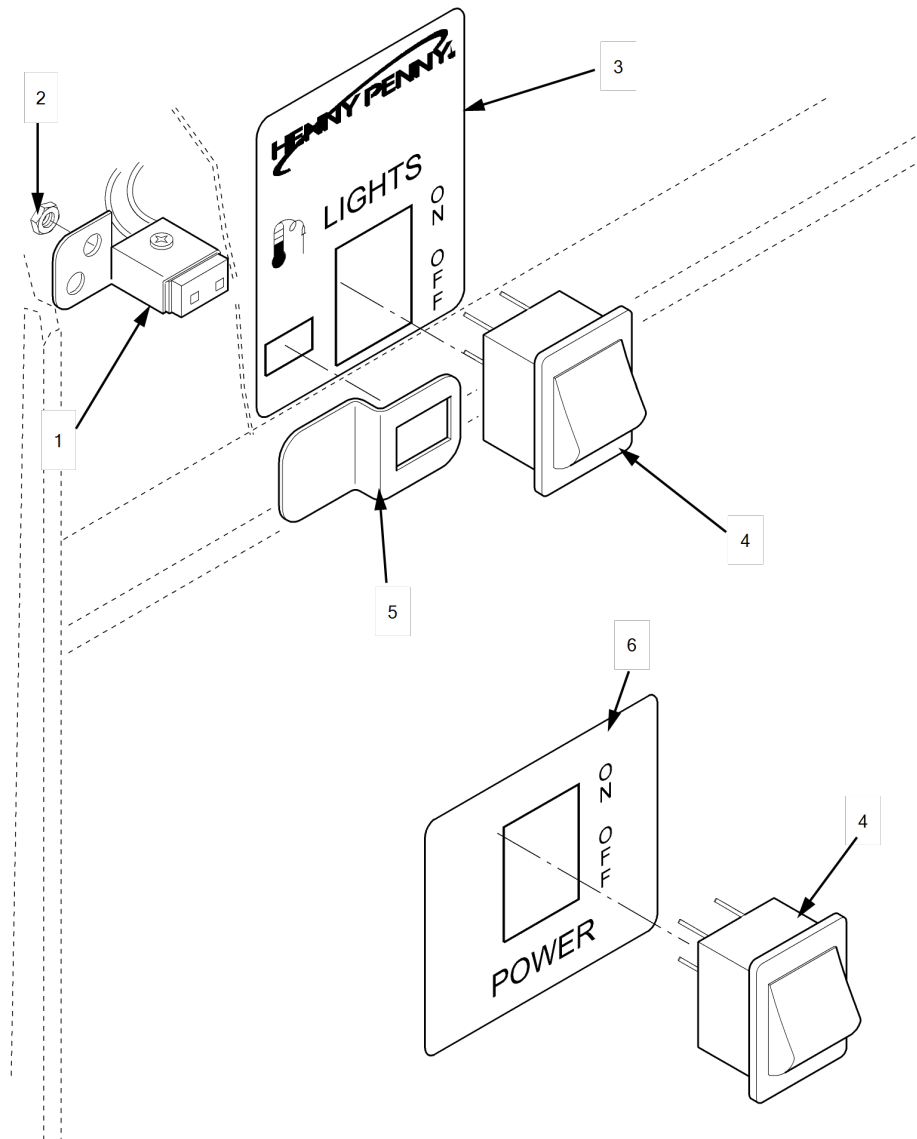

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
1	56380	Probe receptacle assembly	2	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			104	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">61512</a>	Lights with probe decal	1	
3	<a href="#">59305</a>	Lights without probe decal	1	
4	<a href="#">72277</a>	Power switch	3	A
5	<a href="#">56585</a>	Probe guard	2	
6	<a href="#">61739</a>	Power decal	1	
6	<a href="#">61753</a>	Power with probe decal (SN: CY074JA & below)	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 105 Covers, Doors, and Shelves

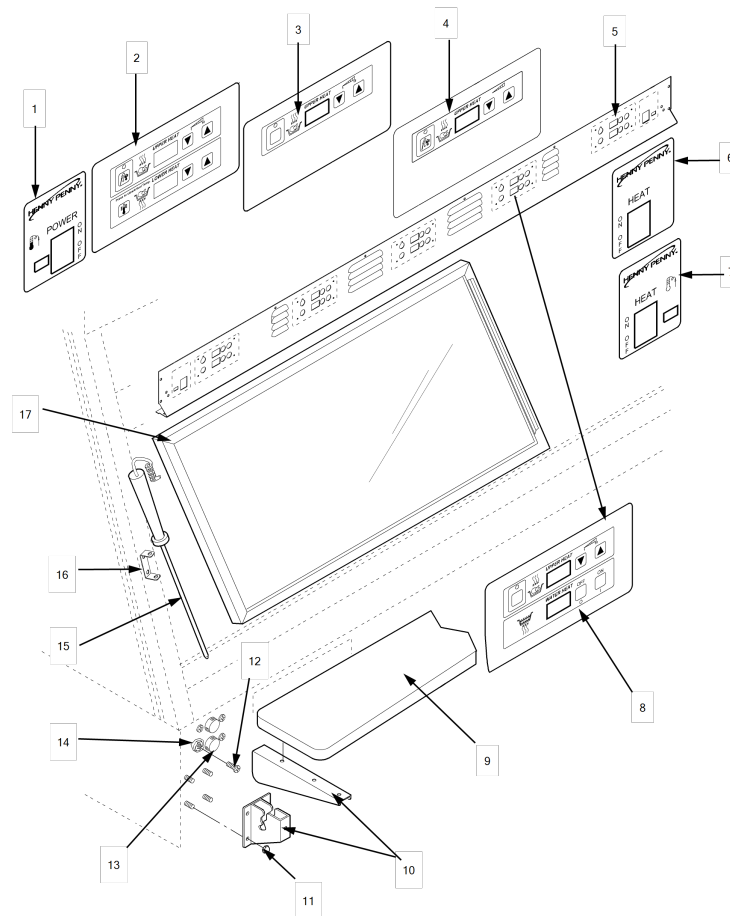

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
1	61753	Power with probe decal (SN: CY096JA & below)	1	
2	56349	Control decal, upper air	1	
3	59302	Control decal, radio w/o probe	1	
4	56347	Control decal, upper heat	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
5	<a href="#">64263</a>	Rear cover, 5 vat	1	
6	<a href="#">59306</a>	Heat supply w/o probe decal	1	
7	<a href="#">61513</a>	Heat supply with probe decal	1	
8	<a href="#">59304</a>	Control radio w/o probe decal	1	
9	<a href="#">38654</a>	Cutting board assembly, poly, 5 vat	1	
10	<a href="#">37230</a>	Cutting board bracket	2	
11	<a href="#">NS03-044</a>	Nut	8	
12	<a href="#">SC01-113</a>	Screw	4	
13	<a href="#">EF02-006</a>	Fuse holder, 15 amp (HA0702057 & below)	2	A
13	<a href="#">EF02-104</a>	Fuse holder, 20 amp, CE	2	A
14	<a href="#">NS02-005</a>	Nut	4	
15	<a href="#">59363</a>	Food probe	1	A
16	<a href="#">42895</a>	Food probe clip	2	
17	<a href="#">68049</a>	Sliding glass doors, 5 vat	2	
17	<a href="#">68110</a>	Sliding glass doors, 5 vat, 4 door	4	
17	<a href="#">22225</a>	-Door glide	4/door	
17	<a href="#">SC01-066</a>	-Screw, #6-32 X 3/8, CT, SS	4/door	
17		- Door tracks and hardware (See Door Tracks table below)		
18*	<a href="#">EF02-007</a>	Fuse, 15 Amp (HA0702057 & below)	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
18*	<a href="#">EF02-125</a>	Push button reset breaker (HA0702058 & above)	2	A
18*	<a href="#">EF02-105</a>	Fuse, 15 Amp, CE	2	
19*	<a href="#">58497</a>	Vat cover, 2 in, 2 vat	A/R	
19*	<a href="#">58498</a>	Vat cover, 3/8 in, 2 vat	A/R	
19*	<a href="#">42479</a>	Vat cover, 3/8 in, 3 vat	A/R	
19*	<a href="#">42477</a>	Vat cover, 2 in, 3 vat	A/R	
19*	<a href="#">58503</a>	Vat cover, flat, 2 vat	A/R	
19*	<a href="#">58504</a>	Vat cover, flat, 3 vat	A/R	
20*	<a href="#">54003</a>	Adjustable legs, optional	6	
21*	<a href="#">64177</a>	Splatter guard	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				

## Door Tracks

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
*	<a href="#">56595-003</a>	Door track, lower	1	
*	<a href="#">56236</a>	Door track, upper	1	
*	<a href="#">SC01-003</a>	Screw, #6-32 X 3/8, CT, flat head	12	
*	<a href="#">NS02-005</a>	Hex keps nuts, #6-32	6	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
*	<a href="#">NS03-063</a>	Hi-crown acorn nut, 6-32, SS	6	
* = Not Shown				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 105 Lower Heat

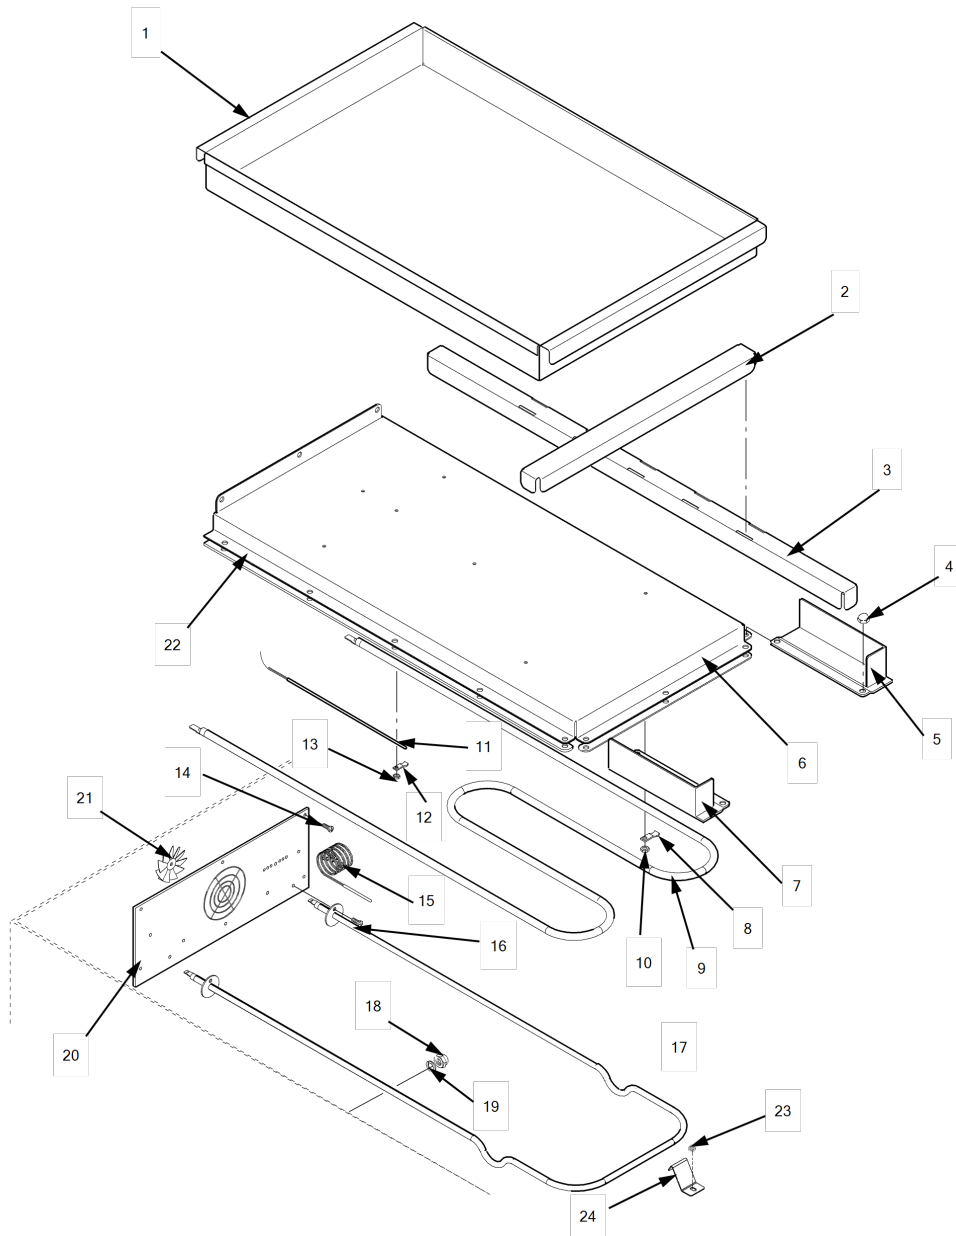



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
1	<a href="#">59315</a>	Water pan, small service only	1	
1	<a href="#">91963</a>	Water pan, standard	1	
2	<a href="#">37371</a>	Cross support pan, short	10	
3	<a href="#">37159</a>	Support pan, long	10	
3	<a href="#">14462</a>	Support pan and shelf kit (Use with <a href="#">14463</a> & <a href="#">14464</a> )	1	
4	<a href="#">NS03-002</a>	Acorn nut, #10-24	13	
5	<a href="#">63440</a>	Water pan locator, right (service only)	1	
5	<a href="#">91977</a>	Water pan locator, standard	2	
5	<a href="#">91978</a>	Water pan locator, cambo	A/R	
6	<a href="#">56862</a>	Water pan gasket	1	
7	<a href="#">63441</a>	Water pan locator, left (service only)	1	
8	<a href="#">56354</a>	Water heater clip	5	
9	<a href="#">56310-01</a>	Water pan heater, 230VAC, 400W (Under <a href="#">56414</a> )	1	B
9	<a href="#">56310-02</a>	Water pan heater, 208VAC, 400W (Under <a href="#">56414</a> )	1	B
10	<a href="#">NS02-005</a>	Nut	5	
11	<a href="#">26252</a>	Water pan probe, 6 in	1	
12	<a href="#">MS01-462</a>	Tube clamp	2	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
13	<a href="#">NS02-005</a>	Nut	2	
14	<a href="#">SC02-041</a>	Screw	12	
15	<a href="#">56166</a>	Probe, 3 in	1	A
15*	<a href="#">39693</a>	Probe clip	1	
15*	<a href="#">58566</a>	Probe plate	1	
16	<a href="#">SC02-041</a>	Screw	6	
17	<a href="#">56240-01</a>	Lower heater, 208 VAC, 650W	3	B
17	<a href="#">56240-02</a>	Lower heater, 240 VAC, 650W	3	B
18	<a href="#">NS03-023</a>	Acorn nut	6	
19	<a href="#">LW01-013</a>	Lockwasher	6	
20	<a href="#">16685</a>	Fan guard	2	
21	<a href="#">39974</a>	Fan blade	2	
22	<a href="#">56414</a>	Water pan heater support	1	
23	<a href="#">NS03-044</a>	Acorn nut, #10-24, SS	3	
24	<a href="#">66800</a>	Air heater base brace	3	
25*	<a href="#">14463</a>	Wire shelf and glides kit, 2 vat (use with <a href="#">14462</a> )	1	
25*	<a href="#">14464</a>	Wire shelf and glides kit, 3 vat (use with <a href="#">14462</a> )	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 105 Upper Control Panel

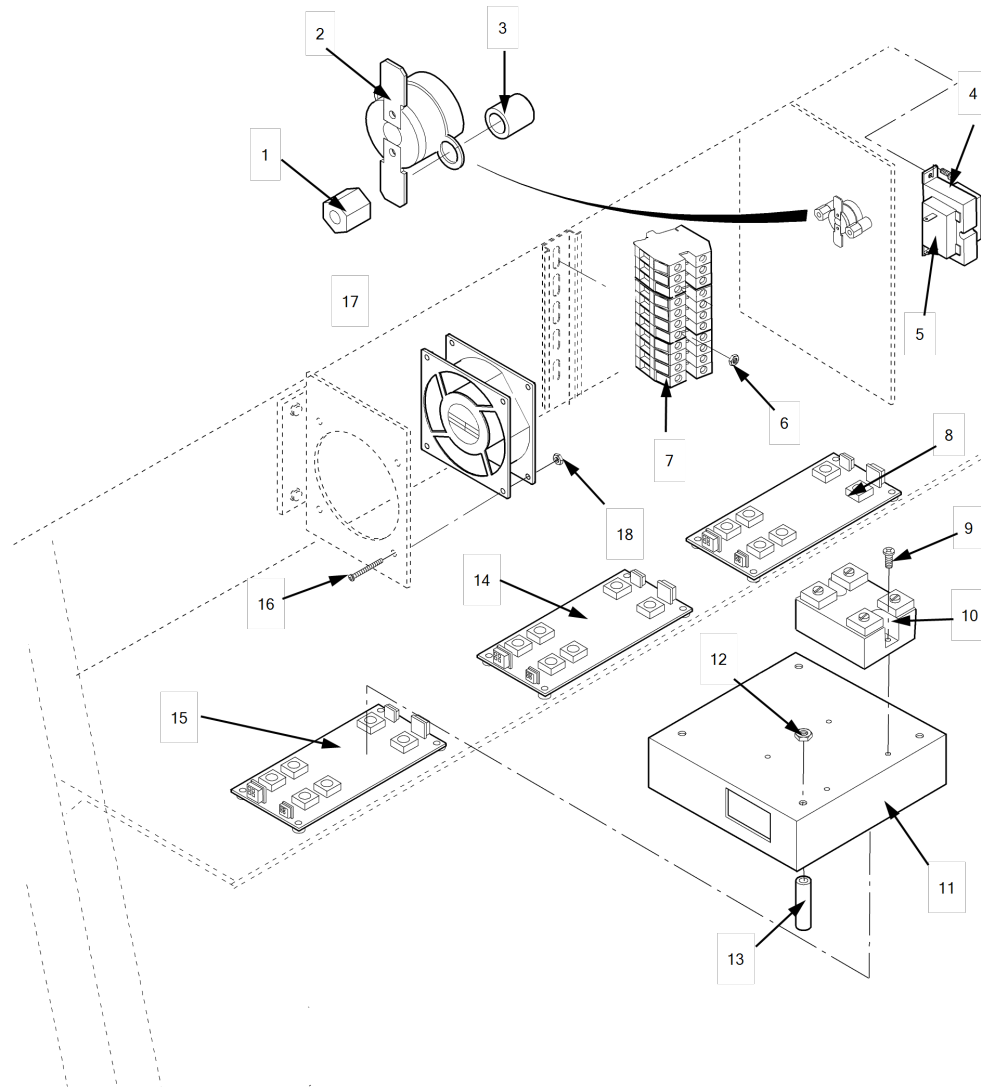

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
1	<a href="#">ME50-023</a>	Standoff	4	
2	<a href="#">58670</a>	High limit, 165° F	2	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
2	14257	High limit kit, manual reset to auto reset	A/R	A
3	ME50-011	Spacer	4	
4	SC02-041	Screw	2	
5	28979	Transformer, 208/240VAC	1	A
6	NS02-006	Nut	10	
7	56174	Terminal block assembly	5	
7	56175	Terminal block assembly, CE	5	
8	55101	Control PC board, radiant air/heat	1	B
8	63911	Control PC board, radiant air/heat, CE	1	B
9	SC04-001	Screw	14	
10	40645	Relay	7	A
11	64256	PC board cover	3	
12	NS02-005	Nut	12	
13	ME50-014	Spacer	12	
14	55102	Control PC board, radiant water-/heat	1	B
14	63912	Control PC board, radiant water-/heat, CE	1	B
15	55100	Control PC board, radiant heat	3	B
15	63910	Control PC board, radiant heat, CE	3	B




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
16	<a href="#">SC01-003</a>	Screw	8	
17	<a href="#">16688</a>	Cooling fan, 220 VAC	4	A
18	<a href="#">NS02-005</a>	Nut	8	
<p><b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b>  <b>* = Not Shown</b>  <b>A/R = As Required</b></p>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 105 Under Canopy and Glass

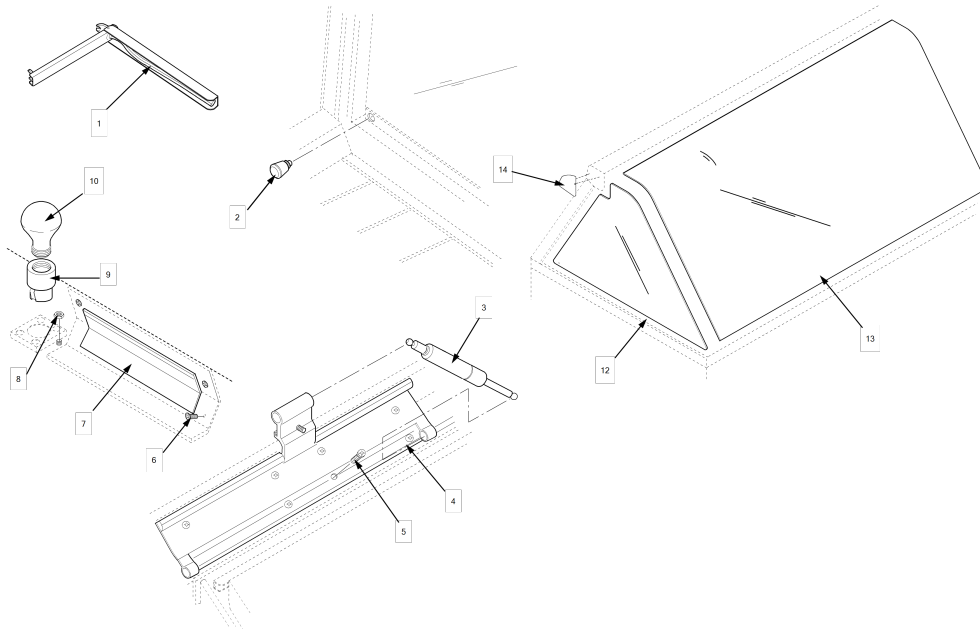

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
1	<a href="#">56878</a>	Gas ram installation tool	A/R	A
2	<a href="#">56883</a>	Side glass retainer, spring loaded	2	
3	<a href="#">56343-001</a>	Gas ram, 100N	Refer to Gas Ram selection chart	B
3	<a href="#">56343-002</a>	Gas ram, 200N		B
3	<a href="#">56343-003</a>	Gas ram, 300N		B
3	<a href="#">56343-004</a>	Gas ram, 400N		B
3	<a href="#">56343-005</a>	Gas ram, 500N		B
4	<a href="#">56345</a>	Lift element	3	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
5	<a href="#">SC03-004</a>	Screw	24	
6	<a href="#">SC02-041</a>	Screw	20	
7	<a href="#">14339</a>	Radiant heater kit, 208 VAC, 510W	5	A
7	<a href="#">14340</a>	Radiant heater kit, 230 VAC, 510W	5	A
7	<a href="#">14341</a>	Radiant heater kit, 240 VAC, 260W, CE	5	A
7	<a href="#">14342</a>	Radiant heater kit, 208 VAC, 260W, CE	5	A
8	<a href="#">NS02-006</a>	Nut	8	
9	<a href="#">39795</a>	Light socket, non-CE (August 2000 & after)	6	B
9	<a href="#">14295</a>	Light socket, non-CE (Before August 2000)	6	B
9	<a href="#">54041</a>	Light socket, CE	6	B
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	6	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	6	A
11*	<a href="#">56800</a>	Side glass insulator, CE	2	
12	N/A	Side glass, flat, clear	2	
12	N/A	Side glass, flat, mirrored, left	1	
12	N/A	Side glass, flat, mirrored, right	1	
12	N/A	Side glass, flat, low e, left	1	
12	N/A	Side glass, flat, low e, right	1	
12	N/A	Side glass, flat, mirrored, left	1	
12	<a href="#">56050-001</a>	Side glass, Henny Penny, profile, clear	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
12	<a href="#">56050-002</a>	Side glass, Henny Penny, profile, mirrored, left	1	
12	<a href="#">56050-003</a>	Side glass, Henny Penny, profile, mirrored, right	1	
12	<a href="#">56050-004</a>	Side glass, Henny Penny, profile, low e, left	1	
12	<a href="#">56050-005</a>	Side glass, Henny Penny, profile, low e, right	1	
12	<a href="#">56050-006</a>	Side glass, Henny Penny, profile, mirrored, antique white, left	1	
12	<a href="#">56050-007</a>	Side glass, Henny Penny, profile, mirrored, antique white, right	1	
12	<a href="#">56050-008</a>	Side glass, Henny Penny, profile, mirrored, shadow black, left	1	
12	<a href="#">56050-009</a>	Side glass, Henny Penny, profile, mirrored, shadow black, right	1	
12	<a href="#">56239-001</a>	Side glass, Tyler, advantage profile, clear	2	
12	<a href="#">56239-002</a>	Side glass, Tyler, advantage profile, mirrored, left	1	
12	<a href="#">56239-003</a>	Side glass, Tyler, advantage profile, mirrored, right	1	
12	<a href="#">56239-004</a>	Side glass, Tyler, advantage profile, low e, left	1	
12	<a href="#">56239-005</a>	Side glass, Tyler, advantage profile, low e, right	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
13	<a href="#">58607-002</a>	Henny Penny, curved profile, 3 vat, full serve	1	
13	<a href="#">58607-003</a>	Henny Penny, curved profile, 4 vat, full serve	1	
13	<a href="#">58607-004</a>	Henny Penny, curved profile, 5 vat, full serve	1	
13	<a href="#">58607-005</a>	Henny Penny, curved profile, 6 vat, full serve	1	
13	<a href="#">58607-006</a>	Henny Penny, curved profile, 7 vat, full serve (2 per unit)	2	
13	<a href="#">58607-011</a>	Henny Penny, curved profile, 3 vat, self serve	1	
13	<a href="#">58607-012</a>	Henny Penny, curved profile, 4 vat, self serve	1	
13	<a href="#">58607-013</a>	Henny Penny, curved profile, 5 vat, self serve	1	
13	<a href="#">58607-014</a>	Henny Penny, curved profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-015</a>	Henny Penny, curved profile, 7 vat, self serve (2 per unit)	2	
13	<a href="#">58607-047</a>	Tyler, advantage profile, 3 vat, full serve	1	
13	<a href="#">58607-048</a>	Tyler, advantage profile, 4 vat, full serve	1	
13	<a href="#">58607-049</a>	Tyler, advantage profile, 5 vat, full serve	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
13	<a href="#">58607-050</a>	Tyler, advantage profile, 6 vat, full serve (2 per unit)	2	
13	<a href="#">58607-051</a>	Tyler, advantage profile, 7 vat, full serve (2 per unit)	2	
13	N/A	Tyler, advantage profile, 2 vat, self serve, end, combo unit only	1	
13	<a href="#">58607-056</a>	Tyler, advantage profile, 3 vat, self serve	1	
13	<a href="#">58607-057</a>	Tyler, advantage profile, 4 vat, self serve	1	
13	<a href="#">58607-058</a>	Tyler, advantage profile, 5 vat, self serve	1	
13	<a href="#">58607-059</a>	Tyler, advantage profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-060</a>	Tyler, advantage profile, 7 vat, self serve (2 per unit)	2	
14	<a href="#">56231</a>	End cap	2	
15*	N/A	Divider glass, Henny Penny profile, combo units	1	
15*	N/A	Divider glass, Tyler, advantage profile, combo units	1	
15*	N/A	Divider glass, flat profile, combo units	1	
15*	N/A	Divider glass bracket	1	
16*	<a href="#">154490</a>	Sneeze guard kit	1	
16*	<a href="#">63420</a>	-Sneeze guard assembly	1	
17*	14874	Grease shield kit	1	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
18*	<a href="#">MS01-366</a>	Glass seal	A/R	

Recommended Parts: A = Truck Stock; B = Dist. Stock  
 \* = Not Shown  
 A/R = As Required

### Front Panel Support Matrix

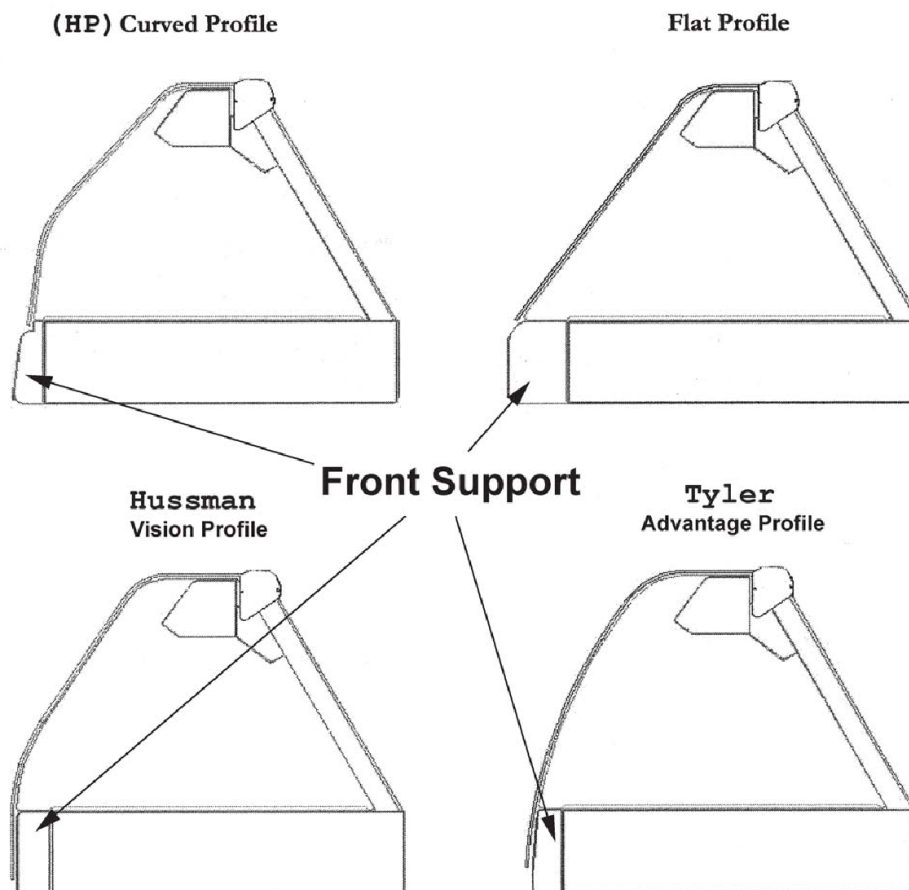



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Number of Vats	Henny Penny Profile	Hussman Profile	Flat Profile	Tyler Profile
3	<a href="#">58528</a>	N/A	N/A	<a href="#">58537</a>
4	<a href="#">58527</a>	N/A	N/A	<a href="#">58536</a>
5	<a href="#">58384</a>	N/A	N/A	58535
6	<a href="#">58526</a>	N/A	N/A	58534
7	<a href="#">58387</a>	N/A	N/A	<a href="#">58533</a>

### Gas Ram Identification Chart

Refer to Columns 1 and 2 in the chart below to identify the correct canopy glass assembly (s) on your unit. Then move to the right to Column 3 to identify the correct gas ram configuration -- the quantity and strength of the gas ram(s) needed -- for your unit. Gas ram configuration is as viewed from the customer side.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-001</a>	HP	Curved	2	Full			4/200N
<a href="#">58607-002</a>	HP	Curved	3	Full			4/200N
<a href="#">58607-003</a>	HP	Curved	4	Full			4/400N
<a href="#">58607-004</a>	HP	Curved	5	Full			6/300N
<a href="#">58607-005</a>	HP	Curved	6	Full			4/300N
<a href="#">58607-006</a>	HP	Curved	7	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-007</a>	HP	Curved	2	Self	END	YES	1/100N
<a href="#">58607-008</a>	HP	Curved	3	Self	END	YES	2/100N
<a href="#">58607-009</a>	HP	Curved	2	Self	CTR	YES	1/100N
<a href="#">58607-010</a>	HP	Curved	3	Self	CTR	YES	1/100N
<a href="#">58607-011</a>	HP	Curved	3	Self			1/200N
<a href="#">58607-012</a>	HP	Curved	4	Self			2/100N
<a href="#">58607-013</a>	HP	Curved	5	Self			3/100N
<a href="#">58607-014</a>	HP	Curved	6	Self			8/100N
<a href="#">58607-015</a>	HP	Curved	7	Self			4/200N
<a href="#">58607-016</a>	Hussman	Vision	2	Full			4/300N
<a href="#">58607-017</a>	Hussman	Vision	3	Full			4/400N
<a href="#">58607-018</a>	Hussman	Vision	4	Full			6/400N
<a href="#">58607-019</a>	Hussman	Vision	5	Full			1/500N, 1/400N 2/500N, 1/400N 1/500N
<a href="#">58607-020</a>	Hussman	Vision	6	Full			8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-021</a>	Hussman	Vision	7	Full			12/300N
<a href="#">58607-022</a>	Hussman	Vision	2	Self	END	YES	1/100N
<a href="#">58607-023</a>	Hussman	Vision	3	Self	END	YES	2/100N
<a href="#">58607-024</a>	Hussman	Vision	2	Self	CTR	YES	1/100N
<a href="#">58607-025</a>	Hussman	Vision	3	Self	CTR	YES	2/100N
<a href="#">58607-026</a>	Hussman	Vision	3	Self			2/100N
<a href="#">58607-027</a>	Hussman	Vision	4	Self			2/100N
<a href="#">58607-028</a>	Hussman	Vision	5	Self			2/300N
<a href="#">58607-029</a>	Hussman	Vision	6	Self			8/100N
<a href="#">58607-030</a>	Hussman	Vision	7	Self			4/100N
<a href="#">58607-031</a>		Flat	2	Full			4/200N
<a href="#">58607-032</a>		Flat	3	Full			4/300N
<a href="#">58607-033</a>		Flat	4	Full			4/300N, 2/200N
<a href="#">58607-034</a>		Flat	5	Full			2/400N, 4/300N
<a href="#">58607-035</a>		Flat	6	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-036</a>		Flat	7	Full			8/400N
<a href="#">58607-037</a>		Flat	2	Self	END	YES	1/100N
<a href="#">58607-038</a>		Flat	3	Self	END	YES	2/100N
<a href="#">58607-039</a>		Flat	2	Self	CTR	YES	1/100N
<a href="#">58607-040</a>		Flat	3	Self	CTR	YES	2/100N
<a href="#">58607-041</a>		Flat	3	Self			2/100N
<a href="#">58607-042</a>		Flat	4	Self			2/100N
<a href="#">58607-043</a>		Flat	5	Self			2/200N
<a href="#">58607-044</a>		Flat	6	Self			8/100N
<a href="#">58607-045</a>		Flat	7	Self			4/100N
<a href="#">58607-046</a>	Tyler	Advantage	2	Full			1/300N, 2/200N, 1/300N
<a href="#">58607-047</a>	Tyler	Advantage	3	Full			2/500N, 1/400N, 1/500N
<a href="#">58607-048</a>	Tyler	Advantage	4	Full			2/400N, 1/400N, 1/300N, 2/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-049</a>	Tyler	Advantage	5	Full			2/500N, 2/400N, 2/500N
<a href="#">58607-050</a>	Tyler	Advantage	6	Full			8/400N
<a href="#">58607-051</a>	Tyler	Advantage	7	Full			8/300N, 4/200N
<a href="#">58607-052</a>	Tyler	Advantage	2	Self	END	YES	1/200N
<a href="#">58607-053</a>	Tyler	Advantage	3	Self	END	YES	2/100N
<a href="#">58607-054</a>	Tyler	Advantage	2	Self	CTR	YES	1/200N
<a href="#">58607-055</a>	Tyler	Advantage	3	Self	CTR	YES	2/100N
<a href="#">58607-056</a>	Tyler	Advantage	3	Self			2/100N
<a href="#">58607-057</a>	Tyler	Advantage	4	Self			2/200N
<a href="#">58607-058</a>	Tyler	Advantage	5	Self			2/200N
<a href="#">58607-059</a>	Tyler	Advantage	6	Self			4/200N
<a href="#">58607-060</a>	Tyler	Advantage	7	Self			4/200N
<a href="#">58607-061</a>	Hussman	Vision	3	Full	Non-glare		4/400N
<a href="#">58607-062</a>	Hussman	Vision	5	Full	Non-glare		1/500N, 1/400N, 2/500N,




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
							1/400N, 1/500N
58607-063	Hussman	Vision	7	Full	Non-glare		12/300N
58607-064		Flat	3		Non-glare		4/400N
58607-065		Flat	5		Non-glare		4/400N, 2/300N
58607-066		Flat	7		Non-glare		8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 105 Lower Control Panel

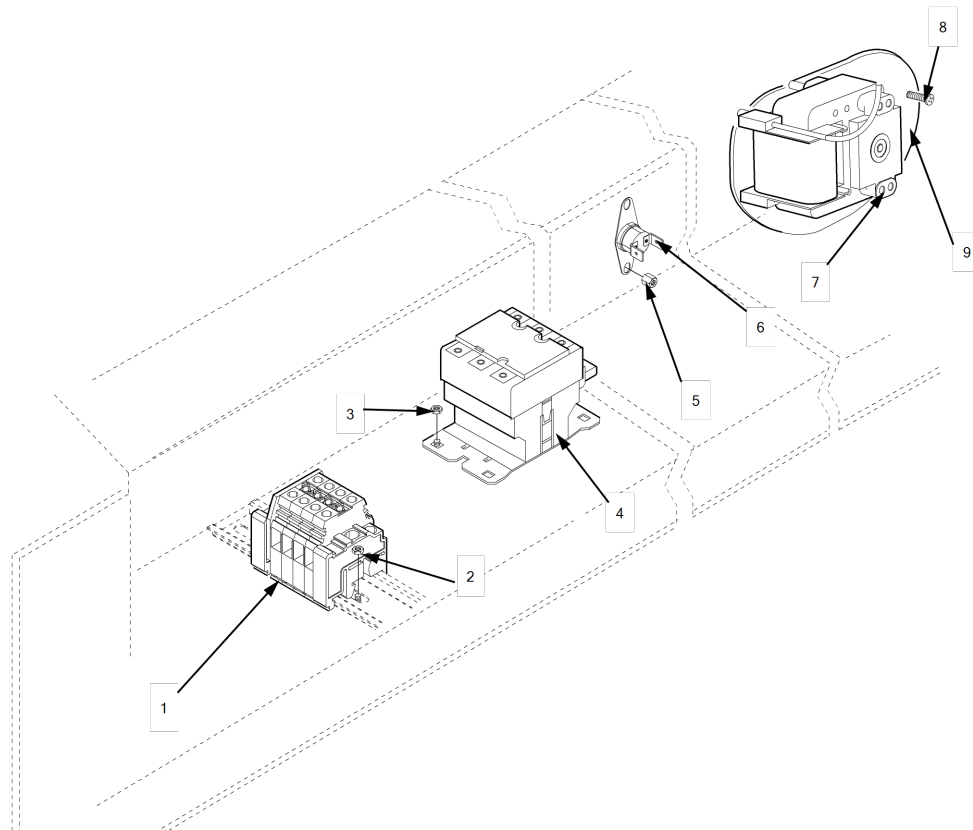

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
1	<a href="#">49367</a>	Terminal block assembly	1	
1	<a href="#">49641</a>	Terminal block assembly, CE	1	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">NS02-006</a>	Nut	2	
3*	<a href="#">51062</a>	EMC filter board, CE	1	A
4	<a href="#">19405</a>	Contactor, 208/240 VAC	1	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
5	<a href="#">ME50-023</a>	Standoff	4	
6	<a href="#">56854</a>	High limit with spacer, 225° F, manual reset	2	A
7	<a href="#">80821</a>	Blower motor, 50/60 HZ	2	A
8	<a href="#">SC02-041</a>	Screw	6	
9	<a href="#">37157</a>	Blower plate	A/R	
<p><b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b>  <b>* = Not Shown</b>  <b>A/R = As Required</b></p>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 105 Upper Controls and Decals

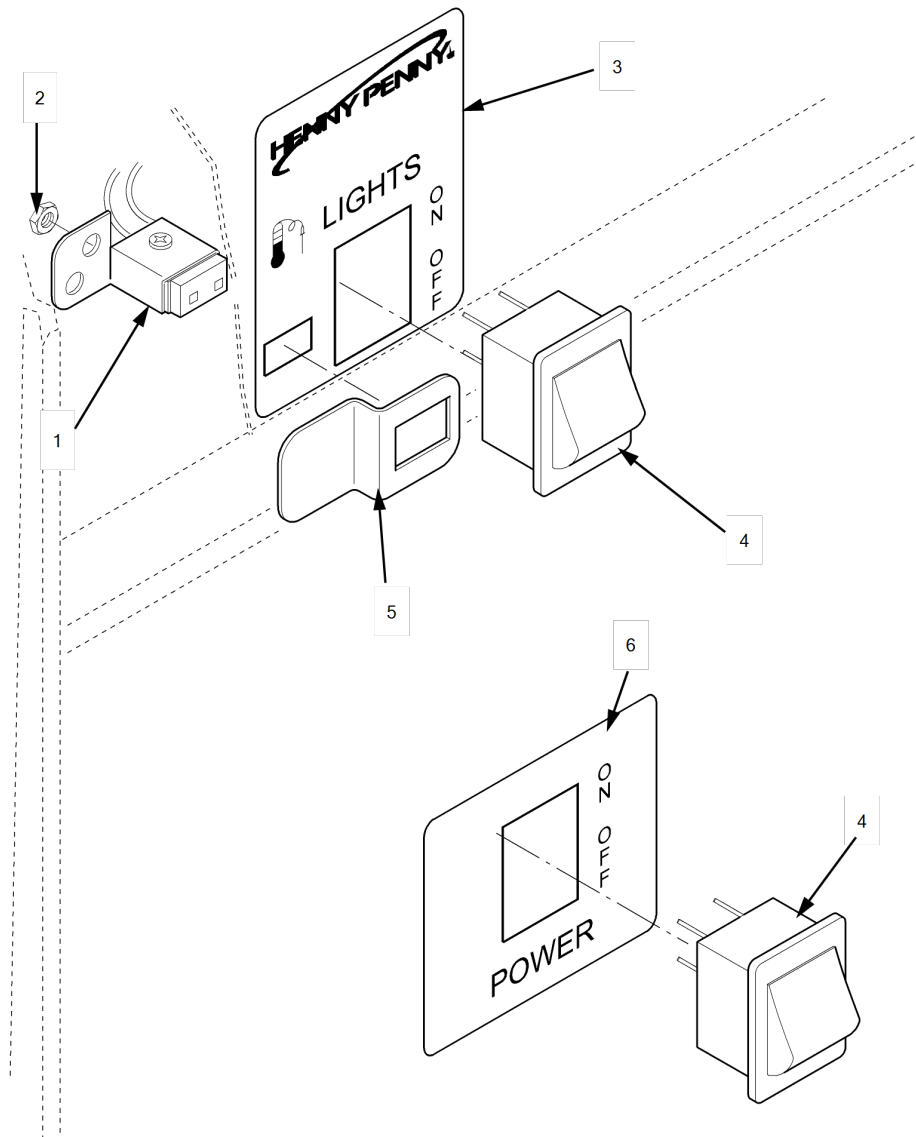

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
1	56380	Probe receptacle assembly	2	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			105	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">61512</a>	Lights with probe decal	1	
3	<a href="#">59305</a>	Lights without probe decal	1	
4	<a href="#">72277</a>	Power switch	3	A
5	<a href="#">56585</a>	Probe guard	2	
6	<a href="#">61739</a>	Power decal	1	
6	<a href="#">61753</a>	Power with probe decal (SN: CY096JA & below)	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 106 Covers, Doors, and Shelves

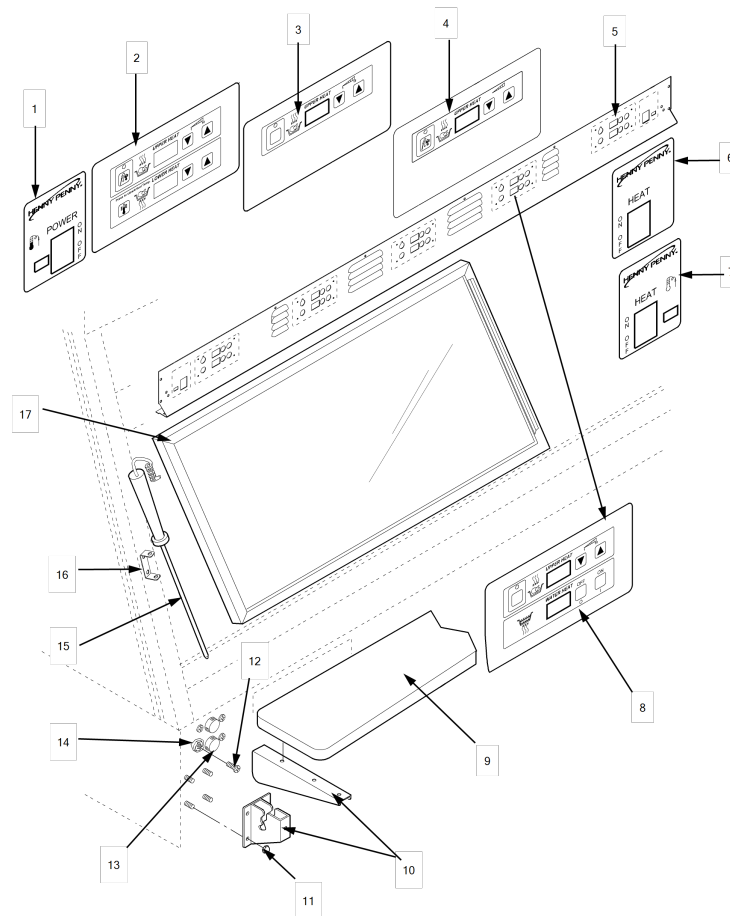

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
1	61753	Power with probe decal (SN: CY106JA & below)	1	
2	56349	Control decal, upper air	1	
3	59302	Control decal, radio w/o probe	1	
4	56347	Control decal, upper heat	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
5	64264	Rear cover, 6 vat	1	
6	<a href="#">59306</a>	Heat supply w/o probe decal	1	
7	<a href="#">61513</a>	Heat supply with probe decal	1	
8	<a href="#">59304</a>	Control radio w/o probe decal	2	
9	N/A	Cutting board, wood, 6 vat	1	
9	<a href="#">58606</a>	Cutting board assembly, poly, 6 vat	1	
10	<a href="#">37230</a>	Cutting board bracket	2	
11	<a href="#">NS03-044</a>	Nut	8	
12	<a href="#">SC01-113</a>	Screw	4	
13	<a href="#">EF02-006</a>	Fuse holder, 15 amp (HA0703035 & below)	2	A
13	<a href="#">EF02-104</a>	Fuse holder, 20 amp, CE	2	A
14	<a href="#">NS02-005</a>	Nut	4	
15	<a href="#">59363</a>	Food probe	1	A
16	<a href="#">42895</a>	Food probe clip	2	
17	<a href="#">68045</a>	Sliding glass doors, 3 & 6 vat	4	
17	<a href="#">22225</a>	-Door glide	4/door	
17	<a href="#">SC01-066</a>	-Screw, #6-32 X 3/8, CT, SS	4/door	
17		- Door tracks and hardware (See Door Tracks table below)		
18*	<a href="#">EF02-007</a>	Fuse, 15 Amp (HA0703035 & below)	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
18*	<a href="#">EF02-125</a>	Push button reset breaker (HA0703036 & above)	2	A
18*	<a href="#">EF02-105</a>	Fuse, 15 Amp, CE	2	
19*	<a href="#">58497</a>	Vat cover, 2 in, 2 vat	A/R	
19*	<a href="#">58498</a>	Vat cover, 3/8 in, 2 vat	A/R	
19*	<a href="#">42479</a>	Vat cover, 3/8 in, 3 vat	A/R	
19*	<a href="#">42477</a>	Vat cover, 2 in, 3 vat	A/R	
19*	<a href="#">58503</a>	Vat cover, flat, 2 vat	A/R	
19*	<a href="#">58504</a>	Vat cover, flat, 3 vat	A/R	
20*	<a href="#">54003</a>	Adjustable legs, optional	6	
21*	<a href="#">64178</a>	Splatter guard	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				

## Door Tracks

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
*	<a href="#">56595-004</a>	Door track, lower	1	
*	<a href="#">56235</a>	Door track, upper	1	
*	<a href="#">SC01-003</a>	Screw, #6-32 X 3/8, CT, flat head	14	
*	<a href="#">NS02-005</a>	Hex keps nuts, #6-32	7	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
*	<a href="#">NS03-063</a>	Hi-crown acorn nut, 6-32, SS	7	
* = Not Shown				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 106 Lower Heat

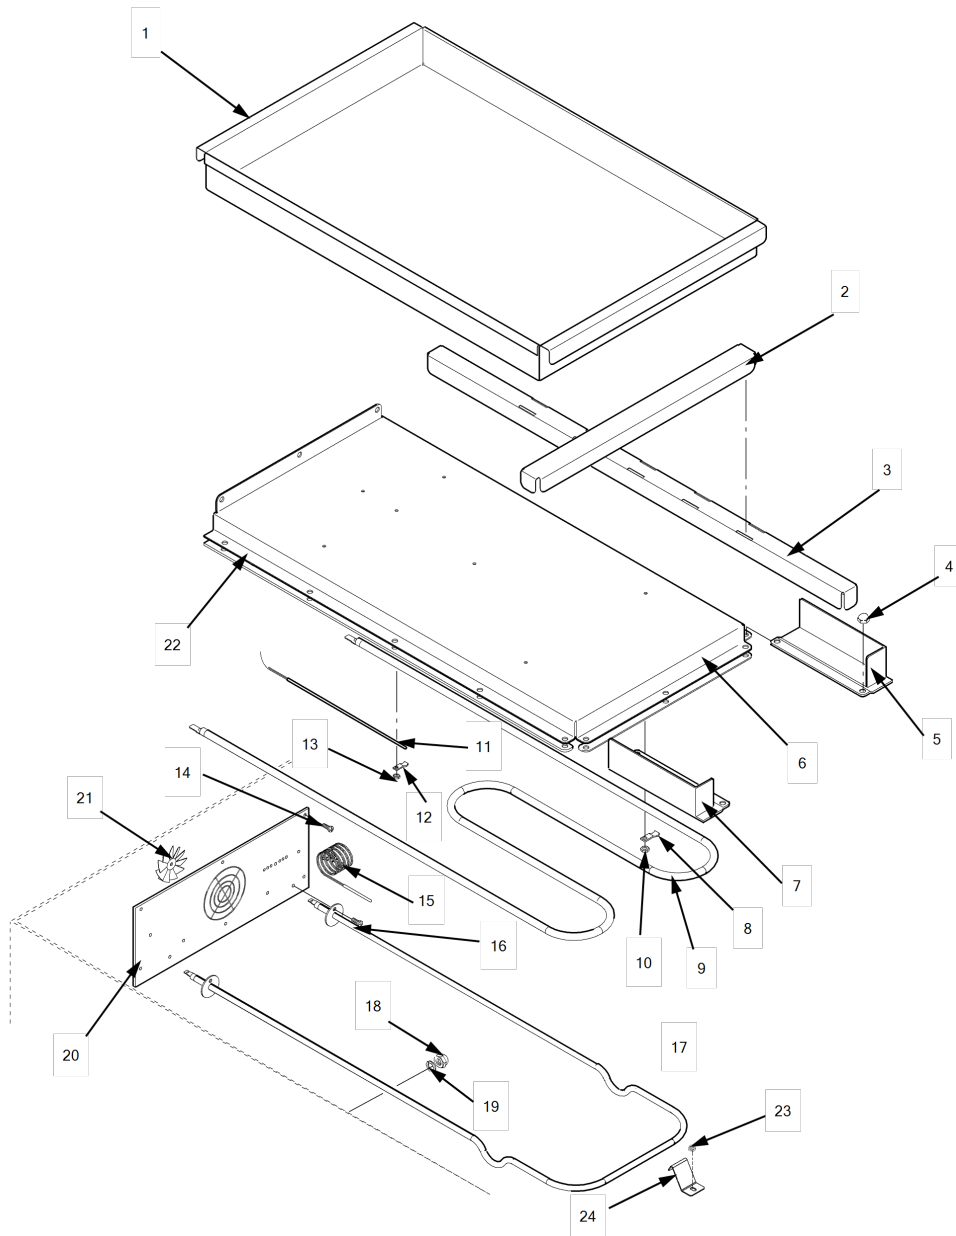



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
1	<a href="#">59315</a>	Water pan, small service only	2	
1	<a href="#">91963</a>	Water pan, standard	2	
2	<a href="#">37371</a>	Cross support pan, short	12	
3	<a href="#">37159</a>	Support pan, long	12	
3	<a href="#">14462</a>	Support pan and shelf kit (Use with <a href="#">14463</a> & <a href="#">14464</a> )	1	
4	<a href="#">NS03-002</a>	Acorn nut, #10-24	13	
5	<a href="#">63440</a>	Water pan locator, right (service only)	1	
5	<a href="#">91977</a>	Water pan locator, standard	4	
5	<a href="#">91978</a>	Water pan locator, cambo	A/R	
6	<a href="#">56862</a>	Water pan gasket	1	
7	<a href="#">63441</a>	Water pan locator, left (service only)	1	
8	<a href="#">56354</a>	Water heater clip	5	
9	<a href="#">56310-01</a>	Water pan heater, 230VAC, 400W (Under <a href="#">56414</a> )	1	B
9	<a href="#">56310-02</a>	Water pan heater, 208VAC, 400W (Under <a href="#">56414</a> )	1	B
10	<a href="#">NS02-005</a>	Nut	5	
11	<a href="#">26252</a>	Water pan probe, 6 in	1	
12	<a href="#">MS01-462</a>	Tube clamp	2	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
13	<a href="#">NS02-005</a>	Nut	2	
14	<a href="#">SC02-041</a>	Screw	18	
15	<a href="#">56166</a>	Probe, 3 in	1	A
15*	<a href="#">39693</a>	Probe clip	1	
15*	<a href="#">58566</a>	Probe plate	1	
16	<a href="#">SC02-041</a>	Screw	6	
17	<a href="#">56240-01</a>	Lower heater, 208 VAC, 650W	3	B
17	<a href="#">56240-02</a>	Lower heater, 240 VAC, 650W	3	B
18	<a href="#">NS03-023</a>	Acorn nut	6	
19	<a href="#">LW01-013</a>	Lockwasher	6	
20	<a href="#">16685</a>	Fan guard	3	
21	<a href="#">39974</a>	Fan blade	3	
22	<a href="#">56414</a>	Water pan heater support	1	
23	<a href="#">NS03-044</a>	Acorn nut, #10-24, SS	3	
24	<a href="#">66800</a>	Air heater base brace	3	
25*	<a href="#">14463</a>	Wire shelf and glides kit, 2 vat (use with <a href="#">14462</a> )	1	
25*	<a href="#">14464</a>	Wire shelf and glides kit, 3 vat (use with <a href="#">14462</a> )	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 106 Upper Control Panel

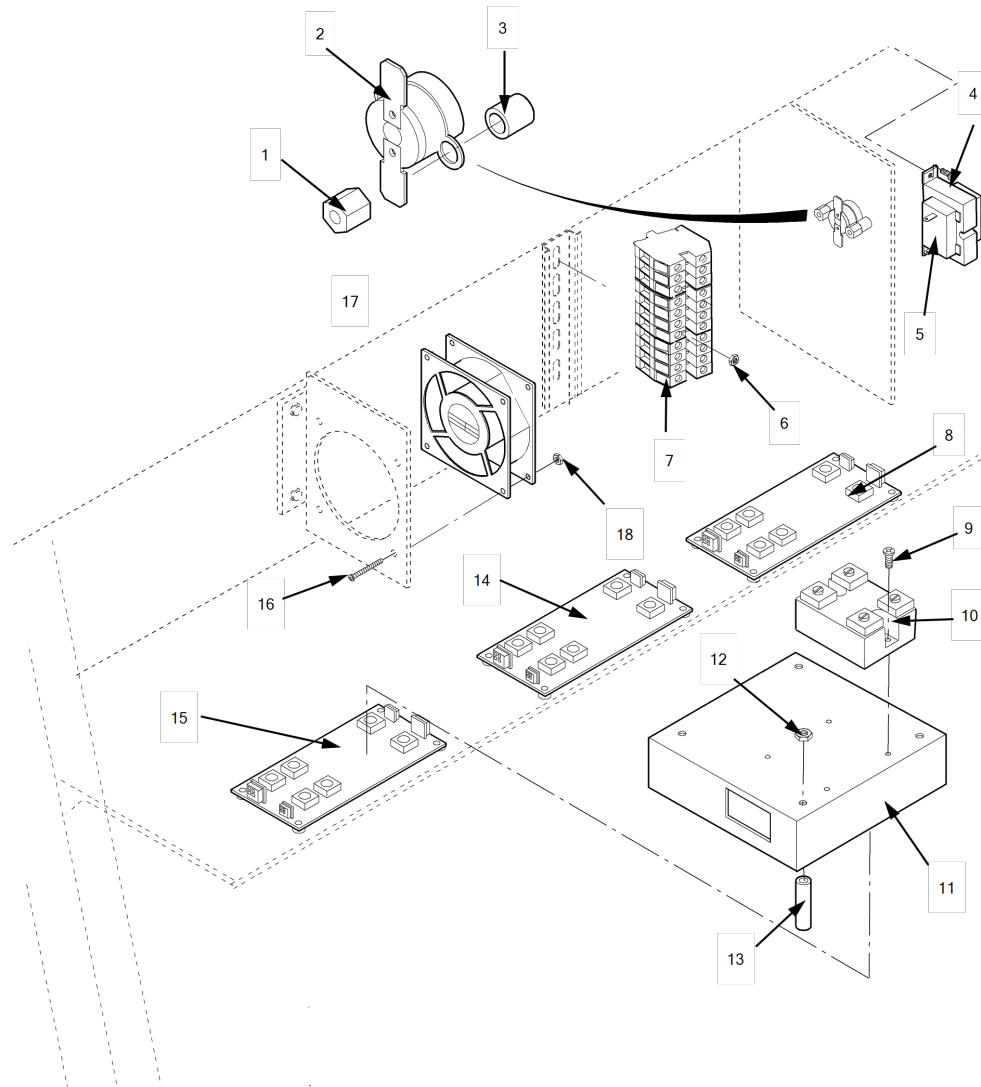

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
1	<a href="#">ME50-023</a>	Standoff	4	
2	<a href="#">58670</a>	High limit, 165° F	2	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
2	14257	High limit kit, manual reset to auto reset	A/R	A
3	ME50-011	Spacer	4	
4	SC02-041	Screw	2	
5	28979	Transformer, 208/240VAC	1	A
6	NS02-006	Nut	12	
7	56174	Terminal block assembly	6	
7	56175	Terminal block assembly, CE	6	
8	55101	Control PC board, radiant air/heat	1	B
8	63911	Control PC board, radiant air/heat, CE	1	B
9	SC04-001	Screw	20	
10	40645	Relay	10	A
11	64256	PC board cover	3	
12	NS02-005	Nut	12	
13	ME50-014	Spacer	12	
14	55102	Control PC board, radiant water-/heat	2	B
14	63912	Control PC board, radiant water-/heat, CE	2	B
15	55100	Control PC board, radiant heat	3	B
15	63910	Control PC board, radiant heat, CE	3	B




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
16	<a href="#">SC01-003</a>	Screw	8	
17	<a href="#">16688</a>	Cooling fan, 220 VAC	4	A
18	<a href="#">NS02-005</a>	Nut	8	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 106 Under Canopy and Glass

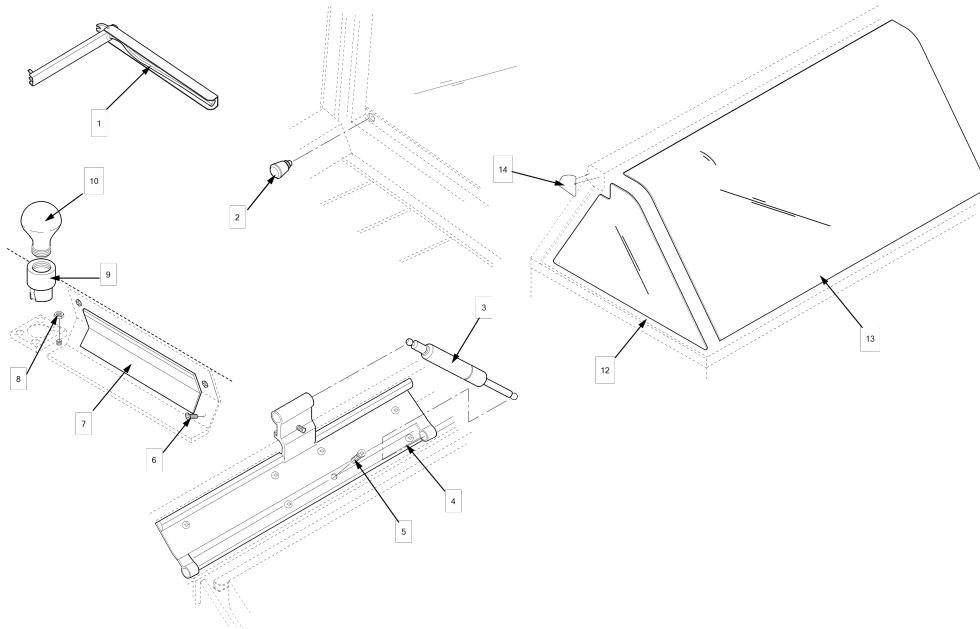

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
1	<a href="#">56878</a>	Gas ram installation tool	A/R	A
2	<a href="#">56883</a>	Side glass retainer, spring loaded	2	
3	<a href="#">56343-001</a>	Gas ram, 100N	Refer to Gas Ram selection chart	B
3	<a href="#">56343-002</a>	Gas ram, 200N		B
3	<a href="#">56343-003</a>	Gas ram, 300N		B
3	<a href="#">56343-004</a>	Gas ram, 400N		B
3	<a href="#">56343-005</a>	Gas ram, 500N		B
4	<a href="#">56345</a>	Lift element	3	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
5	<a href="#">SC03-004</a>	Screw	24	
6	<a href="#">SC02-041</a>	Screw	24	
7	<a href="#">14339</a>	Radiant heater kit, 208 VAC, 510W	6	A
7	<a href="#">14340</a>	Radiant heater kit, 230 VAC, 510W	6	A
7	<a href="#">14341</a>	Radiant heater kit, 240 VAC, 260W, CE	6	A
7	<a href="#">14342</a>	Radiant heater kit, 208 VAC, 260W, CE	6	A
8	<a href="#">NS02-006</a>	Nut	10	
9	<a href="#">39795</a>	Light socket, non-CE (August 2000 & after)	7	B
9	<a href="#">14295</a>	Light socket, non-CE (Before August 2000)	7	B
9	<a href="#">54041</a>	Light socket, CE	7	B
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	7	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	7	A
11*	<a href="#">56800</a>	Side glass insulator, CE	2	
12	N/A	Side glass, flat, clear	2	
12	N/A	Side glass, flat, mirrored, left	1	
12	N/A	Side glass, flat, mirrored, right	1	
12	N/A	Side glass, flat, low e, left	1	
12	N/A	Side glass, flat, low e, right	1	
12	N/A	Side glass, flat, mirrored, left	1	
12	<a href="#">56050-001</a>	Side glass, Henny Penny, profile, clear	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
12	<a href="#">56050-002</a>	Side glass, Henny Penny, profile, mirrored, left	1	
12	<a href="#">56050-003</a>	Side glass, Henny Penny, profile, mirrored, right	1	
12	<a href="#">56050-004</a>	Side glass, Henny Penny, profile, low e, left	1	
12	<a href="#">56050-005</a>	Side glass, Henny Penny, profile, low e, right	1	
12	<a href="#">56050-006</a>	Side glass, Henny Penny, profile, mirrored, antique white, left	1	
12	<a href="#">56050-007</a>	Side glass, Henny Penny, profile, mirrored, antique white, right	1	
12	<a href="#">56050-008</a>	Side glass, Henny Penny, profile, mirrored, shadow black, left	1	
12	<a href="#">56050-009</a>	Side glass, Henny Penny, profile, mirrored, shadow black, right	1	
12	<a href="#">56239-001</a>	Side glass, Tyler, advantage profile, clear	2	
12	<a href="#">56239-002</a>	Side glass, Tyler, advantage profile, mirrored, left	1	
12	<a href="#">56239-003</a>	Side glass, Tyler, advantage profile, mirrored, right	1	
12	<a href="#">56239-004</a>	Side glass, Tyler, advantage profile, low e, left	1	
12	<a href="#">56239-005</a>	Side glass, Tyler, advantage profile, low e, right	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
13	<a href="#">58607-002</a>	Henny Penny, curved profile, 3 vat, full serve	1	
13	<a href="#">58607-003</a>	Henny Penny, curved profile, 4 vat, full serve	1	
13	<a href="#">58607-004</a>	Henny Penny, curved profile, 5 vat, full serve	1	
13	<a href="#">58607-005</a>	Henny Penny, curved profile, 6 vat, full serve	1	
13	<a href="#">58607-006</a>	Henny Penny, curved profile, 7 vat, full serve (2 per unit)	2	
13	<a href="#">58607-011</a>	Henny Penny, curved profile, 3 vat, self serve	1	
13	<a href="#">58607-012</a>	Henny Penny, curved profile, 4 vat, self serve	1	
13	<a href="#">58607-013</a>	Henny Penny, curved profile, 5 vat, self serve	1	
13	<a href="#">58607-014</a>	Henny Penny, curved profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-015</a>	Henny Penny, curved profile, 7 vat, self serve (2 per unit)	2	
13	<a href="#">58607-047</a>	Tyler, advantage profile, 3 vat, full serve	1	
13	<a href="#">58607-048</a>	Tyler, advantage profile, 4 vat, full serve	1	
13	<a href="#">58607-049</a>	Tyler, advantage profile, 5 vat, full serve	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
13	<a href="#">58607-050</a>	Tyler, advantage profile, 6 vat, full serve (2 per unit)	2	
13	<a href="#">58607-051</a>	Tyler, advantage profile, 7 vat, full serve (2 per unit)	2	
13	N/A	Tyler, advantage profile, 2 vat, self serve, end, combo unit only	1	
13	<a href="#">58607-056</a>	Tyler, advantage profile, 3 vat, self serve	1	
13	<a href="#">58607-057</a>	Tyler, advantage profile, 4 vat, self serve	1	
13	<a href="#">58607-058</a>	Tyler, advantage profile, 5 vat, self serve	1	
13	<a href="#">58607-059</a>	Tyler, advantage profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-060</a>	Tyler, advantage profile, 7 vat, self serve (2 per unit)	2	
14	<a href="#">56231</a>	End cap	2	
15*	N/A	Divider glass, Henny Penny profile, combo units	1	
15*	N/A	Divider glass, Tyler, advantage profile, combo units	1	
15*	N/A	Divider glass, flat profile, combo units	1	
15*	N/A	Divider glass bracket	1	
16*	154491	Sneeze guard kit	1	
16*	21093	-Sneeze guard assembly	1	
17*	14875	Grease shield kit	1	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
18*	<a href="#">MS01-366</a>	Glass seal	A/R	

Recommended Parts: A = Truck Stock; B = Dist. Stock  
 \* = Not Shown  
 A/R = As Required

### Front Panel Support Matrix

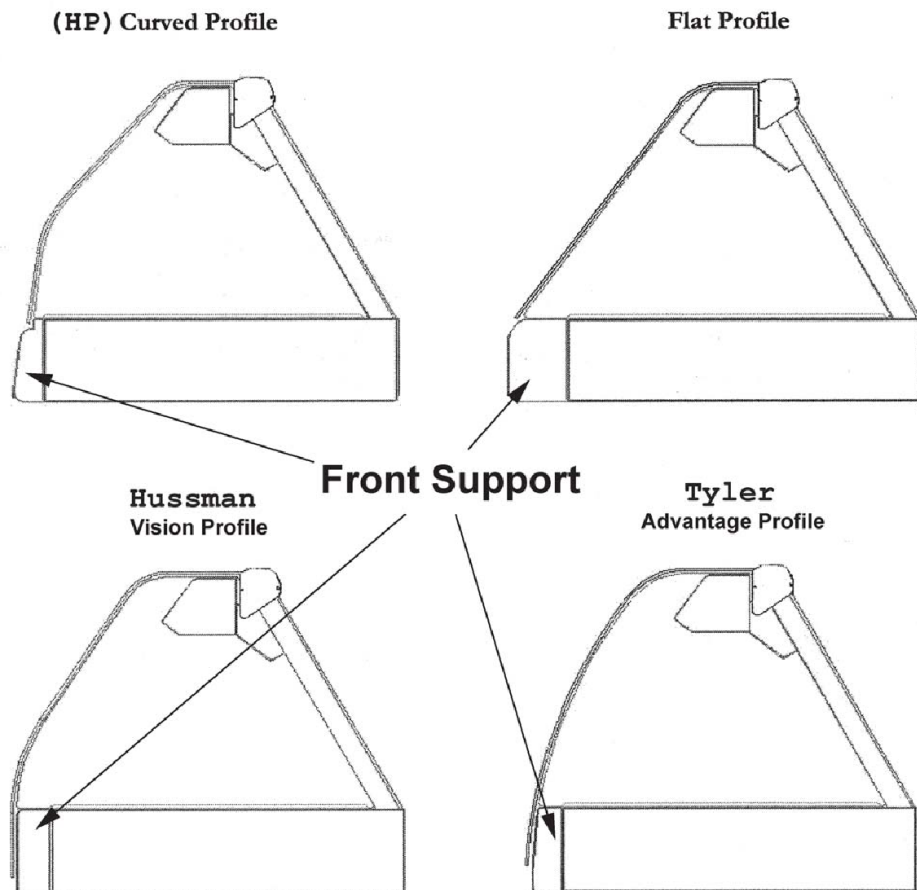



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Number of Vats	Henny Penny Profile	Hussman Profile	Flat Profile	Tyler Profile
3	<a href="#">58528</a>	N/A	N/A	<a href="#">58537</a>
4	<a href="#">58527</a>	N/A	N/A	<a href="#">58536</a>
5	<a href="#">58384</a>	N/A	N/A	58535
6	<a href="#">58526</a>	N/A	N/A	58534
7	<a href="#">58387</a>	N/A	N/A	<a href="#">58533</a>

### Gas Ram Identification Chart

Refer to Columns 1 and 2 in the chart below to identify the correct canopy glass assembly (s) on your unit. Then move to the right to Column 3 to identify the correct gas ram configuration -- the quantity and strength of the gas ram(s) needed -- for your unit. Gas ram configuration is as viewed from the customer side.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-001</a>	HP	Curved	2	Full			4/200N
<a href="#">58607-002</a>	HP	Curved	3	Full			4/200N
<a href="#">58607-003</a>	HP	Curved	4	Full			4/400N
<a href="#">58607-004</a>	HP	Curved	5	Full			6/300N
<a href="#">58607-005</a>	HP	Curved	6	Full			4/300N
<a href="#">58607-006</a>	HP	Curved	7	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-007</a>	HP	Curved	2	Self	END	YES	1/100N
<a href="#">58607-008</a>	HP	Curved	3	Self	END	YES	2/100N
<a href="#">58607-009</a>	HP	Curved	2	Self	CTR	YES	1/100N
<a href="#">58607-010</a>	HP	Curved	3	Self	CTR	YES	1/100N
<a href="#">58607-011</a>	HP	Curved	3	Self			1/200N
<a href="#">58607-012</a>	HP	Curved	4	Self			2/100N
<a href="#">58607-013</a>	HP	Curved	5	Self			3/100N
<a href="#">58607-014</a>	HP	Curved	6	Self			8/100N
<a href="#">58607-015</a>	HP	Curved	7	Self			4/200N
<a href="#">58607-016</a>	Hussman	Vision	2	Full			4/300N
<a href="#">58607-017</a>	Hussman	Vision	3	Full			4/400N
<a href="#">58607-018</a>	Hussman	Vision	4	Full			6/400N
<a href="#">58607-019</a>	Hussman	Vision	5	Full			1/500N, 1/400N 2/500N, 1/400N 1/500N
<a href="#">58607-020</a>	Hussman	Vision	6	Full			8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-021</a>	Hussman	Vision	7	Full			12/300N
<a href="#">58607-022</a>	Hussman	Vision	2	Self	END	YES	1/100N
<a href="#">58607-023</a>	Hussman	Vision	3	Self	END	YES	2/100N
<a href="#">58607-024</a>	Hussman	Vision	2	Self	CTR	YES	1/100N
<a href="#">58607-025</a>	Hussman	Vision	3	Self	CTR	YES	2/100N
<a href="#">58607-026</a>	Hussman	Vision	3	Self			2/100N
<a href="#">58607-027</a>	Hussman	Vision	4	Self			2/100N
<a href="#">58607-028</a>	Hussman	Vision	5	Self			2/300N
<a href="#">58607-029</a>	Hussman	Vision	6	Self			8/100N
<a href="#">58607-030</a>	Hussman	Vision	7	Self			4/100N
<a href="#">58607-031</a>		Flat	2	Full			4/200N
<a href="#">58607-032</a>		Flat	3	Full			4/300N
<a href="#">58607-033</a>		Flat	4	Full			4/300N, 2/200N
<a href="#">58607-034</a>		Flat	5	Full			2/400N, 4/300N
<a href="#">58607-035</a>		Flat	6	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-036</a>		Flat	7	Full			8/400N
<a href="#">58607-037</a>		Flat	2	Self	END	YES	1/100N
<a href="#">58607-038</a>		Flat	3	Self	END	YES	2/100N
<a href="#">58607-039</a>		Flat	2	Self	CTR	YES	1/100N
<a href="#">58607-040</a>		Flat	3	Self	CTR	YES	2/100N
<a href="#">58607-041</a>		Flat	3	Self			2/100N
<a href="#">58607-042</a>		Flat	4	Self			2/100N
<a href="#">58607-043</a>		Flat	5	Self			2/200N
<a href="#">58607-044</a>		Flat	6	Self			8/100N
<a href="#">58607-045</a>		Flat	7	Self			4/100N
<a href="#">58607-046</a>	Tyler	Advantage	2	Full			1/300N, 2/200N, 1/300N
<a href="#">58607-047</a>	Tyler	Advantage	3	Full			2/500N, 1/400N, 1/500N
<a href="#">58607-048</a>	Tyler	Advantage	4	Full			2/400N, 1/400N, 1/300N, 2/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-049</a>	Tyler	Advantage	5	Full			2/500N, 2/400N, 2/500N
<a href="#">58607-050</a>	Tyler	Advantage	6	Full			8/400N
<a href="#">58607-051</a>	Tyler	Advantage	7	Full			8/300N, 4/200N
<a href="#">58607-052</a>	Tyler	Advantage	2	Self	END	YES	1/200N
<a href="#">58607-053</a>	Tyler	Advantage	3	Self	END	YES	2/100N
<a href="#">58607-054</a>	Tyler	Advantage	2	Self	CTR	YES	1/200N
<a href="#">58607-055</a>	Tyler	Advantage	3	Self	CTR	YES	2/100N
<a href="#">58607-056</a>	Tyler	Advantage	3	Self			2/100N
<a href="#">58607-057</a>	Tyler	Advantage	4	Self			2/200N
<a href="#">58607-058</a>	Tyler	Advantage	5	Self			2/200N
<a href="#">58607-059</a>	Tyler	Advantage	6	Self			4/200N
<a href="#">58607-060</a>	Tyler	Advantage	7	Self			4/200N
<a href="#">58607-061</a>	Hussman	Vision	3	Full	Non-glare		4/400N
<a href="#">58607-062</a>	Hussman	Vision	5	Full	Non-glare		1/500N, 1/400N, 2/500N,




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
							1/400N, 1/500N
58607-063	Hussman	Vision	7	Full	Non-glare		12/300N
58607-064		Flat	3		Non-glare		4/400N
58607-065		Flat	5		Non-glare		4/400N, 2/300N
58607-066		Flat	7		Non-glare		8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 106 Lower Control Panel

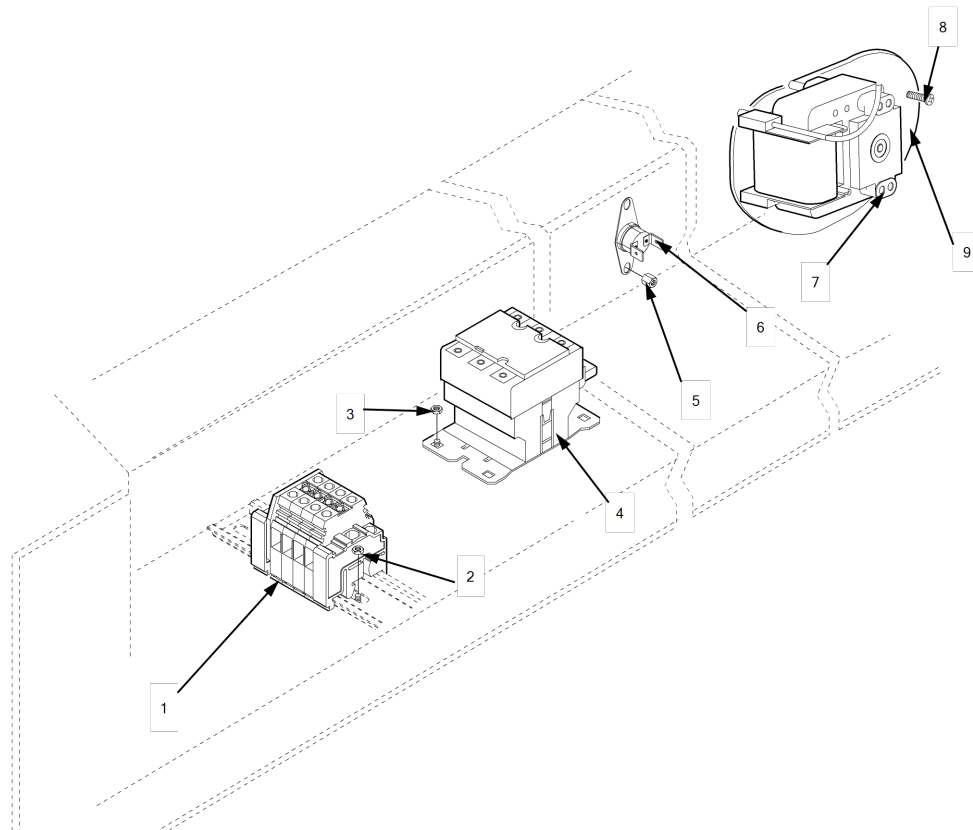

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
1	<a href="#">49367</a>	Terminal block assembly	1	
1	<a href="#">49641</a>	Terminal block assembly, CE	1	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">NS02-006</a>	Nut	2	
3*	<a href="#">51062</a>	EMC filter board, CE	1	A
4	<a href="#">19405</a>	Contactors, 208/240 VAC	1	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
5	<a href="#">ME50-023</a>	Standoff	4	
6	<a href="#">56854</a>	High limit with spacer, 225° F, manual reset	2	A
7	<a href="#">80821</a>	Blower motor, 50/60 HZ	3	A
8	<a href="#">SC02-041</a>	Screw	9	
9	<a href="#">37157</a>	Blower plate	A/R	
<p><b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b>  <b>* = Not Shown</b>  <b>A/R = As Required</b></p>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 106 Upper Controls and Decals

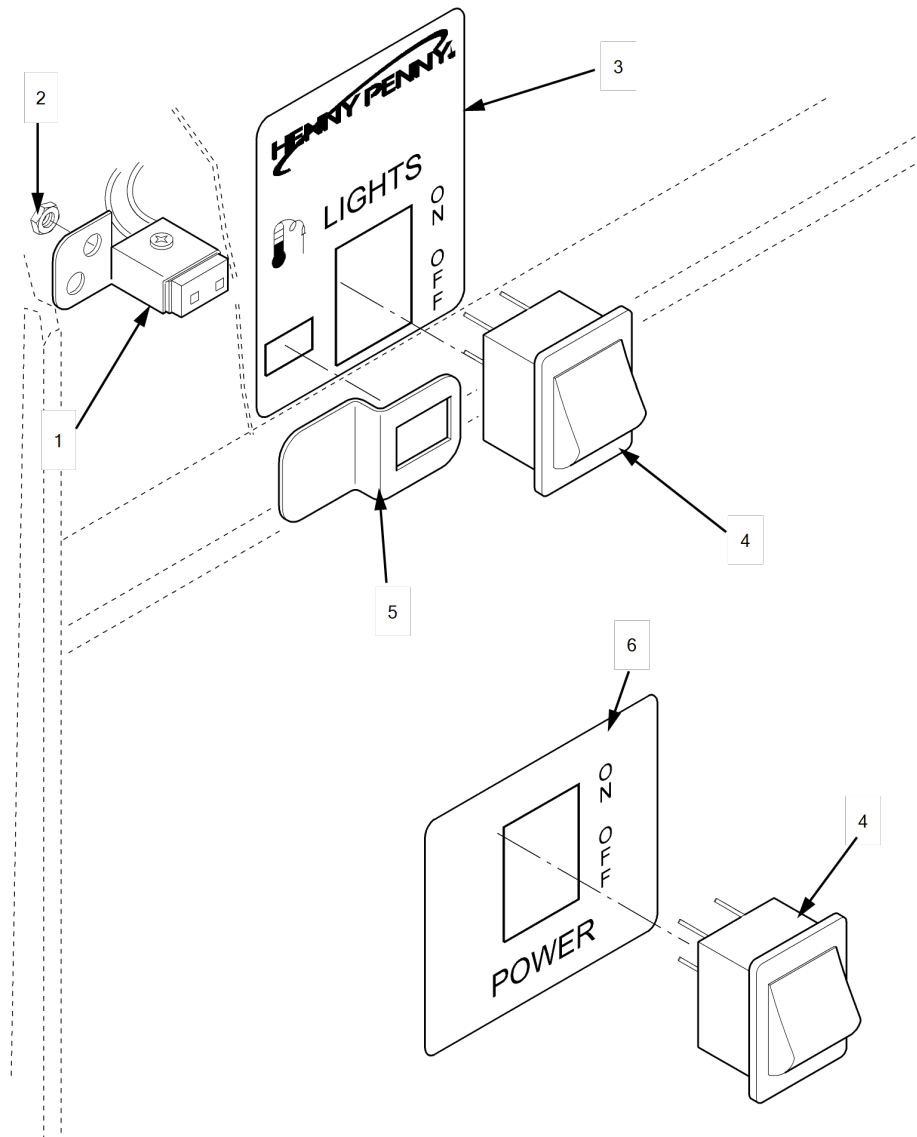

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
1	56380	Probe receptacle assembly	2	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			106	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">61512</a>	Lights with probe decal	1	
3	<a href="#">59305</a>	Lights without probe decal	1	
4	<a href="#">72277</a>	Power switch	3	A
5	<a href="#">56585</a>	Probe guard	2	
6	<a href="#">61739</a>	Power decal	1	
6	<a href="#">61753</a>	Power with probe decal (SN: CY106JA & below)	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 107 Covers, Doors, and Shelves

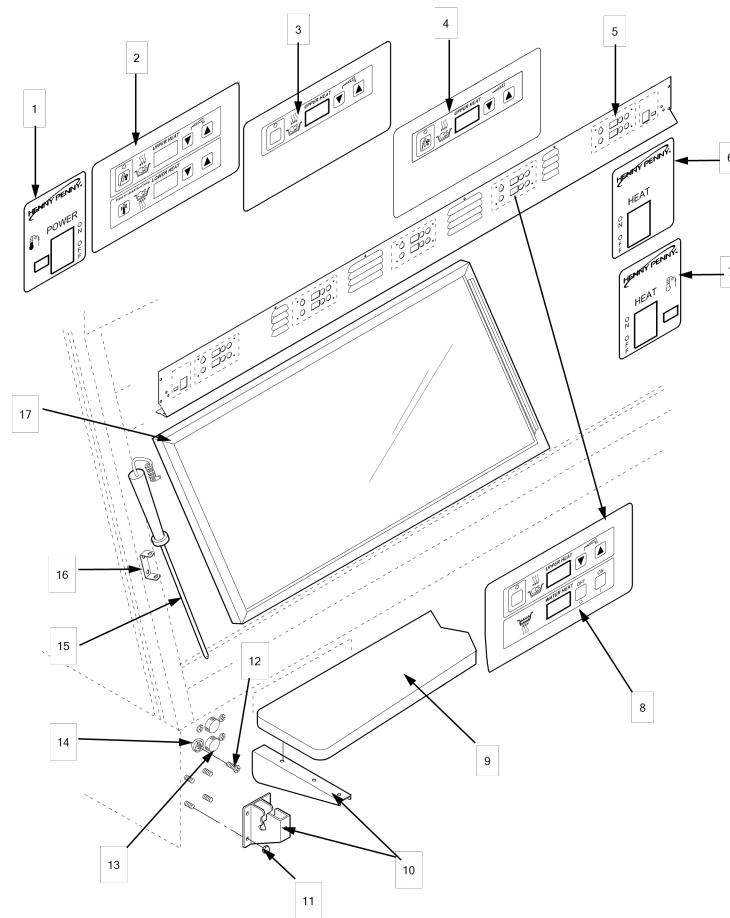

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
1	<a href="#">61753</a>	Power with probe decal	1	
2	<a href="#">56349</a>	Control decal, upper air	1	
3	<a href="#">59302</a>	Control decal, radio w/o probe	2	
4	<a href="#">56347</a>	Control decal, upper heat	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
5	<a href="#">64265</a>	Rear cover, 7 vat	1	
6	<a href="#">59306</a>	Heat supply w/o probe decal	1	
7	<a href="#">61513</a>	Heat supply with probe decal	1	
8	<a href="#">59304</a>	Control radio w/o probe decal	2	
10	<a href="#">37230</a>	Cutting board bracket	2	
11	<a href="#">NS03-044</a>	Nut	8	
12	<a href="#">SC01-113</a>	Screw	4	
13	<a href="#">EF02-006</a>	Fuse holder, 15 amp (HA0704034 & below)	2	A
13	<a href="#">EF02-104</a>	Fuse holder, 20 amp, CE	2	A
14	<a href="#">NS02-005</a>	Nut	4	
15	<a href="#">59363</a>	Food probe	1	A
16	<a href="#">42895</a>	Food probe clip	2	
17	<a href="#">68051</a>	Sliding glass doors, 7 vat	4	
17	<a href="#">22225</a>	-Door glide	4/door	
17	<a href="#">SC01-066</a>	-Screw, #6-32 X 3/8, CT, SS	4/door	
17		- Door tracks and hardware (See Door Tracks table below)		
18*	<a href="#">EF02-007</a>	Fuse, 15 Amp (HA0704034 & below)	2	
18*	<a href="#">EF02-125</a>	Push button reset breaker (HA0704035 & above)	2	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
18*	<a href="#">EF02-105</a>	Fuse, 15 Amp, CE	2	
19*	<a href="#">58497</a>	Vat cover, 2 in, 2 vat	A/R	
19*	<a href="#">58498</a>	Vat cover, 3/8 in, 2 vat	A/R	
19*	<a href="#">42479</a>	Vat cover, 3/8 in, 3 vat	A/R	
19*	<a href="#">42477</a>	Vat cover, 2 in, 3 vat	A/R	
19*	<a href="#">58503</a>	Vat cover, flat, 2 vat	A/R	
19*	<a href="#">58504</a>	Vat cover, flat, 3 vat	A/R	
20*	<a href="#">54003</a>	Adjustable legs, optional	6	
21*	<a href="#">64179</a>	Splatter guard	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				


## Door Tracks

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
*	<a href="#">56595-005</a>	Door track, lower	1	
*	<a href="#">56234</a>	Door track, upper	1	
*	<a href="#">SC01-003</a>	Screw, #6-32 X 3/8, CT, flat head	16	
*	<a href="#">NS02-005</a>	Hex keps nuts, #6-32	8	
*	<a href="#">NS03-063</a>	Hi-crown acorn nut, 6-32, SS	8	
* = Not Shown				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 107 Lower Heat

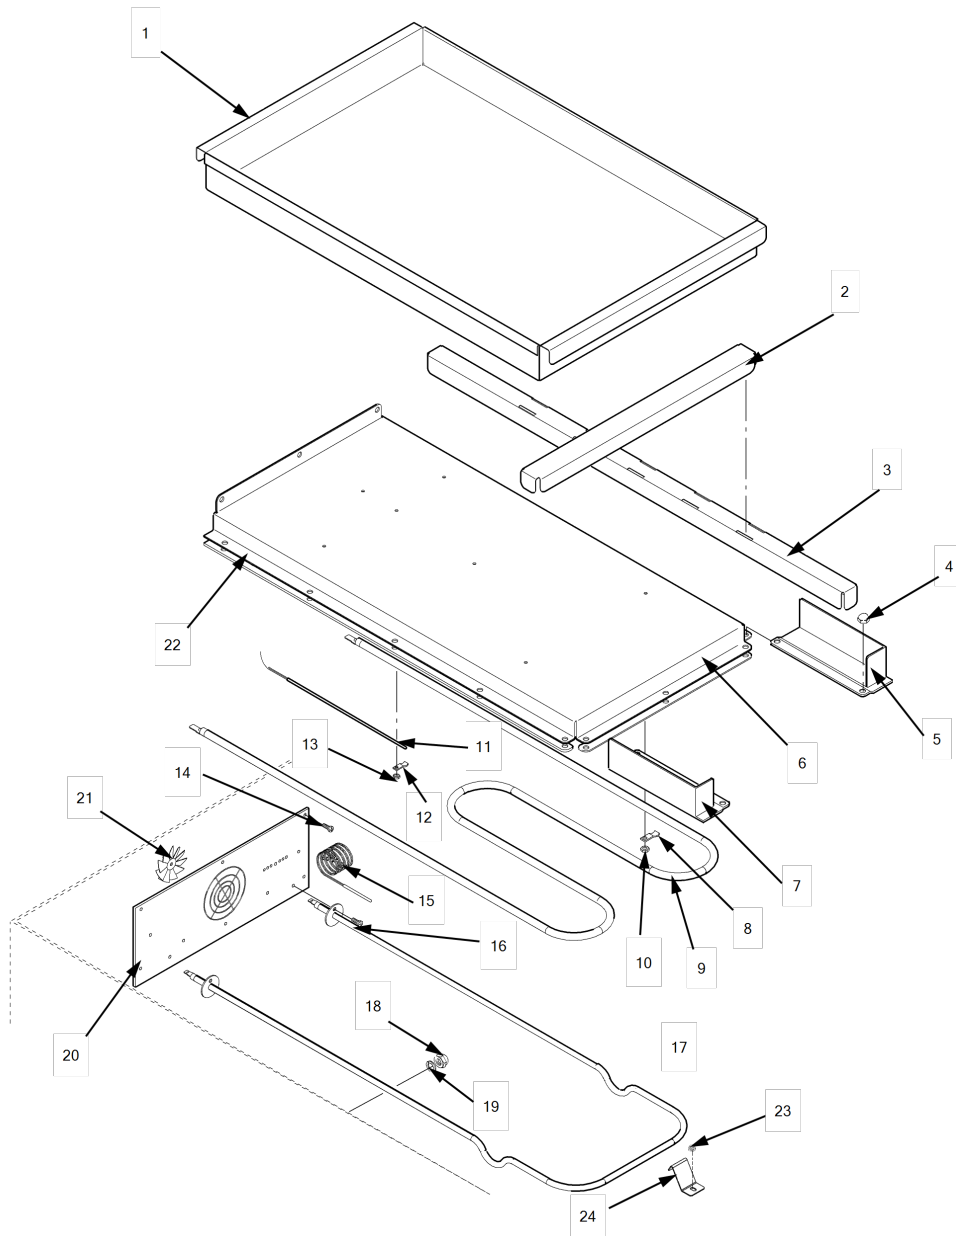



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
1	<a href="#">59315</a>	Water pan, small service only	2	
1	<a href="#">91963</a>	Water pan, standard	2	
2	<a href="#">37371</a>	Cross support pan, short	14	
3	<a href="#">37159</a>	Support pan, long	14	
3	<a href="#">14462</a>	Support pan and shelf kit (Use with <a href="#">14463</a> & <a href="#">14464</a> )	1	
4	<a href="#">NS03-002</a>	Acorn nut, #10-24	26	
5	<a href="#">63440</a>	Water pan locator, right (service only)	2	
5	91977	Water pan locator, standard	4	
5	91978	Water pan locator, cambo	A/R	
6	<a href="#">56862</a>	Water pan gasket	2	
7	<a href="#">63441</a>	Water pan locator, left (service only)	2	
8	<a href="#">56354</a>	Water heater clip	10	
9	<a href="#">56310-01</a>	Water pan heater, 230VAC, 400W (Under <a href="#">56414</a> )	2	B
9	<a href="#">56310-02</a>	Water pan heater, 208VAC, 400W (Under <a href="#">56414</a> )	2	B
10	<a href="#">NS02-005</a>	Nut	10	
11	<a href="#">26252</a>	Water pan probe, 6 in	2	
12	<a href="#">MS01-462</a>	Tube clamp	4	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
13	<a href="#">NS02-005</a>	Nut	4	
14	<a href="#">SC02-041</a>	Screw	18	
15	<a href="#">56166</a>	Probe, 3 in	1	A
15*	<a href="#">39693</a>	Probe clip	1	
15*	<a href="#">58566</a>	Probe plate	1	
16	<a href="#">SC02-041</a>	Screw	8	
17	<a href="#">56240-01</a>	Lower heater, 208 VAC, 650W	4	B
17	<a href="#">56240-02</a>	Lower heater, 240 VAC, 650W	4	B
18	<a href="#">NS03-023</a>	Acorn nut	6	
19	<a href="#">LW01-013</a>	Lockwasher	6	
20	<a href="#">16685</a>	Fan guard	3	
21	<a href="#">39974</a>	Fan blade	3	
22	<a href="#">56414</a>	Water pan heater support	2	
23	<a href="#">NS03-044</a>	Acorn nut, #10-24, SS	4	
24	<a href="#">66800</a>	Air heater base brace	4	
25*	<a href="#">14463</a>	Wire shelf and glides kit, 2 vat (use with <a href="#">14462</a> )	1	
25*	<a href="#">14464</a>	Wire shelf and glides kit, 3 vat (use with <a href="#">14462</a> )	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 107 Upper Control Panel

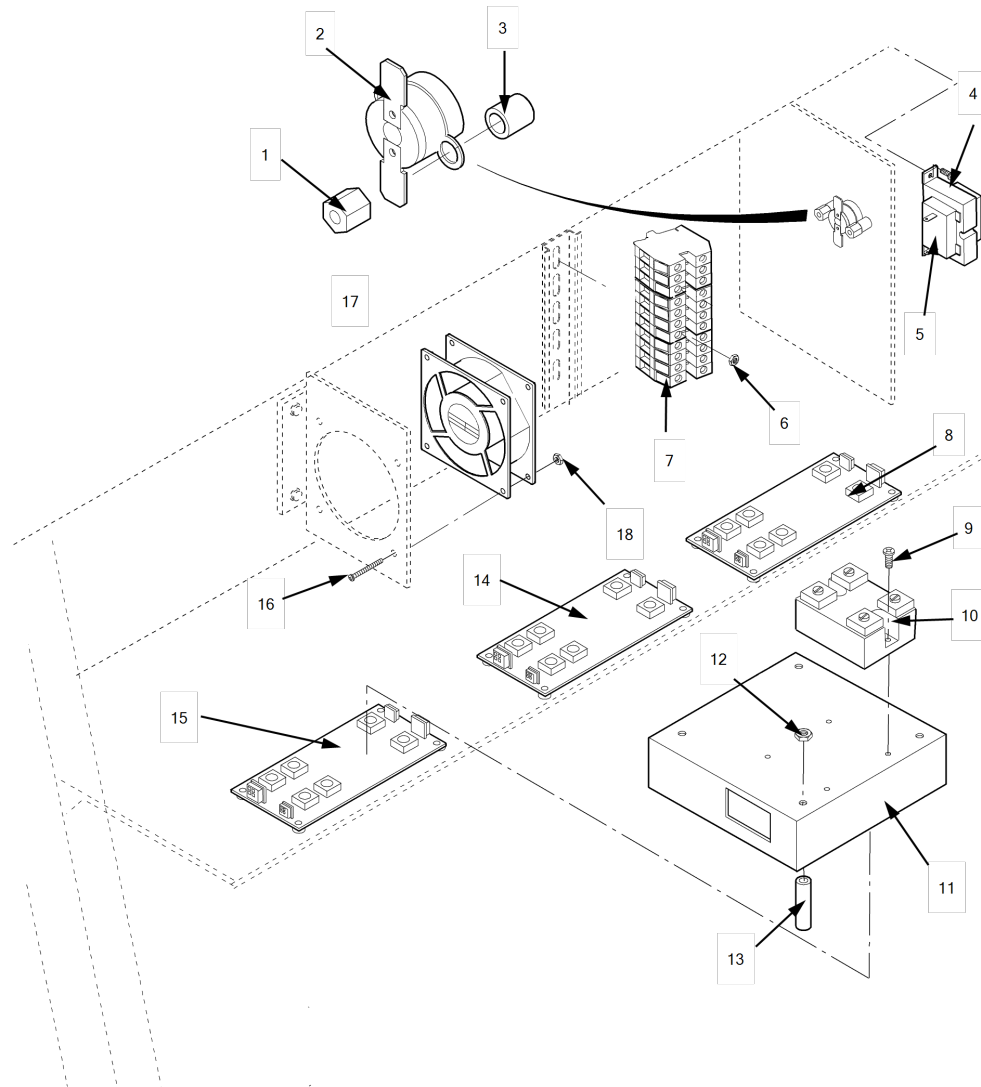

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
1	<a href="#">ME50-023</a>	Standoff	4	
2	<a href="#">58670</a>	High limit, 165° F	2	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
2	14257	High limit kit, manual reset to auto reset	A/R	A
3	ME50-011	Spacer	4	
4	SC02-041	Screw	2	
5	28979	Transformer, 208/240VAC	1	A
6	NS02-006	Nut	14	
7	56174	Terminal block assembly	7	
7	56175	Terminal block assembly, CE	7	
8	55101	Control PC board, radiant air/heat	1	B
8	63911	Control PC board, radiant air/heat, CE	1	B
9	SC04-001	Screw	20	
10	40645	Relay	10	A
11	64256	PC board cover	4	
12	NS02-005	Nut	16	
13	ME50-014	Spacer	16	
14	55102	Control PC board, radiant water-/heat	2	B
14	63912	Control PC board, radiant water-/heat, CE	2	B
15	55100	Control PC board, radiant heat	4	B
15	63910	Control PC board, radiant heat, CE	4	B




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
16	<a href="#">SC01-003</a>	Screw	8	
17	<a href="#">16688</a>	Cooling fan, 220 VAC	4	A
18	<a href="#">NS02-005</a>	Nut	8	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> * = Not Shown A/R = As Required				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 107 Under Canopy and Glass

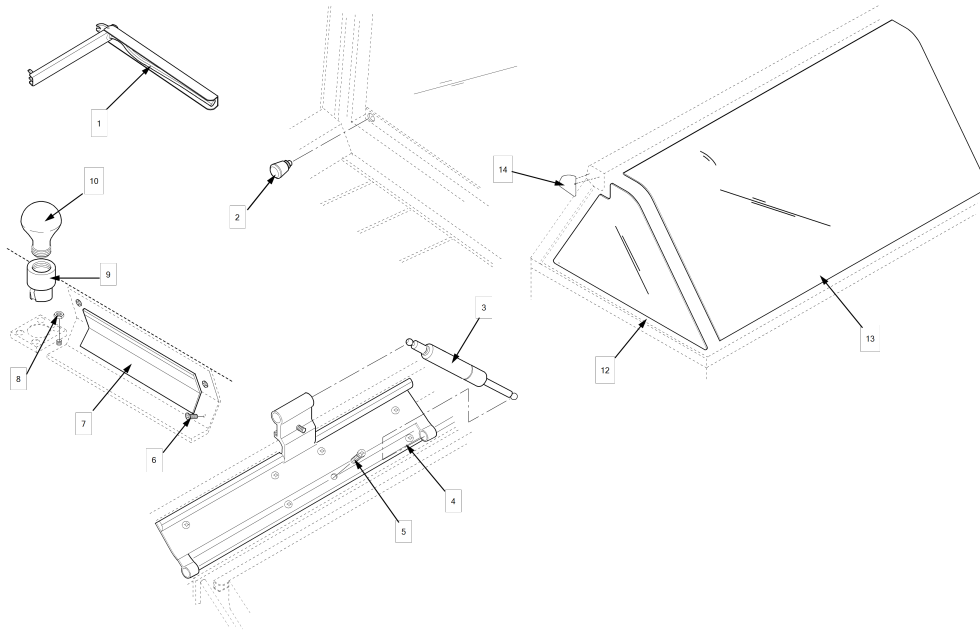

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
1	<a href="#">56878</a>	Gas ram installation tool	A/R	A
2	<a href="#">56883</a>	Side glass retainer, spring loaded	2	
3	<a href="#">56343-001</a>	Gas ram, 100N	Refer to Gas Ram selection chart	B
3	<a href="#">56343-002</a>	Gas ram, 200N		B
3	<a href="#">56343-003</a>	Gas ram, 300N		B
3	<a href="#">56343-004</a>	Gas ram, 400N		B
3	<a href="#">56343-005</a>	Gas ram, 500N		B
4	<a href="#">56345</a>	Lift element	4	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
5	<a href="#">SC03-004</a>	Screw	32	
6	<a href="#">SC02-041</a>	Screw	28	
7	<a href="#">14339</a>	Radiant heater kit, 208 VAC, 510W	7	A
7	<a href="#">14340</a>	Radiant heater kit, 230 VAC, 510W	7	A
7	<a href="#">14341</a>	Radiant heater kit, 240 VAC, 260W, CE	7	A
7	<a href="#">14342</a>	Radiant heater kit, 208 VAC, 260W, CE	7	A
8	<a href="#">NS02-006</a>	Nut	12	
9	<a href="#">39795</a>	Light socket, non-CE (August 2000 & after)	8	B
9	<a href="#">14295</a>	Light socket, non-CE (Before August 2000)	8	B
9	<a href="#">54041</a>	Light socket, CE	8	B
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	8	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	8	A
11*	<a href="#">56800</a>	Side glass insulator, CE	2	
12	N/A	Side glass, flat, clear	2	
12	N/A	Side glass, flat, mirrored, left	1	
12	N/A	Side glass, flat, mirrored, right	1	
12	N/A	Side glass, flat, low e, left	1	
12	N/A	Side glass, flat, low e, right	1	
12	N/A	Side glass, flat, mirrored, left	1	
12	<a href="#">56050-001</a>	Side glass, Henny Penny, profile, clear	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
12	<a href="#">56050-002</a>	Side glass, Henny Penny, profile, mirrored, left	1	
12	<a href="#">56050-003</a>	Side glass, Henny Penny, profile, mirrored, right	1	
12	<a href="#">56050-004</a>	Side glass, Henny Penny, profile, low e, left	1	
12	<a href="#">56050-005</a>	Side glass, Henny Penny, profile, low e, right	1	
12	<a href="#">56050-006</a>	Side glass, Henny Penny, profile, mirrored, antique white, left	1	
12	<a href="#">56050-007</a>	Side glass, Henny Penny, profile, mirrored, antique white, right	1	
12	<a href="#">56050-008</a>	Side glass, Henny Penny, profile, mirrored, shadow black, left	1	
12	<a href="#">56050-009</a>	Side glass, Henny Penny, profile, mirrored, shadow black, right	1	
12	<a href="#">56239-001</a>	Side glass, Tyler, advantage profile, clear	2	
12	<a href="#">56239-002</a>	Side glass, Tyler, advantage profile, mirrored, left	1	
12	<a href="#">56239-003</a>	Side glass, Tyler, advantage profile, mirrored, right	1	
12	<a href="#">56239-004</a>	Side glass, Tyler, advantage profile, low e, left	1	
12	<a href="#">56239-005</a>	Side glass, Tyler, advantage profile, low e, right	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
13	<a href="#">58607-002</a>	Henny Penny, curved profile, 3 vat, full serve	1	
13	<a href="#">58607-003</a>	Henny Penny, curved profile, 4 vat, full serve	1	
13	<a href="#">58607-004</a>	Henny Penny, curved profile, 5 vat, full serve	1	
13	<a href="#">58607-005</a>	Henny Penny, curved profile, 6 vat, full serve	1	
13	<a href="#">58607-006</a>	Henny Penny, curved profile, 7 vat, full serve (2 per unit)	2	
13	<a href="#">58607-011</a>	Henny Penny, curved profile, 3 vat, self serve	1	
13	<a href="#">58607-012</a>	Henny Penny, curved profile, 4 vat, self serve	1	
13	<a href="#">58607-013</a>	Henny Penny, curved profile, 5 vat, self serve	1	
13	<a href="#">58607-014</a>	Henny Penny, curved profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-015</a>	Henny Penny, curved profile, 7 vat, self serve (2 per unit)	2	
13	<a href="#">58607-047</a>	Tyler, advantage profile, 3 vat, full serve	1	
13	<a href="#">58607-048</a>	Tyler, advantage profile, 4 vat, full serve	1	
13	<a href="#">58607-049</a>	Tyler, advantage profile, 5 vat, full serve	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
13	<a href="#">58607-050</a>	Tyler, advantage profile, 6 vat, full serve (2 per unit)	2	
13	<a href="#">58607-051</a>	Tyler, advantage profile, 7 vat, full serve (2 per unit)	2	
13	N/A	Tyler, advantage profile, 2 vat, self serve, end, combo unit only	1	
13	<a href="#">58607-056</a>	Tyler, advantage profile, 3 vat, self serve	1	
13	<a href="#">58607-057</a>	Tyler, advantage profile, 4 vat, self serve	1	
13	<a href="#">58607-058</a>	Tyler, advantage profile, 5 vat, self serve	1	
13	<a href="#">58607-059</a>	Tyler, advantage profile, 6 vat, self serve (2 per unit)	2	
13	<a href="#">58607-060</a>	Tyler, advantage profile, 7 vat, self serve (2 per unit)	2	
14	<a href="#">56231</a>	End cap	2	
15*	N/A	Divider glass, Henny Penny profile, combo units	1	
15*	N/A	Divider glass, Tyler, advantage profile, combo units	1	
15*	N/A	Divider glass, flat profile, combo units	1	
15*	N/A	Divider glass bracket	1	
16*	<a href="#">154492</a>	Sneeze guard kit	1	
16*	63421	-Sneeze guard assembly	1	
17*	14876	Grease shield kit	1	




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
18*	<a href="#">MS01-366</a>	Glass seal	A/R	

Recommended Parts: A = Truck Stock; B = Dist. Stock  
 \* = Not Shown  
 A/R = As Required

### Front Panel Support Matrix

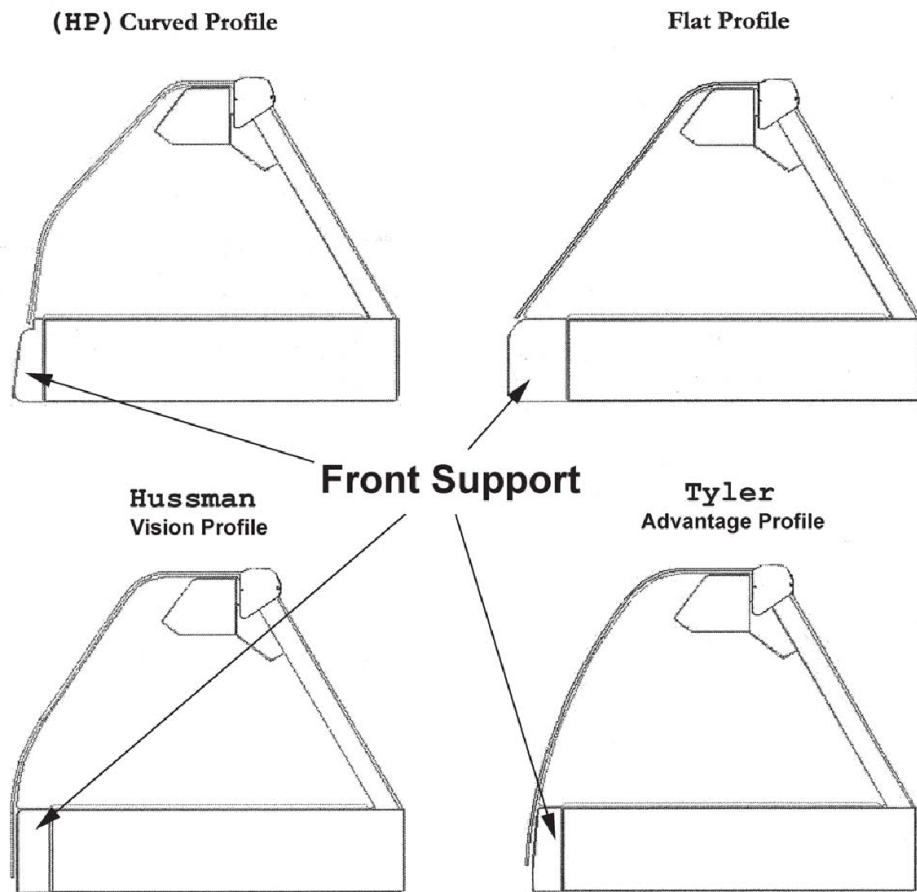



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Number of Vats	Henny Penny Profile	Hussman Profile	Flat Profile	Tyler Profile
3	<a href="#">58528</a>	N/A	N/A	<a href="#">58537</a>
4	<a href="#">58527</a>	N/A	N/A	<a href="#">58536</a>
5	<a href="#">58384</a>	N/A	N/A	58535
6	<a href="#">58526</a>	N/A	N/A	58534
7	<a href="#">58387</a>	N/A	N/A	<a href="#">58533</a>

### Gas Ram Identification Chart

Refer to Columns 1 and 2 in the chart below to identify the correct canopy glass assembly (s) on your unit. Then move to the right to Column 3 to identify the correct gas ram configuration -- the quantity and strength of the gas ram(s) needed -- for your unit. Gas ram configuration is as viewed from the customer side.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-001</a>	HP	Curved	2	Full			4/200N
<a href="#">58607-002</a>	HP	Curved	3	Full			4/200N
<a href="#">58607-003</a>	HP	Curved	4	Full			4/400N
<a href="#">58607-004</a>	HP	Curved	5	Full			6/300N
<a href="#">58607-005</a>	HP	Curved	6	Full			4/300N
<a href="#">58607-006</a>	HP	Curved	7	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-007</a>	HP	Curved	2	Self	END	YES	1/100N
<a href="#">58607-008</a>	HP	Curved	3	Self	END	YES	2/100N
<a href="#">58607-009</a>	HP	Curved	2	Self	CTR	YES	1/100N
<a href="#">58607-010</a>	HP	Curved	3	Self	CTR	YES	1/100N
<a href="#">58607-011</a>	HP	Curved	3	Self			1/200N
<a href="#">58607-012</a>	HP	Curved	4	Self			2/100N
<a href="#">58607-013</a>	HP	Curved	5	Self			3/100N
<a href="#">58607-014</a>	HP	Curved	6	Self			8/100N
<a href="#">58607-015</a>	HP	Curved	7	Self			4/200N
<a href="#">58607-016</a>	Hussman	Vision	2	Full			4/300N
<a href="#">58607-017</a>	Hussman	Vision	3	Full			4/400N
<a href="#">58607-018</a>	Hussman	Vision	4	Full			6/400N
<a href="#">58607-019</a>	Hussman	Vision	5	Full			1/500N, 1/400N 2/500N, 1/400N 1/500N
<a href="#">58607-020</a>	Hussman	Vision	6	Full			8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-021</a>	Hussman	Vision	7	Full			12/300N
<a href="#">58607-022</a>	Hussman	Vision	2	Self	END	YES	1/100N
<a href="#">58607-023</a>	Hussman	Vision	3	Self	END	YES	2/100N
<a href="#">58607-024</a>	Hussman	Vision	2	Self	CTR	YES	1/100N
<a href="#">58607-025</a>	Hussman	Vision	3	Self	CTR	YES	2/100N
<a href="#">58607-026</a>	Hussman	Vision	3	Self			2/100N
<a href="#">58607-027</a>	Hussman	Vision	4	Self			2/100N
<a href="#">58607-028</a>	Hussman	Vision	5	Self			2/300N
<a href="#">58607-029</a>	Hussman	Vision	6	Self			8/100N
<a href="#">58607-030</a>	Hussman	Vision	7	Self			4/100N
<a href="#">58607-031</a>		Flat	2	Full			4/200N
<a href="#">58607-032</a>		Flat	3	Full			4/300N
<a href="#">58607-033</a>		Flat	4	Full			4/300N, 2/200N
<a href="#">58607-034</a>		Flat	5	Full			2/400N, 4/300N
<a href="#">58607-035</a>		Flat	6	Full			8/300N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-036</a>		Flat	7	Full			8/400N
<a href="#">58607-037</a>		Flat	2	Self	END	YES	1/100N
<a href="#">58607-038</a>		Flat	3	Self	END	YES	2/100N
<a href="#">58607-039</a>		Flat	2	Self	CTR	YES	1/100N
<a href="#">58607-040</a>		Flat	3	Self	CTR	YES	2/100N
<a href="#">58607-041</a>		Flat	3	Self			2/100N
<a href="#">58607-042</a>		Flat	4	Self			2/100N
<a href="#">58607-043</a>		Flat	5	Self			2/200N
<a href="#">58607-044</a>		Flat	6	Self			8/100N
<a href="#">58607-045</a>		Flat	7	Self			4/100N
<a href="#">58607-046</a>	Tyler	Advantage	2	Full			1/300N, 2/200N, 1/300N
<a href="#">58607-047</a>	Tyler	Advantage	3	Full			2/500N, 1/400N, 1/500N
<a href="#">58607-048</a>	Tyler	Advantage	4	Full			2/400N, 1/400N, 1/300N, 2/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
<a href="#">58607-049</a>	Tyler	Advantage	5	Full			2/500N, 2/400N, 2/500N
<a href="#">58607-050</a>	Tyler	Advantage	6	Full			8/400N
<a href="#">58607-051</a>	Tyler	Advantage	7	Full			8/300N, 4/200N
<a href="#">58607-052</a>	Tyler	Advantage	2	Self	END	YES	1/200N
<a href="#">58607-053</a>	Tyler	Advantage	3	Self	END	YES	2/100N
<a href="#">58607-054</a>	Tyler	Advantage	2	Self	CTR	YES	1/200N
<a href="#">58607-055</a>	Tyler	Advantage	3	Self	CTR	YES	2/100N
<a href="#">58607-056</a>	Tyler	Advantage	3	Self			2/100N
<a href="#">58607-057</a>	Tyler	Advantage	4	Self			2/200N
<a href="#">58607-058</a>	Tyler	Advantage	5	Self			2/200N
<a href="#">58607-059</a>	Tyler	Advantage	6	Self			4/200N
<a href="#">58607-060</a>	Tyler	Advantage	7	Self			4/200N
<a href="#">58607-061</a>	Hussman	Vision	3	Full	Non-glare		4/400N
<a href="#">58607-062</a>	Hussman	Vision	5	Full	Non-glare		1/500N, 1/400N, 2/500N,




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Column 1	Column 2						Column 3
Glass Part No.	Glass Description						Gas Ram Qty. of Gas Shocks
	Brand	Profile	Vats	Type	Position	Combo	
							1/400N, 1/500N
58607-063	Hussman	Vision	7	Full	Non-glare		12/300N
58607-064		Flat	3		Non-glare		4/400N
58607-065		Flat	5		Non-glare		4/400N, 2/300N
58607-066		Flat	7		Non-glare		8/400N



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 107 Lower Control Panel

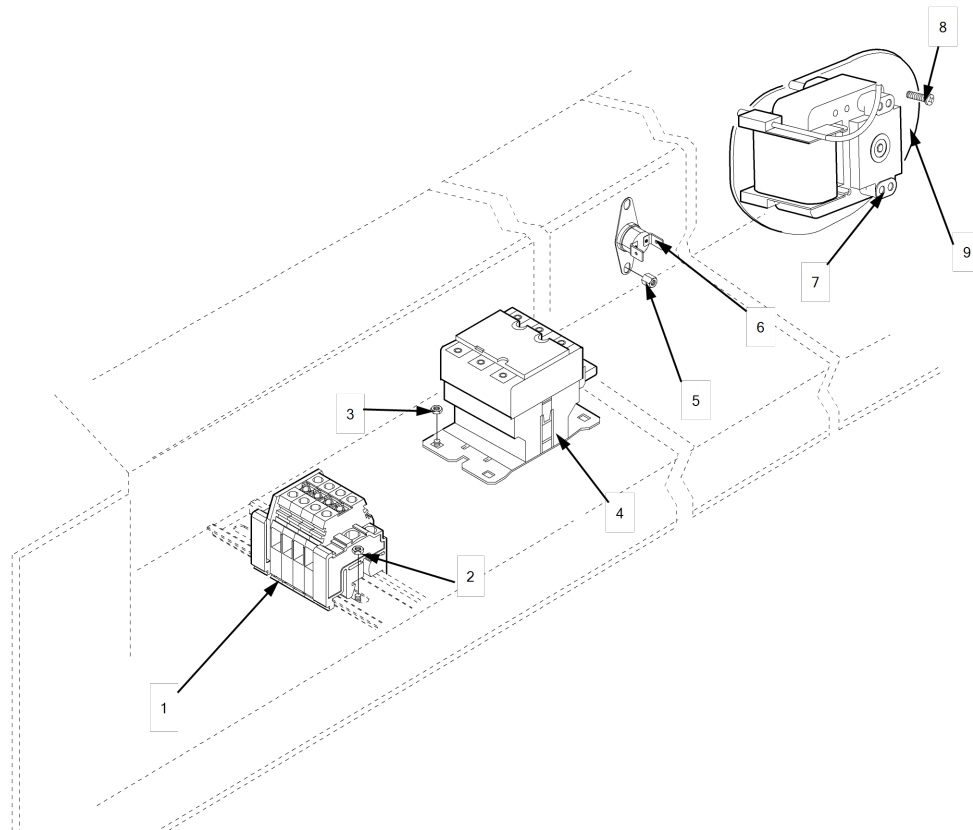

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
1	<a href="#">49367</a>	Terminal block assembly	1	
1	<a href="#">49641</a>	Terminal block assembly, CE	1	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">NS02-006</a>	Nut	2	
3*	<a href="#">51062</a>	EMC filter board, CE	1	A
4	<a href="#">19405</a>	Contactor, 208/240 VAC	1	A




For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
5	<a href="#">ME50-023</a>	Standoff	4	
6	<a href="#">56854</a>	High limit with spacer, 225° F, manual reset	2	A
7	<a href="#">80821</a>	Blower motor, 50/60 HZ	3	A
8	<a href="#">SC02-041</a>	Screw	9	
9	<a href="#">37157</a>	Blower plate	A/R	
<p><b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b>  <b>* = Not Shown</b>  <b>A/R = As Required</b></p>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 107 Upper Controls and Decals

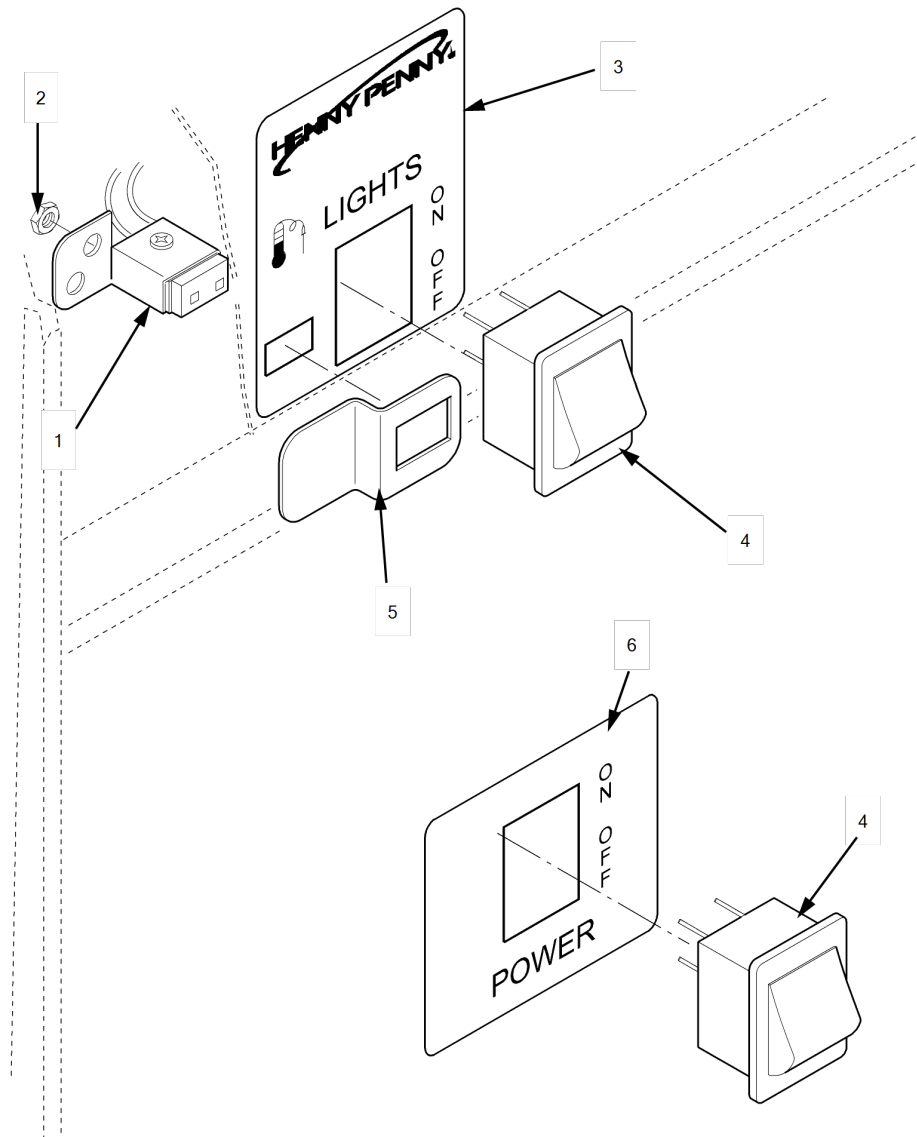

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
1	56380	Probe receptacle assembly	2	A



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			107	
2	<a href="#">NS02-006</a>	Nut	2	
3	<a href="#">61512</a>	Lights with probe decal	1	
3	<a href="#">59305</a>	Lights without probe decal	1	
4	<a href="#">72277</a>	Power switch	3	A
5	<a href="#">56585</a>	Probe guard	2	
6	<a href="#">61739</a>	Power decal	1	
6	<a href="#">61753</a>	Power with probe decal	1	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b> <b>A/R = As Required</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 123 Parts

Item No.	Part No.	Description	Qty.	Stocking Level
			123	
1	<a href="#">39182</a>	Wire shelf	1	
2	<a href="#">56240-01</a>	Lower air heater, 208 VAC, 650W	2	B
2	<a href="#">56240-02</a>	Lower air heater, 240 VAC, 650W	2	B
3	<a href="#">58607-011</a>	Henny Penny curved profile glass assembly	1	
3	<a href="#">58607-026</a>	Hussman profile glass assembly	1	
3	<a href="#">58607-041</a>	Flat profile glass assembly	1	
3	<a href="#">58607-056</a>	Tyler profile glass assembly	1	
4	<a href="#">32754</a>	Wire shelf support assembly, upper	2	
5	<a href="#">56582-001</a>	Power cord assembly, 12 AWG/4CONN, 1 phase	1	
5	<a href="#">56583-001</a>	Power cord assembly, 12 AWG/5CONN, 3 phase	1	
7	<a href="#">39131</a>	PC board control, radiant heat	1	B
7	<a href="#">39132</a>	PC board control, radiant heat, CE	1	B
8	<a href="#">56050-002</a>	Mirrored side glass, left	1	
8	<a href="#">56050-003</a>	Mirrored side glass, right	1	
8	<a href="#">56050-006</a>	Mirrored side glass, left, antique white	1	
8	<a href="#">56050-007</a>	Mirrored side glass, right, antique white	1	
8	<a href="#">56050-008</a>	Mirrored side glass, left, shadow black	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			123	
8	<a href="#">56050-009</a>	Mirrored side glass, right, shadow black	1	
8	<a href="#">56241-002</a>	Mirrored side glass, left, Hussman	1	
8	<a href="#">56241-003</a>	Mirrored side glass, right, Hussman	1	
8	<a href="#">56242-002</a>	Flat mirrored side glass, left	1	
8	<a href="#">56242-003</a>	Flat mirrored side glass, right	1	
8	<a href="#">56239-002</a>	Mirrored side glass, left, Tyler	1	
8	<a href="#">56239-003</a>	Mirrored side glass, right, Tyler	1	
9	<a href="#">39127</a>	Air heat on control, 170-210° F	1	A
9	<a href="#">67201</a>	Air heat on control, 140-180° F, Giant Eagle	1	A
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	2	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	2	A
10	<a href="#">BL01-021</a>	Halogen light bulb, jacketed, 40VAC, 120W, Giant Eagle	2	A
10	<a href="#">39795</a>	Light socket, domestic, non-CE	2	B
11	<a href="#">54041</a>	Light socket, CE	2	B
11	<a href="#">67910</a>	Light socket, (used with <a href="#">BL01-021</a> only)	2	B
12	<a href="#">68045</a>	Sliding glass doors	2	
13	<a href="#">72174</a>	Front viewing glass assembly	1	
14	<a href="#">14930</a>	Connector low PF kit	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			123	
15*	<a href="#">MS01-366</a>	Glass seal	A/R	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 125 Parts

Item No.	Part No.	Description	Qty.	Stocking Level
			125	
1	38921	Wire shelf	1	
2	<a href="#">32935-001</a>	Lower air end heater, 208VAC, 300W	2	B
2	32935-002	Lower air end heater, 240 VAC, 300W	2	B
2	<a href="#">56240-01</a>	Lower air heater, 208 VAC, 650W	2	B
2	<a href="#">56240-02</a>	Lower air heater, 240 VAC, 650W	2	B
3	<a href="#">58607-013</a>	Henny Penny curved profile glass assembly	1	
3	<a href="#">58607-028</a>	Hussman profile glass assembly	1	
3	<a href="#">58607-043</a>	Flat profile glass assembly	1	
3	<a href="#">58607-058</a>	Tyler profile glass assembly	1	
4	<a href="#">32754</a>	Wire shelf support assembly, upper	3	
5	<a href="#">56582-003</a>	Power cord assembly, 8 AWG/4CONN, 1 phase	1	
5	<a href="#">56583-003</a>	Power cord assembly, 8 AWG/4CONN, 3 phase	1	
7	<a href="#">39131</a>	PC board control, radiant heat	1	B
7	<a href="#">39132</a>	PC board control, radiant heat, CE	1	B
8	<a href="#">56050-002</a>	Mirrored side glass, left	1	
8	<a href="#">56050-003</a>	Mirrored side glass, right	1	
8	<a href="#">56050-006</a>	Mirrored side glass, left, antique white	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			125	
8	<a href="#">56050-007</a>	Mirrored side glass, right, antique white	1	
8	<a href="#">56050-008</a>	Mirrored side glass, left, shadow black	1	
8	<a href="#">56050-009</a>	Mirrored side glass, right, shadow black	1	
8	<a href="#">56241-002</a>	Mirrored side glass, left, Hussman	1	
8	<a href="#">56241-003</a>	Mirrored side glass, right, Hussman	1	
8	<a href="#">56242-002</a>	Flat mirrored side glass, left	1	
8	<a href="#">56242-003</a>	Flat mirrored side glass, right	1	
8	<a href="#">56239-002</a>	Mirrored side glass, left, Tyler	1	
8	<a href="#">56239-003</a>	Mirrored side glass, right, Tyler	1	
9	<a href="#">39127</a>	Air heat on control, 170-210° F	1	A
9	<a href="#">67201</a>	Air heat on control, 140-180° F, Giant Eagle	1	A
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	4	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	4	A
10	<a href="#">BL01-021</a>	Halogen light bulb, jacketed, 40VAC, 120W, Giant Eagle	4	A
10	<a href="#">39795</a>	Light socket, domestic, non-CE	4	B
11	<a href="#">54041</a>	Light socket, CE	4	B
11	<a href="#">67910</a>	Light socket, (used with <a href="#">BL01-021</a> only)	4	B
12	<a href="#">68049</a>	Sliding glass doors	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			125	
14	<a href="#">14930</a>	Connector low PF kit	1	
15*	<a href="#">MS01-366</a>	Glass seal	A/R	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b>				



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

## HMR 127 Parts

Item No.	Part No.	Description	Qty.	Stocking Level
			127	
1	32777	Wire shelf	1	
2	<a href="#">32935-001</a>	Lower air end heater, 208VAC, 300W	2	B
2	32935-002	Lower air end heater, 240 VAC, 300W	2	B
2	<a href="#">56240-01</a>	Lower air heater, 208 VAC, 650W	3	B
2	<a href="#">56240-02</a>	Lower air heater, 240 VAC, 650W	3	B
3	<a href="#">58607-015</a>	Henny Penny curved profile glass assembly	1	
3	58607-030	Hussman profile glass assembly	1	
3	<a href="#">58607-045</a>	Flat profile glass assembly	1	
3	<a href="#">58607-060</a>	Tyler profile glass assembly	1	
4	<a href="#">32754</a>	Wire shelf support assembly, upper	4	
5	<a href="#">56582-003</a>	Power cord assembly, 8 AWG/4CONN, 1 phase	1	
5	<a href="#">56583-003</a>	Power cord assembly, 8 AWG/4CONN, 3 phase	1	
7	<a href="#">39131</a>	PC board control, radiant heat	1	B
7	<a href="#">39132</a>	PC board control, radiant heat, CE	1	B
8	<a href="#">56050-002</a>	Mirrored side glass, left	1	
8	<a href="#">56050-003</a>	Mirrored side glass, right	1	
8	<a href="#">56050-006</a>	Mirrored side glass, left, antique white	1	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			127	
8	<a href="#">56050-007</a>	Mirrored side glass, right, antique white	1	
8	<a href="#">56050-008</a>	Mirrored side glass, left, shadow black	1	
8	<a href="#">56050-009</a>	Mirrored side glass, right, shadow black	1	
8	<a href="#">56241-002</a>	Mirrored side glass, left, Hussman	1	
8	<a href="#">56241-003</a>	Mirrored side glass, right, Hussman	1	
8	<a href="#">56242-002</a>	Flat mirrored side glass, left	1	
8	<a href="#">56242-003</a>	Flat mirrored side glass, right	1	
8	<a href="#">56239-002</a>	Mirrored side glass, left, Tyler	1	
8	<a href="#">56239-003</a>	Mirrored side glass, right, Tyler	1	
9	<a href="#">39127</a>	Air heat on control, 170-210° F	1	A
9	<a href="#">67201</a>	Air heat on control, 140-180° F, Giant Eagle	1	A
10	<a href="#">BL01-018</a>	Halogen light bulb, jacketed, 130 VAC, 90W	6	A
10	<a href="#">BL01-028</a>	Halogen light bulb, jacketed, 230 VAC, 150W, CE	6	A
10	<a href="#">BL01-021</a>	Halogen light bulb, jacketed, 40VAC, 120W, Giant Eagle	6	A
10	<a href="#">39795</a>	Light socket, domestic, non-CE	6	B
11	<a href="#">54041</a>	Light socket, CE	6	B
11	<a href="#">67910</a>	Light socket, (used with <a href="#">BL01-021</a> only)	6	B
12	<a href="#">68051</a>	Sliding glass doors	2	



For the most up-to-date parts information, visit  
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
			127	
14	<a href="#">14930</a>	Connector low PF kit	1	
15*	<a href="#">MS01-366</a>	Glass seal	A/R	
<b>Recommended Parts: A = Truck Stock; B = Dist. Stock</b> <b>* = Not Shown</b>				