

# Cleaning Instructions for HT Scale


**HOBART**



Remove label cassette from the scale.



Using a cotton swab and alcohol, clean the printhead.  
*Printhead should be cleaned every time a label roll is changed.*

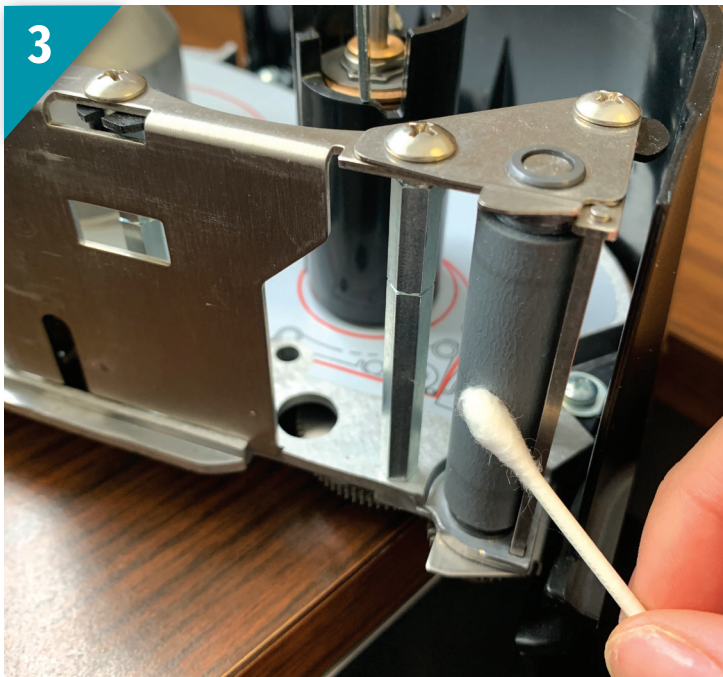

Using a cotton swab and alcohol, clean roller on the label cassette.



Wipe down the scale platter, display and housing daily with a clean cloth and mild detergent solution.

## **NOTICE:**

- Do not dampen labels, electronic parts or connections.
- Do not allow water to enter the openings in the housing. This could damage the scale system.
- Do not use a metal tool on the printhead. This could scratch or break the printhead.