
HOBART

CATALOG OF REPLACEMENT PARTS

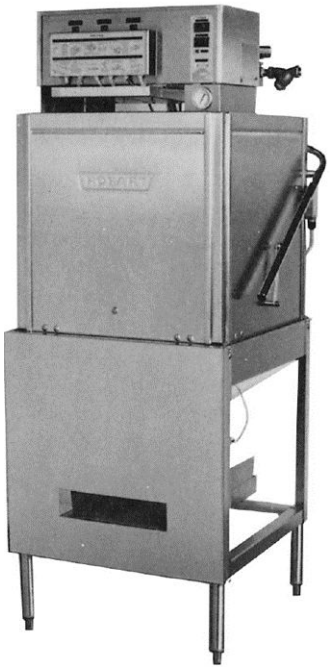

LT1 DISHWASHER

ML-104239 LT1


A product of HOBART 701 S. RIDGE AVENUE TROY, OHIO 45374-0001

FORM 18581 Rev. F (April 2022)

 © HOBART 2022

Table of Contents

5 CHEMICAL DETECTION BOX
7 CONTROL BOX
9 ELECTRICAL COMPONENTS
11 DOOR ASSEMBLY (BEFORE S/N 231098782)
15 DOOR ASSEMBLY (STARTING S/N 231098782)
17 WASH MOTOR AND PUMP (BEFORE S/N 231076369)
19 WASH MOTOR AND PUMP (S/N 231076369 TO 231144434)
21 WASH MOTOR AND PUMP (STARTING S/N 231144435)
23 INSIDE WASH AND RINSE PIPING
25 FILL PIPING (PREVIOUS CONSTRUCTION)
27 FILL PIPING (CURRENT CONSTRUCTION)
29 DRAIN (BEFORE S/N 121021852)
31 DRAIN (STARTING S/N 121021852)
33 TRACK AND RACKS

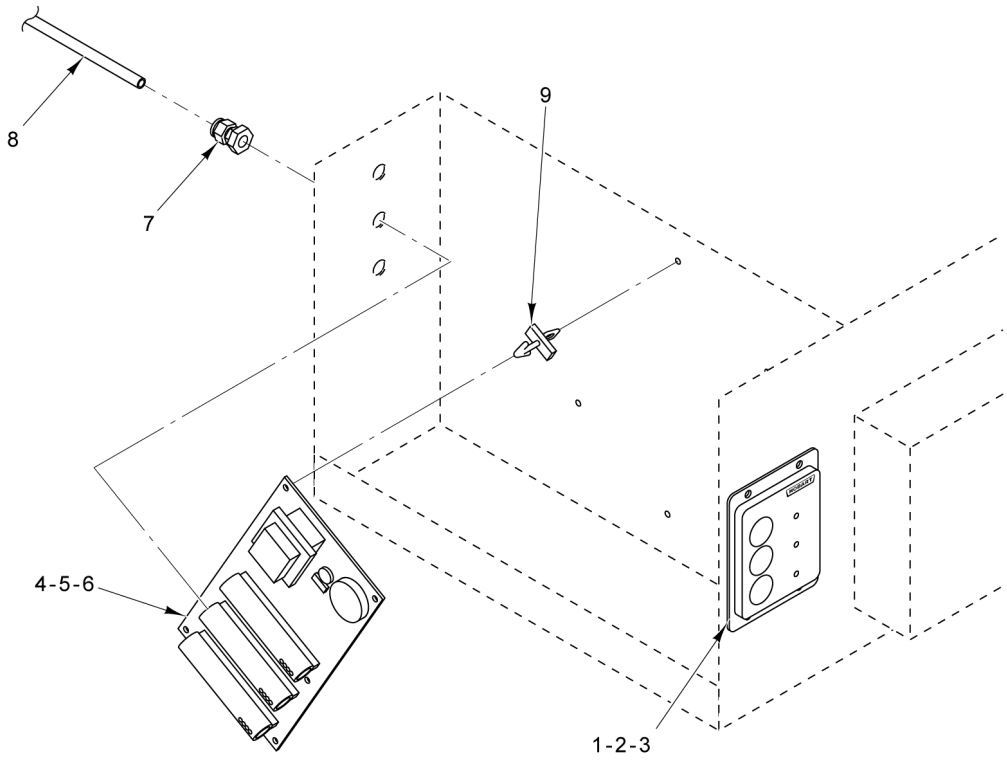

10	00-918068-00001	Chemical Detection Box Assy.
11	00-918053	Potentiometer


PARTS NOT ILLUSTRATED

PL-57862

CHEMICAL DETECTION BOX

CHEMICAL DETECTION BOX

ILLUS. PL-57862	PART NO.	NAME OF PART	AMT.
1	00-114247-00001	Rivet - Drive	1
2	00-893922	Switch - Membrane (Chemical Detection)	1
3	00-918108	Border - Keypad Protector	1
4	00-893766	Board Assy. - Chemical Module	1
5	00-892720	Standoff	2
6	00-813795	Barrier	1
7	FE-025-96	Strain Relief - Electrical	3
8	00-185105-00023	Tubing	3
9	00-329056-00001	Standoff (Dual Locking)	4
10	00-918068-00001	Chemical Detection Box Assy	1
11	00-918053	Potentiometer	1

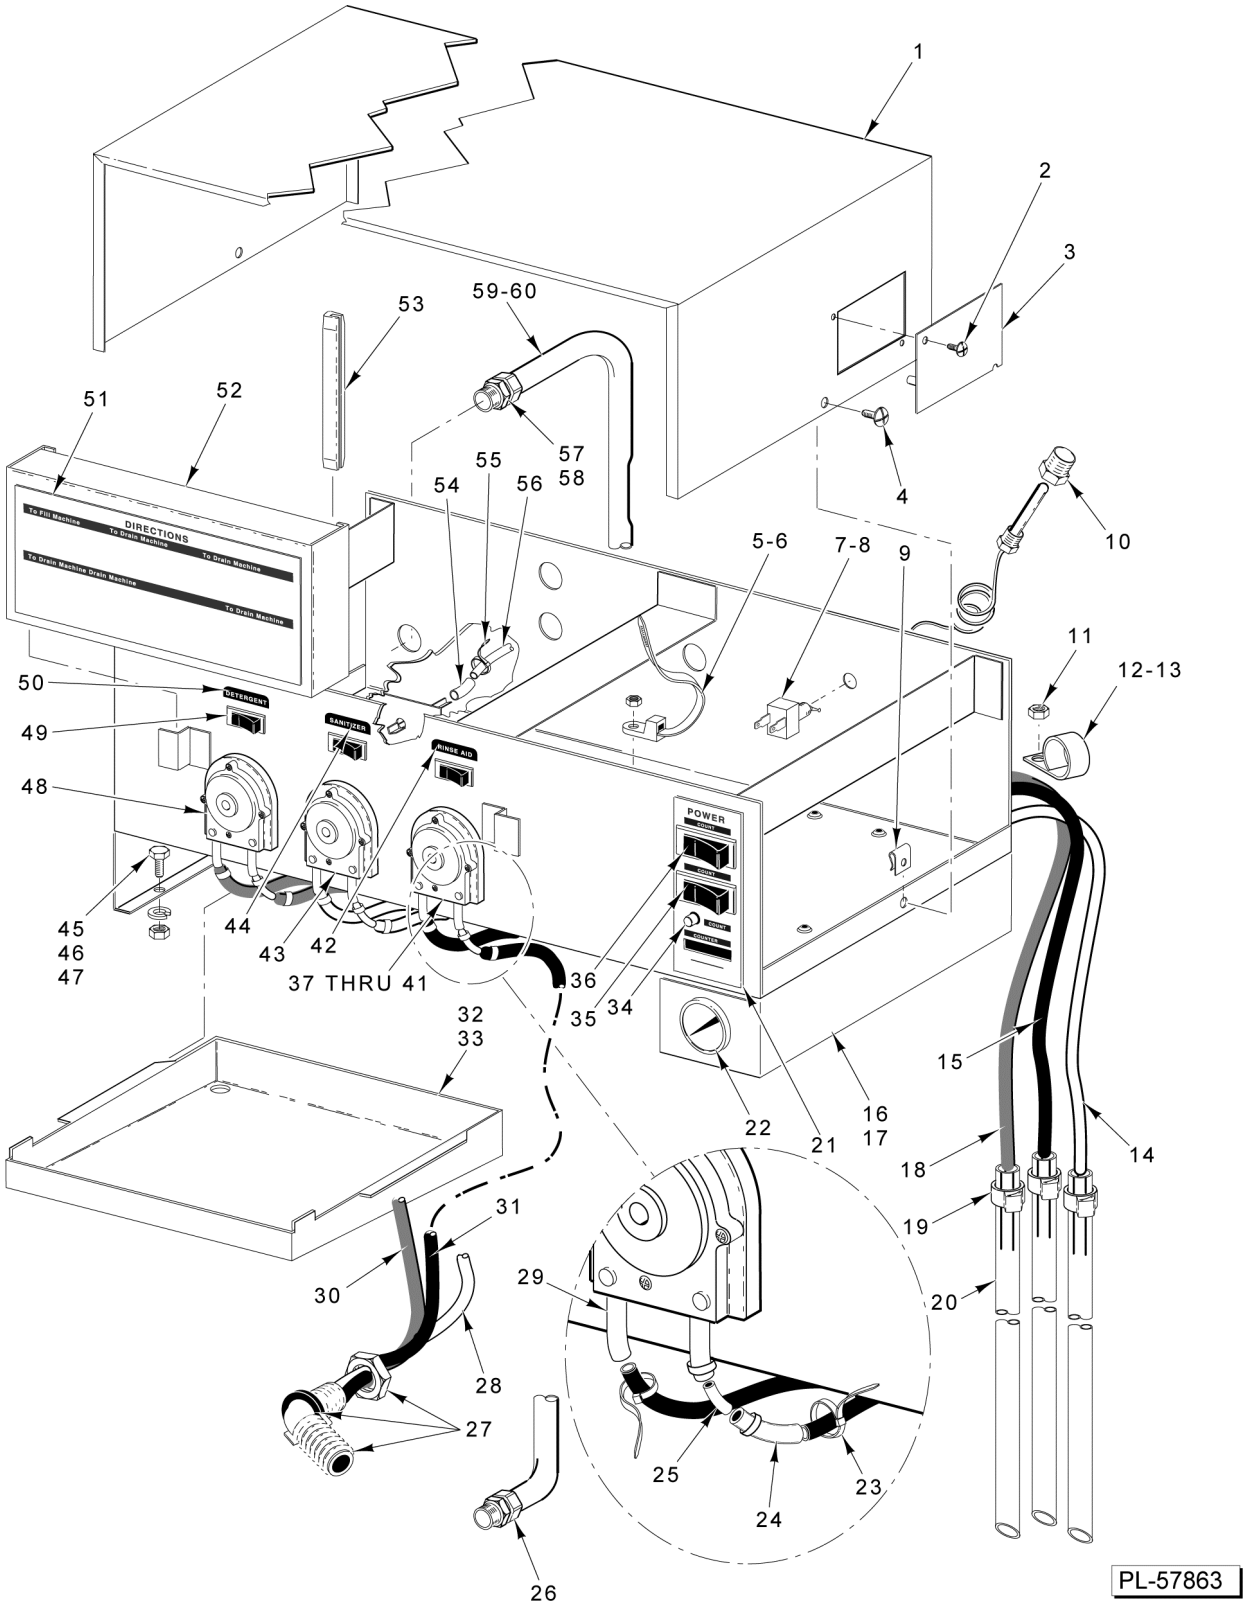

1
2
3
4
5-6
7-8
9
10
11
12-13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37 THRU 41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59-60
DIRECTIONS
To Fill Machine
To Drain Machine
To Drain Machine Drain Machine
To Drain Machine
DETERGENT
SANITIZER
RINSE AID
POWER
PL-57863

CONTROL BOX

CONTROL BOX

ILLUS. PL-57863	PART NO.	NAME OF PART	AMT.
1	00-436195	Cover - Control Box (Give Elec. Spec., Mach. Model, & Serial No.)	1
2	SD-032-31	Self-Tapping Screw 8-18 x 3/8 Phil Pan Hd., Type B	2
3	00-436196-00001	Cover - Access	1
4	SC-053-05	Mach. Screw 10-24 x 3/8 Slotted Truss Hd. (SST)	2
5	00-328678	Clamp - Tie	1
6	NS-031-15	Stop Nut 10-24 Hex (SST)	1
7	00-087711-180-1	Switch - Toggle (D.P.D.T.) (Keyway Must be Located on Top of Switch) (Delime)	1
8	00-186297	Label - DELIME/NORMAL	1
9	00-074348	Speed Nut 10-24	2
10	00-107218	Coupling - Thermometer Bulb	1
11	NS-031-15	Stop Nut 10-24 Hex (SST)	2
12	00-078752-00001	Clamp - Retaining (7/16 In.)	1
13	00-078752-00002	Retainer (3/4 In.)	1
14	00-185105-00004	Tube - Clear (Supply to Pump) (1/4 O.D. x 144 Lg.)	1
15	00-185105-00006	Tube - Blue (1/4 O.D. x 144 Lg.)	1
16	00-436194	Control Box (Mach. Built Prior to 11/9/04)	1
17	00-918009	Control Box (Mach. Built After 11/9/04)	1
18	00-185105-00002	Tube - Red (1/4 O.D. x 144 Lg.)	1
19	00-185111-00002	Clamp - Hose 7/16	3
20	00-185112	Stand Pipe 20-1/2 Lg	3
21	00-436201	Label - Controls	1
22	00-437041-00003	Thermometer (8 Ft.) (Final Rinse)	1
23	00-113703	Cable Tie (Pump Connections)	12
24	00-436293	Tube - Clear	3
25	00-185105-00015	Tube - Clear (1/4 O.D. x 1-1/2 Lg.)	3
26	FE-025-27	Coupling - Conduit (Use on Lower End Item 59)	1
27	00-185104	Elbow - Feeder Tubes (Incls. Nut & Gasket)	1
28	00-185105-00010	Tube - Clear (1/4 O.D. x 60) (Pump to Tank)	1
29	00-328252	Tubing - Chemical Pump (3/8 O.D.)	1
30	00-185105-00009	Tube - Red (Pump to Tank) (1/4 O.D. x 60 Lg.)	1
31	00-185105-00011	Tube - Blue (Pump to Tank) (1/4 O.D. x 60 Lg.)	1
32	00-436197	Tray - Drip (Mach. Built Prior to 11/9/04)	1
33	00-918084	Tray - Drip (Mach. Built After 11/9/04)	1
34	00-436288	Kit - Pilot Light	1
35	00-087711-193-2	NLA - Obsolete--Switch - Rocker (Fill/Drain)	1
36	00-087711-192-2	Switch - Rocker (Power On/Off)	1
37	00-329871	Pump - Chemical	3
38	SC-116-20	Mach. Screw 6-32 x 1/2 Slotted Bndg. Hd. (SST) (4 per pump)	4
39	SC-022-09	Mach. Screw 8-32 x 1/2 Slotted Flat Hd. (SST) (2 per pump)	2
40	SC-022-08	Mach. Screw 8-32 x 3/8 Slotted Flat Hd. (SST) (2 per pump)	2
41	00-185097-00002	Motor - Peristalic Pump (12 RPM)	1
42	00-436204	Label - Rinse Aid	1
43	00-185097-00001	Motor - Peristalic Pump (35 RPM)	1
44	00-436203	Label - Sanitizer	1
45	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd. (SST)	4
46	WL-006-23	Lockwasher 5/16 Helical (SST)	4
47	NS-015-11	Nut 5/16-18 Hex (SST)	4
48	00-185097-00001	Motor - Peristalic Pump (35 RPM)	1
49	00-087711-194-1	Switch - Rocker	3
50	00-436202	Label - Detergent	1
51	00-436199	Label - Directions	1
52	00-436198	Cover - Peristalic Pumps	1
53	00-436246	Guide - Pump Cover	2
54	00-436293	Tube - Clear (Drain Off Tube Behind Control Box)	1
55	00-113703	Cable Tie	5
56	00-185105-00010	Tube - Clear (1/4 O.D. x 60) (Peristalic Pump Drain Off to Drain Pan)	1
57	FE-022-84	Connector - Strain Relief	2
58	FE-008-10	1/2 Gasket Assy	2
59	00-893534	Cable - Motor Assy. (Mach. Built After 1/21/04 and Prior to 6/21/04)	1
60	00-893534-00002	Cable - Motor Assy. (Mach. Built After 6/21/04)	1

This part is not sold separately. It comes with Pump & Motor Assembly 00-947806 shown on the WASH MOTOR AND PUMP (Starting S/N 231144435) figure.

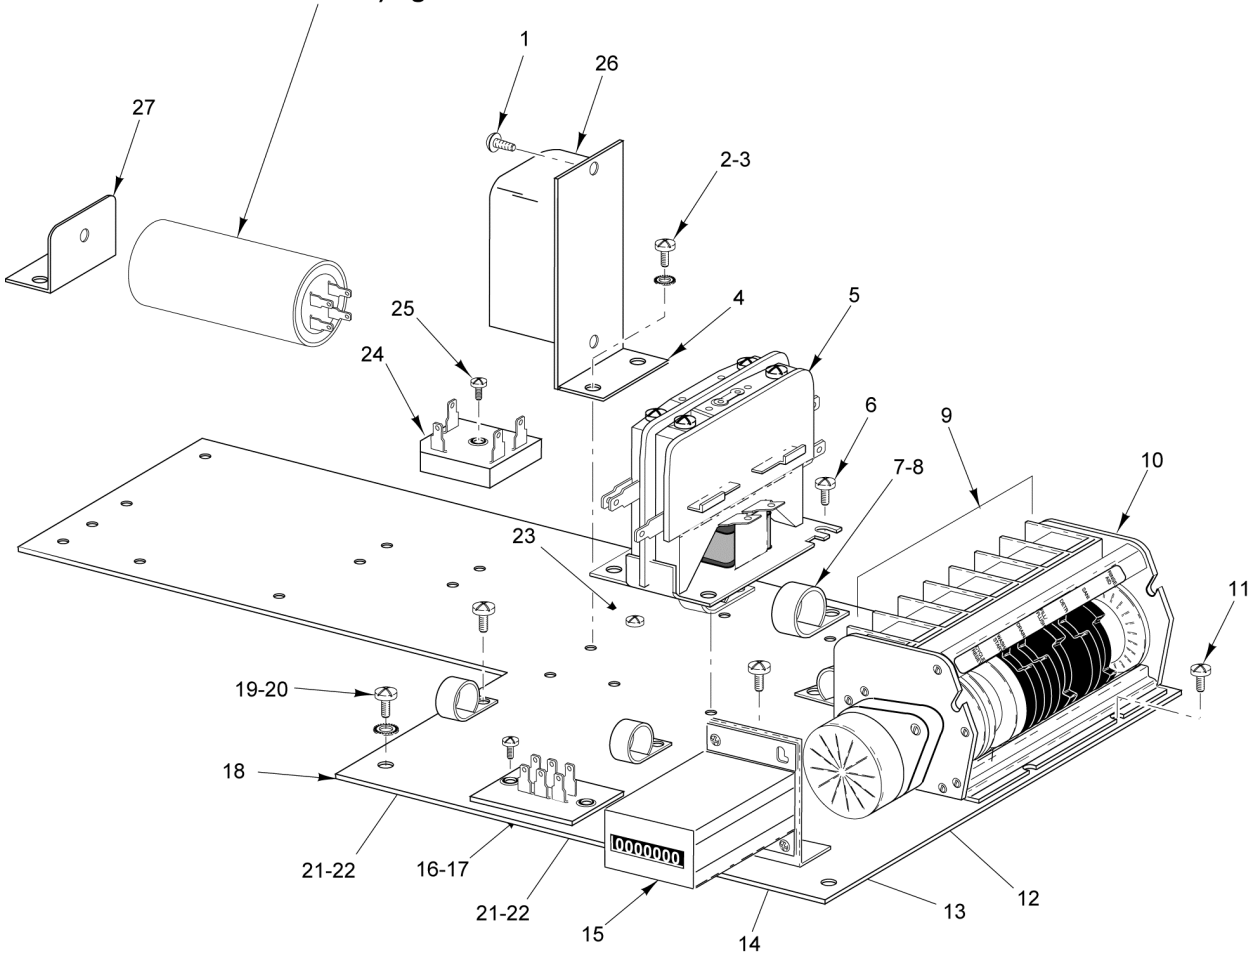

28	00-294695	Wrench - Spanner


PART NOT ILLUSTRATED

PL-57858

ELECTRICAL COMPONENTS

ELECTRICAL COMPONENTS

ILLUS. PL-57858	PART NO.	NAME OF PART	AMT.
1	SD-008-17	Self-Tapping Screw 6-20 x 3/8 Phil. Bndg. Hd., Type B	2
2	SD-008-18	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B	2
3	WL-014-05	Lockwasher #8 External Shakeproof (SST)	2
4	00-437102	Bracket - Relay Mounting	1
5	00-087713-086-1	Contactor - Single Pole	1
6	SD-008-25	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B	2
7	00-294677-00003	Clamp - Wire (3/4 I.D.)	3
8	SD-008-25	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B	3
9	00-087711-00218	Switch - Timer	1
10	00-436265	Timer - Cam (Incls. Item 9)	1
11	SD-008-18	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B	2
12	SD-008-25	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B	2
13	00-185178	Bracket	1
14	SD-008-17	Self-Tapping Screw 6-20 x 3/8 Phil. Bndg. Hd., Type B	2
15	00-185177	Counter & Bracket Assy. (Incls. Items 13, 14, & Terminals)	1
16	00-294325-00009	Terminal Board Assy	1
17	SD-008-17	Self-Tapping Screw 6-20 x 3/8 Phil. Bndg. Hd., Type B	2
18	00-918013	Plate - Base	1
19	SC-018-62	Mach. Screw 10-24 x 3/8 Phil. Pan Hd	5
20	WL-007-12	Lockwasher #10 External Shakeproof	2
21	00-294677-00003	Clamp - Wire (3/4 I.D.)	2
22	SD-008-25	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B	1
23	SD-008-25	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B	1
24	00-473660	Rectifier (Previous Construction) (Starting S/N 121021852)	1
25	SD-008-04	Self-Tapping Screw 10-16 x 5/8 Phil. Rd. Hd., Type B	1
26	00-087714-007-2	Relay (3.P.D.T.) (120 V.) (Rinse Feeder)	1
27	00-941300	Bracket - Capacitor Mounting	1
28	00-294695	Wrench - Spanner (Use to Adjust Item 10)	1

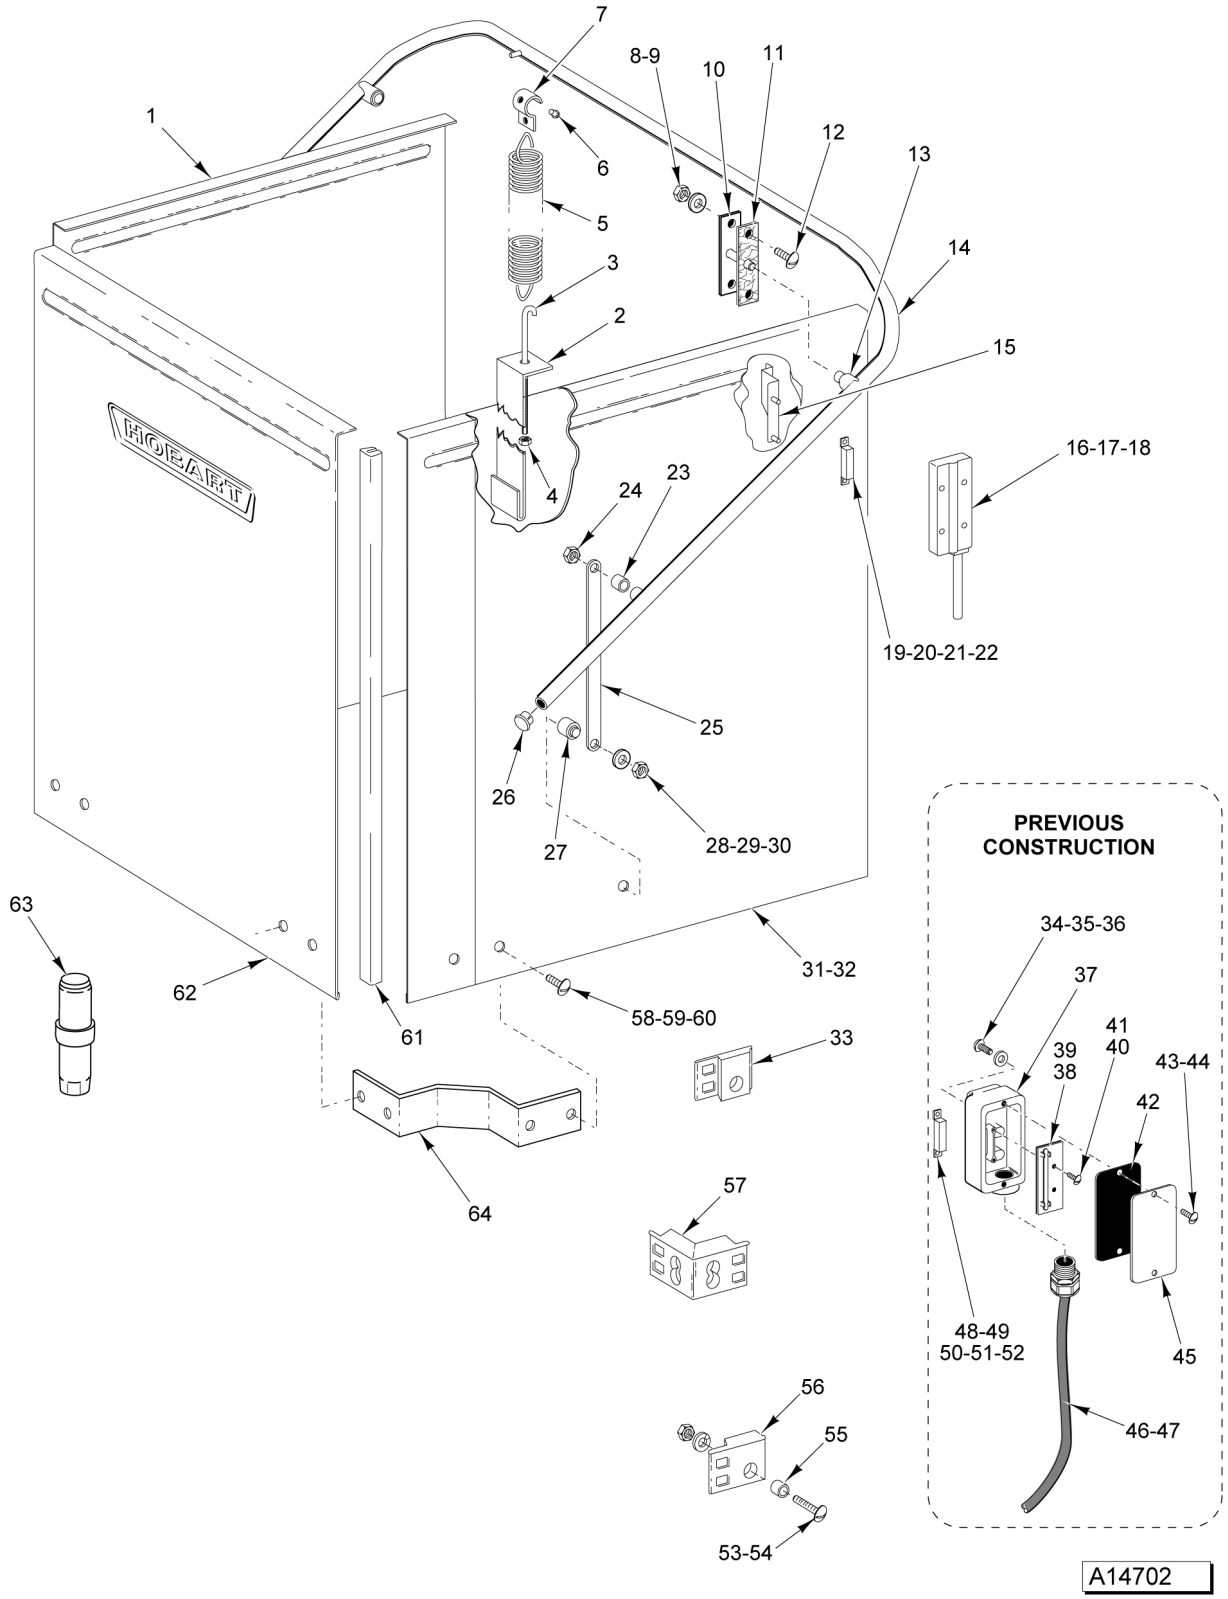

DOOR ASSEMBLY
(BEFORE S/N 231098782)


DOOR ASSEMBLY
(BEFORE S/N 231098782)

ILLUS. PL-AI4702	PART NO.	NAME OF PART	AMT.
1	00-893926	Door Assy. (LH)	1
2	00-185044	Bracket - Spring	1
3	00-186334-00002	Hook - Spring	1
4	NS-15-11	Full Nut - 5/16"-18 Hex Fin	4
5	00-119079-00002	Spring - Counterbalance	1
6	00-119055	Button - Bearing	1
7	00-079008	Hanger - Spring	1
8	NS-015-11	Nut 5/16-18 Hex (SST)	AR
9	WL-006-23	Lockwasher 5/16 Helical (SST)	AR
10	00-119017	Bearing Bracket & Pin Assy	2
11	00-473432	Gasket - Door Lift	2
12	SC-41-10	Cap Screw - 5/16"-18 x 5/8" Hex Hd	AR
13	00-119104	Bushing - Door Lift Pin	2
14	00-475200-00001	Door Lift Assy	1
15	00-748056	Bracket - Magnet	1
16	00-918320-00003	Switch - Reed (Interlock)	1
17	NS-031-50	Stop Nut 6-32 Hex (SST)	4
18	FE-022-84	Connector - Strain Relief	AR
19	FE-024-88	Lock Nut 1/2 Electrical	AR
20	00-290159	Retainer - Magnet	1
21	00-290160	Magnet	1
22	NS-047-82	Stop Nut 1/4-20 Hex (SST)	2
23	00-074068	Spacer - Door Link	2
24	NS-032-35	Stop Nut 5/16-18 Flexloc	2
25	00-119011	Link - Door	2
26	00-474831	Plug - Handle	2
27	00-119046	Pin - Door Lift	2
28	NS-025-09	Crown Nut 5/16-18 (SST)	2
29	WS-005-32	Washer (SST)	2
30	SC-041-17	Cap Screw 5/16-18 x 1-1/2 Hex Hd. (SST)	2
31	00-436287	Door Assy. (RH) (Before S/N 231067450)	1
32	00-893927	Door Assy. (RH) (Starting S/N 231067450)	1
33	00-119082	Insert - Tank Corner (Left Rear)	1
34	SC-066-06	Mach. Screw 10-24 x 1/2 Phil. Truss Hd. (SST)	1
35	WS-029-79	Washer (SST)	2
36	WL-006-07	Lockwasher #10 Helical (SST)	2
37	00-436069	Housing - Cycle Switch	1
38	00-436071	Retainer - Switch Weldment (Switch Included)	1
39	00-811860	Barrier - Door Interlock	1
40	SC-115-26	Mach. Screw 6-32 x 5/16 Pan Hd	2
41	WL-006-42	Lockwasher #6 Medium	2
42	00-436073	Gasket - Housing	1
43	SC-093-03	Mach. Screw 8-32 x 3/8 Slotted Pan Hd. (SST)	2
44	WL-006-02	Lockwasher #8 Helical (SST)	2
45	00-436072	Cover - Housing	1
46	00-294514-00003	Cable - Door Interlock Switch	1
47	FE-008-10	1/2 Gasket Assy	1
48	00-435950	Retainer - Magnet	1
49	00-436091	Magnet	1
50	SC-115-26	Mach. Screw 6-32 x 5/16 Pan Hd	2
51	WS-023-01	Washer (SST)	2
52	NS-031-50	Stop Nut 6-32 Hex (SST)	2
53	SC-041-15	Cap Screw 5/16-18 x 1-1/4 Hex Hd. (SST)	6
54	SC-053-17	Mach. Screw 5/16-18 x 3/4 Truss Hd. (SST)	2
55	00-119047	Spacer - Tank & Chamber	6

DOOR ASSEMBLY
(BEFORE S/N 231098782)

ILLUS. PL-AI4702	PART NO.	NAME OF PART	AMT.
56	00-119083	Insert - Tank Corner (Right Rear)	1
57	00-119081	Insert - Tank Corner	1
58	NS-015-11	Nut 5/16-18 Hex (SST)	AR
59	WL-006-23	Lockwasher 5/16 Helical (SST)	AR
60	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd. (SST)	AR
61	00-112378-00023	Guide - Door	6
62	00-893925	Door Assy. (Front)	1
63	00-288946-00002	Foot - Adjustable (1-5/8) (SST)	4
64	00-185057	Bracket - Door Lift	1


NOTES

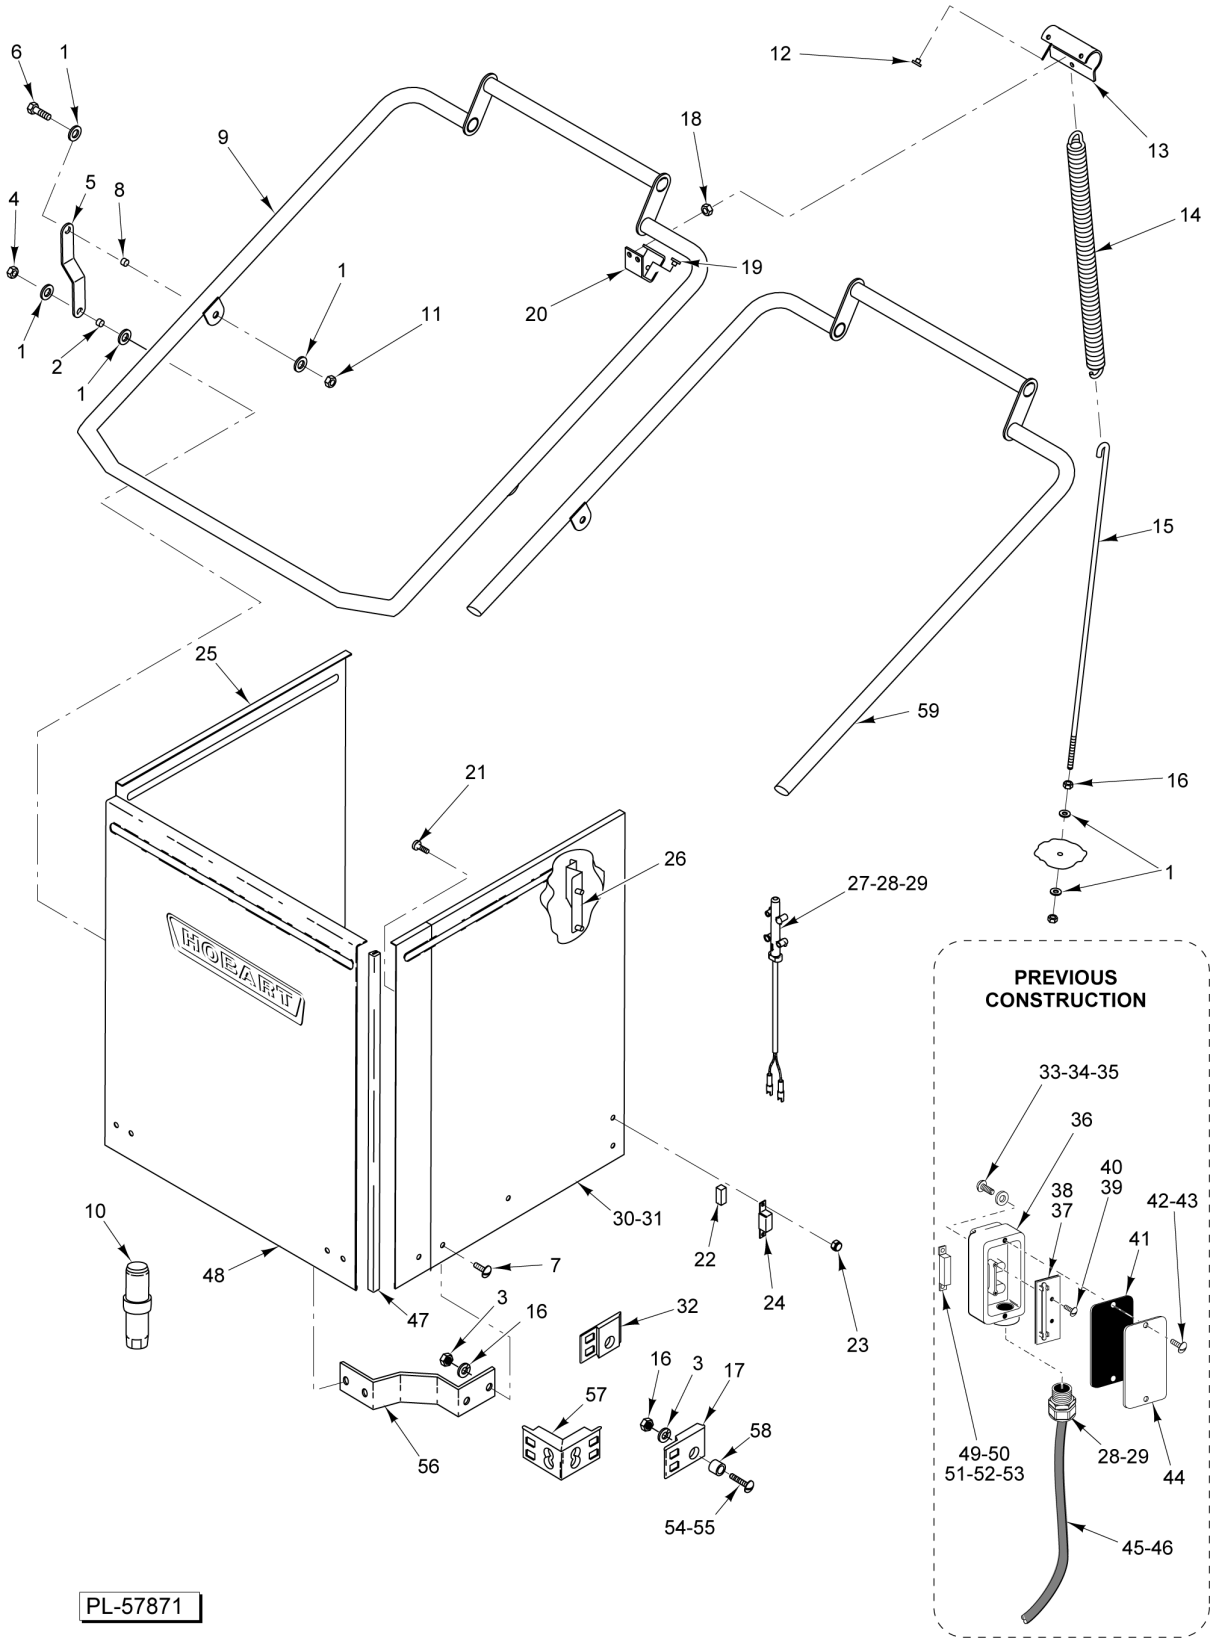

DOOR ASSEMBLY
(STARTING S/N 231098782)

DOOR ASSEMBLY
(STARTING S/N 231098782)


ILLUS. PL-57871	PART NO.	NAME OF PART	AMT.
1	WS-017-01	Washer 0.328 x 0.875 x 0.062 (SST)	AR
2	00-893014-00002	Spacer - Door Link (Lower)	2
3	WL-006-23	Lockwasher 5/16 Helical (SST)	AR
4	NS-036-19	Stop Nut 5/16-18 Hex (SST)	2
5	00-893252	Link - Door Handle	2
6	SC-041-12	Cap Screw 5/16-18 x 7/8 Hex Hd. (SST)	2
7	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd. (SST)	AR
8	00-893014-00001	Spacer Door Link (Upper)	2
9	00-893051	Handle - Weldment (Before S/N 231018016)	1
10	00-288946-00002	Foot - Adjustable (1-5/8) (SST)	4
11	NS-036-19	Stop Nut 5/16-18 Hex (SST)	2
12	00-119055	Button - Bearing	2
13	00-893011	Hanger - Counterbalance (Spring)	1
14	00-893012	Spring - Extension (Door)	1
15	00-893013	Hook - Spring	1
16	NS-015-11	Nut 5/16-18 Hex (SST)	AR
17	00-119083	Insert - Tank Corner (Right Rear)	1
18	NS-036-19	Stop Nut 5/16-18 Hex (SST)	2
19	00-119055	Button - Bearing	4
20	00-893224	Support - Handle	2
21	SC-066-01	Mach. Screw 6-32 x 1/4 Phil. Truss Hd	2
22	00-111941	Magnet	1
23	NS-031-50	Stop Nut 6-32 Hex (SST)	2
24	00-893111	Magnet - Mount	1
25	00-893926	Door Assy. (LH)	1
26	00-748056	Bracket - Magnet	1
27	00-918320-00003	Switch - Reed (Interlock)	1
28	NS-031-50	Stop Nut 6-32 Hex (SST)	AR
29	FE-022-84	Connector - Strain Relief	AR
30	00-436287	Door Assy. (RH) (Before S/N 231067450)	1
31	00-893927	Door Assy. (RH) (After S/N 231067450)	1
32	00-119082	Insert - Tank Corner (Left Rear)	1
33	SC-066-06	Mach. Screw 10-24 x 1/2 Phil. Truss Hd. (SST)	1
34	WS-029-79	Washer (SST)	2
35	WL-006-07	Lockwasher #10 Helical (SST)	2
36	00-436069	Housing - Cycle Switch	1
37	00-436071	Retainer - Switch Weldment (Switch Included)	1
38	00-811860	Barrier - Door Interlock	1
39	SC-115-26	Mach. Screw 6-32 x 5/16 Pan Hd	2
40	WL-006-42	Lockwasher #6 Medium	2
41	00-436073	Gasket - Housing	1
42	SC-093-03	Mach. Screw 8-32 x 3/8 Slotted Pan Hd. (SST)	2
43	WL-006-02	Lockwasher #8 Helical (SST)	2
44	00-436072	Cover - Housing	1
45	00-294514-00003	Cable - Door Interlock Switch	1
46	FE-008-10	1/2 Gasket Assy	1
47	00-112378-00023	Guide - Door	6
48	00-893925	Door Assy. (Front)	1
49	00-435950	Retainer - Magnet	1
50	00-436091	Magnet	1
51	SC-115-26	Mach. Screw 6-32 x 5/16 Pan Hd	2
52	WS-023-01	Washer (SST)	2
53	NS-031-50	Stop Nut 6-32 Hex (SST)	2
54	SC-041-15	Cap Screw 5/16-18 x 1-1/4 Hex Hd. (SST)	6
55	SC-053-17	Mach. Screw 5/16-18 x 3/4 Truss Hd. (SST)	2
56	00-185057	Bracket - Door Lift	2
57	00-119081	Insert - Tank Corner	2
58	00-119047	Spacer - Tank & Chamber	6
59	00-562700	Handle - Weldment (EWLT1) (Starting S/N 231018016)	1

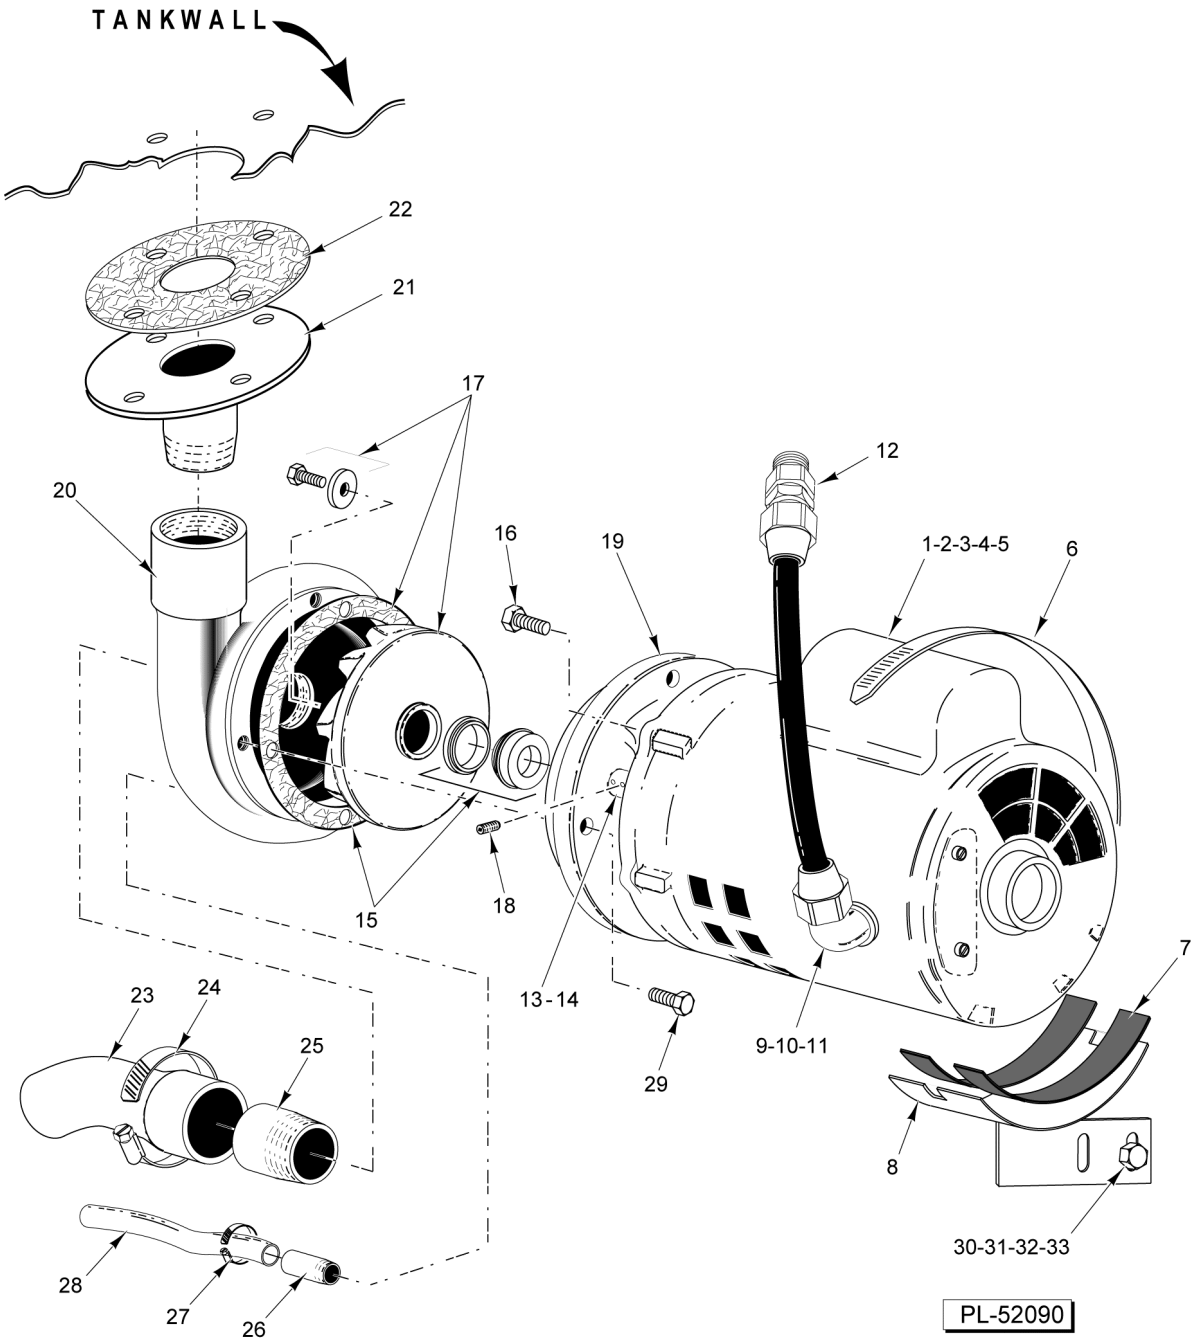

WASH MOTOR AND PUMP
(BEFORE S/N 231076369)

WASH MOTOR AND PUMP
(BEFORE S/N 231076369)


ILLUS. PL-52090	PART NO.	NAME OF PART	AMT.
1	00-436216	Pump & Motor Assy. (Includes items 21, 25, and 26)	1
2	00-186894-00001	Pump & Motor Subassy. (Does NOT Include Items 21, 25, and 26)	1
3	00-329919-00001	NLA - Obsolete--Pump & Motor Assy. (380 V., 50 Hz., 3 Ph.)	1
4	00-329920-00001	NLA - Obsolete--Pump & Motor Assy. (220 V., 50 Hz., 1 Ph.)	1
5	00-436292-00001	Motor - Service (120 V., 60 Hz., 1 Ph.)	1
6	00-292171	Clamp - Motor Support	1
7	00-436295	Foam Tape	2
8	00-436276	NLA - Obsolete--Support - Motor (Incls. Item 7)	1
9	FE-024-65	Connector 90 Deg. (Non-Metallic) Sealtite (1/2 Male Thd. x 1/2 Flex. Cnd.)	1
10	FE-008-10	1/2 Gasket Assy	1
11	00-436913-00023	Conduit - Liquidtite 1/2 x 24 (Connects Motor to Control Box Cnd.)	1
12	FE-024-57	Connector Straight (Non-Metallic) Sealtite (1/2 Male Thd. x 1/2 Flex. Cnd.)	1
13	00-436291-00001	Flinger (Not Shown)	1
14	00-436291-00003	Adapter - Shaft	1
15	00-436289	Seal Kit (Service) (Incls. Casing Gasket)	1
16	00-436291-00007	NLA - Obsolete--Bolt - Hex Hd	4
17	00-436290	Impeller Kit (Service) (Incls. Casing Gasket, Retaining Bolt, & Washer)	1
18	00-436291-00006	Set Screw	2
19	00-436291-00002	Support Head	1
20	00-436291-00004	Casing - Pump	1
21	00-436274	Flange Assy. - Pump Discharge	1
22	00-436270	Gasket	1
23	00-436233	Hose - Pump Intake	1
24	00-534651	Clamp - Hose #32	2
25	00-436153	Adapter - Pump	1
26	FP-087-33	Pipe 1/8 x 1-1/4 (STOE)	1
27	00-526614	Clamp - Hose	2
28	00-436294	Tube - Clear	1
29	00-436291-00005	Cap Screw	4
30	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd. (SST)	2
31	WS-029-05	Washer 0.328 x 0.750 x 0.062 (SST)	2
32	WL-006-23	Lockwasher 5/16 Helical (SST)	2
33	NS-015-11	Nut 5/16-18 Hex (SST)	2

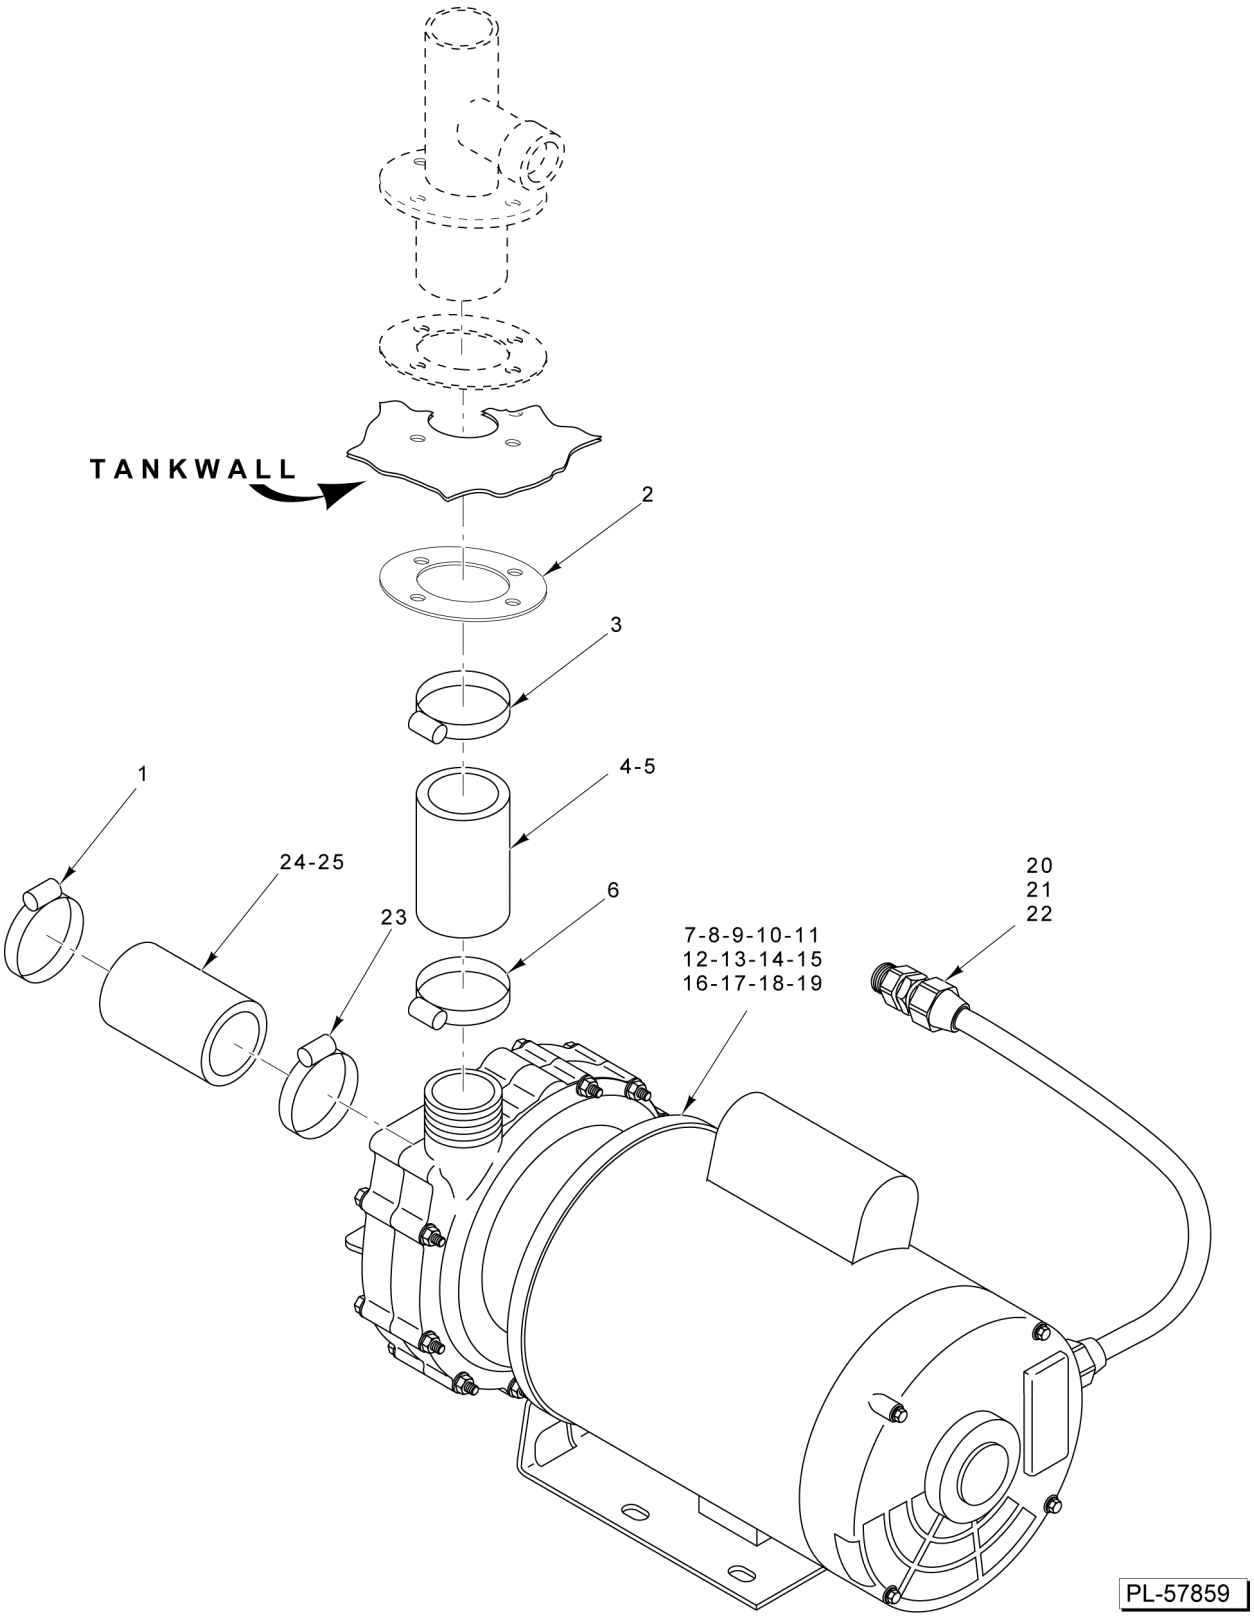

WASH MOTOR AND PUMP
(S/N 231076369 TO 231144434)

WASH MOTOR AND PUMP
(S/N 231076369 TO 231144434)


ILLUS. PL-57859	PART NO.	NAME OF PART	AMT.
1	00-538412	Clamp - Hose	1
2	00-436273-00002	Flange - Support	1
3	00-538412	Clamp - Hose	1
4	00-328607	Hose - Pump Outlet	1
5	00-328607-00002	Hose - Pump Outlet	1
6	00-538412	Clamp - Hose	1
7	00-474837-00001	Pump & Motor Assy. (115/230 V., 60 Hz.) (Incls. All Pump & Motor Parts)	1
8	00-476734-00001	Kit - Motor Pump (50/60 Hz.)	1
9	00-476734-00002	Kit - Casting Pump	1
10	00-476734-00003	Kit - Cover Pump	1
11	00-476734-00004	Kit - Shaft Seal	1
12	00-476734-00005	Kit - Impeller (60 Hz.)	1
13	00-476734-00006	Kit - Plug	1
14	00-476734-00007	Kit - Shim	1
15	00-476734-00008	Kit - Impeller (50 Hz.)	1
16	00-476734-00009	Flinger - Motor Shaft	1
17	00-476734-00010	Kit - Motor Pump (50 Hz., 1 Ph.)	1
18	00-476734-00011	Kit - Impeller (60 Hz., 3 Ph.)	1
19	00-476734-00012	Kit - Impeller (50 Hz., 3 Ph.)	1
20	00-893534-00002	Cable - Motor Assy	1
21	FE-022-84	Connector - Strain Relief	2
22	FE-024-88	Lock Nut 1/2 Electrical	1
23	00-538412	Clamp - Hose	1
24	00-328607	Hose - Pump Outlet	1
25	00-328607-00002	Hose - Pump Outlet	1

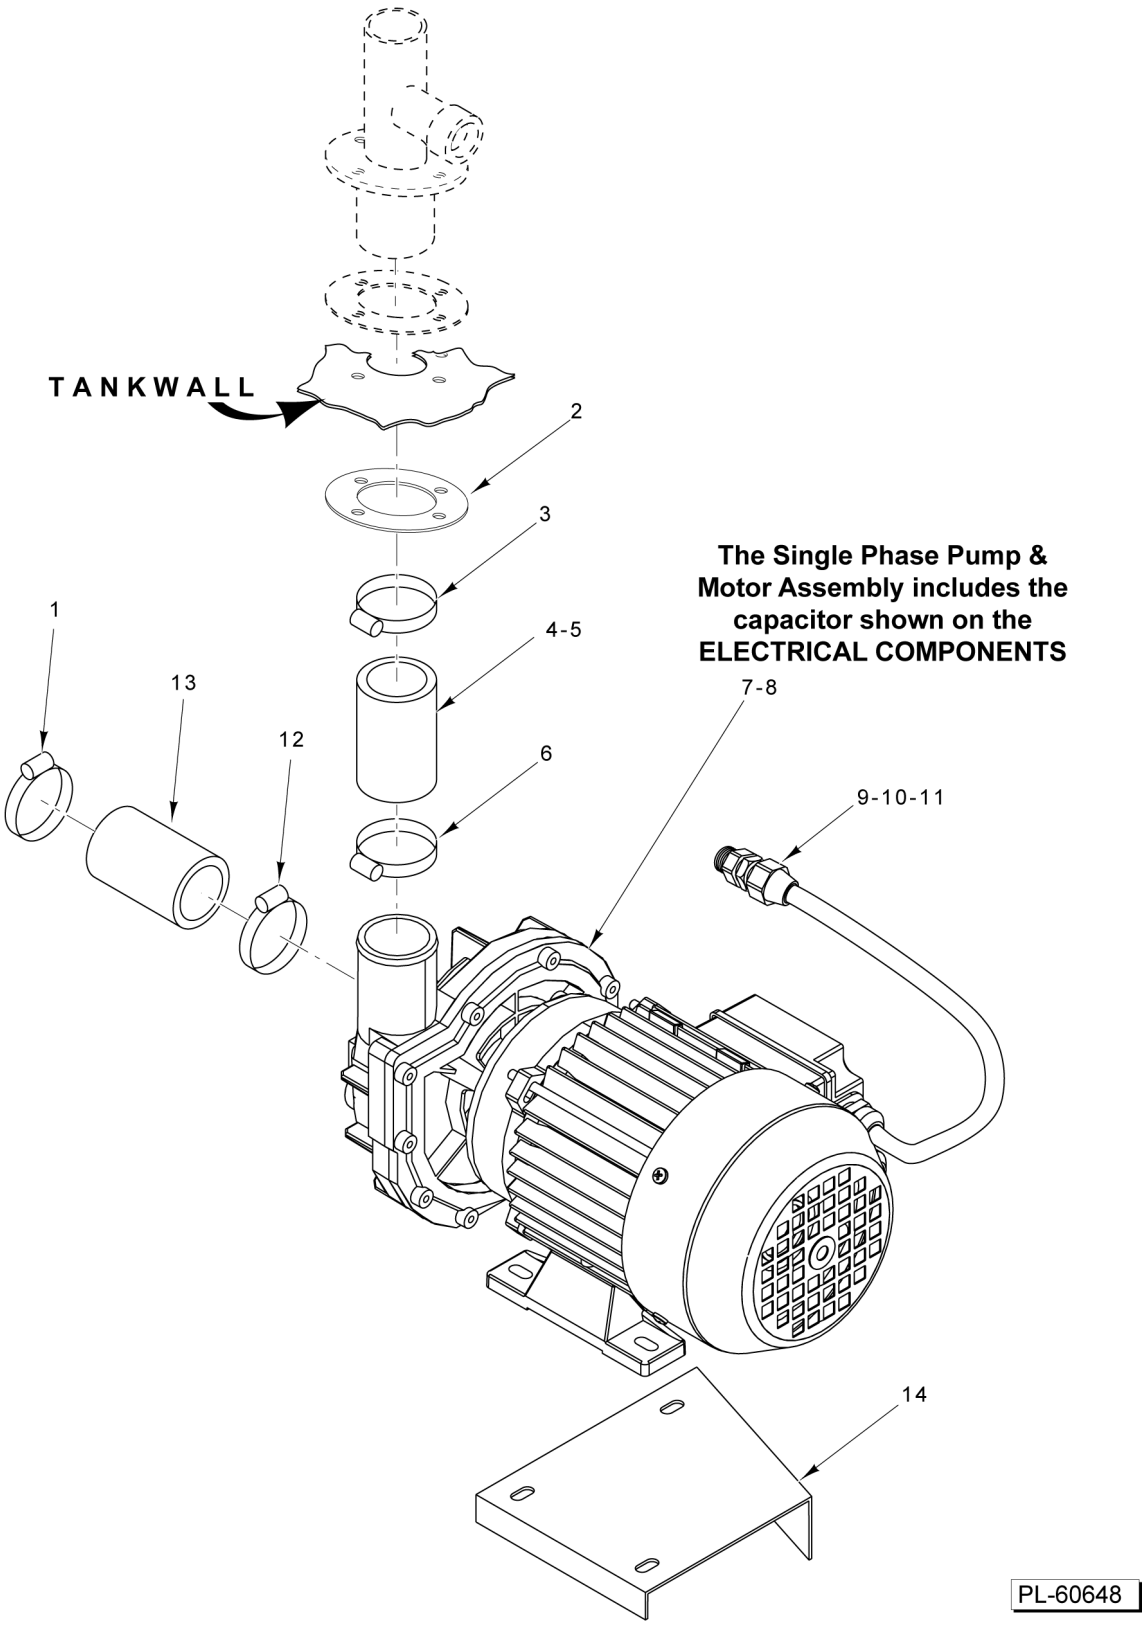

WASH MOTOR AND PUMP
(STARTING S/N 231144435)

WASH MOTOR AND PUMP
(STARTING S/N 231144435)


ILLUS. PL-60648	PART NO.	NAME OF PART	AMT.
1	00-538412	Clamp - Hose	1
2	00-436273-00002	Flange - Support	1
3	00-538412	Clamp - Hose	1
4	00-328607	Hose - Pump Outlet	1
5	00-328607-00002	Hose - Pump Outlet	1
6	00-538412	Clamp - Hose	1
7	00-947806	Pump & Motor Assy. (115/230 V., 50/60 Hz., 1 Ph.) (Incls. Capacitor)	1
8	00-947806-00002	Pump & Motor Assy. (220-240/380-415 V., 50 Hz., 3 Ph.)	1
9	00-948126	Cable - Motor Assy. (Incls. Items 10 & 11)	1
10	FE-022-84	Connector - Strain Relief	2
11	FE-024-88	Lock Nut 1/2 Electrical	1
12	00-538412	Clamp - Hose	1
13	00-948384	Hose - Pump Inlet	1
14	00-948420	Bracket - Motor Mount	1

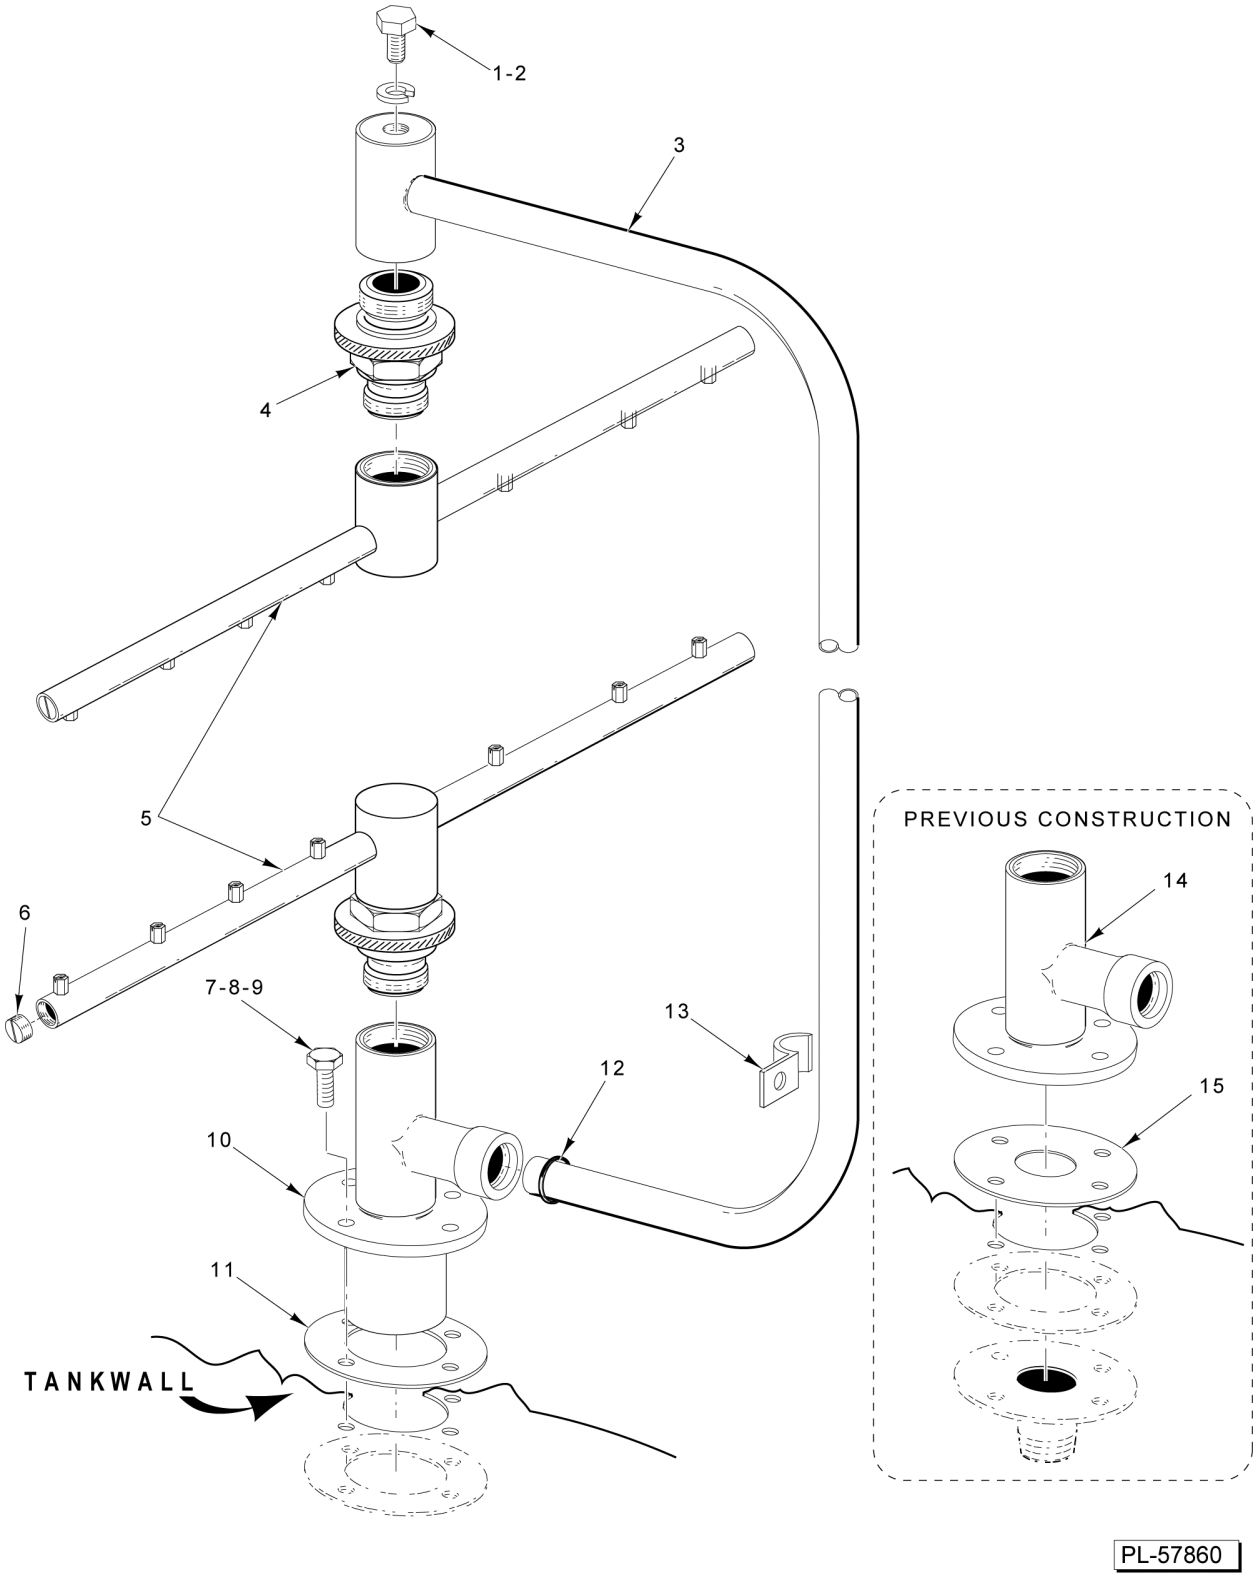

INSIDE WASH AND RINSE PIPING

INSIDE WASH AND RINSE PIPING

ILLUS. PL-57860	PART NO.	NAME OF PART	AMT.
1	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd. (SST)	1
2	WL-6-23	Lockwasher 5/16 Medium SST	1
3	00-436215	Tube Assy. - Riser	1
4	00-436210-00003	Bearing Assy. - Wash Arm	2
5	00-436210-00001	Wash Arm Assy. (Incls. Item 6)	2
6	00-474252	Cap - End	4
7	SC-041-13	Cap Screw 5/16-18 x 1 Hex Hd. (SST)	4
8	WS-017-01	Washer 0.328 x 0.875 x 0.062 (SST)	4
9	NS-036-19	Stop Nut 5/16-18 Hex (SST)	4
10	00-893793	Manifold - Lower Wash Arm (Current Construction)	1
11	00-436270-00002	Gasket	1
12	00-067500-00010	O-Ring	1
13	00-436217	Clamp - Riser	1
14	00-436214	Manifold - Lower Wash Arm (Previous Construction)	1
15	00-436270	Gasket (Previous Construction)	1

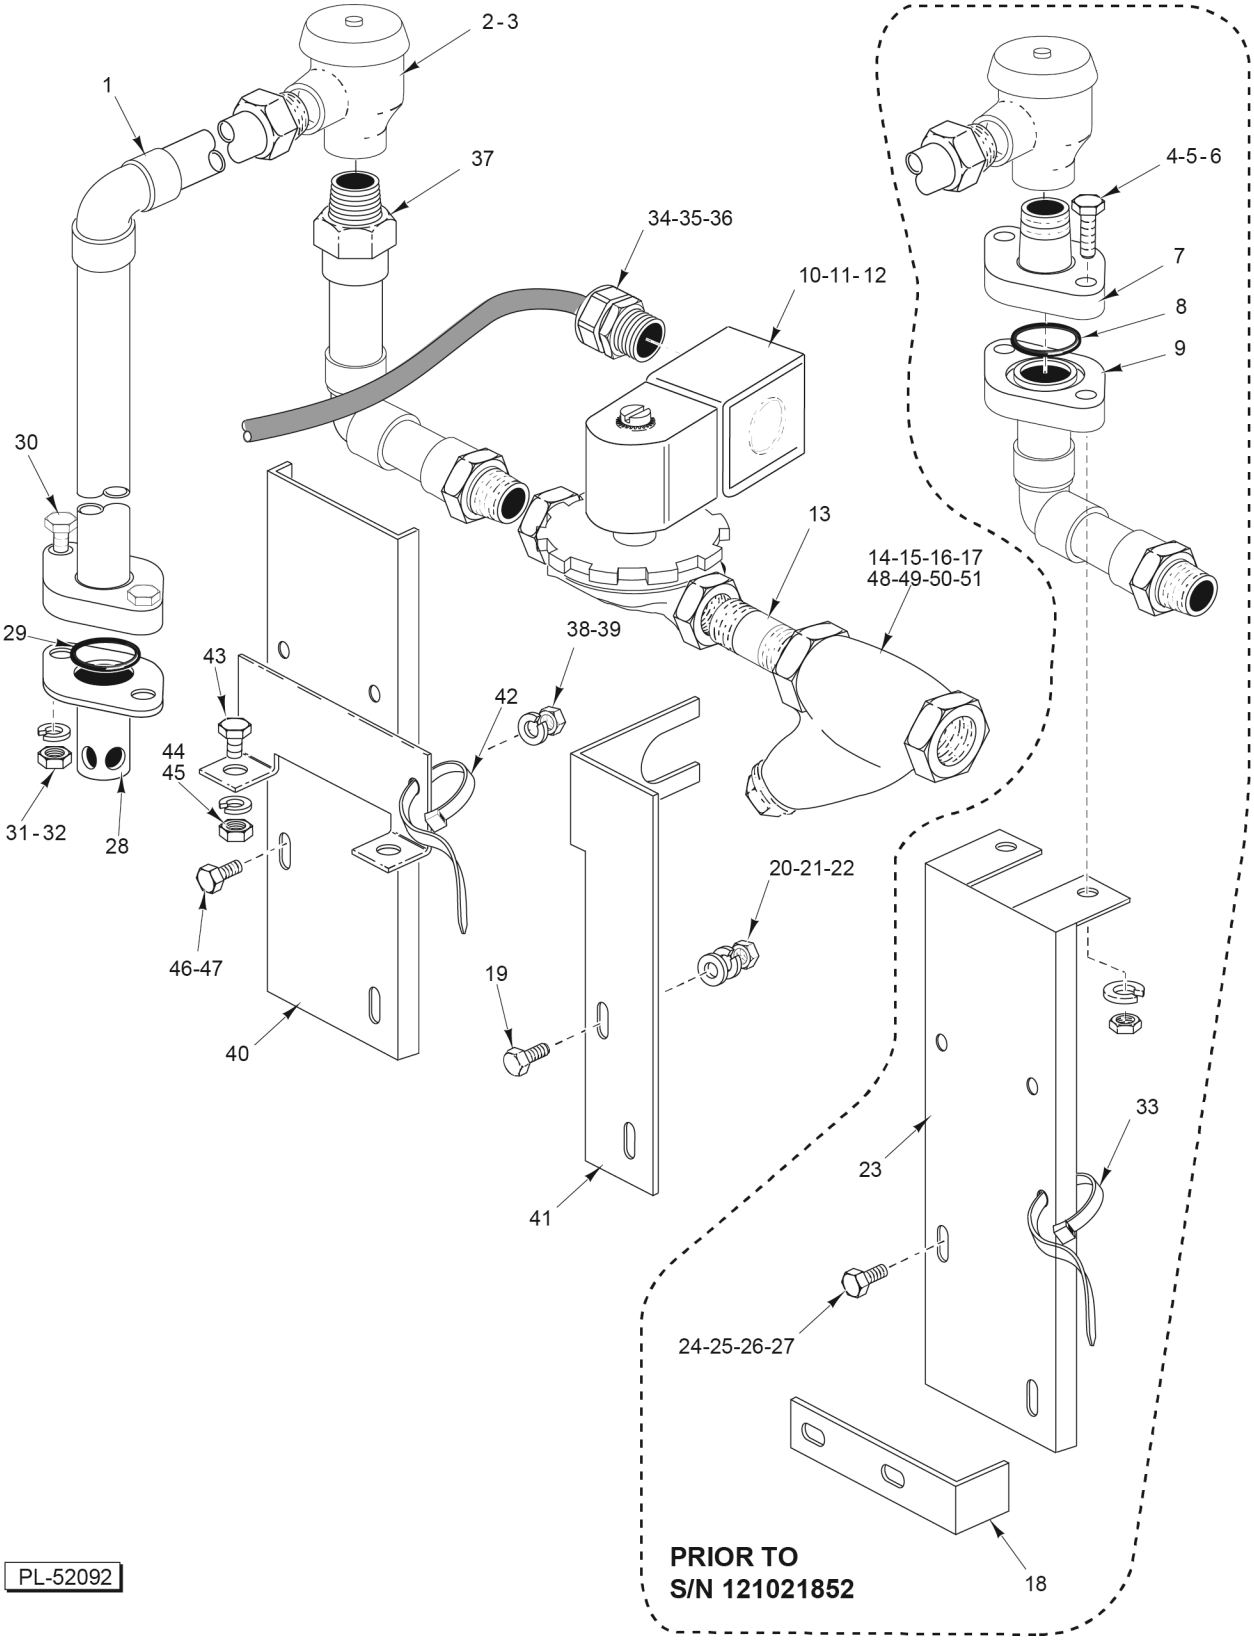


FILL PIPING
(PREVIOUS CONSTRUCTION)

FILL PIPING
(PREVIOUS CONSTRUCTION)

ILLUS. PL-52092	PART NO.	NAME OF PART	AMT.
1	00-293850	Tube & Flange Assy	1
2	00-277112	Vacuum Breaker (3/4)	1
3	00-118270	Service Kit - Vacuum Breaker (Float & Seal Assy.)	1
4	NS-015-11	Nut 5/16-18 Hex (SST)	2
5	SC-041-16	Cap Screw 5/16-18 x 1-3/8 Hex Hd. (SST)	2
6	WL-006-23	Lockwasher 5/16 Helical (SST)	2
7	00-270751	Flange & Nipple Assy. (Prior to S/N 121021852)	1
8	00-067500-00012	O-Ring (Prior to S/N 121021852)	1
9	00-293849	Flange & Tube Assy. (Prior to S/N 121021852)	1
10	00-271002-00001	Valve - Solenoid 3/4 (110-120 V.) (Incls. Items 11 & 12)	1
11	00-271839-00001	Coil - Solenoid Valve	1
12	00-271838	Service Kit - 3/4 Solenoid Valve	1
13	FP-041-53	Pipe 3/4 x 1-3/4 TBE (Brass)	1
*14	00-186922	Strainer - Line (3/4 In.) (Brass) (Kitz) (Incls. Items 15, 16, & 17) (Alternate to Item 48)	1
15	00-186923	Plug - Branch	1
16	00-186924	Gasket - Branch Plug	1
17	00-186925	Screen - Line Strainer	1
18	00-270764	Support - Fill Piping (Prior to S/N 121021852)	1
19	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	2
20	WS-017-06	Washer (SST)	2
21	WL-006-17	Lockwasher 1/4 Helical (SST)	2
22	NS-015-01	Nut 1/4-20 Hex (SST)	2
23	00-293572	Bracket - Fill Piping (Prior to S/N 121021852)	1
24	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	2
25	WS-017-06	Washer (SST)	2
26	WL-006-17	Lockwasher 1/4 Helical (SST)	2
27	NS-015-01	Nut 1/4-20 Hex (SST)	2
28	00-474221	Inside Fill Piping Assy	1
29	00-067500-00012	O-Ring	1
30	SC-041-13	Cap Screw 5/16-18 x 1 Hex Hd. (SST)	2
31	WL-006-23	Lockwasher 5/16 Helical (SST)	2
32	NS-015-11	Nut 5/16-18 Hex (SST)	2
33	00-113703	Cable Tie	1
34	FE-022-84	Connector - Strain Relief	2
35	FE-008-10	1/2 Gasket Assy	2
36	FE-024-88	Lock Nut 1/2 Electrical	2
37	00-474743	Piping - Final Rinse (Starting S/N 121021852)	1
38	WL-006-17	Lockwasher 1/4 Helical (SST)	2
39	NS-015-01	Nut 1/4-20 Hex (SST)	2
40	00-474736	Bracket - Solenoid Box (Starting S/N 121021852)	1
41	00-474739	Support - Fill Pipe (Starting S/N 121021852)	1
42	00-113703	Cable Tie	1
43	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	1
44	WL-006-17	Lockwasher 1/4 Helical (SST)	1
45	NS-015-01	Nut 1/4-20 Hex (SST)	1
46	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	2
47	WS-017-06	Washer (SST)	2
*48	00-186922	Strainer - Line (3/4 In.) (Brass) (Apollo / Conbraco) (Incls. Items 49, 50, & 51) (Alternate to Item 14)	1
49	00-749802-00001	Cap	1
50	00-749802-00002	Gasket	1
51	00-749802-00003	Screen (80 Mesh)	1

* Kitz line strainer is approx. 1/4" shorter than Apollo / Conbraco.

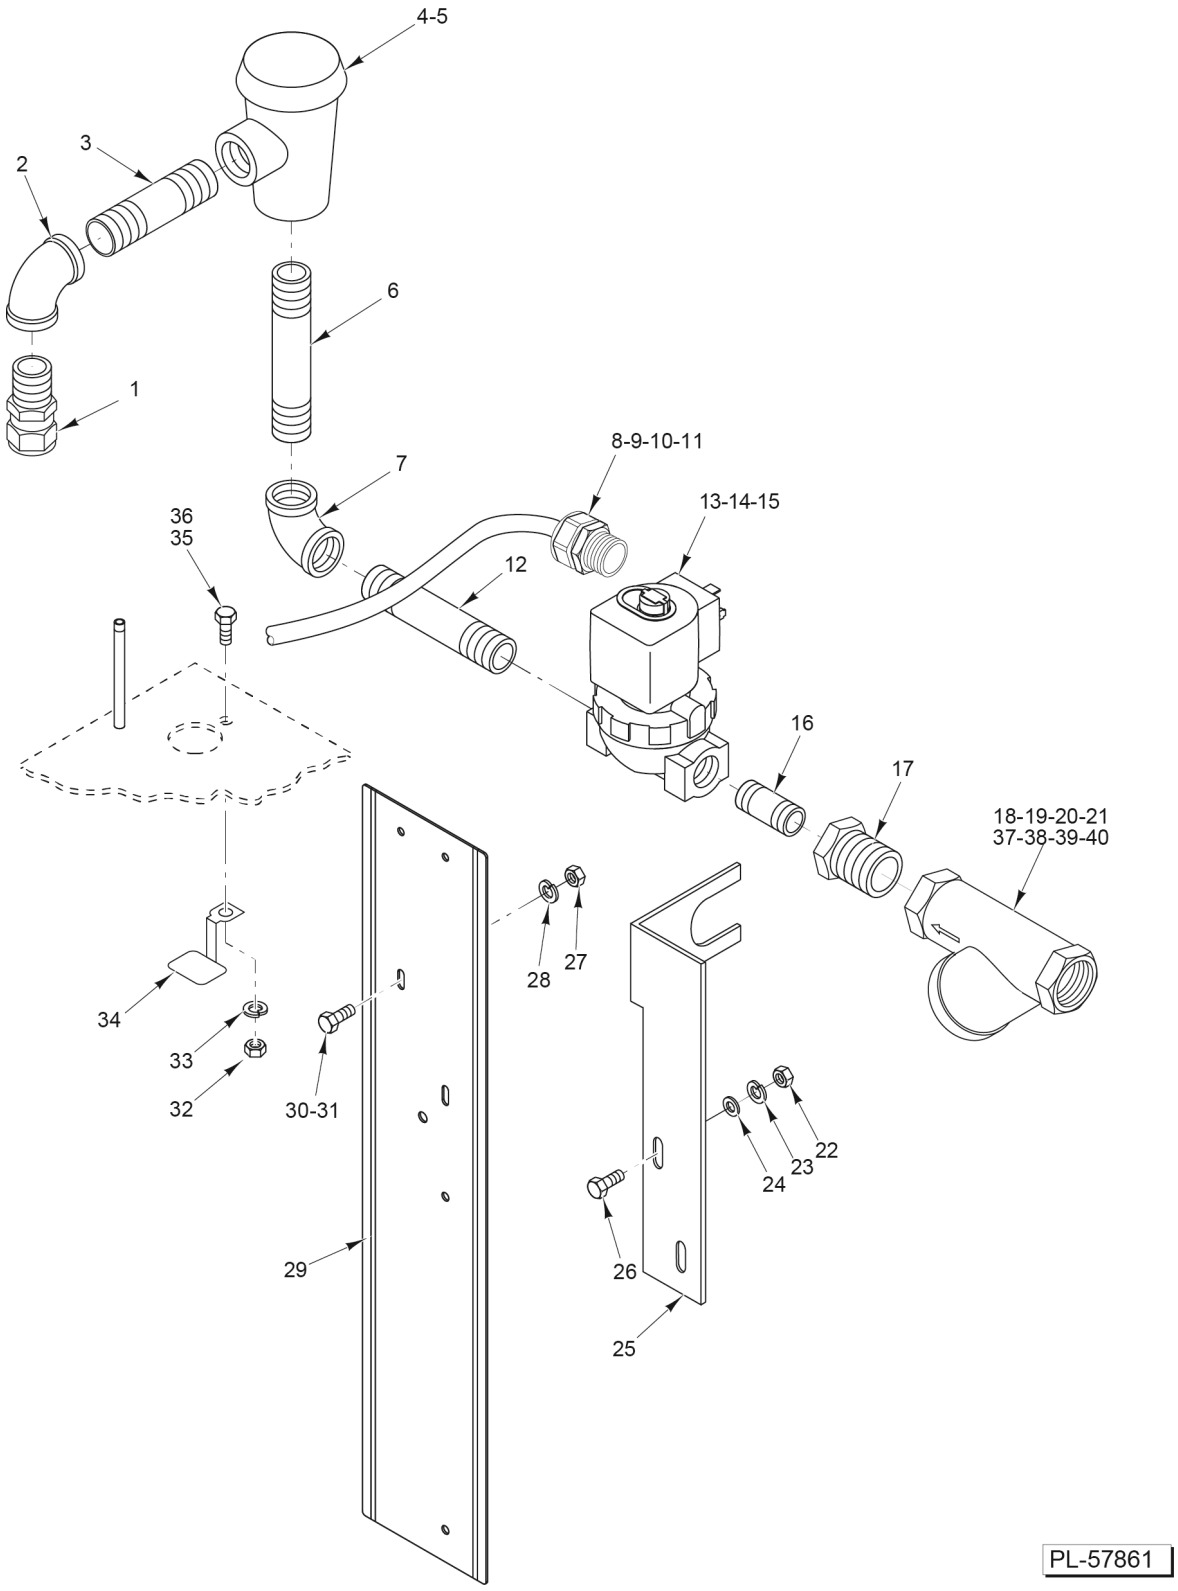


FILL PIPING
(CURRENT CONSTRUCTION)

FILL PIPING
(CURRENT CONSTRUCTION)

ILLUS. PL-57861	PART NO.	NAME OF PART	AMT.
1	00-069897-00001	Fitting - Compression	1
2	FP-015-16	Elbow - Pipe 1/2 x 90 Deg. (Brass)	1
3	FP-040-62	Pipe 1/2 x 2-3/4 TBE	1
4	00-292909-00002	Vacuum Breaker 1/2 In.	1
5	00-292910	Service Kit - Vacuum Breaker (1/2 In.) (Float & Seal Assy.)	1
6	FP-040-62	Pipe 1/2 x 2-3/4 TBE	1
7	FP-015-16	Elbow - Pipe 1/2 x 90 Deg. (Brass)	1
8	FE-022-84	Connector - Strain Relief	2
9	FE-008-10	1/2 Gasket Assy	2
10	FE-024-88	Lock Nut 1/2 Electrical	2
11	00-893950-00001	Cable	1
12	FP-040-62	Pipe 1/2 x 2-3/4 TBE	1
13	00-893100-00001	Solenoid Valve (1/2) (120 V.) (Incls. Items 14 & 15)	1
14	00-892132	Coil - Solenoid Valve (120 V.)	1
15	00-893101	Service Kit - 1/2 Solenoid Valve	1
16	FP-040-42	Pipe 1/2 x 1-1/8 TBE (Brass)	1
17	FP-027-22	Bushing - Pipe 3/4 to 1/2 (Brass)	1
*18	00-186922	Strainer - Line (3/4 In.) (Brass) (Kitz) (Incls. Items 19, 20, & 21) (Alternate to Item 37)	1
19	00-186923	Plug - Branch	1
20	00-186924	Gasket - Branch Plug	1
21	00-186925	Screen - Line Strainer	1
22	NS-015-01	Nut 1/4-20 Hex (SST)	2
23	WL-006-17	Lockwasher 1/4 Helical (SST)	2
24	WS-017-06	Washer (SST)	2
25	00-474739	Support - Fill Pipe	1
26	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	2
27	NS-015-01	Nut 1/4-20 Hex (SST)	2
28	WL-006-17	Lockwasher 1/4 Helical (SST)	2
29	00-941202	Bracket - Solenoid Box	1
30	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	3
31	WS-017-06	Washer (SST)	2
32	NS-015-11	Nut 5/16-18 Hex (SST)	2
33	WL-006-23	Lockwasher 5/16 Helical (SST)	2
34	00-893920	Deflector - Fill	1
35	WS-017-06	Washer (SST)	2
36	SC-041-13	Cap Screw 5/16-18 x 1 Hex Hd. (SST)	2
*37	00-186922	Strainer - Line (3/4 In.) (Brass) (Apollo / Conbraco) (Incls. Items 38, 39, & 40) (Alternate to Item 18)	1
38	00-749802-00001	Cap	1
39	00-749802-00002	Gasket	1
40	00-749802-00003	Screen (80 Mesh)	1


* Kitz line strainer is approx. 1/4" shorter than Apollo / Conbraco.

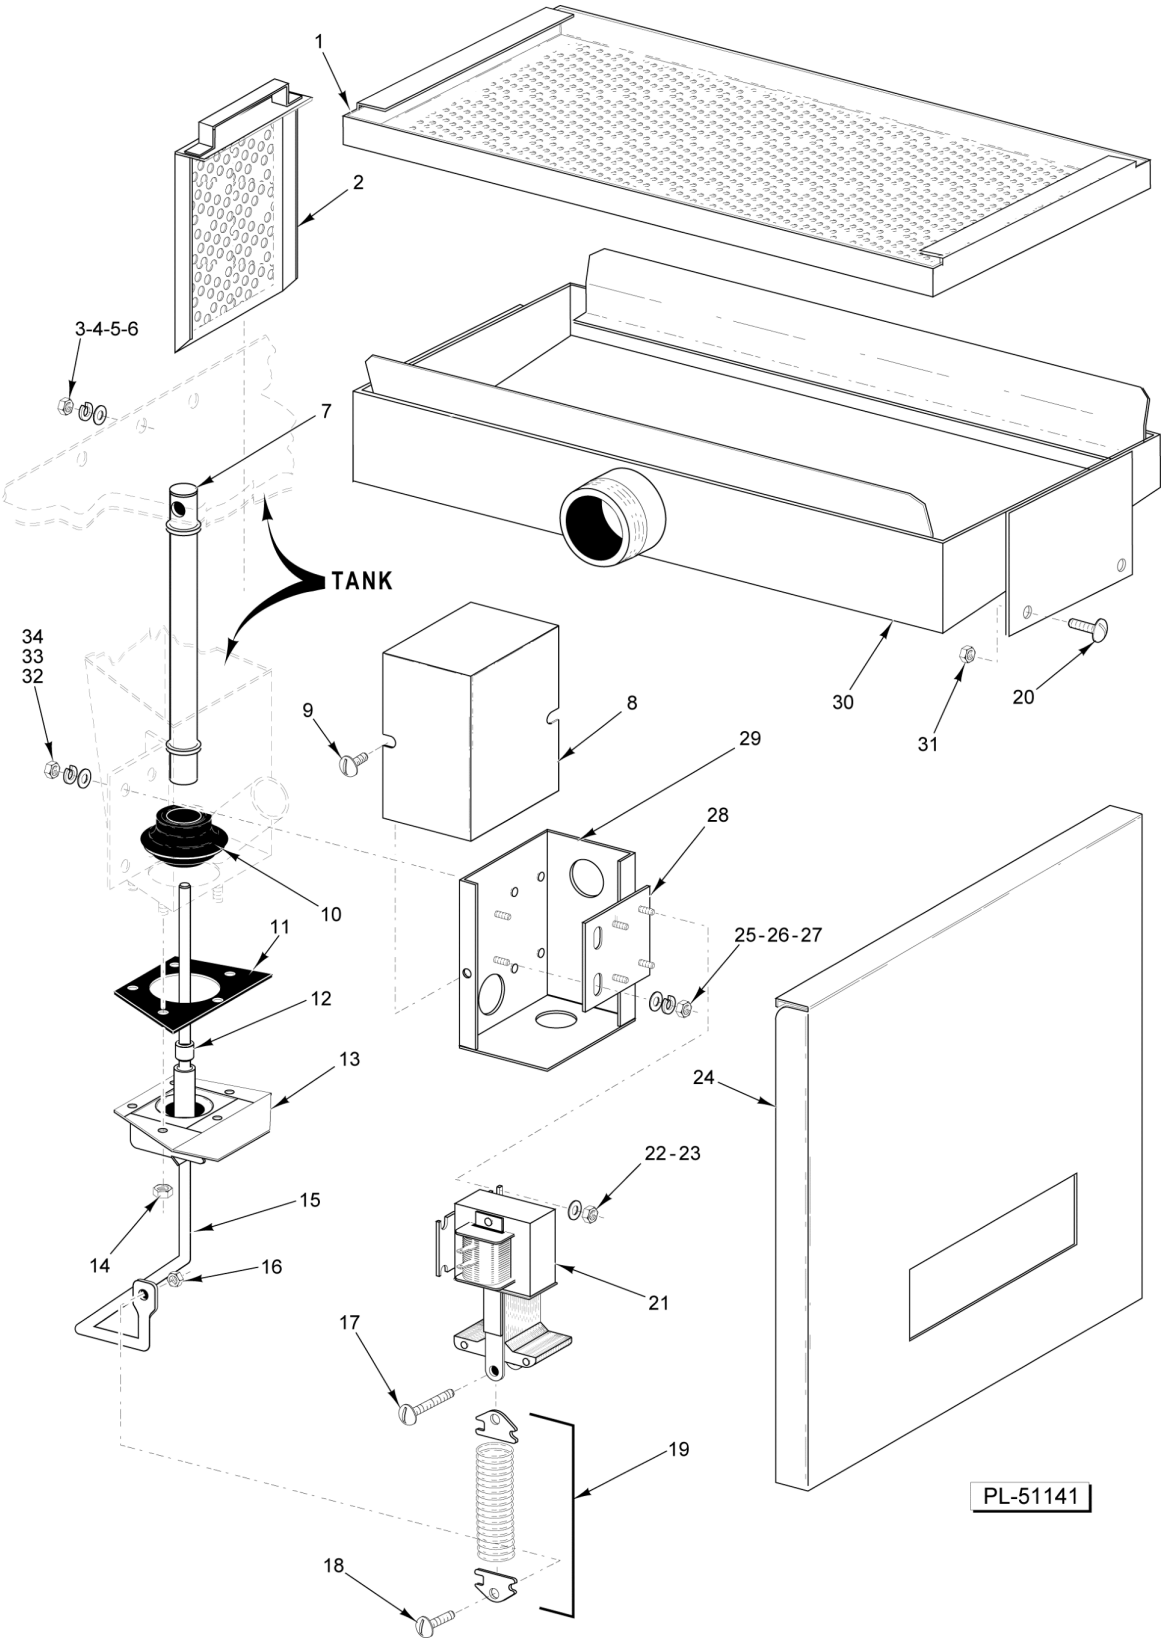

DRAIN
(BEFORE S/N 121021852)

DRAIN
(BEFORE S/N 121021852)


ILLUS. PL-51141	PART NO.	NAME OF PART	AMT.
1	00-436222	Pan - Strainer	1
2	00-436281	Strainer - Sump	1
3	NS-015-11	Nut 5/16-18 Hex (SST)	3
4	WS-029-05	Washer 0.328 x 0.750 x 0.062 (SST)	3
5	WL-006-23	Lockwasher 5/16 Helical (SST)	3
6	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd. (SST)	3
7	00-436247	Tube - Drain	1
8	00-436242	Cover - Solenoid	1
9	SC-053-05	Mach. Screw 10-24 x 3/8 Slotted Truss Hd. (SST)	2
10	00-436248	Stopper - Drain	1
11	00-436206	Gasket - Sump	1
12	00-436279	Bearing - Drain	1
13	00-893413	Drain Chute Assy. (Incls. Item 12)	1
14	NS-047-82	Stop Nut 1/4-20 Hex (SST)	5
15	00-436234	Rod - Drain Lift	1
16	NS-031-15	Stop Nut 10-24 Hex (SST)	2
17	SC-098-05	Mach. Screw 10-24 x 1-1/2 Slotted Rd. Hd. (SST)	1
18	SC-021-25	Mach. Screw 10-24 x 3/4 Slotted Rd. Hd. (SST)	1
19	00-436230	Spring Assy. - Drain	1
20	SC-021-25	Mach. Screw 10-24 x 3/4 Slotted Rd. Hd. (SST)	4
21	00-041539	Solenoid	1
22	NS-031-15	Stop Nut 10-24 Hex (SST)	4
23	WS-019-20	Washer 0.219 x 0.375 x 0.031 (SST)	4
24	00-474905	Panel - Front (Optional)	1
25	NS-015-01	Nut 1/4-20 Hex (SST)	4
26	WL-006-17	Lockwasher 1/4 Helical (SST)	4
27	WS-022-34	Washer (SST)	4
28	00-436241-00001	Bracket - Solenoid	1
29	00-436240-00001	Box - Solenoid	1
30	00-436223	Pan - Drain	1
31	NS-031-15	Stop Nut 10-24 Hex (SST)	4
32	NS-015-01	Nut 1/4-20 Hex (SST)	2
33	WL-006-17	Lockwasher 1/4 Helical (SST)	2
34	WS-022-34	Washer (SST)	2

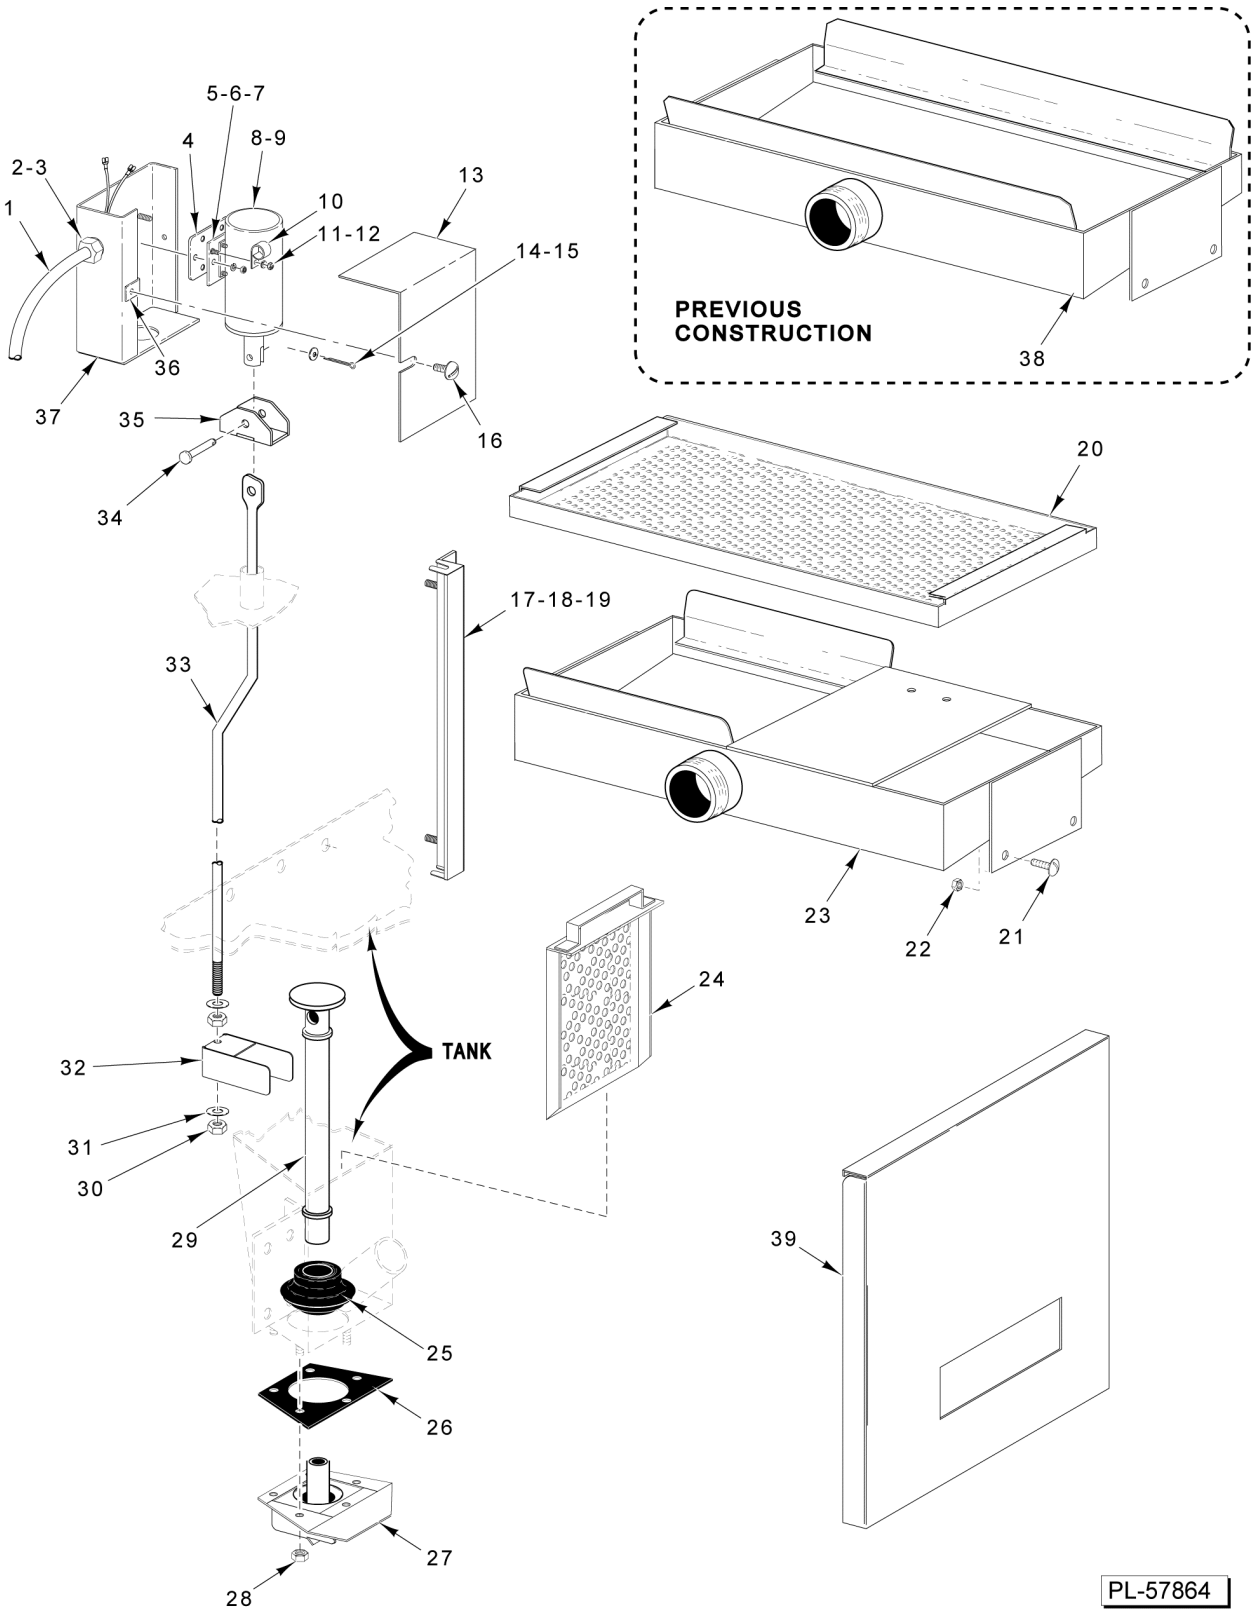

DRAIN
(STARTING S/N 121021852)

DRAIN
(STARTING S/N 121021852)

ILLUS. PL-57864	PART NO.	NAME OF PART	AMT.
1	00-294514-00009	NLA - Obsolete--Cable - Drain Solenoid	1
2	FE-022-84	Connector - Strain Relief	2
3	FE-024-88	Lock Nut 1/2 Electrical	2
4	00-893909	Spacer - Solenoid (Current Construction)	1
5	00-893910	Plate - Solenoid Mounting (Current Construction)	1
6	WL-006-17	Lockwasher 1/4 Helical (SST)	2
7	NS-015-01	Nut 1/4-20 Hex (SST)	2
8	SD-008-18	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B	4
9	00-436312	Solenoid (Ledex, DC)	1
10	00-078752-00010	Clamp - Retaining (Current Construction)	1
11	WL-006-07	Lockwasher #10 Helical (SST)	1
12	NS-011-18	Nut 10-24 Hex (SST)	1
13	00-436305	Cover - Solenoid	1
14	WS-023-24	Washer (Brass)	1
15	PC-005-02	Cotter Pin 1/16 x 1/2 (SST)	1
16	SC-053-05	Mach. Screw 10-24 x 3/8 Slotted Truss Hd. (SST)	2
17	00-936979	Cover - Drain Rod	1
18	WL-006-07	Lockwasher #10 Helical (SST)	2
19	NS-011-18	Nut 10-24 Hex (SST)	2
20	00-436222	Pan - Strainer	1
21	SC-021-25	Mach. Screw 10-24 x 3/4 Slotted Rd. Hd. (SST)	4
22	NS-031-15	Stop Nut 10-24 Hex (SST)	2
23	00-893792	Pan - Drain (Current Construction)	1
24	00-436281	Strainer - Sump	1
25	00-436248	Stopper - Drain	1
26	00-436206	Gasket - Sump	1
27	00-893413	Drain Chute Assy	1
28	NS-047-82	Stop Nut 1/4-20 Hex (SST)	5
29	00-474220	Tube - Drain	1
30	NS-015-11	Nut 5/16-18 Hex (SST)	2
31	WL-006-23	Lockwasher 5/16 Helical (SST)	2
32	00-947856	Bracket - Drain Lift	1
33	00-436303	Rod - Lift Drain	1
34	00-436313	Pin - Clevis	1
35	00-947857	Stop - Drain Lift Weldment	1
36	00-074348	Speed Nut 10-24	2
37	00-436304-00001	Box - Solenoid	1
38	00-436223	Pan - Drain (Previous Construction)	1
39	00-474905	Panel - Front (Optional)	1

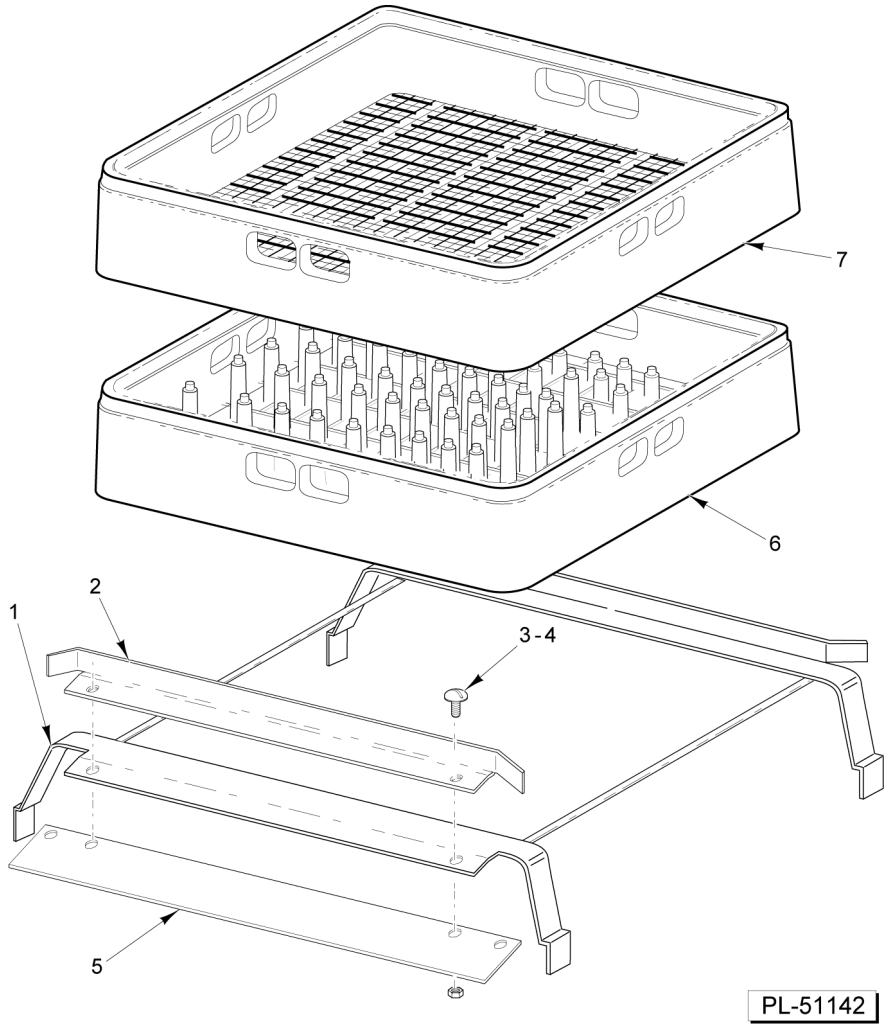

TRACK AND RACKS

TRACK AND RACKS

ILLUS. PL-51142	PART NO.	NAME OF PART	AMT.
1	00-435036	Track Weldment	1
2	00-185050	Side - Rack Track	1
3	SC-053-02	Mach. Screw 10-24 x 1/2 Slotted Truss Hd. (SST)	4
4	NS-031-15	Stop Nut 10-24 Hex (SST)	4
5	00-185053	Guard - Door Splash	1
6	00-315191	Rack - Peg (Packaged) (Optional)	1
7	00-315193	Rack - Combination (Packaged) (Optional)	1