

Deliming Your PW Prep Washer for Optimal Results

The Hobart PW Prep Washer is equipped with a delime notification that will appear on the display when deliming is recommended for the machine.

SCAN FOR MORE
INFORMATION




PREPARING Your PW Prep Washer for the Delime Cycle

- 1 REMOVE RACK,** scrap basket and strainer screen(s) from the machine and **clean under warm soapy water**, removing any food soils; rinse thoroughly.




- 2 REINSTALL CLEANED STRAINER SCREEN(s),** scrap basket and rack into the machine and close the door.

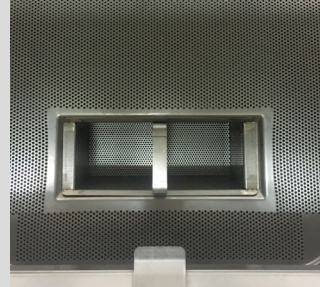

- 3 LOCATE YOUR DELIMING CHEMICAL** (provided by your chemical supplier) for manual dosing into the tank, when prompted.



- 4 ⚠️ DISABLE THE DETERGENT FEEDER** chemical system according to the chemical manufacturer's recommendation. This will prevent the addition of detergent during the deliming operation.

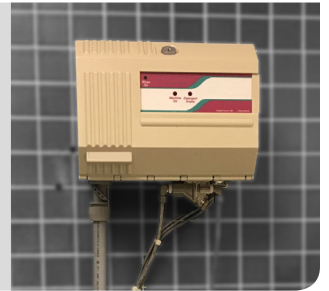

How to MANUALLY Activate the Delime Cycle


- 1** Press the button to begin.




- 2** Select "Manager Menu" by pressing button.



- 3** Enter the security code, "1001" for the machine using the following steps:
- for "1"
 - for "0"
 - for "0"
 - for "1" to go to step 4

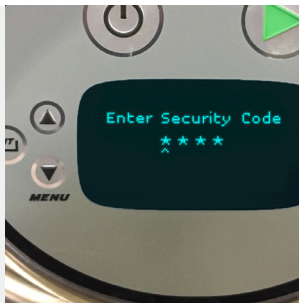


- 4** Use the button to select "Delime Now" from the Manager Menu. Follow steps 5-8 to complete process.

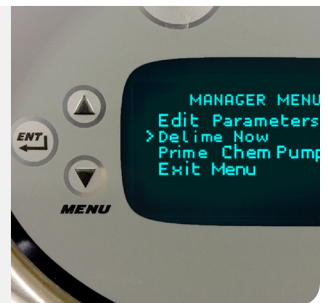


How to INITIATE the Delime Cycle When Prompted

- 5** The display will read, "**DELIME RECOMMENDED** – Would you like to delime now?" Select **YES** by pressing the button until the > symbol is shown to the left of **YES** and press the button.

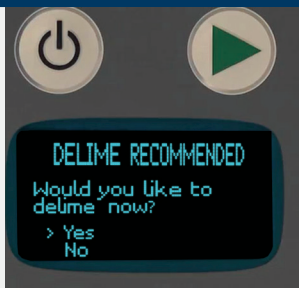

- 6** "**DELIME INITIATED**" will appear on the display. Press to enter the delime mode. The machine will drain and refill with fresh water. This will take some time to complete.

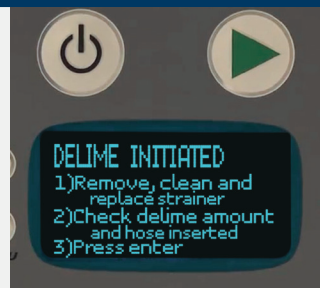

- 7** Open the door. Pour deliming chemical into the tank per supplier instructions for a 21 gallon tank (PW10) or for a 34 gallon tank (PW20). Close the door.
- Press button to continue the cycle.
- When the deliming cycle is complete, the machine will shut-off automatically.



- 8** Inspect the interior of the machine. If necessary, another delime cycle can be initiated by entering the **Manager Programming Mode (repeat steps 1-4 above)**. Reference your Hobart PW Owner's Manual for more information.

