
HOBART

SERVICE

CATALOG OF REPLACEMENT PARTS

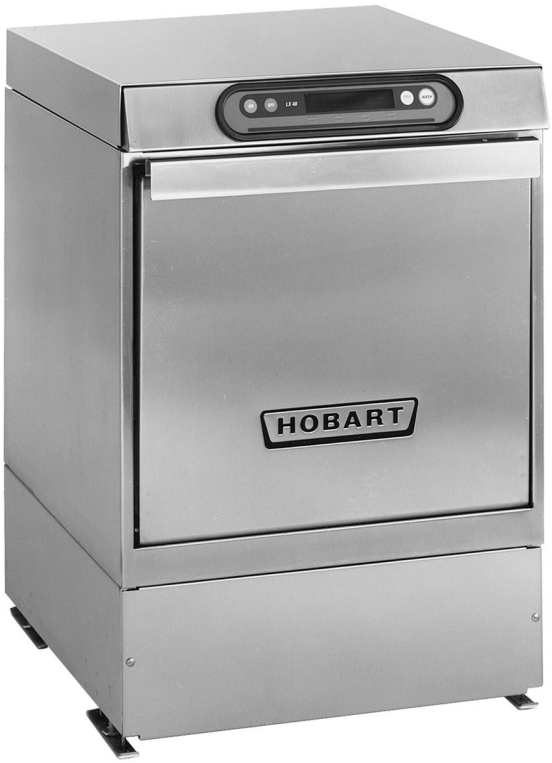

LX-SERIES DISHWASHERS

ML-130016	LXiC COLD
ML-130017	LXiH HOT
ML-130018	LXiGC COLD
ML-130019	LXiGH HOT
ML-130178	LXiPRC COLD
ML-130179	LXiPRGC COLD

PRIOR MLS COVERED IN THIS MANUAL

ML-104349	LX18 COLD
ML-104350	LX18 COLD
ML-104351	LX18 HOT
ML-104352	LX30
ML-104353	LX30 COLD
ML-104354	LX30 HOT
ML-104355	LX40 COLD
ML-104356	LX40 HOT
ML-110380	LXG COLD
ML-110381	LXG HOT

A Product of Hobart Service 701 S. Ridge Ave Troy, OH 45374

FORM F33959 Rev. K (May 2026)

 © HOBART SERVICE 2026

Table of Contents

4 F33959 TIS COVER
6 BASE ASSEMBLY
8 BASE ASSEMBLY COMPONENTS
10 TANK ASSEMBLY
12 TANK ASSEMBLY COMPONENTS
14 DOOR ASSEMBLY
16 ELECTRICAL COMPONENTS (LX SERIES)
18 ELECTRICAL COMPONENTS (LXI SERIES)
20 HARNESSES
22 HARNESSES (CONTINUED-1)
24 HARNESSES (CONTINUED-2)
26 HARNESSES (CONTINUED-3)
28 DISPLAY
30 WASH AND RINSE ARM ASSEMBLY (PREVIOUS CONSTRUCTION)
32 WASH AND RINSE ARM ASSEMBLY (CURRENT CONSTRUCTION)
34 WASH ARM ASSEMBLY (LX18 SERIES)
36 WASH PIPE ASSEMBLY (PREVIOUS CONSTRUCTION)
38 WASH PIPE ASSEMBLY (CURRENT CONSTRUCTION)
40 PUMP AND MOTOR ASSEMBLY
42 DRAIN WATER TEMPERING
44 BOOSTER ASSEMBLY
46 PLUMBING (LX18 SERIES)
48 PLUMBING (PREVIOUS CONSTRUCTION)
50 PLUMBING (PREVIOUS CONSTRUCTION)
52 PLUMBING (LXIH & LXIGH SERIES) STARTING S/N 231083999
54 PLUMBING (LXIC & LXIGC SERIES) STARTING S/N 231083999
56 FILL AIR GAP (LX18 SERIES)
58 SANITIZER PUMP TUBING (LXC, LXGC, LXIC, & LXIGC SERIES)
60 DETERGENT/RINSE AID PUMP TUBING (LX18 SERIES)
62 DETERGENT/RINSE AID PUMP TUBING
64 CHEMICAL PUMPS
66 MISCELLANEOUS
68 CORRECTIONAL PARTS PACKAGE

HOBART

CATALOG OF REPLACEMENT PARTS



LX SERIES DISHWASHERS

ML-130016	LXiC COLD
ML-130017	LXiH HOT
ML-130018	LXiGC COLD
ML-130019	LXiGH HOT
ML-130178	LXiPRC COLD
ML-130179	LXiPRGC COLD

PRIOR MLS COVERED IN THIS MANUAL

ML-104349	LX18 COLD
ML-104350	LX18 COLD
ML-104351	LX18 HOT
ML-104352	LX30
ML-104353	LX30 COLD
ML-104354	LX30 HOT
ML-104355	LX40 COLD
ML-104356	LX40 HOT
ML-110380	LXG COLD
ML-110381	LXG HOT


A product of HOBART 701 S. RIDGE AVENUE TROY, OHIO 45374-0001

FORM 33959

F33959 TIS COVER

F33959 TIS COVER


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-F33959 - Cover Page			
		LXiC COLD - ML-130016	AR
		LXiH HOT - ML-130017	AR
		LXiGC COLD - ML-130018	AR
		LXiGH HOT - ML-130019	AR
		LXiPRC COLD - ML-130178	AR
		LXiPRGC COLD - ML-130179	AR
		LX18 COLD - ML-104349	AR
		LX18 COLD - ML-104350	AR
		LX18 HOT - ML-104351	AR
		LX30 - ML-104352	AR
		LX30 COLD - ML-104353	AR
		LX30 HOT - ML-104354	AR
		LX40 COLD - ML-104355	AR
		LX40 HOT - ML-104356	AR
		LXG COLD - ML-110380	AR
		LXG HOT - ML-110381	AR

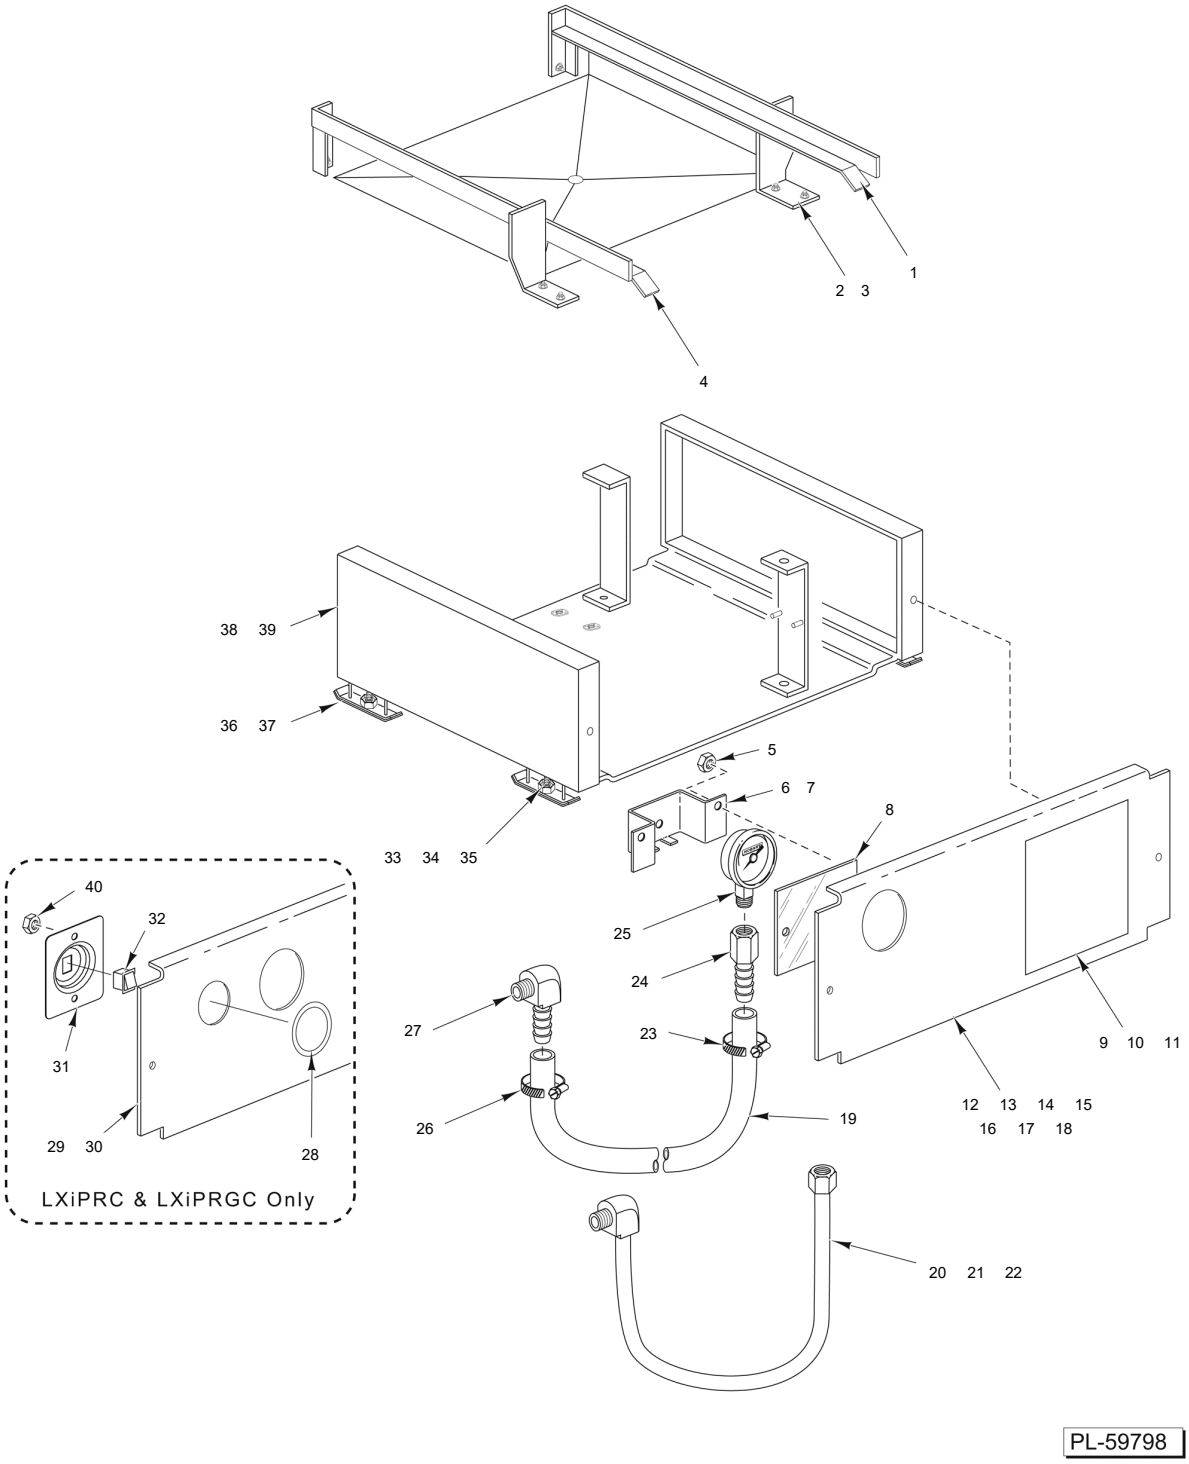

BASE ASSEMBLY

BASE ASSEMBLY


ILLUS. PL-59798	PART NO.	NAME OF PART	AMT.
1	00-328634	Track Assy. (RH)	1
2	NS-015-01	Nut 1/4-20 Hex (SST)	8
3	WL-006-17	Lockwasher 1/4 Helical (SST)	8
4	00-328635	Track Assy. (LH)	1
5	NS-047-82	Stop Nut 1/4-20 Hex (SST) (LX30/40, LXG, LXi, & LXiG Series)	2
6	00-475136	Bracket - Pressure Gauge (LX30/40, LXG, LXi, & LXiG Series)	1
7	00-918430	Bracket - Pressure Gauge (LXi & LXiG Series)	1
8	00-328569	Plate - Window (LX30/40, LXG, LXi, & LXiG Series)	1
9	00-474661	Label - Cleaning (LX Series)	1
10	00-438131-00177	Label - Cleaning (LXi Series)	1
11	00-438131-00190	Label - Cleaning (LXiPRC & LXiPRGC)	1
12	00-918431	Cover - Base (LX30/40 & LXi Series)	1
13	00-328600-00002	Cover - Base (LX18 Series)	1
14	00-918432	Cover - Base (LXG & LXiG Series)	1
15	00-328479-00002	Nut - Insert	AR
16	00-893642	Plate (Patent Numbers)	1
17	SC-122-54	Mach. Screw 10-24 x 3/4 Phil. Truss Hd.	AR
18	00-329267	Retainer - Screw #10	AR
19	00-475060	Hose 1/4 x 12 Pressure Gauge to Fill Valve	1
20	00-329882	Tube 1/4 (Copper) (LX30) (Gauge to Valve)	1
21	FP-047-28	Fitting - Tube 3/16 TBG x 1/8 MPT (Brass) (LX30) (Used with Item 20)	1
22	FP-075-11	Fitting - Tube 3/16 (Brass) (LX30) (Used with Item 20)	1
23	00-528501	Clamp - Hose #4	1
24	FP-088-30	Fitting - Hose (LX30/40, LXG, & LXi Series)	1
25	00-918429	Gauge - Water Pressure (LX30/40, LXG, LXi, & LXiG Series)	1
26	00-528501	Clamp - Hose #4	1
27	FP-088-29	Fitting - Hose 1/4 Barb x 1/8-27 NPTM	1
28	00-936976	Label - Button (Puri-Rinse) (LXiPRC & LXiPRGC)	1
29	00-941721	Cover - Base (LXiPRC)	1
30	00-941722	Cover - Base (LXiPRGC)	1
31	00-936941	Plate - Switch Mount (LXiPRC & LXiPRGC)	1
32	00-936965	Switch - Rocker (Waterproof) (LXiPRC & LXiPRGC)	1
33	00-241857	Foot - Leveling	4
34	00-329284	Spacer - Leveling Foot (LX18 Series)	4
35	WS-023-03	Washer (SST)	2
36	00-473137	Pad - Skid Assy. (LX30/40, LXG, & LXi Series)	4
37	00-294855-00001	Cap - Skid Retaining (LX30/40, LXG, LXi, & LXiG Series)	8
38	00-328642	Base (LXi, LXiG, & LXG Series)	1
39	00-328642-00002	Base (LX Series)	1
40	NS-047-82	Stop Nut 1/4-20 Hex (SST)	2
	SC-041-55	Cap Screw 5/16-18 x 3/4 Hex Hd. (SST)	4
	WS-017-08	Washer (0.328 x 0.625 x 0.062) (SST)	4
	00-918440	Kit - Gauge - Service	1
	00-329600	PACKING,ASSY LX BASE	1

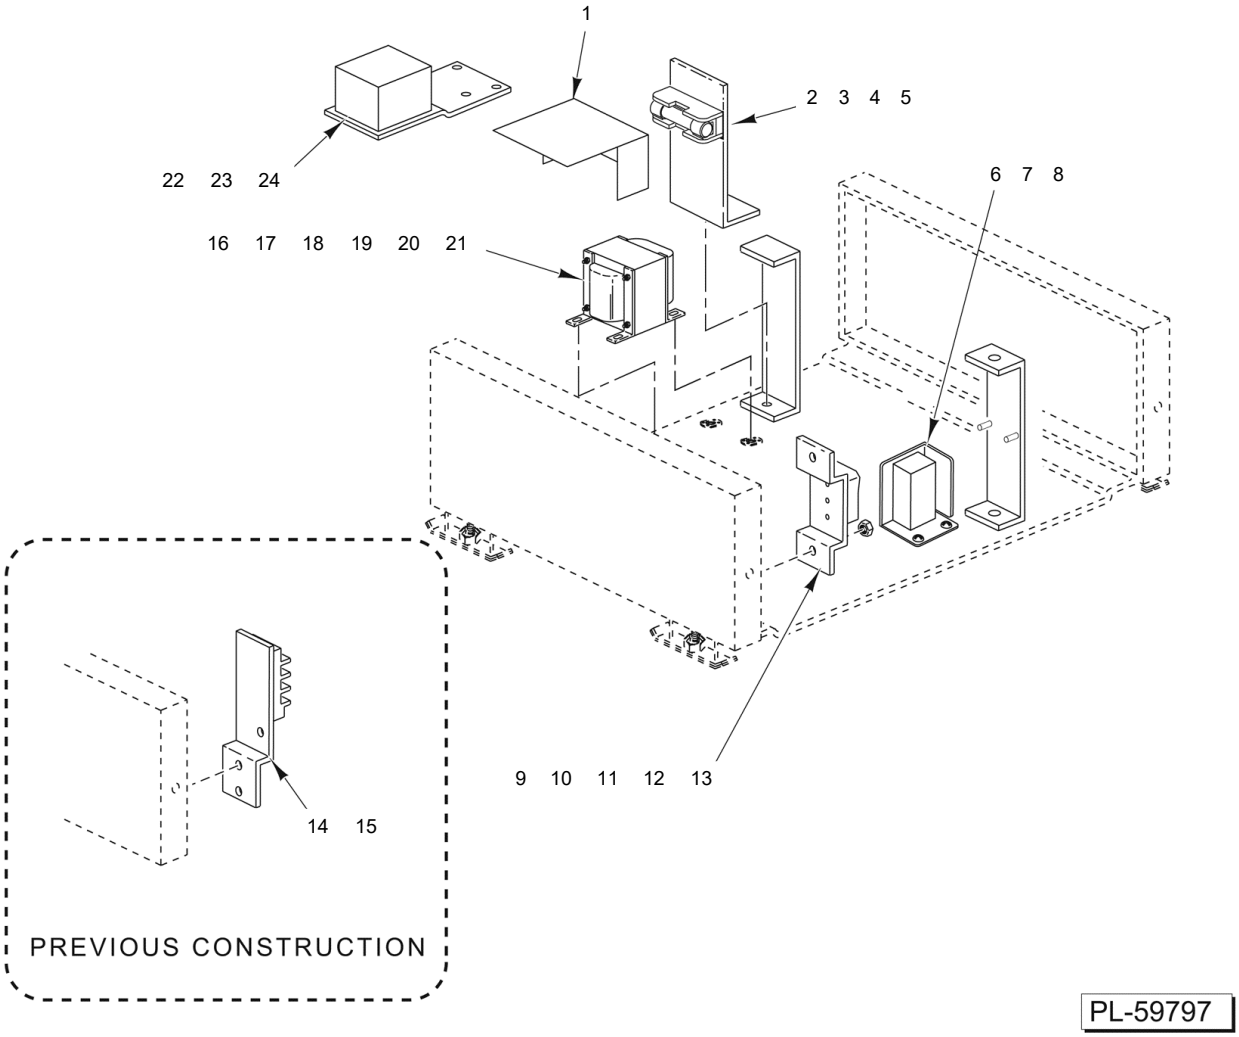

BASE ASSEMBLY COMPONENTS

BASE ASSEMBLY COMPONENTS


ILLUS. PL-59797	PART NO.	NAME OF PART	AMT.
1	00-749584	Cover - Fuse & Transformer (3 Ph.)	1
2	FE-023-78	Fuse (1.25 Amp.) (For 460-480 V. Mach.) (LX & LXG Series)	1
3	00-473195	Bracket & Fuse Assy. (LX & LXG Series)	1
4	SC-041-86	Cap Screw 1/4-20 x 3/8 Hex Hd. (SST)	1
5	WL-006-17	Lockwasher 1/4 Helical (SST)	1
6	00-749657	Barrier - Mylar (Relay) (3 Ph.) (LX & LXG Series)	1
7	00-749610	Bracket - Relay Mounting (3 Ph.) (LX & LXG Series)	1
8	00-087714-046-1	Relay (2-Pole) (30 Amp.) (3 Ph.) (LX & LXG Series)	1
9	SC-018-24	Mach. Screw 6-32 x 3/4 Phil. Pan Hd.	2
10	00-918385	Block - Terminal (5-Pole) (Current Construction)	1
11	00-918339	Bracket - Terminal Block (Current Construction)	1
12	NS-031-50	Stop Nut 6-32 Hex (SST)	2
13	NS-031-16	Stop Nut 10-24 Hex Elastic (SST)	2
14	00-475299-00001	Connector Assy. (Previous Construction)	1
15	00-473138	Bracket - Terminal Block (Previous Construction)	1
16	00-294500-027-3	Transformer (150 VA, 240 V., 50/60 Hz.) (3 Ph.) (LX & LXG Series)	1
17	00-294500-027-4	Transformer (150 VA, 208 V., 50/60 Hz.) (3 Ph.) (LX & LXG Series)	1
18	WL-014-07	Lockwasher #10 External Shakeproof (SST)	2
19	SC-066-05	Mach. Screw 10-24 x 3/8 Phil. Truss Hd. (SST)	2
20	00-294500-027-6	Transformer (480 V.) (3 Ph.) (LXH & LXGH Series)	1
21	01-650130	Transformer (150 VA, 50/60Hz) (LXH, LXGH, LXiH, & LXiGH)	1
22	00-087713-040-2	Contactor (30 Amp., 3-Pole) (3 Ph.)	1
23	00-294500-046-1	Transformer (208-240/480 V., 60 Hz.) (LXi & LXiG Series)	1
24	00-749468	Bracket - Contactor-Mounting (3 Ph.)	1

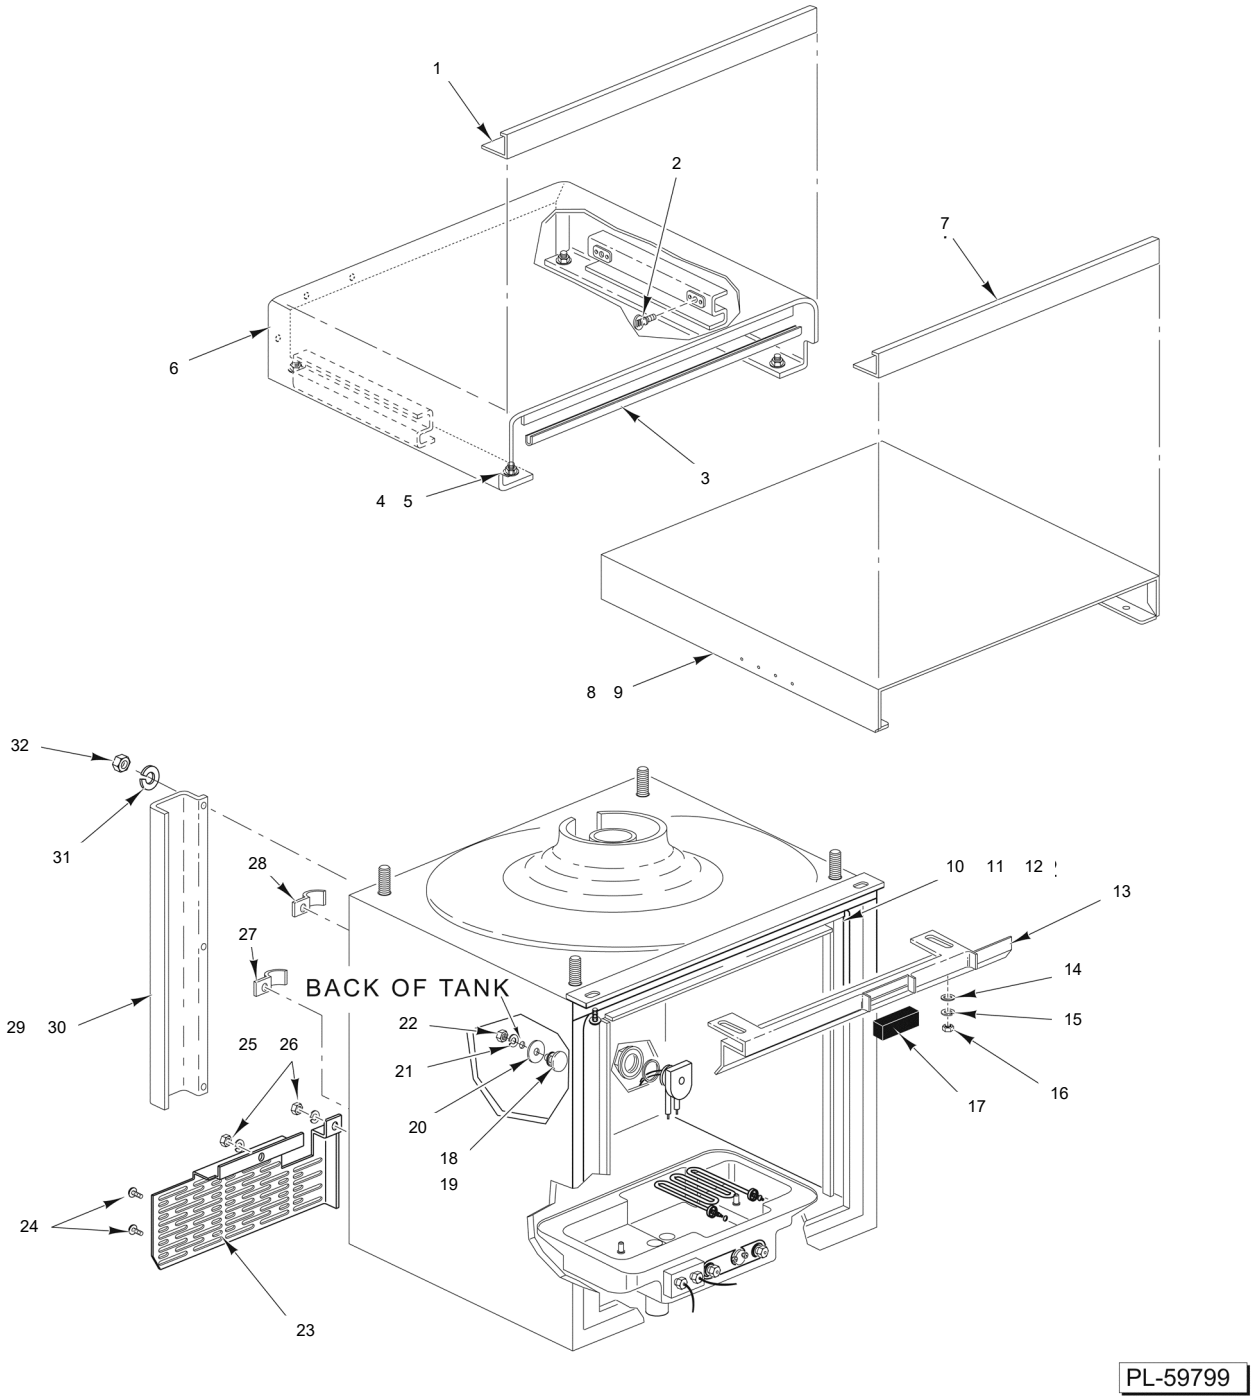

TANK ASSEMBLY

TANK ASSEMBLY


ILLUS. PL-59799	PART NO.	NAME OF PART	AMT.
1	00-329286	Kit - Top Cover Trim Assy. (LX Series)	1
2	00-070641-00004	Thumb Screw 1/4-20 (LX & LXG Series)	2
3	00-557654	Gasket (21-1/4) (LX & LXG Series)	1
4	WL-006-17	Lockwasher 1/4 Helical (SST) (LX & LXG Series)	4
5	NS-015-01	Nut 1/4-20 Hex (SST) (LX & LXG Series)	4
6	00-328571-00001	Cover - Top Weldment (LX & LXG Series)	1
7	00-329286	Kit - Top Cover Trim Assy. (LXi & LXiG Series)	1
8	00-892595	Cover - Top Weldment (LXi & LXiG Series)	1
9	00-514410	Molding - Rubber (LXi & LXiG Series)	AR
10	00-474465	Seal - Labyrinth	1
11	00-474466	Bracket - Labyrinth Seal	1
12	00-328678	Clamp - Tie	3
13	00-473078	Retainer - Magnet Tank (Double)	1
14	WS-017-06	Washer .281 x .625 x .062 (SST)	2
15	WL-006-17	Lockwasher 1/4 Helical (SST)	2
16	NS-015-01	Nut 1/4-20 Hex (SST)	2
17	00-329224	Magnet - Door (Ceramic)	4
18	00-119244	Cap & Stud Assy. (LX30/40 Series)	1
19	00-067500-00031	O-Ring (LX30/40 Series)	1
20	00-329242	Retainer - Cap (LX30/40 Series)	1
21	WL-006-17	Lockwasher 1/4 Helical (SST) (LX30/40 Series)	1
22	NS-015-01	Nut 1/4-20 Hex (SST) (LX30/40 Series)	1
23	00-328614	Cover - Motor	1
24	SC-122-54	Mach. Screw 10-24 x 3/4 Phil. Truss Hd.	2
25	NS-015-01	Nut 1/4-20 Hex (SST)	2
26	WL-006-17	Lockwasher 1/4 Helical (SST)	2
27	FE-006-46	Clamp - Electric	1
28	FE-006-46	Clamp - Electric	1
29	00-328623	Wireway (LX & LXi Series)	1
30	00-474160	Wireway (LXG & LXiG Series)	1
31	WL-006-17	Lockwasher 1/4 Helical (SST)	3
32	NS-015-01	Nut 1/4-20 Hex (SST)	3

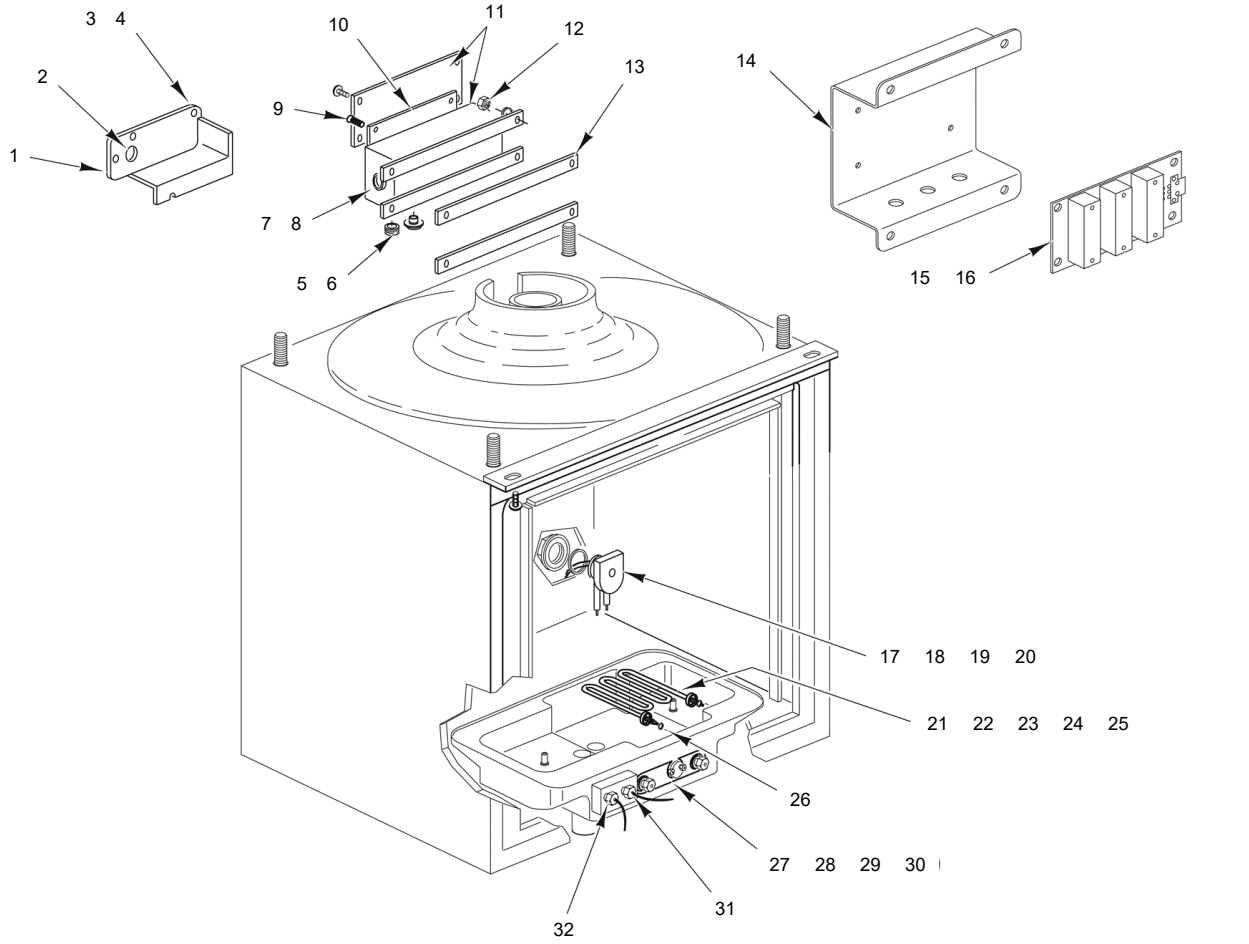

TANK ASSEMBLY COMPONENTS

TANK ASSEMBLY COMPONENTS

ILLUS. PL-59800	PART NO.	NAME OF PART	AMT.
1	00-328613	Cover - Service	1
2	00-532395	Tape - Filament	1
3	NS-015-01	Nut 1/4-20 Hex (SST)	4
4	WL-006-17	Lockwasher 1/4 Helical (SST)	4
5	00-329246	Grommet - Chemical Box (LX40 Series)	3
6	00-329247	Cap - Chemical Box (LX40, LXi, & LXiG Series)	2
7	FE-025-03	Bushing - Electrical Str. (LX40 Series)	1
8	FE-026-22	Bushing - Electrical Snap (LXi & LXiGC Series)	6
9	SD-033-14	Self-Tapping Screw 4-20 x 1/4 Phil. Pan Hd. Plastite	4
10	00-329086	Board - Chemical Sensor Assy. (LX40 Series)	1
11	00-329837	Box Assy. - Chemical Sensor (LX40 Series)	1
12	NS-031-08	Stop Nut 8-32 Special (SST) (LX40 Series)	4
13	00-329206	Gasket - Chemical Sensor Box (LX40 Series)	2
14	00-892803	Bracket - Chemical Sensor (LXiC & LXiGC)	1
15	00-892715	Board - Chemical Sensor LXi	1
16	00-329056-00001	Standoff	4
17	00-329274	Tank Probe & Wire Assy.	1
18	00-293014	Gasket	1
19	00-116198-00003	Nut - Probe	1
20	00-918228	Deflector - Water (Not Shown)	1
21	00-328605-00001	Element - Sump Heater (208 V., 1500 W.) (LX30/40 & LXG Series)	1
22	00-328605-00002	Element - Sump Heater (240 V., 1500 W.) (LX30/40 & LXG Series)	1
23	00-328605-00003	Element - Sump Heater (120 V., 1500 W.) (LX30, LX30C, LX40C, LXGC, LXiC, & LXiGC Series)	1
24	00-328605-00004	Element - Sump Heater (480 V.) (3 Ph.)	1
25	00-892725-00001	Element - Sump Heater (208-240 V., 1500-1997 W.) (LXi & LXiG Series)	1
26	00-067500-00007	O-Ring (LX30/40, LXG, LXi, & LXiG Series)	2
27	00-328980-00001	Control - Temperature Limiting (LX18H, LX30/40, LXG, LXi, & LXiG Series)	1
28	NS-031-50	Stop Nut 6-32 Hex (SST)	2
29	00-289364-00003	Spacer (LX18H, LX30/40, & LXG Series)	2
30	00-749400	Bracket - Overtemp Mounting	1
31	00-328994	Sensor - Probe	AR
32	00-329275	Probe - Sump Level	1
	00-473318-00002	Barrier - Sump Heater (Mylar)	1
	00-294677-00004	Clamp - Wire (1 I.D.) (Use With Chemical Sensor Harness)	5
	00-526454-00002	Foam Tape	AR
	00-113703	Cable Tie (Use With Water Deflector)	1
	00-270902	Tubing - Rubber	1

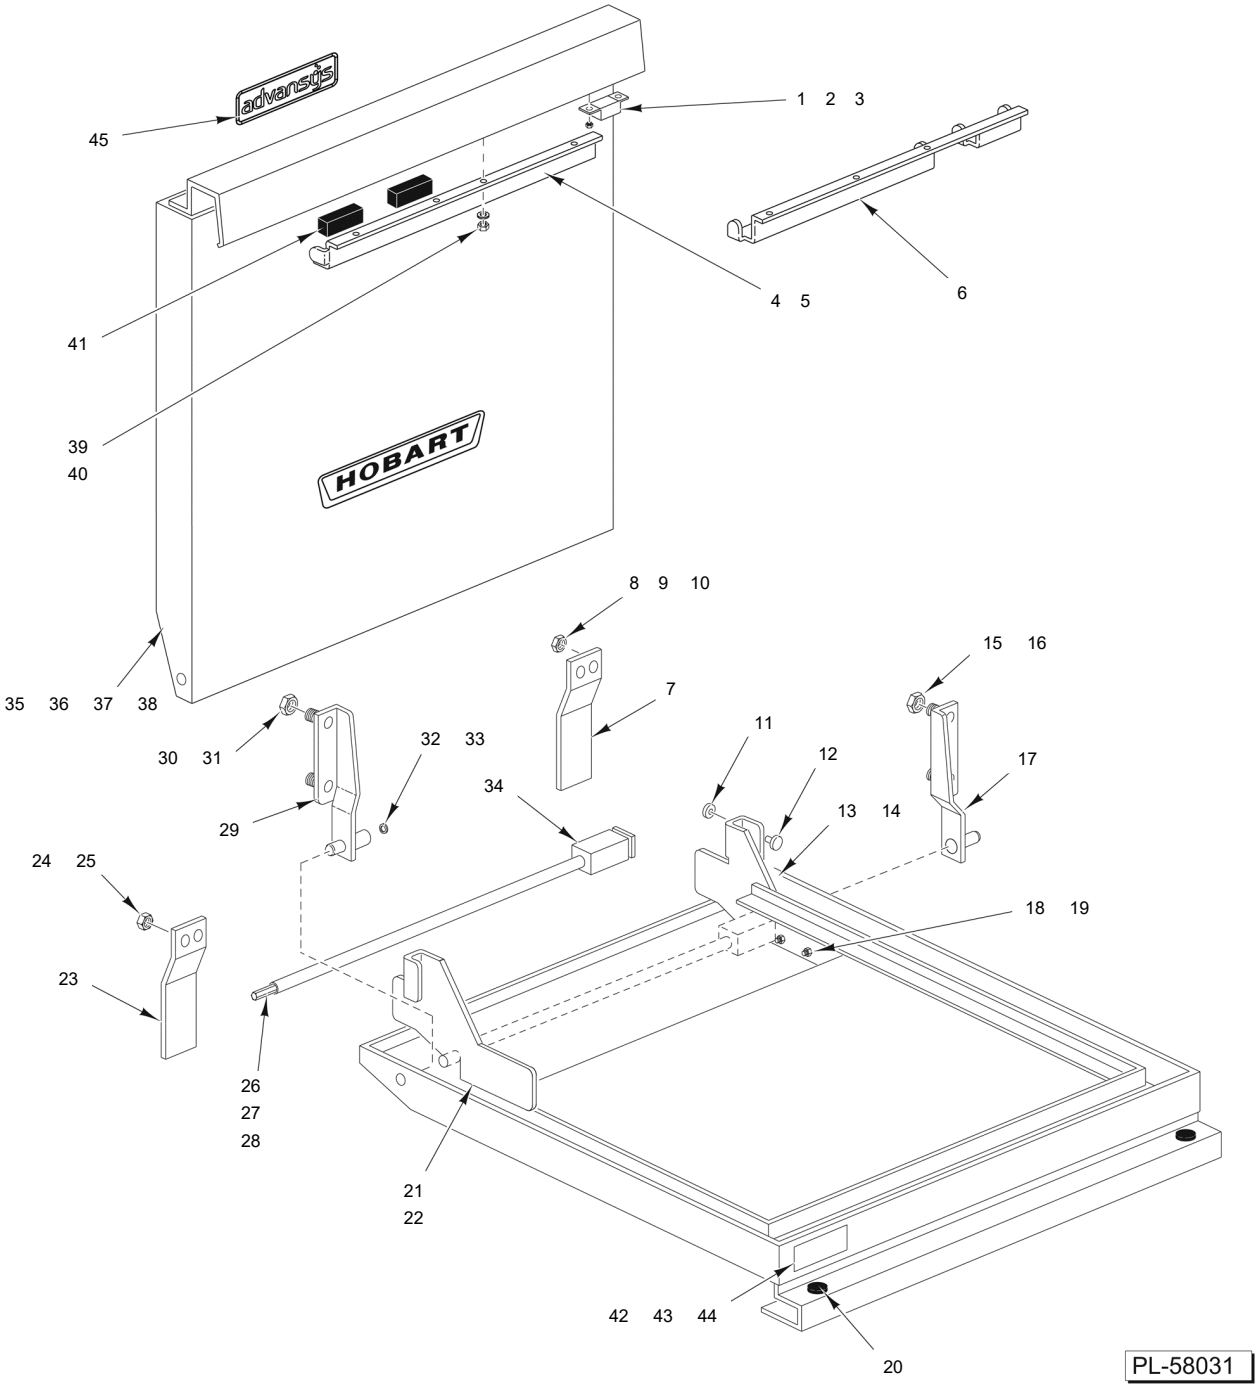


DOOR ASSEMBLY

DOOR ASSEMBLY

ILLUS. PL-58031	PART NO.	NAME OF PART	AMT.
1	NS-031-50	Stop Nut 6-32 Hex (SST) (LX & LXG Series)	2
2	00-328609	Retainer - Magnet (LX & LXG Series)	1
3	00-436091	Magnet	1
4	00-473340	Retainer - Magnet Door (LX & LXG Series)	1
5	00-542857	Tape - Foam (18 In.)	2
6	00-892600	Retainer - Magnet Door (LXi & LXiG Series)	1
7	00-329070	Guard - Splash	1
8	NS-015-01	Nut 1/4-20 Hex (SST)	1
9	WS-023-24	Washer (Brass)	3
10	WL-006-17	Lockwasher 1/4 Helical (SST)	1
11	00-474117	Receiver - Push-On	2
12	00-474116	Bumper - Door Stop	2
13	00-328987	Brace - Door (RH) (LX & LXi Series)	1
14	00-474885-00001	Brace - Door (RH) (LXG & LXiG Series)	1
15	NS-015-01	Nut 1/4-20 Hex (SST)	2
16	WL-006-17	Lockwasher 1/4 Helical (SST)	2
17	00-473115-00001	Hinge - Door (RH)	1
18	NS-015-01	Nut 1/4-20 Hex (SST)	4
19	WL-006-17	Lockwasher 1/4 Helical (SST)	4
20	00-473466	Button - Door Handle	2
21	00-328597	Brace - Door (LH) (LX & LXi Series)	1
22	00-474884-00001	Brace - Door (LH) (LXG & LXiG Series)	1
23	00-329070	Guard - Splash	1
24	NS-015-01	Nut 1/4-20 Hex (SST)	1
25	WL-006-17	Lockwasher 1/4 Helical (SST)	1
26	00-329007	Bar - Torsion	1
27	00-329006	Tube - Torsion Bar	1
28	00-329008	Bushing - Torsion Bar (RH)	1
29	00-328570	Hinge - Door (LH)	1
30	NS-015-01	Nut 1/4-20 Hex (SST)	2
31	WL-006-17	Lockwasher 1/4 Helical (SST)	2
32	OR-001-06	O-Ring	2
33	RR-011-60	Retaining Ring (LXi, LXiC, & LXiG Series)	2
34	00-329310	Tube Assy. - Torsion Bar (Incls. Items 27 thru 28)	1
35	00-473668	Door Assy. (Incls. Door, Magnet, Retainers, RH Hinge, & Hardware) (LX18, LX30, & LX40)	1
36	00-892701-00001	Door - Weldment (LXi Series)	1
37	00-913027-00001	Door - Weldment (LX Series)	1
38	00-892701-00002	Door - Weldment (LXiG Series)	1
39	NS-031-16	Stop Nut 10-24 Hex Elastic (SST)	AR
40	WS-023-34	Washer (SST)	AR
41	00-329224	Magnet - Door (Ceramic)	AR
42	00-918105	Label - Error Codes (LXi Series)	1
43	00-473098	Label - Error Codes (LX18 & LX30 Series)	1
44	00-473222	Label - Error Codes (LX40 Series)	1
45	00-941420	Logo - Advansys	1

38	00-087714-046-1	Relay (2-Pole)(30 Amp.)
39	00-087713-040-2	Contactor (30 Amp., 3-Pole)
40	00-749610	Bracket - Relay Mounting
41	00-749468	Bracket - Contacter Mounting
42	00-329787	Nut 10-24 Weld
43	00-065890-00029	Connector - Insulated
44	00-474673	Support - Harness


PARTS NOT ILLUSTRATED

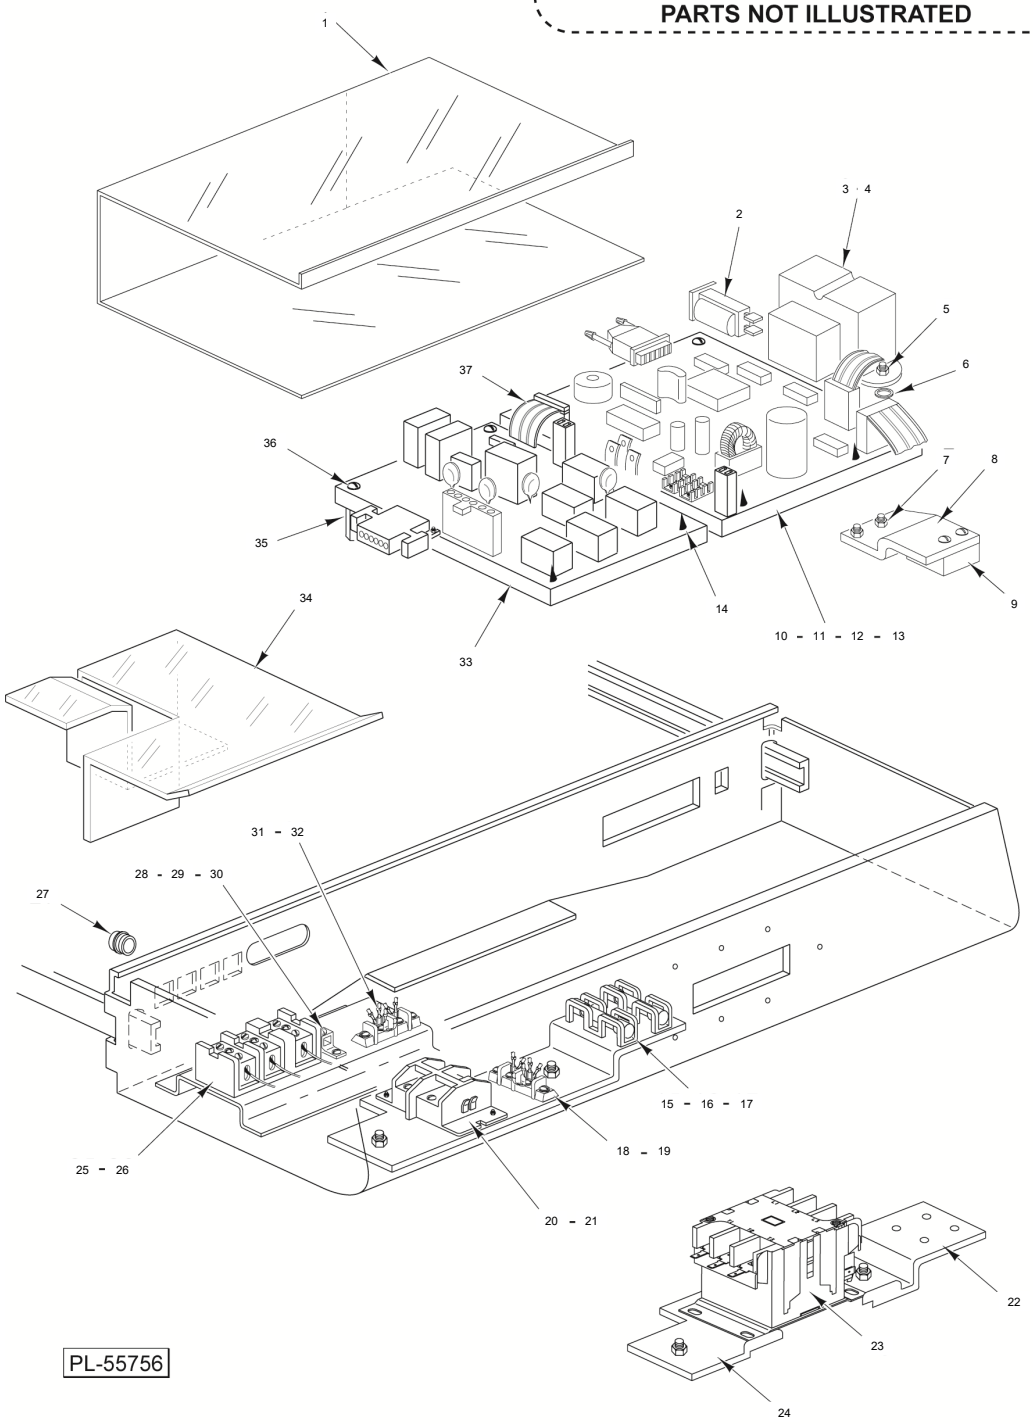

ELECTRICAL COMPONENTS (LX SERIES)

ELECTRICAL COMPONENTS
(LX SERIES)

ILLUS. PL-55756	PART NO.	NAME OF PART	AMT.
1	00-329079	Barrier - Board (Mylar)	1
2	00-328981-00001	Breaker - Circuit (5 Amp.)	1
3	00-294500-025-1	Transformer (45 VA, 50/60 Hz.)	1
4	00-328971-00001	Transformer Harness Assy.	1
5	NS-031-08	Stop Nut 8-32 Special (SST)	2
6	WS-017-06	Washer .281 x .625 x .062 (SST)	2
7	NS-031-08	Stop Nut 8-32 Special (SST)	2
8	00-329065	Bracket - Reed Switch Mounting (Incls. Locating Screws)	1
9	00-473109	Reed Switch Assy.	1
10	00-328670	Board - Control (LX40 Series)	1
11	00-473173	Board - Control (LX18/30 Series)	1
12	00-473173-00002	Board - Control (LXG Series)	1
13	00-473173-00003	Board - Control (LX30C W/Booster)	1
14	00-329056-00001	Standoff - Dual Locking	4
15	00-294436-00003	Block - Fuse	2
16	FE-021-19	Fuse (3.2 Amp., 250 V.)	2
17	SC-021-08	Mach. Screw 6-32 x 3/8 Slotted Rd. Hd. (SST)	2
18	00-294325-016-1	Block - Terminal	1
19	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	2
20	00-087713-085-1	Contactor - Double Pole (50/60 Hz.) (LXH & LXGH)	1
21	NS-031-08	Stop Nut 8-32 Special (SST)	2
22	00-749728	Bracket - Contactor (Short) (3 Ph.)	1
23	00-087713-104-1	Contactor (3-Pole) (30 amp.) (3 Ph.)	1
24	00-749727	Bracket - Contactor (Long) (3 Ph.)	1
25	00-294325-015-1	Block - Terminal	1
26	SC-112-39	Mach. Screw 8-32 x 3/4 Slotted Rd. Hd. (SST)	2
27	FE-019-43	Strain Relief (All H Series)	AR
28	00-118544-00002	Lug - Grounding	1
29	SC-093-23	Mach. Screw 10-24 x 3/8 Phil. Pan Hd. (SST)	2
30	WL-014-07	Lockwasher #10 External Shakeproof (SST)	2
31	00-294325-016-1	Block - Terminal	1
32	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	2
33	00-328721-00006	Board - Relay	1
34	00-329080	Barrier - Power (Mylar)	1
35	00-474281	Standoff (Male/Female Hex)	4
36	SC-021-08	Mach. Screw 6-32 x 3/8 Slotted Rd. Hd. (SST)	4
37	00-892793	Harness - Jumper (Conn. To Socket) (Conn. to Socket)	1
38	00-087714-046-1	Relay (2-Pole) (30 Amp.)	1
39	00-087713-040-2	Contactor (30 Amp., 3-Pole)	1
40	00-749610	Bracket - Relay Mounting	1
41	00-749468	Bracket - Contactor-Mounting	1
42	00-329787	Nut 10-24 Weld	2
43	00-065890-00029	Connector - Insulated	1
44	00-474673	Support - Harness	1

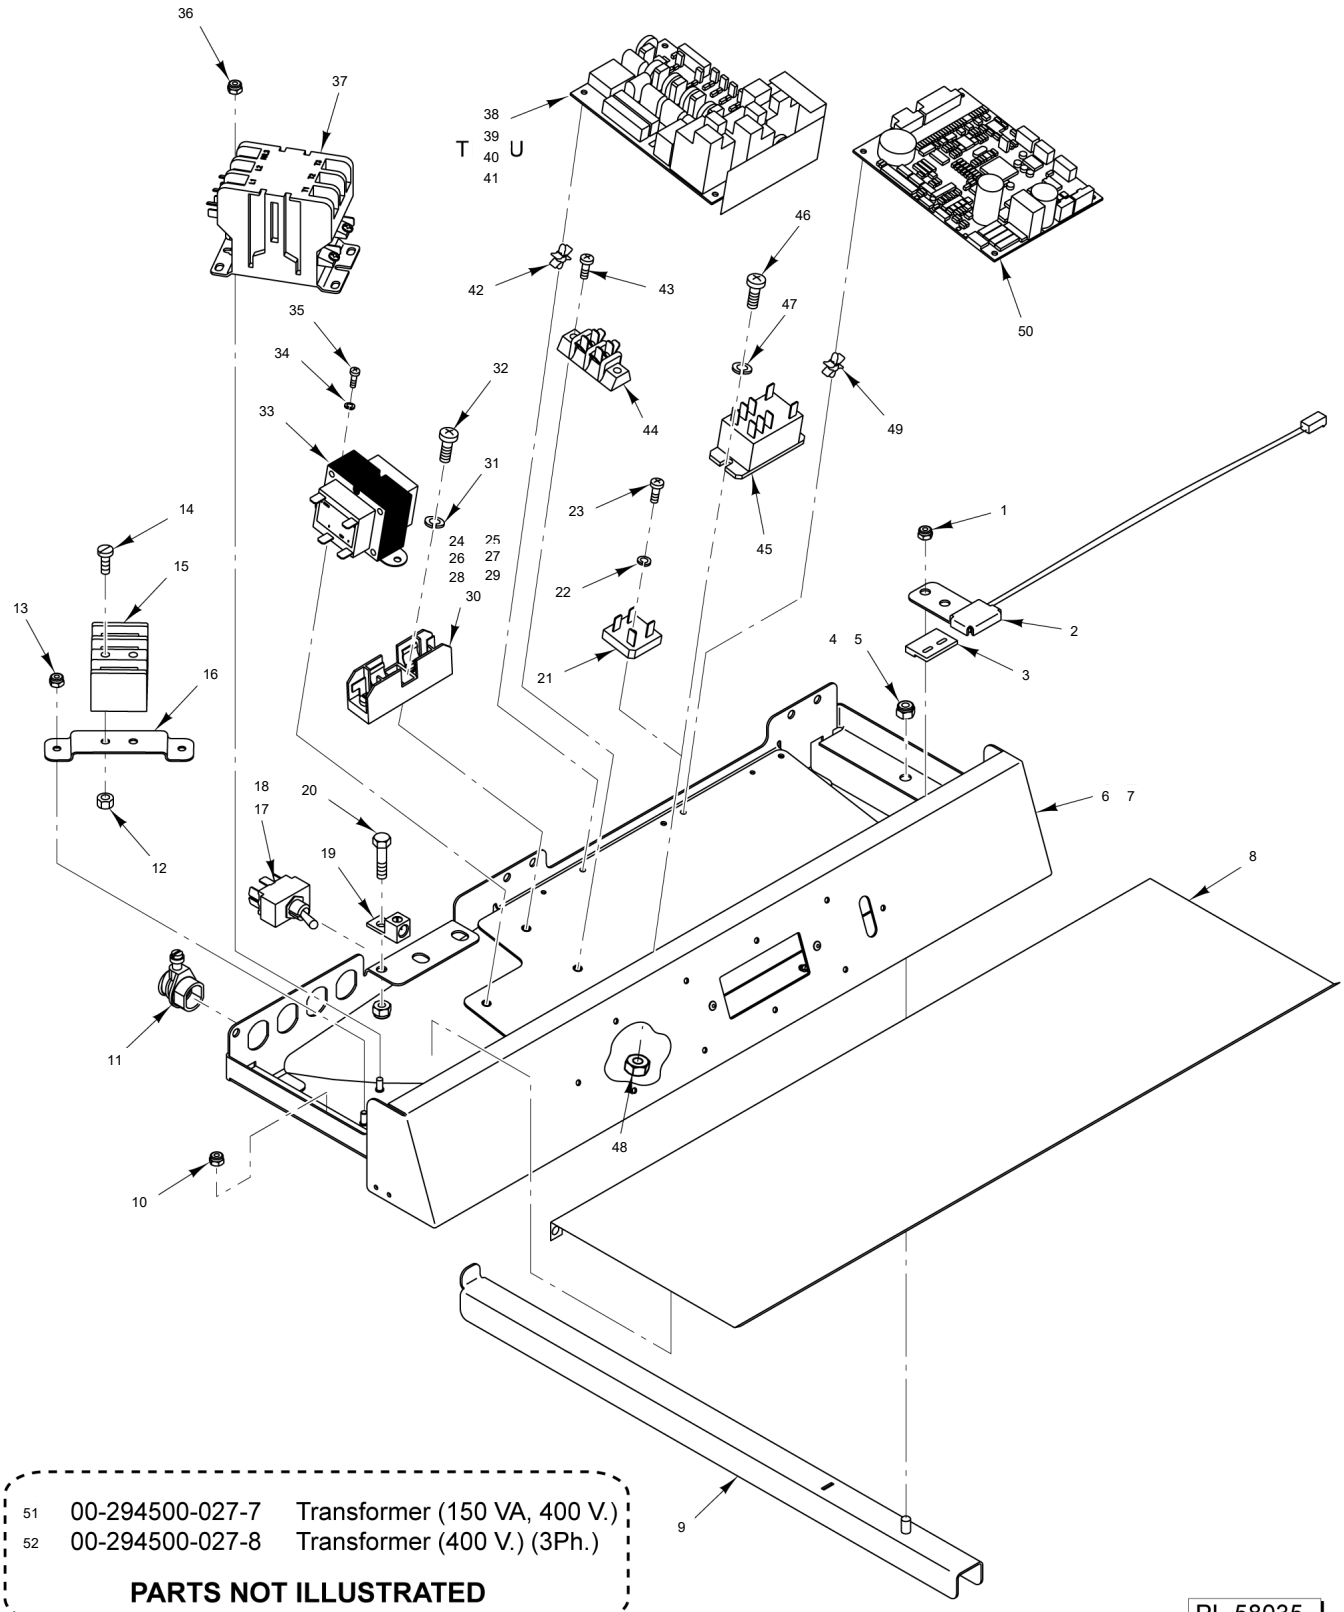

51	00-294500-027-7	Transformer (150 VA, 400 V.)
52	00-294500-027-8	Transformer (400 V.) (3Ph.)

PARTS NOT ILLUSTRATED

PL-58035

ELECTRICAL COMPONENTS (LXi SERIES)

ELECTRICAL COMPONENTS
(LXi SERIES)

ILLUS. PL-58035	PART NO.	NAME OF PART	AMT.
1	NS-031-08	Stop Nut 8-32 Special (SST)	2
2	00-892624	Bracket - Reed Switch Mtg.	1
3	00-473109	Switch Assy. - Door	1
4	NS-047-82	Stop Nut 1/4-20 Hex (SST)	3
5	WL-006-23	Lockwasher 5/16 Helical (SST)	4
6	00-918315	Drawer Weldment - Top (Without Bezel)	1
7	00-892469	Drawer Weldment - Top (With Bezel)	1
8	00-892713	Barrier - Mylar	1
9	00-892471	Drawer - Rail	2
10	NS-047-82	Stop Nut 1/4-20 Hex (SST) (LXiC)	2
11	FE-019-43	Strain Relief	4
12	NS-031-08	Stop Nut 8-32 Special (SST) (LXiC)	2
13	NS-031-08	Stop Nut 8-32 Special (SST) (LXiC)	1
14	SC-112-39	Mach. Screw 8-32 x 3/4 Slotted Rd. Hd. (SST) (LXiC)	2
15	00-294325-015-1	Block - Terminal (LXiC)	1
16	00-892602	Bracket - Terminal Connector (LXiC)	1
17	00-087711-180-1	Switch - Toggle D.P.D.T.	1
18	WL-008-32	Lockwasher 1/2 Internal Shakeproof	1
19	00-118544-00002	Lug - Grounding	1
20	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	1
*21	00-473660	Rectifier (Previous Construction)	1
22	WL-006-07	Lockwasher #10 Helical (SST)	1
23	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	1
24	00-294436-00002	Block - Fuse (3 Ph.) (LXiH)	1
25	FE-023-78	Fuse (1.25 Amp., 500 V.)	1
26	FE-022-74	Fuse (0.6 Amp., 500 V.)	1
27	00-473196	Bracket - Fuse	1
28	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	1
29	WS-017-06	Washer .281 x .625 x .062 (SST)	1
30	NS-031-15	Stop Nut 10-24 Hex (SST)	1
31	WL-006-07	Lockwasher #10 Helical (SST)	1
32	SC-066-05	Mach. Screw 10-24 x 3/8 Phil. Truss Hd. (SST)	1
33	00-294500-00051	Transformer (30 VA, 50/60 Hz.)	1
34	WL-006-07	Lockwasher #10 Helical (SST)	2
35	SC-066-05	Mach. Screw 10-24 x 3/8 Phil. Truss Hd. (SST)	2
36	NS-031-08	Stop Nut 8-32 Special (SST) (LXiH)	2
37	00-087713-00106	Contactor (25 Amp., 3-Pole) (LXiH)	1
38	00-892934-00001	Relay - Board Assy.	1
39	SC-021-98	Mach. Screw 8-32 x 3/8 Phil. Rd. Hd. (SST)	2
40	00-749610	Bracket - Relay Mounting (3 Ph.)	1
41	FE-024-94	Fuse - Time Delay (4.0 Amp.)	2
42	00-329056-00001	Standoff	4
43	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	2
44	00-294325-016-1	Block - Terminal	1
45	00-087714-046-1	Relay (2-Pole) (30 Amp.) (3 Ph.) (LXiH)	1
46	SC-021-98	Mach. Screw 8-32 x 3/8 Phil. Rd. Hd. (SST)	2
47	WL-006-01	Lockwasher #8 Helical (SST)	2
48	NS-011-12	Nut 8-32 Hex (SST)	2
49	00-329056-00001	Standoff	4
50	00-892932	Control Board Assy.	1
51	01-650130	Transformer (150 VA, 50/60Hz)	1
52	01-650130	Transformer (150 VA, 50/60Hz)	1

* Discontinued use with serial number 23-1085-462.

ITEM	NOMENCLATURE	END 1	END 2	PN	USED ON
1	Harness – Booster (Contactor to Booster)	1HTR	1CON	00-328967-00001	LXH & LXGH Series
		3TAS			
		1TAS	P2		
			3TAS		
2	Harness –Sensor (Control Board to Sensors)	P1	WLS	00-328969-00001	LX18H, LX30, & LXG Series
			WASH		
			RINSE		
			BSTR		
3	Harness – Sensor (Control Board to Sensors)	P1	WLS	00-328970-00001	LX18 & LX18C
			WASH		
			RINSE		
4	Harness – Display	Ribbon Cable		00-329205-00001	LX40
5	Harness – Standard (Relay Board to Base Components)	P2	2TB	00-473221-00001	LX Series
			DRAIN		
			1FU		
			FILL		
			1MTR		
			GND		
6	Harness – Sensor (Control Board to Sensors)	P1	RINSE	00-474929-00001	LX40
			WASH		
			BSTR		
			WLS		
			P1		
			BSTR		
			P10		
7	Harness – Chemical Pumps (Relay Board to Base Terminal Block)	2TB	3TB	00-475300-00001	LX Series
		P3			
			2FU		
		GND	GND		
8	Harness - Booster (Contactor to Booster)	1HTR	1CON	00-748922-00001	LXH & LXGH Series
		3TAS			
		1TAS	P2		
			3TAS		
9	Harness – Sump Heater	K1	2TAS	00-749135-00001	LX Series (3-Phase)
		1CR			
			FILL		
			2HTR		
			1CON		PL-65122

HARNESSES

HARNESSES

ILLUS. PL-65122	PART NO.	NAME OF PART	AMT.
1	00-328967-00001	Harness - Booster (Contactor to Booster) (LXH & LXGH Series)	1
2	00-328969-00001	Harness - Sensor (Control Board to Sensors) (LX18H, LX30, & LXG Series)	1
3	00-328970-00001	Harness - Sensor (Control Board to Sensors) (LX18 & LX18C)	1
4	00-329205-00001	Harness - Display (LX40)	1
5	00-473221-00001	Harness - Standard (Relay Board to Base Components) (LX Series)	1
6	00-474929-00001	Harness - Sensor (Control Board to Sensors) (LX40)	1
7	00-475300-00001	Harness - Chemical Pump (Relay Board to Terminal Block) (LX Series)	1
8	00-748922-00001	Harness - Booster (Contactor to Booster) (LXH & LXGH Series)	1
9	00-749135-00001	Harness - Sump Heater (LX Series 3-Phase)	1

ITEM	NOMENCLATURE	END 1	END 2	PN	USED ON
10	Harness – Booster	1HTR	1CON	00-749497-00001	LX Series (3-Phase)
		3TAS			
		2TB			
		1TAS	P2		
			3TAS		
11	Harness – LX Standard (3PH)	P2	2TB	00-749551-00001	LX Series (3-Phase)
			DRAIN		
			1FU		
			FILL		
		2TB			
		2CON	K9		
			2TB		
			1CON		
			1MTR		
		GND	GND		
12	Harness – Low Volt Transformer	P1	GND	00-892625	LXi Series
			1T		
		2TB			
13	Harness – Booster	2HTR	1CON	00-892636	LXi Series
		3TAS			
		2TAS	P1		
			3TAS		
		1CON	2TB		
14	Harness – Power Transformer	2T	2TB	00-892649	LXi Series
			1T		
			3FU		
		2TB	GND		
15	Harness - Sensor	P2	WLS	00-892651	LXi Series
			WASH		
			RINSE		
			BSTR		
16	Harness – Jumper (Conn to Socket)	Ribbon Cable		00-892793	LXi Series
17	Harness – Chemical Sensor	P2	P2	00-892802	LXi Series
18	Harness – Chemical Sensor (Jumper)	P2	P2	00-892838	LX40 & LXi Series

PL-65123

HARNESSES (CONTINUED-1)

HARNESSES (CONTINUED-1)

ILLUS. PL-65123	PART NO.	NAME OF PART	AMT.
10	00-749497-00001	Harness - Booster (LX Series 3-Phase)	1
11	00-749551-00001	Harness - Standard (LX Series 3-Phase)	1
12	00-892625	Harness - Low Volt Transformer (LXi Series)	1
13	00-892636	Harness - Booster (LXi Series)	1
14	00-892649	Harness - Power Transformer (LXi Series)	1
15	00-892651	Harness - Sensor (LXi Series)	1
16	00-892793	Harness - Jumper (Conn. To Socket) (LXi Series)	1
17	00-892802	Harness - Chemical Sensor (LXi Series)	1
18	00-892838	Harness - Chemical Sensor (Jumper) (LX40 & LXi Series)	1

ITEM	NOMENCLATURE	END 1	END 2	PN	USED ON
19	Harness - Standard	REC	2TB	00-892728	LXi Series
			DRAIN		
		P1	REC		
			P1		
			FILL		
			3TB		
			1T		
		K8	1MTR		
		1MTR			
		2TB	FILL		
		1TAS	1HTR		
		K5			
		K6	1TAS		
		GND	GND		
		TK-GND			
		MTR-GND			
		DR-GND			
		GND	CH-GND		
20	Harness – Booster / Sump	2HTR	1CON	00-892798	LXi Series (3-Phase)
		3TAS			
		2TB			
		1CR			
			FILL		
			1HTR		
		2TAS	P1		
			3TAS		
		K5	1TAS		
21	Harness – Rinse Switch	1	1SW	00-936966	LXiPRC
		2			

PL-65124

HARNESSES (CONTINUED-2)

HARNESSES (CONTINUED-2)


ILLUS. PL-65124	PART NO.	NAME OF PART	AMT.
19	00-892728	Harness - Standard (LXi Series	1
20	00-892798	Harness - Booster/Sump (LXi Series 3-Phase)	1
21	00-936966	Harness - Rinse Switch (LXiPRC)	1

ITEM	NOMENCLATURE	END 1	END 2	PN	USED ON
22	Harness – Standard	REC	2TB	00-892799	LXi Series (3-Phase)
			DRAIN		
		P1	3TB		
			1T		
			REC		
			FILL		
		2TB			
			3TB		
		2CON	K8		
			2TB		
			1CON		
			1MTR		
		K5	J11		
		K8			
		P1	P1		
		GND	GND		
		CH-GND			
		TK-GND			
		MTR-GND			
		DR-GND			
23	Harness – Standard	2MTR	2TB	00-918248	LXi Series (3-Phase)
		P1	2MTR		
			FILL		
		2TB			
		2CR	K8		
			2TB		
			1MTR		
			1CON		
		1MTR			
		2TB	3TB		
		P1			
			1T		
			P1		
		K5	J11		
		K8			
		GND	GND		
		CH-GND			
		TK-GND			
		1MTR-GND			
		2MTR-GND			PL-65125

HARNESSES (CONTINUED-3)

HARNESSES (CONTINUED-3)

ILLUS. PL-65125	PART NO.	NAME OF PART	AMT.
22	00-892799	Harness - Standard (LXi Series 3-Phase)	1
23	00-918248	Harness - Standard (LXi Series 3-Phase)	1

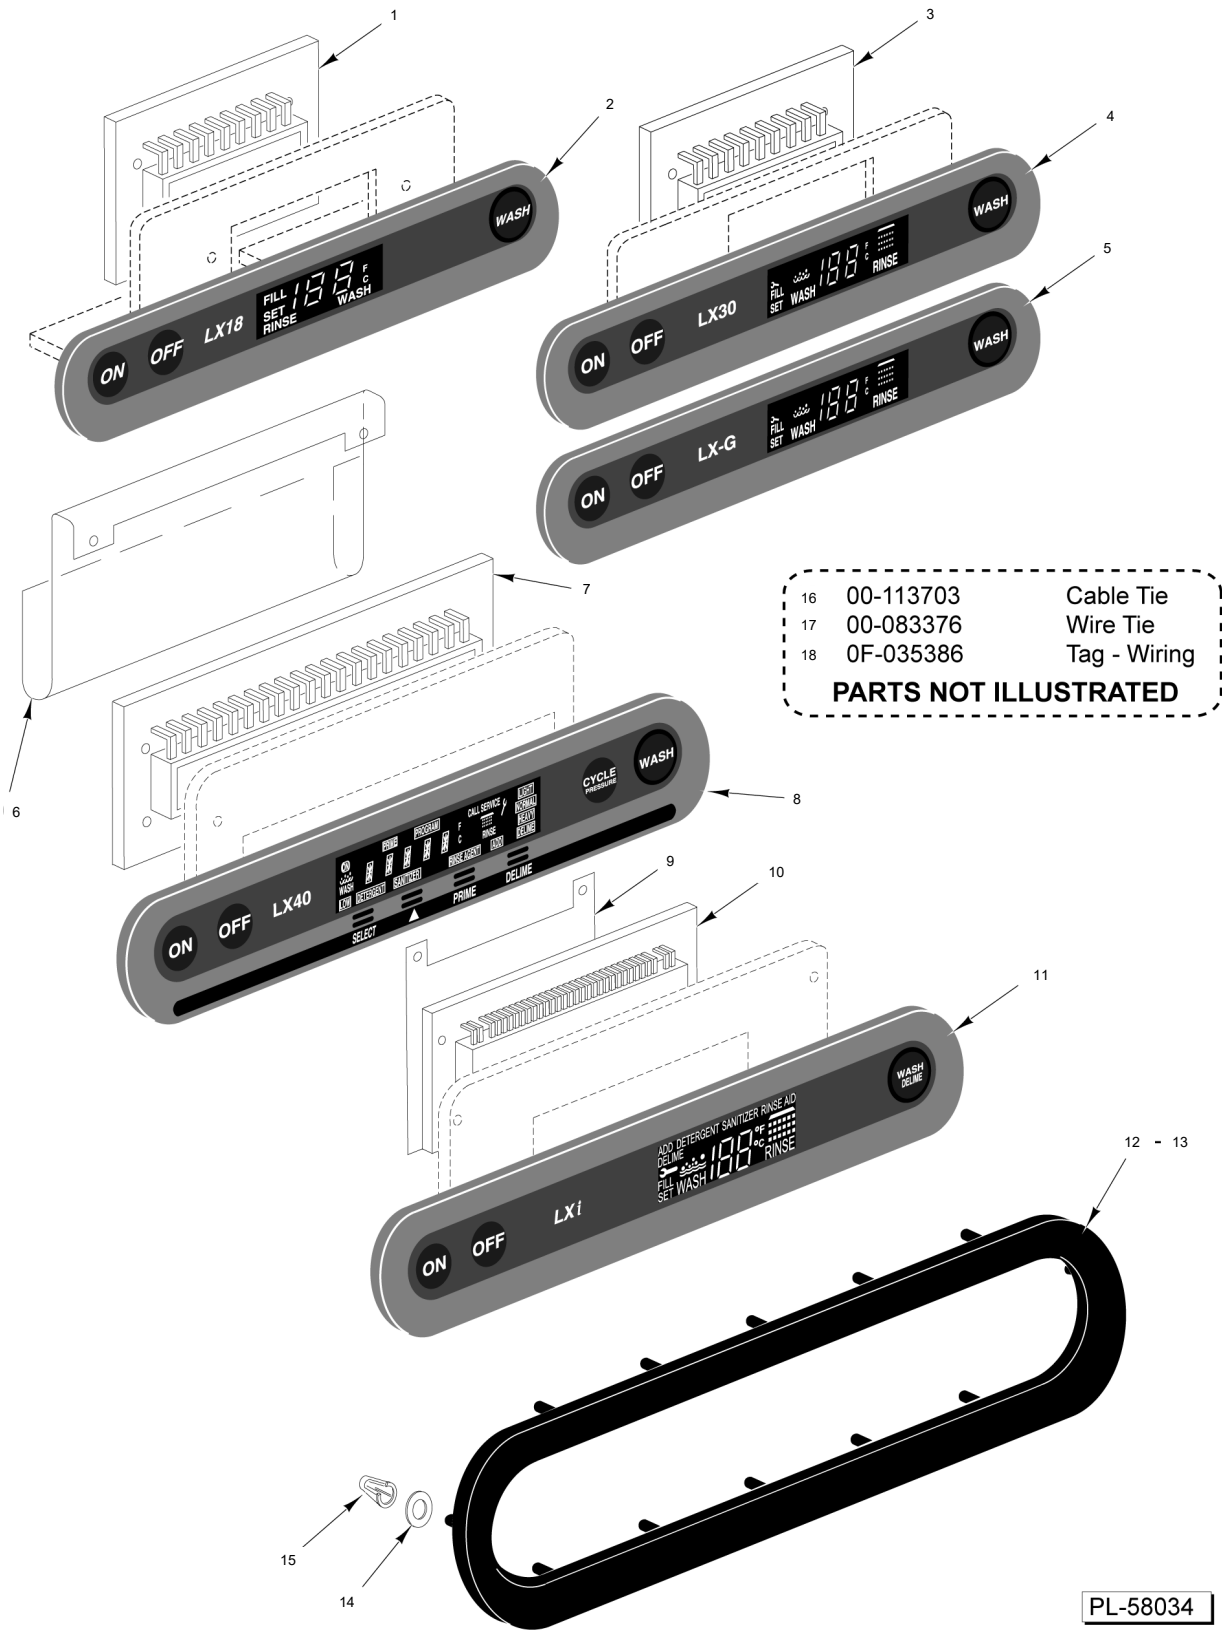

16	00-113703	Cable Tie
17	00-083376	Wire Tie
18	0F-035386	Tag - Wiring

PARTS NOT ILLUSTRATED

PL-58034


DISPLAY

DISPLAY

ILLUS. PL-58034	PART NO.	NAME OF PART	AMT.
*1	00-329062	Display Module (LX18 Series)	1
*2	00-328741	Switch - Keypad Membrane (LX18 Series)	1
3	00-913060	Display Module (LX30 & LXG Series)	1
4	00-328739	Switch - Keypad Membrane (LX30 Series)	1
5	00-474170	Switch - Keypad Membrane (LXG Series)	1
6	00-329207	Barrier - Display Board (Mylar) (LX40 Series)	1
7	ML-130177-0000Z	Kit - Conversion Display (LX40)	1
8	00-474923	Switch - Keypad Membrane (LX Series)	1
9	00-563560	Barrier - Mylar	1
10	00-892458	Display Module (LXi & LXiG Series)	1
11	00-892473	Switch - Keypad Membrane (LXi & LXiG Series)	1
12	00-328622	Bezel - Display (LX18/30, LXG, & LXi Series)	1
13	00-328620	Bezel - Display (LX40 Series)	1
14	00-329037	Ring - Gasket	AR
15	00-328993	Stud - Receiver	AR
16	00-113703	Cable Tie	4
17	00-083376	Wire Tie	4
18	0F-035386	Tag - Wiring	AR

* No Longer Available

(LX30/40, LXG, L

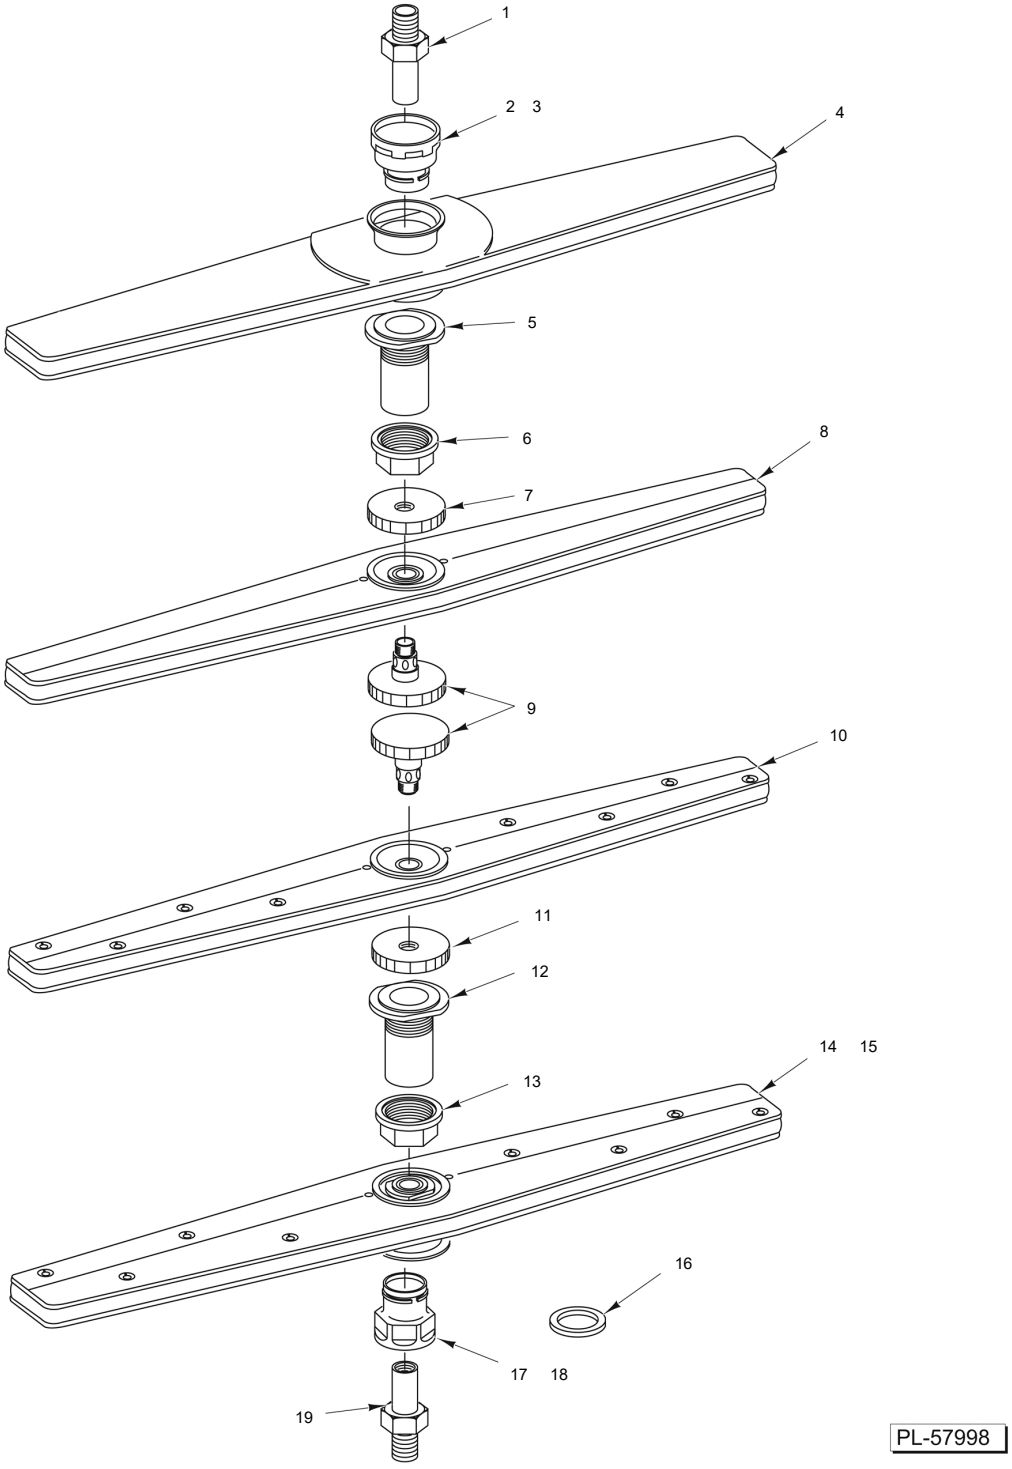


WASH AND RINSE ARM ASSEMBLY
(PREVIOUS CONSTRUCTION)

WASH AND RINSE ARM ASSEMBLY (PREVIOUS CONSTRUCTION)

ILLUS. PL-57998	PART NO.	NAME OF PART	AMT.
1	00-473096	Shaft - Wash Arm	1
2	00-329308	Nut - Wash Arm Assy. (Incls. Item 3)	1
3	00-436106	Ring	1
4	00-892101	Wash Arm Assy. (Plugless)	1
5	00-328610	Guide - Wash Arm	1
6	00-436109	Nut - Wash Arm	1
7	00-328748	Washer - Rinse Arm	1
8	00-749369	Rinse Arm (Plugless)	2
9	00-328746	Shaft - Rinse Arm	2
10	00-749369	Rinse Arm (Plugless)	2
11	00-328748	Washer - Rinse Arm	1
12	00-328610	Guide - Wash Arm	1
13	00-436109	Nut - Wash Arm	1
14	00-892101	Wash Arm Assy. (Plugless)	1
15	00-749367	Arm - Wash	1
16	00-474886	Washer - Restrictor (LXG & LXiG Series)	1
17	00-329308	Nut - Wash Arm Assy. (Incls. Item 18)	1
18	00-436106	Ring	1
19	00-473096	Shaft - Wash Arm	1
	00-473564	Plug - Clean-Out	AR


(LX30/40, LXG,

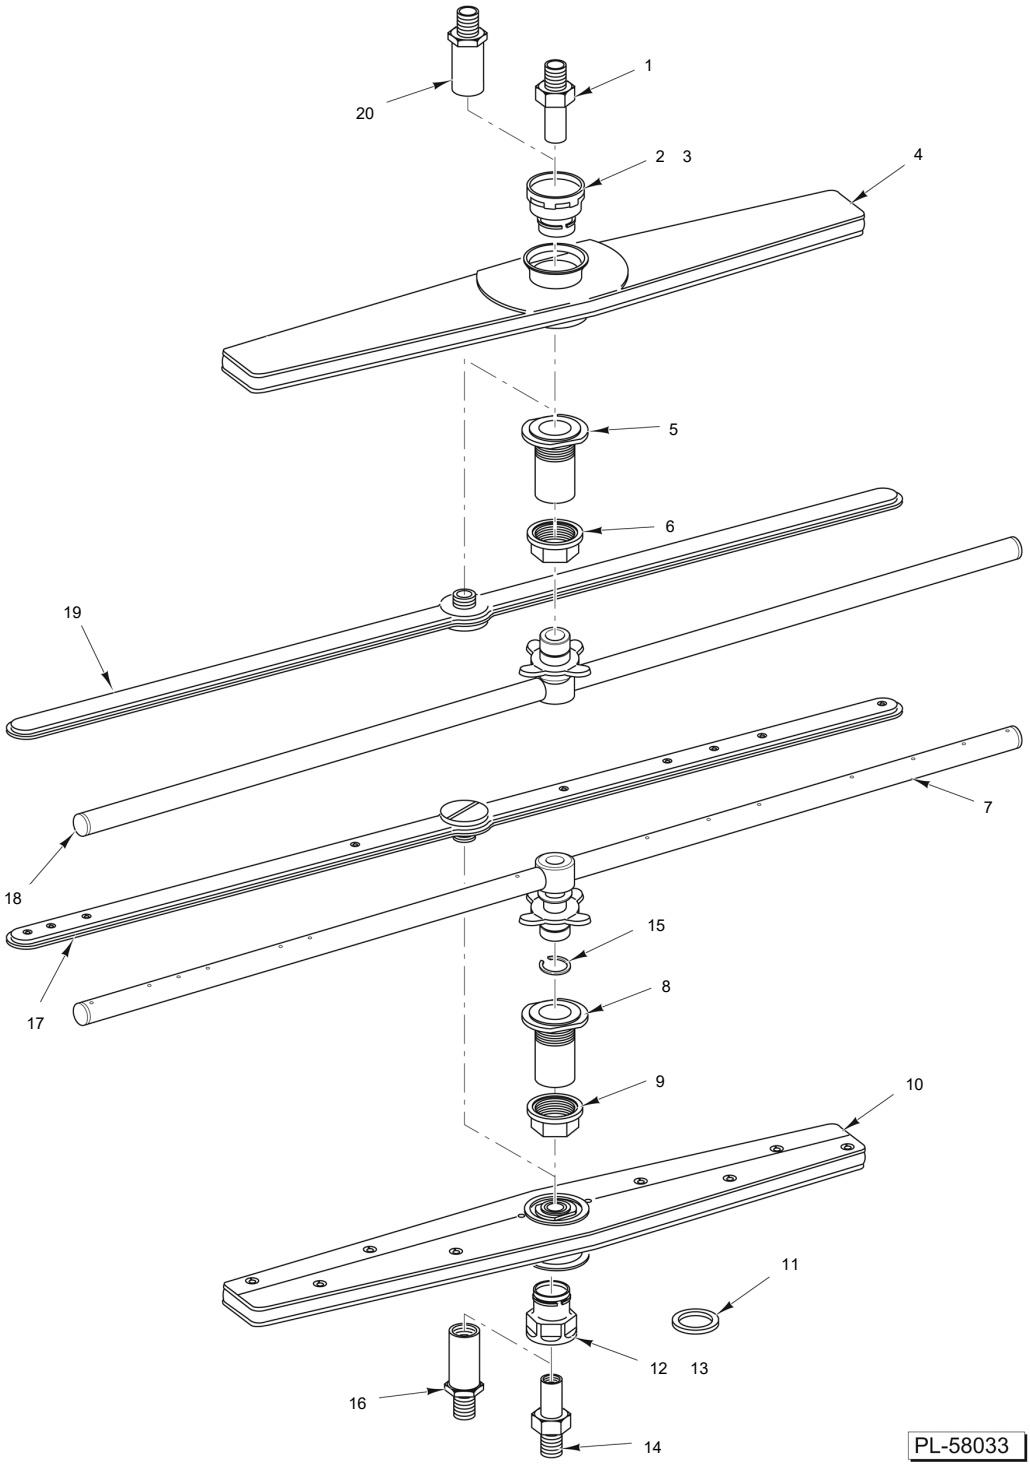

WASH AND RINSE ARM ASSEMBLY
(CURRENT CONSTRUCTION)

WASH AND RINSE ARM ASSEMBLY (CURRENT CONSTRUCTION)


ILLUS. PL-58033	PART NO.	NAME OF PART	AMT.
1	00-473096	Shaft - Wash Arm	1
2	00-893495	Nut - Wash Arm Assy. (Incls. Item 3)	1
3	00-436106	Ring	1
4	00-892101	Wash Arm Assy. (Plugless)	1
5	00-328610	Guide - Wash Arm	1
6	00-436109	Nut - Wash Arm	1
7	00-918113-00001	Rinse Arm Assy. (Incls. Items 15)	2
8	00-328610	Guide - Wash Arm	1
9	00-436109	Nut - Wash Arm	1
10	00-892101	Wash Arm Assy. (Plugless)	1
11	00-474886	Washer - Restrictor (LXG & LXiG Series)	1
12	00-893495	Nut - Wash Arm Assy. (Incls. Item 13)	1
13	00-436106	Ring	1
14	00-473096	Shaft - Wash Arm	1
15	00-918113-00009	Retaining Ring	1
16	00-941724	Shaft - Wash Arm (LXiPRC & LXiPRGC)	1
17	01-240096-00003	Arm, Rinse Assy (LXiPRC & LXiPRGC)	1
18	00-918113-00001	Rinse Arm Assy.	2
19	01-240096-00003	Arm, Rinse Assy (LXiPRC & LXiPRGC)	1
20	00-941724	Shaft - Wash Arm (LXiPRC & LXiPRGC)	1
	00-473564	Plug - Clean-Out	AR

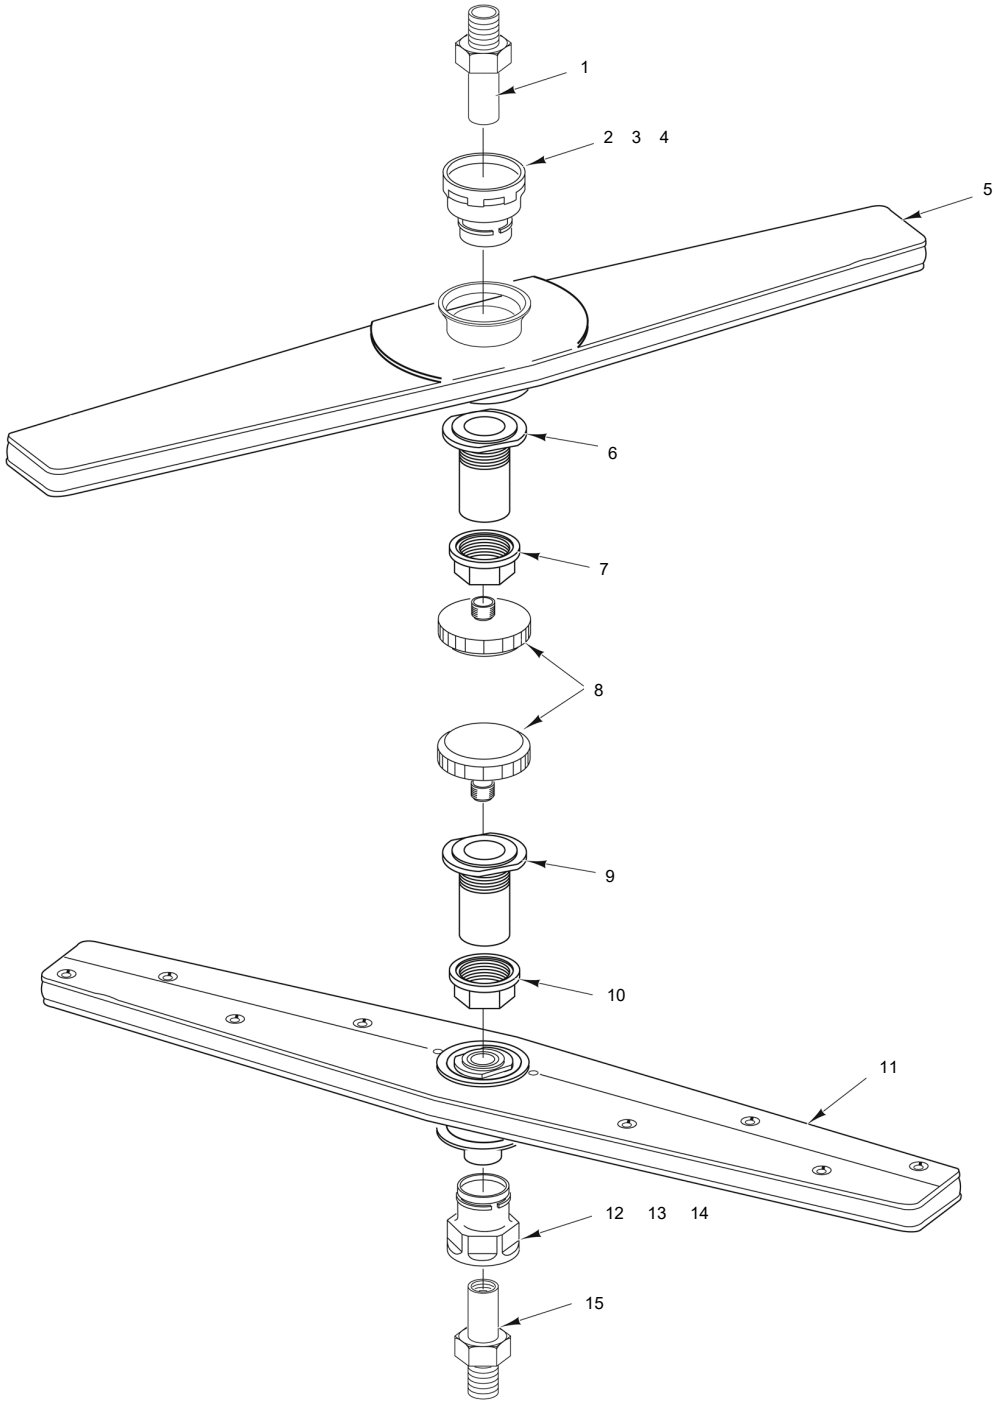

WASH ARM ASSEMBLY
(LX18 SERIES)

WASH ARM ASSEMBLY
(LX18 SERIES)


ILLUS. PL-56646	PART NO.	NAME OF PART	AMT.
1	00-473095	Shaft - Wash Arm	1
2	00-329308	Nut - Wash Arm Assy. (Incls. Item 4)	1
3	00-893495	Nut - Wash Arm Assy. (Incls. Item 4)	1
4	00-436106	Ring	1
5	00-892101	Wash Arm Assy. (Plugless) (Incls. Items 6 & 7)	1
6	00-328610	Guide - Wash Arm	1
7	00-436109	Nut - Wash Arm	1
8	00-329010	Screw - Wash Arm Retaining	2
9	00-328610	Guide - Wash Arm	1
10	00-436109	Nut - Wash Arm	1
11	00-892101	Wash Arm Assy. (Plugless) (Incls. Items 9 & 10)	1
12	00-329308	Nut - Wash Arm Assy. (Incls. Item 14)	1
13	00-893495	Nut - Wash Arm Assy. (Incls. Item 14)	1
14	00-436106	Ring	1
15	00-473095	Shaft - Wash Arm	1

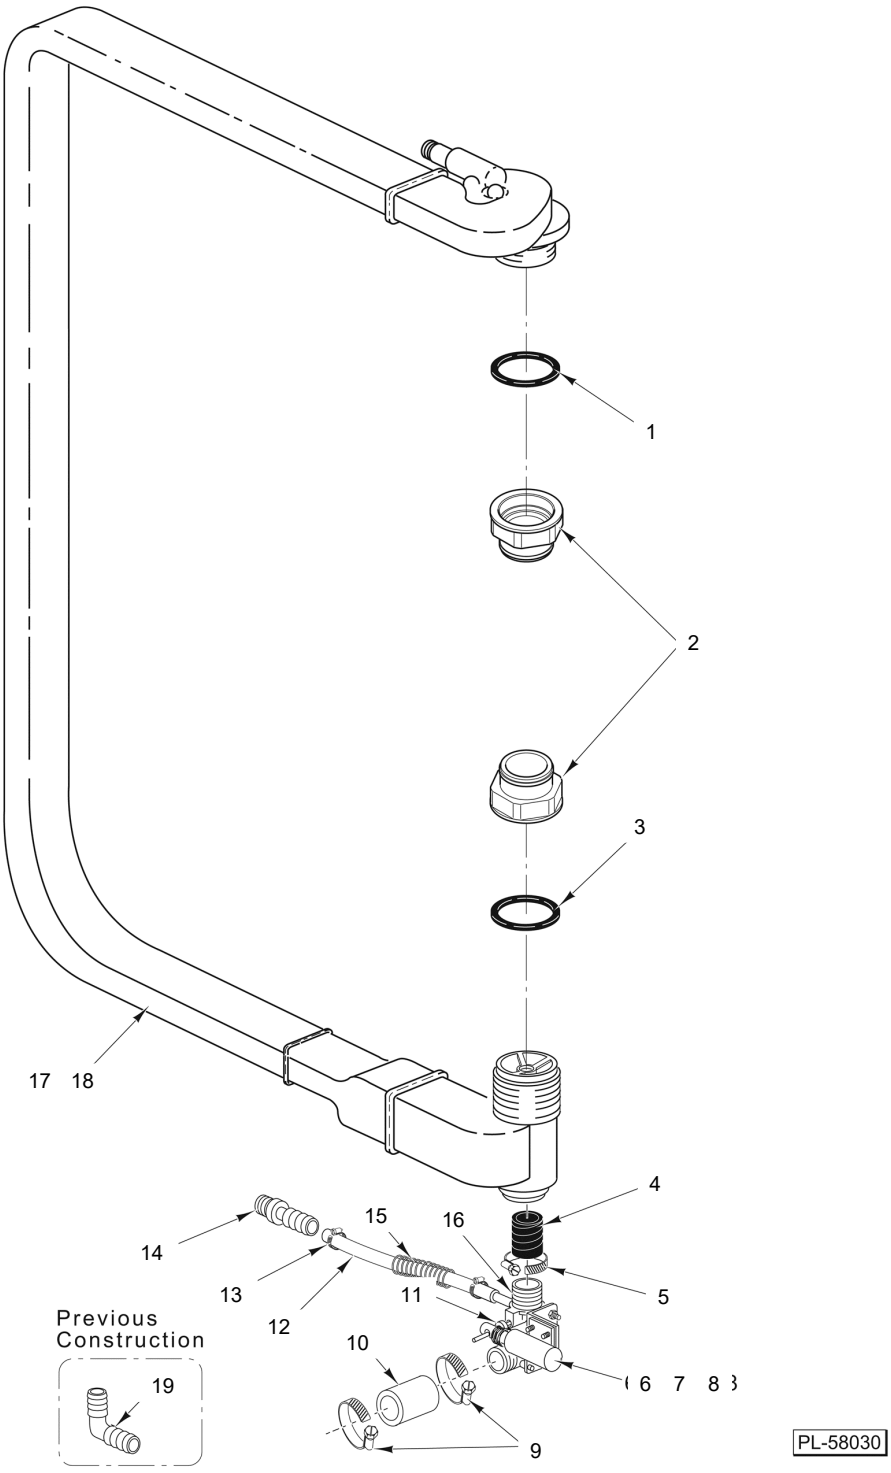

WASH PIPE ASSEMBLY
(PREVIOUS CONSTRUCTION)

WASH PIPE ASSEMBLY
(PREVIOUS CONSTRUCTION)


ILLUS. PL-58030	PART NO.	NAME OF PART	AMT.
1	00-328998	Gasket - Wash Arm Support	1
2	00-893495	Nut - Wash Arm Assy.	2
3	00-328998	Gasket - Wash Arm Support	1
4	00-328641	Hose - Outlet Drain Valve	1
5	00-534651	Clamp - Hose (#32 Worm Drive)	1
6	00-473011	Solenoid Ledex	1
7	00-067500-00007	O-Ring	1
8	00-473010	Bracket - Solenoid	1
9	00-538412	Clamp - Hose	2
10	00-328607	Hose - Pump Outlet	1
11	00-473009	Bushing - Valve Rod	1
12	00-292856-00002	Hose - Drain	1
13	00-528499	Clamp - Hose	2
14	00-186527	Adapter - Hose	1
15	00-476664-00001	Spring - Drain Hose	1
16	00-329241	Drain Body Valve Assy.	1
17	00-893457	Pipe - Wash Assy. (LX & LXi Series)	1
18	00-893458	Pipe - Wash Assy. (LXG & LXiG Series)	1
19	00-473144	Elbow - Union (Previous Construction)	1
	00-113703	Cable Tie	1

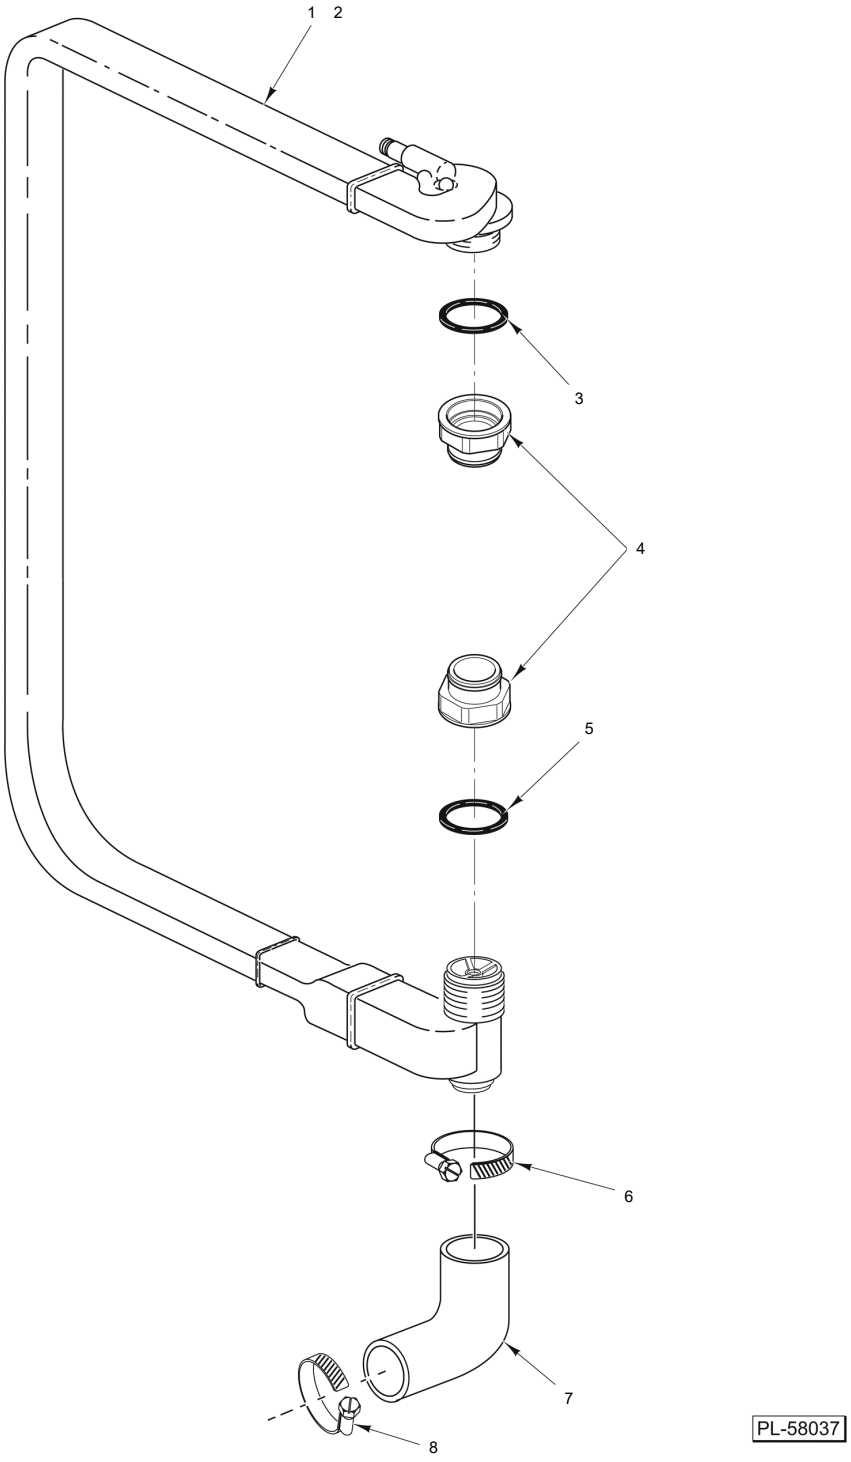

WASH PIPE ASSEMBLY
(CURRENT CONSTRUCTION)

WASH PIPE ASSEMBLY
(CURRENT CONSTRUCTION)

ILLUS. PL-58037	PART NO.	NAME OF PART	AMT.
1	00-893457	Pipe - Wash Assy. (LX & LXi Series)	1
2	00-893458	Pipe - Wash Assy. (LXG & LXiG Series)	1
3	00-328998	Gasket - Wash Arm Support	1
4	00-893495	Nut - Wash Arm Assy.	1
5	00-328998	Gasket - Wash Arm Support	1
6	00-538412	Clamp - Hose	1
7	00-918110	Hose - Pump To Manifold	1
8	00-538412	Clamp - Hose	1

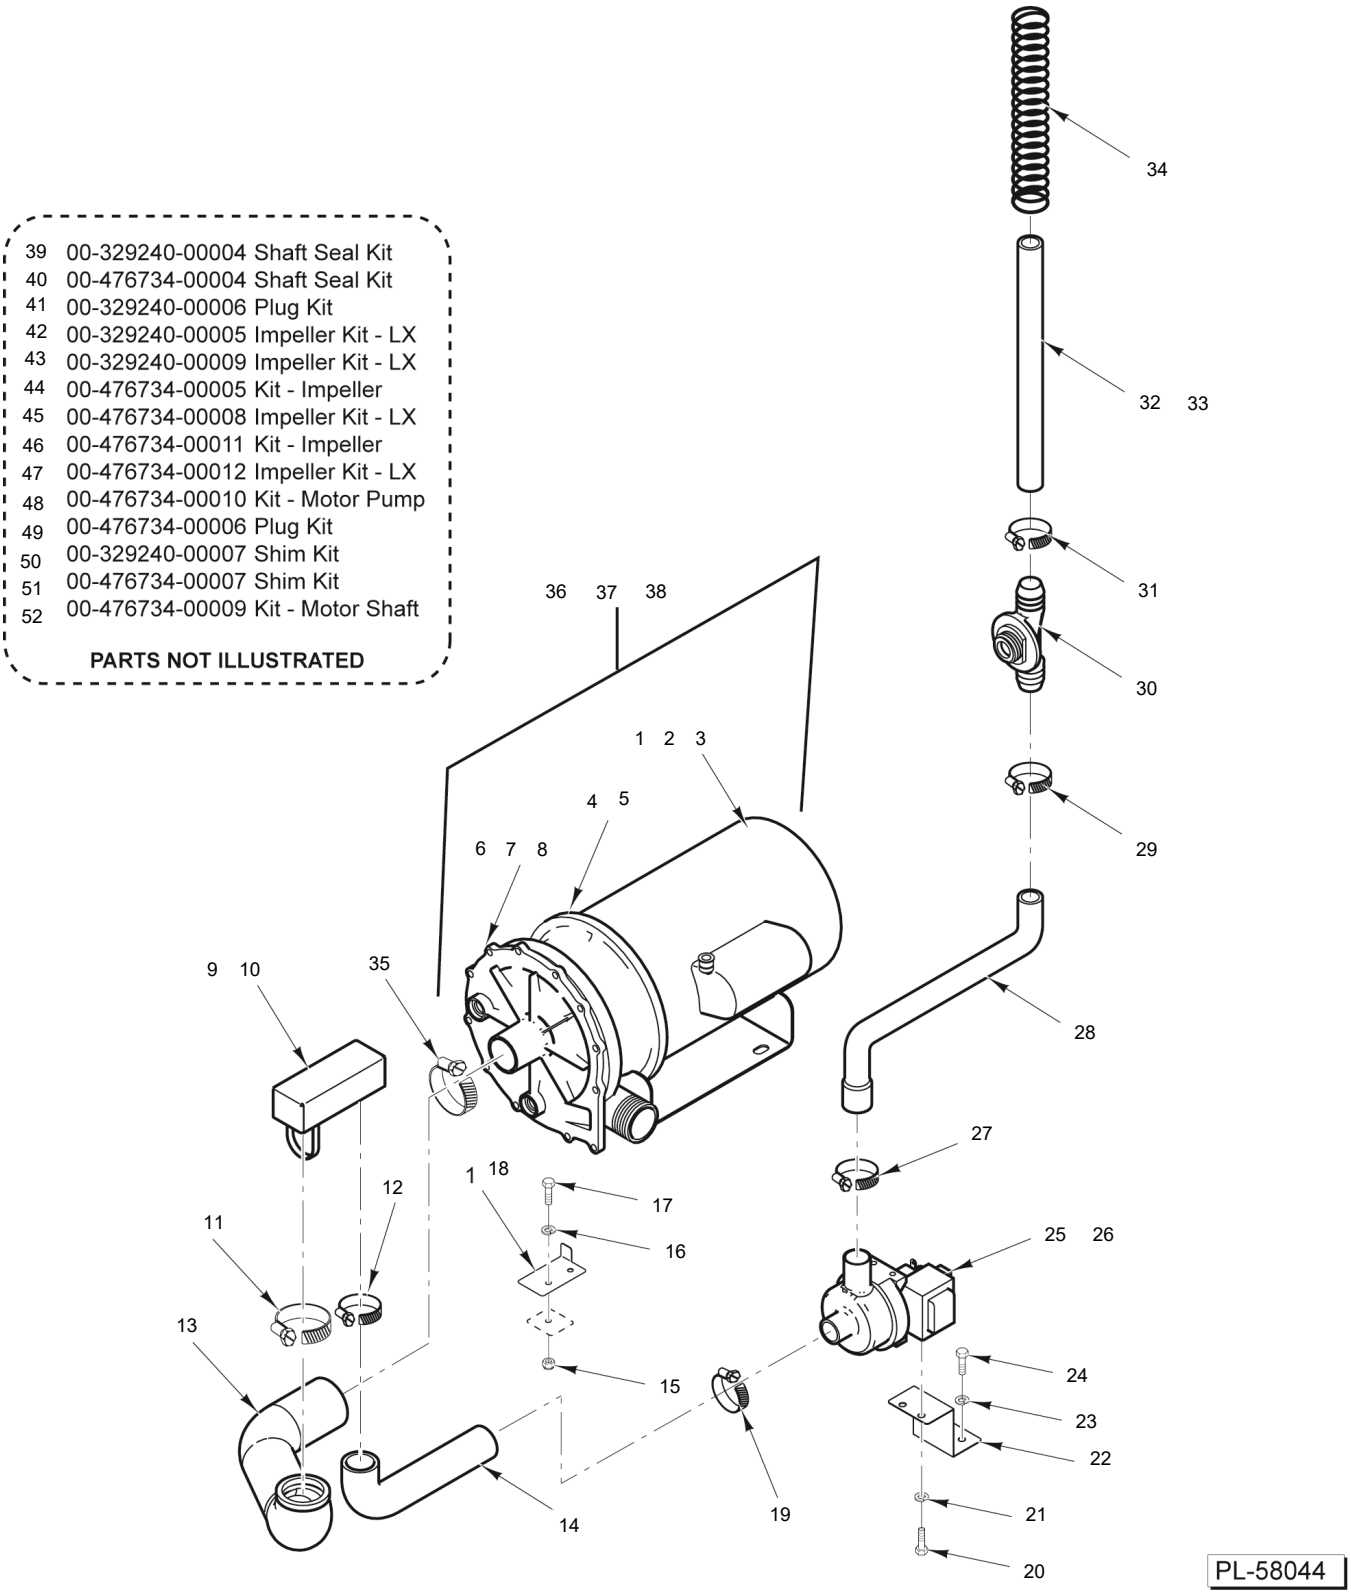


PUMP AND MOTOR ASSEMBLY

PUMP AND MOTOR ASSEMBLY

ILLUS. PL-58044	PART NO.	NAME OF PART	AMT.
1	00-329240-00001	Motor - Pump LX (60 Hz.) (Ingersoll)	1
2	00-329240-00008	Motor - Pump LX (50 Hz.) (Ingersoll)	1
3	00-476734-00001	Kit - Motor (50/60 Hz) (Crane) (Incls. Motor, Casing Screws, Cover Screws, & O-Ring)	1
4	00-329240-00002	Support - Head (Pump Rear) (Ingersoll)	1
5	00-476734-00002	Pump Casing Kit (Crane) (Incls. Casing, Screws, & O-Ring)	1
6	00-329240-00003	Casing (Pump Front) (Ingersoll)	1
7	00-329240-00014	Casing - O-Ring (Ingersoll)	1
8	00-476734-00003	Kit - Cover Pump (Crane) (Incls. Cover, Screws, & O-Ring)	1
9	00-936552	Kit - Debris Strainer (Incls. Box Strainer & Thimble Strainer) (Current Construction)	1
*10	00-918115-00001	Strainer - Sump Tube	1
11	00-538412	Clamp - Hose	1
*12	00-557627	Clamp - Hose	1
13	00-328606	Hose - Pump Inlet	1
*14	00-918135	Hose - Drain Pump Inlet	1
15	NS-031-16	Stop Nut 10-24 Hex Elastic (SST)	2
16	WL-006-17	Lockwasher 1/4 Helical (SST)	2
17	SC-041-86	Cap Screw 1/4-20 x 3/8 Hex Hd. (SST)	2
18	00-328626	Bracket	1
19	00-557627	Clamp - Hose	1
20	SC-118-58	Cap Screw M6 x 1.0 x 12mm Hex Hd. (SST)	2
21	WL-006-17	Lockwasher 1/4 Helical (SST)	2
*22	00-918146	Bracket - Pump	1
23	WL-006-17	Lockwasher 1/4 Helical (SST)	2
24	SC-041-86	Cap Screw 1/4-20 x 3/8 Hex Hd. (SST)	2
*25	00-918203	Pump - Drain (60 Hz.)	1
*26	00-918273	Pump - Drain (50 Hz.)	1
27	00-557627	Clamp - Hose	1
*28	00-918148	Hose - Drain Pump Outlet	1
29	00-528499	Clamp - Hose	1
*30	00-918217	Tee - Check Valve	1
31	00-528499	Clamp - Hose	1
32	00-292856-00002	Hose - Drain (LX Series)	1
33	00-292856-00003	Hose - Drain	1
34	00-476664-00001	Spring - Drain Hose	1
35	00-538412	Clamp - Hose	1
36	00-474837-00001	Pump & Motor Assy. (115/230 V., 60 Hz.) (Incls. All Pump & Motor Parts) (Crane)	1
37	00-474837-00002	Pump & Motor Assy. (115/230 V., 50 Hz.) (Incls. All Pump & Motor Parts) (Crane)	1
38	00-749564-00001	Pump & Motor Assy. (380-400/480 V., 60 Hz., 3 Ph.)	1
39	00-329240-00004	Shaft Seal Kit (Ingersoll) (Incls. Seal, O-Ring, Casing O-Ring, & Shims)	1
40	00-476734-00004	Shaft Seal Kit (Crane) (Incls. Seal, O-Ring, Casing O-Ring, & Shims)	1
41	00-329240-00006	Plug Kit (Ingersoll) (Incls. Ryton Plug & O-Ring)	1
42	00-329240-00005	Impeller Kit - LX (60 Hz.) (Ingersoll) (Incls. Impeller, Casing O-Ring, & Hardware)	1
43	00-329240-00009	Impeller Kit - LX (50 Hz.) (Ingersoll) (Incls. Impeller, Casing O-Ring, & Hardware)	1
44	00-476734-00005	Kit - Impeller (60 Hz.) (Crane) (Incls. Impeller, Casing O-Ring, & Screws)	1
45	00-476734-00008	Impeller Kit - LX (50 Hz.) (Crane) (Incls. Impeller, Casing O-Ring, & Screws)	1
46	00-476734-00011	Kit - Impeller (60 Hz., 3 Ph.) (60 Hz., 3 Ph.)	1
47	00-476734-00012	Impeller Kit (50 Hz., 3 Ph.)	1
48	00-476734-00010	Pump Motor Kit (60 Hz., 3 Ph.)	1
49	00-476734-00006	Plug Kit (Crane) (Incls. Pipe Plug & O-Ring)	1
50	00-329240-00007	Shim Kit (Ingersoll) (Incls. 0.002, 0.015, & 0.025)	1
51	00-476734-00007	Shim Kit (Crane) (Incls. 0.005, 0.015, & 0.030)	1
52	00-476734-00009	Flinger - Motor Shaft (Crane)	1

* Starting Serial Number 23-1085-462.

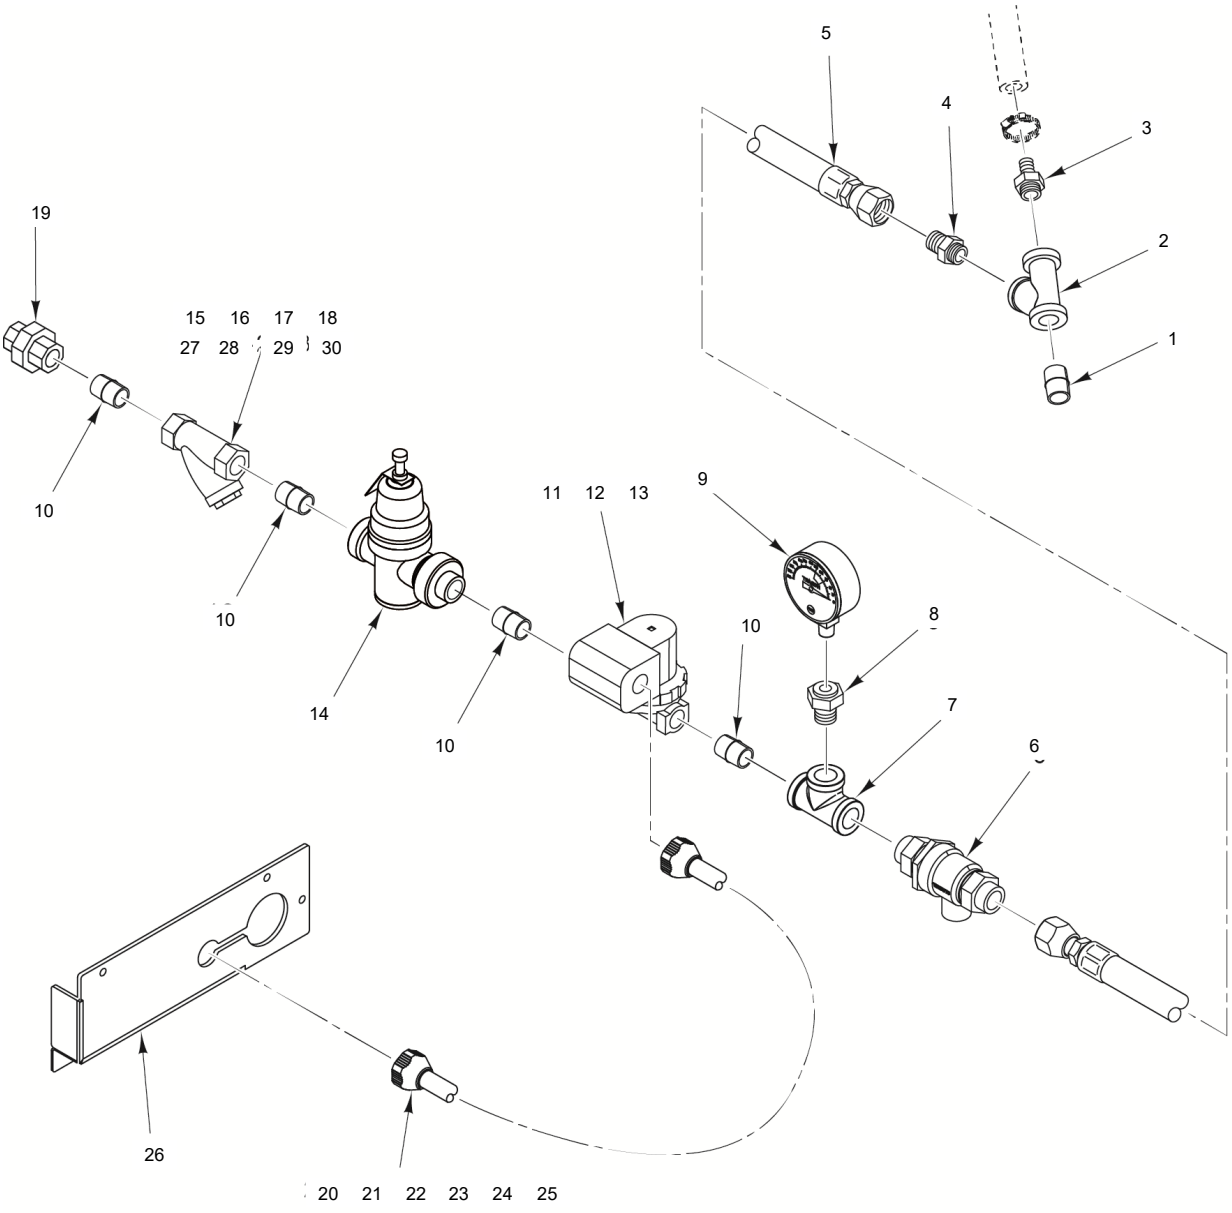


PL-60360

DRAIN WATER TEMPERING

DRAIN WATER TEMPERING

ILLUS. PL-60360	PART NO.	NAME OF PART	AMT.
1	FP-041-50	Pipe 3/4 x 1-3/8 TBE (Brass)	1
2	FP-090-89	Y-Fitting 3/4 x 3/4 x 3/4	1
3	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter	1
4	FP-087-32	Fitting - Hose	1
5	00-918212	Hose - Fill	1
6	00-223472	Backflow Preventer	1
7	FP-019-21	Tee - Pipe 1/2 x 1/2 x 1/2 (Brass)	1
8	FP-027-07	Bushing - Pipe 1/2 to 1/4 (Brass)	1
9	00-918429	Gauge - Water Pressure	1
10	FP-040-42	Pipe 1/2 x 1-1/8 TBE (Brass)	5
11	00-435968-00001	Valve - Solenoid (1/2 In.) (110-120 V.) (Incls. Item 12)	1
12	00-271839-00001	Coil - Solenoid Valve	1
13	00-271837	Service Kit - Solenoid Valve	1
14	00-118038-00002	Regulator - Pressure (1/2 In.)	1
*15	00-270258	Strainer - Line (1/2) (Brass) (Kitz) (Incls. Items 16, 17, & 18) (Alternate to Item 27)	1
16	00-270259	Plug - Branch	1
17	00-270260	Screen - Strainer (1/2 In.)	1
18	00-270261	Gasket	1
19	FP-022-12	Union - Pipe (Brass)	1
20	00-919862	Harness - Wire (Cold Water Valve)	1
21	00-919275	Harness - Wire (Pump Drain Style)	1
22	00-919276	Harness - Wire (Solenoid Drain Style)	1
23	FE-023-67	Relief - Strain	1
24	FE-024-57	Connector Straight (Non-Metallic) Sealtite (1/2 Male Thd. x 1/2 Flex. Cnd.)	2
25	00-543430	Conduit - Electrical (6 Ft.)	1
26	00-919277	Cover - Service	1
*27	00-892921	Strainer - Line (1/2) (Brass) (Conbraco) (Incls. Items 28, 29, & 30) (Alternate to Item 15)	1
28	00-892922-00001	Cap	1
29	00-892922-00002	Gasket	1
30	00-892922-00003	Screen	1


* Kitz line strainer is approx. 0.43 inches longer than Conbraco.

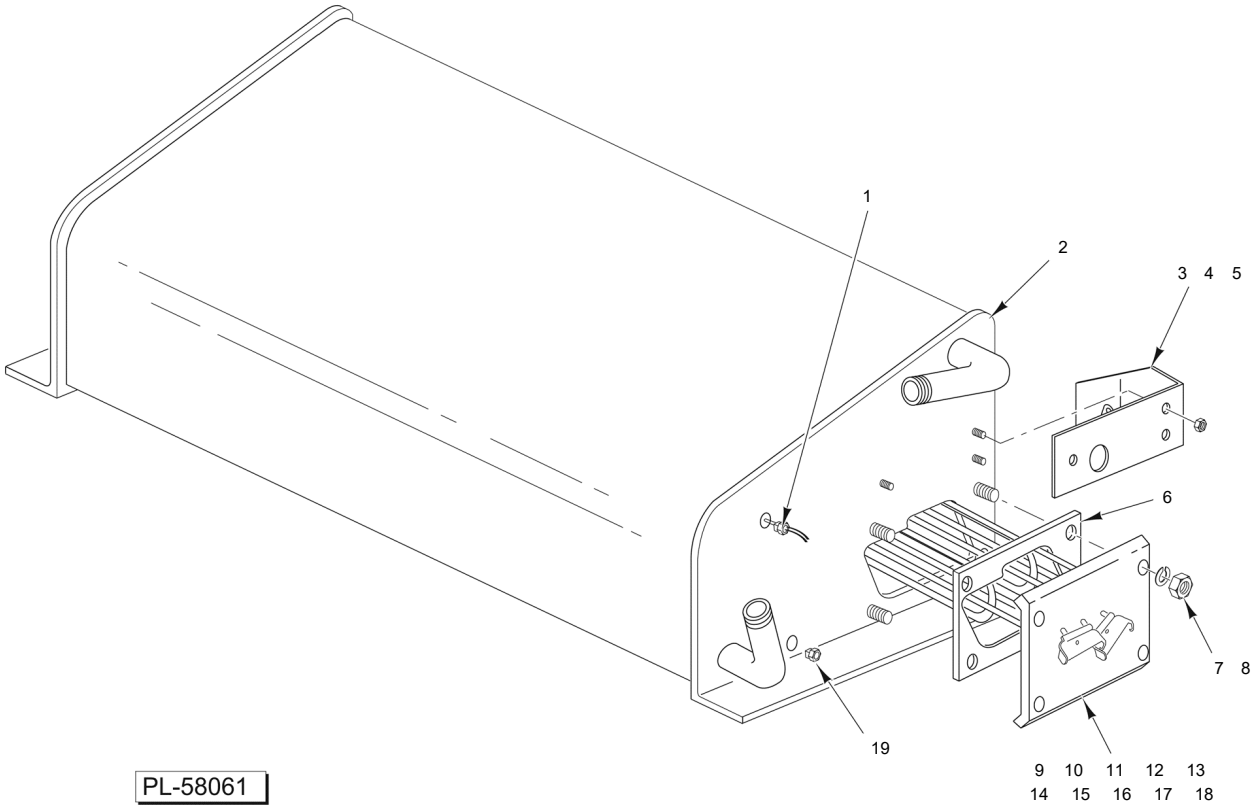


BOOSTER ASSEMBLY

BOOSTER ASSEMBLY

ILLUS. PL-58061	PART NO.	NAME OF PART	AMT.
1	00-328994	Sensor - Probe	1
2	00-329027	Booster Tank Weldment	1
3	00-328980-00001	Protector - High Limit (LXH Series, LXGH, LXiH, & LXiGH)	2
4	00-748833	Bracket	1
5	NS-031-16	Stop Nut 10-24 Hex Elastic (SST)	3
6	00-329009	(Included with Items 9 thru 18)	1
7	NS-014-01	Nut 1/4-20 Hex (Brass)	4
8	WL-006-17	Lockwasher 1/4 Helical (SST)	4
9	00-474713-00001	Element - Booster Heater (208 V., 6000 W.) (LX30/40H, LX30C, & LXGH Series)	1
10	00-474713-00002	Element - Booster Heater (240 V., 6000 W.) (LX30/40H, LX30C, & LXGH Series)	1
11	00-474713-00003	Element - Booster Heater (208 V., 7000 W.) (LX18H Series)	1
12	00-474713-00004	Element - Booster Heater (240 V., 7000 W.) (LX18H Series)	1
13	00-913102-00018	Element - Booster Heater (240/60) (3 Ph.) (LXH Series & LHGH)	1
14	00-913102-00019	Element - Booster Heater (208/60) (3 Ph.) (LXH Series & LHGH)	1
15	00-913102-00020	Element - Booster Heater (480/60) (3 Ph.) (LXH Series & LHGH)	1
16	00-913102-00021	Element - Booster Heater (380-415/60) (3 Ph.) (LXH Series & LHGH)	1
17	00-913102-00132	Element - Booster Heater (208-240 V., 4507-6000 W.) (1 Ph.) (LXi & LXiG Series)	1
18	00-913102-00133	Element - Booster Heater (208-240 V., 5255-7000 W.) (3 Ph.) (LXiH & LXiGH)	1
19	FP-052-20	Pipe Plug 1/8 Sq. Hd. (SST)	1
	00-749236	Kit - Booster (Incls. Items 2 thru 5, 7, 8, & Wiring)	1
	00-329603	Barrier - Mylar Booster	1
	00-294677-00004	Clamp - Wire (1 I.D.)	1
	00-271123	Protector - High Limit LXH Series & LXGH Series Previous Construction	1

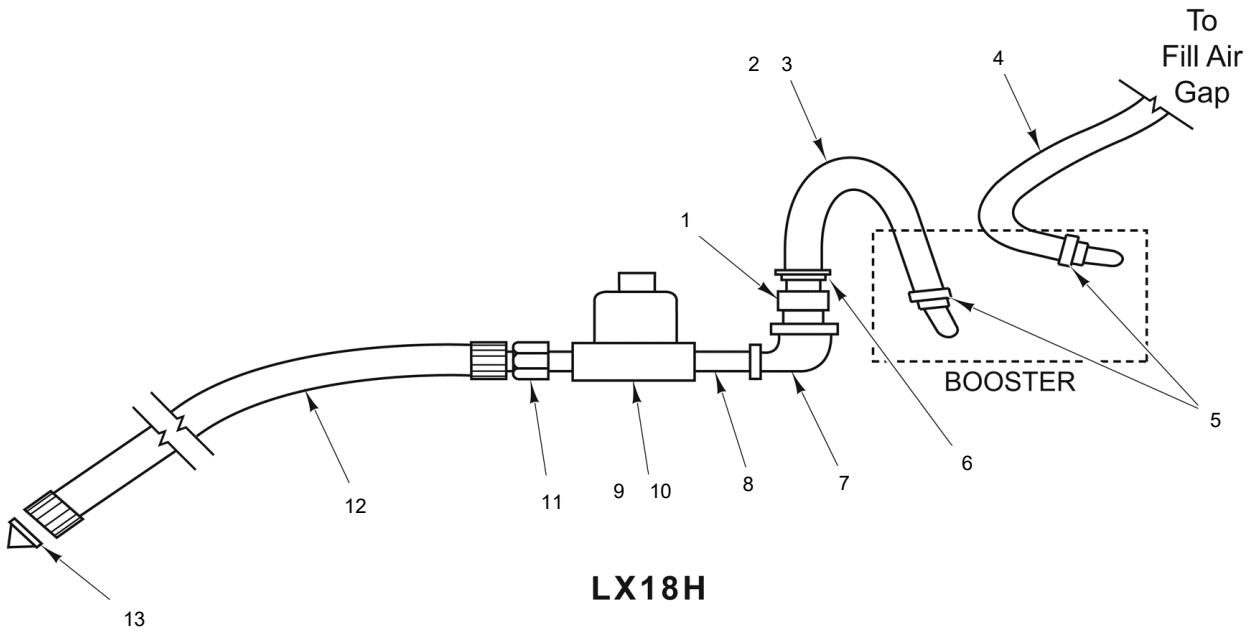

LX18H

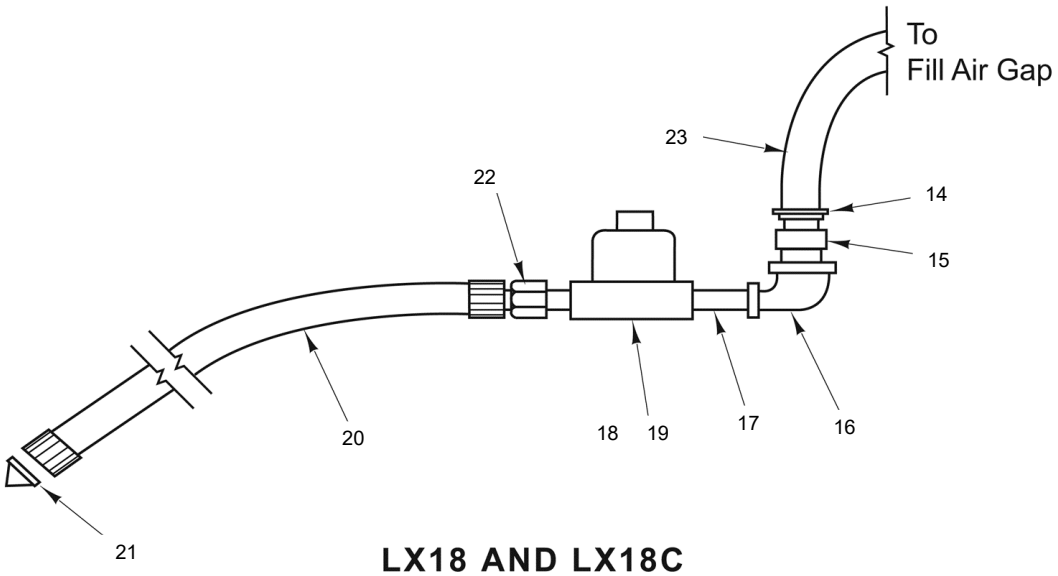

LX18 AND LX18C


PL-55744

PLUMBING
(LX18 SERIES)

PLUMBING
(LX18 SERIES)

ILLUS. PL-55744	PART NO.	NAME OF PART	AMT.
1	00-473748	Fitting - Flow Restrictor 3/4 MPT W/Barbed Adapter	1
2	00-436397-00001	Spring 5/8 Hose Support 1/2 x 13-1/2 (Inside Item 3)	1
3	00-329015-00006	Hose 5/8 x 18 Fill Valve to Booster Inlet	1
4	00-892244-00003	Hose 5/8 x 48 Booster to Fill Air Gap	1
5	00-544424	Clamp - Hose #8	3
6	00-544424	Clamp - Hose #8	1
7	FP-016-12	Elbow - Reducing 3/4 to 1/2	1
8	FP-040-45	Pipe 1/2 x 1-1/2 Lg. TBE	1
9	00-329972-00001	Valve - Solenoid 1/2 (110-120 V.)	1
10	00-328568	Bracket - Solenoid Valve	1
11	FP-081-15	Fitting - Hose 5/8 x 3/4 Hose Male to 1/2 MPT	1
12	00-293408	Hose - Fill Assy.	1
13	00-292787	Filter - Fill Hose Assy.	1
14	00-544424	Clamp - Hose #8	1
15	00-473748	Fitting - Flow Restrictor 3/4 MPT W/Barbed Adapter	1
16	FP-016-12	Elbow - Reducing 3/4 to 1/2	1
17	FP-040-45	Pipe 1/2 x 1-1/2 Lg. TBE	1
18	00-329972-00001	Valve - Solenoid 1/2 (110-120 V.)	1
19	00-328568	Bracket - Solenoid Valve	1
20	00-293408	Hose - Fill Assy.	1
21	00-292787	Filter - Fill Hose Assy.	1
22	FP-081-15	Fitting - Hose 5/8 x 3/4 Hose Male to 1/2 MPT	1
23	00-892244-00004	Hose 5/8 x 31 Fill Valve to Fill Air Gap	1
	00-271837	Service Kit - Solenoid Valve	1
	00-270380	Coil - Solenoid Valve (115 V.) (Jackes - Evans)	1

(LX30H, LX40H, LXGH, LXiH, & LXiGH SERIES)

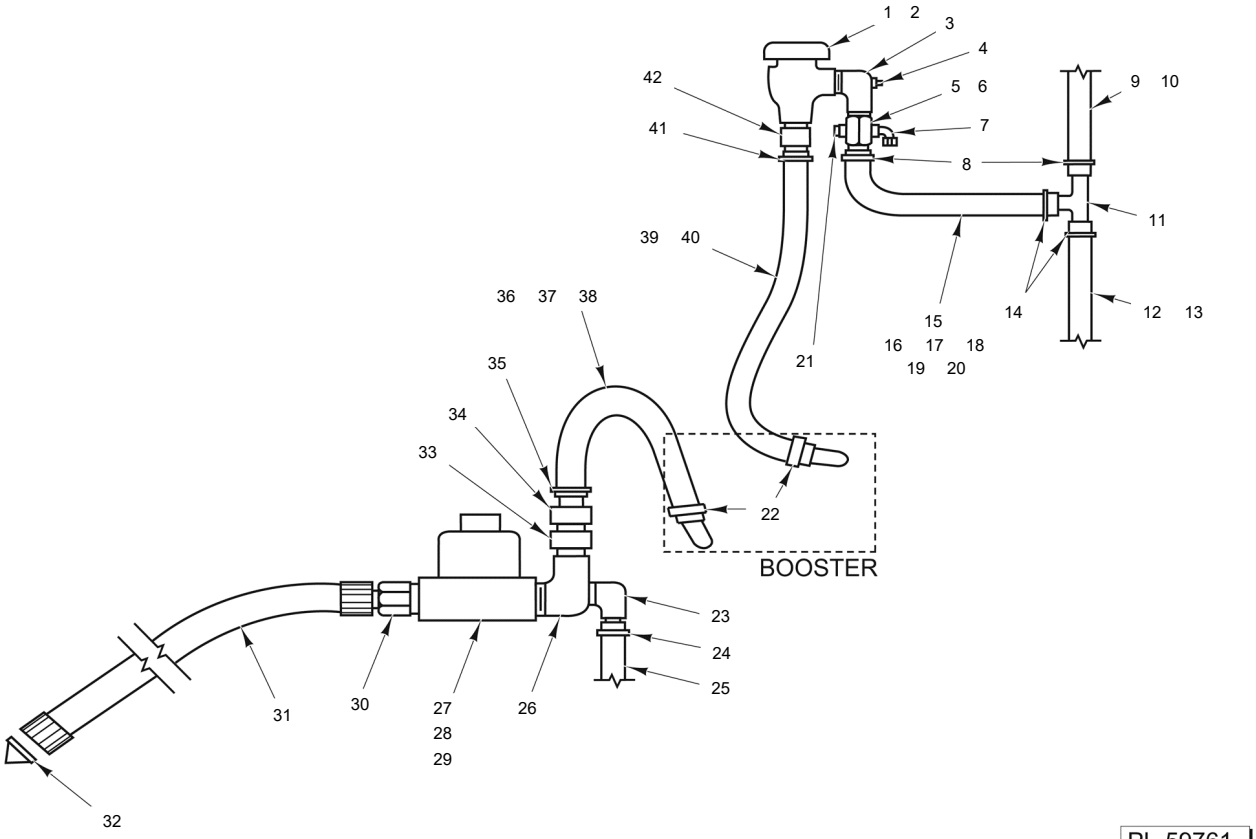


PLUMBING
(PREVIOUS CONSTRUCTION)

PLUMBING
(PREVIOUS CONSTRUCTION)

ILLUS. PL-59761	PART NO.	NAME OF PART	AMT.
1	00-277112-00002	Vacuum Breaker (3/4)	1
2	00-475024	Bracket - Vacuum Breaker	1
3	00-475052	Elbow - 90 Deg. Modified Street	1
4	00-328994	Sensor - Rinse Assy. Probe	1
5	00-329222	Connector - Chemical Feeder (Used With Rinse Aid Option)	1
6	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter (Used W/O Rinse Aid Option)	1
7	FP-087-46	Fitting - Tube 1/4 (Used With Rinse Aid Option)	1
8	00-544424	Clamp - Hose #8	1
9	00-329017-00001	Hose 1/2 x 22 Rinse Tee to Wash Arm (LX30/40 & LXi Series)	1
10	00-329017-00003	Hose 1/2 x 19-3/8 Rinse Tee to Wash Arm (LXG & LXiG Series)	1
11	00-328612	Tee - Rinse	1
12	00-329017-00001	Hose 1/2 x 22 Rinse Tee to Wash Arm (LX30/40 & LXi Series)	1
13	00-329017-00003	Hose 1/2 x 19-3/8 (LXG & LXiG Series)	1
14	00-544424	Clamp - Hose #8	1
15	00-436397-00001	Spring 5/8 Hose Support 1/2 x 13-1/2 (Inside Items 17, 18, & 20)	1
16	00-528499	Clamp - Hose	1
17	00-892244-00001	Hose 5/8 x 11 Vacuum Breaker to Rinse Tee (LX30/40 & LXi Series)	1
18	00-892244-00002	Hose 5/8 x 7-3/4 Vacuum Breaker to Rinse Tee (LXG & LXiG Series)	1
19	00-892244-00001	Hose 5/8 Adapta Flex (LXi & LXiG Series) (Cut to Fit)	1
20	00-329015-00001	Hose 5/8 x 11-3/4 Vacuum Breaker to Rinse Tee (LX30/40 Series W/O R.A. Option)	1
21	FP-052-20	Pipe Plug 1/8 Sq. Hd. (SST) (Used With Rinse Aid Option)	1
22	00-544424	Clamp - Hose #8	1
23	FP-088-29	Fitting - Hose 1/4 Barb x 1/8-27 NPTM	1
24	00-528501	Clamp - Hose #4	2
25	00-475060	Hose 1/4 x 12 Pressure Gauge to Fill Valve	1
26	00-475052	Elbow - 90 Deg. Modified Street	1
27	00-475227-00001	Valve - Solenoid 3/4 (110-120 V.)	1
28	00-328568	Bracket - Solenoid Valve	1
29	00-329280-00001	Valve - Solenoid 3/4 (110-120 V.) (LX30/40 Series) (With Side Pressure Tap	1
30	FP-087-32	Fitting - Hose 5/8 x 3/4 MPT With Garden Adapter	1
31	00-293408	Hose - Fill Assy.	1
32	00-292787	Filter - Fill Hose Assy.	1
33	00-328818-00002	Regulator - Flow	1
34	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter	1
35	00-544424	Clamp - Hose #8	1
36	00-436397-00001	Spring 5/8 Hose Support 1/2 x 13-1/2 (Inside Item 38)	1
37	00-528499	Clamp - Hose	1
38	00-329015-00006	Hose 5/8 x 18 Fill Valve to Booster Inlet (LX30H, LX40H, LXGH, LXiH, & LXiGH)	1
39	00-892244-00003	Hose 5/8 x 48 Booster to Vacuum Breaker (LX30H, LX40H, & LXiH)	1
40	00-892244-00003	Hose 5/8 x 48 Booster to Vacuum Breaker (LXGH & LXiGH)	1
41	00-544424	Clamp - Hose #8	1
42	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter	1
	00-270380	Coil - Solenoid Valve	1
	00-118270	Vacuum Bracket Kit	1
	00-271838	Service Kit - 3/4 Solenoid Valve	1
	00-893878	Elbow - Rinse	1

(LX30, LX30C, LX40C, LXGC, LXiC, & LXiGC SERIES)

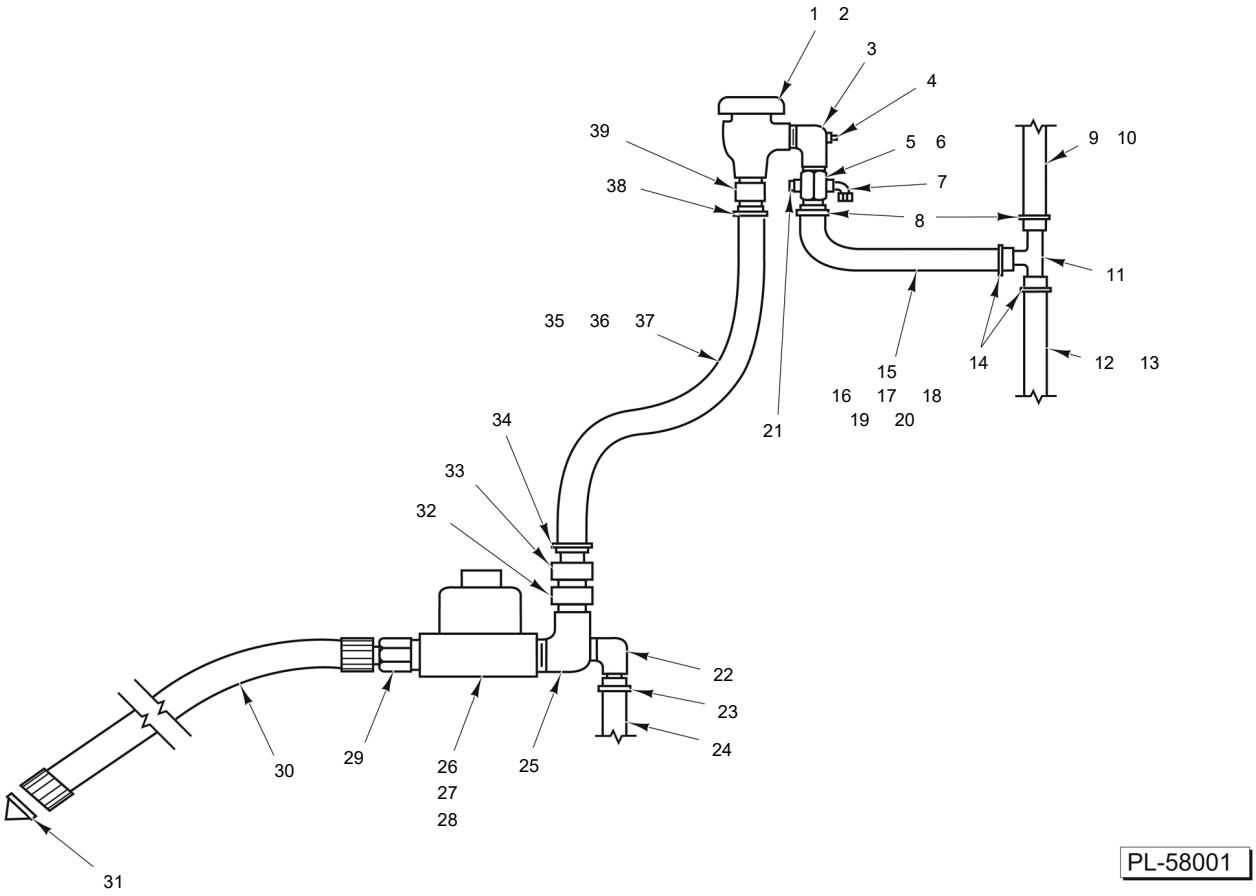


PLUMBING
(PREVIOUS CONSTRUCTION)

PLUMBING
(PREVIOUS CONSTRUCTION)

ILLUS. PL-58001	PART NO.	NAME OF PART	AMT.
1	00-277112-00002	Vacuum Breaker (3/4)	1
2	00-475024	Bracket - Vacuum Breaker	1
3	00-475052	Elbow - 90 Deg. Modified Street	1
4	00-328994	Sensor - Rinse Assy. Probe	1
5	00-329222	Connector - Chemical Feeder (Used With Rinse Aid Option)	1
6	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter (Used W/O Rinse Aid Option)	1
7	FP-087-46	Fitting - Tube 1/4 (Used With Rinse Aid Option)	1
8	00-544424	Clamp - Hose #8	1
9	00-329017-00001	Hose 1/2 x 22 Rinse Tee to Wash Arm (LX30/40 & LXi Series)	1
10	00-329017-00003	Hose 1/2 x 19-3/8 Rinse Tee to Wash Arm (LXG & LXiG Series)	1
11	00-328612	Tee - Rinse	1
12	00-329017-00001	Hose 1/2 x 22 Rinse Tee to Wash Arm (LX30/40 & LXi Series) Hose 1/2 x 22 (LX30/40 Series)	1
13	00-329017-00003	Hose 1/2 x 19-3/8 (LXG Series)	1
14	00-544424	Clamp - Hose #8	1
15	00-436397-00001	Spring 5/8 Hose Support 1/2 x 13-1/2 (Inside Items 17, 18, & 20)	1
16	00-528499	Clamp - Hose	1
17	00-892244-00001	Hose 5/8 x 11 Vacuum Breaker to Rinse Tee (LX30/40 & LXi Series)	1
18	00-892244-00002	Hose 5/8 x 7-3/4 Vacuum Breaker to Rinse Tee (LXG & LXiG Series)	1
19	00-892244-00001	Hose 5/8 Adapta Flex (LXi & LXiG Series) (Cut to Fit)	1
20	00-329015-00001	Hose 5/8 x 11 Vacuum Breaker to Rinse Tee (LX30/40 Series W/O R.A. Option)	1
21	FP-052-20	Pipe Plug 1/8 Sq. Hd. (SST) (Used With Rinse Aid Option)	1
22	FP-088-29	Fitting - Hose 1/4 Barb x 1/8-27 NPTM	1
23	00-528501	Clamp - Hose #4	2
24	00-475060	Hose 1/4 x 12 Pressure Gauge to Fill Valve	1
25	00-475052	Elbow - 90 Deg. Modified Street	1
26	00-475227-00001	Valve - Solenoid 3/4 (110-120 V.)	1
27	00-328568	Bracket - Solenoid Valve	1
28	00-329280-00001	Valve - Solenoid 3/4 (110-120 V.) (LX30/40 Series) (With Side Pressure Tap)	1
29	FP-087-32	Fitting - Hose 5/8 x 3/4 MPT With Garden Adapter	1
30	00-293408	Hose - Fill Assy.	1
31	00-292787	Filter - Fill Hose Assy.	1
32	00-328818-00002	Regulator - Flow	1
33	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter	1
34	00-544424	Clamp - Hose #8	1
35	00-892244-00003	Hose 5/8 x 48 In. Fill Valve to Vacuum Breaker (LX30/30C, LX40C, & LXiC)	1
36	00-892244-00004	Hose 5/8 x 43 In. - Fill Valve to Vacuum Breaker (LXGC & LXiGC)	1
37	00-892244-00005	Hose 5/8 (LXG, LXiC, & LXiGC)	1
38	00-544424	Clamp - Hose #8	1
39	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter	1
	00-270380	Coil - Solenoid Valve	1
	00-118270	Service Kit - Vacuum Breaker (Float & Seal Assy.) 3/4"	1
	00-271838	Service Kit - 3/4 Solenoid Valve	1
	00-893878	Elbow - Rinse	1

(CURRENT CONSTRUCTION)

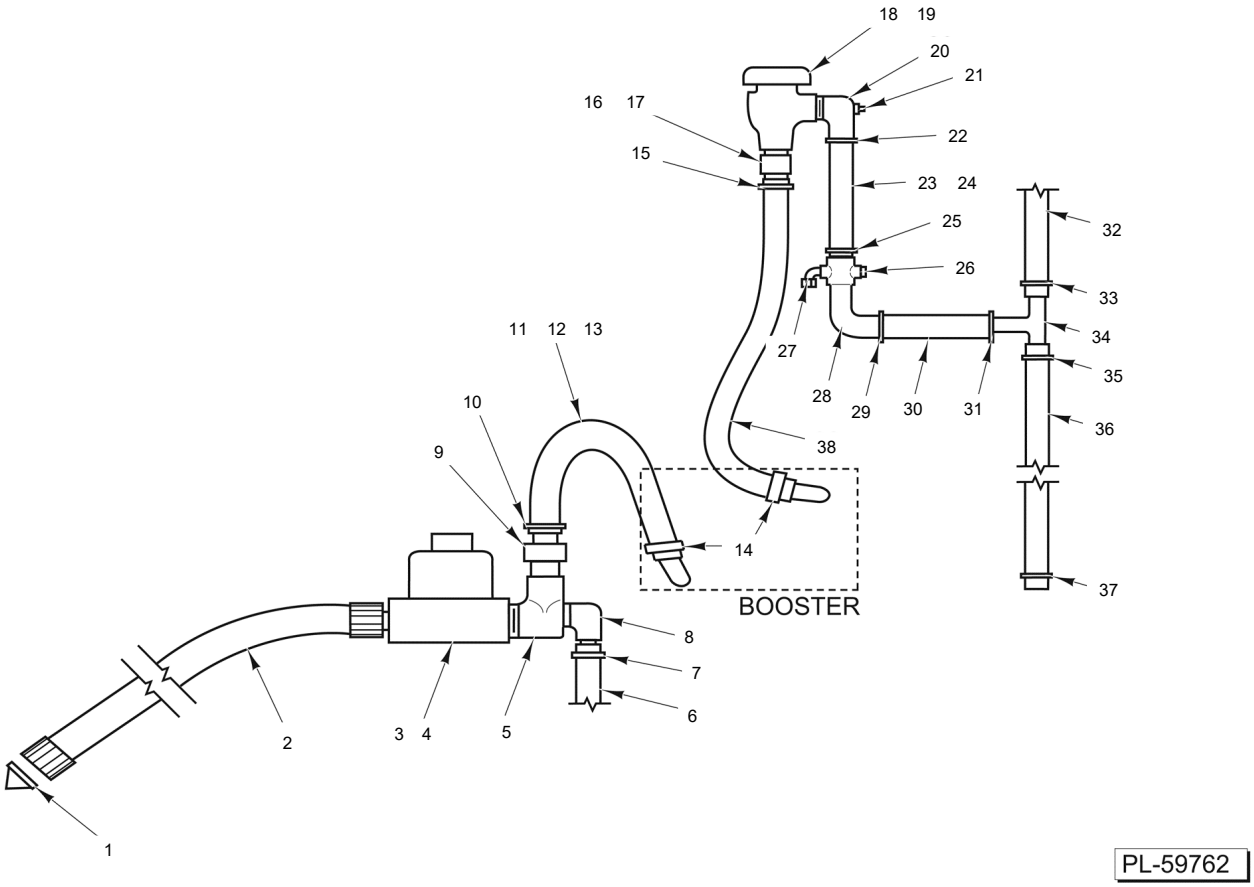


PLUMBING
(LXiH & LXiGH SERIES) STARTING S/N 231083999

PLUMBING
(LXiH & LXiGH SERIES) STARTING S/N 231083999

ILLUS. PL-59762	PART NO.	NAME OF PART	AMT.
1	00-292787	Filter - Fill Hose Assy.	1
2	00-918212	Hose - Fill	1
3	00-918059-00001	Valve - Solenoid 1/2	1
4	00-918057	Bracket - Solenoid Valve	1
5	00-918316	Elbow - Fill	1
6	00-475060	Hose 1/4 x 12 Pressure Gauge to Fill Valve	1
7	FP-087-39	Fitting - Hose 5/8 Hose to 1/2 NPT (Brass)	2
8	00-918225	Elbow - Snubber Assy.	1
9	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter	1
10	00-544424	Clamp - Hose #8	1
11	00-436397-00001	Spring 5/8 Hose Support 1/2 x 13-1/2 (Inside Item 13)	1
12	00-528499	Clamp - Hose	1
13	00-329015-00006	Hose 5/8 x 18 Fill Valve to Booster Inlet (LXiH & LXiGH)	1
14	00-544424	Clamp - Hose #8	1
15	00-544424	Clamp - Hose #8	1
16	FP-087-39	Fitting - Hose 5/8 Hose to 1/2 NPT (Brass)	1
17	00-918058	Bracket - Vacuum Breaker	1
18	00-292910	Service Kit - Vacuum Breaker	1
19	00-292909-00003	Vacuum Breaker (1/2 In.)	1
20	00-918046	Elbow - Fill	1
21	00-328994	Sensor - Rinse Assy. Probe	1
22	00-528499	Clamp - Hose	1
23	00-892244-00001	Hose 5/8 x 11 Vacuum Breaker to Rinse Tee (LXi Series) (Cut to Fit)	1
24	00-892244-00001	Hose 5/8 x 7-3/4 Vacuum Breaker to Rinse Tee (LXG & LXiG Series) (Cut to Fit)	1
25	00-528499	Clamp - Hose	1
26	00-749123	Plug - Pipe	1
27	FP-087-46	Fitting - Tube 1/4 (Used With Rinse Aid Option)	1
28	00-893878	Elbow - Rinse	1
29	00-528499	Clamp - Hose	1
30	00-892244-00001	Hose 5/8 Adapta Flex 3-1/2 (Cut to Fit)	1
31	00-528499	Clamp - Hose	1
32	00-329017-00001	Hose 1/2 x 22 Rinse Tee to Wash Arm (LX30/40 & LXi Series) Hose - Rinse Tee To Wash Arm.	1
33	00-528499	Clamp - Hose	1
34	00-328612	Tee - Rinse	1
35	00-528499	Clamp - Hose	1
36	00-329017-00001	Hose 1/2 x 22 Rinse Tee to Wash Arm (LX30/40 & LXi Series) Hose - Rinse Tee To Wash Arm.	1
37	00-528499	Clamp - Hose	1
38	00-892244-00003	Hose - 5/8 x 48" Booster To Vacuum Breaker	1
	00-893101	Service Kit - 1/2 Solenoid Valve	1
	00-918122	Coil - Solenoid Valve	1
	00-118270	Service Kit - Vacuum Breaker (Float & Seal Assy.) 3/4"	1


(CURRENT CONSTRUCTION)

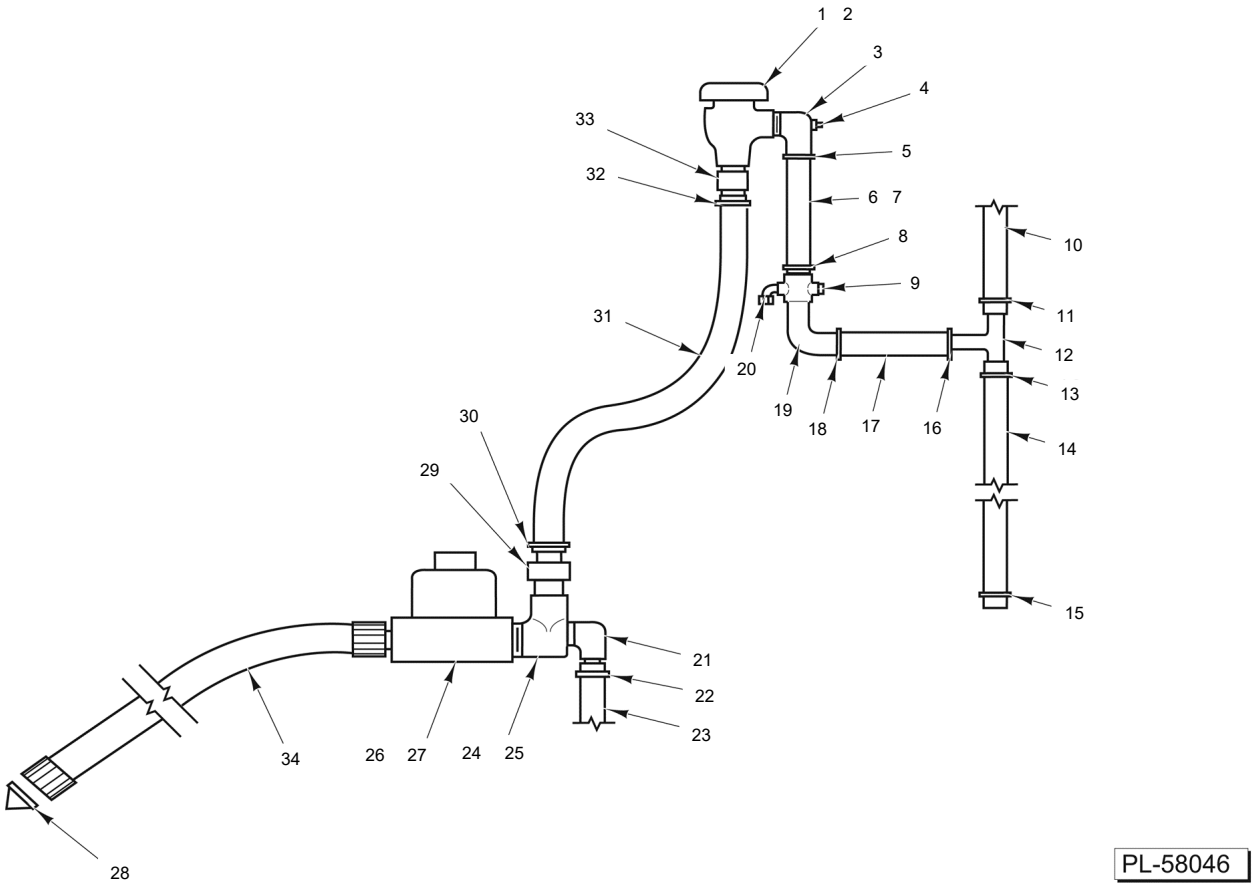

PLUMBING
(LXiC & LXiGC SERIES) STARTING S/N 231083999

PLUMBING
(LXiC & LXiGC SERIES) STARTING S/N 231083999


ILLUS. PL-58046	PART NO.	NAME OF PART	AMT.
1	00-292909-00003	Vacuum Breaker (1/2 In.)	1
2	00-918058	Bracket - Vacuum Breaker	1
3	00-918046	Elbow - Fill	1
4	00-328994	Sensor - Rinse Assy. Probe	1
5	00-528499	Clamp - Hose	1
6	00-892244-00001	Hose 5/8 x 11 Vacuum Breaker to Rinse Tee (LXi Series) (Cut to Fit)	1
7	00-892244-00001	Hose 5/8 x 7-3/4 Vacuum Breaker to Rinse Tee (LXiG Series) (Cut to Fit)	1
8	00-528499	Clamp - Hose	1
9	00-749123	Plug - Pipe	1
10	00-919977-00001	Hose 1/2 PVC Rinse	1
11	00-528499	Clamp - Hose	1
12	00-328612	Tee - Rinse	1
13	00-528499	Clamp - Hose	1
14	00-919977-00001	Hose 1/2 PVC Rinse	1
15	00-528499	Clamp - Hose	1
16	00-528499	Clamp - Hose	1
17	00-919991	Hose 5/8 Adapta Flex 3-1/2 (Cut to Fit)	1
18	00-528499	Clamp - Hose	1
19	00-893878	Elbow - Rinse	1
20	FP-087-46	Fitting - Tube 1/4	1
21	00-918225	Elbow - Snubber Assy.	1
22	00-528501	Clamp - Hose #4	2
23	00-475060	Hose 1/4 x 12 Pressure Gauge to Fill Valve	1
24	00-918316	Elbow - Fill	1
25	00-918046	Elbow - Fill (LXiPRC & LXiPRGC)	1
26	00-918059-00001	Valve - Solenoid 1/2	1
27	00-918057	Bracket - Solenoid Valve	1
28	00-292787	Filter - Fill Hose Assy.	1
29	FP-087-31	Fitting - Hose 5/8 x 3/4 MPT With Barbed Adapter	1
30	00-544424	Clamp - Hose #8	1
31	00-892244-00005	Hose 5/8 (LXG Series)	1
32	00-544424	Clamp - Hose #8	1
33	FP-087-39	Fitting - Hose 5/8 Hose to 1/2 NPT (Brass)	1
34	00-918212	Hose - Fill	1
	00-919977-00002	Hose 1/2 PVC Rinse (LXiGC)	1
	00-893101	Service Kit - 1/2 Solenoid Valve (Incls. Cap, Bonnet Gasket, Stem Spring, & Pin)	1
	00-918122	Coil - Solenoid Valve	1
	00-292910	Service Kit - Vacuum Breaker	1

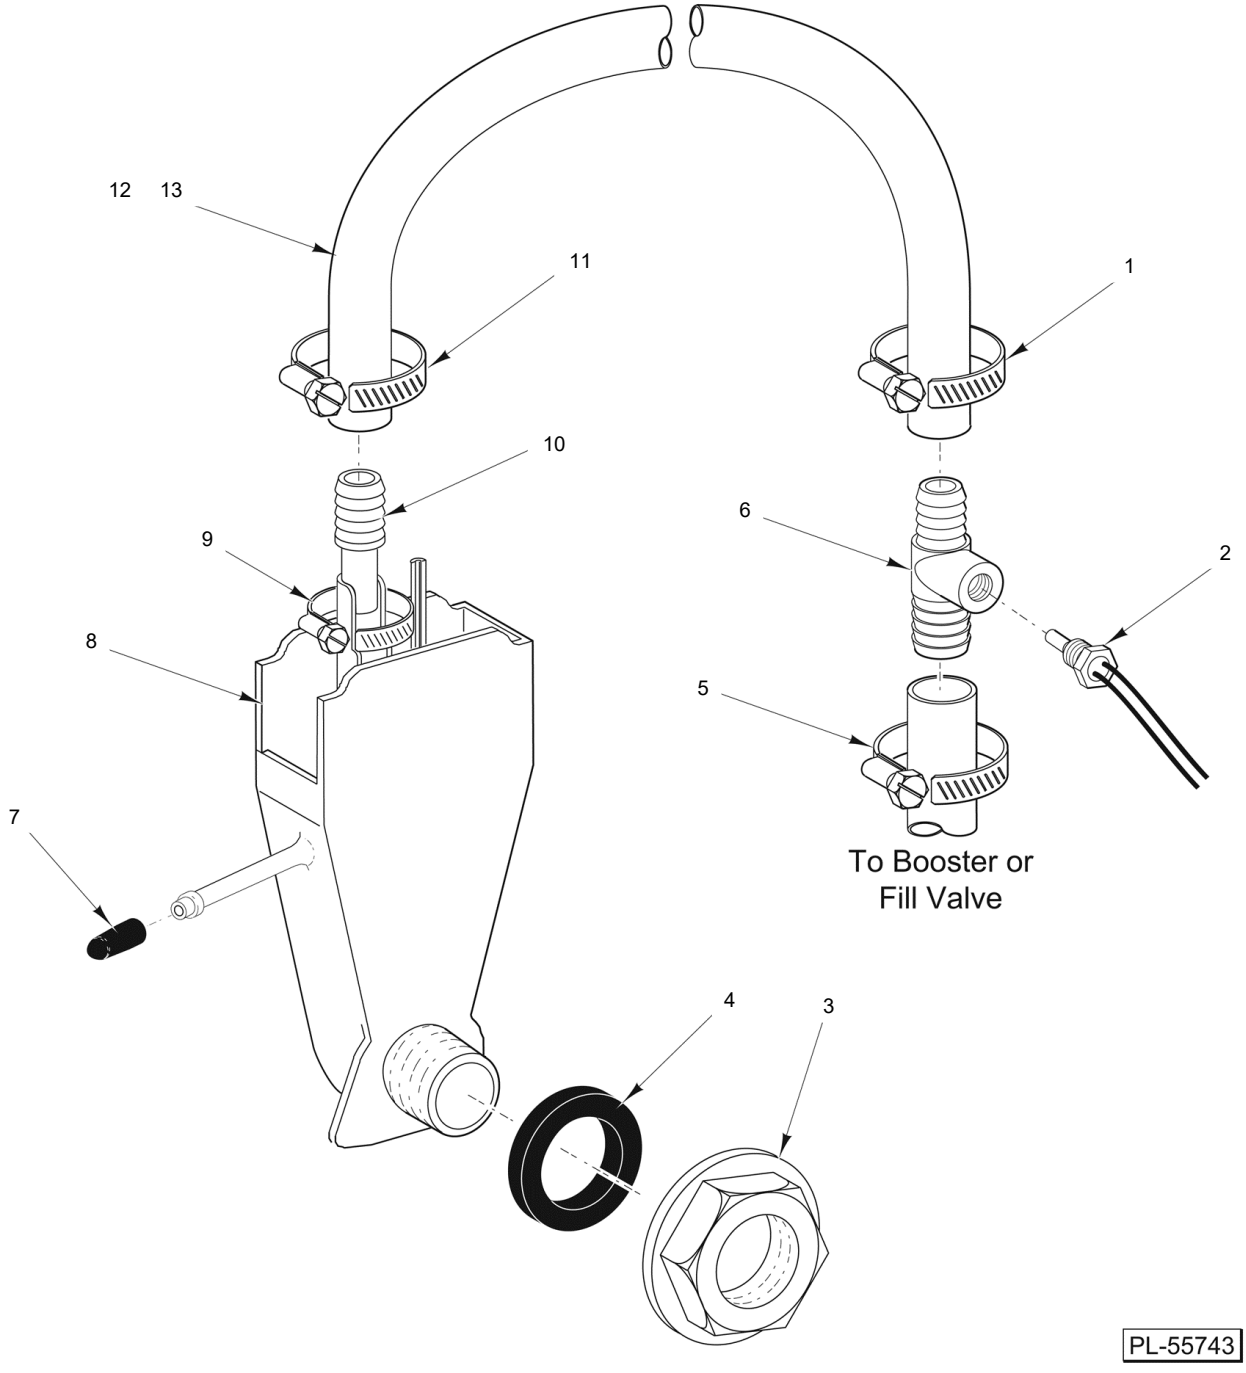


FILL AIR GAP
(LX18 SERIES)

FILL AIR GAP
(LX18 SERIES)

ILLUS. PL-55743	PART NO.	NAME OF PART	AMT.
1	00-544424	Clamp - Hose #8	1
2	00-328994	Sensor - Probe	1
3	00-116198-00003	Nut - Fill Air Gap	1
4	00-293014	Gasket - Fill Air Gap	1
5	00-544424	Clamp - Hose #8	1
6	00-473107	Union - Barbed	1
7	00-292621	Cap - Vinyl	1
8	00-292458	Air Gap - Fill	1
9	00-528501	Clamp - Hose #4	1
10	00-473036	Connector - Barbed	1
11	00-544424	Clamp - Hose #8	1
12	00-436397-00002	Spring 1/2 Hose Support 7/16 x 10-1/2 (Inside Item 13)	1
13	00-329017-00002	Hose 1/2 x 13 Barbed Union to Fill Air Gap	1

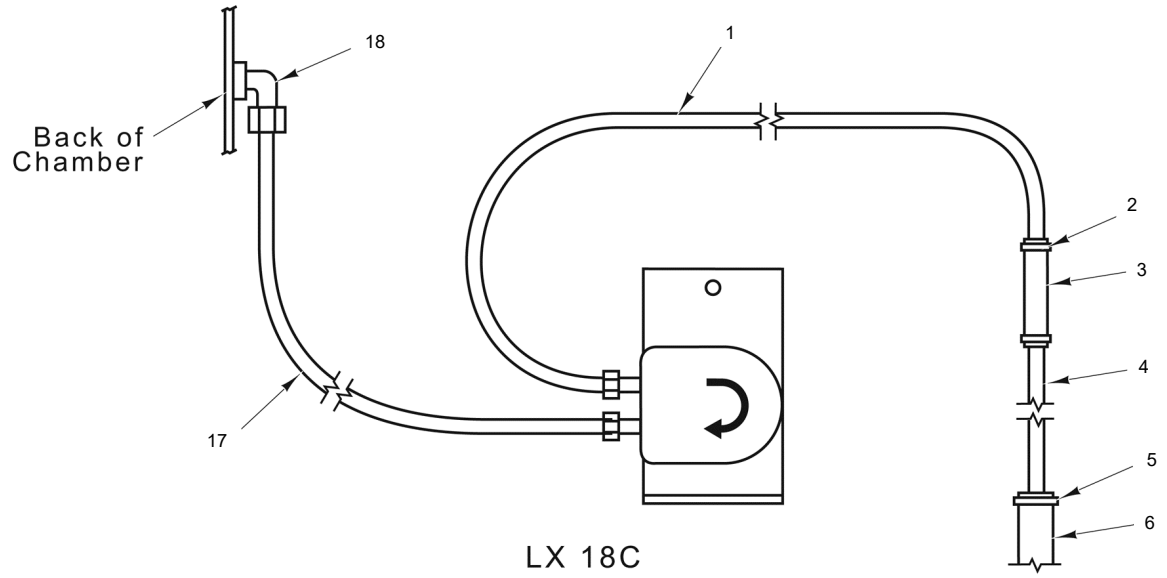

LX 18C
SANITIZER PUMP TUBING

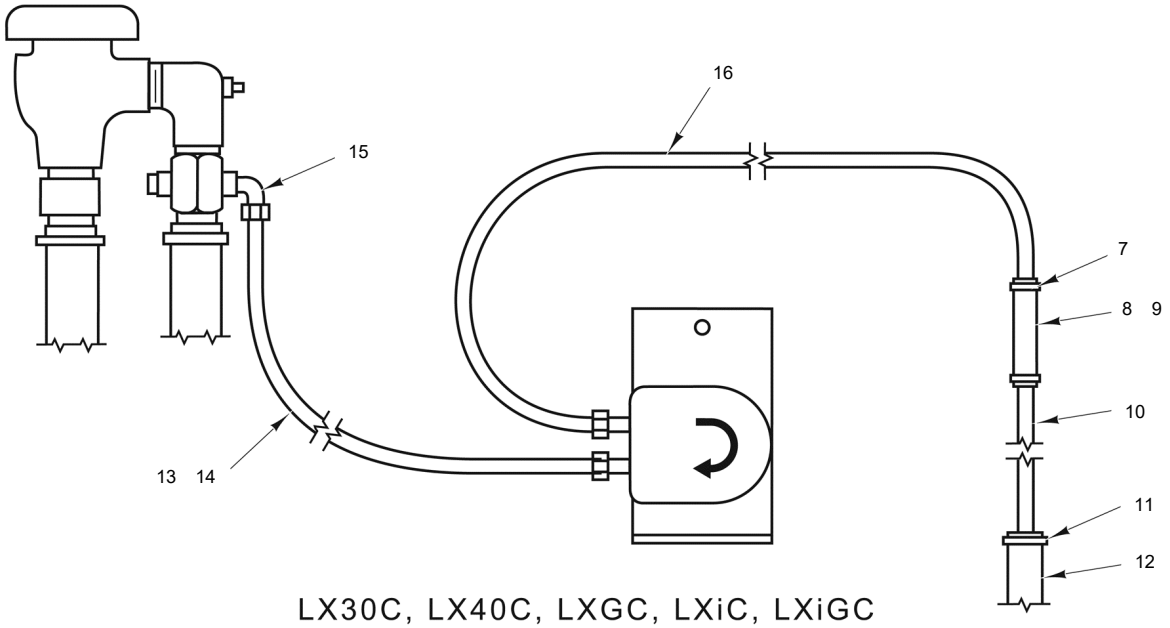


LX30C, LX40C, LXGC, LXiC, LXiGC
SANITIZER PUMP TUBING

PL-57997

SANITIZER PUMP TUBING
(LXC, LXGC, LXiC, & LXiGC SERIES)

SANITIZER PUMP TUBING
(LXC, LXGC, LXiC, & LXiGC SERIES)

ILLUS. PL-57997	PART NO.	NAME OF PART	AMT.
1	00-185105-00019	Tubing 1/4 x 84 Indicator to Pump (White)	1
2	00-185111-00001	Clamp - Hose 3/8	2
3	00-123213-00012	Tubing 5/16 x 4 Indicator (Clear)	1
4	00-185105-00012	Tubing 1/4 x 22 Supply to Indicator (White)	1
5	00-185111-00002	Clamp - Hose 7/16	1
6	00-185112	Stand Pipe 20-1/2 Lg.	1
7	00-185111-00001	Clamp - Hose 3/8	2
8	00-123213-00012	Tubing 5/16 x 4 Indicator (Clear)	1
9	00-185105-00004	Tubing 1/4 x 144 Supply to Pump/Indicator (Clear) (LXiC & LXiGC Series)	1
10	00-185105-00012	Tubing 1/4 x 22 Supply to Indicator (White)	1
11	00-185111-00002	Clamp - Hose 7/16	1
12	00-185112	Stand Pipe 20-1/2 Lg.	1
13	00-185105-00018	Tubing 1/4 x 48 Pump to Chemical Feeder (White) (LX30C, LX40C, & LXiC)	1
14	00-185105-00022	Tubing 1/4 x 43 Pump to Chemical Feeder (White) (LXGC & LXiGC)	1
15	FP-087-46	Fitting - Tube 1/4	1
16	00-185105-00019	Tubing 1/4 x 84 Indicator to Pump (White)	1
17	00-185105-00017	Tubing 1/4 x 30 Pump to Chamber (White)	1
18	FP-087-46	Fitting - Tube 1/4	1
	00-294677-00002	Clamp - Wire	1
	00-185105-00006	Tubing 1/4 x 144 Supply to Pump (Blue) (LXiC & LXiGC Series)	1

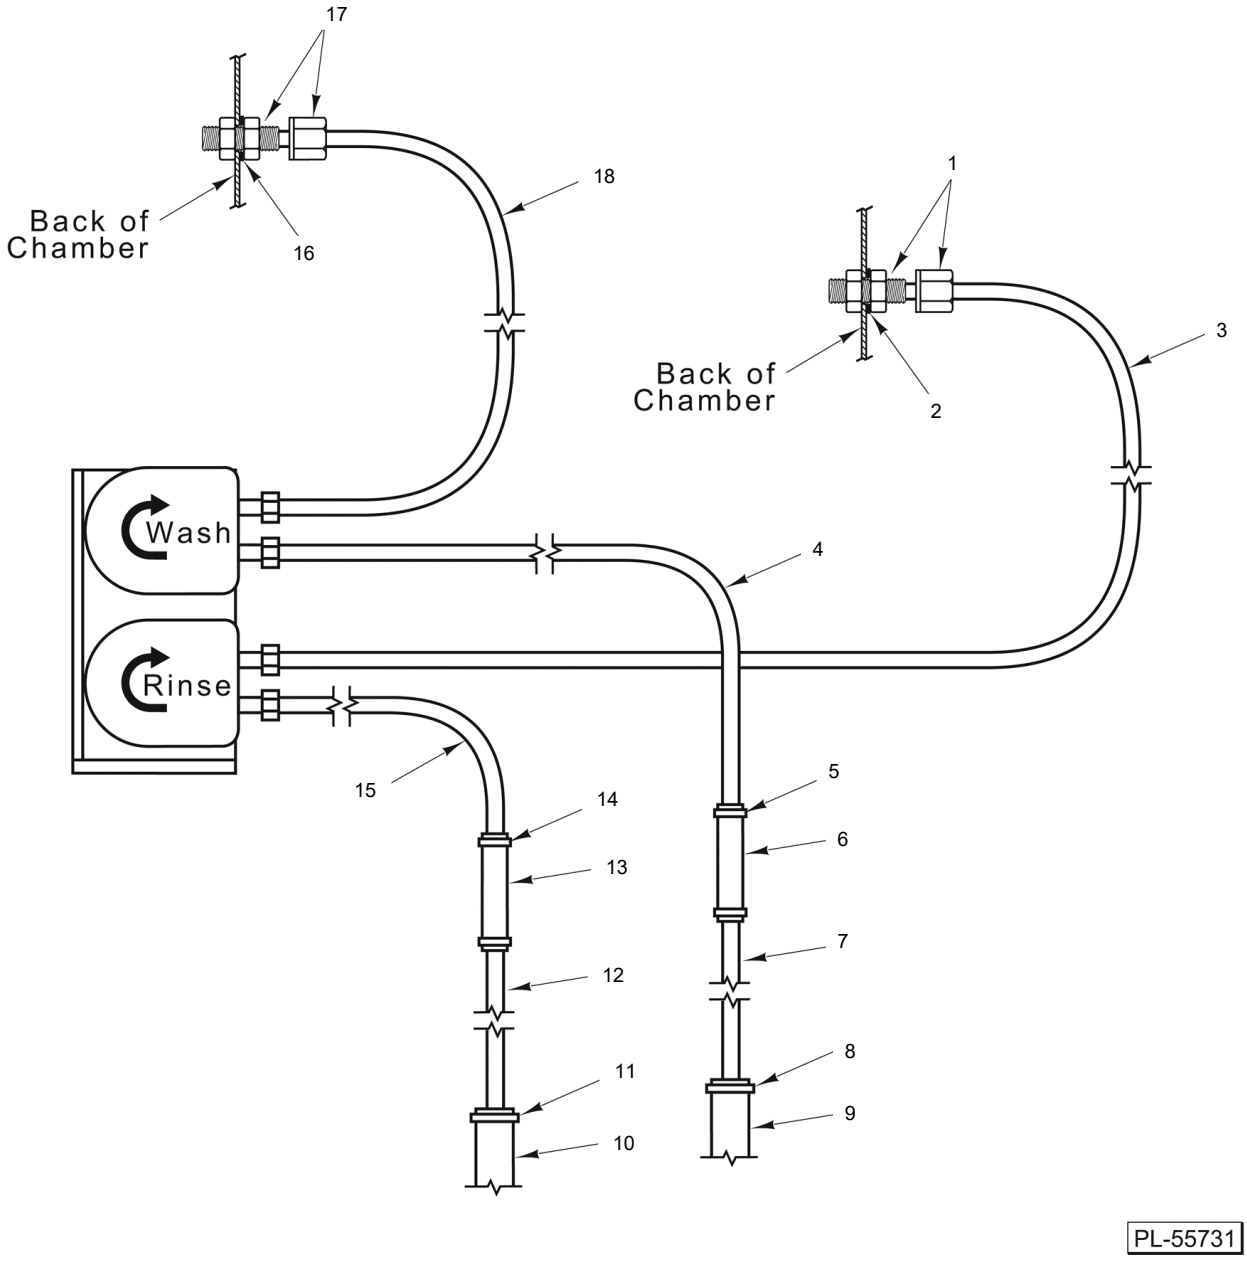


DETERGENT/RINSE AID PUMP TUBING
(LX18 SERIES)

DETERGENT/RINSE AID PUMP TUBING
(LX18 SERIES)

ILLUS. PL-55731	PART NO.	NAME OF PART	AMT.
1	00-329981	Union - Bulkhead (Rinse Aid)	AR
2	00-329982	Gasket - Union Bulkhead	AR
3	00-185105-00017	Tubing 1/4 x 30 Rinse Aid Pump to Chamber (White)	1
4	00-185105-00020	Tubing 1/4 x 120 Indicator to Detergent Pump (Red)	1
5	00-185111-00001	Clamp - 3/8	2
6	00-123213-00012	Tubing 5/16 x 4 Indicator (Clear)	1
7	00-185105-00012	Tubing 1/4 x 22 Supply to Indicator (White)	1
8	00-185111-00002	Clamp - Hose 7/16	1
9	00-185112	Stand Pipe 20-1/2 Detergent	1
10	00-185112	Stand Pipe 20-1/2 Rinse Aid	1
11	00-185111-00002	Clamp - Hose 7/16	1
12	00-185105-00012	Tubing 1/4 x 22 Supply to Indicator (White)	1
13	00-123213-00012	Tubing 5/16 x 4 Indicator (Clear)	1
14	00-185111-00001	Clamp - Hose 3/8	2
15	00-185105-00021	Tubing 1/4 x 84 Indicator to Rinse Aid Pump (Blue)	1
16	00-329982	Gasket - Union Bulkhead	AR
17	00-329981	Union - Bulkhead (Detergent)	AR
18	00-185105-00017	Tubing 1/4 x 30 Detergent Pump to Chamber (White)	1

(LX30/40, LXG, LXi, & LXiG SERIES)

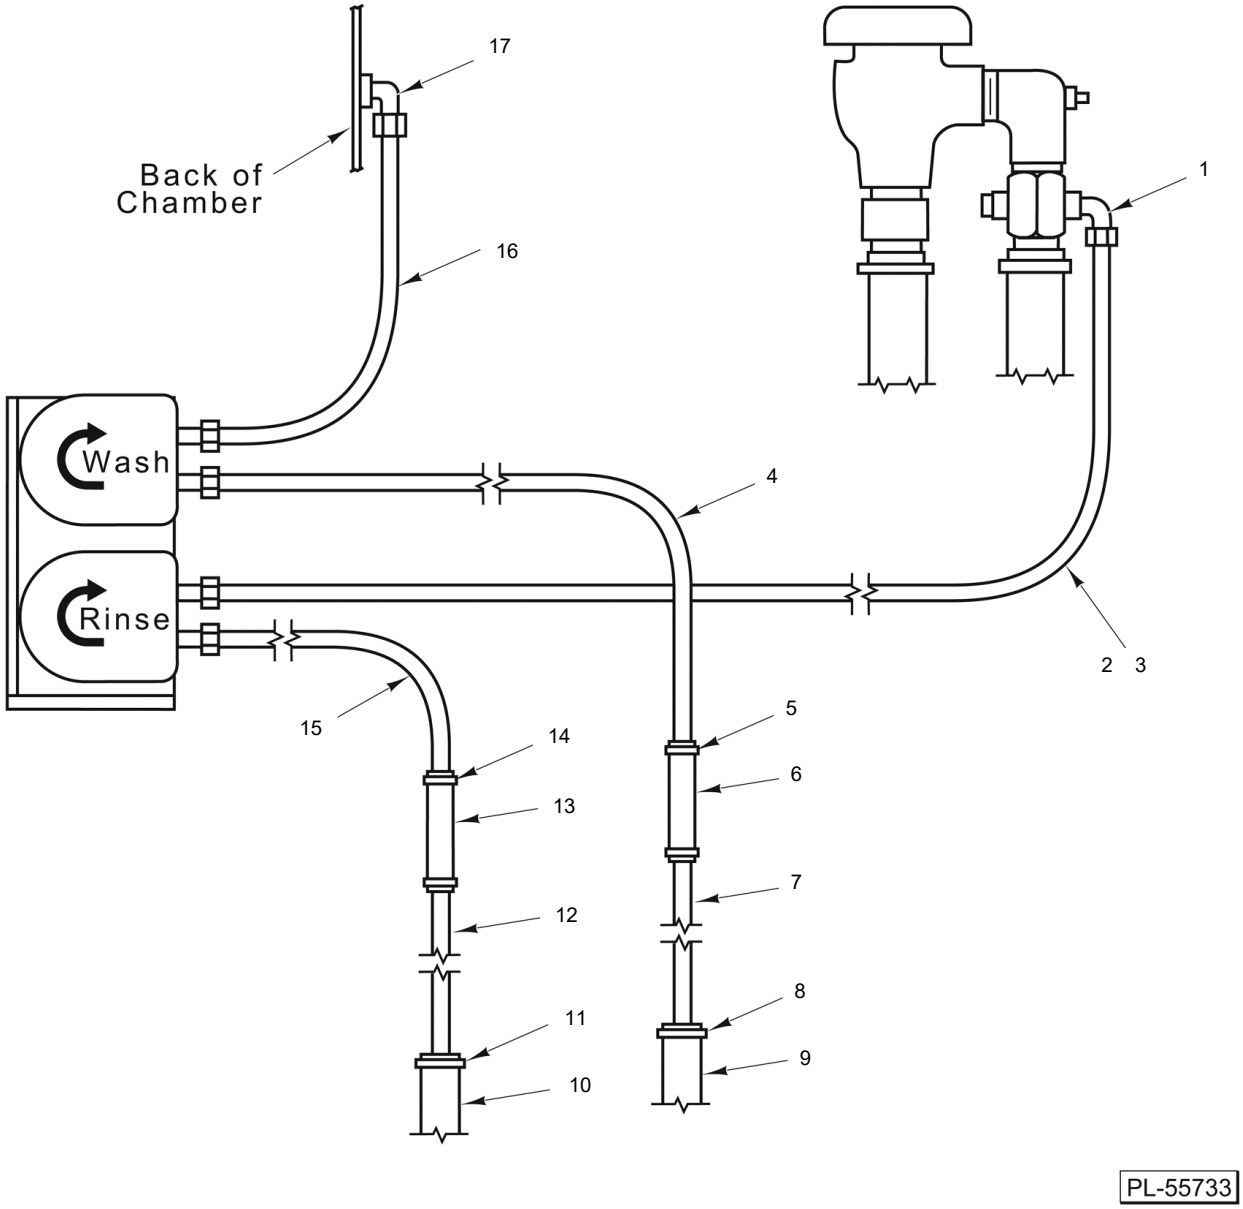


DETERGENT/RINSE AID PUMP TUBING

DETERGENT/RINSE AID PUMP TUBING

ILLUS. PL-55733	PART NO.	NAME OF PART	AMT.
1	FP-087-46	Fitting - Tube 1/4	1
2	00-185105-00018	Tubing 1/4 x 48 R.A. Pump to Chemical Feeder (White) (LX30/40 & LXi Series)	1
3	00-185105-00022	Tubing 1/4 x 43 R.A. Pump to Chemical Feeder (White) (LXG & LXiG Series)	1
4	00-185105-00020	Tubing 1/4 x 120 Indicator to Detergent Pump (Red)	1
5	00-185111-00001	Clamp - Hose 3/8	2
6	00-123213-00012	Tubing 5/16 x 4 Indicator (Clear)	1
7	00-185105-00012	Tubing 1/4 x 22 Supply to Indicator (White)	1
8	00-185111-00002	Clamp - Hose 7/16	1
9	00-185112	Stand Pipe 20-1/2 Detergent	1
10	00-185112	Stand Pipe 20-1/2 Rinse Aid	1
11	00-185111-00002	Clamp - Hose 7/16	1
12	00-185105-00012	Tubing 1/4 x 22 Supply to Indicator (White)	1
13	00-123213-00012	Tubing 5/16 x 4 Indicator (Clear)	1
14	00-185111-00001	Clamp - Hose 3/8	2
15	00-185105-00021	Tubing 1/4 x 84 Indicator to Rinse Aid Pump (Blue)	1
16	00-185105-00017	Tubing 1/4 x 30 Detergent Pump to Chamber (White)	1
17	FP-087-46	Fitting - Tube 1/4	1

10	00-329994	Kit - Pump Assy (Single)
11	00-329995	Kit - Pump Assy (Dual)
12	00-474420	Strip - Test
13	FP-075-11	Fitting - Tube 3/16
14	00-941866	Bracket & Sanitizer Pump

PARTS NOT ILLUSTRATED

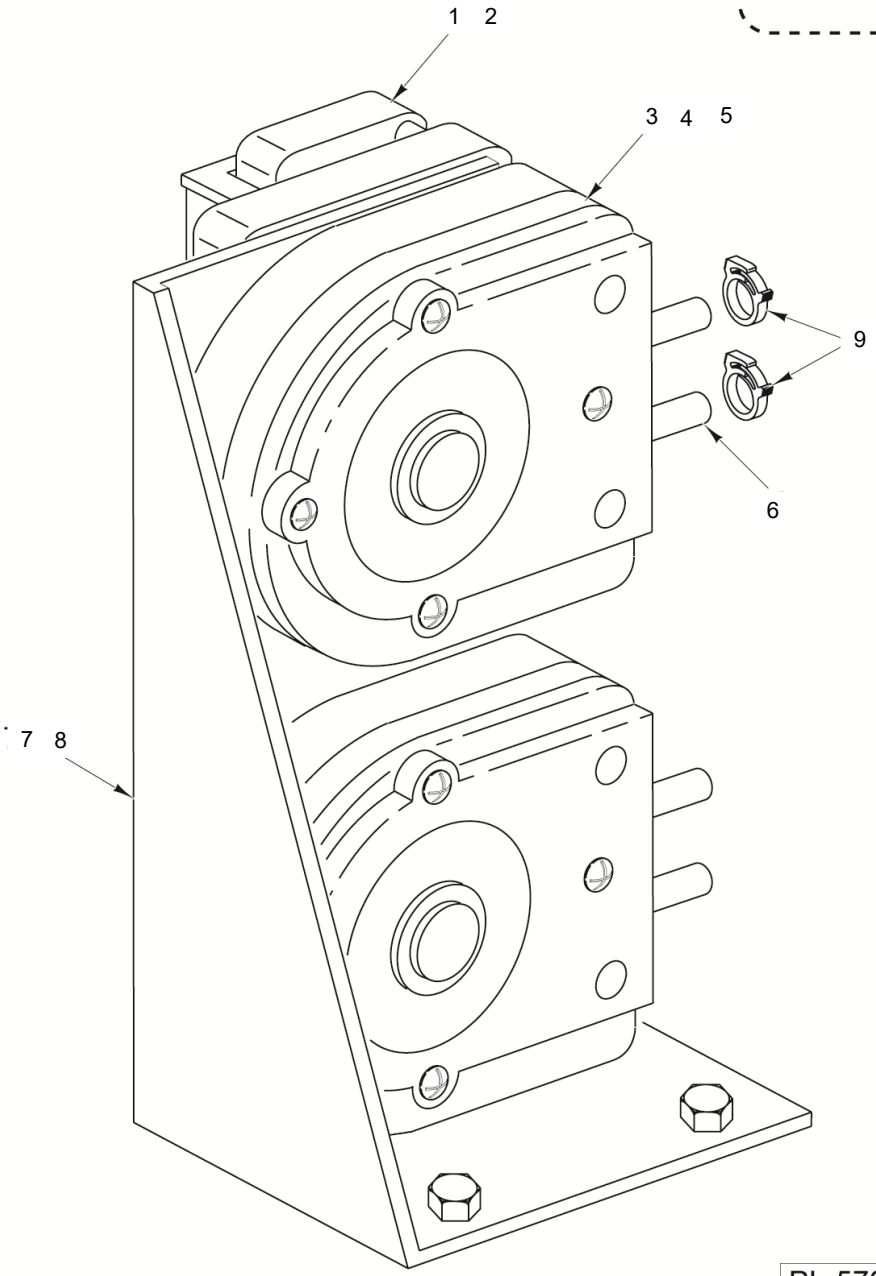


PL-57996

CHEMICAL PUMPS

CHEMICAL PUMPS


ILLUS. PL-57996	PART NO.	NAME OF PART	AMT.
1	00-185097-00001	Motor - Peristalic Pump (35 RPM) (LXiC & LXiGC)	1
2	00-185097-00002	Motor - Peristalic Pump (12 RPM) (LXiPRC & LXiPRGC)	1
3	00-329871	Pump - Chemical (Incls. Item 6)	1
4	SC-022-09	Mach. Screw 8-32 x 1/2 Slotted Flat Hd. (SST)	2
5	SC-116-20	Mach. Screw 6-32 x 1/2 Slotted Bndg. Hd. (SST)	4
6	00-328252	Tubing - Chemical Pump (LXi, LXiG, & LXiGC Series)	1
7	00-328585	Bracket - Peristaltic Pump (Dual Pump)	1
8	00-328630	Bracket - Peristaltic Pump (Single Pump)	1
9	00-185111-00001	Clamp - Hose (Plastic)	2
10	00-329994	Kit - Pump Assy. (Single Pump)	1
11	00-329995	Kit - Pump Assy. (Dual Pump)	1
12	00-474420	Strip - Test (621410 Aquachek)	1
13	FP-075-11	Fitting - Tube 3/16	1
14	00-941866	Bracket & Sanitizer Pump Assy. (Incls. Items 2, 3, 6, & 8) (LXiPRC & LXiPRGC)	1

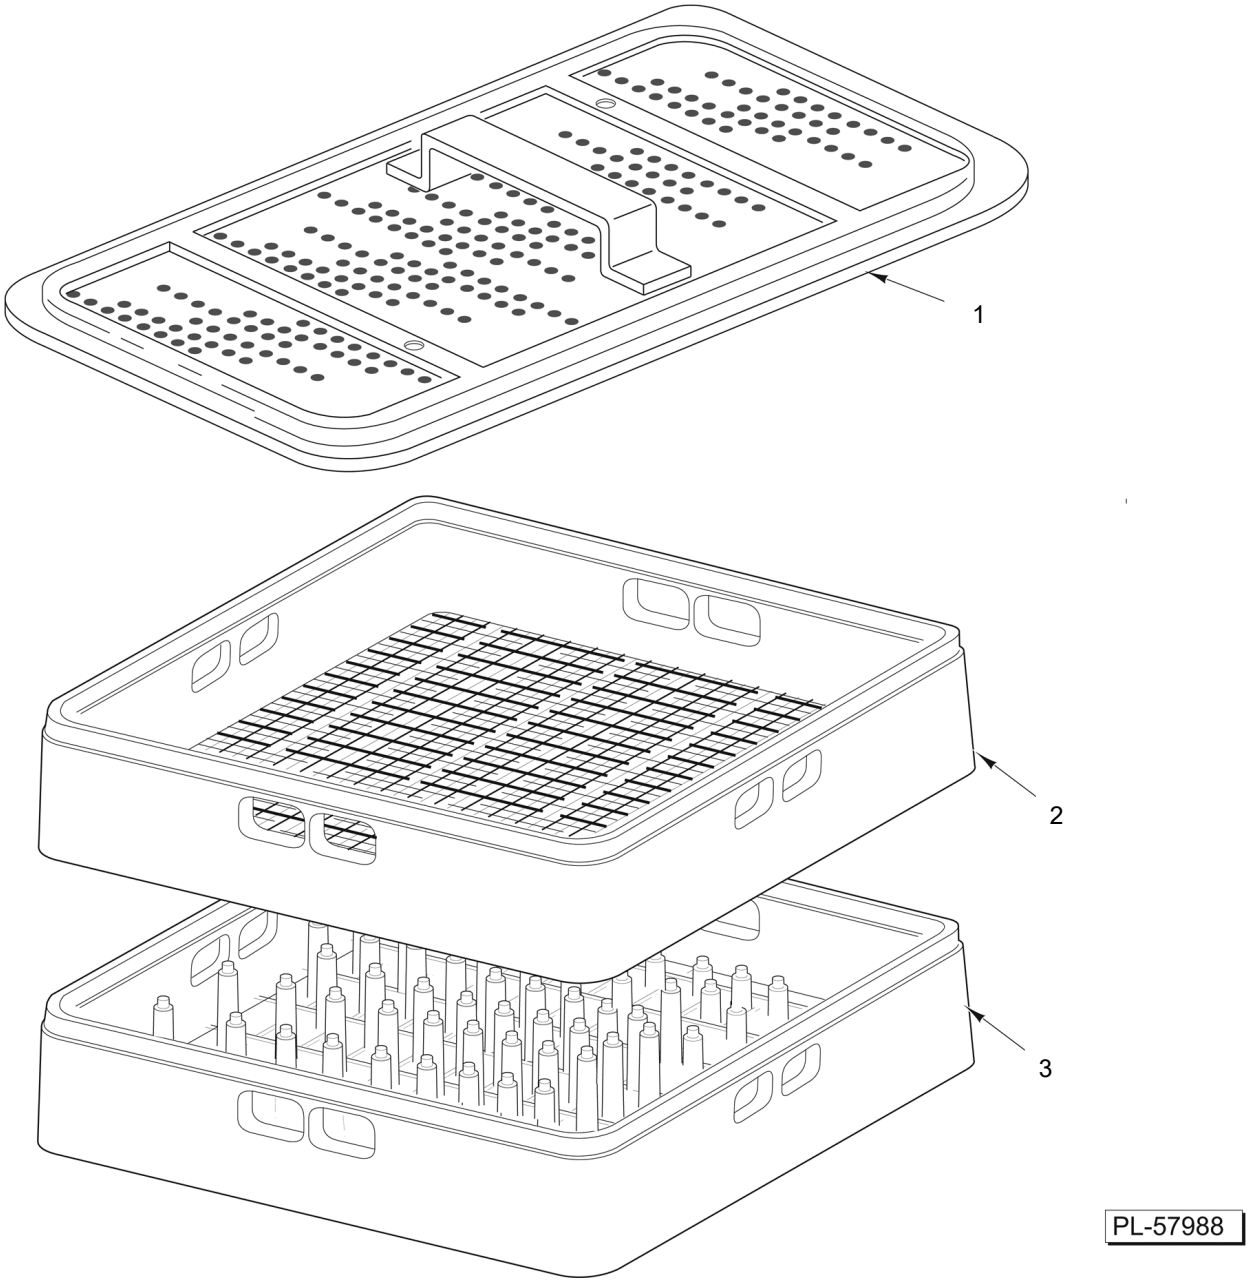


MISCELLANEOUS

MISCELLANEOUS

ILLUS. PL-57988	PART NO.	NAME OF PART	AMT.
1	00-328997-00001	Strainer - Sump	1
2	00-315193	Rack - Combination (Packaged)	1
3	00-315191	Rack - Peg (Packaged)	1
	00-329313	Paper - Litmus (Vial) (100 Strips 2-1/4 Lg.)	1
	00-329277	Power Cord Kit (Incls. Reliefs) (LX Series)	1
	00-892839	Power Cord Kit (380-400/3) (LXi Series)	1
	00-474174	Power Cord Kit (1 Ph.) (LXi & LXiG Series)	1
	00-749801	Power Cord Kit (250/60/1 Ph.)	1
	00-749680	Power Cord Kit (480/3) (Incls. Reliefs)	1
	00-749681	Power Cord Kit (250/3) (Incls. Reliefs)	1
	00-473042-00001	Drawer Assy. (LX18 Series)	1
	00-473042-00002	Drawer Assy. (LX30 Series)	1
	00-473042-00003	Drawer Assy. (LX40 Series)	1
	00-473042-00004	Drawer Assy. (LXG Series)	1
	00-329600	PACKING,ASSY LX BASE	1
	00-293624	Leg Assy. (6 In.) (Individual)	1
	00-936552	Kit - Debris Strainer	1
	00-918115-00001	Strainer - Sump Tube	1
	00-473673	Kit - Top Dish Rack Holder	1
	00-329627	Base - Extension (17 In.) (With Storage Rack) (Packaged)	1
	00-892043	Caster (LXiG Series)	1
	00-935890	Kit - Casters (LXi Series)	1

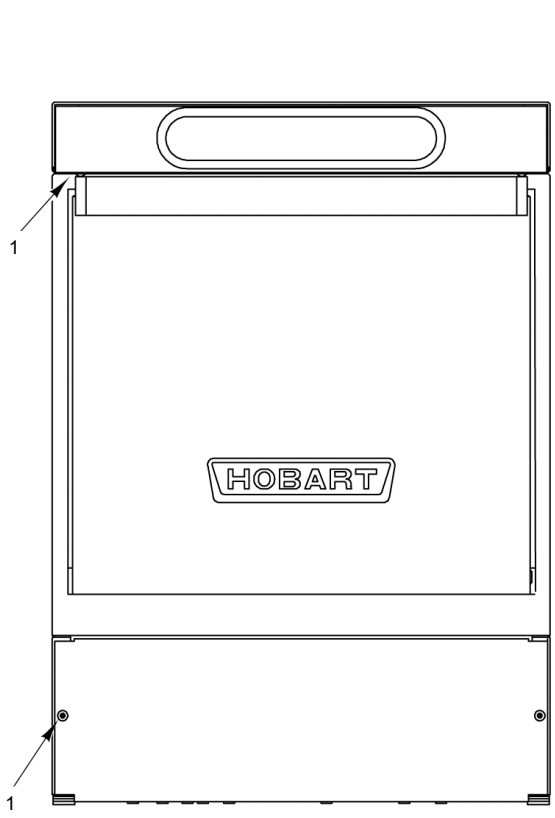

FRONT VIEW

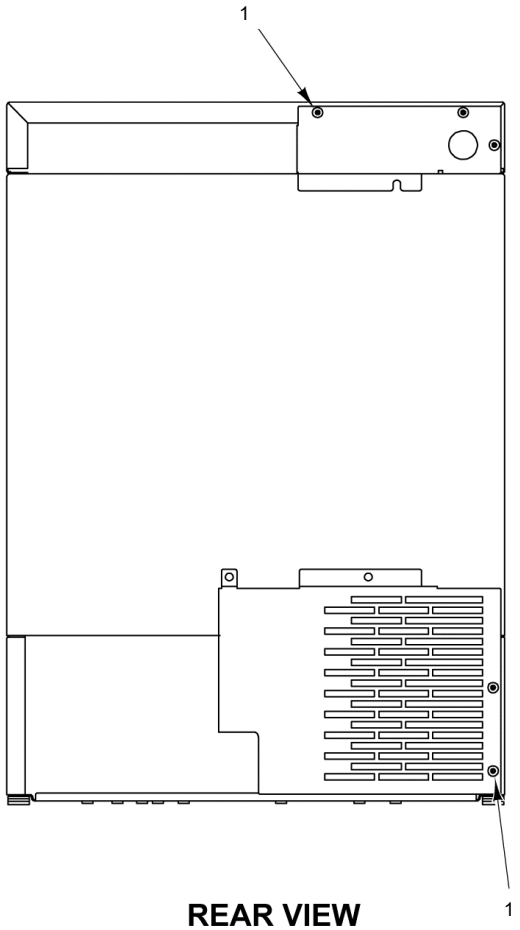

REAR VIEW

PL-60921

CORRECTIONAL PARTS PACKAGE

CORRECTIONAL PARTS PACKAGE

ILLUS. PL-60921	PART NO.	NAME OF PART	AMT.
1	SC-124-90	Mach. Screw 10-24 x 3/4 Tx. Button Hd. (Prison Package)	9