

[Downloadable Link to Stella 5.07 Software file](#)


## Stella SOFTWARE UPDATE/INSTALL

**SECTION A:** Create a new Stella Epic USB Key

**IMPORTANT:** Use a name brand USB drive 8gb or smaller  
Install only the 'UNIC' folder on the USB


Install USB drive to computer and locate drive in file folder

- Right-click drive and select **Format**
- Assign **FAT32** as the filing system
- Name volume label "Stella" if desired.
- Select **Quick Format**

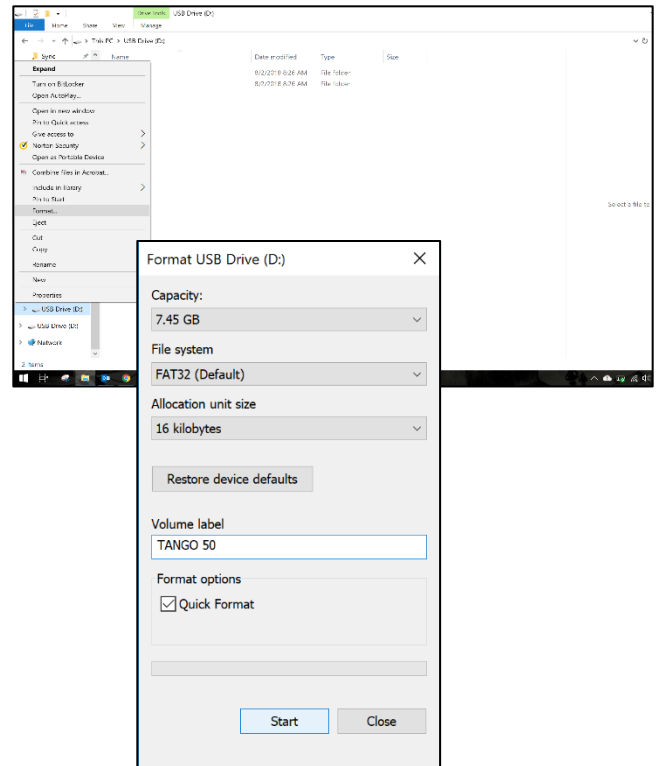


**Start** format and close window when format is complete


Download software from the link at top of page

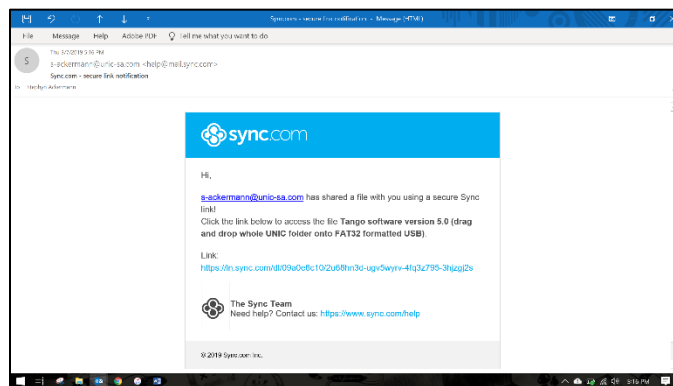


Click *Download all* from Sync.com webpage

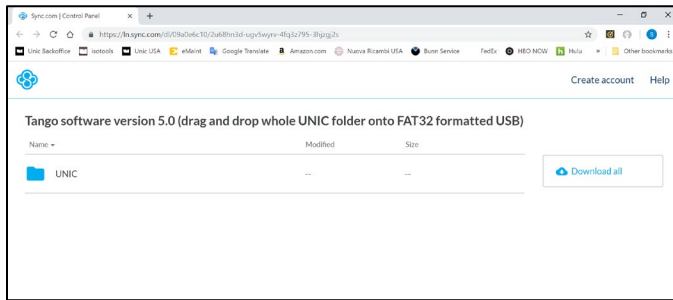

Click *Download now*

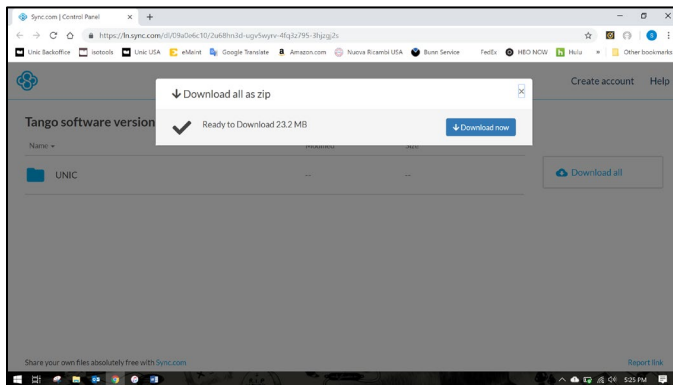


Open *Downloads* and formatted USB drive file folders in two separate windows

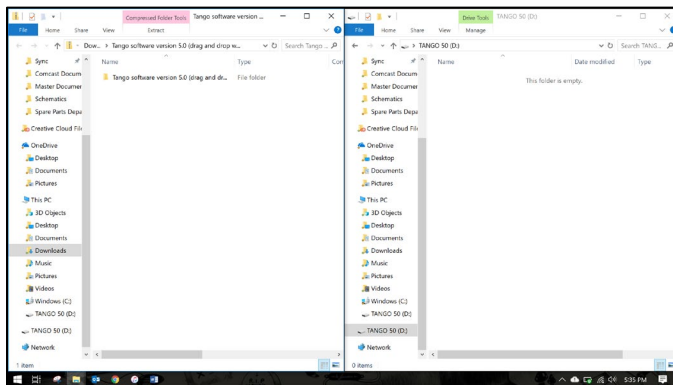

Double-click *Stella Software...* folder to find enclosed *UNIC* folder containing new software files

Drag/drop (copy/paste) *UNIC* folder into USB drive folder

*Right-click USB drive and select Eject before removing USB drive from computer*

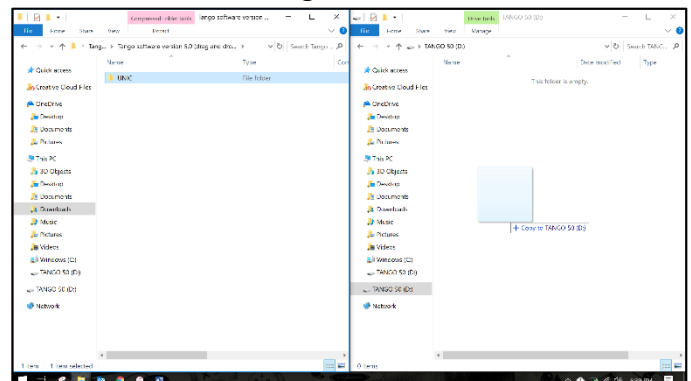

# Stella Di Café Upgrade Software


1. Create a new Technicians USB (See Instructions)
2. Insert Technician Stick and wait for Upgrade screen.



3. Immediately deselect calibrate.



4. Select BTA.

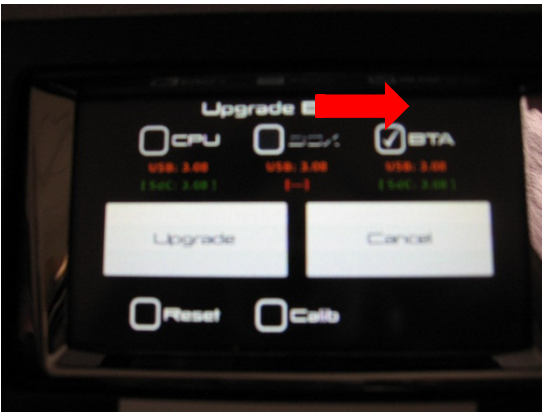


5. Press Upgrade, Confirm Upgrade and then wait for upgrade screen to return.



7. Select CPU and BGX.

>if BGX is grayed out upgrade is not possible contact Technical Support


6. Immediately deselect calibrate.

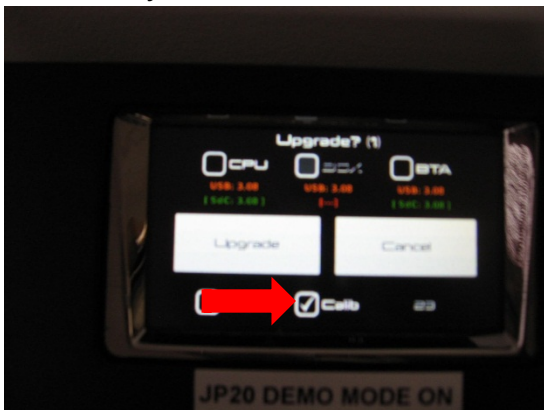

8. Press Upgrade, Confirm Upgrade and then wait for on screen instructions to remove USB and reset.



9. Ignore Alarm and Plug USB stick into SDC USB port wait for upgrade screen to appear.

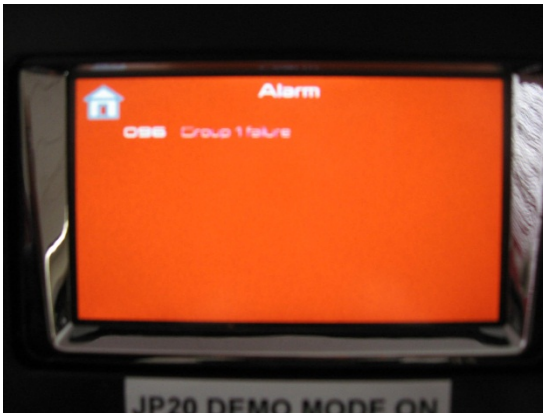

10. Immediately Cancel to get the main screen with level 4 access.



11. Reset CIM settings; See next Section

## Stella - reset CIM after Power Outage or Software Upgrade

**Fault Code 98-99**  
**Group 3 and/or 4 failure**

Video of process:

[Unic Stella di Caffè CIM Reset - YouTube](#)

1. Insert USB key to powered machine
2. Press “**Cancel**” as soon as upgrade screen appears (There is a 30 second timer before automatic screen calibration starts)
3. Select “**Maintenance**”
4. Select “**CIM**”
5. Select “**CIM Setup**”



6. Configure CIM as shown in photo  
(Set BC3 to 2C for 3 group machines)
7. Press check mark to confirm
8. Remove USB key
9. Switch OFF and ON

