

FOOD HOLDING STATIONS
MODELS: EVOL208, EVOR208, EVOL240, EVOR240
EVOLTSM208, EVOLTLG208, EVOLTSM240, EVOLTLG240
OWNERS / OPERATORS MANUAL



MANUFACTURED BY:

CARTER-HOFFMANN
1551 McCormick Avenue
Mundelein, IL 60060 U.S.A.

Phone: 847-362-5500


Fax: 847-367-8981

Toll Free: 800-421-3744

Email: TechnicalService@Carter-Hoffmann.com



EVOR208

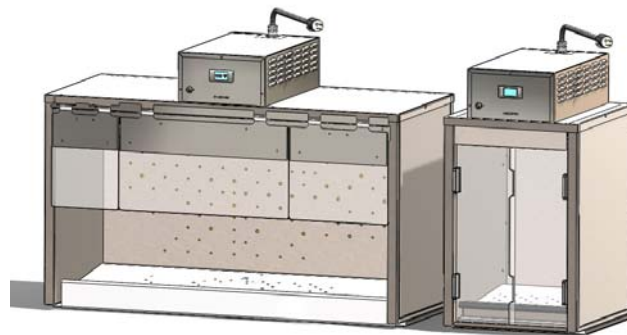

EVOLTLG208

EVOLTSM208

TABLE OF CONTENTS

| | PAGE |
|---|-------------|
| SAFETY PRECAUTIONS | 2 |
| FEATURES & SPECIFICATIONS | 3 |
| UNPACKING, INSPECTION & FREIGHT DAMAGE | 4 |
| INSTALLATION & STARTUP | 5 |
| CONTROL PANEL LAYOUT | 6 |
| OPERATION | 6 |
| CONTROLLER PROGRAMMING INSTRUCTIONS | 7 |
| DAILY CLEANING PROCEDURES | 8 |
| TIPS FOR CLEANING STAINLESS STEEL | 9 |
| WIRING DIAGRAM & REPLACEMENT PARTS LIST | 10 |
| TROUBLESHOOTING GUIDE | 11-12 |
| WARRANTY STATEMENT | 13 |

SAFETY PRECAUTIONS



WARNING: ELECTRIC SHOCK HAZARD

All service requiring access to non-insulated components must be performed by qualified service personnel. Failure to heed this warning may result in severe electric shock.



CAUTION: ELECTRIC SHOCK HAZARD

Disconnect this appliance from electrical power before performing any maintenance or service.



CAUTION: BURN HAZARD

Exposed metal surfaces can be hot to the touch and may cause burns.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be adhered to, including the following:


- 1) Be familiar with the appliance use, limitations and associated restrictions. Operating instructions must be read and understood by all persons using or installing this appliance.
- 2) This appliance must be grounded. Connect only to properly grounded outlet.
- 3) Use this appliance only for its intended purpose as described in the manual.
 - a. This equipment is specifically designed to hold pre-cooked food at temperature.
 - b. This equipment is intended for use in commercial establishments only.
 - c. This equipment is not designed for industrial or laboratory use.
- 4) Cleanliness of this appliance and its accessories is essential to good sanitation.
- 5) DO NOT submerge this appliance in water. This appliance is not jet stream approved. DO NOT direct water jet or steam jet at this appliance, or at any control panel or wiring. DO NOT splash or pour water on, in or over any controls, control panel or wiring. DO NOT use corrosive chemicals or vapors in this appliance.
- 6) DO NOT store this appliance outdoors. DO NOT use this product near water – for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
- 7) DO NOT operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse cord or plug in water, keep cord away from heated surfaces, and do not let cord hang over edge of table or counter.
- 8) DO NOT cover or block any openings on the appliance.
- 9) **Only qualified service personnel should service this appliance.**

NOTE: The technical content of this manual, including any wiring diagrams, schematics, parts breakdown illustrations and/or adjustment procedures, is **intended for use by qualified technical personnel** and is subject to change without notice.

FEATURES & SPECIFICATIONS



EVOR208

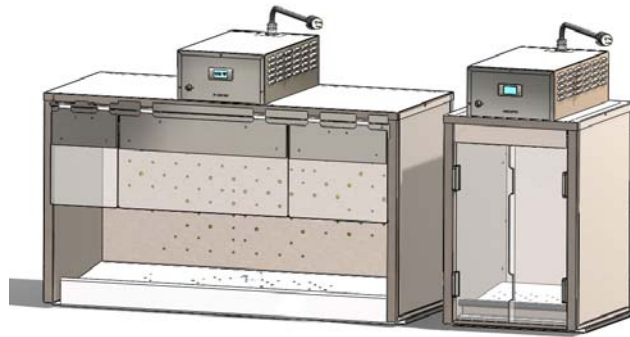

EVOLTLG208

EVOLTSM208

| Model | Overall Dimensions | Electrical Information (each heater) | Shipping Weight |
|-------------------|----------------------------|--------------------------------------|-----------------|
| EVOL240 & EVOR240 | 32.38"H x 19.83"D x 62.25W | 240V, 2400W, 10.5A, 50/60Hz, 1Ph | 250 lbs |
| EVOL208 & EVOR208 | 32.38"H x 19.83"D x 62.25W | 208V, 2400W, 12A, 50/60Hz, 1Ph | 250 lbs |
| EVOLTSM208 | 32.38 x 19.83 x 17.5 | 208v, 2400W, 12A, 50/60Hz, 1 Ph | 85 |
| EVOLTLG208 | 32.38 x 19.83 x 46 | 208v, 2400W, 12A, 50/60Hz, 1 Ph | 168 |
| EVOLTSM240 | 32.38 x 19.83 x 17.5 | 240V, 2400W, 10.5A, 50/60Hz, 1Ph | 85 |
| EVOLTLG240 | 32.38 x 19.83 x 46 | 240V, 2400W, 10.5A, 50/60Hz, 1Ph | 168 |

Features & Benefits

- EVOL208, EVOR208, EVOL240, EVOR240. EVOR models have the small heating cabinet on the right side. EVOL models have the small heating cabinet on the left side.
- EVOLT models have separate small and large side cabinets.
- Precision-engineered heat ducts with blower fan for even heat distribution throughout cabinet.
- Each side individually heated with separate, removable heating units. Digitally controlled and monitored temperature, with digital temperature read-out; pre-set factory temperatures of 208°F for small warming box and 158°F for large warming box. On/Off toggle switch on each heater.
- Designed for over-counter use with angled interior floor.
- Rod-type wire rack holders (NOT INCLUDED) are removable for cleaning.
- Rear and bottom duct assemblies are removable for cleaning.
- Polycarbonate shields over top of opening with flip up feature on large warming box and sliding doors on small warming box enhance heating operation.
- Supplied with 14/3 HSJO power cord and NEMA L6-15 plug.



Intertek
3194974
Conforms with
UL STD 197



Intertek
3194974
Conforms with
NSF/ANSI
STD 4

UNPACKING AND INSPECTION



This appliance should be thoroughly cleaned prior to use.

See the CLEANING INSTRUCTIONS in this manual.

NOTE: DO NOT discard the carton or other packing materials until you have inspected the appliance for hidden damage and checked it for proper operation.

Refer to *FREIGHT DAMAGE CLAIM PROCEDURE* on bottom of this page.

1. Remove the cabinet from shipping carton, ensuring that all packing materials and protective plastic has been removed from the unit.
2. Inspect all components for completeness and condition.
3. If any freight damage is present, a freight claim must be filed immediately with the shipping company.
4. **Freight damage is not covered under warranty.**
5. Check to insure all components are included: cabinet, instruction packet, mounting brackets and additional accessories, where applicable.
6. Read operation instructions completely.
7. Appliance should be thoroughly cleaned before use. See CLEANING INSTRUCTIONS in this manual (page 8).

FREIGHT DAMAGE CLAIM PROCEDURE

NOTE: For your protection, please note that equipment in this shipment was carefully inspected and packaged by skilled personnel before leaving the factory. Upon acceptance of this shipment, the transportation company assumes full responsibility for its safe delivery.

IF SHIPMENT ARRIVES DAMAGED:

1. **VISIBLE LOSS OR DAMAGE:** Be certain that any visible loss or damage is noted on the freight bill or express receipt, and that the note of loss or damage is signed by the delivery person.
2. **FILE CLAIM FOR DAMAGE IMMEDIATELY:** Regardless of the extent of damage. **Contact your dealer immediately.**
3. **CONCEALED DAMAGE:** If damage is unnoticed until the merchandise is unpacked, notify the transportation company or carrier immediately, and then file a "CONCEALED DAMAGE" claim with them. This should be done within fifteen (15) days from the date the delivery was made to you. **Be sure to retain the container for inspection.**

Carter-Hoffmann cannot assume liability for damage or loss incurred in transit, **freight damage is not covered under warranty.** We will, however, at your request, supply you with the necessary documents to support your claim.

INSTALLATION and START-UP



WARNING: Risk of personal injury

Installation procedures must be performed by a qualified technician with full knowledge of all applicable electrical codes and with proper load-bearing hardware. Failure could result in personal injury and property damage.



IMPORTANT: Each power cord is 6' long

If necessary, contact a licensed electrician to install an appropriate 15 amp electrical circuit with correct NEMA receptacle for each heater.

DO NOT use an extension cord.



CAUTION: Electrical Shock Hazard

The ground prong of the power cord is part of a system designed to protect you from electric shock in the event of internal damage.

DO NOT cut off the large round ground prong or twist a blade to fit an existing receptacle.



IMPORTANT: Not under warranty

Damage to unit due to being connected to the wrong voltage or phase is **NOT** covered by warranty.



WARNING: Risk of personal injury


Unit is not waterproof, to avoid electrical shock, keep unit and counter from being submerged in water. Do not operate if unit has been in contact with water.

LOCATION

Read equipment manual completely before installing and operating the cabinet.

Unit must be installed by qualified service personnel only. Unit must be installed in such a fashion to bear the weight of the cabinet when fully loaded; minimum 350 pounds.

The power connection for each heater is a grounded plug. Electrical information for each heater is provided on the **heater** serial tag on the front of each heater. Verify that the proper electrical service required for this cabinet is available prior to installation. Plug the power cords into grounded outlets with a electrical service according to the electrical information provided on page 3.

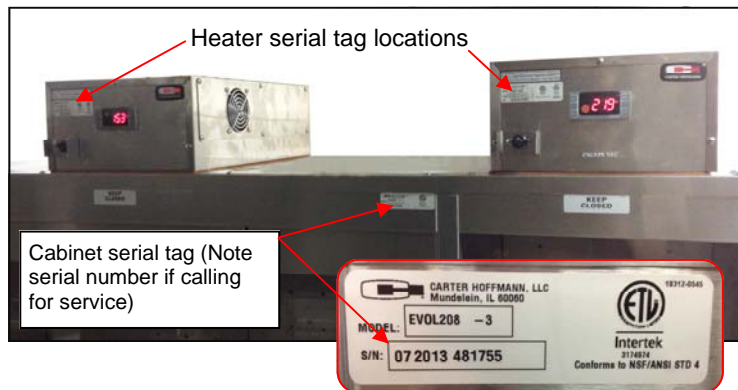

GROUNDING INSTRUCTIONS


This appliance is equipped with cords having a grounding wire with a grounding plug which must be plugged into an outlet that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

WARNING—Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

START-UP

1. Prior to use, thoroughly clean the interior of the unit, per the instructions in this manual (page 8).
2. Plug the power cord of the cabinet into grounded outlets with a electrical service according to the electrical information provided on page 3. Set POWER switches to the "ON" position.
3. Do not load product into the cabinet. Allow the heat to remove any residual oils which may adhere to inside metal surfaces. A slight emission of smoke is common during the first few hours of operation.

CONTROL PANEL LAYOUT

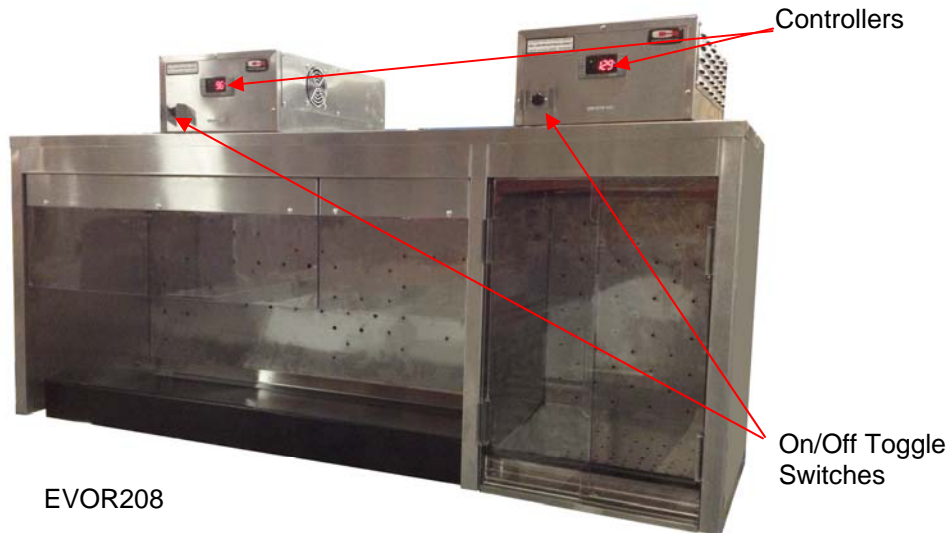

OPERATION

AUX Key
(inoperable)

Set Key
Press and release
to display temper-
ature set point



Up Arrow Key
Press to increase temperature set point
(1° increments)


Down Arrow Key
Press to decrease temperature set point
(1° increments)



CAUTION: HOT SURFACE

Inner surfaces of the unit will be very hot during and after operation. Avoid touching the cabinet when loading or removing product.

1. Turn the power switches ON and let cabinet preheat for 30 minutes. When the cabinet is turned on, the air heater will operate until the cabinet reaches the air temperature setpoint. Each display will read the actual temperature.

 The temp icon will be illuminated when the cabinet temperature is below the air temperature setpoint.

2. To view the temperature setpoint, press and release the SET key.
3. After preheat, load cabinet with food product. Food is held in various pan sizes as indicated by the spacing of the wire racks inside the cabinet.
4. When cabinet is not in use, turn power off.
5. Cabinet must be cleaned daily. See cleaning instructions on page 8.

CONTROLLER PROGRAMMING INSTRUCTIONS

AUX Key
(inoperable)

Set Key
Press and release
to display temper-
ature set point



Up Arrow Key
Press to increase temperature set point
(1° increments)

Down Arrow Key
Press to decrease temperature set point
(1° increments)

Each controller has been factory pre-set for an air temperature set point and a low temperature alarm set point. In most cases, these set points will not need to be changed. However, if changes are necessary, the controller is programmable.

| Factory Preset Set Points | Large Side Heater | Small Side Heater |
|--|----------------------|----------------------|
| Air Temperature | 158°F | 208°F |
| Low Temperature Alarm* | 25°F below set point | 25°F below set point |
| Air Temperature Operating Range | 145° to 185°F | 165° to 220°F |

*Note: If Air Temperature is programmed to another setting, the Low Temperature Alarm Setting will automatically be reset 25 degrees below the Air Temperature setting.

To Lock or Unlock the Controller: Press and hold both **Arrow Keys** at the same time for at least three seconds. "oF" will display when the controller is locked; "oN" will display when the controller is unlocked.

To View the Temperature Set Point: Press and release the SET button

To Change the Temperature Set Point: Turn power ON. Press and hold the SET button for 3 seconds. The current set point will display and "°F" will flash. Push the up or down arrow buttons to raise or lower the temperature set point in 1° increments. Push SET to store the new setting; the new temperature setting will flash 3 times and then the display will revert back to the actual temperature. (If set button is not pushed within 13 seconds, the new setting will be automatically set and the display will revert back to the actual temperature).

To Change from °F to °C, contact factory.

DAILY CLEANING PROCEDURES



**CAUTION:
ELECTRIC SHOCK
HAZARD**

Disconnect appliance from electric power before cleaning.



**CAUTION:
HOT SURFACE**

Exposed surfaces can be hot to the touch and may cause burns. Allow appliance to cool before cleaning.



IMPORTANT:

DO NOT spill or pour water into controls, control panel or wiring. Water damage is **not** covered by the warranty.



CAUTION:

Beware of sharp edges with sheet metal during cleaning process.



CAUTION:

Do not use steel wool pads to clean cabinet. Ferrous deposits will cause rusting; roughness of the pad will scratch the black powder coating on the front door frame.

1. After all food products have been removed from the cabinet, turn the power switches to "OFF" and allow the cabinet to cool. If cabinet is supplied with a plug, disconnect from power prior to cleaning.
2. Remove the pan rack assemblies and clean according to manufacturer's directions.
3. Remove the doors from the large cabinet by flipping up and lifting off. To remove the doors from the smaller cabinet, first remove the front door by lifting the door up and out of the track. Then remove metal track divider that is located between the doors. Lastly, lift the rear door up and out of the track. Doors should be washed with a clean damp cloth and chlorine-free detergent. Rinse thoroughly with clean damp cloth and allow to dry. Do not use abrasive cleaners, waxes, car polish, or substances containing strong aromatic solvents or alcohol. Do not use scratch pads or steel wool on the plastic doors. Do not use stainless steel cleaner.
4. Remove bottom heat duct and then remove the rear heat duct in each cabinet. Using a clean damp cloth with appropriate cleaner (see page 9), clean the inside of the unit and the removed parts. Wipe any residue with clean damp cloth. Reinstall all parts when they are dry and clean.
5. Inspect and clean the areas where there are vents or filters, making sure no water gets into the internal controls or electrical areas of the cabinet.
6. Plastic control panel should be washed with a clean damp cloth and chlorine-free detergent. Rinse thoroughly with clean damp cloth and allow to dry. Do not use abrasive cleaners, waxes, car polish, or substances containing strong aromatic solvents or alcohol. Do not use stainless steel cleaner.

TIPS FOR CLEANING STAINLESS STEEL

RECOMMENDED TIPS FOR CLEANING STAINLESS STEEL

| <u>Purpose</u> | <u>Frequency</u> | <u>Cleaning Agent</u> | <u>Method of Application</u> |
|---------------------------|-------------------------|---|--|
| Routine cleaning | Daily | Soap, ammonia detergent and water | Sponge with cloth, rinse with clear water and wipe dry. |
| Smears/ Fingerprints | As needed | Stainless steel cleaner or similar products | Rub with soft cloth as directed on package. Rub in direction of grain of stainless steel. Do not use on vinyl trim. |
| Stubborn spots and stains | Daily as needed | Any chloride-free or phosphate-free cleaner | Apply with damp sponge or cloth. Rub in direction of grain of stainless steel. Rinse thoroughly, especially if cleaner contains chlorine bleach, do not use on vinyl trim. |
| Hard water spots | Daily as needed | Vinegar | Swab with cloth. Rinse with water and wipe dry. |




CAUTION:

Cleanders, detergents, degreasers, sanitizers, or bleaching agents that contain chlorides or phosphates will cause permanent damage to stainless steel products. The damage appears as pits, eruptions, voids, small holes, severe discoloration or dulling of the metal finish.

Water with high chloride content can also damage stainless steel. If unsure of your water quality, we recommend you have it tested. **THIS DAMAGE IS PERMANENT, COSTLY TO REPAIR, AND IS NOT COVERED BY THE WARRANTY.**

WIRING DIAGRAM

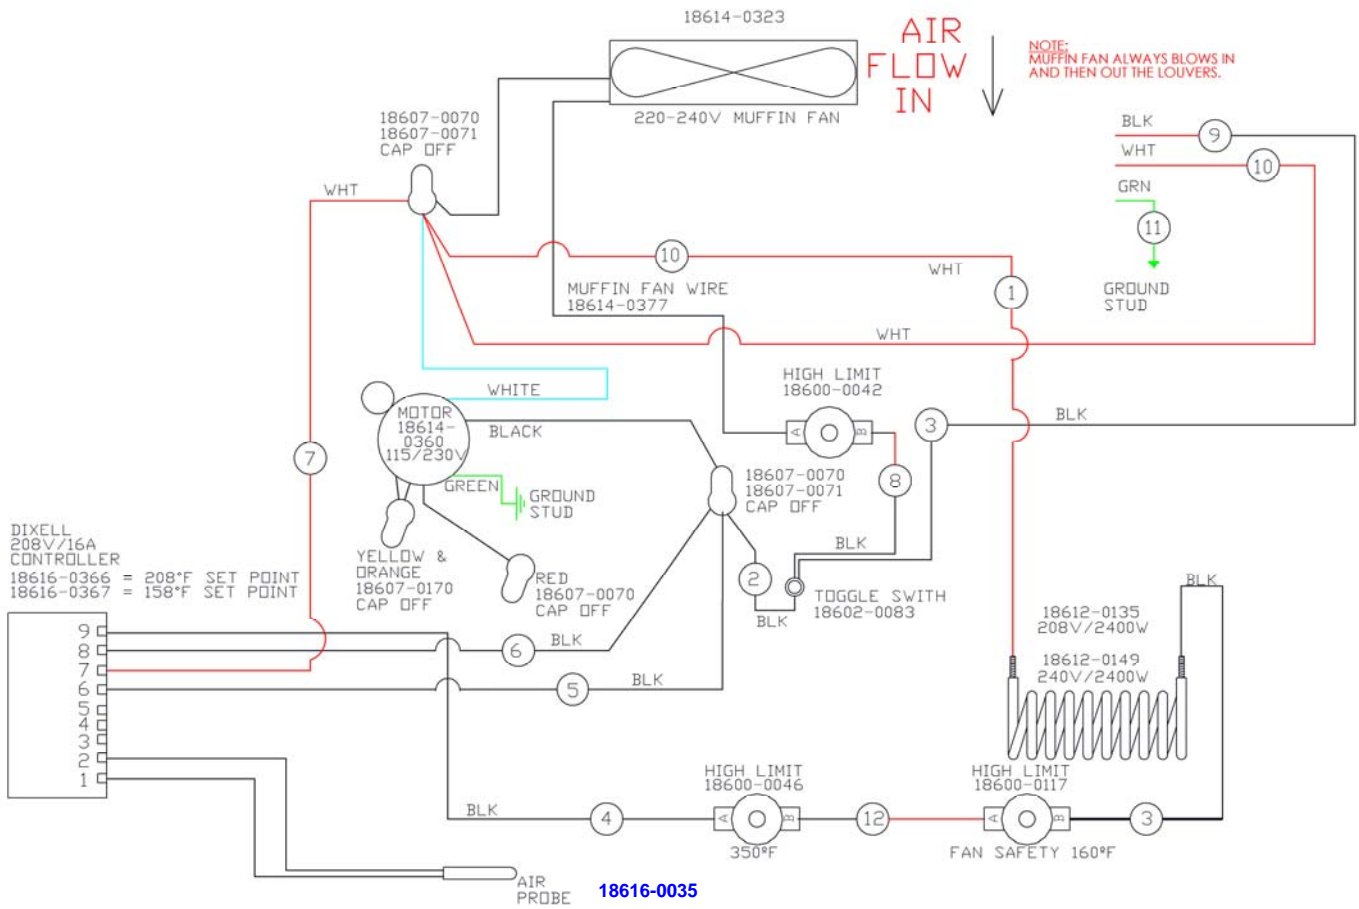

REPLACEMENT PARTS LIST

| PART NUMBER | DESCRIPTION |
|-------------|--------------------------|
| 18600-0042 | Hi Limit 120°F Snap Disc |
| 18600-0046 | Hi Limit 350°F Auto |
| 18602-0031 | Switch Boot |
| 18602-0083 | DPDT Toggle Switch |
| 18612-0135 | Heat Element 240V/2400W |
| 18612-0149 | Heat Element 208V/2400W |
| 18614-0275 | Fan Grill |
| 18614-0323 | Muffin Fan, 230V |
| 18614-0360 | Motor, 115/230V |
| 18616-9996 | Cord Grip |
| 18614-0321 | Blower Wheel |

| PART NUMBER | DESCRIPTION |
|-------------|--|
| 18600-0117 | Fan Safety Hi Limit 160°F w/Reset Snap Disc |
| 18616-0366 | Dixell 208V/16A 208°F Set-point Controller |
| 18616-0367 | Dixell 208V/16A 158°F Set-point Controller |
| 16090-3594 | HSJO 14/3 Cord with L6-16P Plug |
| 18616-0035 | 20" Probe for EVO Heater |
| 16095-3480 | Sliding doors for small warming cavity (one front and one back door) |
| 16095-3532 | Three-door flip up assembly (left) |
| 16095-3531 | Three-door flip up assembly (right) |

TROUBLESHOOTING GUIDE

EVO Heater: 208VAC and 240VAC. Reference connections on wiring diagram (previous page)



WARNING: All operations must be performed to requirements of NFPA-70E (Standard for Electrical Safety in the Workplace) by a qualified electrician. CALL FOR SERVICE.

| Symptom | Possible Cause | Remedy |
|--|--|---|
| No power; Dixell temperature controller display is not lit | Switch is not in ON position | Turn the switch ON |
| | Unit is not plugged in | Plug in the power cord |
| | Circuit breaker tripped | Reset the circuit breaker. If it trips again, disconnect the EVO heater and reset once more. When it trips, call an electrician to replace the breaker or replace the feeder. Otherwise, investigate for a short in the heater. Test: 1. Heating element A. 208V - 18 Ω B. 240V - 24Ω Replace if the difference is significant. 2. Blower motor—replace if necessary. Advice: When testing the motor, please pay attention to: body temperature (may be very hot!), rotor side wobbling, jammed rotor, partial or complete winding shortage. |
| | Power cord or plug is defective | Replace or repair |
| | Main switch is defective | Replace it |
| Dixell temperature controller display is not lit, but cooling fan is running | Defective thermostat Dixell | Check wires for crimping or looseness—correct if necessary |
| | | Check wire connection on thermostat terminals #5 and #6—correct connection or replace the thermostat |
| Dixell temperature controller display is not lit | Cooling fan is not running | 1. Check the fan's cable connection—correct if necessary 2. Cooling fan is defective—replace if necessary |
| Dixell Temperature controller display is lit, but the food chamber is not heated | Heating element is cold | 1. Check wires for crimping or loose connection—correct if necessary 2. Check wire connections on Dixell temperature controller terminals #8 and #9—correct loose connection 3. Check Dixell temperature controller—replace if necessary 4. Check Hi Limit 350°F—correct connection or replace Hi Limit if necessary 5. Check heating element (see above) - replace the element if defective 6. Check Hi Limit 160°F. If the Hi Limit reset button has popped up, figure out reason, repair and reset. |
| | Heating element is hot. CAUTION: Heating element may reach temperature as hot as 650°F. | 1. Blower fan is loose—tighten set screw or replace 2. Check blower motor: A. Motor is very hot: overheat protection activated; figure out why motor has overheated, correct it, cool down motor. Replace if the motor is faulty. B. Motor is cold: correct connections or replace motor or capacitor if necessary. |

TROUBLESHOOTING GUIDE - Continued


| Symptom | Possible Cause | Remedy |
|--|---|--|
| Dixell temperature controller display is lit up and food chamber is overheated | Heating element is hot. CAUTION: Heating element may reach temperature as hot as 650°F | <ol style="list-style-type: none"> Hi limit 350°F is always closed: measure temperature on it surface; replace Hi Limit if it is hotter than 325°F. NOTE: When the cover is open, the wire compartment, including the Hi Limit 350°F is naturally cooled. Dixell temperature controller is defective; replace controller |
| Cooling fan does not operate | Cooling fan does not operate | <ol style="list-style-type: none"> Check Hi Limit 120°F—replace if necessary Check cooling fan—replace if necessary. NOTE: The fan is controlled by Hi Limit of 120°F and starts when the temperature in the wire box is higher than 120°F. This can take up to 6 minutes. Also, the fan might run after turning the switch OFF, until the temperature falls under 120°F. |
| No heat | Heater blower not running, heating element not energized. WARNING: heater blower may have failed | <ol style="list-style-type: none"> Remove cover, press Hi Limit reset button on “FAN SAFETY” limit (Part Number: 18600-0117) Check operation of heater blower; replace if necessary. NOTE: this Hi Limit prevents an “over temp” situation INSIDE the control unit. Ensures proper air flow throughout heater and cooling fan operation. |

Temperature Controller Alarms—**CONTACT SERVICE IF YOU SEE ANY OF THESE ALARM CODES ON THE DISPLAY**

| Display Reads | Indicates |
|---------------|---------------------------|
| P1 | Air probe failure |
| HA | Maximum temperature alarm |
| LA | Low temperature alarm |
| EA | External alarm |

For technical assistance with troubleshooting, call Carter-Hoffmann at (800)421-3744 or (847)362-5500.

NOTE: Prior to calling for service locate the serial tag on the cabinet. You will need the serial number of the cabinet for proper identification.

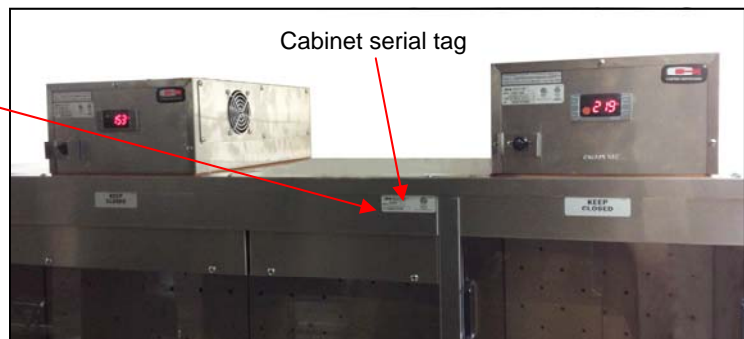

WARRANTY

Carter-Hoffmann Warranty:

Carter-Hoffmann ("CARTER-HOFFMANN") warrants to the initial purchaser of its standard Carter Line Products that CARTER-HOFFMANN will, at its option, repair or replace, during the warranty period set forth below, any part of such products made necessary due to a defect in material or workmanship which is present when the product leaves its factory and which manifests itself during the warranty period under normal use and service.

This warranty applies only to original equipment owned and possessed by the initial purchaser and the warranty period begins on the date of installation for three years on parts and labor.

Repair or replacements under this warranty will be performed, unless otherwise authorized in writing by CARTER-HOFFMANN, at its factory. All parts or components to be repaired or replaced under this warranty are to be shipped prepaid to CARTER-HOFFMANN, with reimbursement credit for such part or component to be given if found by CARTER-HOFFMANN to be defective.

CARTER-HOFFMANN neither makes nor assumes and does not authorize any other person to make or assume any obligation or liability in connection with its products other than that covered in this warranty. This warranty applies only within the continental United States and Canada. In Alaska and Hawaii, this warranty applies only to and is limited to the supply of replacement parts.

Warranty Exclusions and Limitations:

Any implied warranty of merchantability or fitness for a particular purpose is hereby specifically disclaimed by CARTER-HOFFMANN. There are no warranties, expressed or implied, which extend beyond the description on the face hereof. This warranty does not cover and CARTER-HOFFMANN shall not under any circumstances be liable for any incidental, consequential or other damages (such as injury to persons or property, loss of time, inconvenience, loss of business or profits, or other matters not specifically covered) arising in connection with the use of, inability to use, or failure of these products.

Specifications subject to change through product improvement and innovation.

Carter-Hoffmann

1551 McCormick Ave.

Mundelein, Illinois, 60060 USA

Phone: 847-362-5500 Toll free: 800-421-3744 Fax: 847-367-8981

Sales and Marketing E-mail: sales@carter-hoffmann.com

Service E-mail: technicalservice@carter-hoffmann.com

Company Website: www.carter-hoffmann.com

CFESA

Proud Member

NAFEM
North American Association of
Food Equipment Manufacturers